
american drew
• inspired design •

Tel: 828-728-3261
www.americandrew.com

ASSEMBLY INSTRUCTIONS

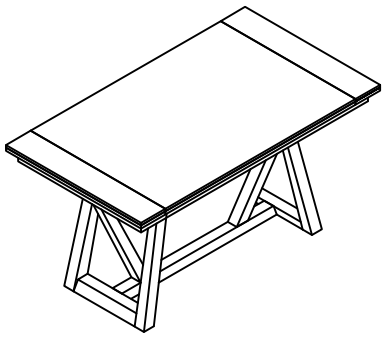

010 - 700

TOOLS REQUIRED:

Allen key (supplied, part # D)

BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

INSTRUCTIONS:

1. Attach side stretcher rail on the center stretcher rail by using Flat washer (C), Lock Washer (B), Bolt (A) with Allen Key (D).(See Figure 1).

2. Attach legs with stretcher in step 1 in 2pcs of leg frames by using Flat washer (C), Lock Washer (B), Bolt (A) with Allen Key (D).(See Figure 2).

3. Attach 2pcs of Mounting plate on the leg frame with Flat washer (C), Lock Washer (B), Bolt (A) with Allen Key (D).(See Figure 3).

4. Attach leg frame in step 3 on the table top with Flat washer (C), Lock Washer (B), Bolt (A) with Allen Key (D). (See Figure 4). Tighten all bolts with Allen Key (D).

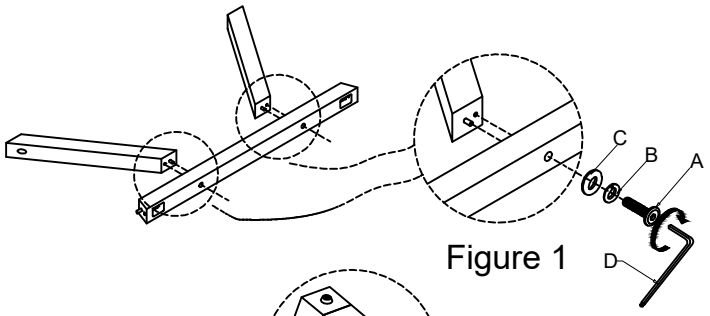


Figure 1

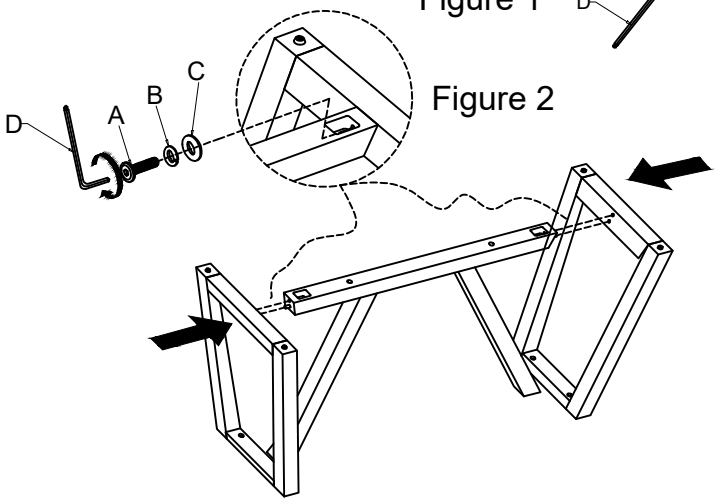


Figure 2

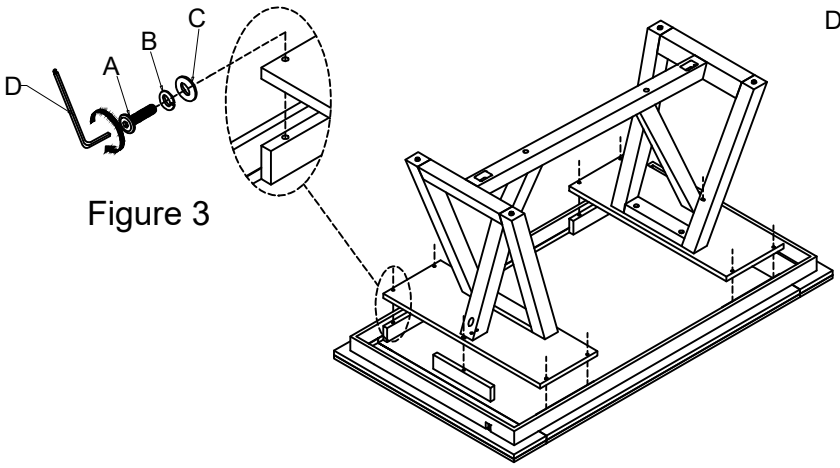


Figure 3

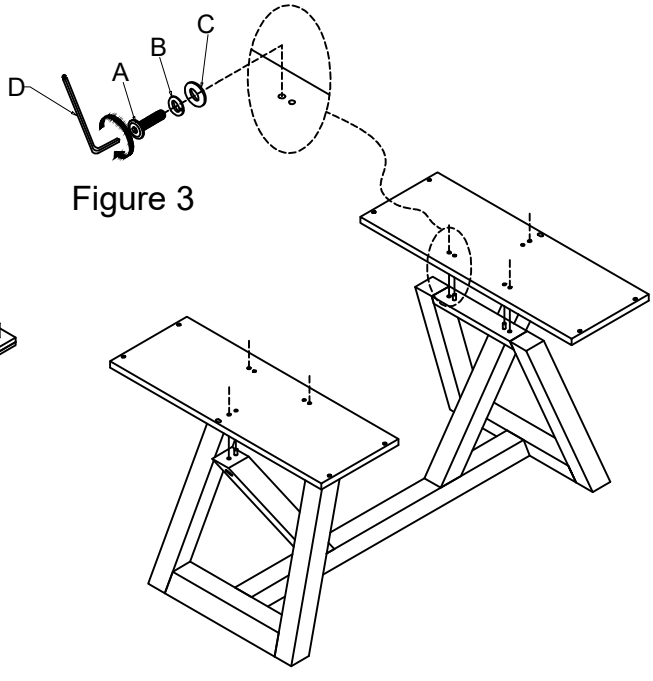


Figure 3

No.	Hardware List	Q'ty
A	Bolt Ø5/16 x 2"	20
B	Lock Washer Ø5/16"	20
C	Flat Washer Ø5/16"	20
D	Allen Key 4mm	1

Thank you for purchasing furniture from american drew!