


DORSEY WOVEN CAL KING BED

ASSEMBLY INSTRUCTIONS



BOX #1

A. HEADBOARD 1 PC

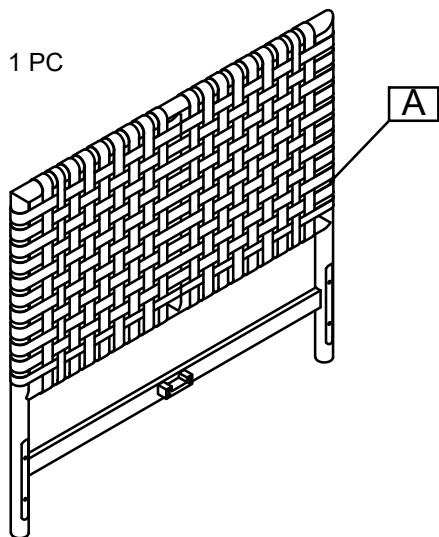


BOX #2

B. FOOTBOARD 1 PC

D. SLAT ROLL 1 SET

BED HARDWARE BOX

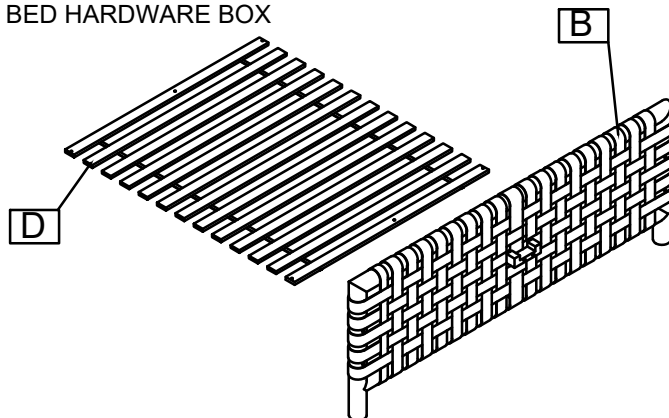

HARDWARE KIT PACKED IN BOX #2

No.	DESCRIPTION	IMAGE	QUANTITY
1	ALL- THREAD BOLT (5/16"x80mm)		8 PCS
2	THREADED HALF MOON WASHER NUT (5/16")		8 PCS
3	SPANNER		1 PC
4	WOOD SCREW (4x30mm)		8 PCS
5	ALLEN KEY		1 PC
6	ALLEN BOLT (1/4"x50mm)		12 pcs
7	LOCK WASHER (5/16")		12 pcs
8	FLAT WASHER (1/4")		12 pcs



BOX #3 :

C. SIDE RAIL 2 PCS

E. CENTER SLAT SUPPORT 1PC


F. MATTRESS SPACER 2PCS

G. SUPPORT LEG 4PCS

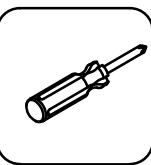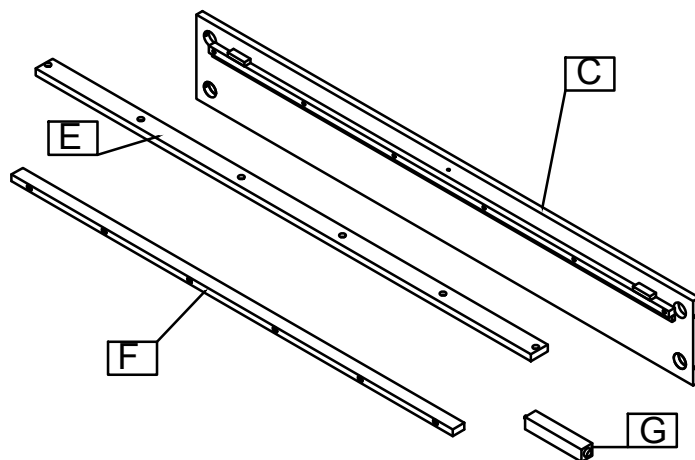

Not provided


FULLY ASSEMBLED

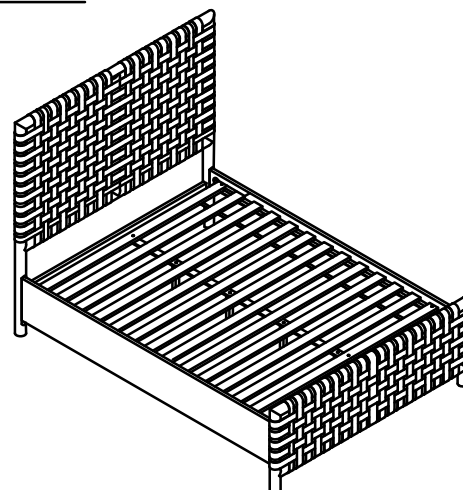


DORSEY WOVEN CAL KING BED ASSEMBLY INSTRUCTIONS



STEP #1:

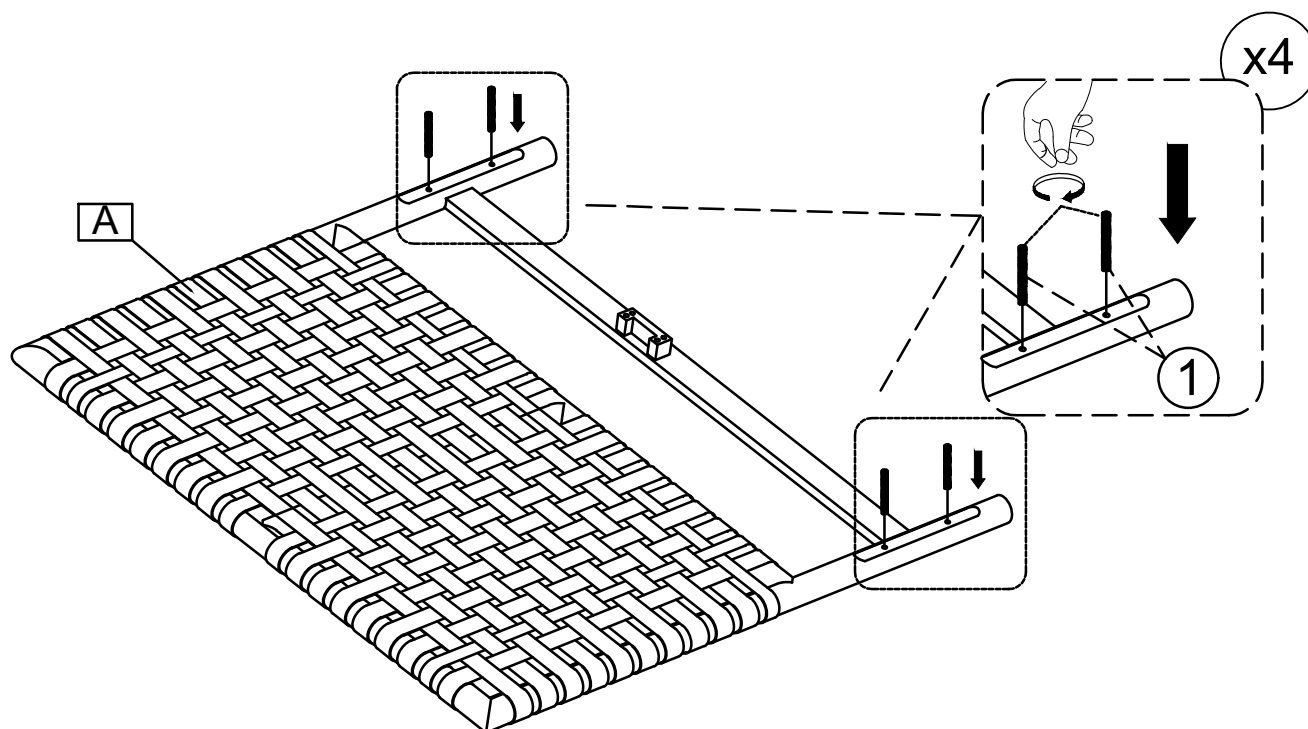


STEP #2:

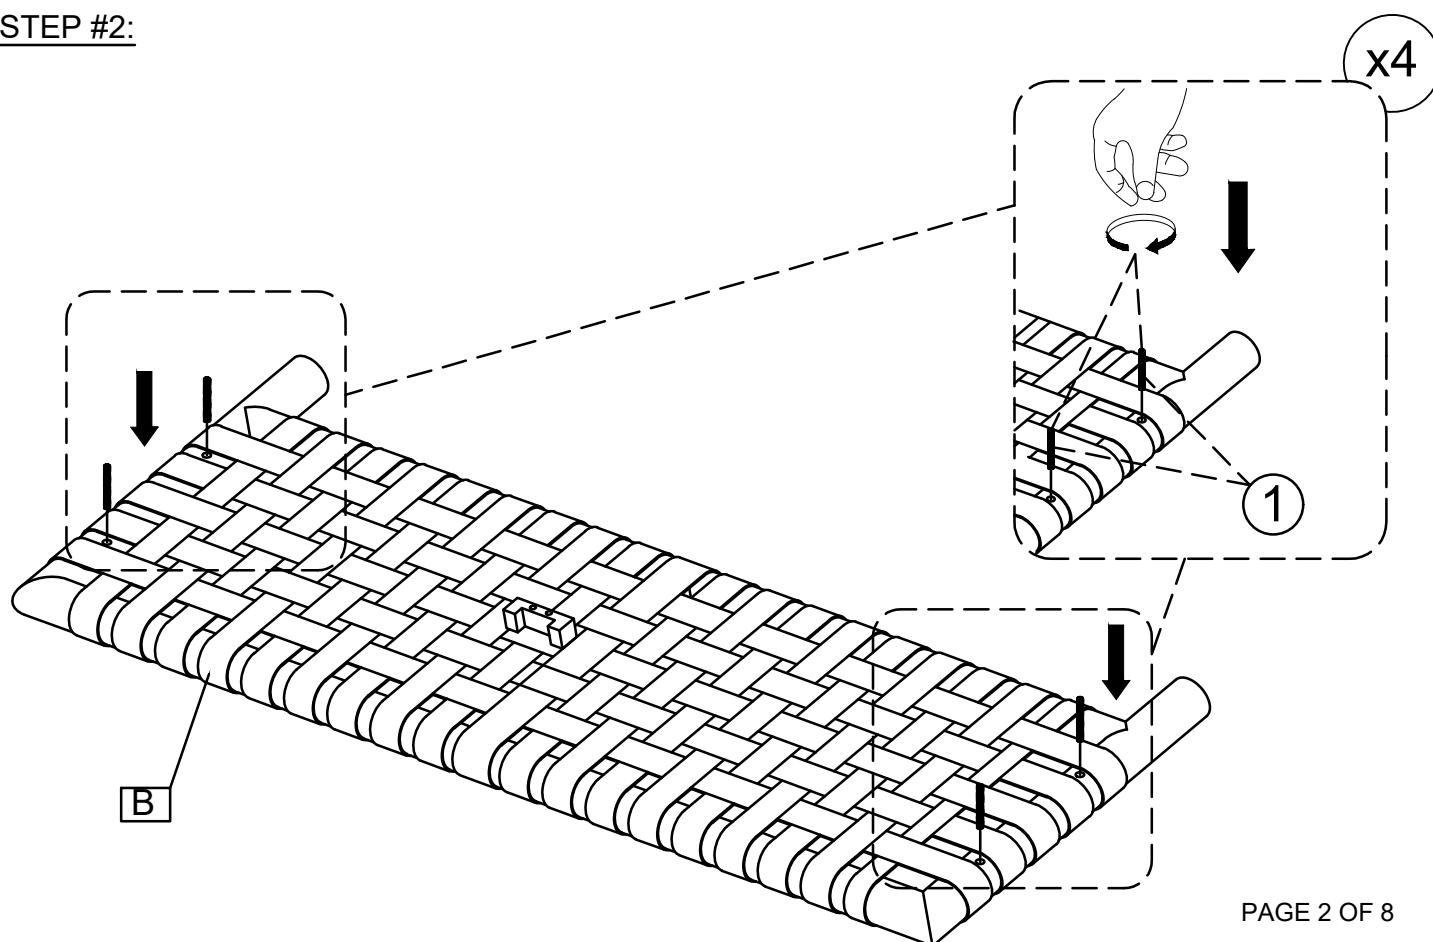


DORSEY WOVEN CAL KING BED ASSEMBLY INSTRUCTIONS



STEP #3:

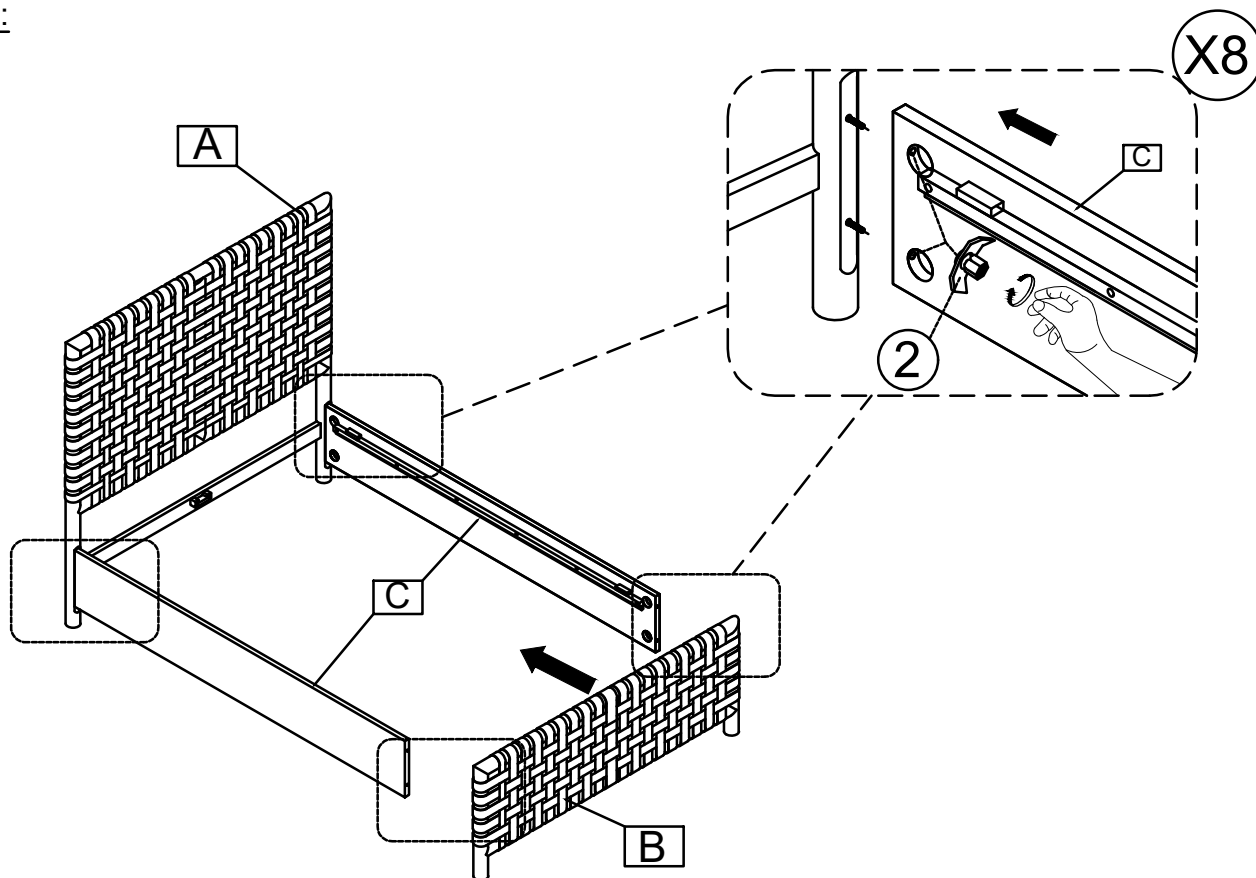


STEP #4:

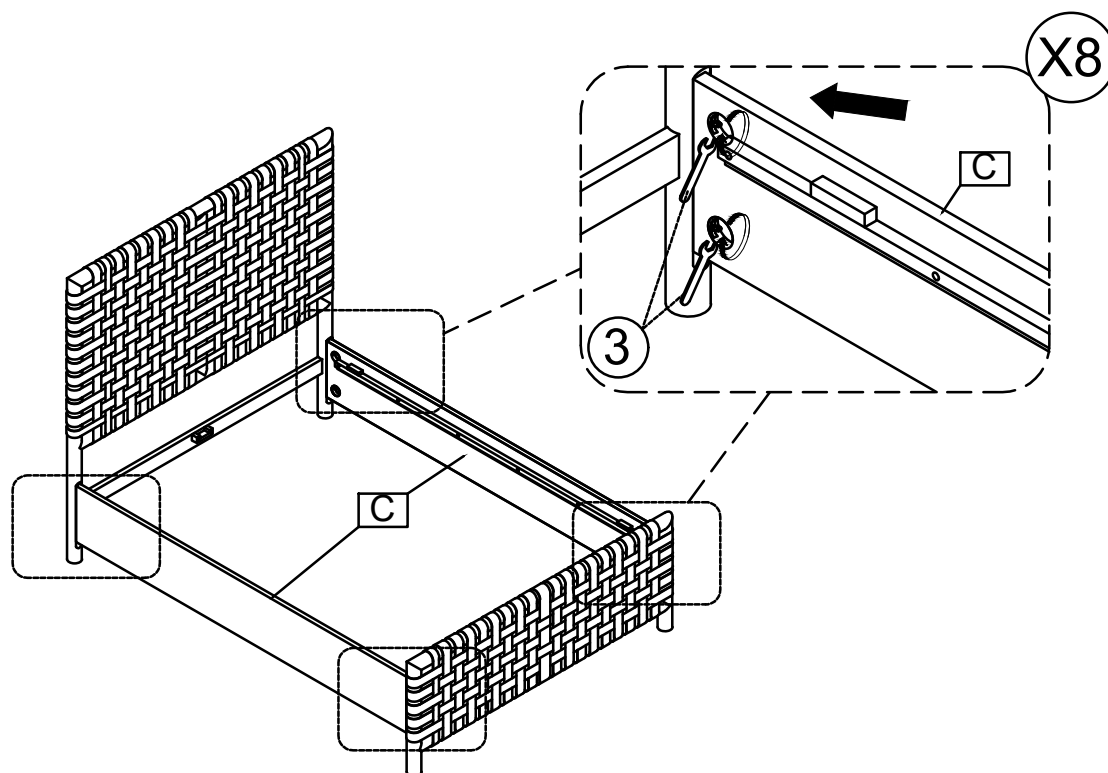


DORSEY WOVEN CAL KING BED ASSEMBLY INSTRUCTIONS



STEP #5:

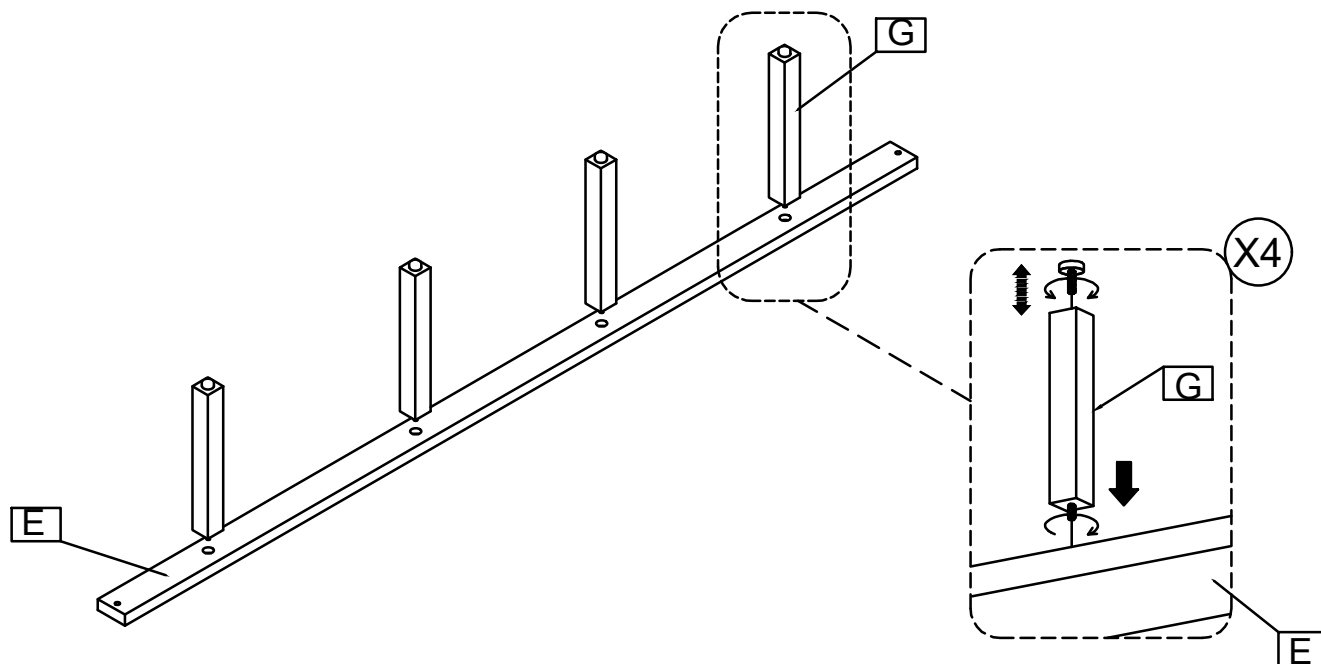


STEP #6:

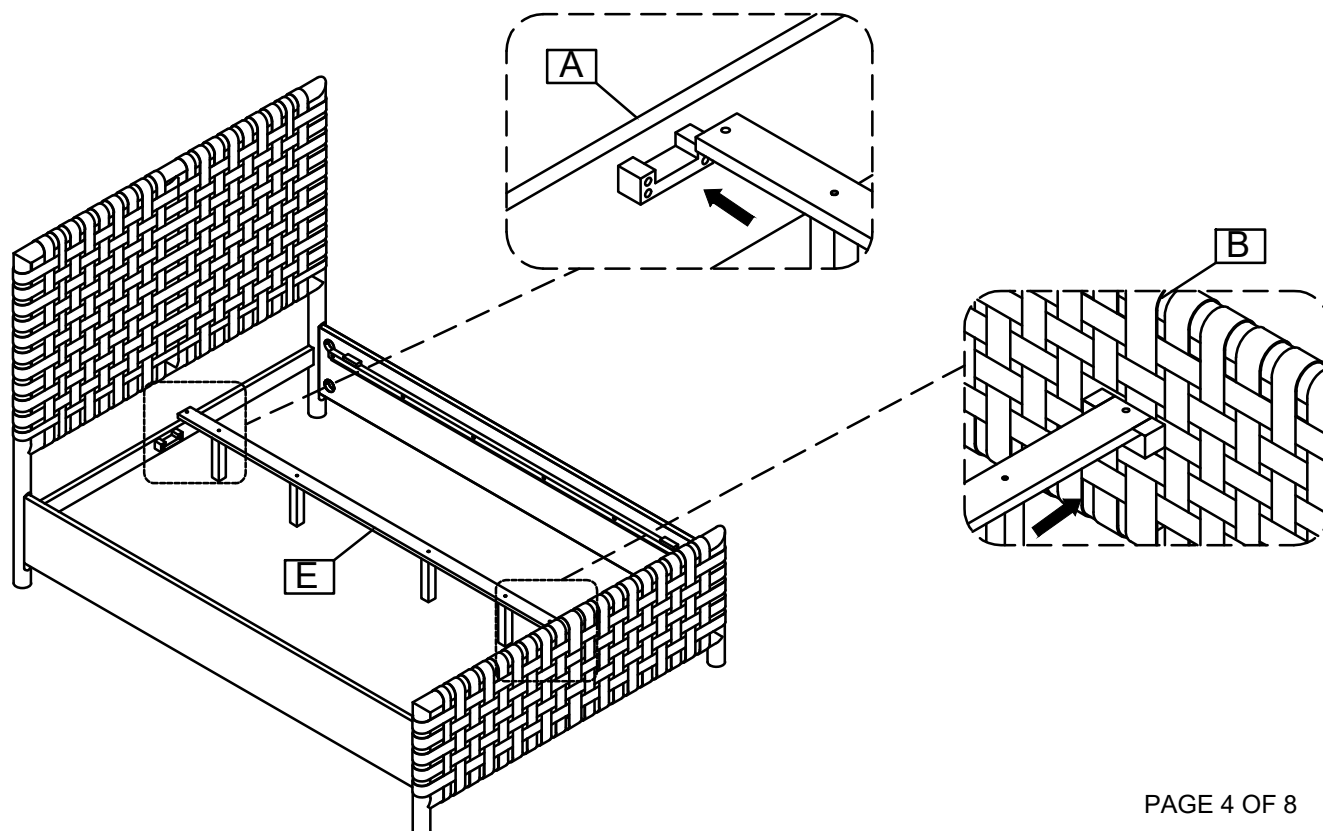


DORSEY WOVEN CAL KING BED ASSEMBLY INSTRUCTIONS



STEP #7:

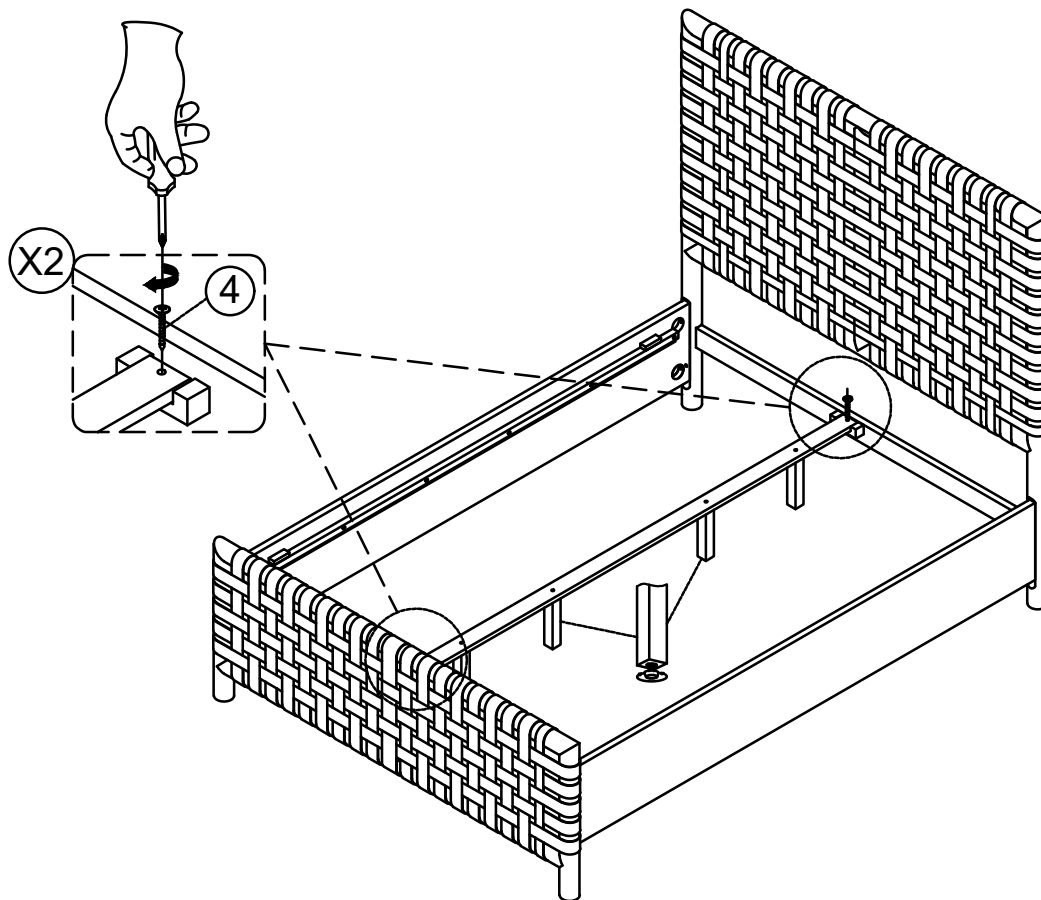


STEP #8:

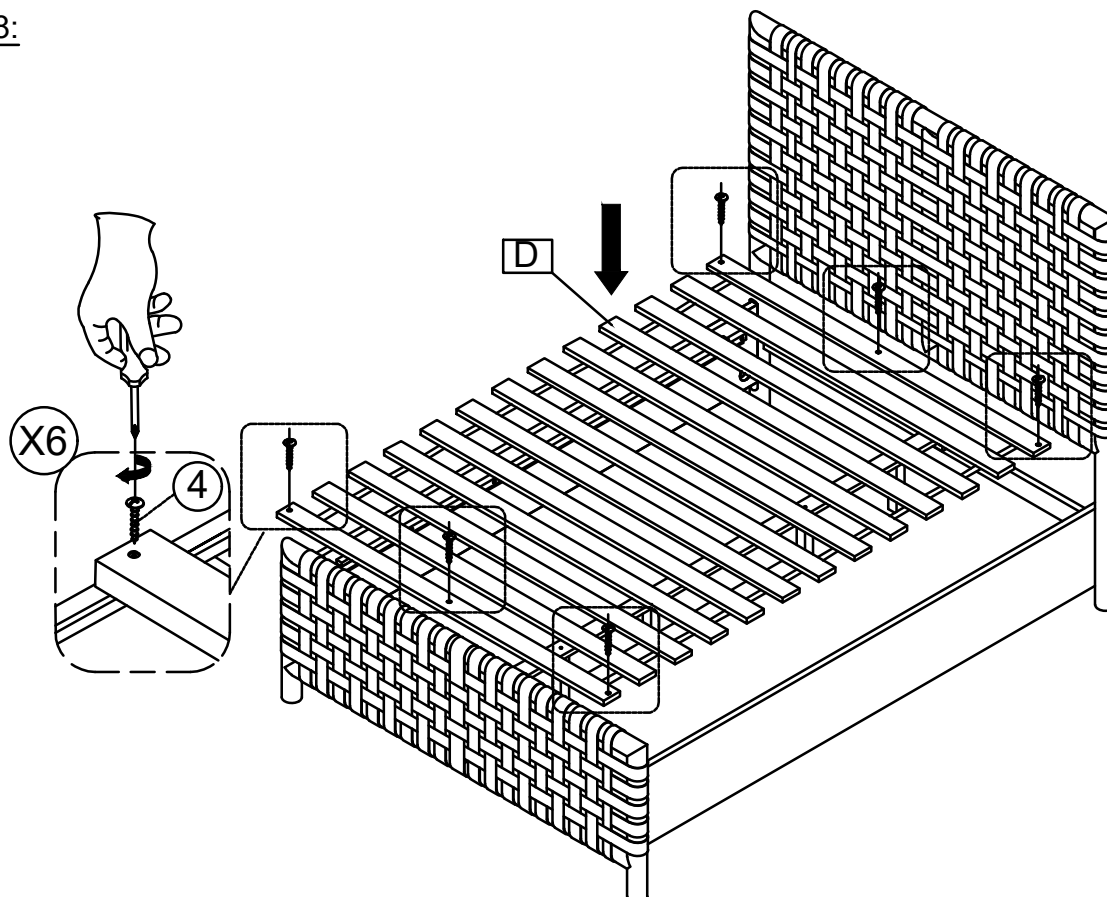


DORSEY WOVEN CAL KING BED ASSEMBLY INSTRUCTIONS



STEP #9:

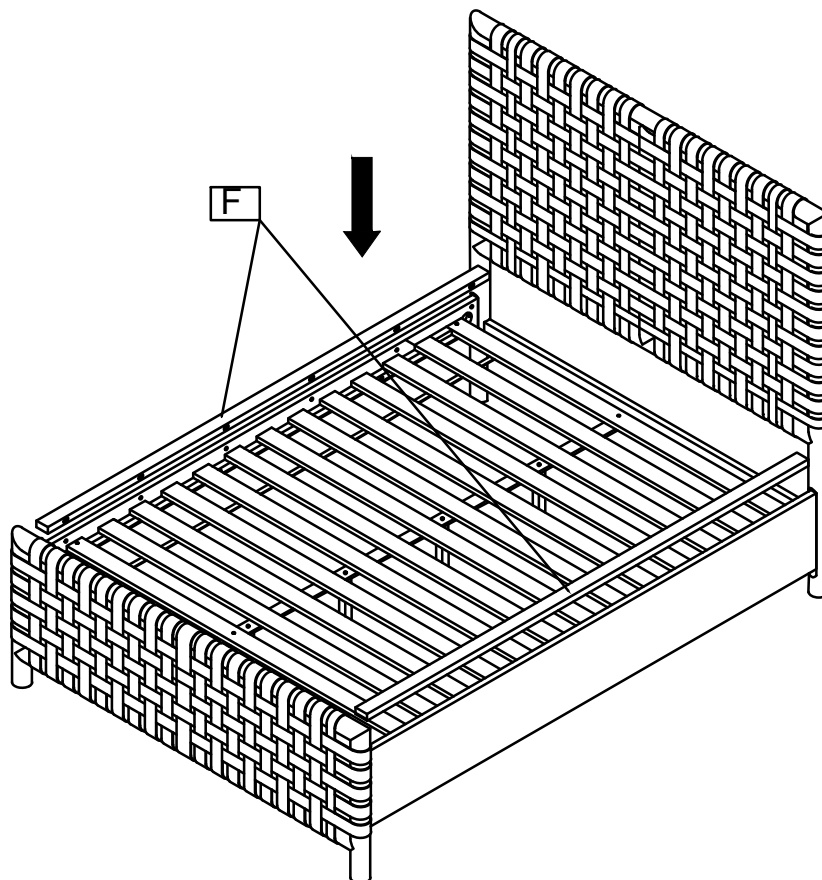


STEP #10:

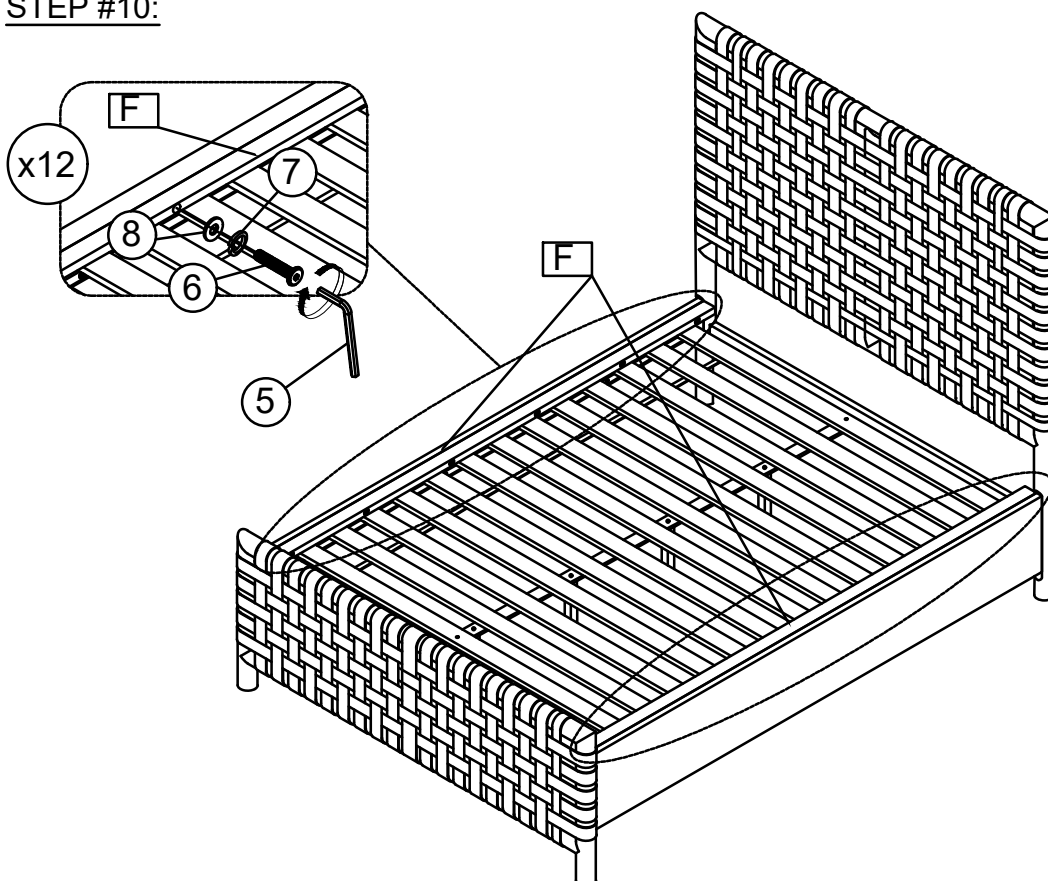

DORSEY WOVEN CAL KING BED ASSEMBLY INSTRUCTIONS




ASSEMBLY COMPLETE.

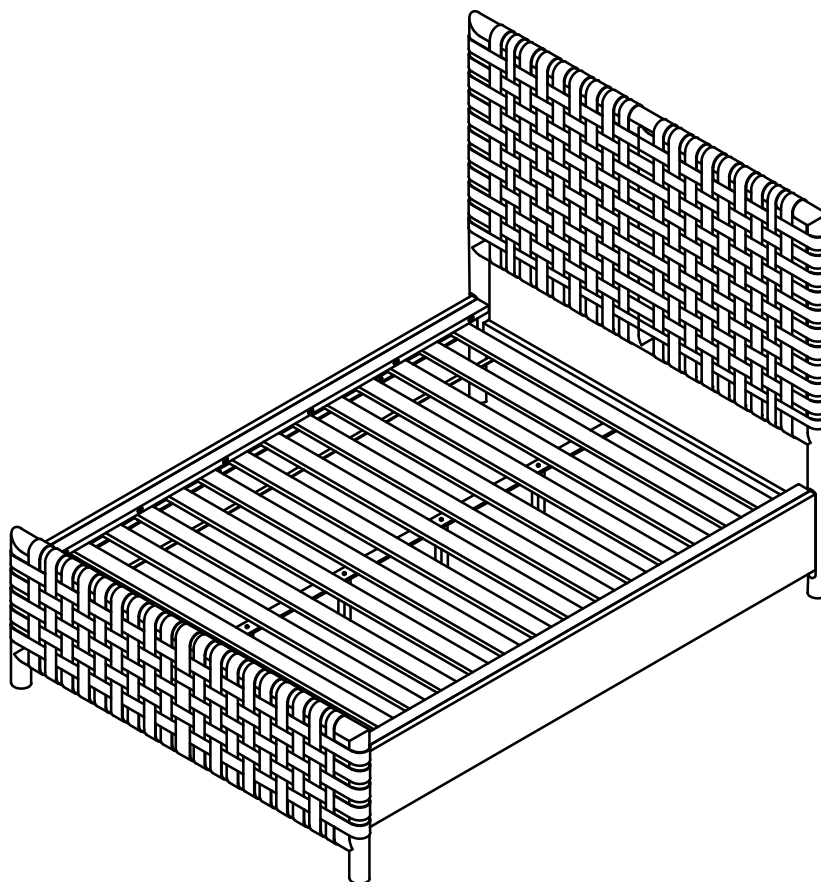

INSTRUCTIONS FOR ADJUSTING LEVELER:

- . POSITION THE BED IN YOUR SPACE AND LOCATE THE LEVELER UNDER EACH SUPPORT LEG.
- . TURN THE LEVELER COUNTER- CLOCKWISE TO EXTEND THE LEVELER AND CLOCKWISE TO RETRACT IT.
- . ADJUST EACH LEVELER UNTIL EACH SUPPORT LEG IS APPLYING EQUAL, UPWARD PRESSURE ON THE BED SUPPORT SLAT.

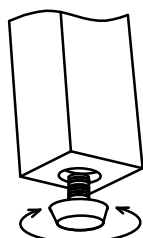

MAINTENANCE INSTRUCTION:

- . REMOVE BOX SPRING AND MATTRESS BEFORE MOVING YOUR BED.
- . LIFT YOUR BED WHEN MOVING IT. DRAGGING CAN DAMAGE THE LEG SUPPORT.
- . READJUST LEVELERS AFTER MOVING YOUR BED.

DORSEY WOVEN CAL KING BED ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.

PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION.

FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.


THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

D. SLAT ROLL 1SET
E. CENTER SLAT SUPPORT 1PC
F. MATTRESS SPACER 2PCS
G. SUPPORT LEG 4PCS

4. WOOD SCREW (4x30MM) 8PCS
6. ALLEN BOLT (1/4x50MM) 12PCS
7. LOCK WASHER (5/16") 12PCS
8. FLAT WASHER (1/4") 12PCS

STEP 1:

USE ALLEN KEY (5) IN BOX #2 TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

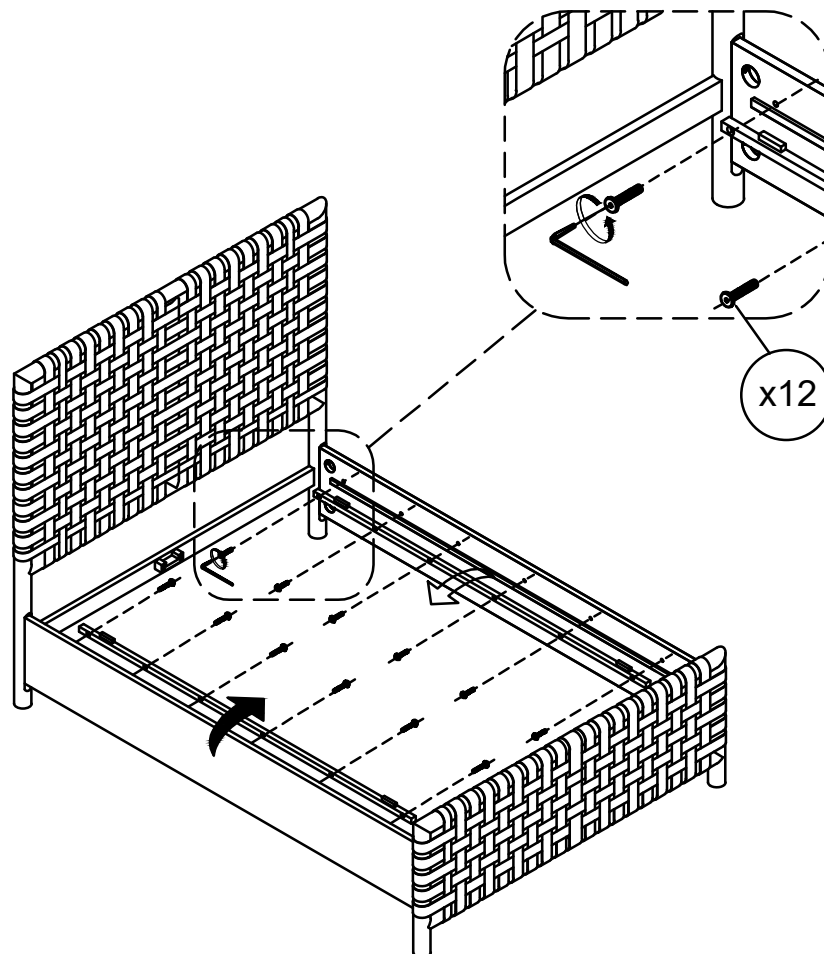

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION