


# Carina

CAR-TS180


## Glass-to-Glass Mount Movable Transom Panel Clip



Do not measure images.  
Use specified dimensions.

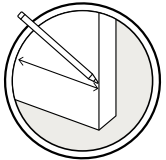


Measure from finished  
edge of glass.

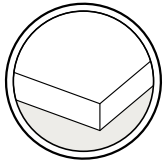

Use monolithic glass.

- › Use finger notch cut out option for quicker FastFit installation
- › Use  $\frac{3}{8}$ " to  $\frac{1}{2}$ " (10 to 12 mm) Thick Tempered Glass Only

TYPICAL INSTALLATION

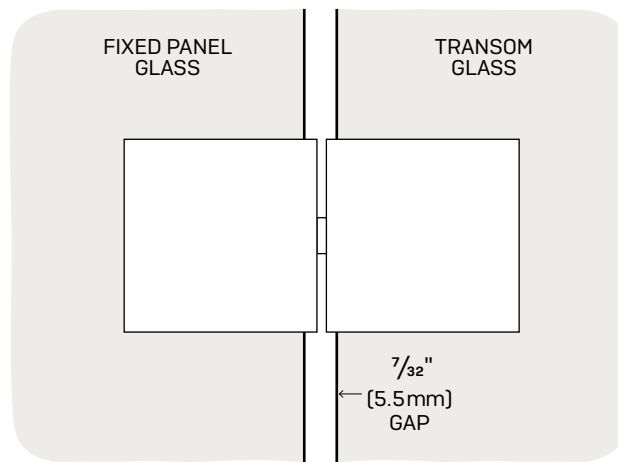

TEMPLATE OPTION FOR STANDARD FLAT  
POLISHED SQUARE CUT GLASS

