







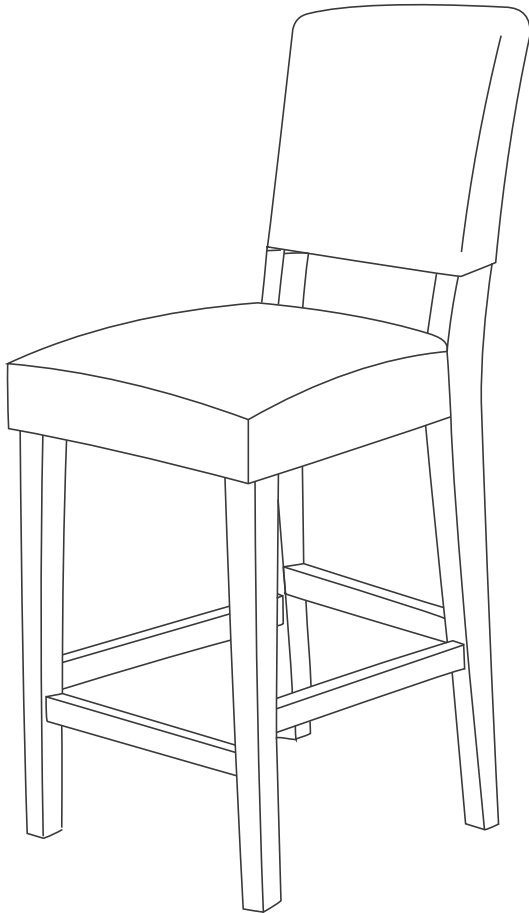




Assembly Instructions, # 214478

Upholstered Back 30" Bar Stool

Note: A packet with complete set of hardware can be found by pulling the red ribbon that's easily visible upon opening the box



A: Chair Back	
B: Seat Pad	
C: (2) Side Stretchers L & R	
D: Front Stretcher	
E: (2) Front Legs	
G: (4) AllenBolts 1/4' x 40	
H: (4) AllenBolts 1/4' x 60	
I: (6) Screws 4 x 50	
J: Allen Wrench	
K: Glue	
L: Shoes	