


ASSEMBLY INSTRUCTIONS


WILLIAMSBURG 30" VANITY

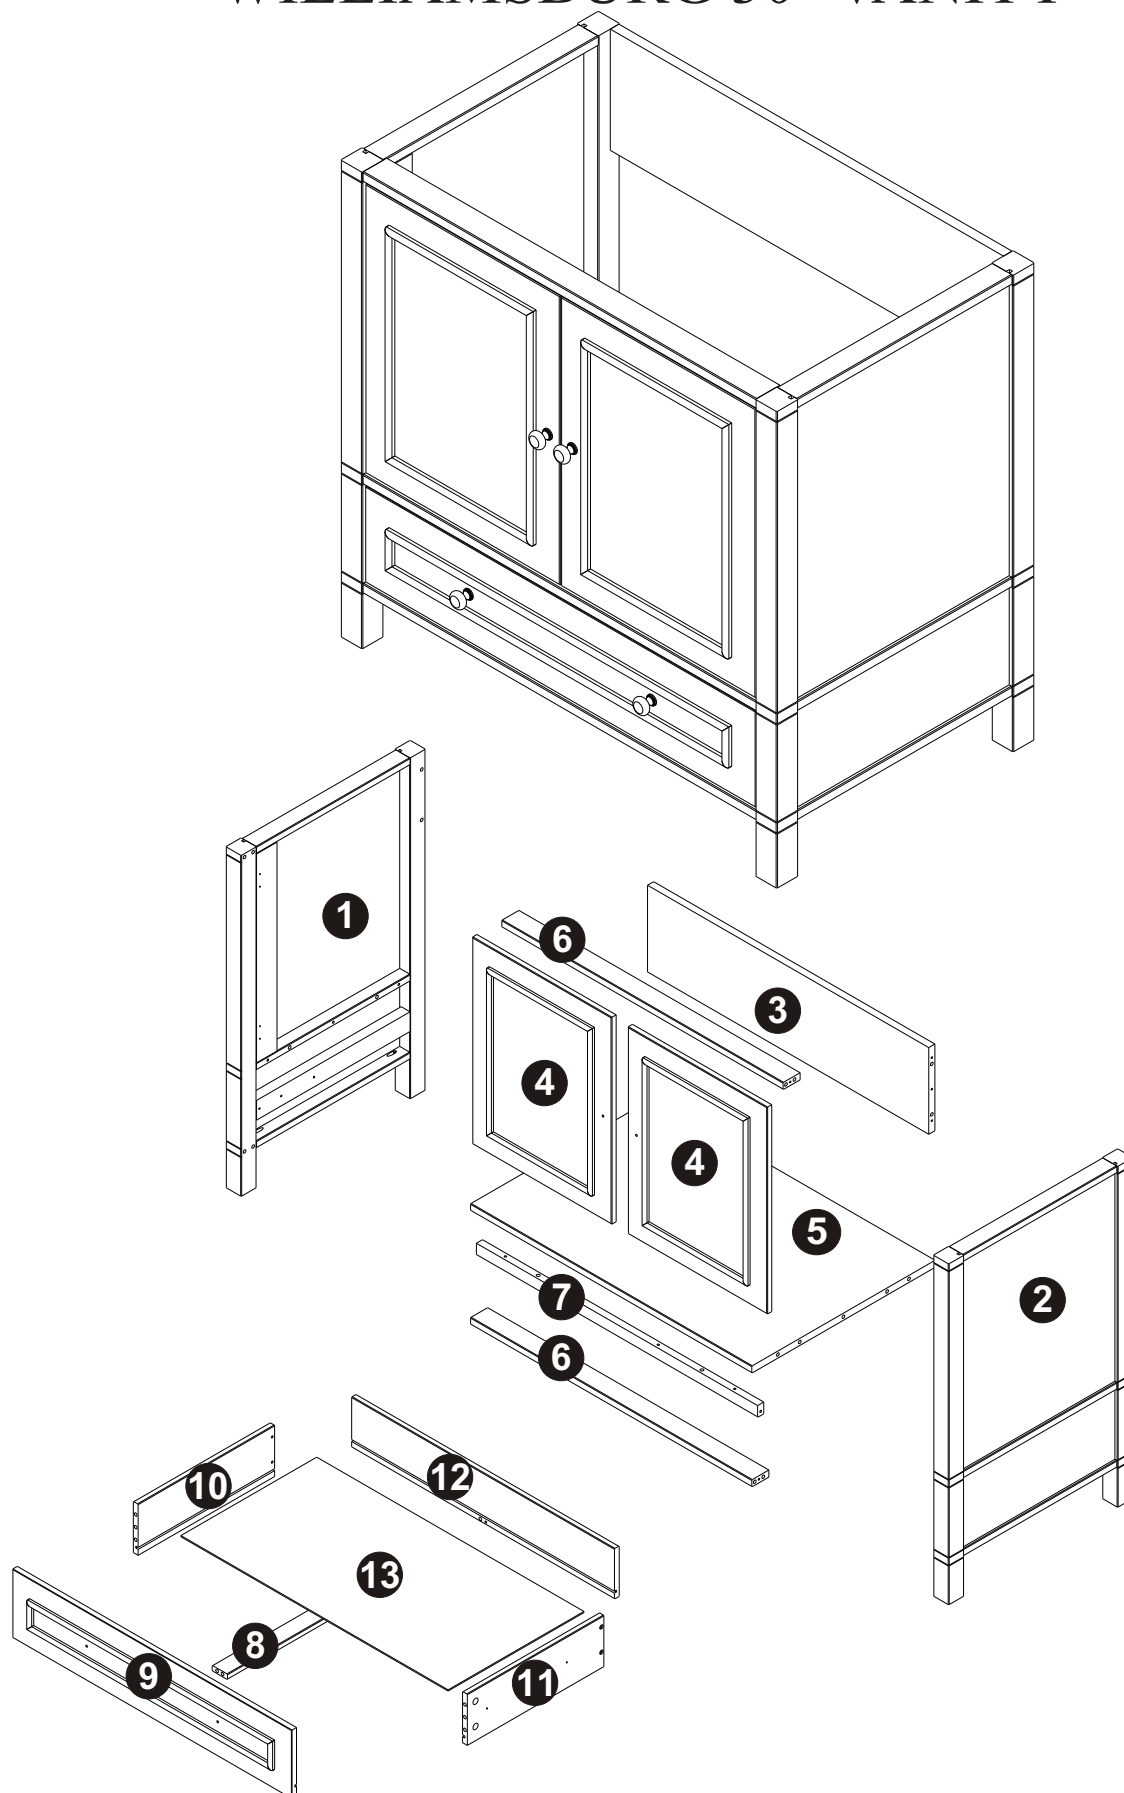

REPLACEMENT PARTS

Please do not contact the company purchased from as we can help you faster.
Order replacement parts and hardware at "www.boltonfurniture.com".



Tools Required





Hammer

* These tools are not
supplied by the
manufacturer

01

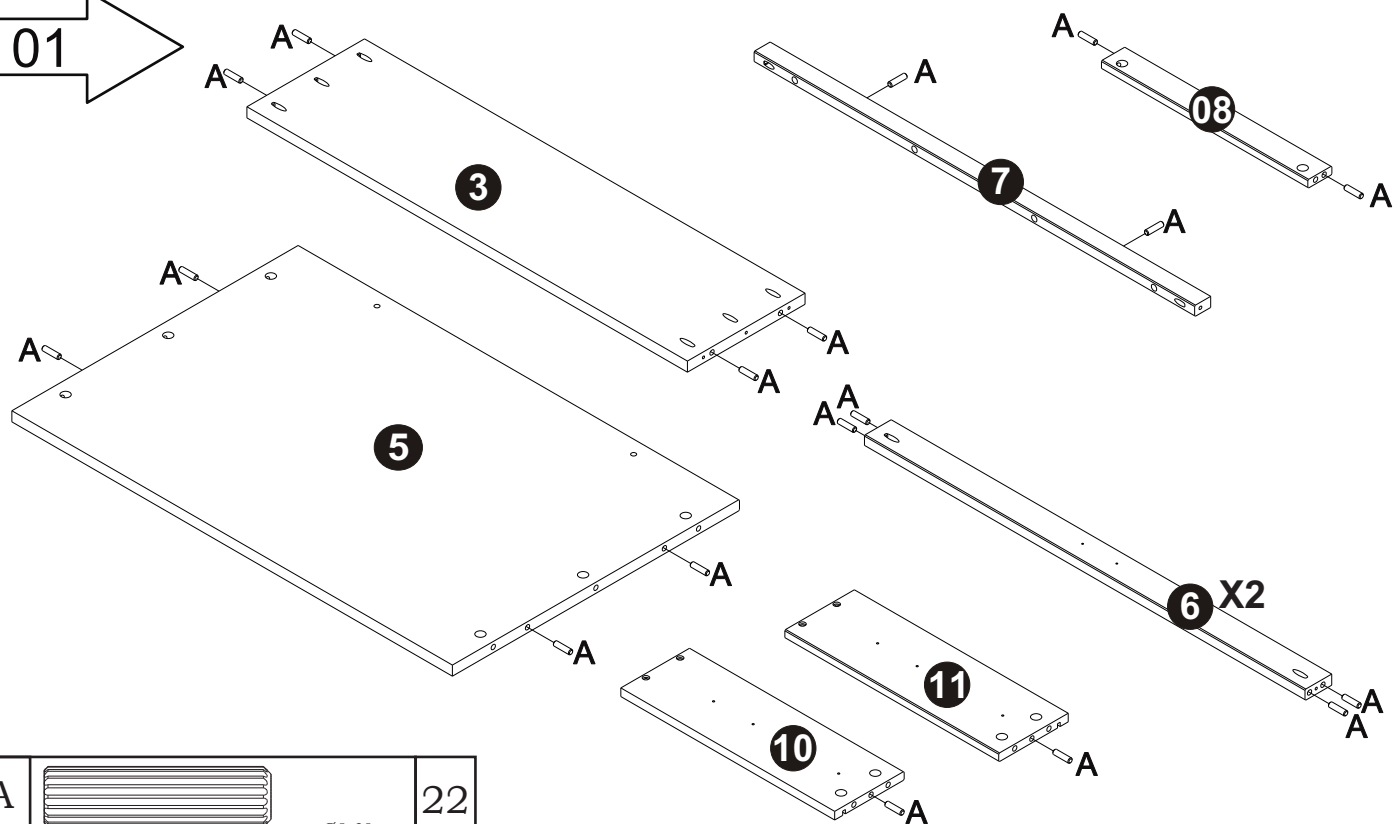

02

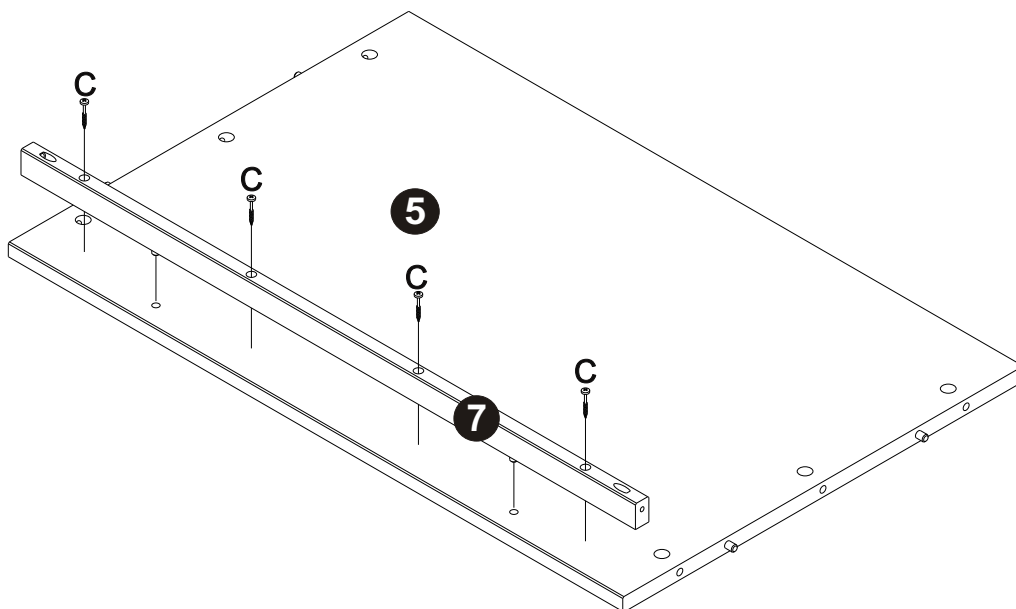

03

1

F

2

F

9


F


12

F


F		12
----------	--	-----------


05

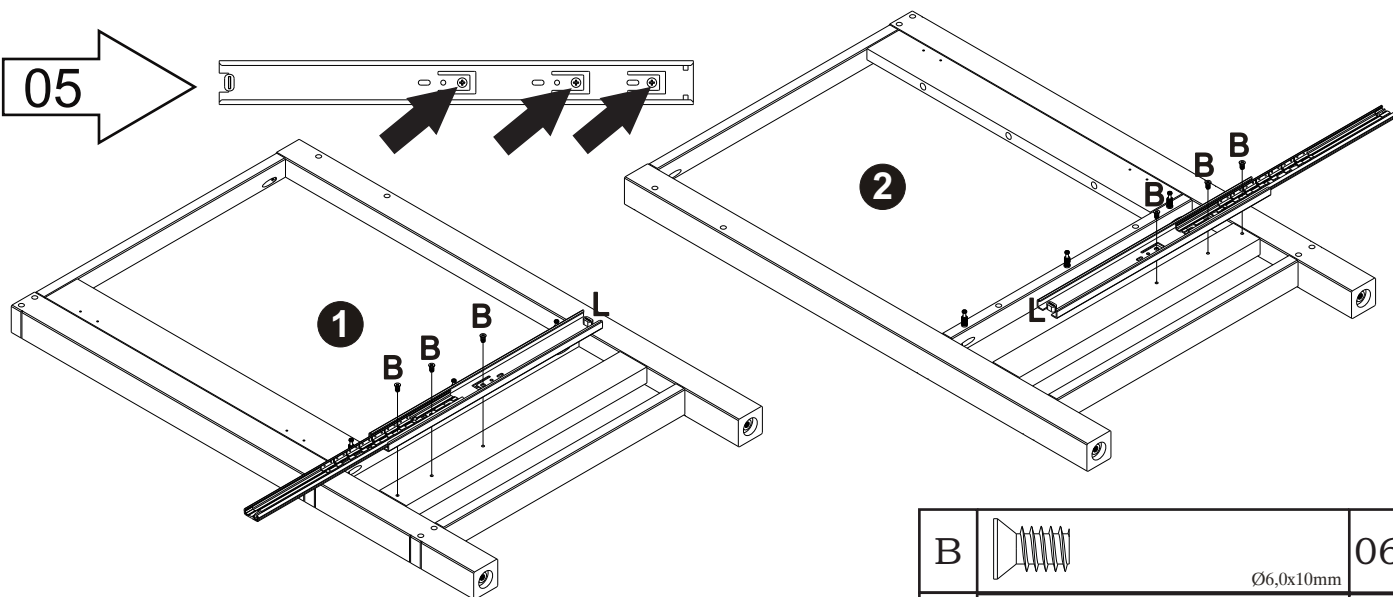


B		06
Ø6,0x10mm		
L		02


06

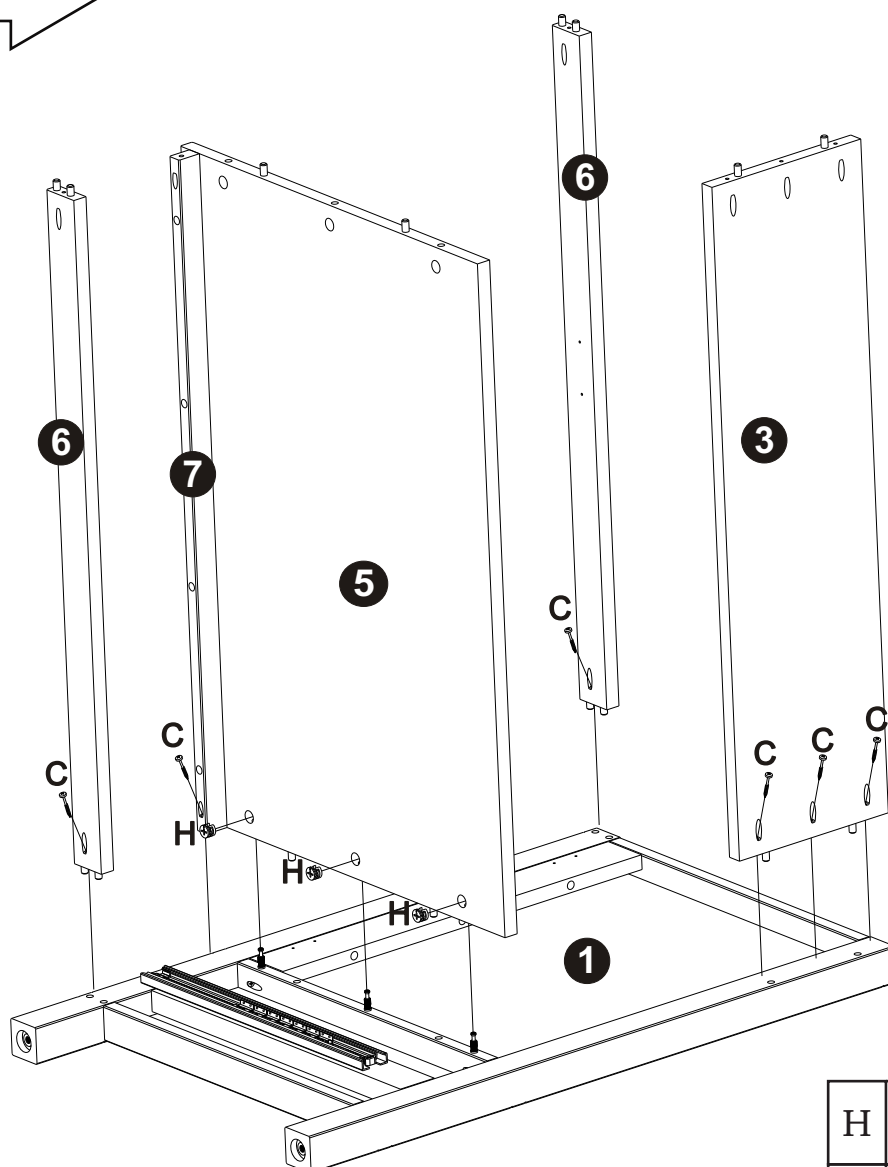


H		03
C		06
Ø3,5x30mm		


07

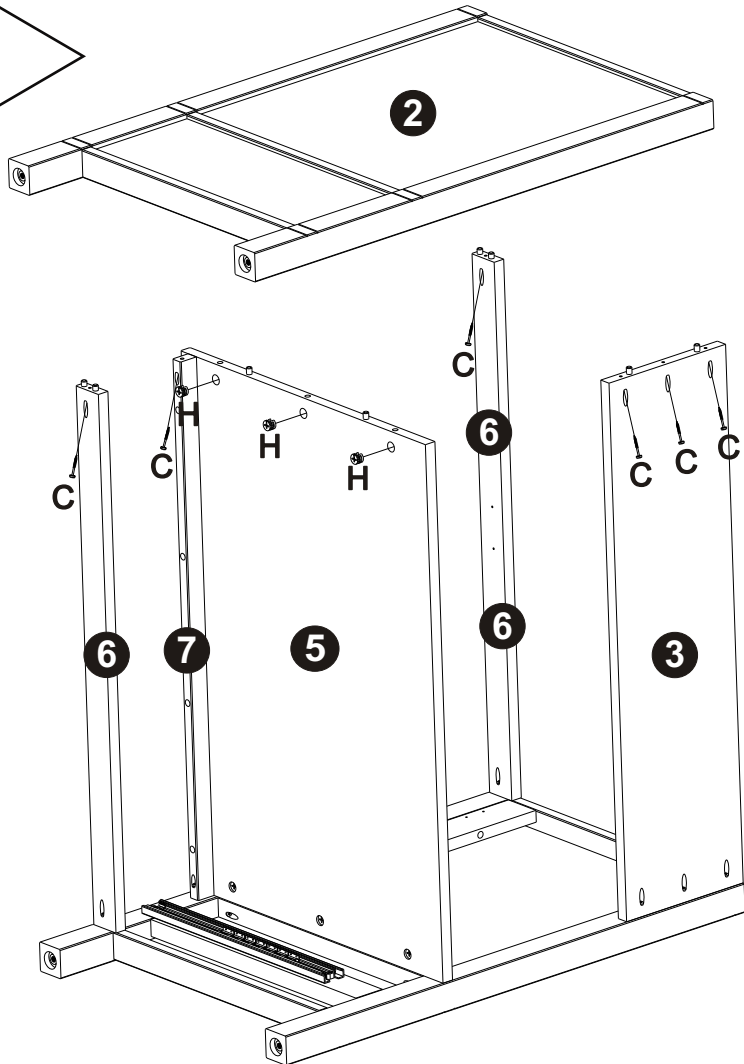


H		03
C	 Ø3,5x30mm	06


08

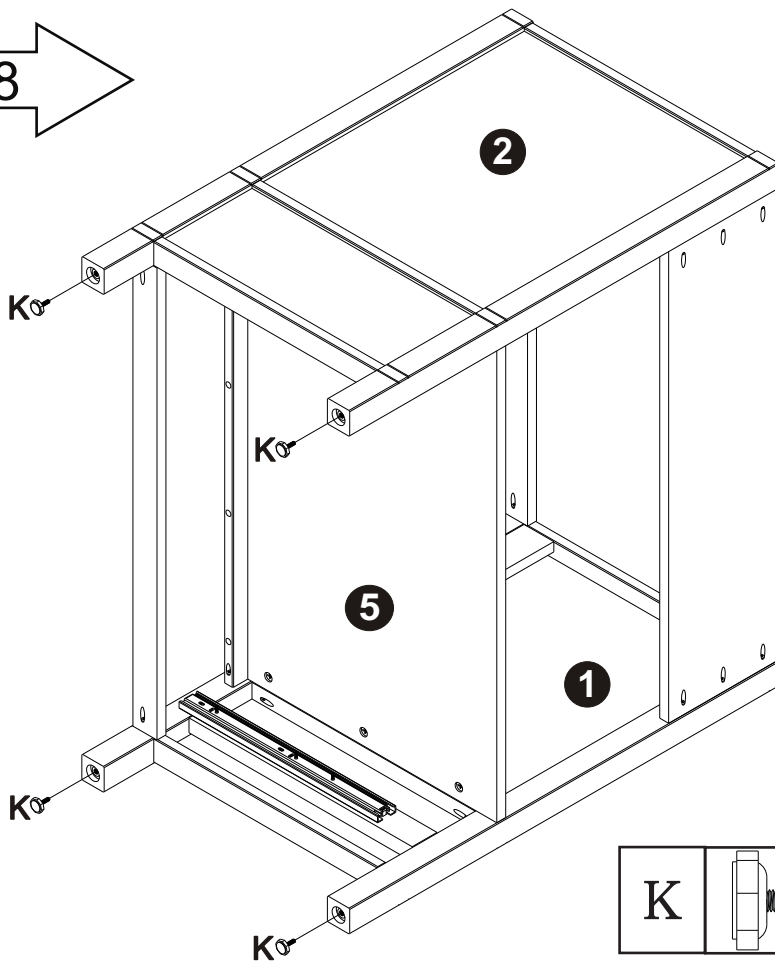

K		04
---	--	----


09


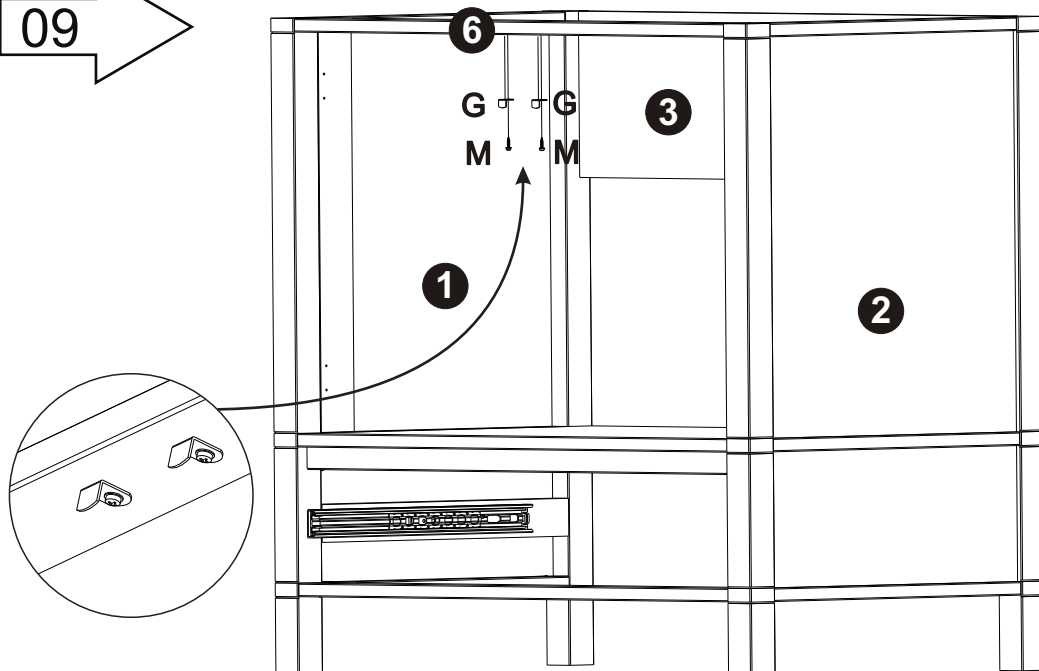


M		02
Ø3,5x14mm		
G		02


10



X2

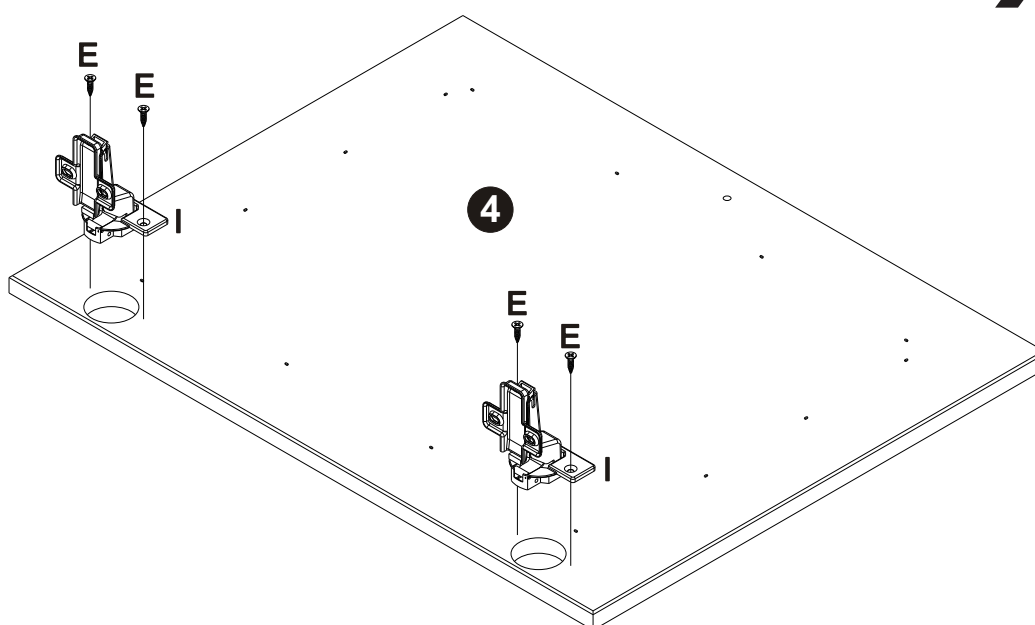

E		08
Ø3,5x14mm		
I		04

11



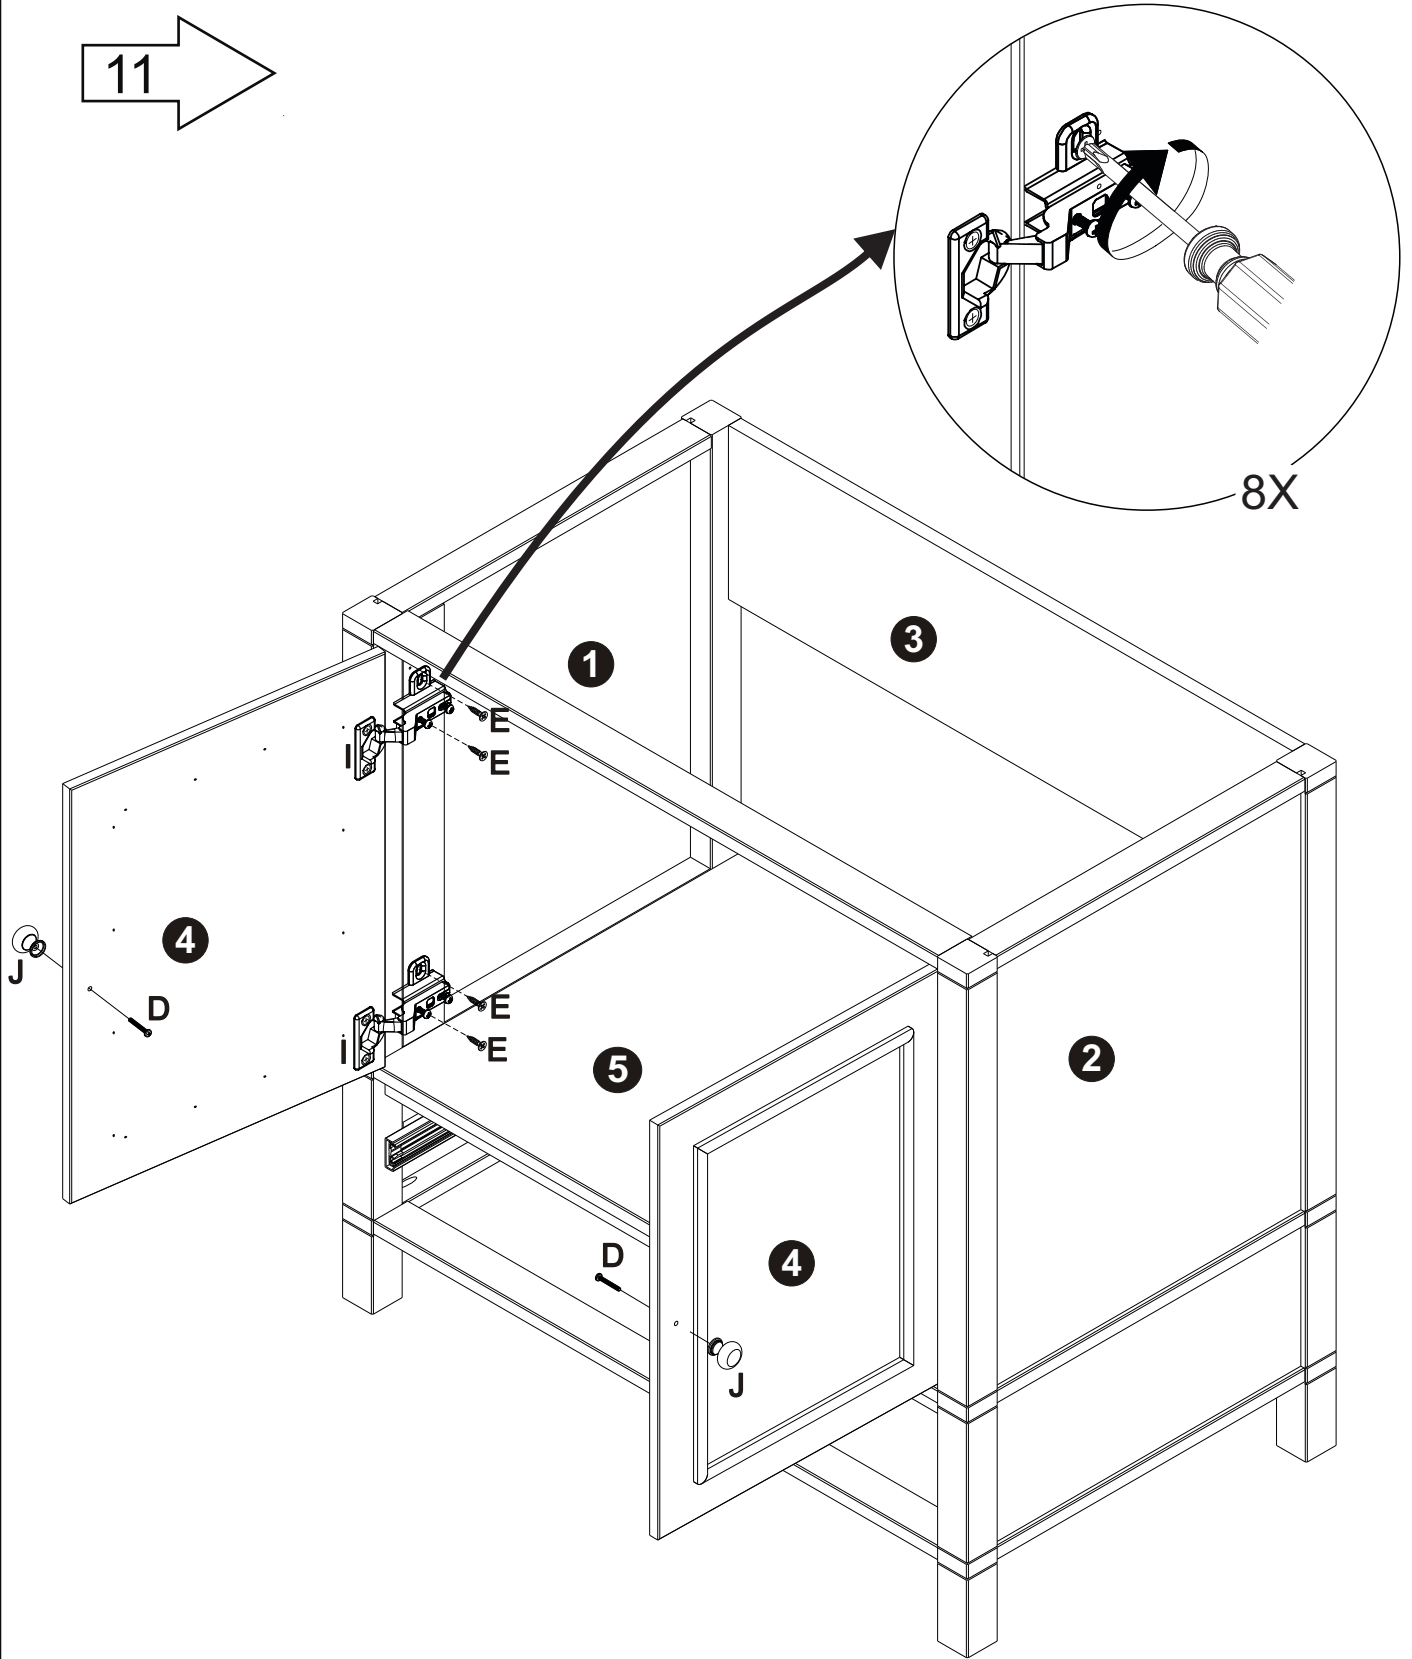






E		08
D		02
J		02


Ø3,5x14mm

Ø4x22mm

12

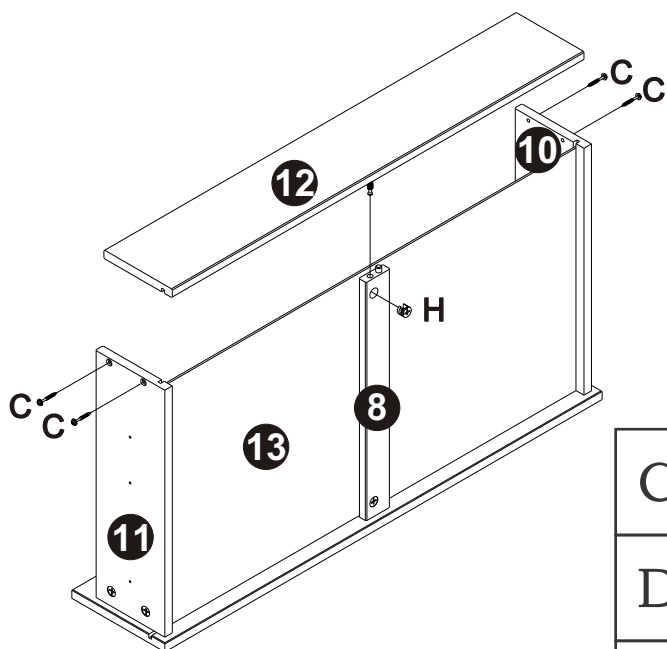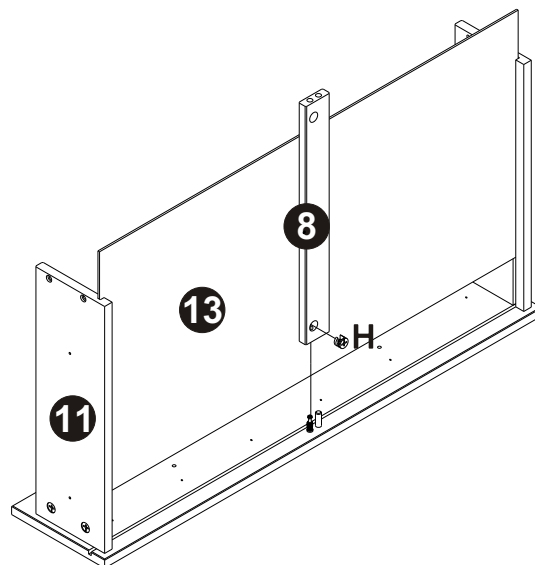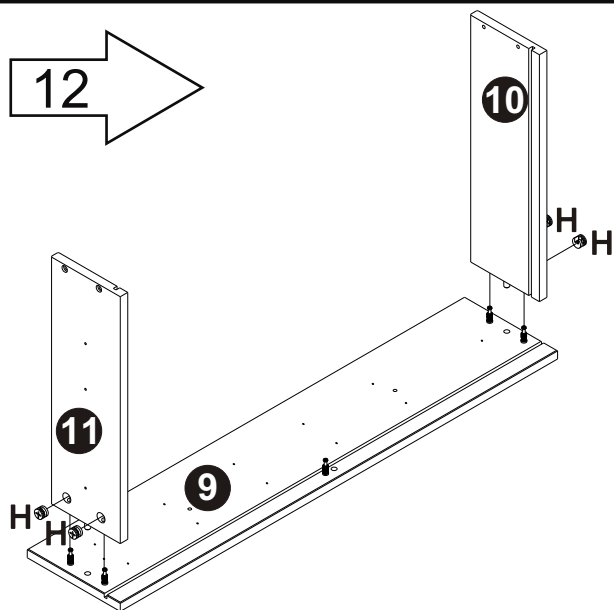

C		Ø3,5x30mm	04
D		Ø4x22mm	02
E		Ø3,5x14mm	04
H			06
J			02
L			02

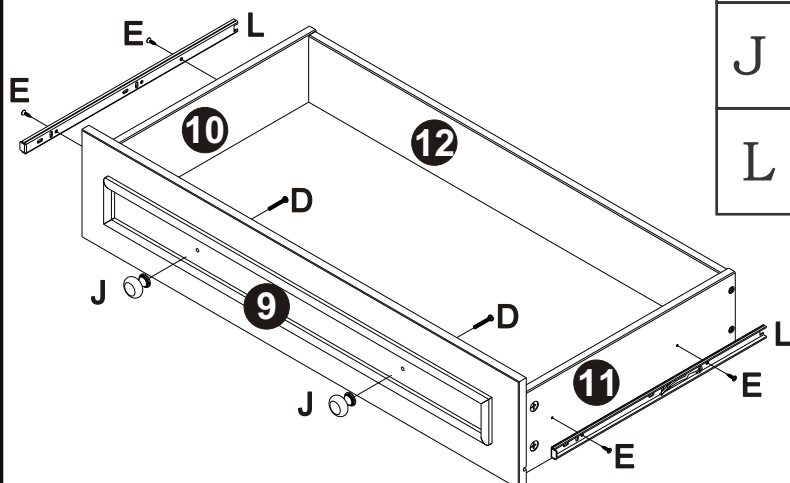

13

