


BOX #2

D. FOOTBOARD 1 PC F. SLAT ROLL 1 SET BED HARDWARE BOX

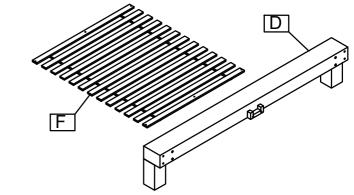

HARDWARE KIT PACKED IN BOX #1


No.	DESCRIPTION	IMAGE	QUANTITY
1	ALLEN BOLT (5/16"x40mm)		6 PCS
2	LOCK WASHER (5/16"x2mm)		6 PCS
3	FLAT WASHER (8x19mm)	0	6 PCS
4	ALLEN KEY	<u></u>	1 PC


BOX #3:

- E. SIDE RAIL 2 PCS
- G. CENTER SLAT SUPPORT 1PC
- K. MATTRESS SPACER 2PCS
- H. SUPPORT LEG 4PCS





No.	DESCRIPTION	IMAGE	QUANTITY
1	METAL DOWEL (8x40mm)		8 PCS
2	ALLEN BOLT (5/16"x20mm)		8 PCS
3	ALLEN BOLT (1/4"x50mm)	()	12 PCS
4	LOCK WASHER (5/16"x2mm)		20 PCS
5	FLAT WASHER (8x19mm)	0	20 PCS
6	WOOD SCREW (4x30mm)	() mmm>	8 PCS
7	ALLEN KEY		1 PC

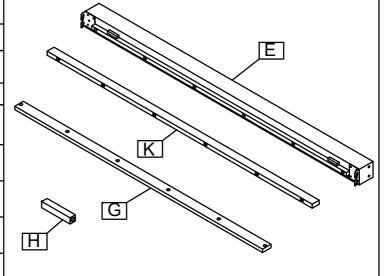









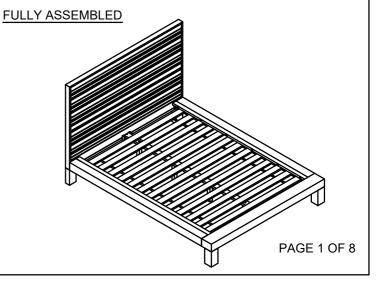




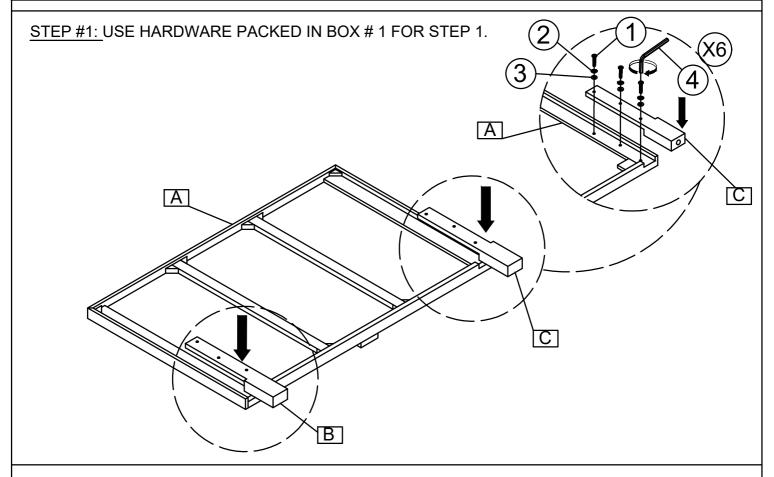


STEP #2: USE HARDWARE PACKED IN BOX # 2 FOR STEP 2 AND ALL THAT FOLLOW .

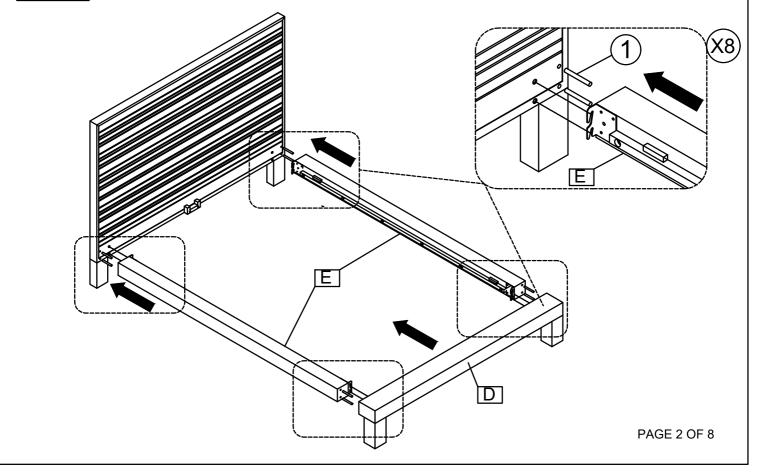



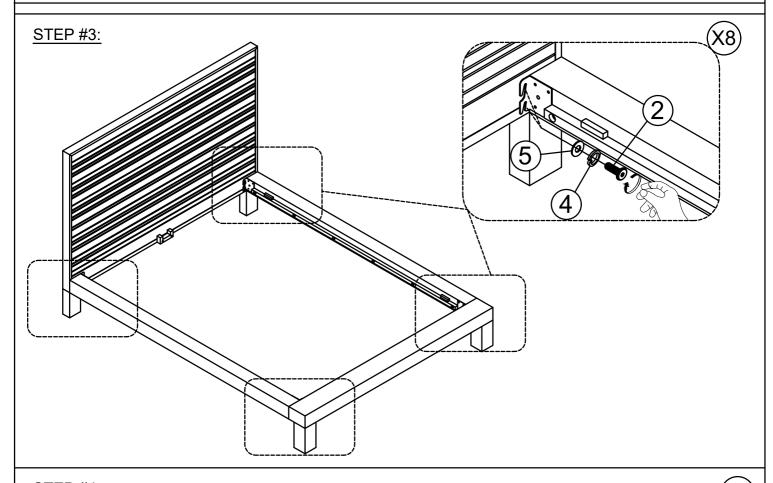

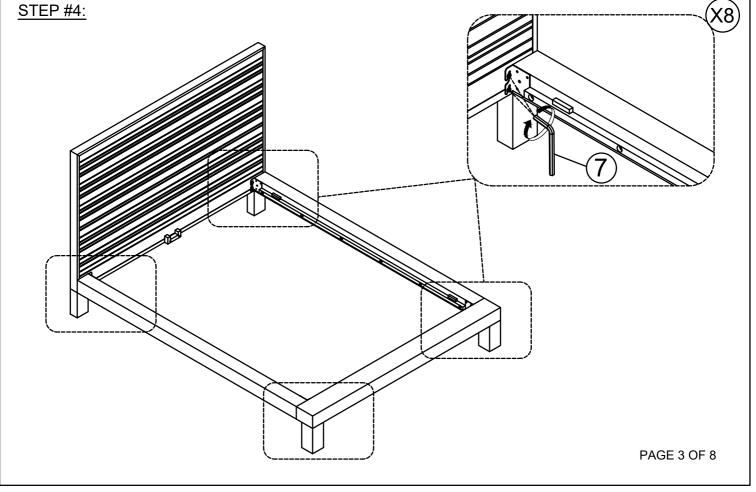







STOP


- * IF USING BED FRAME WITH ADJUSTABLE MATTRESS BASE, SKIP TO APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- * IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION CONTINUE TO STEP 5.

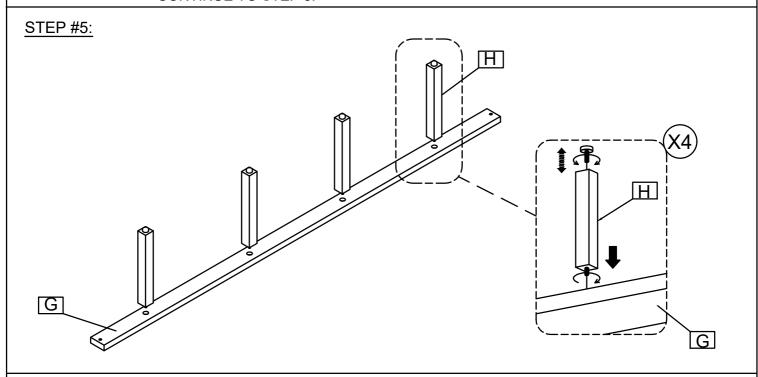

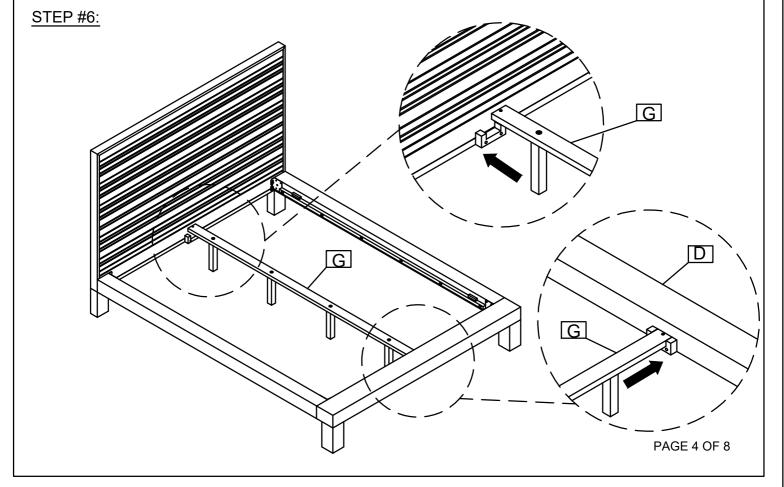




STEP #7:

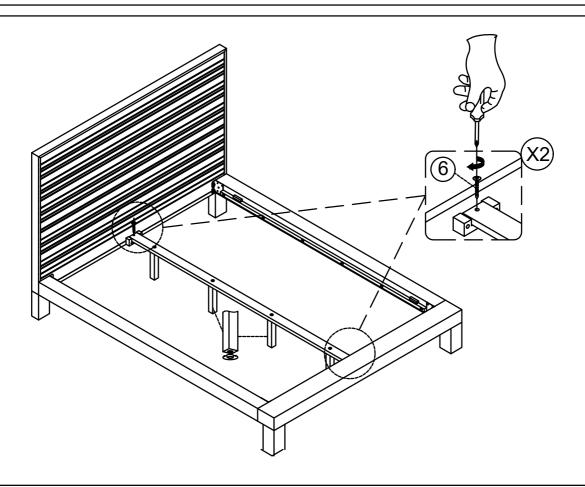


STEP #8:

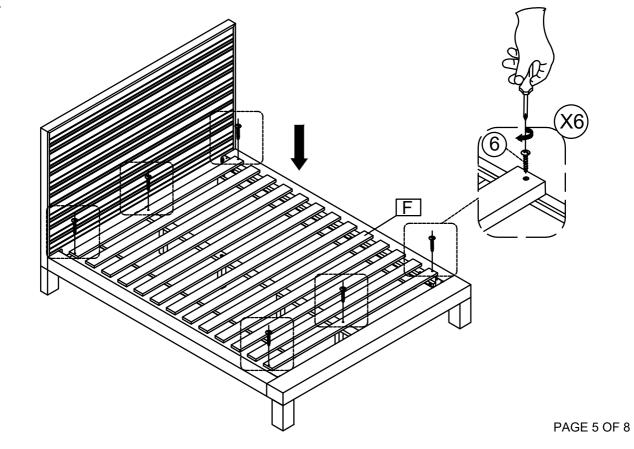




STEP #9:

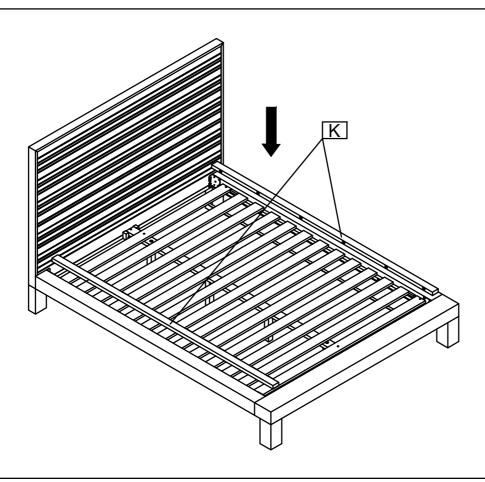

STEP #10:

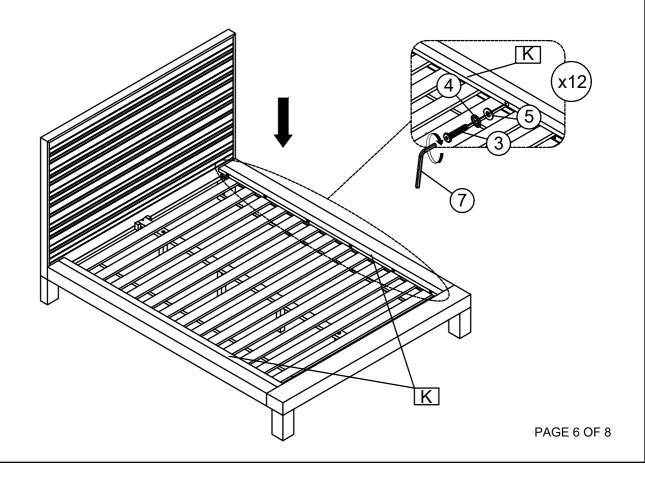




ASSEMBLY COMPLETE.



INSTRUCTIONS FOR ADJUSTING LEVELER:

- POSITION THE BED IN YOUR SPACE AND LOCATE
 THE LEVELER UNDER EACH SUPPORT LEG.
- TURN THE LEVELER COUNTER- CLOCKWISE TO EXTEND THE LEVELER AND CLOCKWISE TO RETRACT IT.
- ADJUST EACH LEVELER UNTIL EACH SUPPORT LEG IS APPLYING EQUAL. UPWARD PRESSURE ON THE BED SUPPORT SLAT.



MAINTENANCE INSTRUCTIONS:

- REMOVE BOX SPRING AND MATTRESS BEFORE MOVING YOUR BED.
- LIFT YOUR BED WHEN MOVING IT.

 DRAGGING CAN DAMAGE THE LEG SUPPORT.
- READJUST LEVELERS AFTER MOVING YOUR BED.

PAGE 7 OF 8



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.

PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION.

FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.


THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

- F. SLAT ROLL 1SET
- G. CENTER SLAT SUPPORT 1PC
- K. MATTRESS SPACER 2PCS
- H. SUPPORT LEG 4PCS

- 3. ALLEN BOLT (1/4"x50mm) 12PCS
- 4. LOCK WASHER (5/16"x2mm) 12PCS
- 5. FLAT WASHER (8x19mm) 12PCS
- 6. WOOD SCREW (4x30MM) 8PCS

STEP 1:

USE ALLEN KEY (7) IN BOX #2 TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

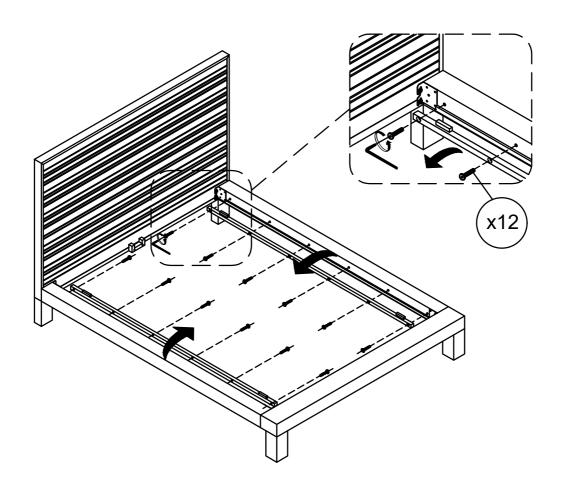

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION