

### **Vinyl Drywall 1/2" J-Trim**


Practice installation in accordance with applicable ASTM standards and using prevalent industry standards.

#### **Method 1: Slip-On**

1. For doors, windows or special lengths, cut the trim to length and dry fit.
  - a) Prevent overlap by snipping back.
  - b) Dry fit the trim.
2. Slip the J-Trim over open drywall end. 1/2" J-Trim is designed to be slipped over 1/2" drywall. Other sizes available.
3. No fasteners or primer is needed. Finish as usual.
4. For cold weather winter applications, please refer to the installation recommendations in the Gypsum Association GA-220-06 of 40°F or warmer.

#### **Method 2: Spray Adhesive**

1. For doors, windows or special lengths, cut the trim to length and dry fit.
  - a) Prevent overlap by snipping back.
  - b) Dry fit the trim.
2. Put a coat of spray adhesive on the back of the trim.
  - a) Immediately slip the J-Trim over the open drywall end and position in place.
  - b) If the adhesive dries too long, it will be hard to reposition.
  - c) At some point the adhesive will lose tackiness and will not bond. If this happens, reapply adhesive to back of trim.
3. The rate at which the adhesive dries varies depending on heat and humidity. Test in your conditions.
4. Use handle of your taping knife or installation tool to apply pressure along exposed J-Trim. Bond strength is greatly enhanced with this crucial step.
5. Pressure the exposed J-Trim again (see step 4).
6. No fasteners or primer is needed. Finish as usual.
7. For cold weather winter applications, please refer to the installation recommendations in the Gypsum Association GA-220-06 of 50°F or warmer.

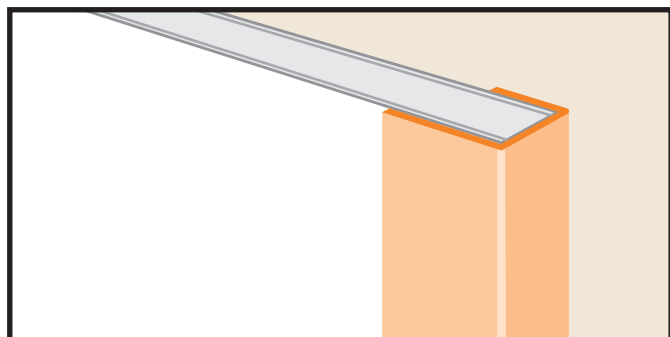

"J" Trim is used to finish rough drywall panel ends at window and door openings.