
# MONTAIGNE


- Please check your product packaging to make sure the included accessories are in the "list of standard accessories". If any parts are missing, please contact your local dealer immediately.
- Do not allow any sharp objects to come in contact with the cabinet, as it will scratch the surface.
- Continuous and prolonged exposure to direct sunlight may cause discoloration to the wood.
- Do not put any hot appliances directly on or near the cabinet.
- •Please avoid using cleaning products that contain bleach or ammonia.
- Wood surfaces should only be cleaned with wood care products such as soapy water or furniture polish.


# ANZZI

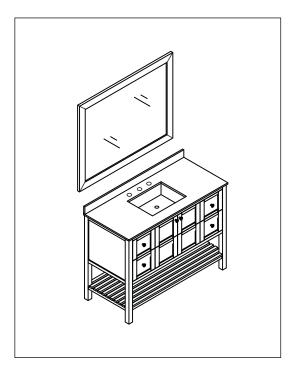

NOTE: Mirror(s) not included with all SKU builds. Check listing for details.


# INSTALLATION

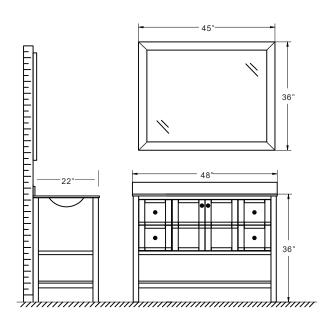




## MAIN BODY PARTS



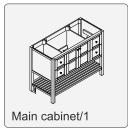

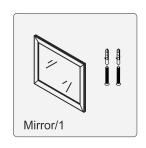


### **INSTALLATION PARTS**
















Tape

Pencil


Impact Drill

Levelling Instrument


Screw driver


Glass Glue Gun


#### INSTALL, REMOVE, ADJUST OF TOP FAST LOADING HINGE











install


remove


adjust the height


adjust the lateral


adjust the deep

#### DRAWER ASSEMBLY AND REMOVAL(WITH PEG)

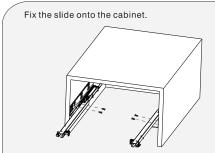


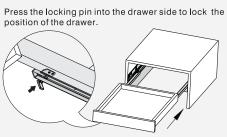



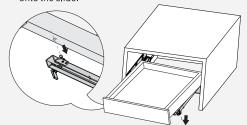

For removal, pull out the locking pin from the drawer side. Lift the drawer and pull it out from the cabinet.

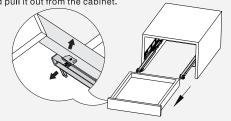

#### INSTALLATION INSTRUCTIONS

