


88 5050 89 Modern Craftsman Bar Stool

IMPORTANT NOTE


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the wood parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.


Home
Styles

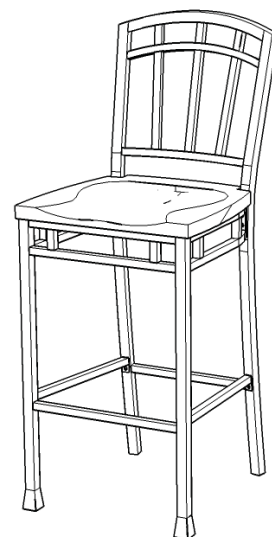


Part List




A.
Seat
1 pc.



C.
Side Piece
1 pc.




D.
Side Piece
1 pc.

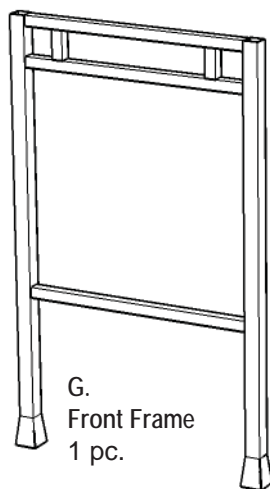


G.
Front Frame
1 pc.



E.
Stretcher
1 pc.



F.
Stretcher
1 pc.

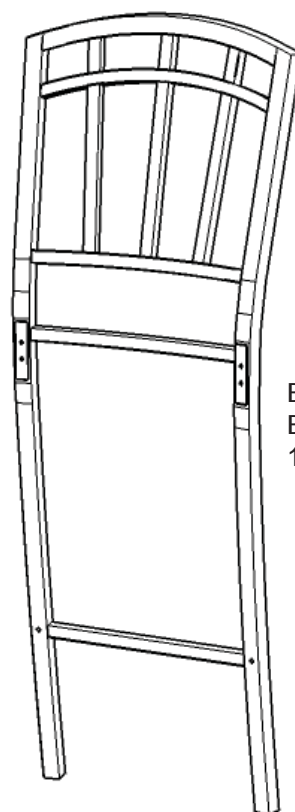


B.
Back Frame
1 pc.

Hardware List



Small
Hex Wrench
1 pc.

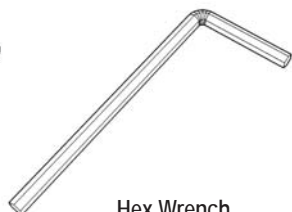

Hex Wrench
1 pc.



Head Cap Bolt
12 Pcs. (+1 extra)



Spring Washer
12 Pcs. (+1 extra)



Flat Washer
12 Pcs. (+1 extra)



Wood Screw
4 Pcs. (+1 extra)

Tools required for assembly : **Phillips** screwdriver

Home Styles Consumer Assistance: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

Assembly Instruction 2/2


IMPORTANT

- * Please keep Hex Wrench in a safe place as you may need to tighten up the Head Cap Bolts in the future.
- * Do not tighten up all the screws until each part is properly assembled.
- * Use a soft cloth between these parts and the floor.

STEP 1

Attach Side Pieces (C) and (D) and Stretchers (E) and (F) to Back Frame (B) with Head Cap Bolts, Spring Washers and Flat Washers.

Attach Front Frame (G) to unit with Head Cap Bolts, Spring Washers and Flat Washers.

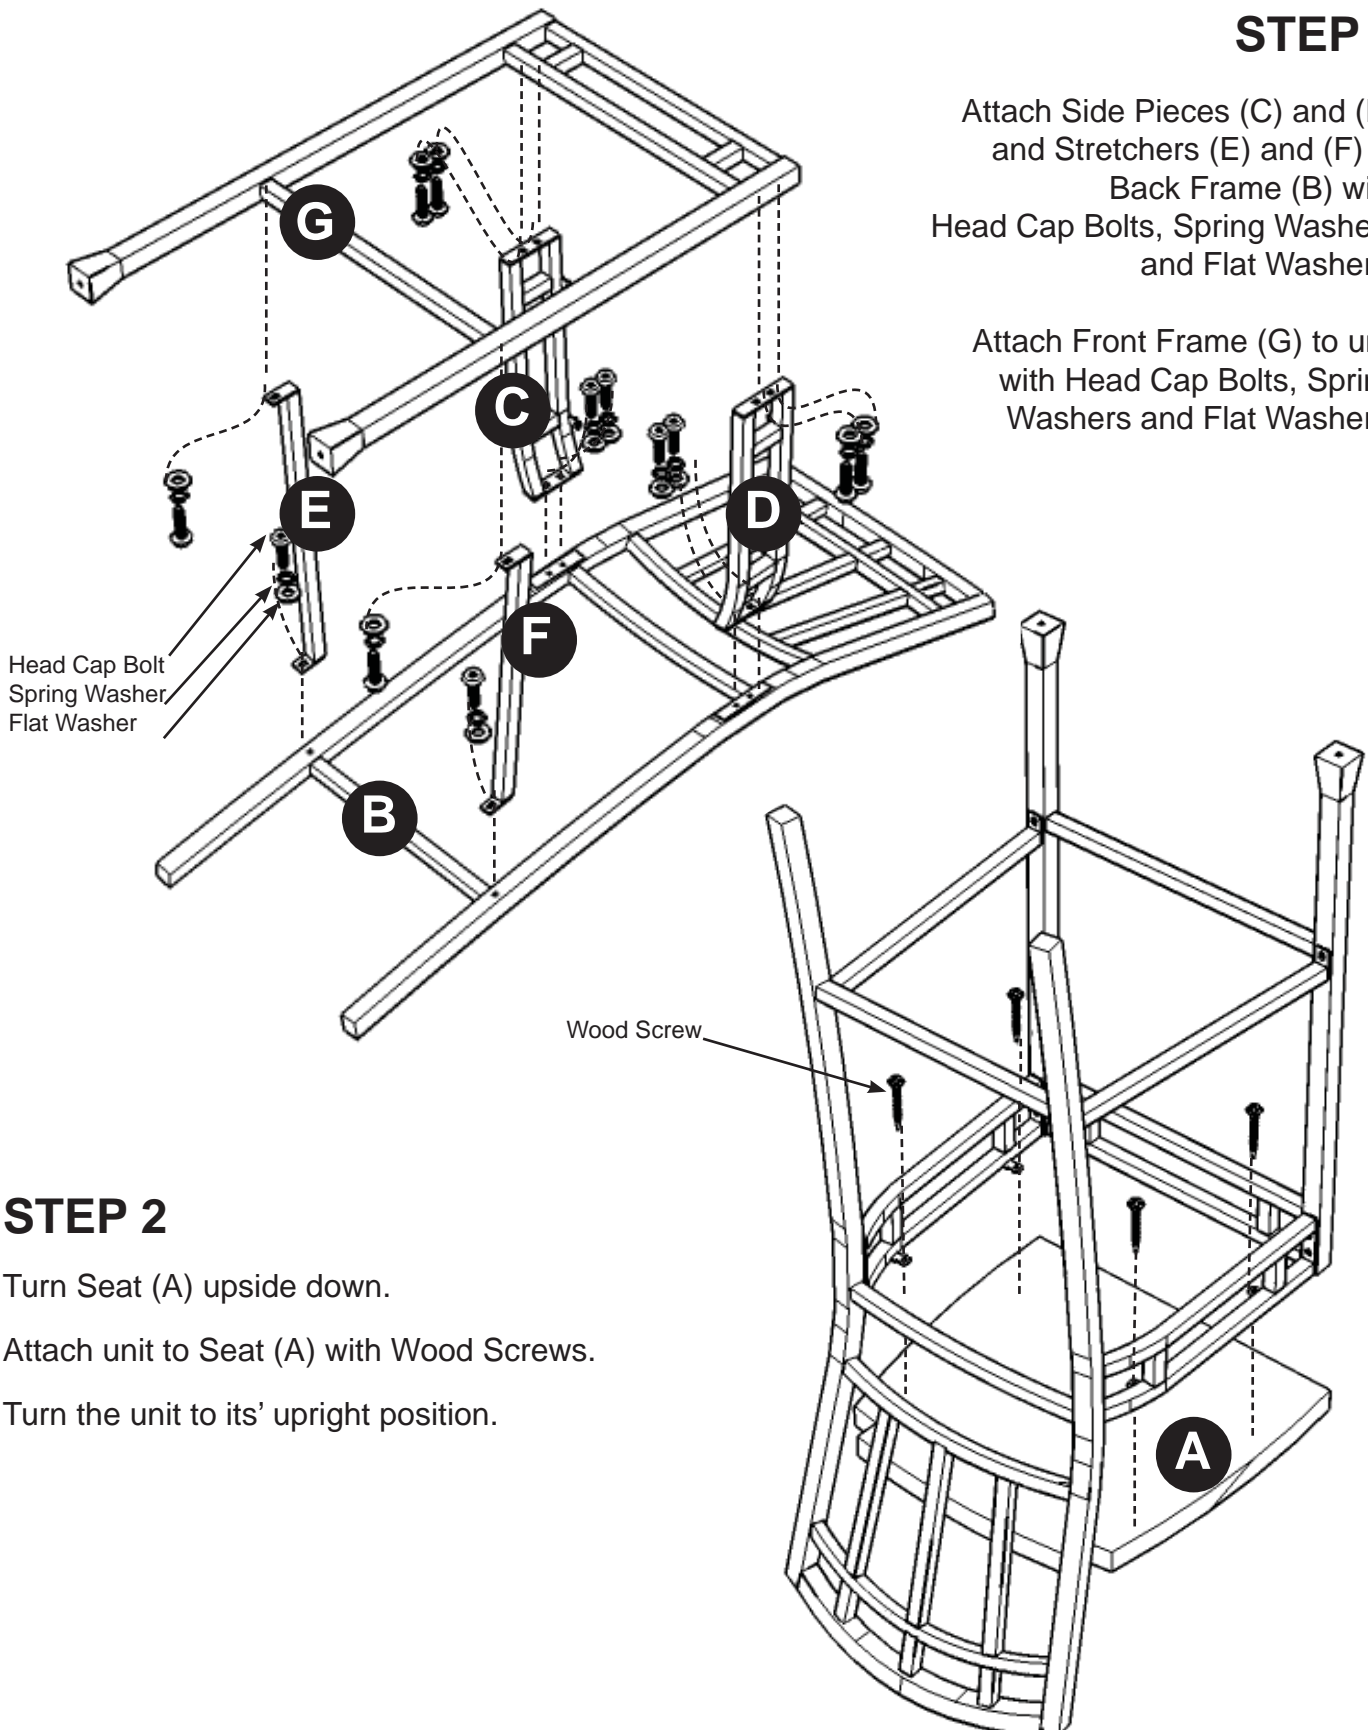

STEP 2

Turn Seat (A) upside down.

Attach unit to Seat (A) with Wood Screws.

Turn the unit to its' upright position.