

LARGE CHATEAU ENTRANCE MIRROR

PART LIST

- A [1] CENTER FRAME
- B [2] SIDE FRAMES

IMPORTANT SAFETY INSTRUCTIONS

1. Adult assembly only owing to the presence of small parts, sharp points and edges.
2. Professional installation is recommended. Serious injury or death can occur if this furniture is not hung correctly. Do not use wire to hang this furniture. Please follow correct hanging methods for your wall type. Your safety is dependent on the construction and strength of the wall to which it is attached.
3. Check item periodically to see that no fittings have loosened and need attention.

A. ASSEMBLY INSTRUCTIONS

1. Lay both mirror frames on a flat surface with the front surfaces are in bottom.
2. Connect the side frames (B) to the center frame (A) by using mending plate (1) together with Allen bolts (2), flat washers (3) and lock washers (4). See FIGURE 01.

HARDWARE LIST

NO	DESCRIPTION	QTY
1	 MENDING PLATE	6
2	 ALLEN BOLT	24
3	 LOCK WASHER	24
4	 FLAT WASHER	24
5	 ALLEN WRENCH	1
6	 WALL BRACKET LONG	1
7	 WALL BRACKET SHORT	2
8	 HOLLOW WALL ANCHOR	15
9	 PLASTIC ANCHOR (47MM L)	15
10	 SCREW (M4 x 40mm)	15
11	 PLASTIC BRACKET	2
12	 RESTRAINT STRAP	2
13	 PHILLIPS SCREWS M4 X 30MM	4
14	 PHILLIPS SCREWS M4 X 20MM	4
15	 PLASTIC ANCHOR (29MM L)	4

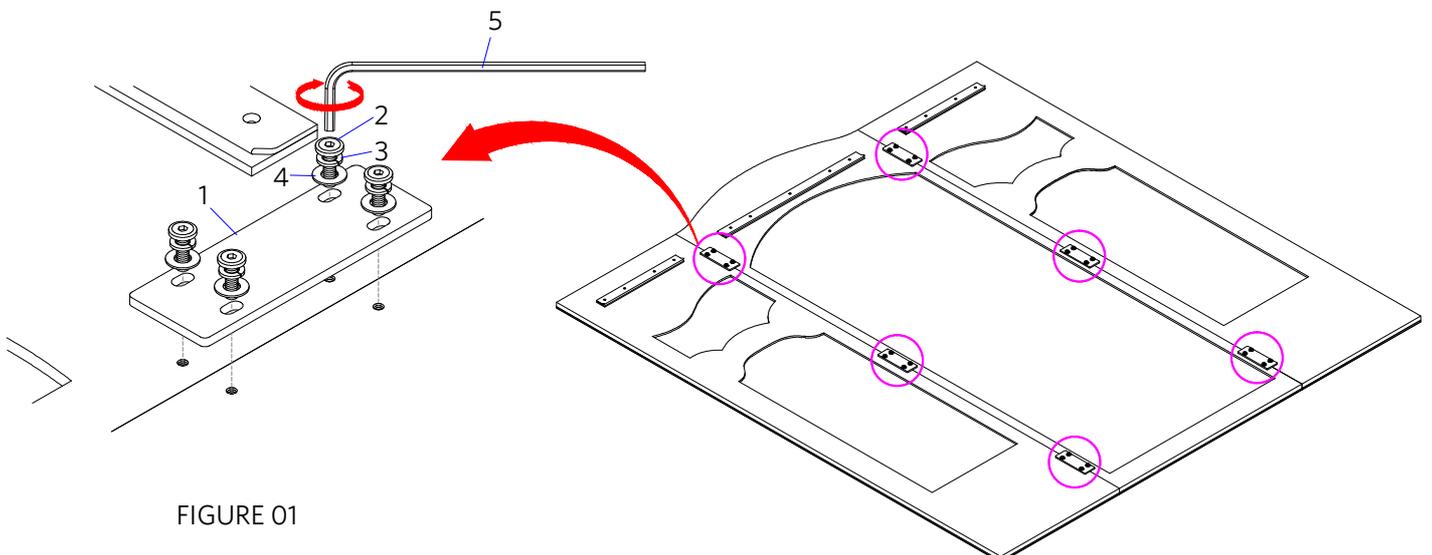


FIGURE 01

ASSEMBLY INSTRUCTIONS BY WALL TYPE

- CONCRETE: drill pilot hole on each marking and then insert plastic anchor. Use a screwdriver to attach the bracket to the wall with screws.
- DRYWALL WITH STUDS: use screws to affix to studs, and use hollow wall anchors and screws to affix to drywall .
- DRYWALL WITHOUT STUDS: use hollow wall anchors and screws to affix to drywall.

B. WALL -MOUNTING

1. Pre-set the furniture on your desired location and mark the location with a light pencil mark. Use tape or pencil to transcribe the location of the back of the pre-installed bracket to the wall. Below this marking is where you will install the included metal wall-mount bracket part (6-7). See Figure 03.
2. Hold the bracket (6-7) against the wall and mark with pencil the locations of the bracket screw holes, ensuring levelness. See Figure 02.
3. Drill a hole on each mark's and then tap anchor into hole until flush with surface. See page 2 for mounting instructions based on your wall type, concrete, drywall, or drywall and studs.
4. Tighten the screws into the anchors while maintaining constant pressure on the anchor to set. Remove screws. Hold metal bracket over the inserted anchors and reinstall screws through the wall bracket holes and tighten until snug against wall. See Figure 02.
5. Install the mirror on the wall bracket as illustrated on Figure 03.




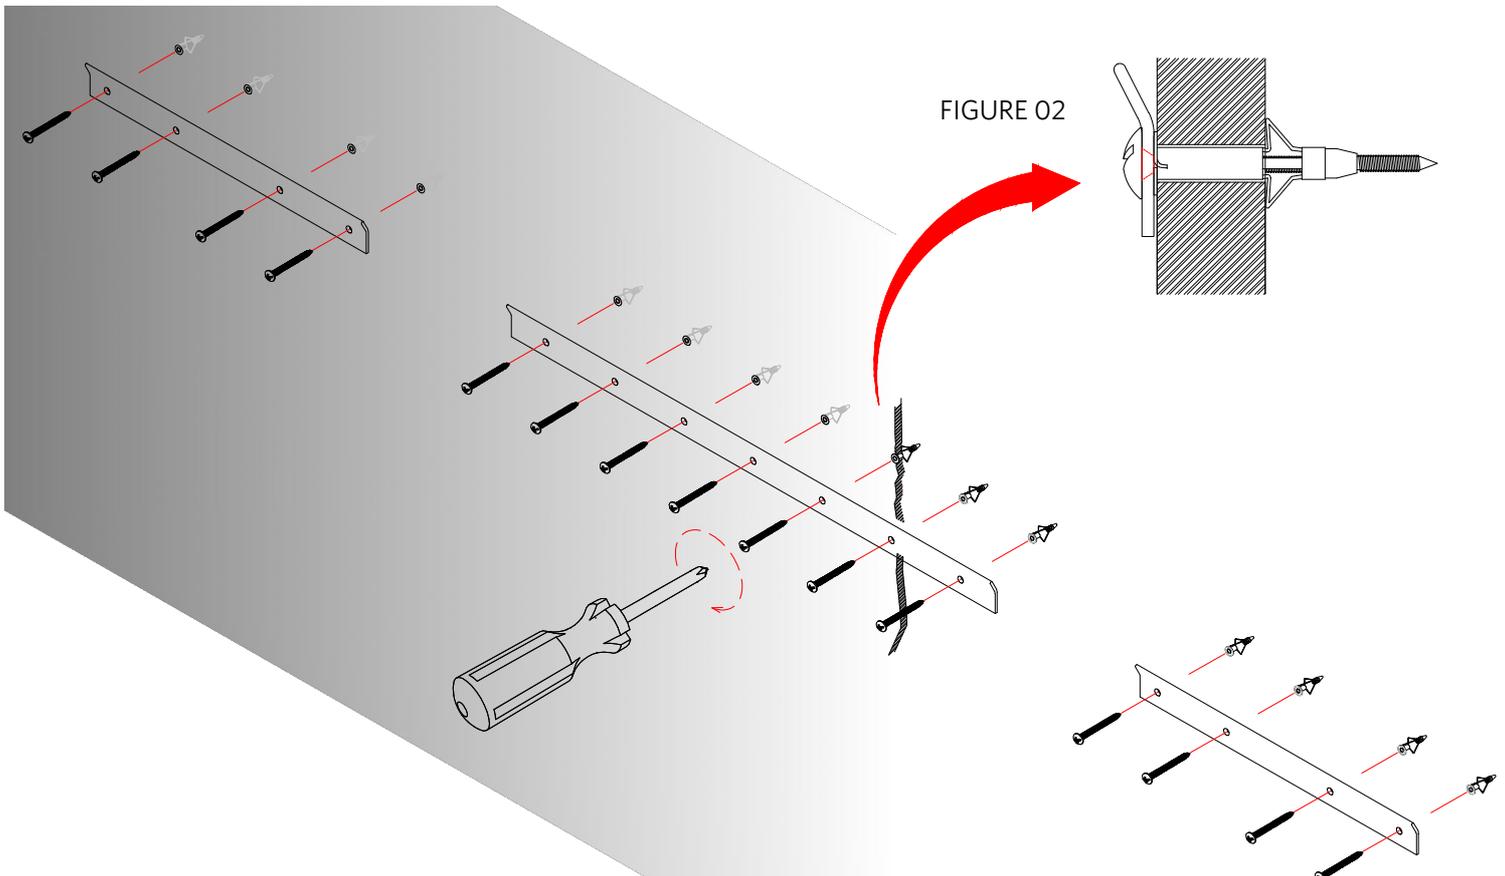


FIGURE 03

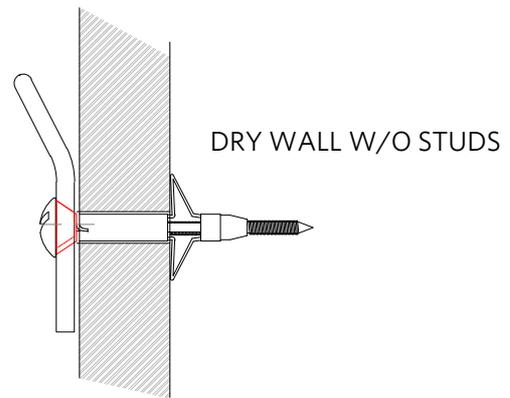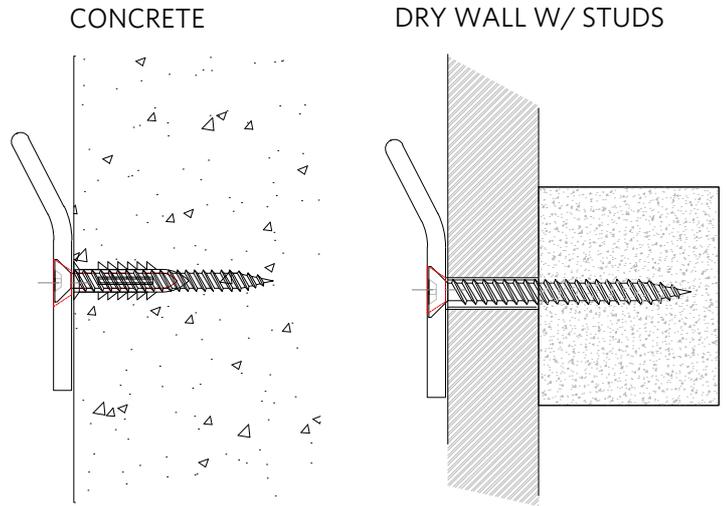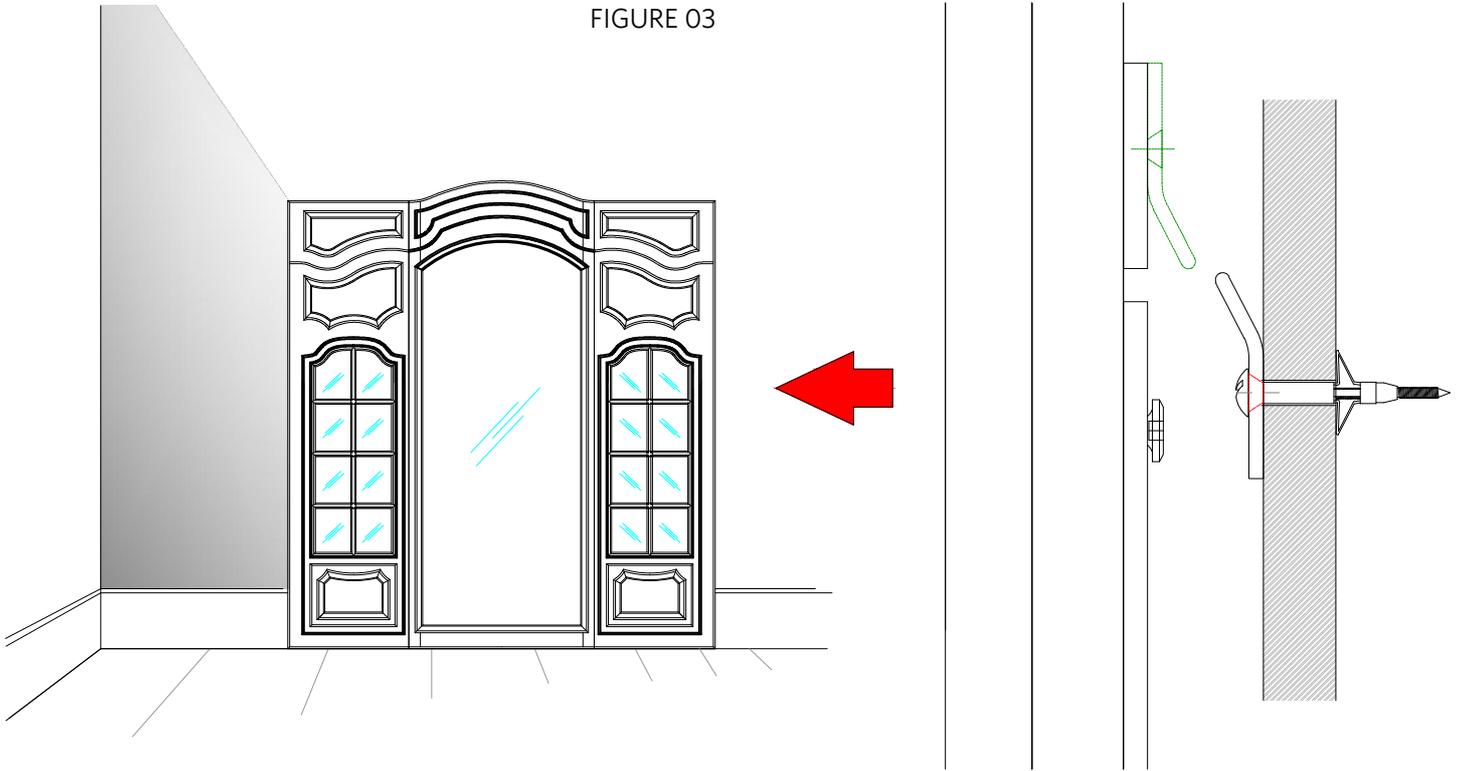

FURNITURE TIPPING RESTRAINT INSTRUCTIONS

Young children may be injured by tipping furniture and the use of a tipping restraint is highly recommended. When properly installed, this restraint could provide protection against the unexpected tipping of furniture due to small tremors, bumps or climbing. We recommend mounting this restraint to a wall stud.

WARNING: This product is only a deterrent. It is not a substitute for proper adult supervision.

C. ANTI-TIPPING RESTRAINT INSTALLATION:

1. Attach two of the mounting brackets near the top back edge of the mirror by inserting the shorter screws.
2. Determine the final position of the mirror. Mark locations on the wall approximately 2" below the brackets mounted to the back of the furniture.
3. Drill a shorter hole into the wall stud. If wall stud is not available, drill a hole into the wall and insert plastic anchor. Gently tap the anchor until the flange is flush with the wall.
4. Attach the second set of brackets by inserting the longer screw through the bracket and into the wall.
5. Place the furniture so that the brackets on the back edge are in line with the brackets in the wall.
6. Lace one end of the nylon restraint strap down through each bracket. Bring both ends together and slide the beaded end until it snap locks into the keyhole slot.
7. To double lock; return the beaded end back through the keyholes as shown.
8. Check to make sure the straps are securely laced and locked to the brackets.

CARE INSTRUCTIONS:

- Dust often using a clean, soft, dry lint-free cloth.
- Blot spills immediately and wipe with a clean, damp, cloth.
- We do not recommend the use of chemical cleansers, abrasives, or furniture polish on our lacquered finish

