RANGE
OUTDOOR LIVING

Manufactured by:
Range Outdoor Living
3305 Airport Drive, Pittsburg, KS 66762
833-689-8428

Basepoint Business Centre: Rivermead Drive,Westlea, Swindon SN5 7EX Phone: 0800-118-2476
J.P. Coenstraat 7, The Bridge, The Hague, 2595 WP, Netherlands Phone: 08005678990

AVERY LINEAR OUTDOOR KITCHEN

MODEL #: SEE VARIANTS ON PAGE 2

⚠ WARNING
Cancer and Reproductive Harm
www.P65Warnings.ca.gov



Please visit www.rangeoutdoorliving.com
For the most up to date assembly manual, to register your product, or to order replacement parts *Para obtener instrucciones en español, visite www.rangeoutdoorliving.com*

BILT®
EASY STEP-BY-STEP
3D INTERACTIVE INSTRUCTIONS
DOWNLOAD THE FREE APP
Download on the App Store

BEFORE YOU BEGIN THE ASSEMBLY OF YOUR RANGE OUTDOOR LIVING OUTDOOR KITCHEN, PLEASE USE THE TABLE BELOW TO ENSURE YOU RECEIVED ALL COMPONENTS NEEDED FOR THE ITEM # YOU PURCHASED. IF YOU ARE MISSING ANY COMPONENTS PLEASE CONTACT OUR CUSTOMER SERVICE TEAM AT 1- 833-689-8428.

ITEM # ORDERED	NAME	COMPONENT LIST	
2601321	AVERY-LINEAR-BLK-LLW-38GR	9260818	CABINET KIT-AVERY-LINEAR
		9240025	OUTDOOR KITCHEN GRILL
		9240162	OUTDOOR KITCHEN FRIDGE-RIGHT OPEN
		9260948	LLW-COUNTERTOPKIT-AVERY-LINEAR
		9260887	BLK-DOORKIT-AVERY-LINEAR
2602007	AVERY-LINEAR-WO-LLW-38GR	9260818	CABINET KIT-AVERY-LINEAR
		9240025	OUTDOOR KITCHEN GRILL
		9240162	OUTDOOR KITCHEN FRIDGE-RIGHT OPEN
		9260948	LLW-COUNTERTOPKIT-AVERY-LINEAR
		9260894	WO-DOORKIT-AVERY-LINEAR
2602151	AVERY-LINEAR-DW-LLW-38GR	9260818	CABINET KIT-AVERY-LINEAR
		9240025	OUTDOOR KITCHEN GRILL
		9240162	OUTDOOR KITCHEN FRIDGE-RIGHT OPEN
		9260948	LLW-COUNTERTOPKIT-AVERY-LINEAR
		9260900	DW-DOORKIT-AVERY-LINEAR
2601918	AVERY-LINEAR-BLK-CMG-38GR	9260818	CABINET KIT-AVERY-LINEAR
		9240025	OUTDOOR KITCHEN GRILL
		9240162	OUTDOOR KITCHEN FRIDGE-RIGHT OPEN
		9260832	CMG-COUNTERTOPKIT-AVERY-LINEAR
		9260887	BLK-DOORKIT-AVERY-LINEAR
2602045	AVERY-LINEAR-WO-CMG-38GR	9260818	CABINET KIT-AVERY-LINEAR
		9240025	OUTDOOR KITCHEN GRILL
		9240162	OUTDOOR KITCHEN FRIDGE-RIGHT OPEN
		9260832	CMG-COUNTERTOPKIT-AVERY-LINEAR
		9260894	WO-DOORKIT-AVERY-LINEAR
2602175	AVERY-LINEAR-DW-CMG-38GR	9260818	CABINET KIT-AVERY-LINEAR
		9240025	OUTDOOR KITCHEN GRILL
		9240162	OUTDOOR KITCHEN FRIDGE-RIGHT OPEN
		9260832	CMG-COUNTERTOPKIT-AVERY-LINEAR
		9260900	DW-DOORKIT-AVERY-LINEAR
2601963	AVERY-LINEAR-BLK-LLW-38GD	9260818	CABINET KIT-AVERY-LINEAR
		9240742	38INCH OUTDOOR KITCHEN GRIDDLE
		9240162	OUTDOOR KITCHEN FRIDGE-RIGHT OPEN
		9260948	LLW-COUNTERTOPKIT-AVERY-LINEAR
		9260887	BLK-DOORKIT-AVERY-LINEAR
2602069	AVERY-LINEAR-WO-LLW-38GD	9260818	CABINET KIT-AVERY-LINEAR
		9240742	38INCH OUTDOOR KITCHEN GRIDDLE
		9240162	OUTDOOR KITCHEN FRIDGE-RIGHT OPEN
		9260948	LLW-COUNTERTOPKIT-AVERY-LINEAR
		9260894	WO-DOORKIT-AVERY-LINEAR
2602205	AVERY-LINEAR-DW-LLW-38GD	9260818	CABINET KIT-AVERY-LINEAR
		9240742	38INCH OUTDOOR KITCHEN GRIDDLE
		9240162	OUTDOOR KITCHEN FRIDGE-RIGHT OPEN
		9260948	LLW-COUNTERTOPKIT-AVERY-LINEAR
		9260900	DW-DOORKIT-AVERY-LINEAR
2601987	AVERY-LINEAR-BLK-CMG-38GD	9260818	CABINET KIT-AVERY-LINEAR
		9240742	38INCH OUTDOOR KITCHEN GRIDDLE
		9240162	OUTDOOR KITCHEN FRIDGE-RIGHT OPEN
		9260832	CMG-COUNTERTOPKIT-AVERY-LINEAR
		9260887	BLK-DOORKIT-AVERY-LINEAR
2602090	AVERY-LINEAR-WO-CMG-38GD	9260818	CABINET KIT-AVERY-LINEAR
		9240742	38INCH OUTDOOR KITCHEN GRIDDLE
		9240162	OUTDOOR KITCHEN FRIDGE-RIGHT OPEN
		9260832	CMG-COUNTERTOPKIT-AVERY-LINEAR
		9260894	WO-DOORKIT-AVERY-LINEAR
2602229	AVERY-LINEAR-DW-CMG-38GD	9260818	CABINET KIT-AVERY-LINEAR
		9240742	38INCH OUTDOOR KITCHEN GRIDDLE
		9240162	OUTDOOR KITCHEN FRIDGE-RIGHT OPEN
		9260832	CMG-COUNTERTOPKIT-AVERY-LINEAR
		9260900	DW-DOORKIT-AVERY-LINEAR

OWNER'S MANUAL - BASIC SETUP DIMENSIONS & ASSEMBLY NOTES

It is critically important that you start with square and level footings or concrete pad to attach your structure.


- **Pay close attention to the items needed for each step. Make sure you are using the correct hardware for each step. Using incorrect hardware may result in improper assembly**
- **Remember to double check for underground utilities and overhead electrical lines**

Post mounts are provided with your structure which allows you to permanently install your structure to a pre-existing or new wood or concrete surface. See Anchor Instructions for further details and recommendations.


- **The hardware to attach the post mounts to the structure is included.**
- **The hardware to mount the structure permanently to a concrete surface is included.**
- **The hardware to mount the structure permanently to a wood deck is NOT included and will need to be purchased separately. You must ensure there is ample structural support under the deck before permanently attaching.**

Imperial measurements rounded to the nearest 1/4".


TOP SIDE VIEW

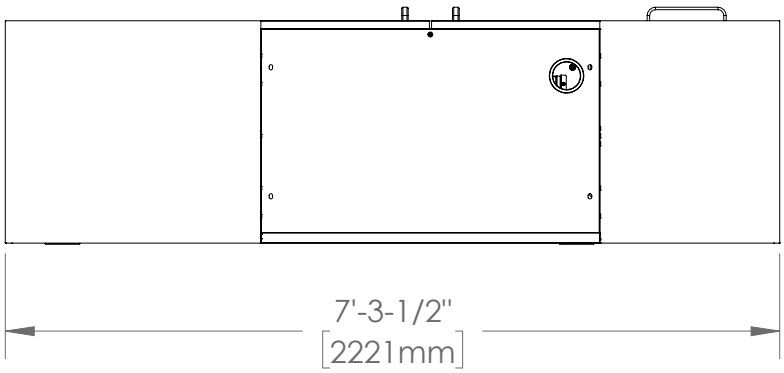

LEFT SIDE VIEW

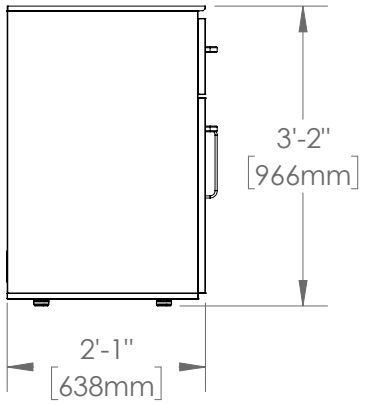


BACK SIDE VIEW

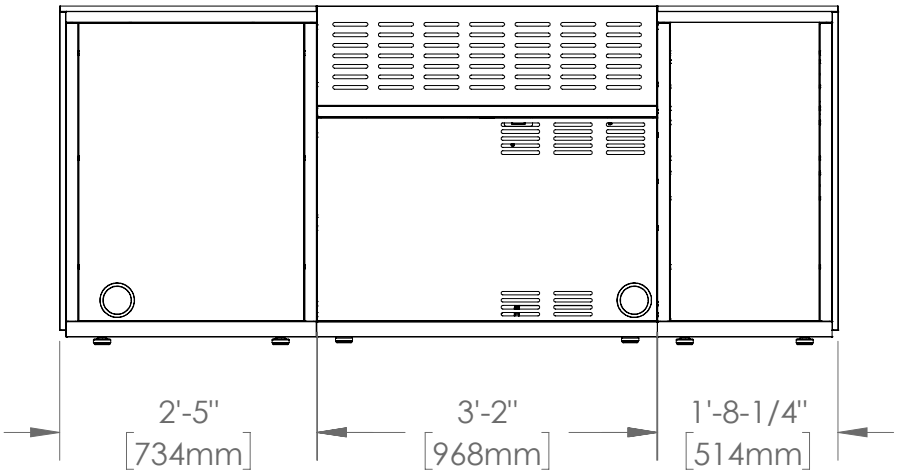


OWNER'S MANUAL - UTILITY LAYOUT

Imperial measurements rounded to the nearest 1/4".


TOP SIDE VIEW

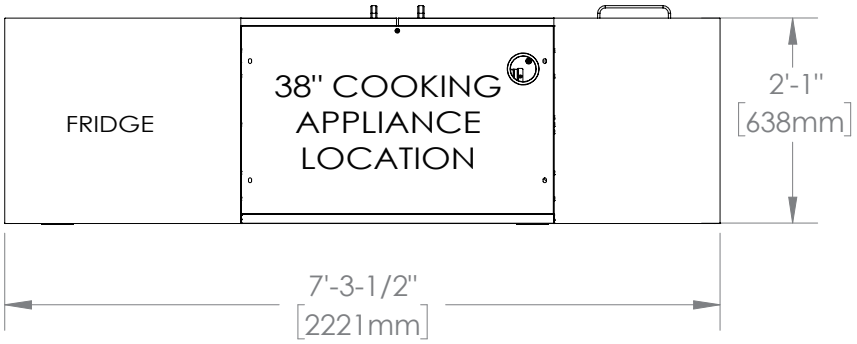

LEFT SIDE VIEW

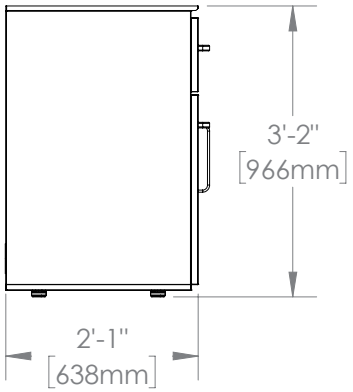


BACK SIDE VIEW

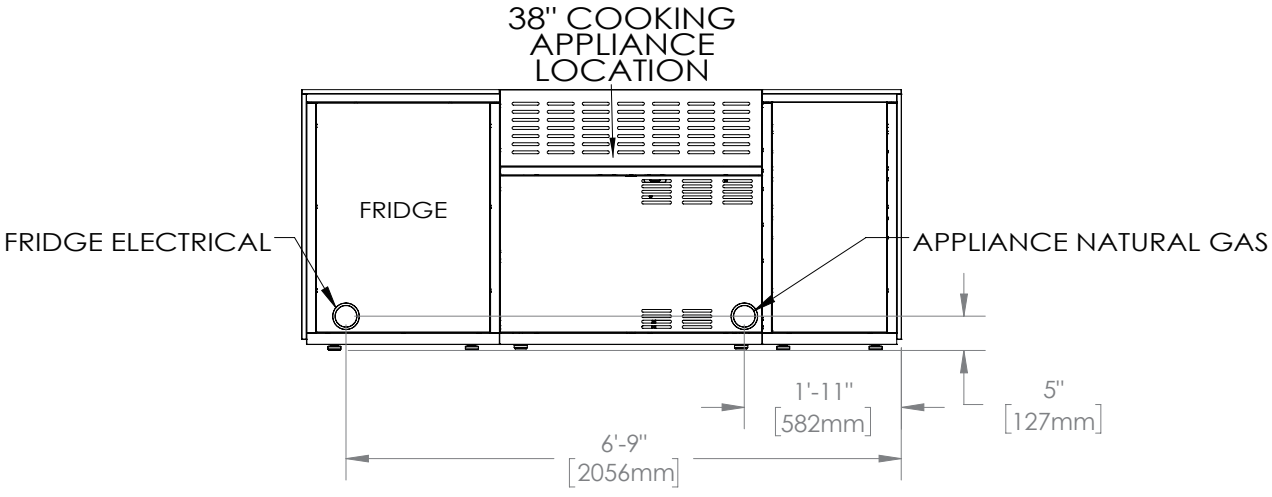


OWNER'S MANUAL - PARTS IDENTIFICATION


COMPONENTS (NOT TO SCALE)

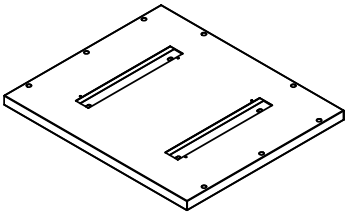


T1 TABLETOP PANEL ASSEMBLY-A4M06752
(x1) 1 1/4"x24 3/16"x28 1/8" (32x614x715)

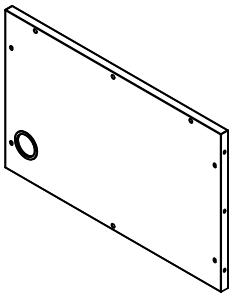


T2 TABLETOP PANEL ASSEMBLY-A4M07045
(x1) 1 1/4"x24 3/16"x38 1/4" (32x614x971)

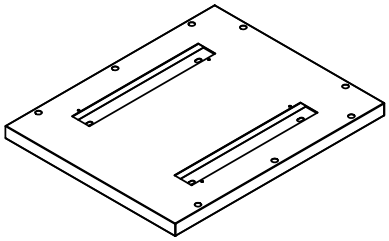


T3 TABLETOP PANEL ASSEMBLY-A4M06749
(x1) 1 1/4"x19 5/8"x24 3/16" (32x498x614)

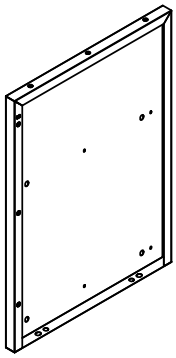


S2 SIDE PANEL ASSEMBLY-A4M06750
(x1) 1 3/8"x24 3/16"x33 9/16" (35x614x852)

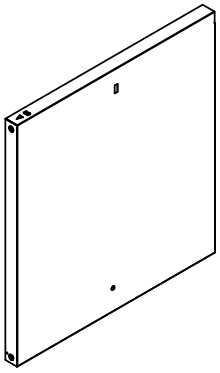


S3 SIDE PANEL ASSEMBLY-A4M06457
(x1) 1 3/8"x22 7/8"x24 1/8" (35x581x613)

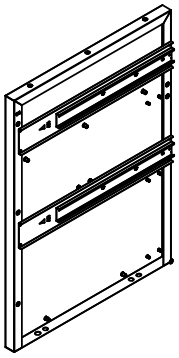

S4 SIDE PANEL ASSEMBLY-A4M06746
(x1) 1 3/8"x24 3/16"x33 9/16" (35x614x852)

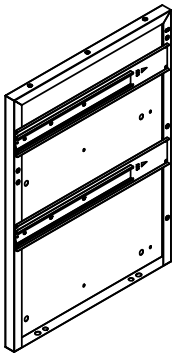


S5 SIDE PANEL ASSEMBLY-A4M06747
(x1) 1 3/8"x24 3/16"x33 9/16" (35x614x852)

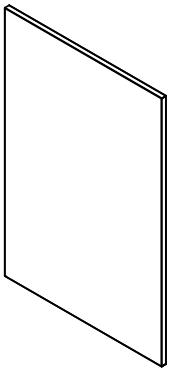


S13 SIDE TRIM PANEL ASSEMBLY-A4M07143
(x2) 11/16"x24 3/16"x35 13/16" (18x614x909)

OWNER'S MANUAL - PARTS IDENTIFICATION


COMPONENTS (NOT TO SCALE)

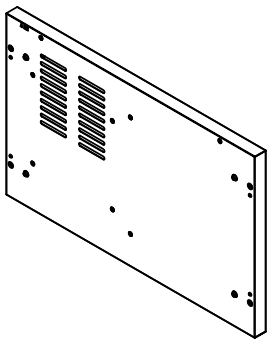


F2 FLOOR PANEL ASSEMBLY-A4M07046
(x1) 2 5/8"x24 3/16"x38 1/4" (66x614x972)

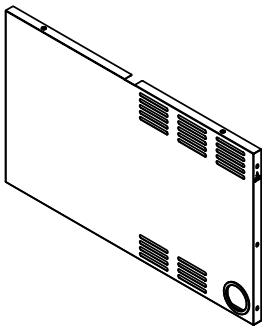


G10 CABINET BACK PANEL ASSEMBLY-A4M03055
(x1) 1 3/16"x22 7/8"x38 3/16" (30x581x970)

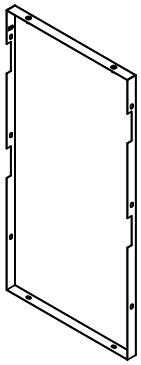


G2 BACK PANEL ASSEMBLY-A4M06748
(x1) 1 3/16"x16 3/4"x33 9/16" (30x426x853)

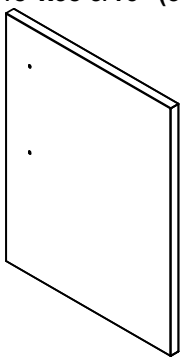


D4 RIGHT DOOR ASSEMBLY-A4M07147
(x1) 15/16"x19"x24 13/16" (24x483x630)

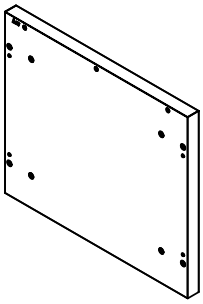


F7 FLOOR PANEL ASSEMBLY-A4M06455
(x1) 2 5/8"x24 3/16"x28 1/8" (66x614x715)

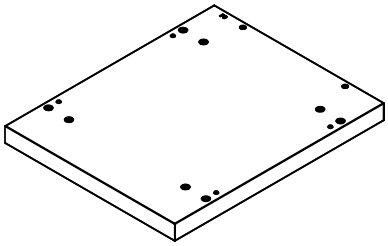

F3 FLOOR PANEL ASSEMBLY-A4M06744
(x1) 1 3/4"x19 5/8"x24 3/16" (44x614x498)

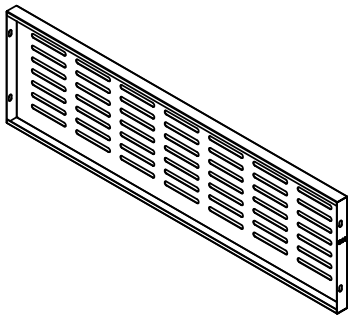


G11 VENTILATION PANEL-A4M03056
(x1) 1 3/16"x11 3/16"x38 3/16" (30x284x970)

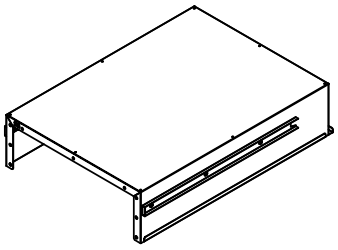


D5 DRAWER BODY ASSEMBLY-A4M06434
(x1) 5 1/8"x16 3/16"x21 3/4" (130x410.7x552)

OWNER'S MANUAL - PARTS IDENTIFICATION


COMPONENTS (NOT TO SCALE)

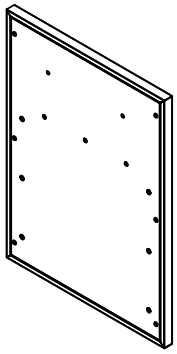


D2 TRASH CAN PANEL ASSEMBLY-A4M07145
(x1) 15/16"x18 1/4"x24 13/16" (24x463x630)

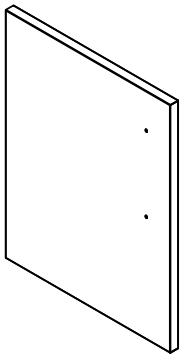


D3 LEFT DOOR ASSEMBLY-A4M07146
(x1) 15/16"x19"x24 13/16" (24x483x630)

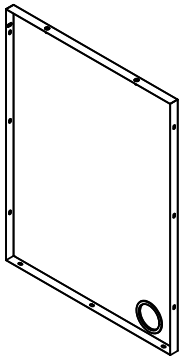


G5 BACK PANEL ASSEMBLY-A4M06751
(x1) 1 3/16"x25 5/16"x33 1/2" (30x643x851)

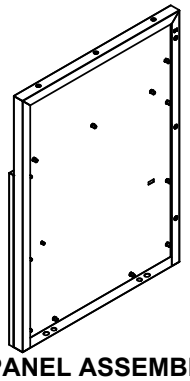


S1 SIDE PANEL ASSEMBLY-A4M06743
(x1) 1 3/8"x24 3/16"x33 9/16" (35x614x852)

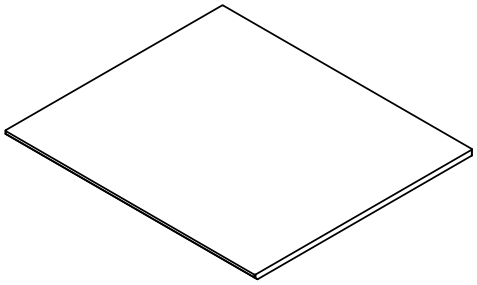


M1 COUNTERTOP-A4M07142
(x1) 1 5/16"x25 1/8"x28 7/8" (33x733x638)

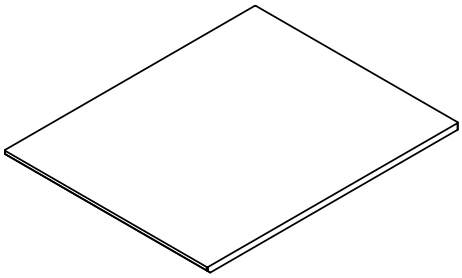

M2 COUNTERTOP-A4M07141
(x1) 1 5/16"x20 5/16"x25 1/8" (33x516x638)

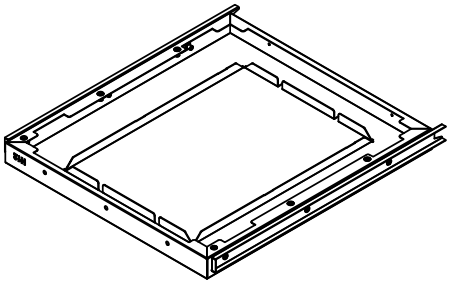


H12 TRASH CAN BRACKET ASSEMBLY-A4M06454
(x1) 1 3/8"x16 1/4"x18 1/16" (35x412.1x458)

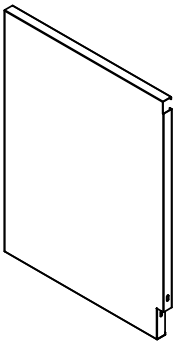


L2 SHELF-A4M07615
(x1) 1"x18 3/8"x24 1/8" (25x467x613)

OWNER'S MANUAL - PARTS IDENTIFICATION


COMPONENTS (NOT TO SCALE)

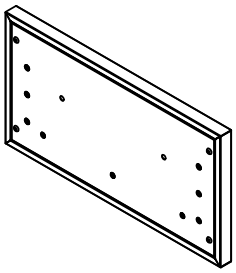


D1 DRAWER PANEL ASSEMBLY-A4M07144
(x1) 15/16"x9 5/8"x18 1/4" (24x245x463)

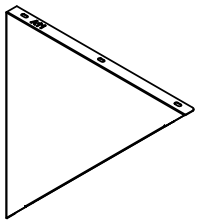


A11 TRIANGLE PANEL-A4M03086
(x2) 13/16"x13 3/4"x13 3/4" (20x350x350)

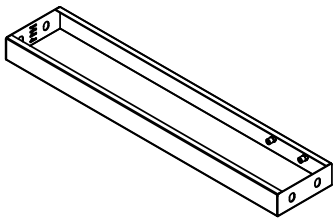


H11 BEAM ASSEMBLY-A4M06199
(x1) 1 3/16"x3 3/8"x16 3/4" (30x85x426)

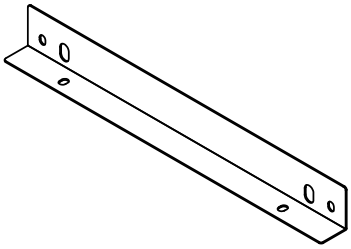


A6 ANGLED BRACKET-A4M03053
(x2) 1 3/8"x1 15/16"x17 1/8" (35x50x435)

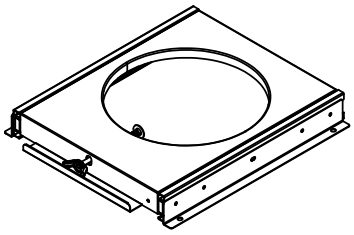


A13 GAS TANK HOLDER ASSEMBLY-A4M03047
(x1) 1 15/16"x12 7/8"x14 3/4" (49x327x374)

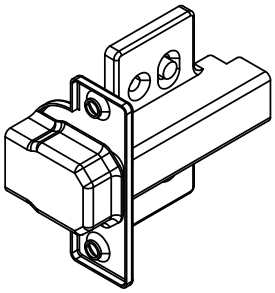


3025 FULL OVERLAY HINGE-A4M03025
(x4)

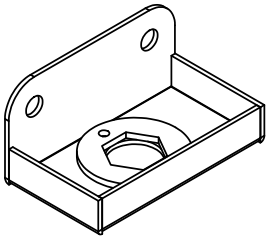


A9 HOSE BRACKET ASSEMBLY-A4M03060
(x1) 1 1/4"x1 7/16"x2 9/16" (31.5x36.5x65)

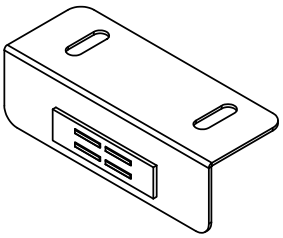


A2 MAGNET BRACKET-A4M03026
(x2) 1"x1 1/4"x3 1/8" (25x31x80)

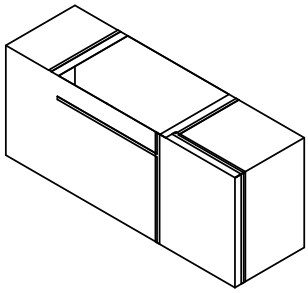


COVER A6P01850 (x1)

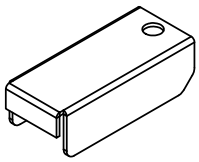

A5 SHELF BRACKET-A4M03141
(x2) 5/8"x7/8"x2 1/16" (16x22x53)

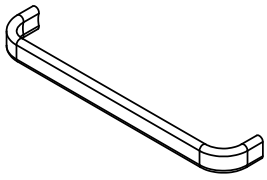


H18 ALUMINUM HANDLE-A4M06591
(x4) 3/4"x1 1/2"x8 7/8" (19x38.5x226)

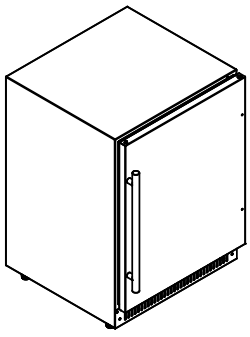


FRIDGE 9240162 (x1)

OWNER'S MANUAL - PARTS IDENTIFICATION


HARDWARE COMPONENTS

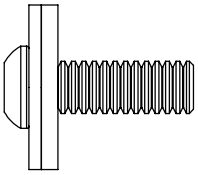


H101202 | TORX PAN HEAD
(x59) | 1/4-20x3/4 ASSY




H101185 | PHILLIPS FLAT HEAD
(x24) | 8-32x.5

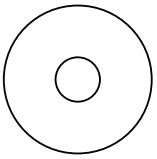


H101053 | STEEL WASHER
(x8) | 6x20




H101103 | TORX SOCKET SCREW
(x20) | 1/4-20




H101292 | TORX PAN HEAD
(x12) | 1/4-20x13/32"

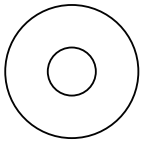


H101054 | SEALANT WASHER
(x8) | 6.5x18




H101307 | SHOULDER BOLT
(x8) | 8-32x30mm SS



H101289 | PAN HEAD SCREW
(x49) | 8-32x1/2" SS




H100147 | TORX BIT
(x1) | T-30




H101100 | MAGNETIC DRIVER
(x1) |

H100114 | TORX WRENCH
(x1) | T-30



H101294 | HEX DRIVER
(x1) |

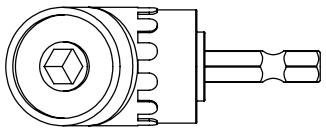

H101114 | RIGHT ANGLE
(x1) | **DRILL ADAPTER**


PRE-ASSEMBLY STEP 1 - SORTING PARTS

It is critical for ease of assembly that you take the time to sort and organize the parts and hardware.

METAL PARTS:

- **Organize metal parts by the three-digit, alpha-numeric number stamped on each part (ex. P01).**
- **If there are multiple parts with the same stamped number, stack those pieces together.**
- **Stamps can be found on the flat surface of the parts or on the end of the parts.**
- **Allow yourself plenty of room - the parts can take up a significant amount of space.**

NOTE: CARTONS ARE NOT ORGANIZED BY PART OR STEP NUMBER.

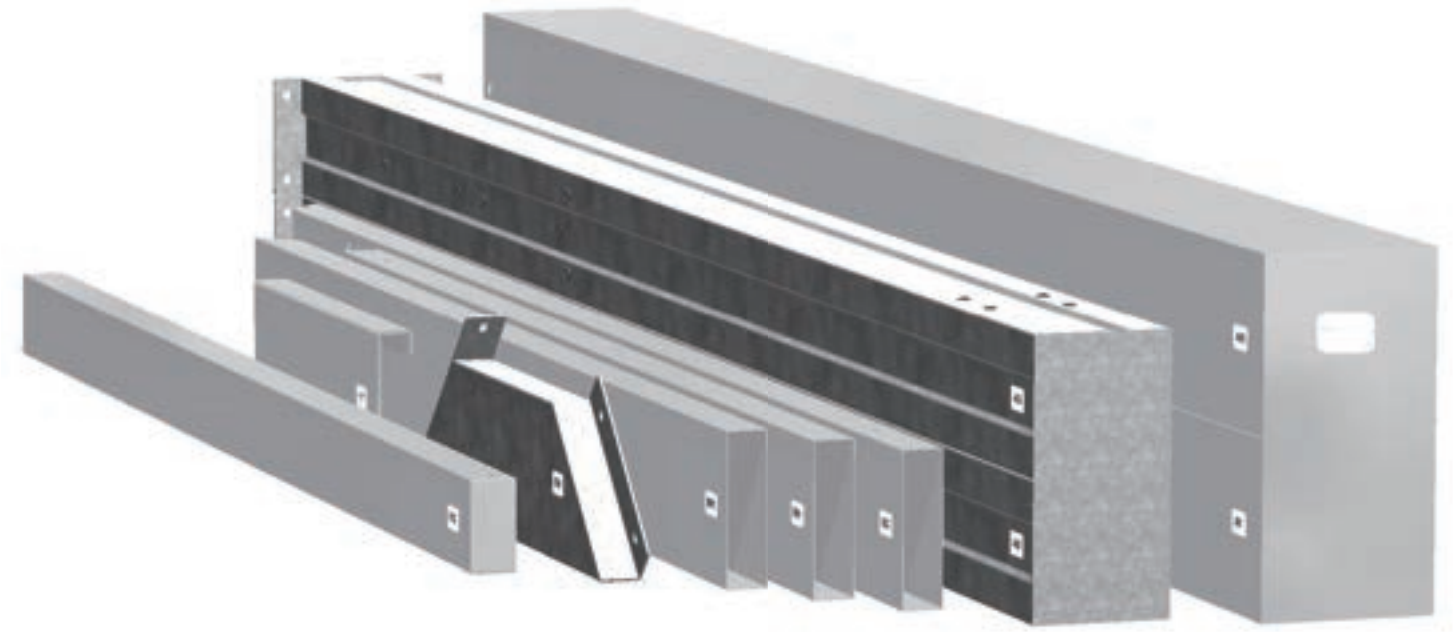

HARDWARE PARTS:

- **We recommend that you have a separate table to organize the hardware.**
- **Hardware bags are printed with a seven-digit, alpha-numeric part number.**
- **You can organize your hardware by part number or group by hardware type (e.g. bolts, nuts, etc.).**
- **During assembly you only need to reference the last four digits of the number.**



PRE-ASSEMBLY STEP 2 - TOOLS REQUIRED



Cordless Drill or
Electric Drill




Drill Attachments:
Phillips Head



1/8", 3/16", 3/8" &
7/16" Drill Bits



Phillips Screw Driver



Open End Wrench
7/16"



3/8" Drive Ratchet, 1/2" &
7/16" STD Sockets 1/2" & 7/16"
Deep Sockets




Claw Hammer



Rubber Mallet -
Optional



Tape Measure

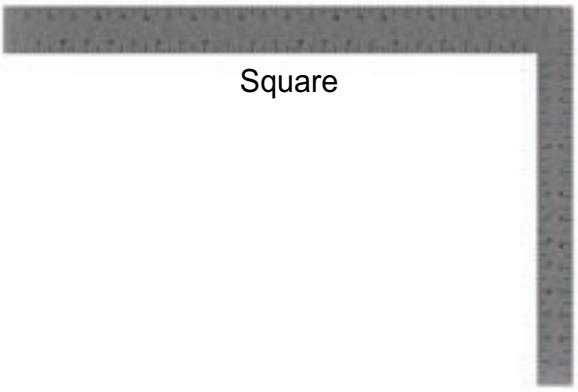

Square




Level 24"


PRE-ASSEMBLY STEP 3 - CHOOSE YOUR ASSEMBLY METHOD

<u>There are several types of assembly instructions available to you.</u>


1. **Printed Assembly Manual included with your set**
2. **BILT APP - 3D interactive instructions**
3. **Combination of the Printed Manual and BILT APP (Note: Step numbers can differ between the two methods)**

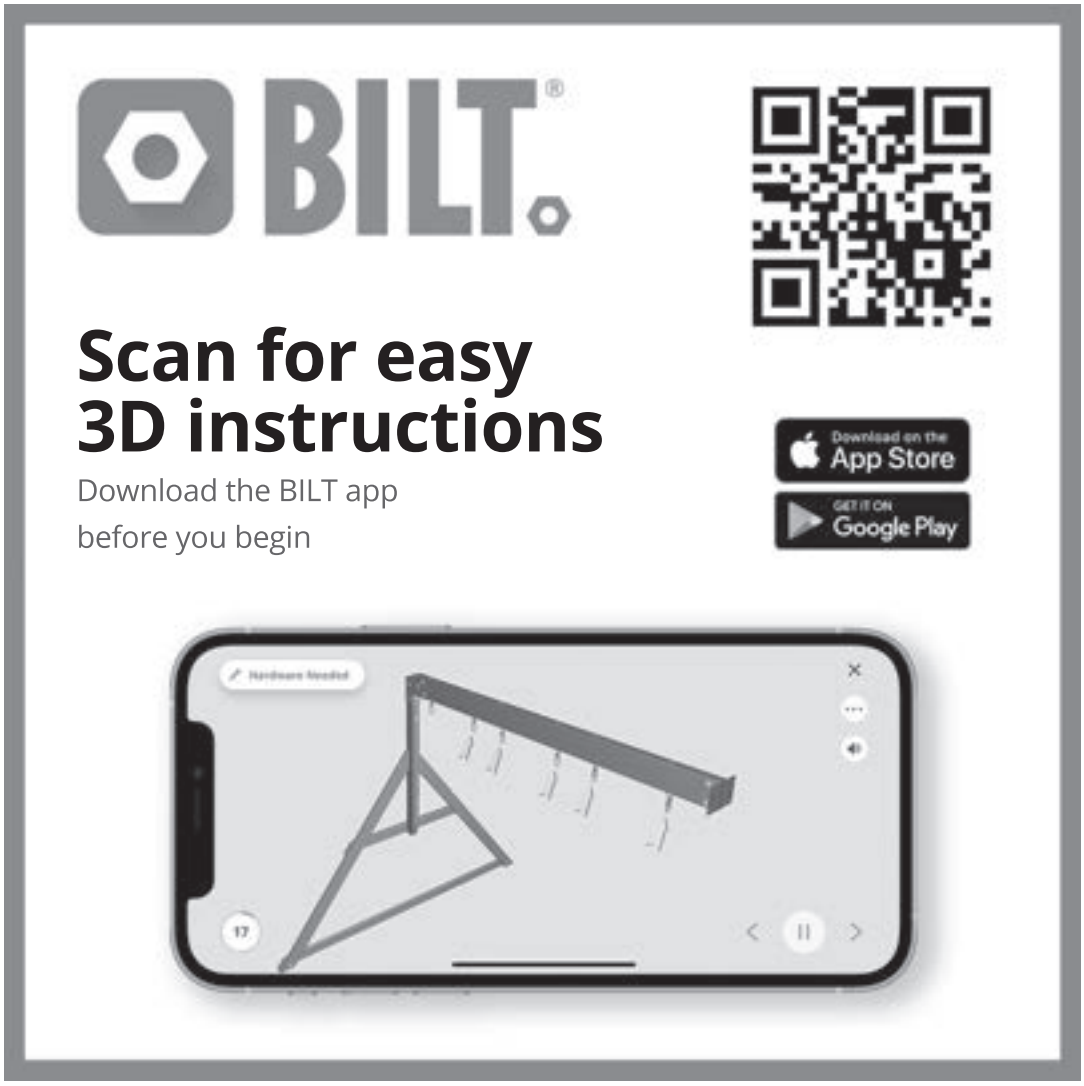

STEP 1 - FLOOR PANEL ASSEMBLY

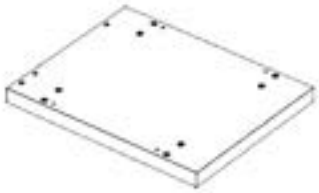

F3 FLOOR PANEL ASSEMBLY - A4M06744
(x1) 1 3/4"x19 5/8"x24 3/16" (44x614x498)

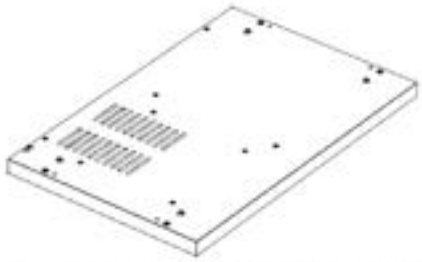


F2 FLOOR PANEL ASSEMBLY - A4M07046
(x1) 2 5/8"x24 3/16"x38 1/4" (66x614x972)



F7 FLOOR PANEL ASSEMBLY - A4M06455
(x1) 2 5/8"x24 3/16"x28 1/8" (66x614x715)

- POSITION FLOOR PANEL IN THE PROXIMITY OF WHERE YOUR KITCHEN WILL BE.
- EACH FLOOR PANEL HAS FACTORY INSTALLED ADJUSTABLE FEET. USE PROVIDED HEX DRIVER TO ADJUST EACH FOOT UNTIL PANEL IS LEVEL.
- FLUSH ALL SIDES OF FLOOR PANELS.

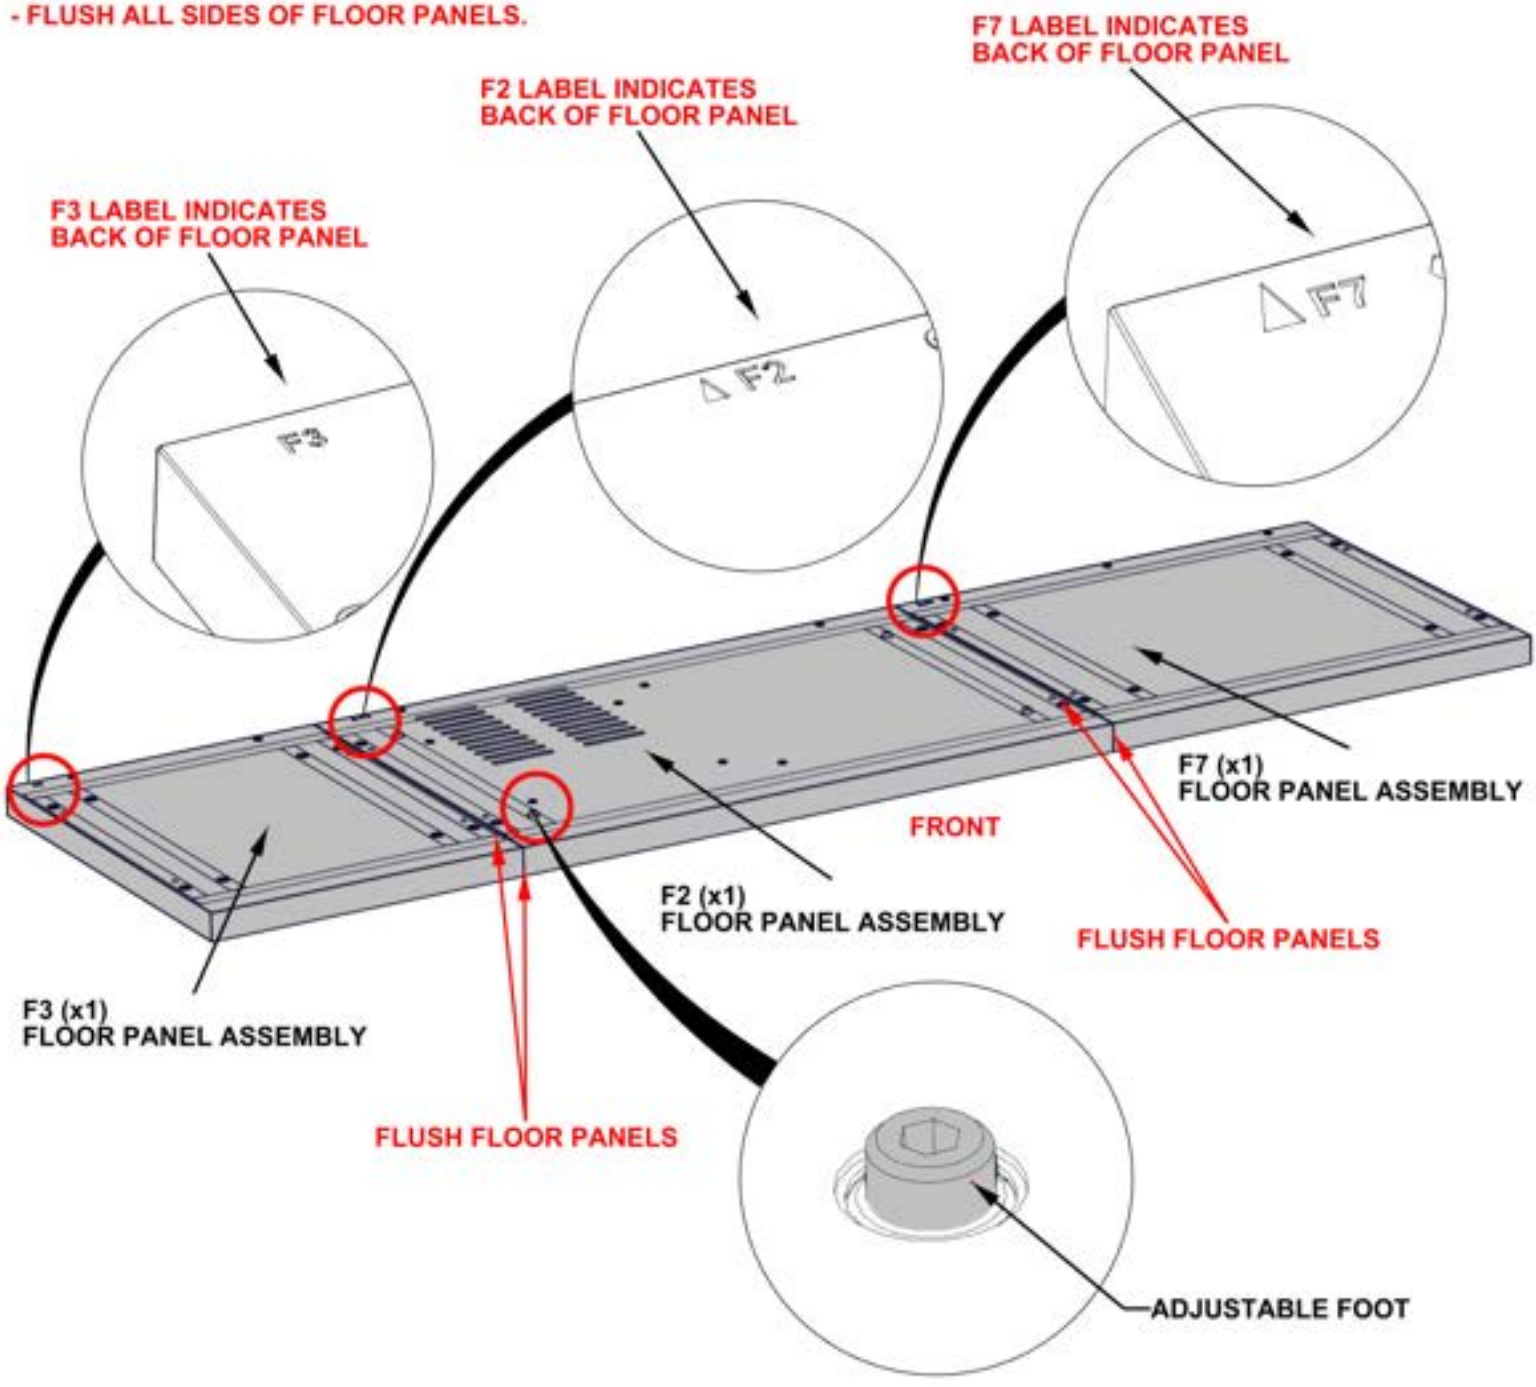


STEP 2 - CABINET INSTALLATION



S2 (x1) SIDE PANEL ASSEMBLY - A4M06750
1 3/8"x24 3/16"x33 9/16" (35x614x852)

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

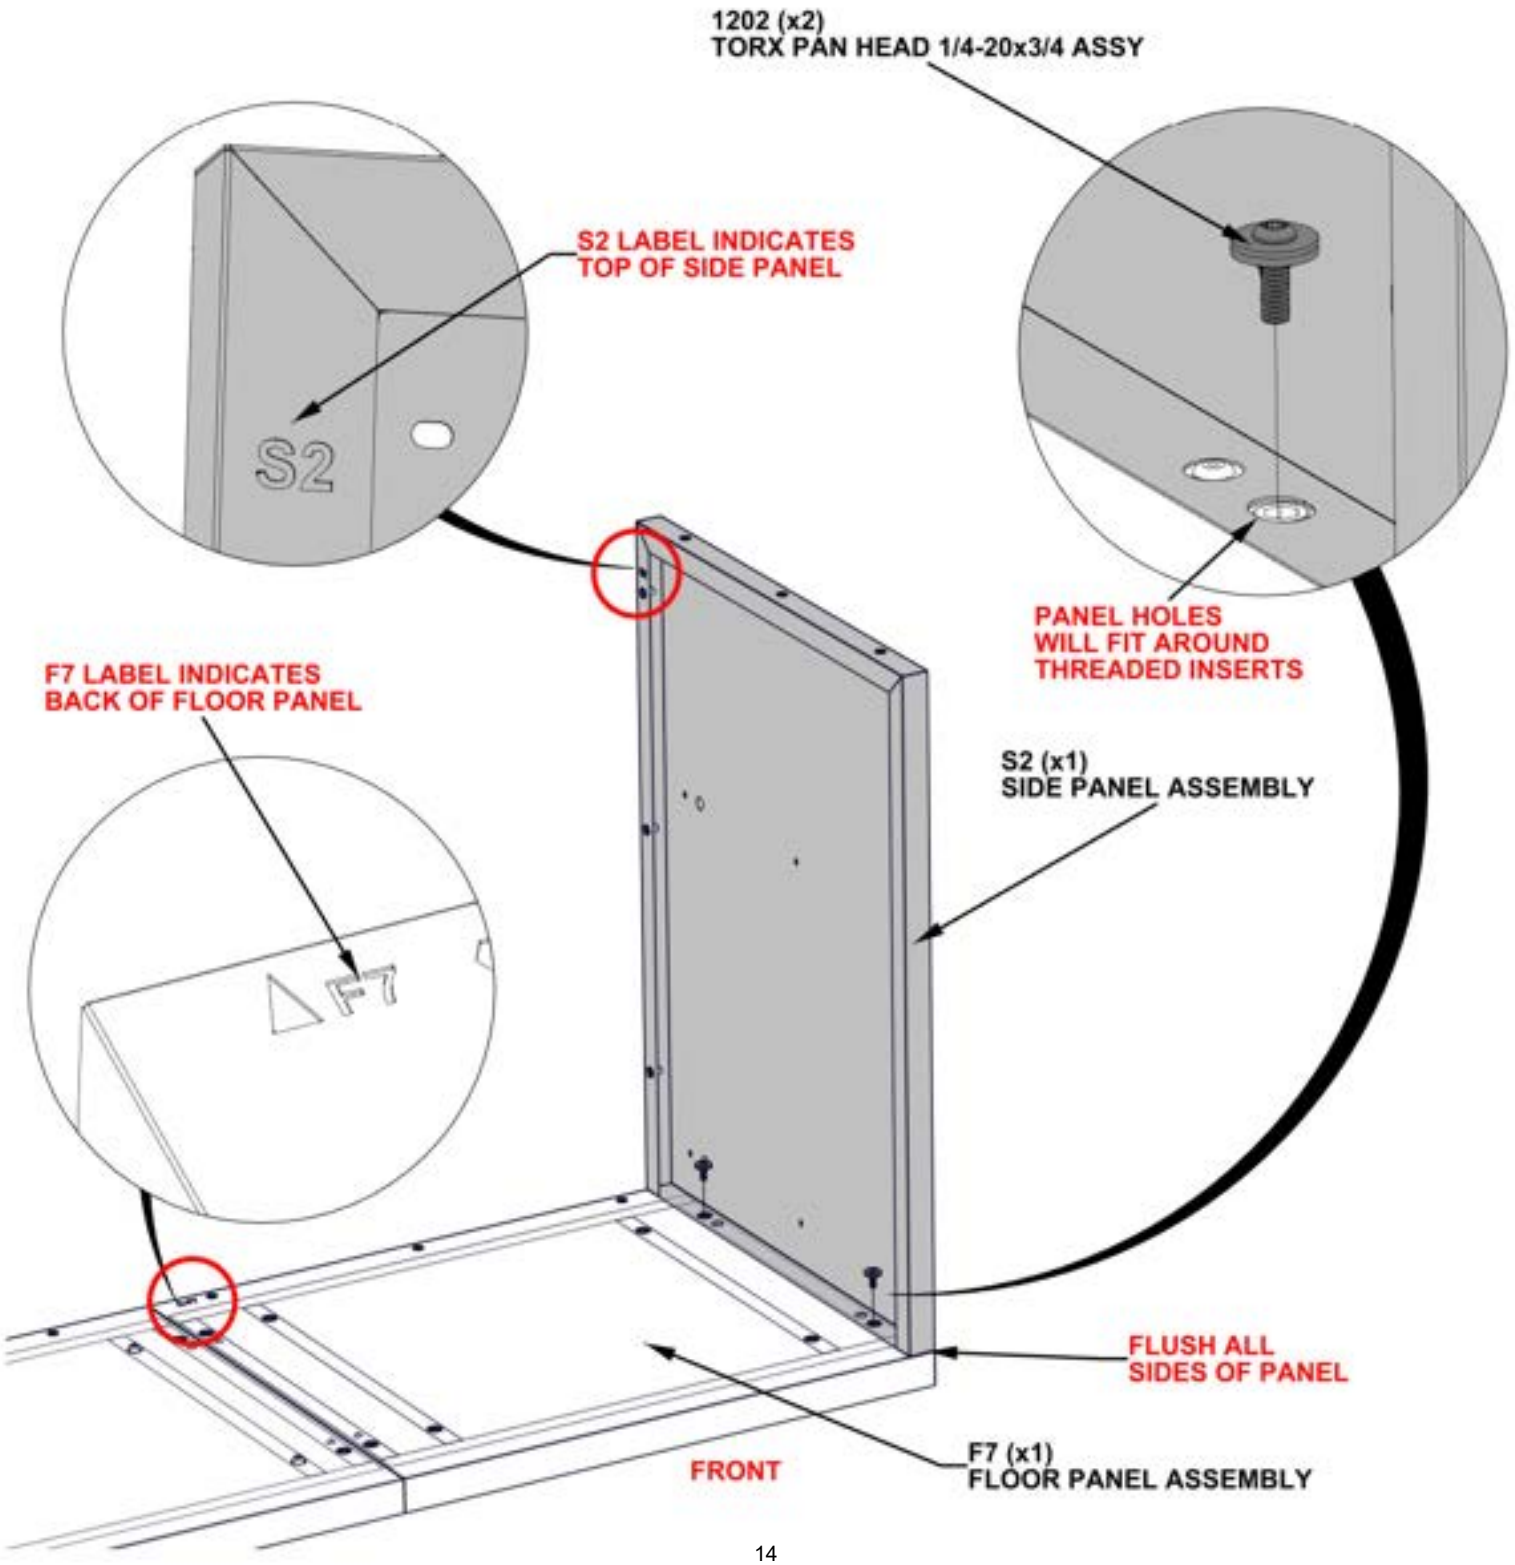


STEP 3 - CABINET INSTALLATION



S1 SIDE PANEL ASSEMBLY - A4M06743
(x1) 1 3/8"x24 3/16"x33 9/16" (35x614x852)

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

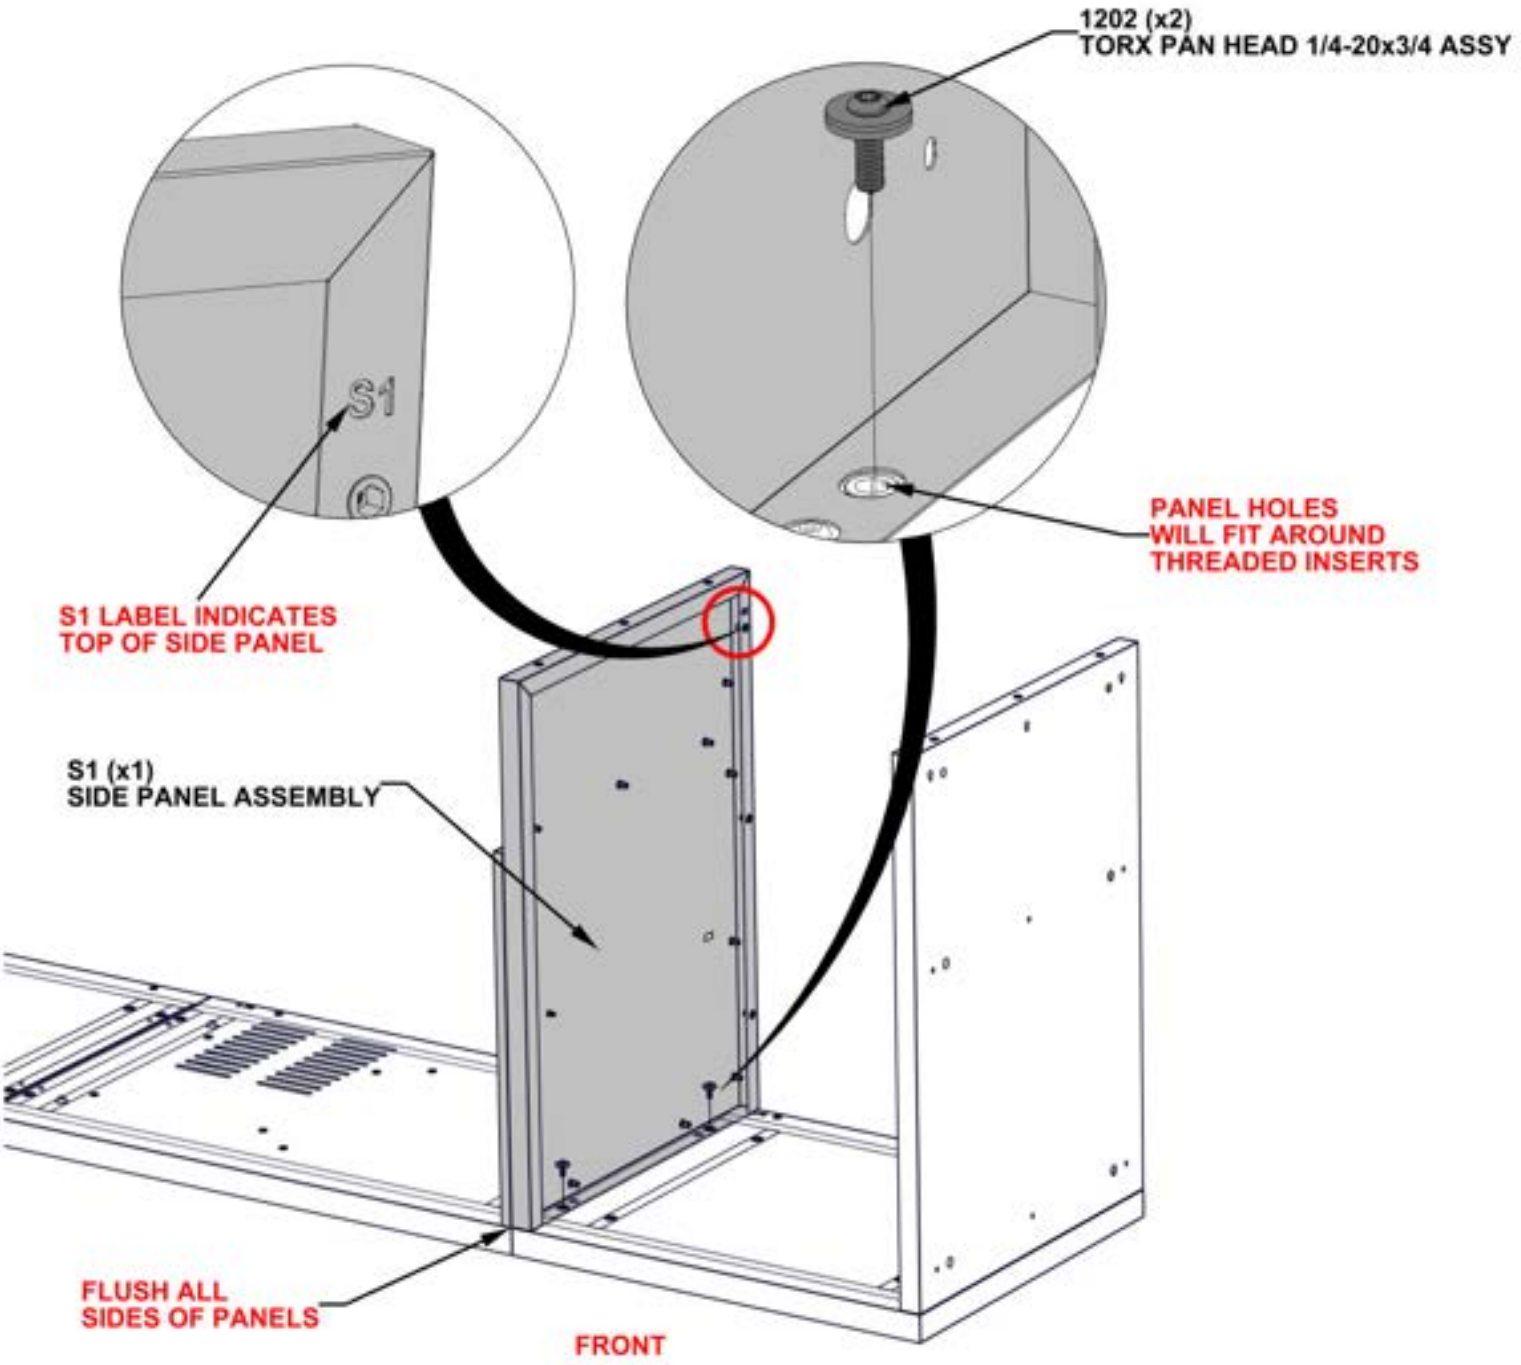


STEP 4 - CABINET INSTALLATION



G5 BACK PANEL ASSEMBLY - A4M06751
(x1) 1 3/16"x25 5/16"x33 1/2" (30x643x851)

Qty	PartNo	Description
9	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- FLUSH ALL SIDES OF BACK PANELS.

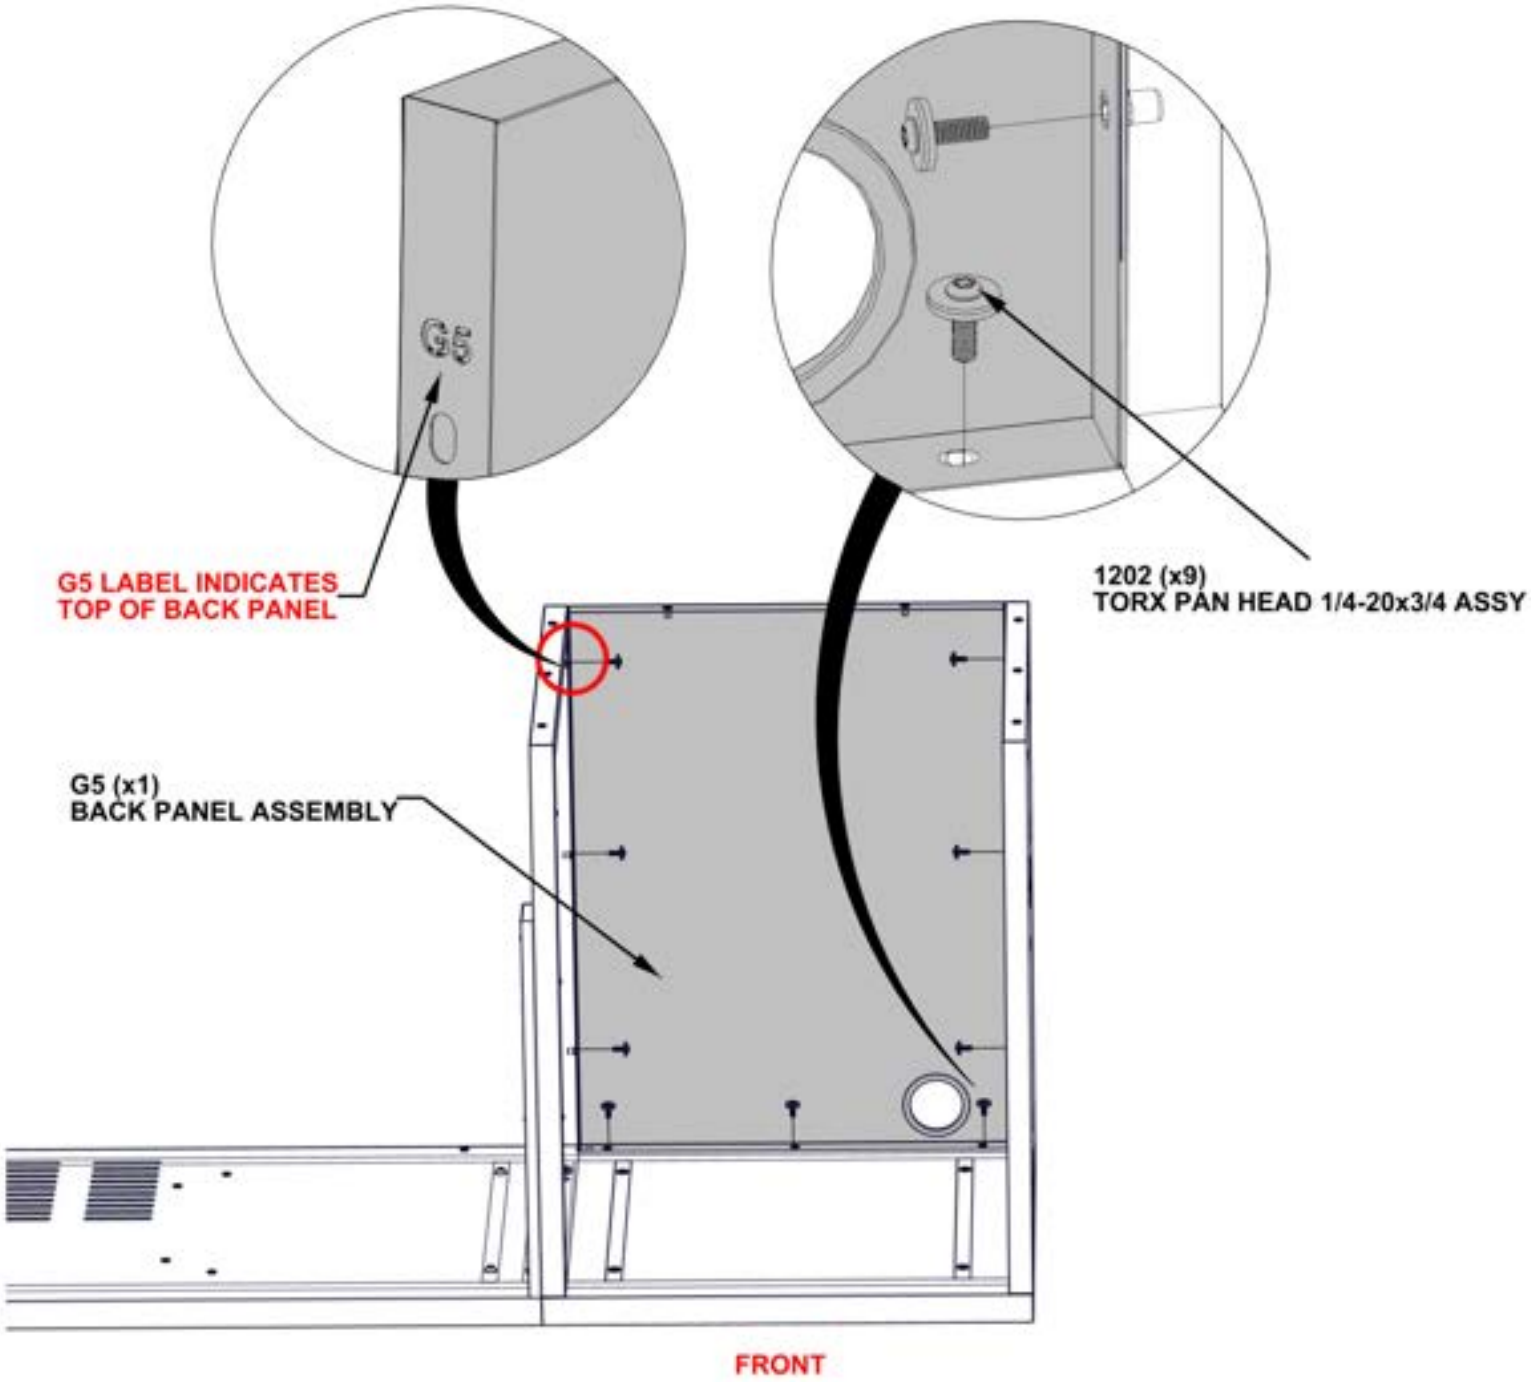

STEP 5 - CABINET INSTALLATION




Qty	PartNo	Description
8	H101103	TORX SOCKET SCREW 1/4-20

T1 TABLETOP PANEL ASSEMBLY - A4M06752
(x1) 1 1/4"x24 3/16"x28 1/8" (32x614x715)

- FLUSH BACK AND SIDES OF PANEL ASSEMBLY.

- SQUARE ALL SIDES OF CABINET BEFORE TIGHTENING HARDWARE.

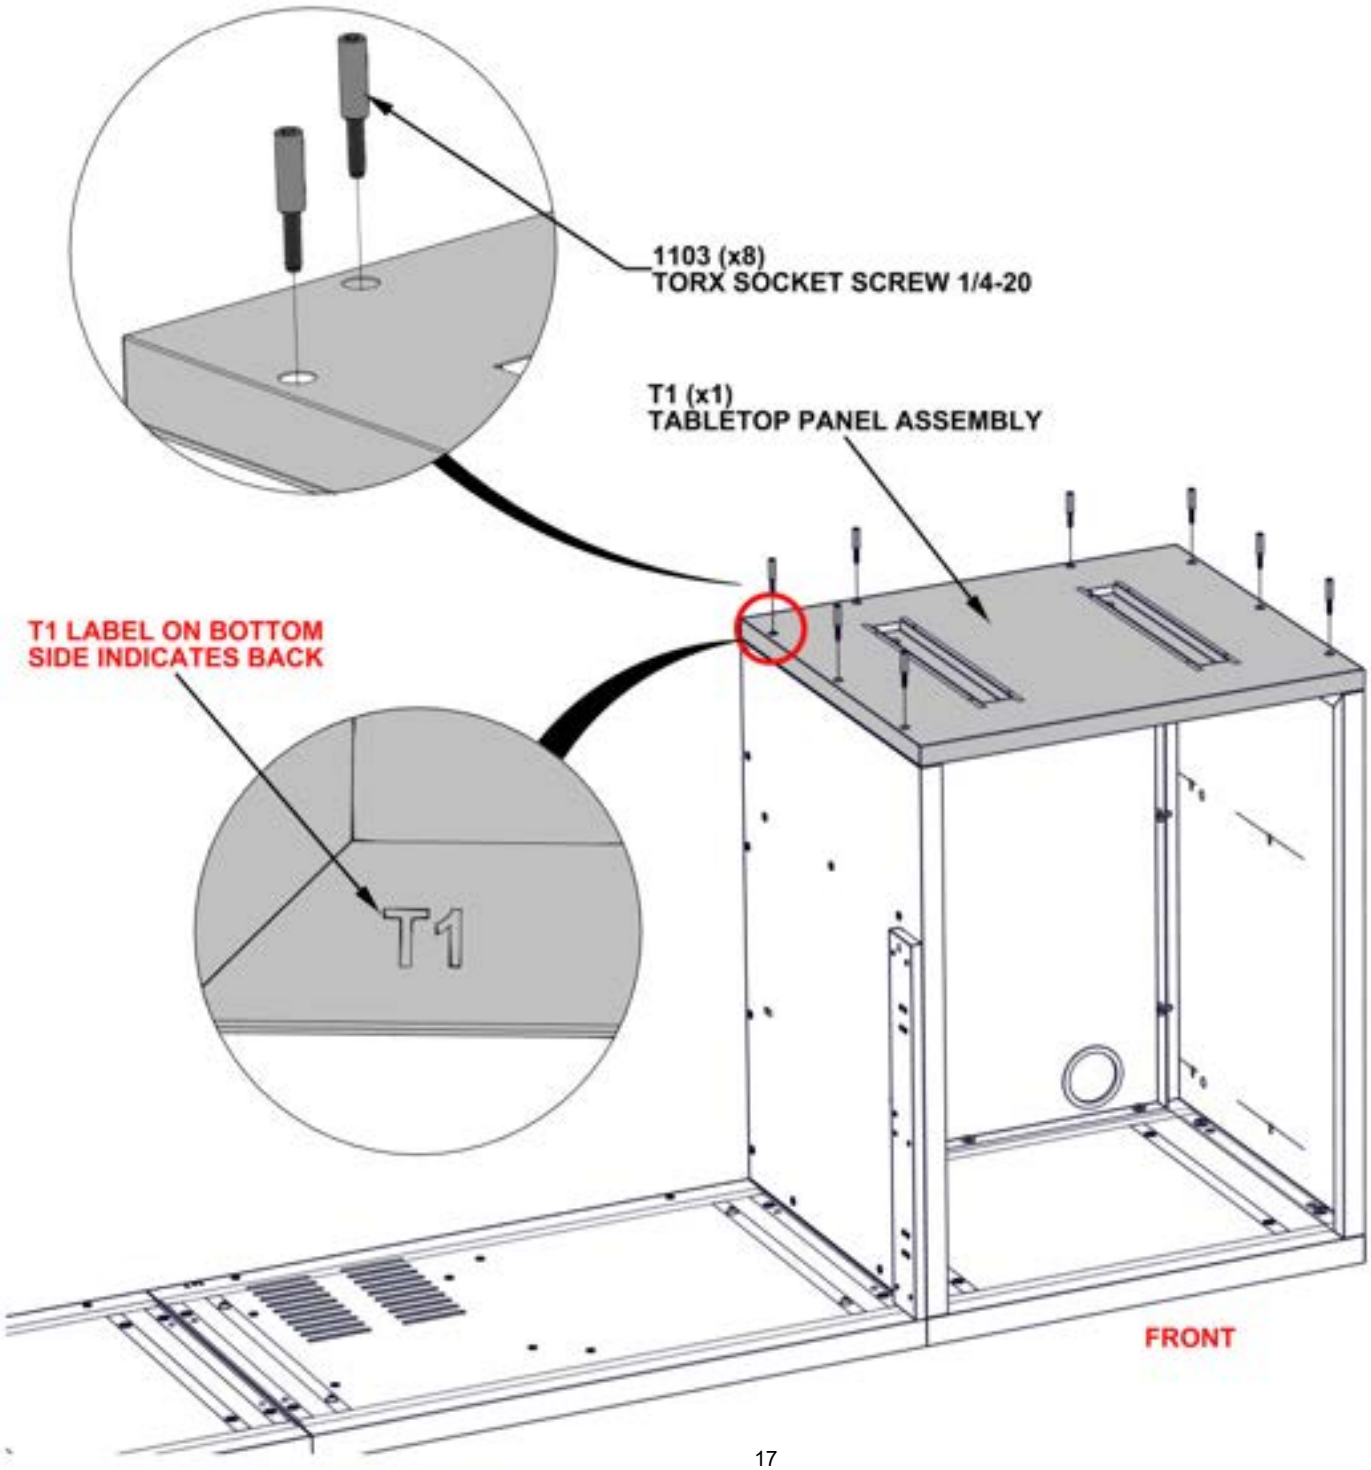


STEP 6 - TRASH CAN CABINET ASSEMBLY



A6 ANGLED BRACKET - A4M03053
(x1) 1 3/8"x1 15/16"x17 1/8" (35x50x435)

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

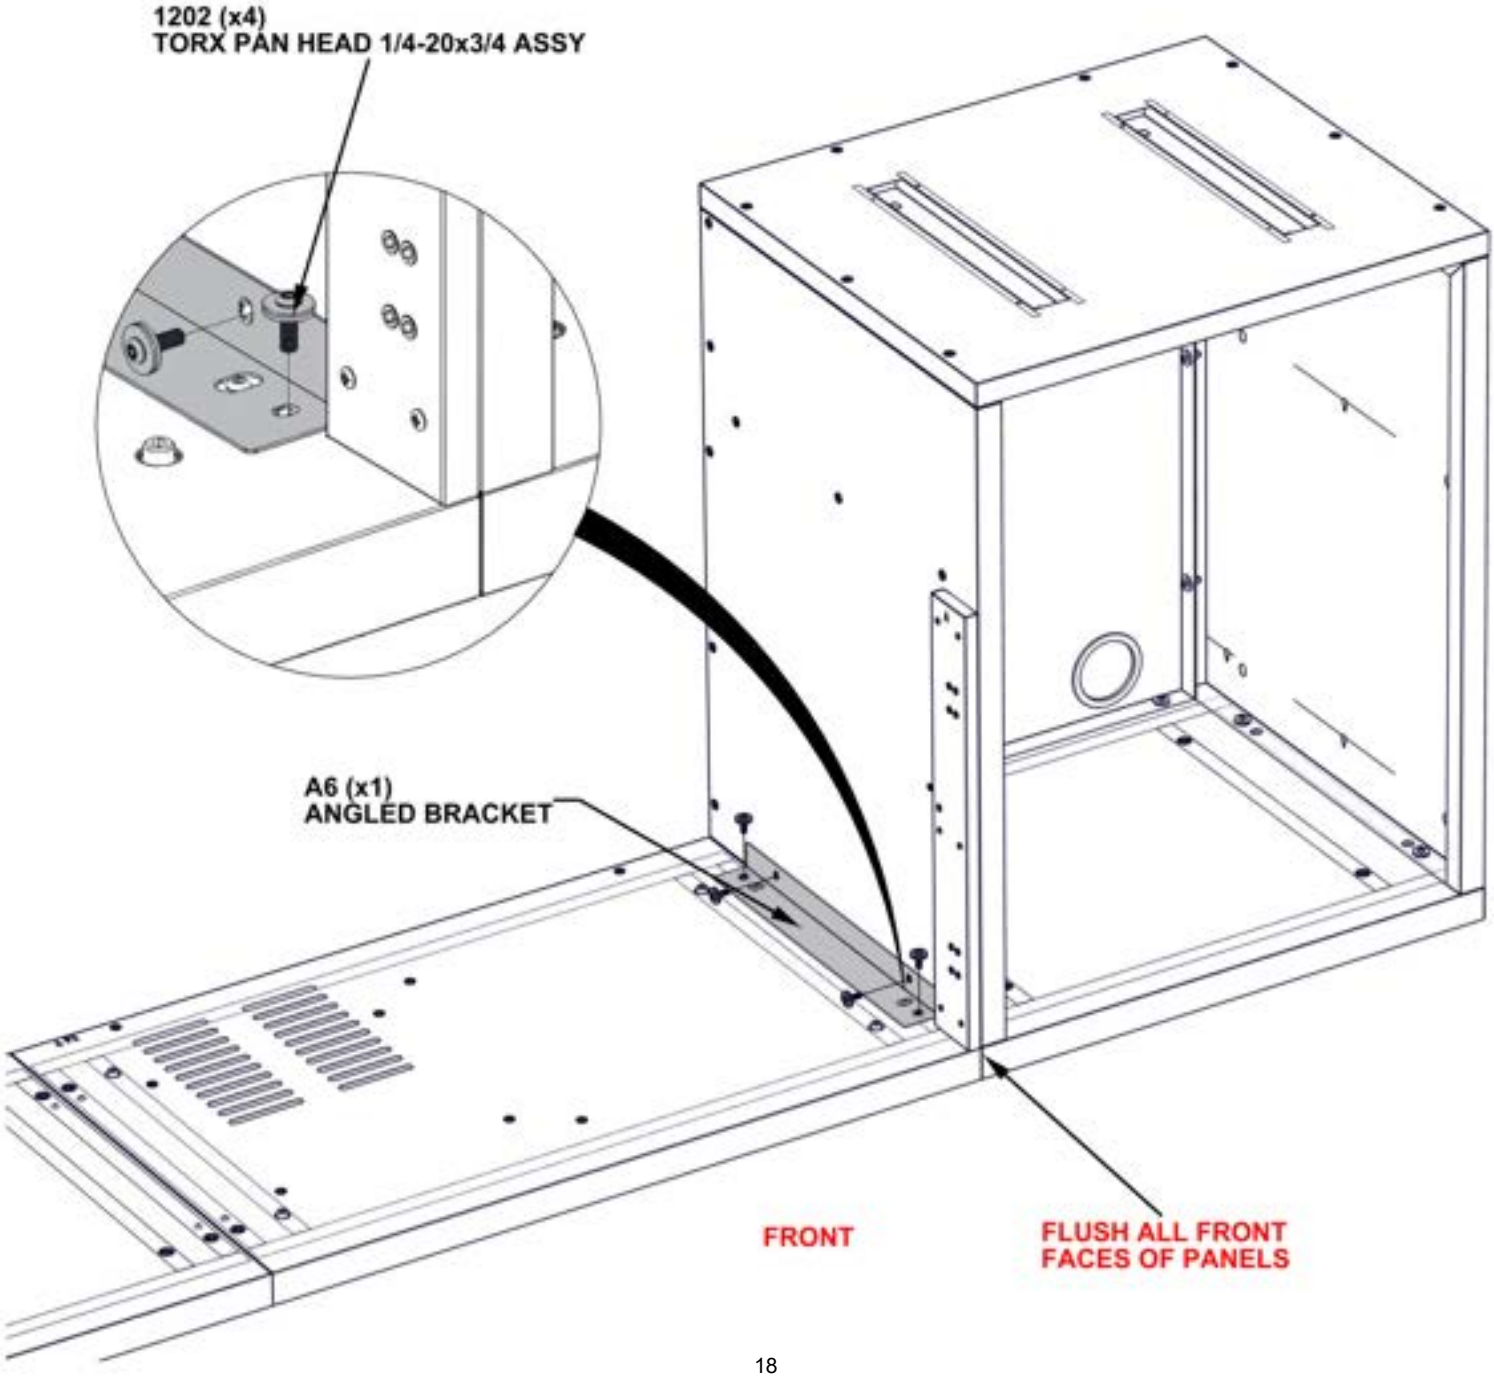


STEP 7 - TRASH CAN CABINET ASSEMBLY



S5 SIDE PANEL ASSEMBLY - A4M06747
(x1) 1 3/8"x24 3/16"x33 9/16" (35x614x852)

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

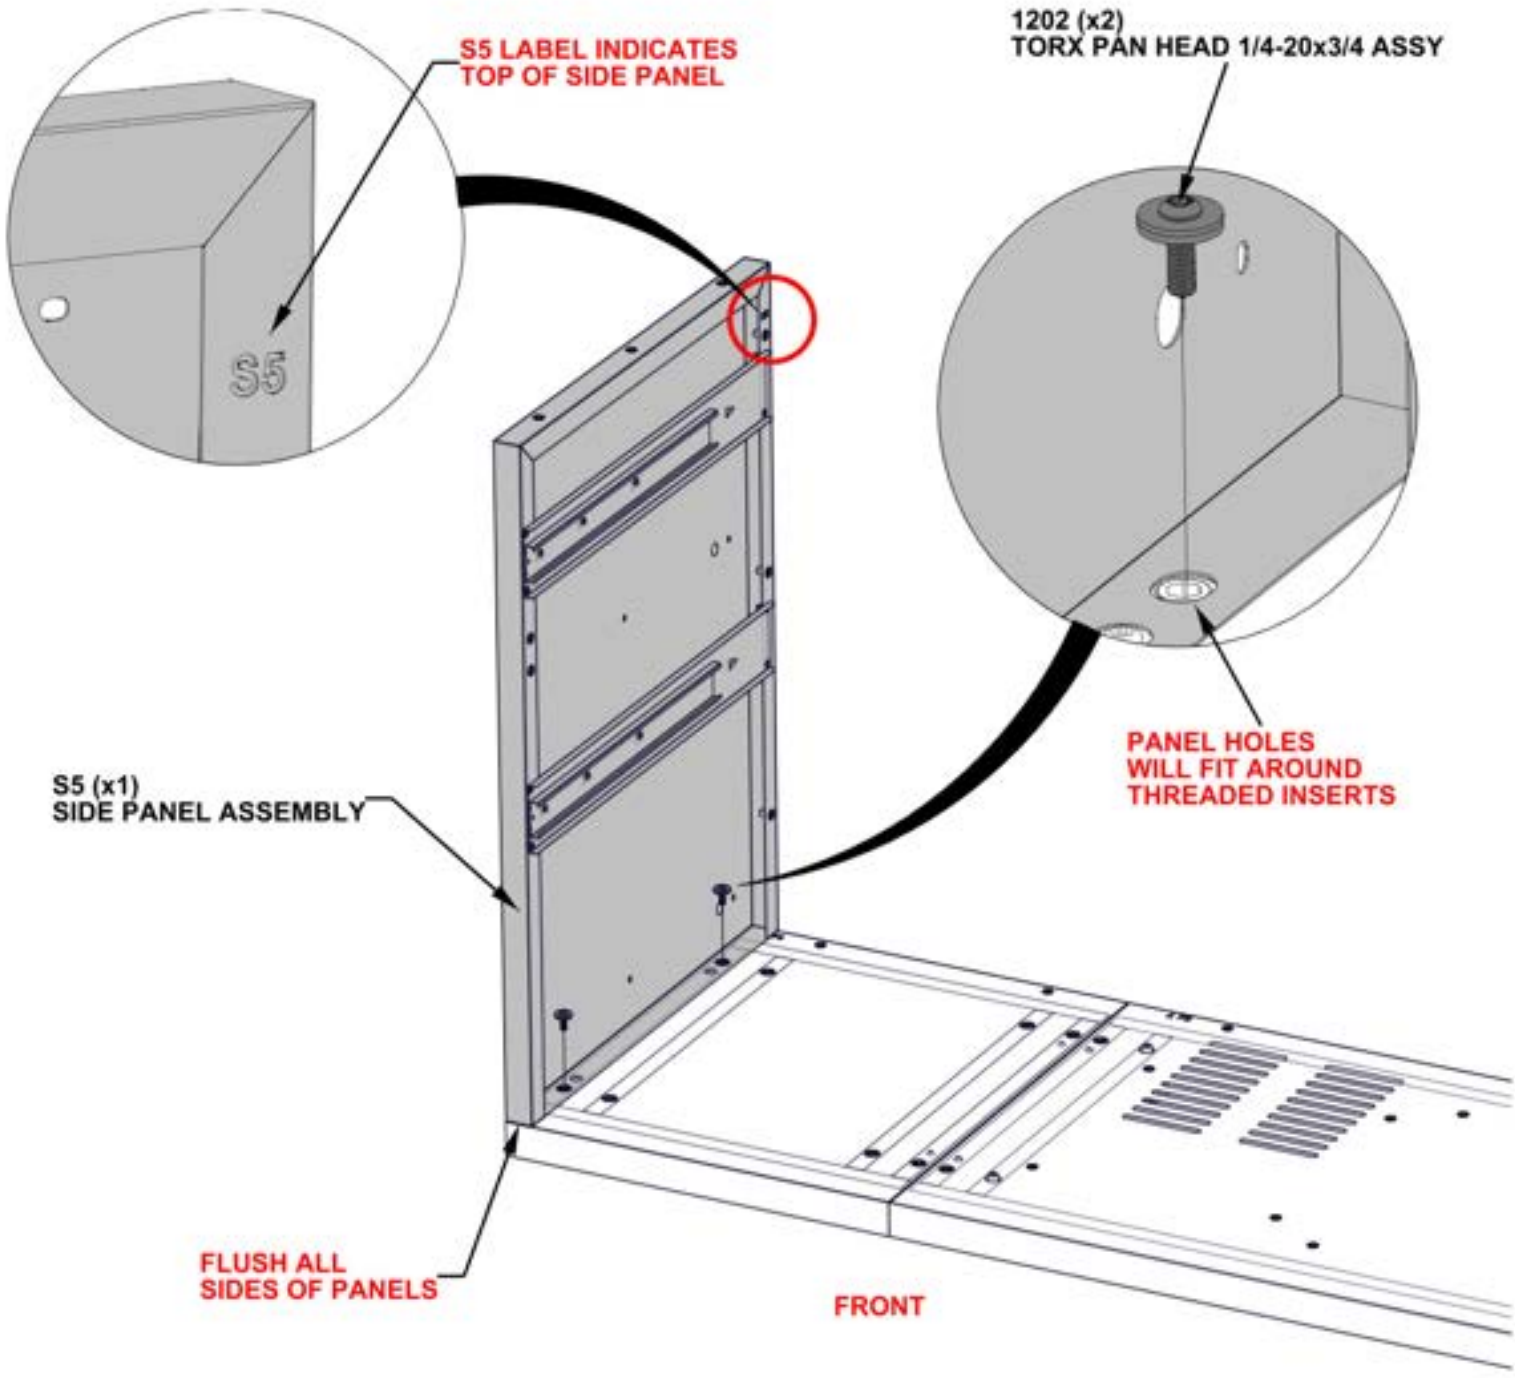


STEP 8 - TRASH CAN CABINET ASSEMBLY



Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

S4 SIDE PANEL ASSEMBLY - A4M06746
(x1) 1 3/8"x24 3/16"x33 9/16" (35x614x852)

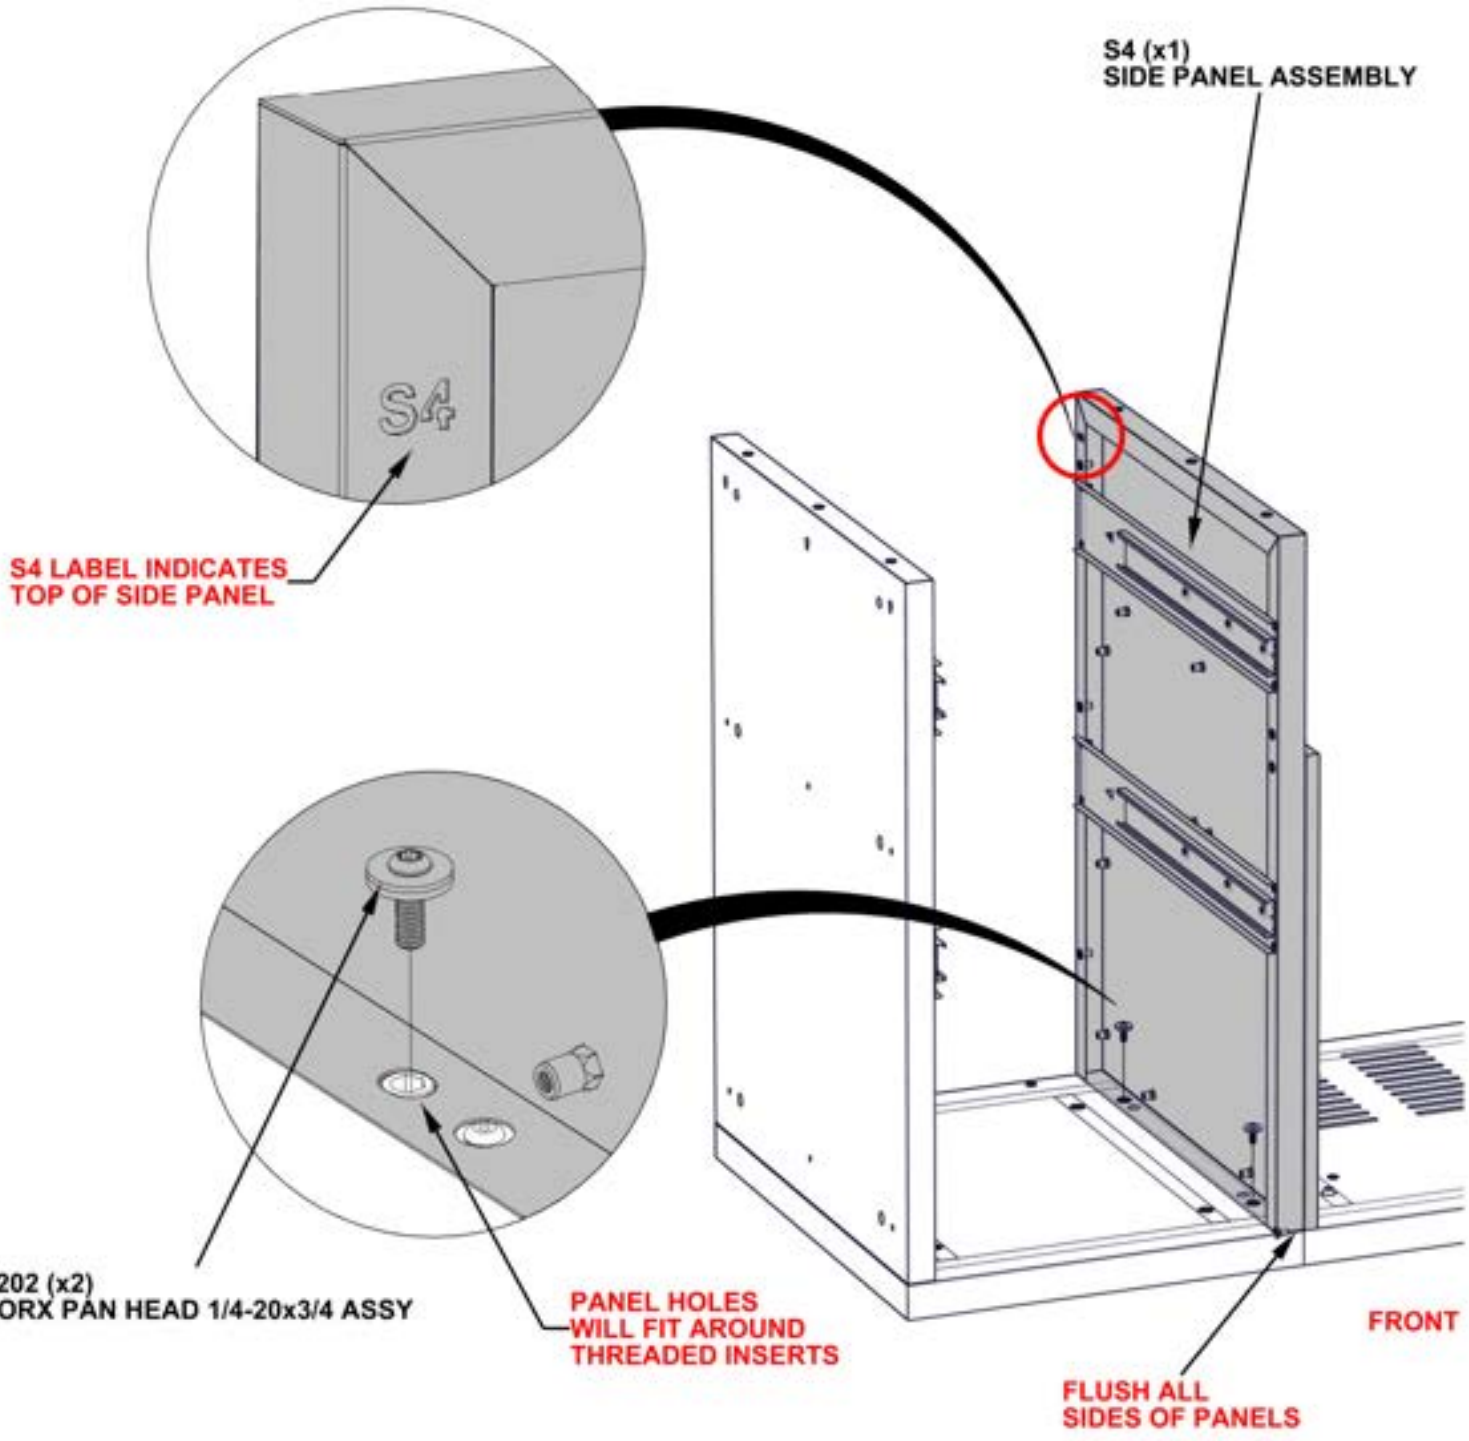


STEP 9 - TRASH CAN CABINET ASSEMBLY



Qty	PartNo	Description
8	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

G2 (x1) BACK PANEL ASSEMBLY - A4M06748
1 3/16"x16 3/4"x33 9/16" (30x426x853)

- FLUSH ALL SIDES OF BACK PANELS.

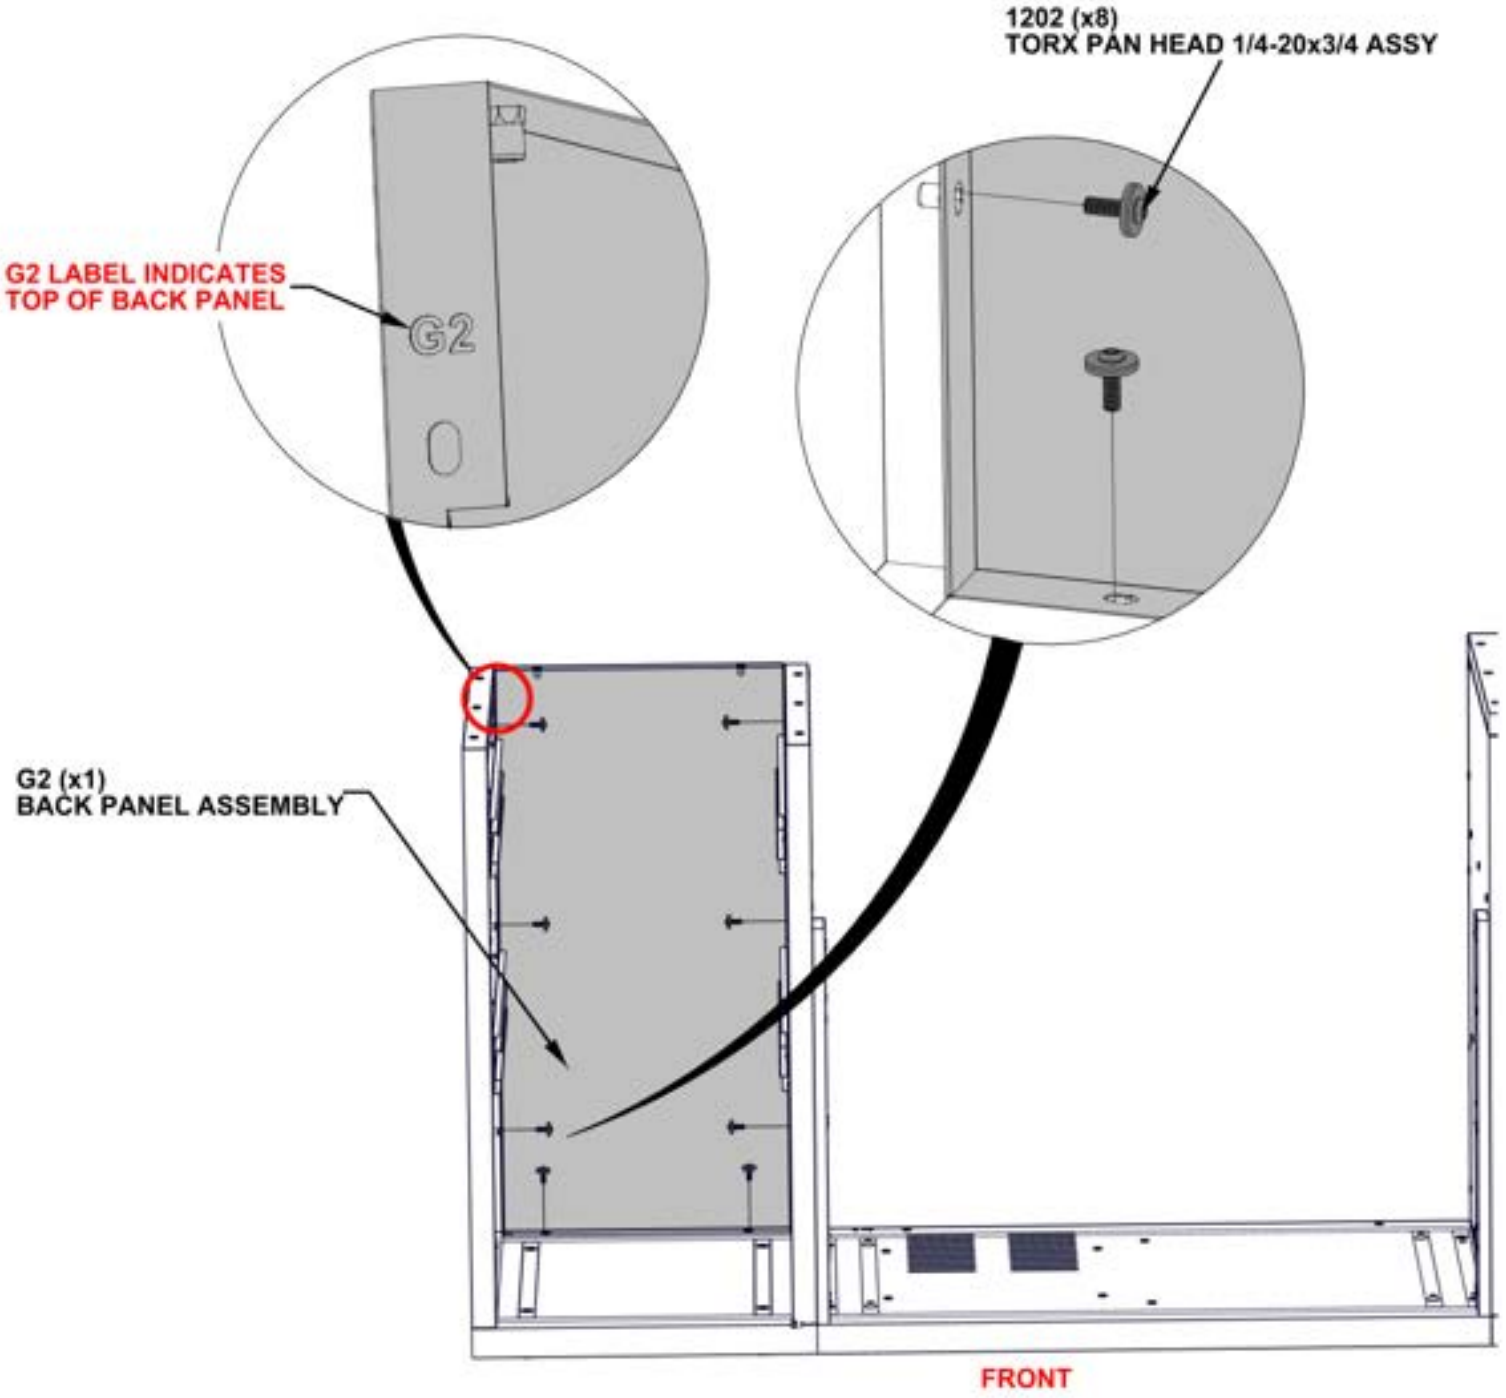


STEP 10 - TRASH CAN CABINET ASSEMBLY



Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

H11 BEAM ASSEMBLY - A4M06199
(x1) 1 3/16"x3 3/8"x16 3/4" (30x85x426)

- HARDWARE ATTACHES ON INSIDE OF CABINET

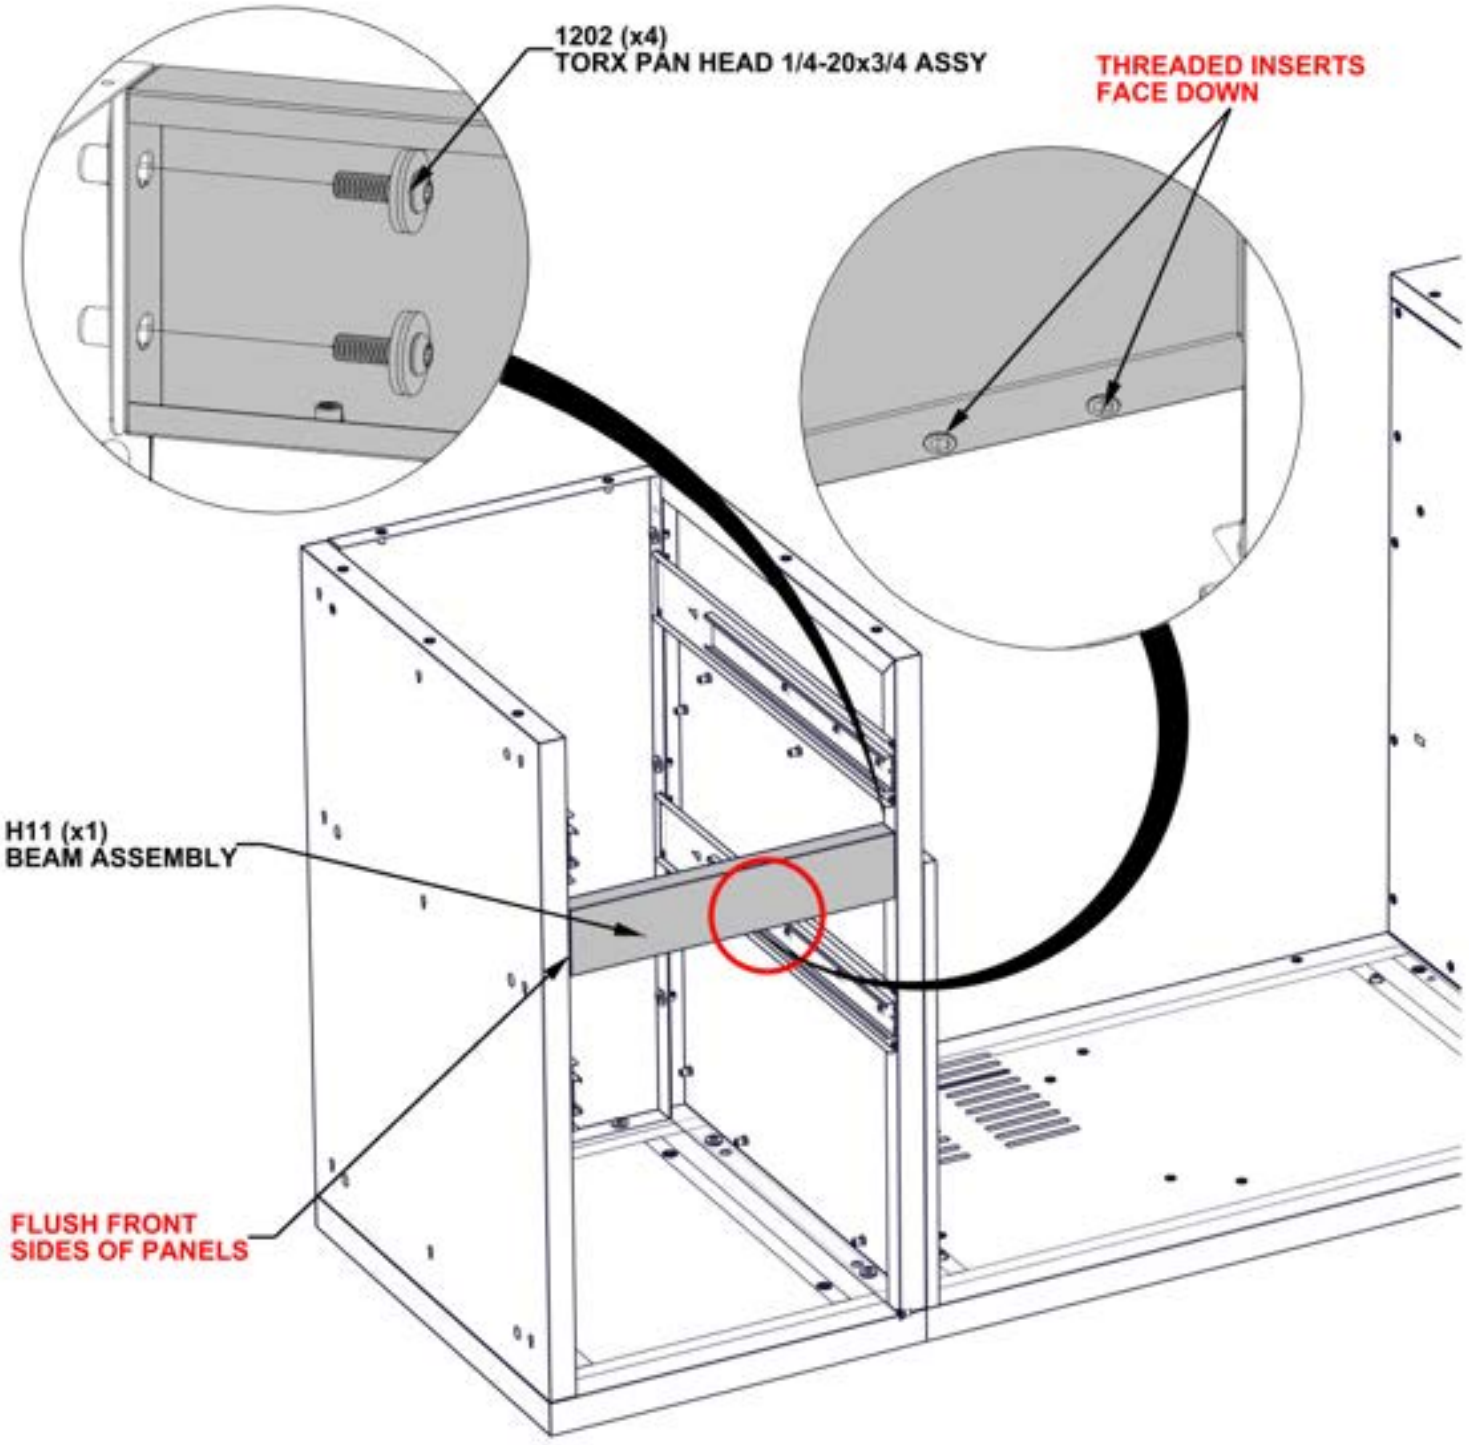

STEP 11 - TRASH CAN CABINET ASSEMBLY




Qty	PartNo	Description
8	H101103	TORX SOCKET SCREW 1/4-20

T3 TABLETOP PANEL ASSEMBLY - A4M06749
(x1) 1 1/4"x19 5/8"x24 3/16" (32x498x614)

- FLUSH BACK AND SIDES OF PANEL ASSEMBLY.

- SQUARE ALL SIDES OF CABINET BEFORE TIGHTENING HARDWARE.

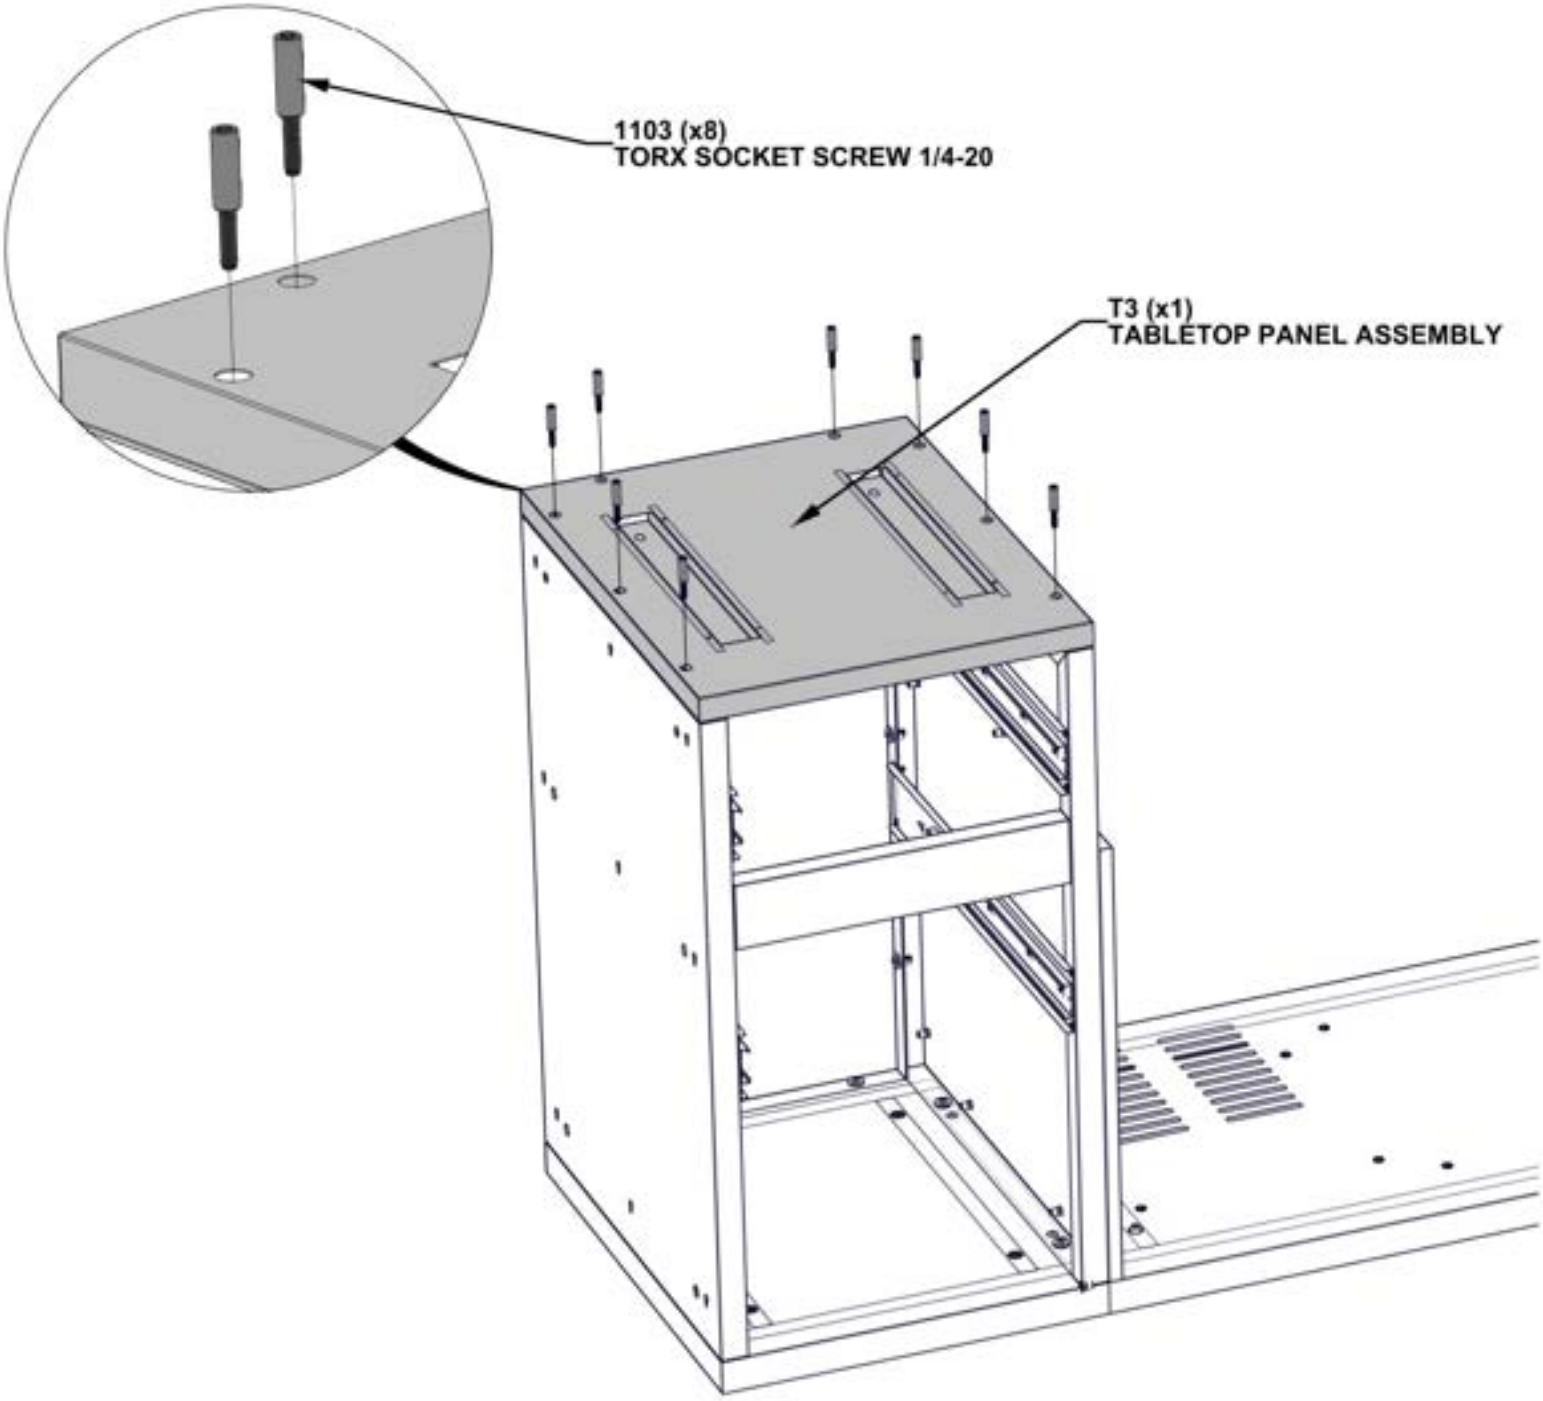


STEP 12 - TRASH CAN CABINET ASSEMBLY



Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

A6 ANGLED BRACKET - A4M03053
(x1) 1 3/8"x1 15/16"x17 1/8" (35x50x435)

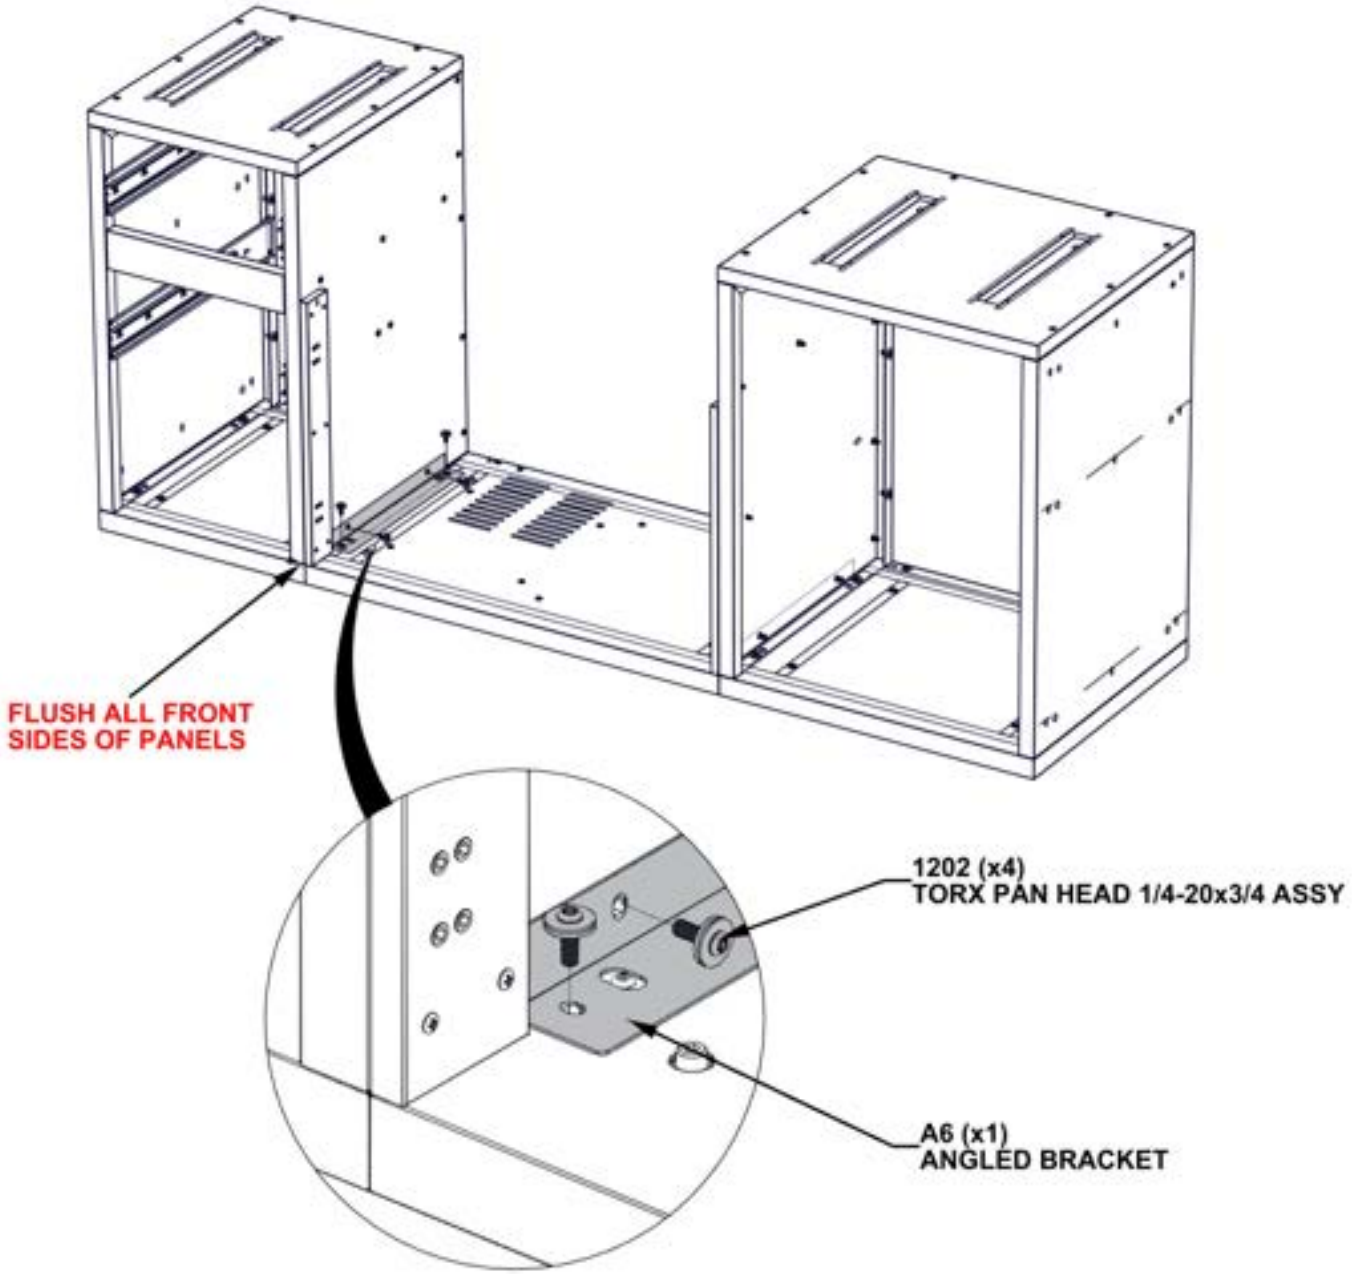


STEP 13 - APPLIANCE CABINET ASSEMBLY



Qty	PartNo	Description
8	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

G10 (x1) **CABINET BACK PANEL ASSEMBLY - A4M03055**
1 3/16"x22 7/8"x38 3/16" (30x581x970)

- FLUSH ALL SIDES OF BACK PANELS.

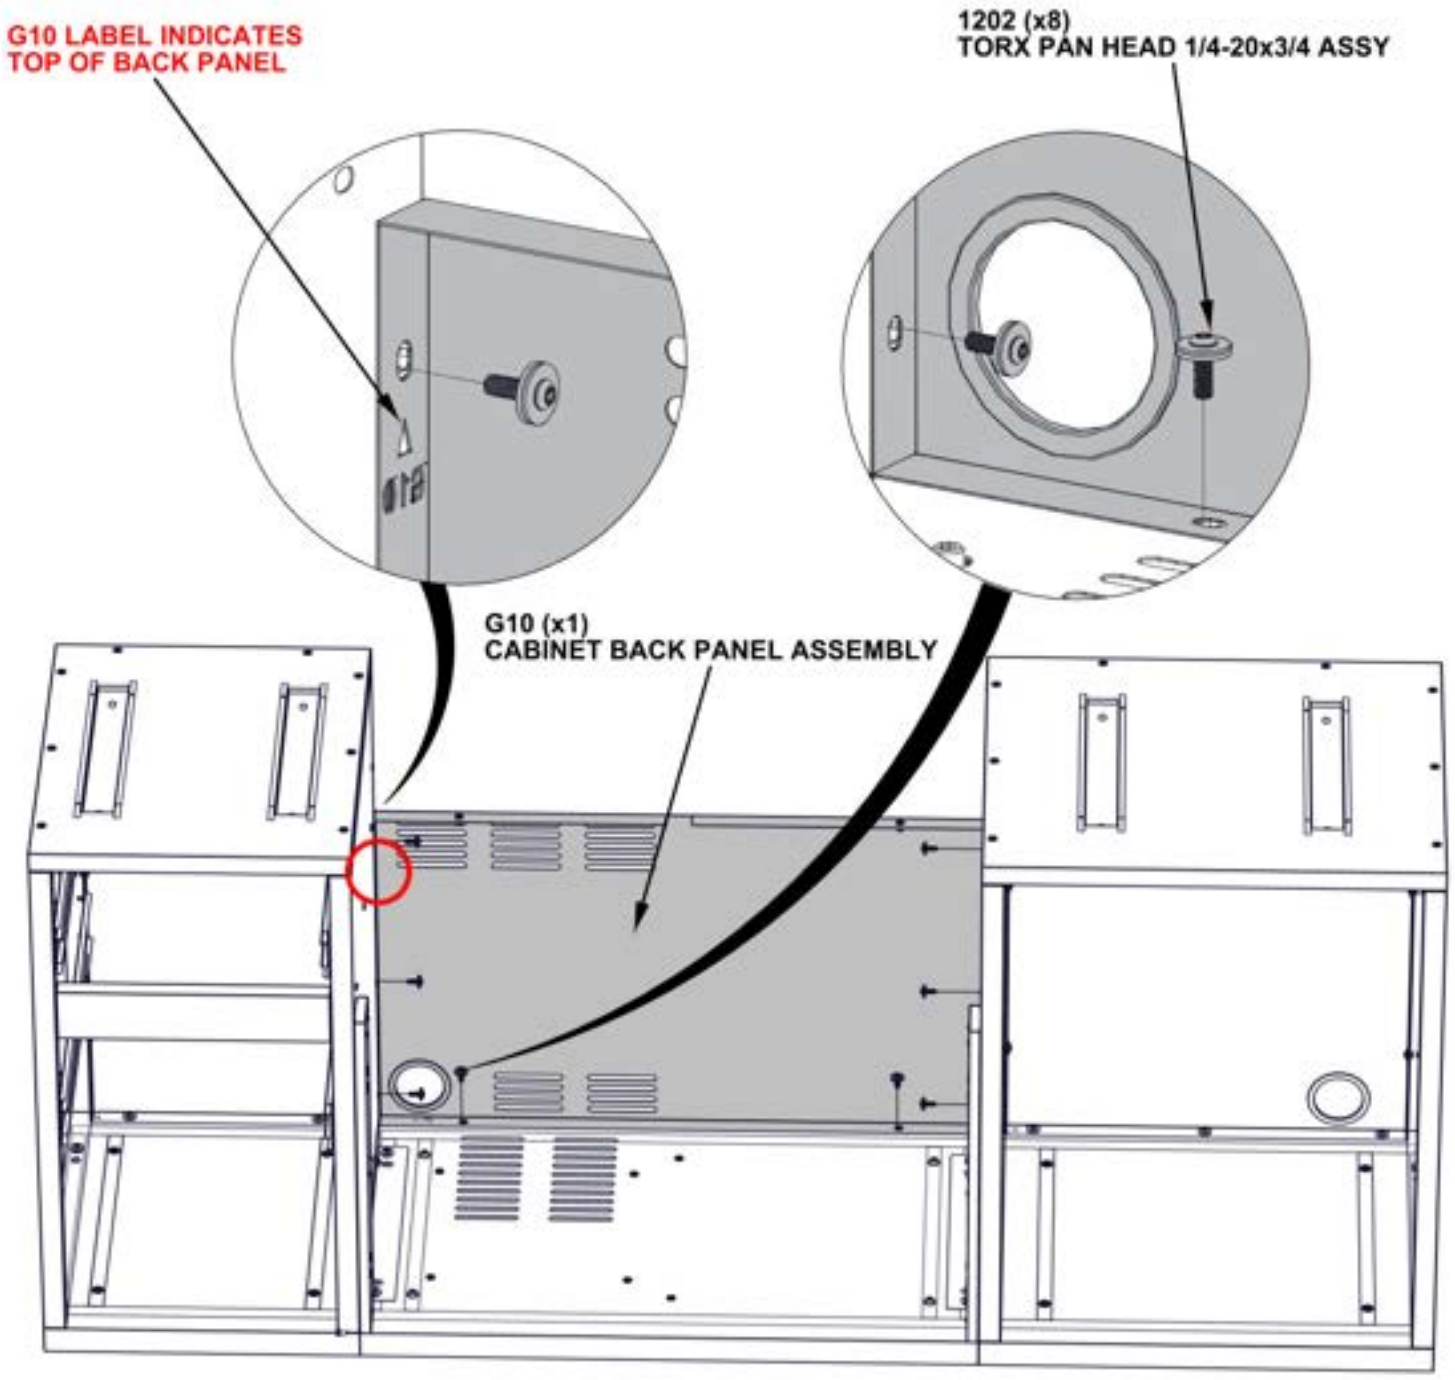


STEP 14 - APPLIANCE CABINET ASSEMBLY



S3 SIDE PANEL ASSEMBLY - A4M06457
(x1) 1 3/8"x22 7/8"x24 1/8" (35x581x613)

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

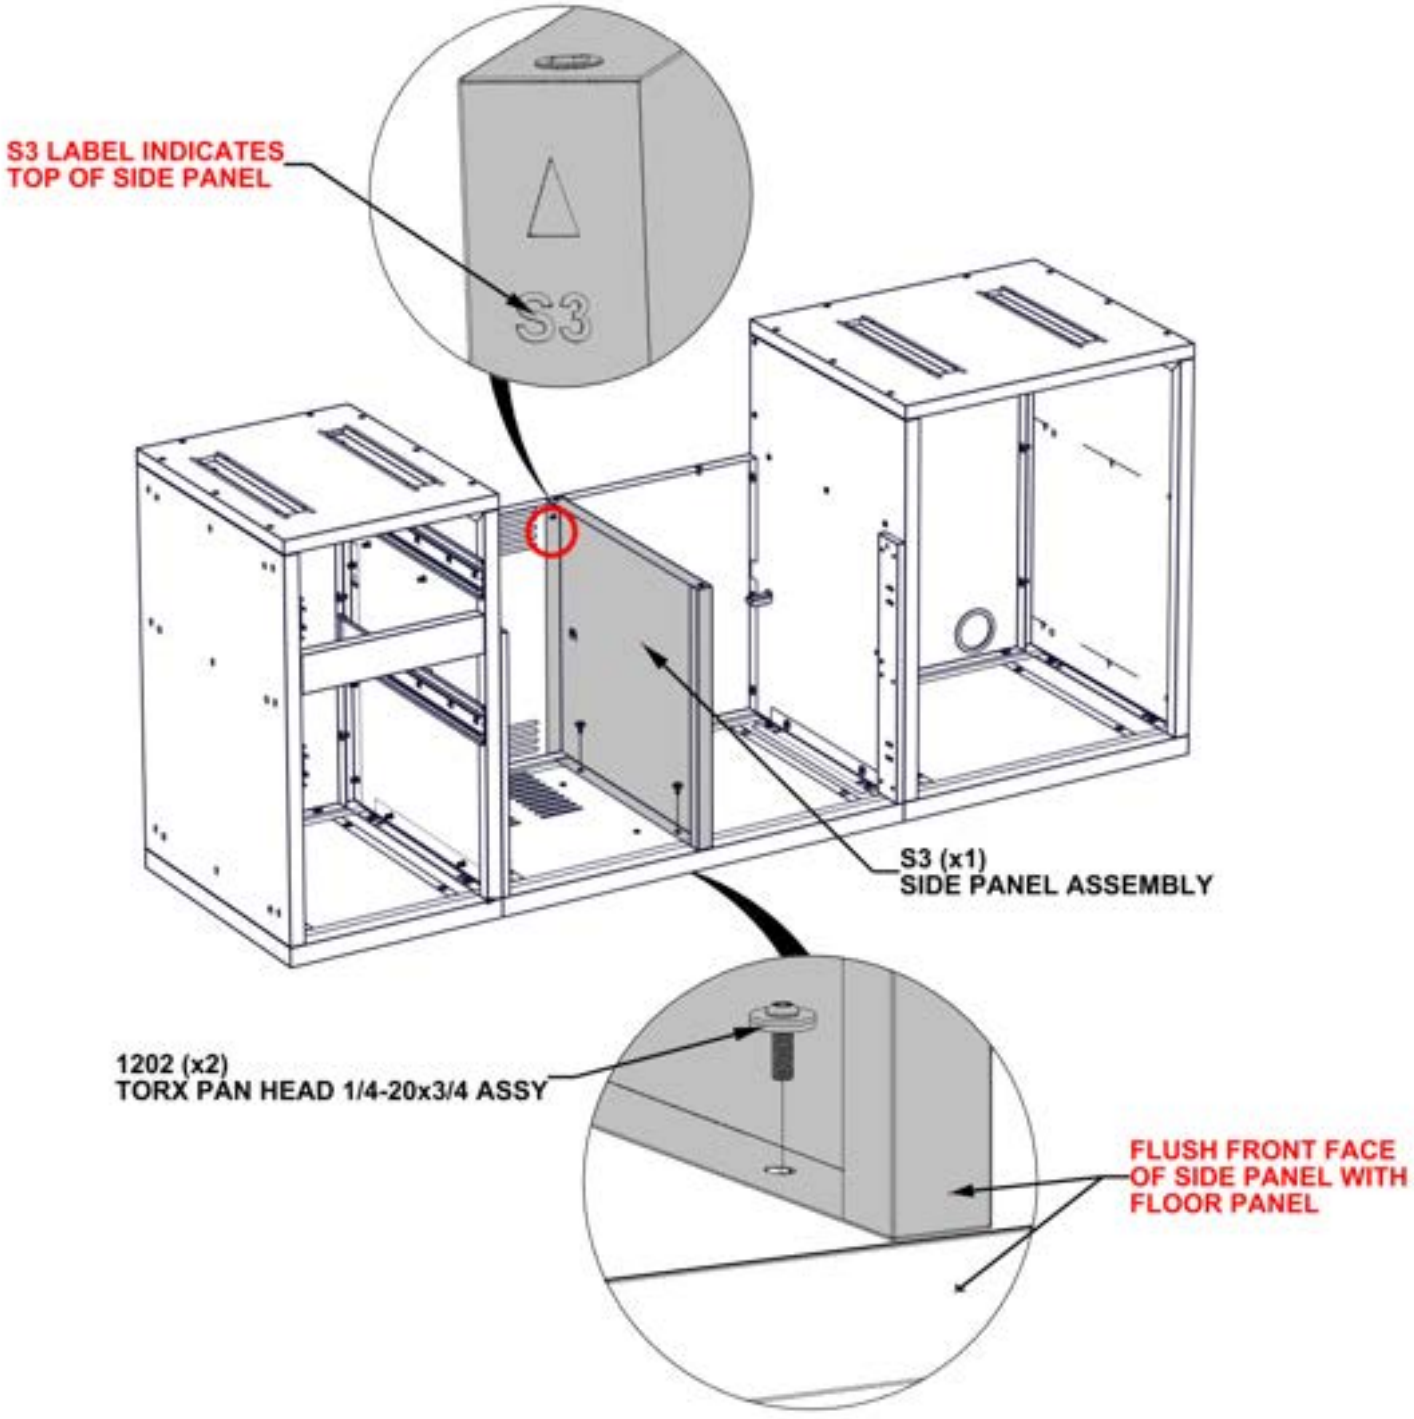


STEP 15 - APPLIANCE CABINET ASSEMBLY



A5 SHELF BRACKET - A4M03141
(x2) 5/8"x7/8"x2 1/16" (16x22x53)

- ATTACH SHELF BRACKETS ON BOTH SIDES OF CENTER CABINET.

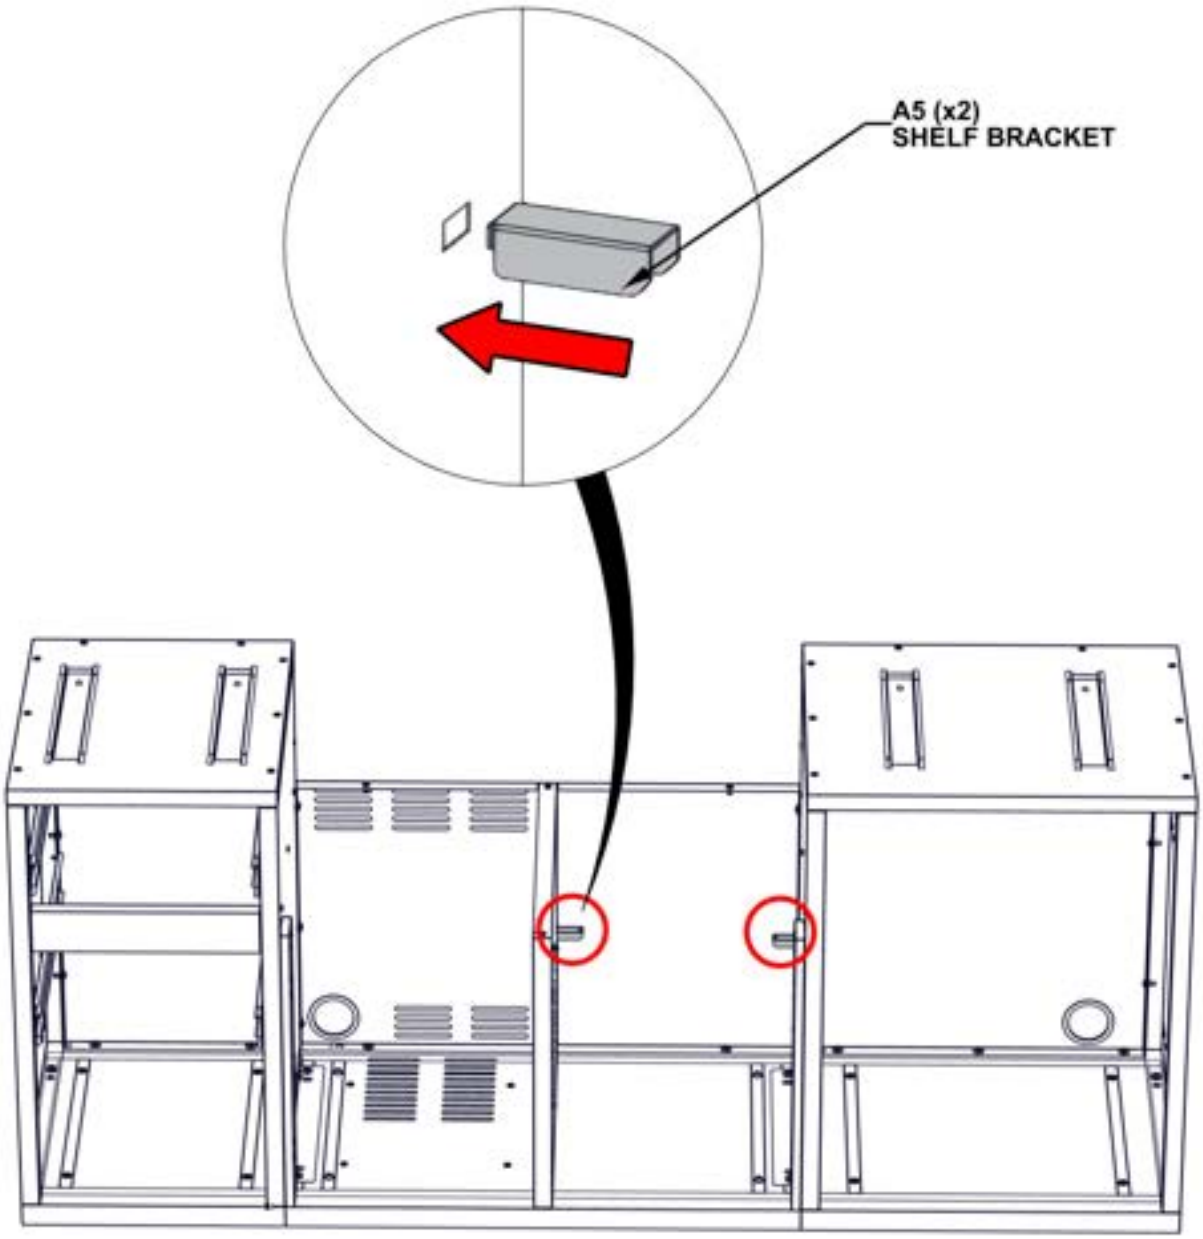


STEP 16 - APPLIANCE CABINET ASSEMBLY



L2 SHELF - A4M07615
(x1) 1"x18 3/8"x24 1/8" (25x467x613)

Qty	PartNo	Description
3	H101289	PAN HEAD SCREW 8-32x1/2" SS

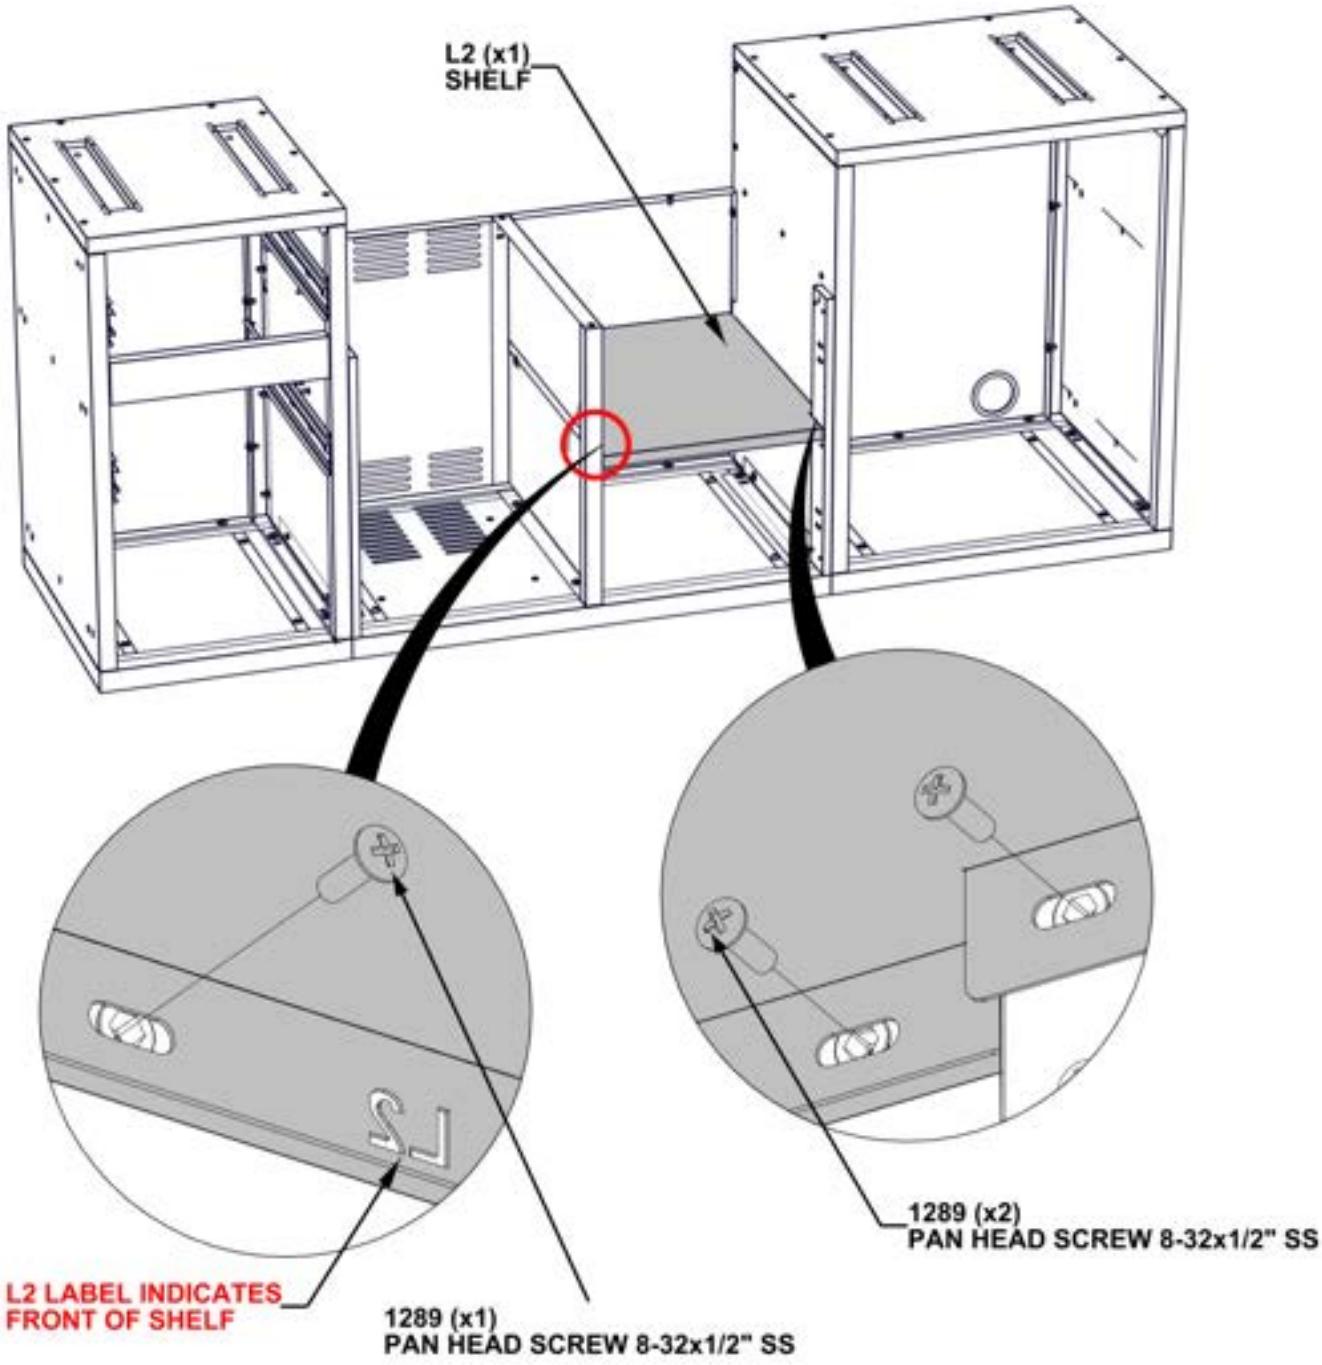


STEP 17 - APPLIANCE CABINET ASSEMBLY



A9 HOSE BRACKET ASSEMBLY - A4M03060
(x1) 1 1/4"x1 7/16"x2 9/16"(31.5X36.5X65)

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

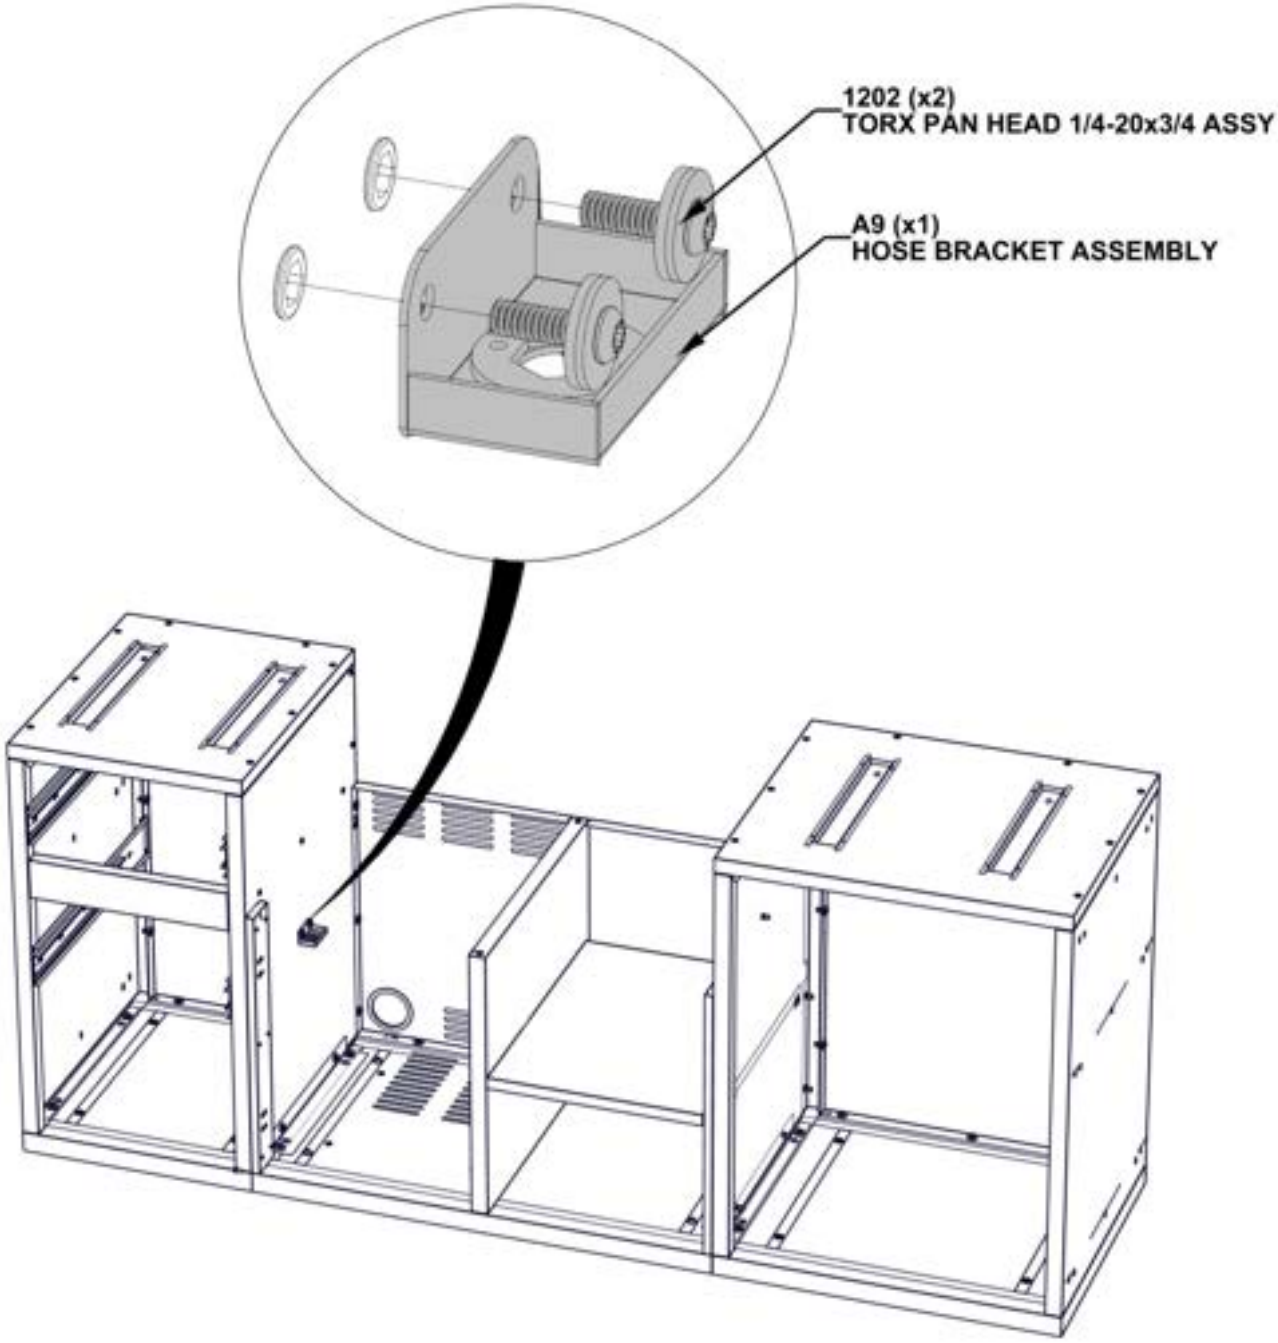


STEP 18 - APPLIANCE CABINET ASSEMBLY



Qty	PartNo	Description
4	H101292	TORX PAN HEAD 1/4-20x13/32"

A13 GAS TANK HOLDER ASSEMBLY - A4M03047
(x1) 1 15/16"x12 7/8"x14 3/4" (49x327x374)

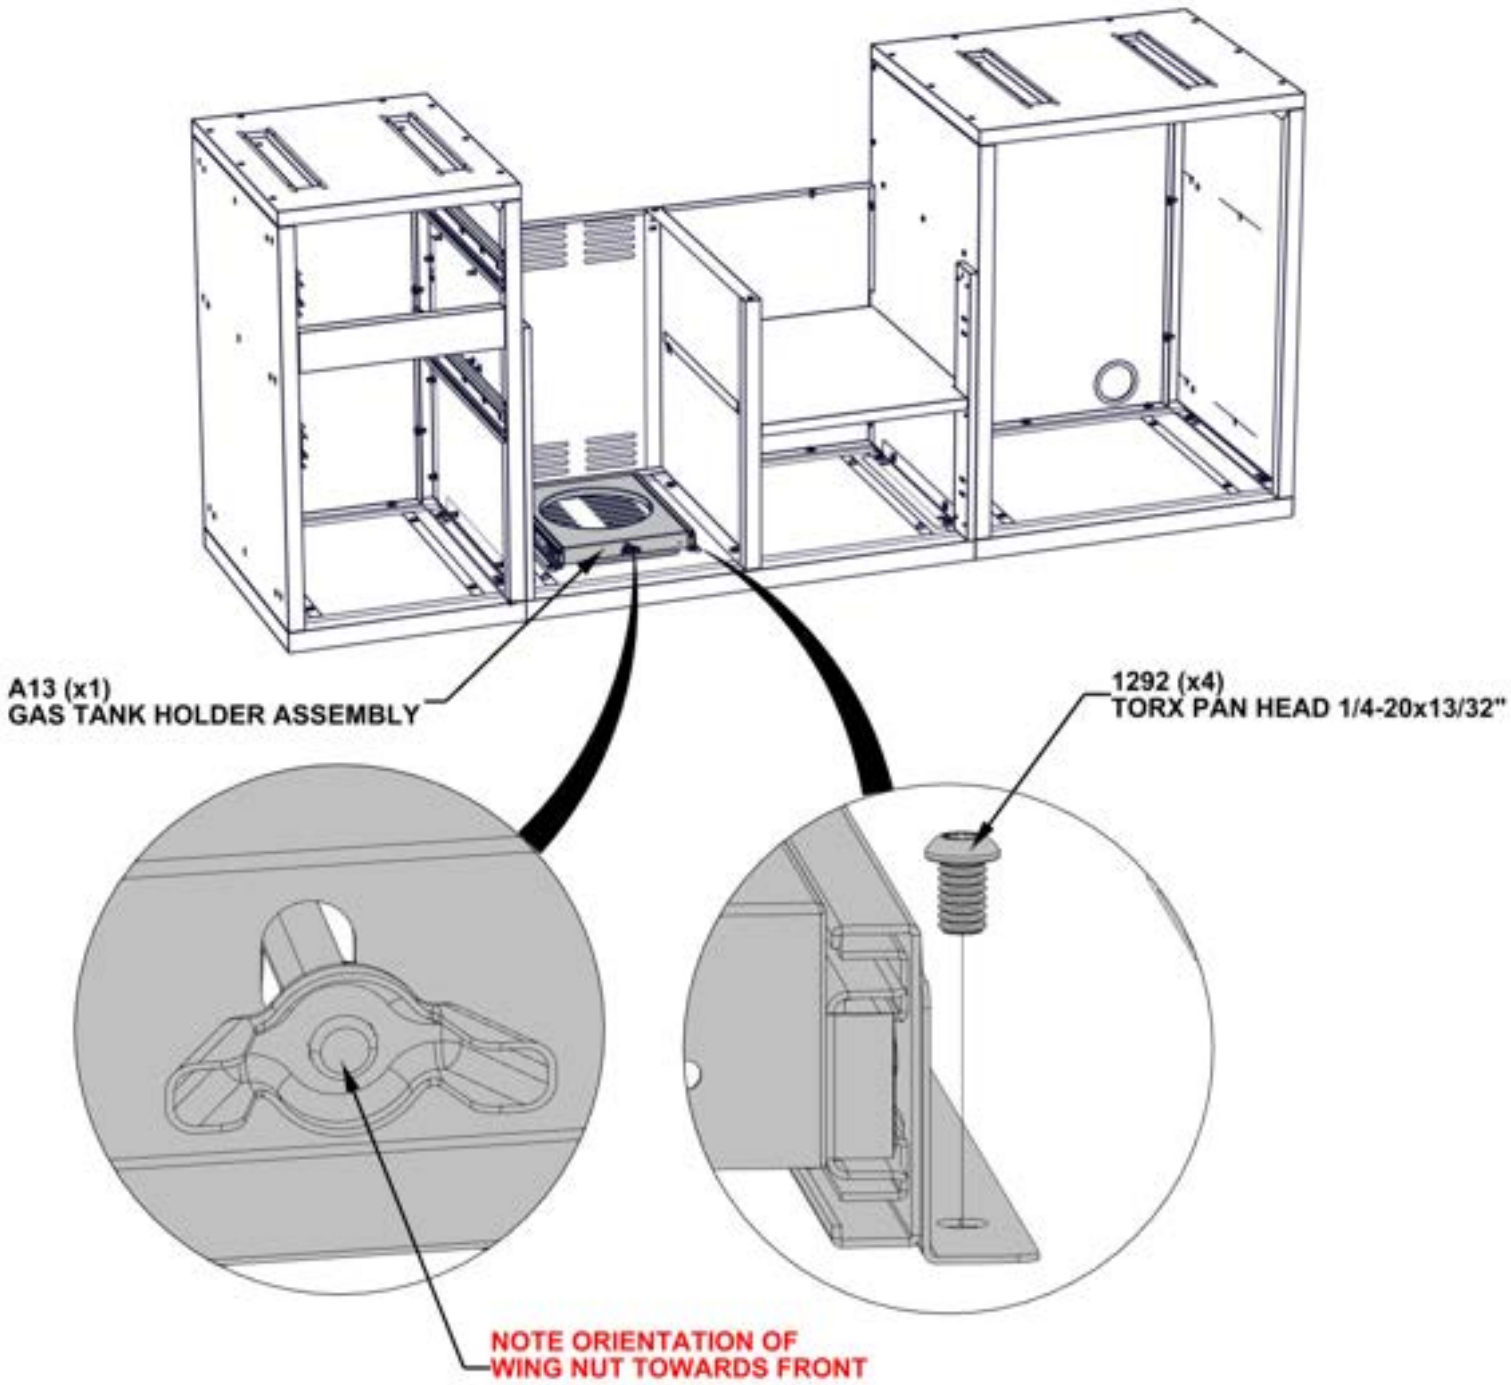

STEP 19 - APPLIANCE CABINET ASSEMBLY




T2 TABLETOP PANEL ASSEMBLY - A4M07045
(x1) 1 1/4"x24 3/16"x38 1/4" (32x614x971)



A2 MAGNET BRACKET - A4M03026
(x2) 1"x1 1/4"x3 1/8" (25x31x80)

Qty	PartNo	Description
4	H101289	PAN HEAD SCREW 8-32x1/2" SS

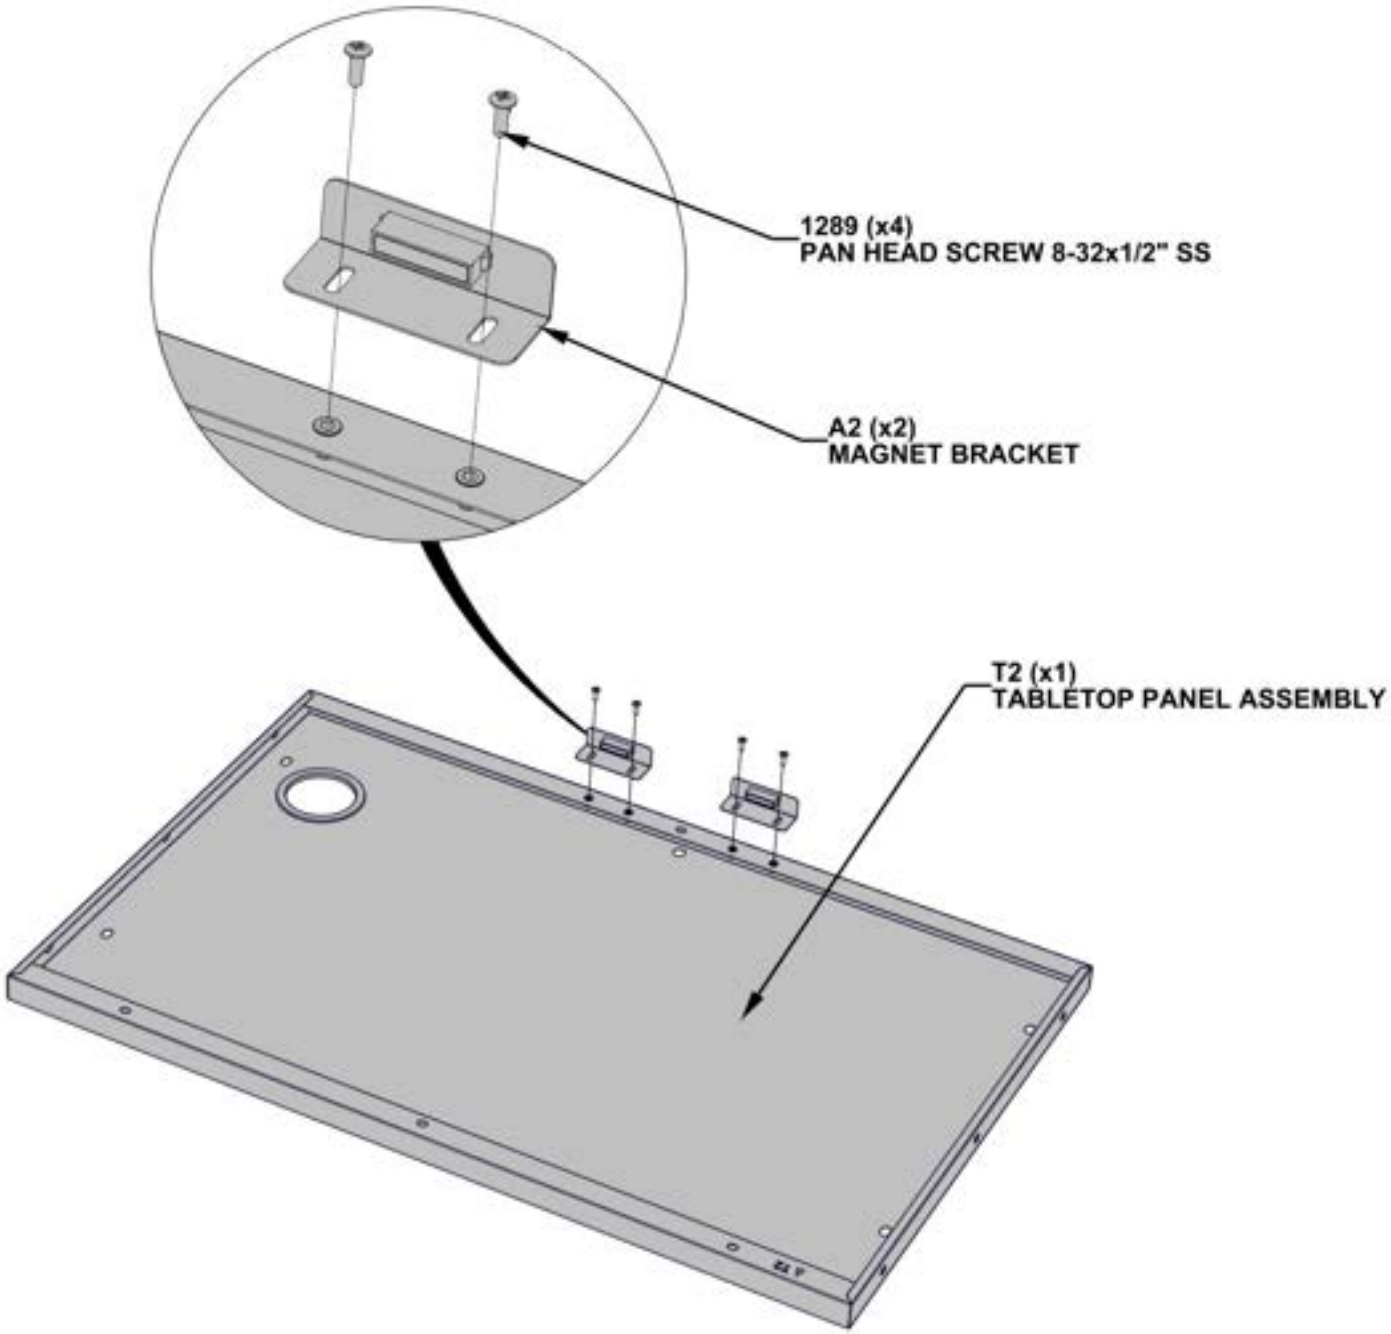


STEP 20 - APPLIANCE CABINET ASSEMBLY




T2 TABLETOP PANEL ASSEMBLY FROM STEP 19

Qty	PartNo	Description
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

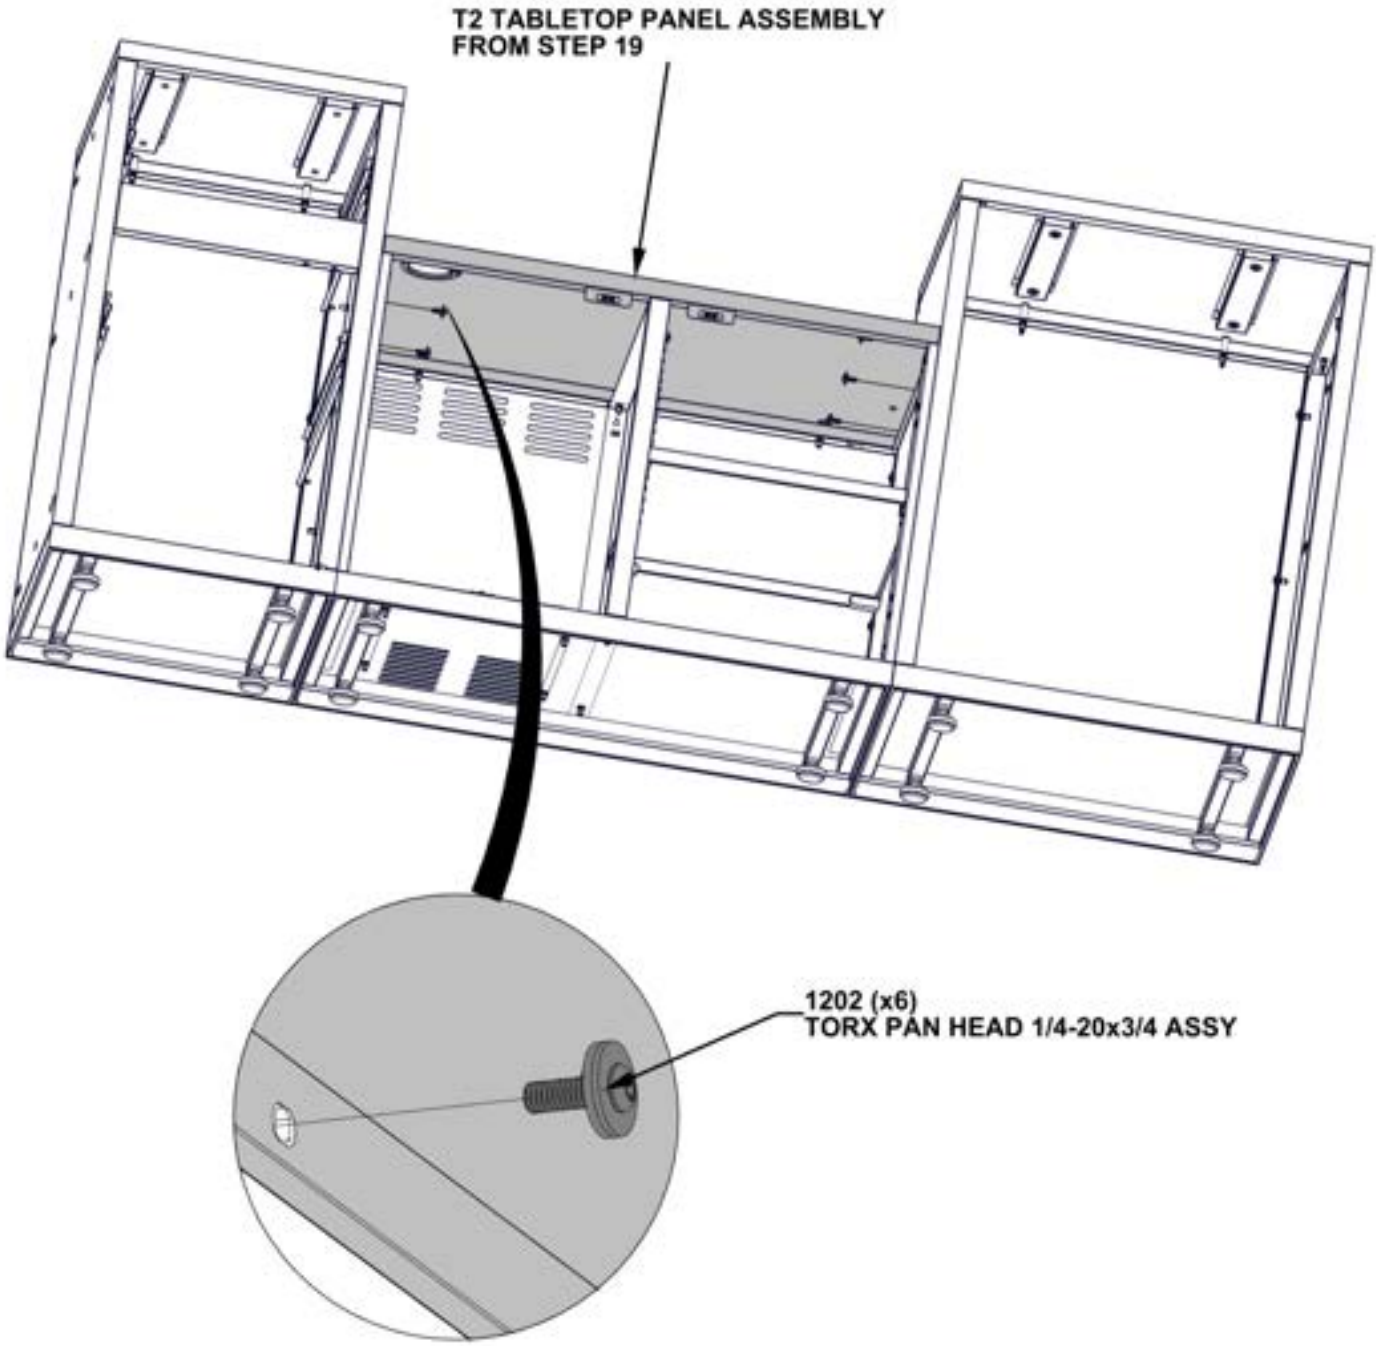


STEP 21 - APPLIANCE CABINET ASSEMBLY

Qty	PartNo	Description
4	H101103	TORX SOCKET SCREW 1/4-20

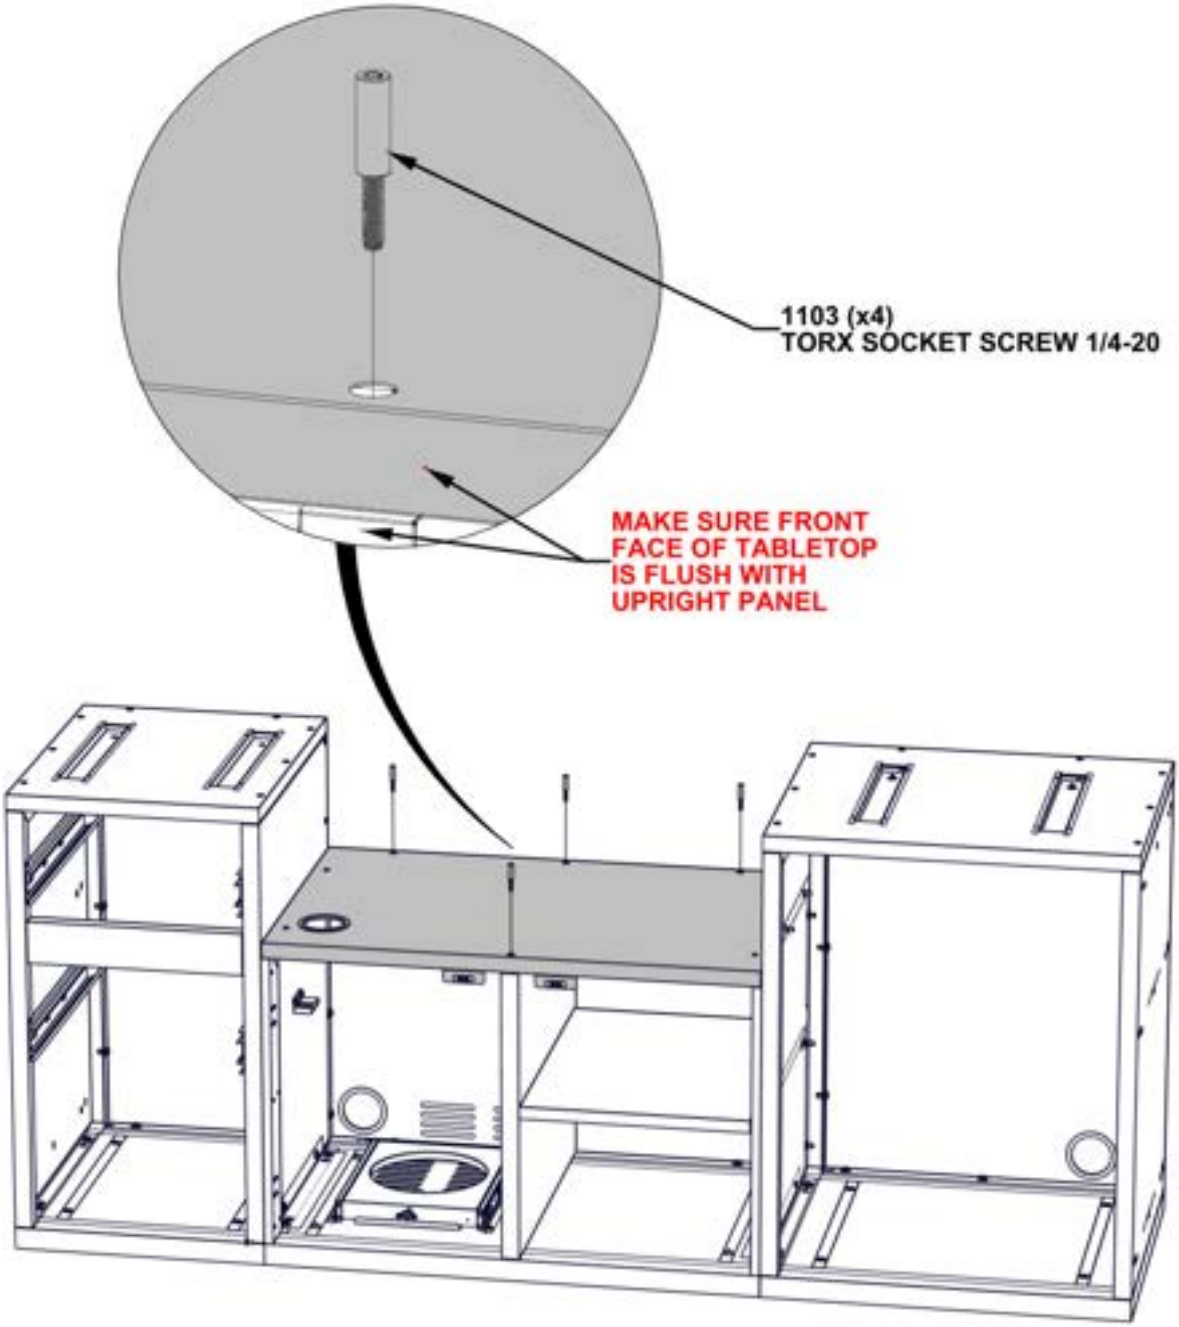


STEP 22 - APPLIANCE CABINET ASSEMBLY

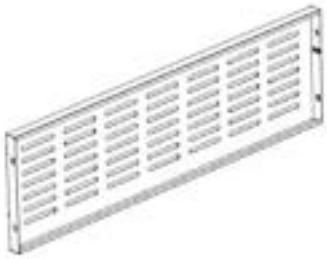

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

G11 VENTILATION PANEL - A4M03056
(x1) 1 3/16"x11 3/16"x38 3/16" (30x284x970)

- FLUSH BACK SIDE OF VENTILATION PANEL.

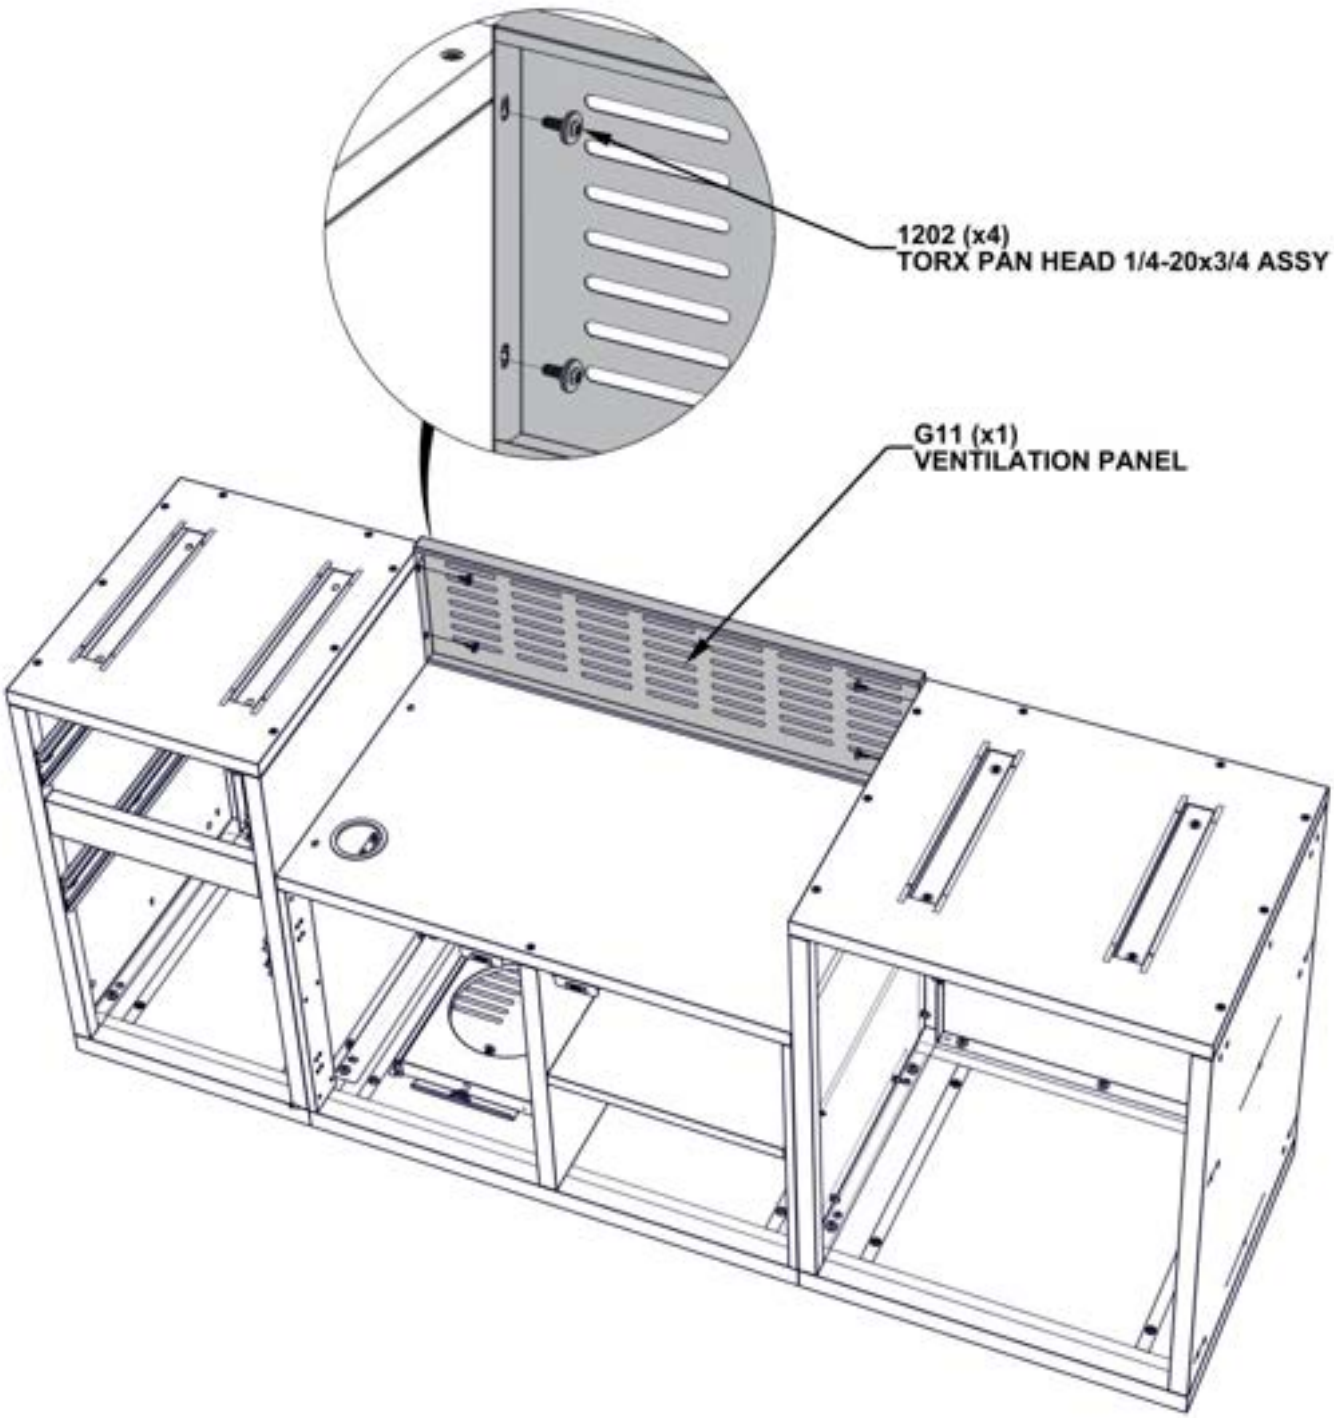


STEP 23A - SIDE TRIM PANEL ASSEMBLY



Qty	PartNo	Description
6	H101289	PAN HEAD SCREW 8-32x1/2" SS

S13 (x2) SIDE TRIM PANEL ASSEMBLY - A4M07143
11/16"x24 3/16"x35 13/16"(18x614x909)


- PARTIAL THREAD SCREWS INTO THREADED INSERTS LEAVING APPROXIMATELY 1/2" (12mm) OF SCREW STICKING OUT.
- REPEAT THIS STEP TWICE.

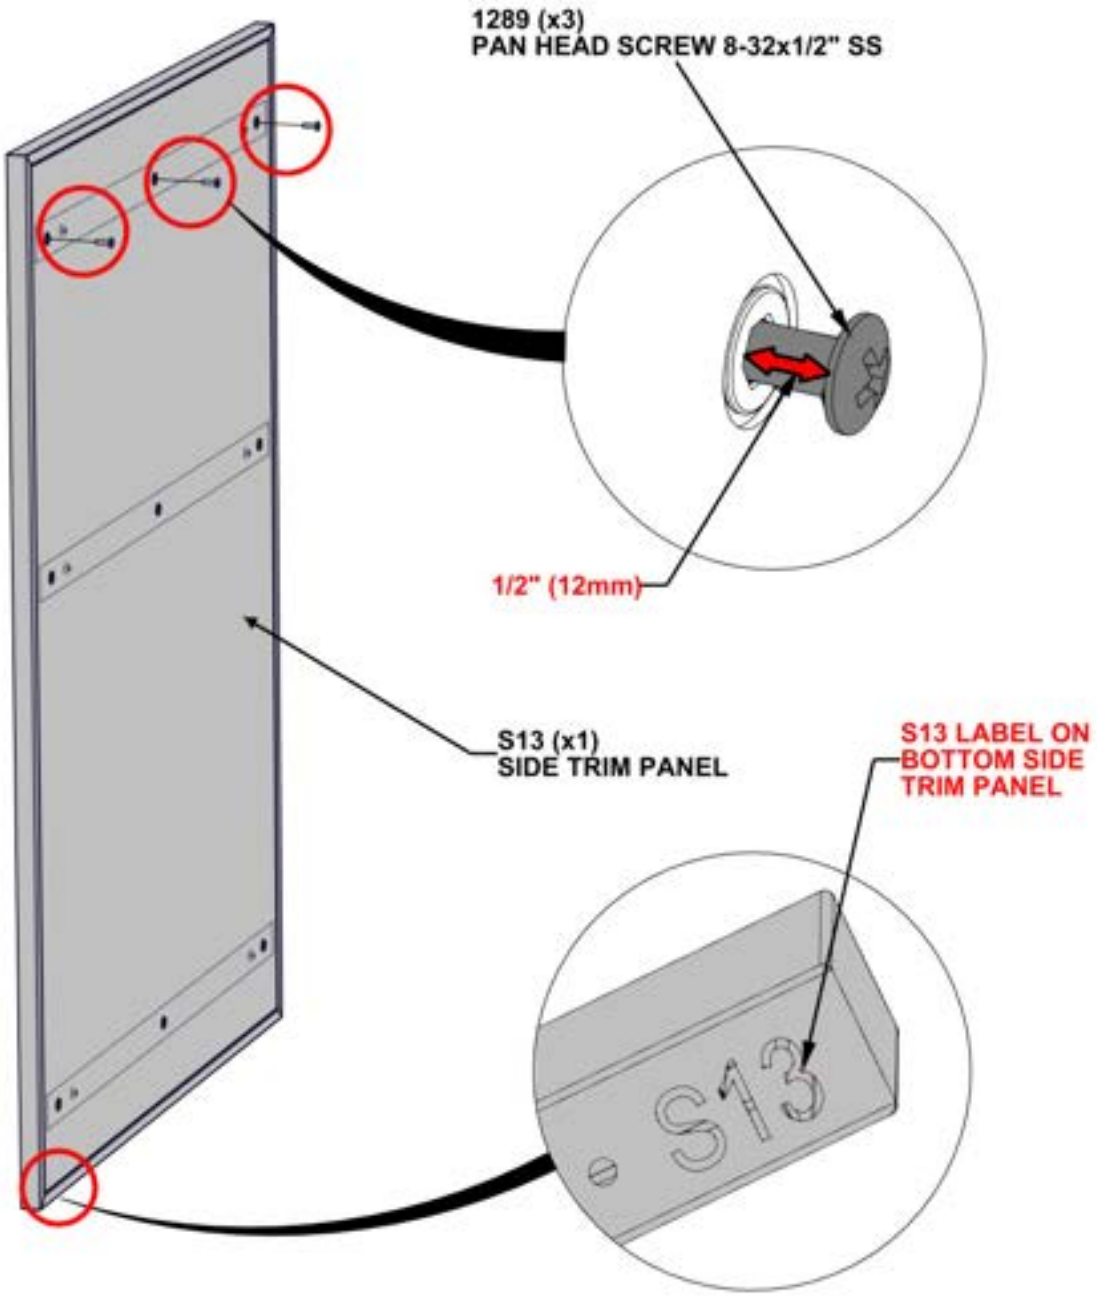

STEP 23B - SIDE TRIM PANEL ASSEMBLY




S13 SIDE TRIM PANEL ASSEMBLY FROM STEP 23A

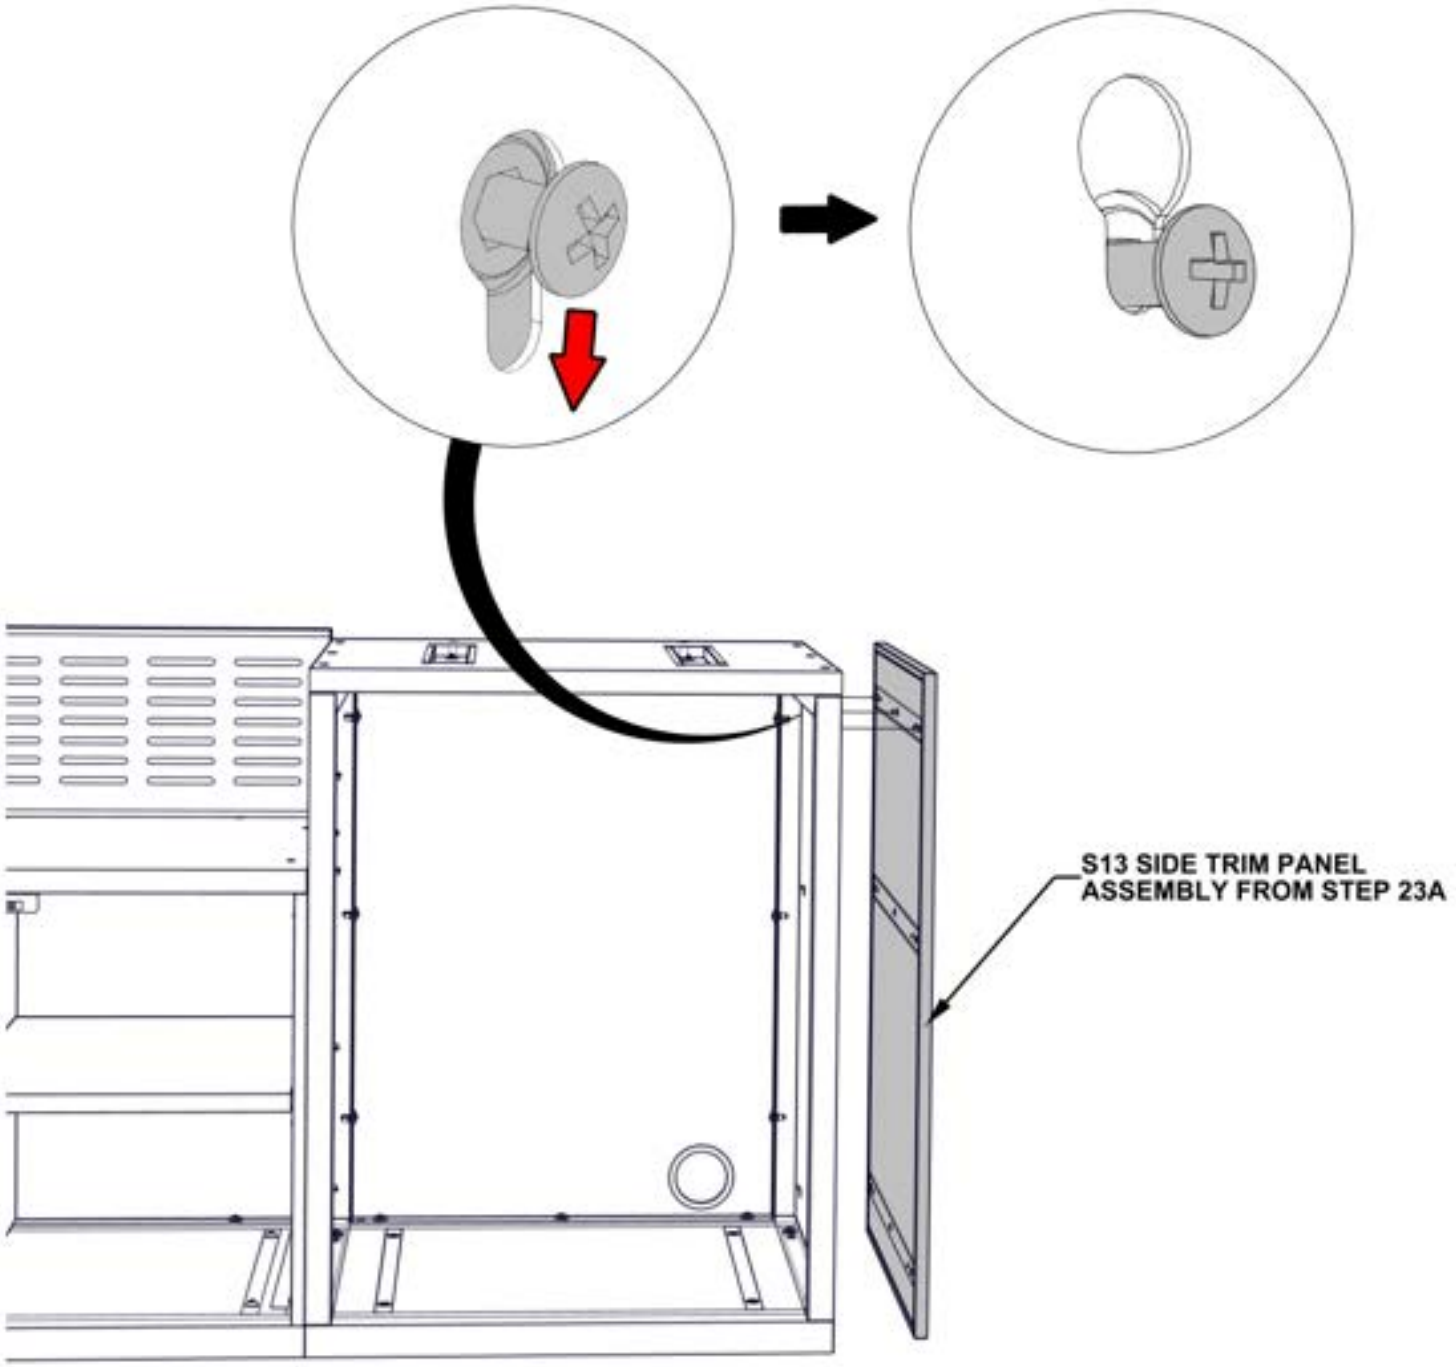

STEP 23C - SIDE TRIM PANEL ASSEMBLY

Qty	PartNo	Description
6	H101289	PAN HEAD SCREW 8-32x1/2" SS


- INSTALL AND TIGHTEN ALL HARDWARE.

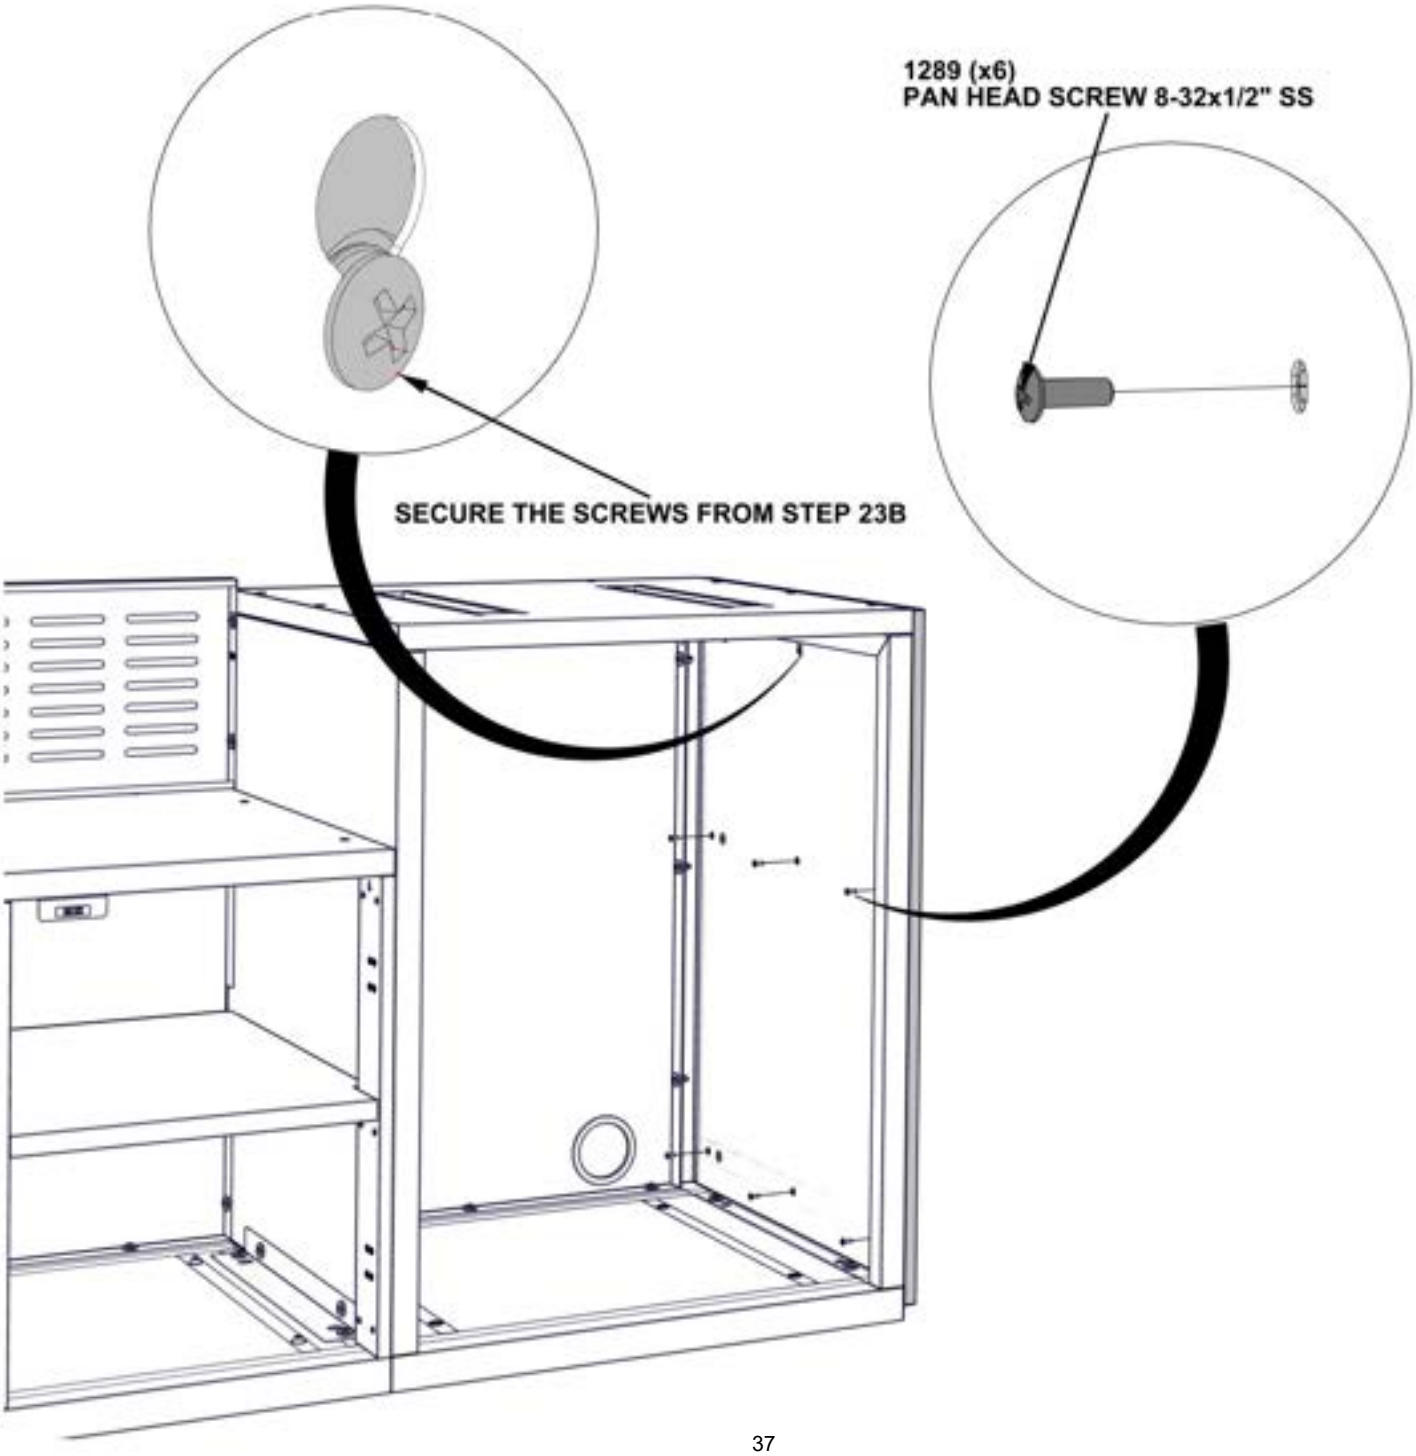


STEP 23D - SIDE TRIM PANEL ASSEMBLY



S13 SIDE TRIM PANEL ASSEMBLY FROM STEP 23A

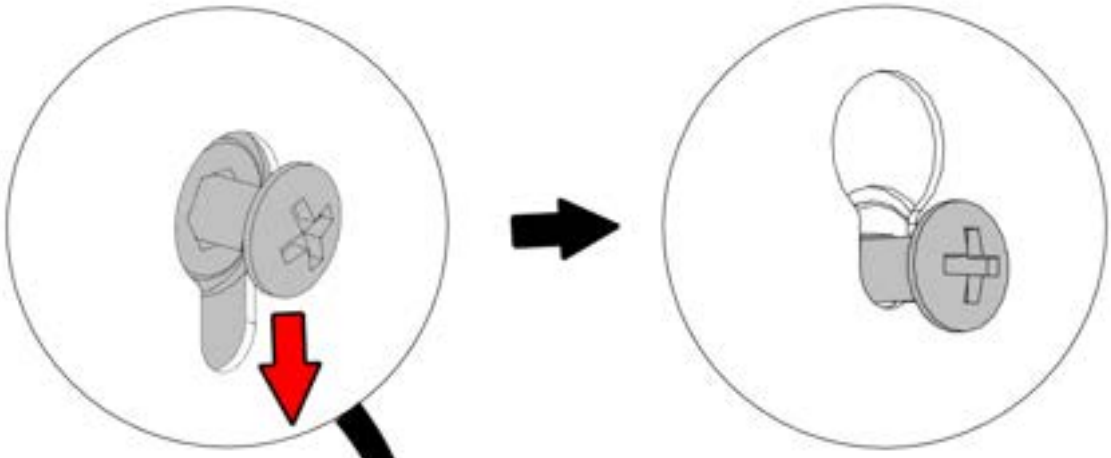


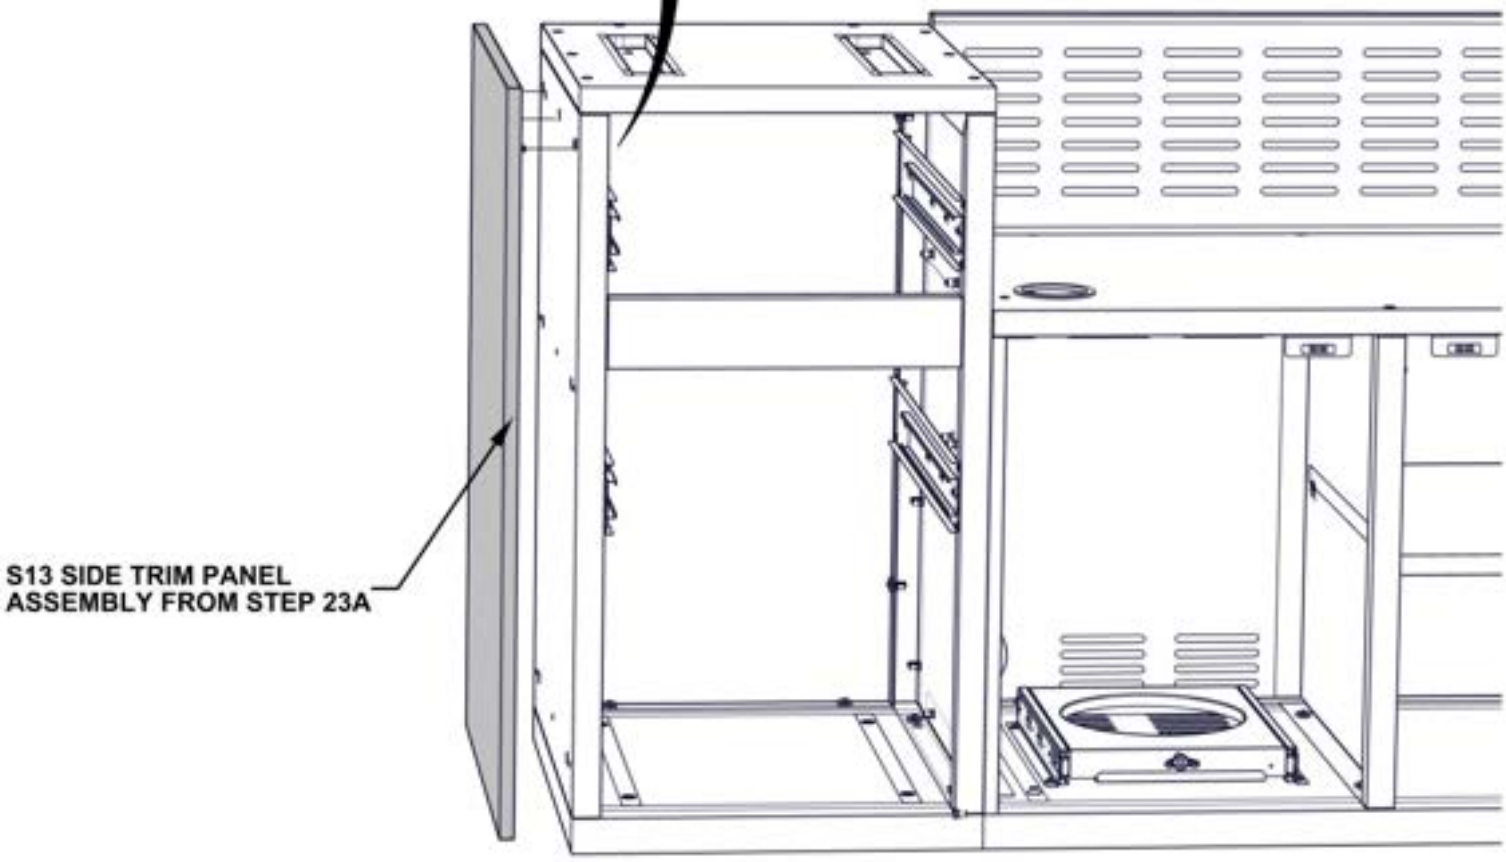

STEP 23E - SIDE TRIM PANEL ASSEMBLY

Qty	PartNo	Description
6	H101289	PAN HEAD SCREW 8-32x1/2" SS

- INSTALL AND TIGHTEN ALL HARDWARE.

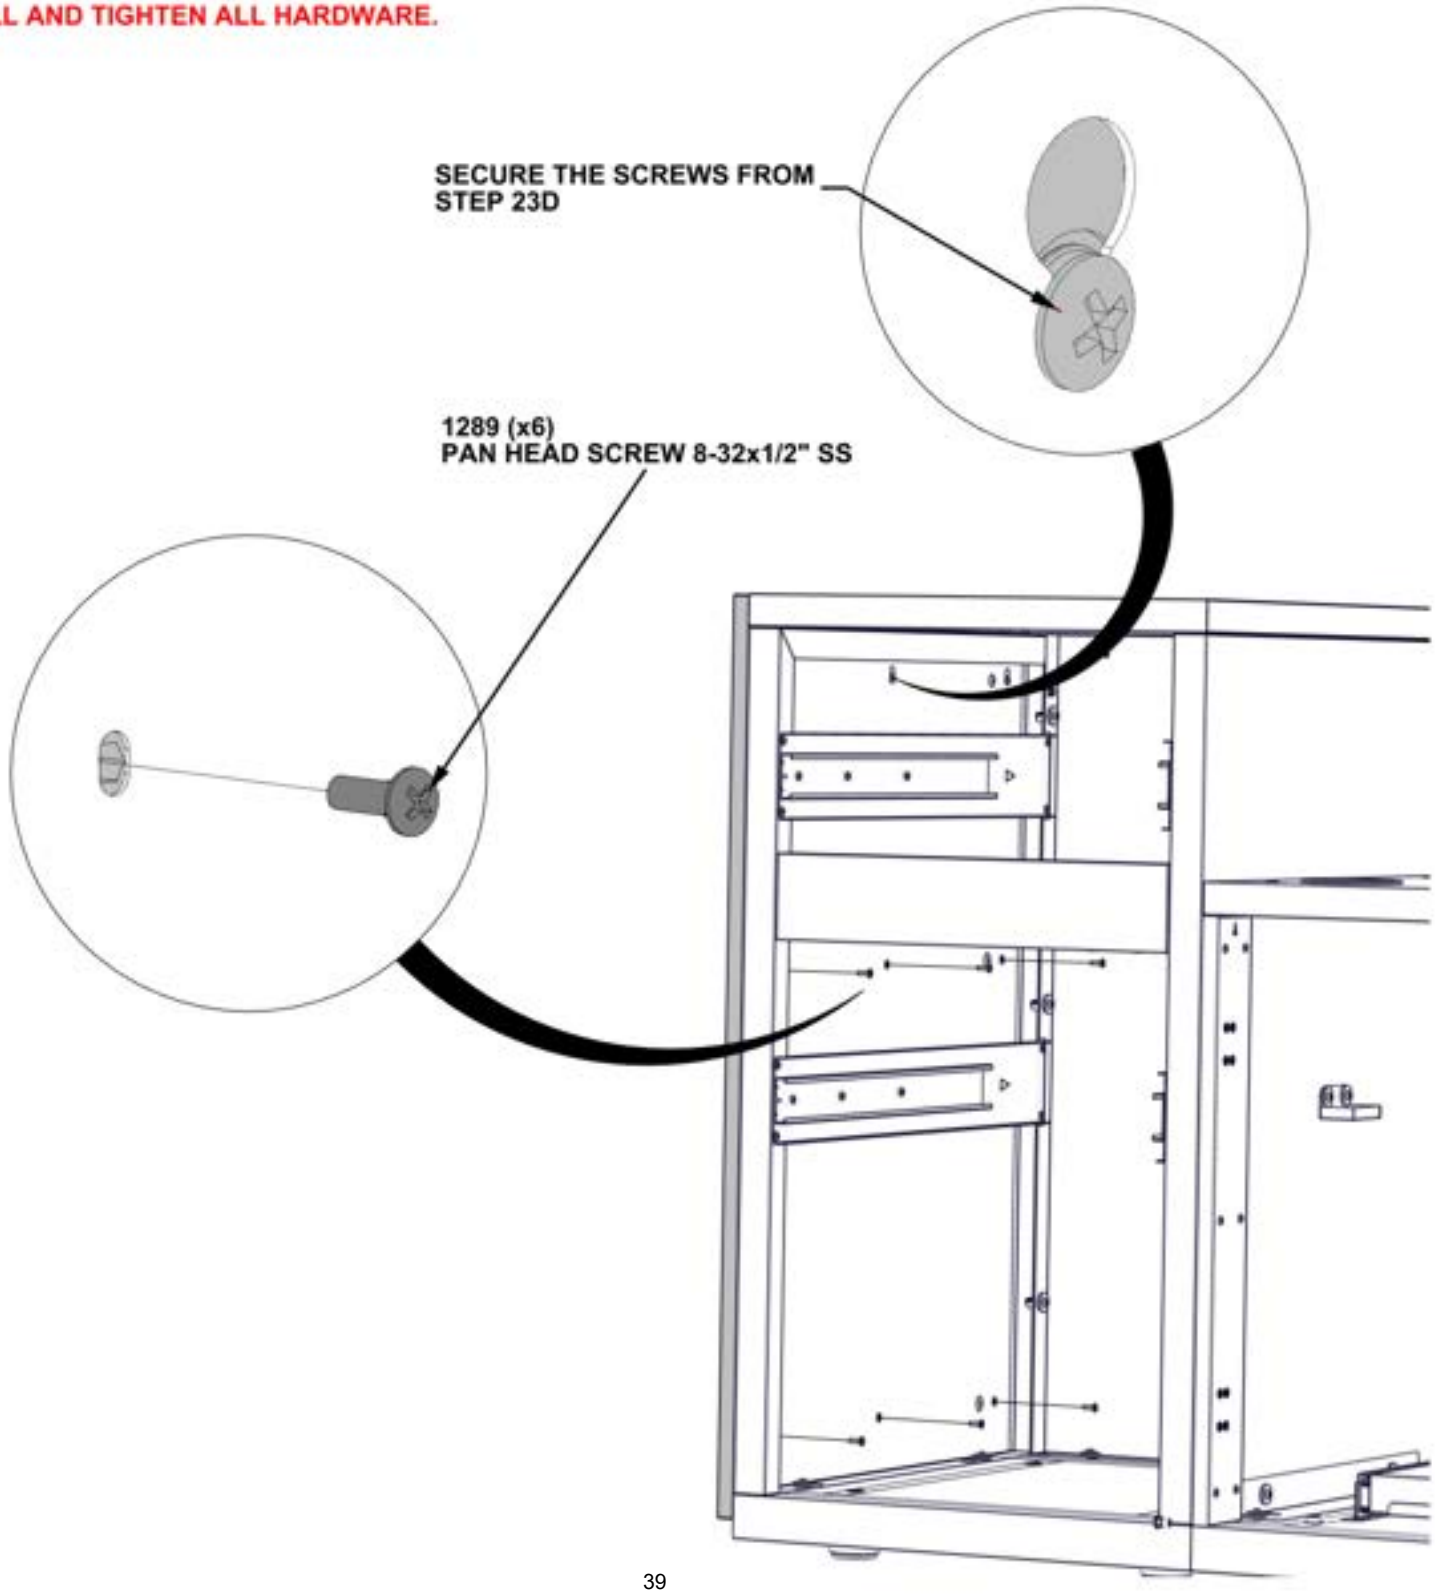


STEP 24 - COUNTERTOP ASSEMBLY



M1 COUNTERTOP - A4M07142
(x1) 1 5/16"X25 1/8"x28 7/8" (33x733x638)


- IT IS RECOMMENDED TO HAVE AT LEAST TWO PEOPLE SET COUNTERTOP IN PLACE.
- SET IN PLACE UNTIL HOLES IN COUNTERTOP ALIGN WITH THE HOLES IN SUPPORT FRAME.
- WHEN SETTING COUNTERTOP IN PLACE, MAKE SURE YOUR FINGERS ARE CLEAR AND NOT UNDERNEATH COUNTERTOP.

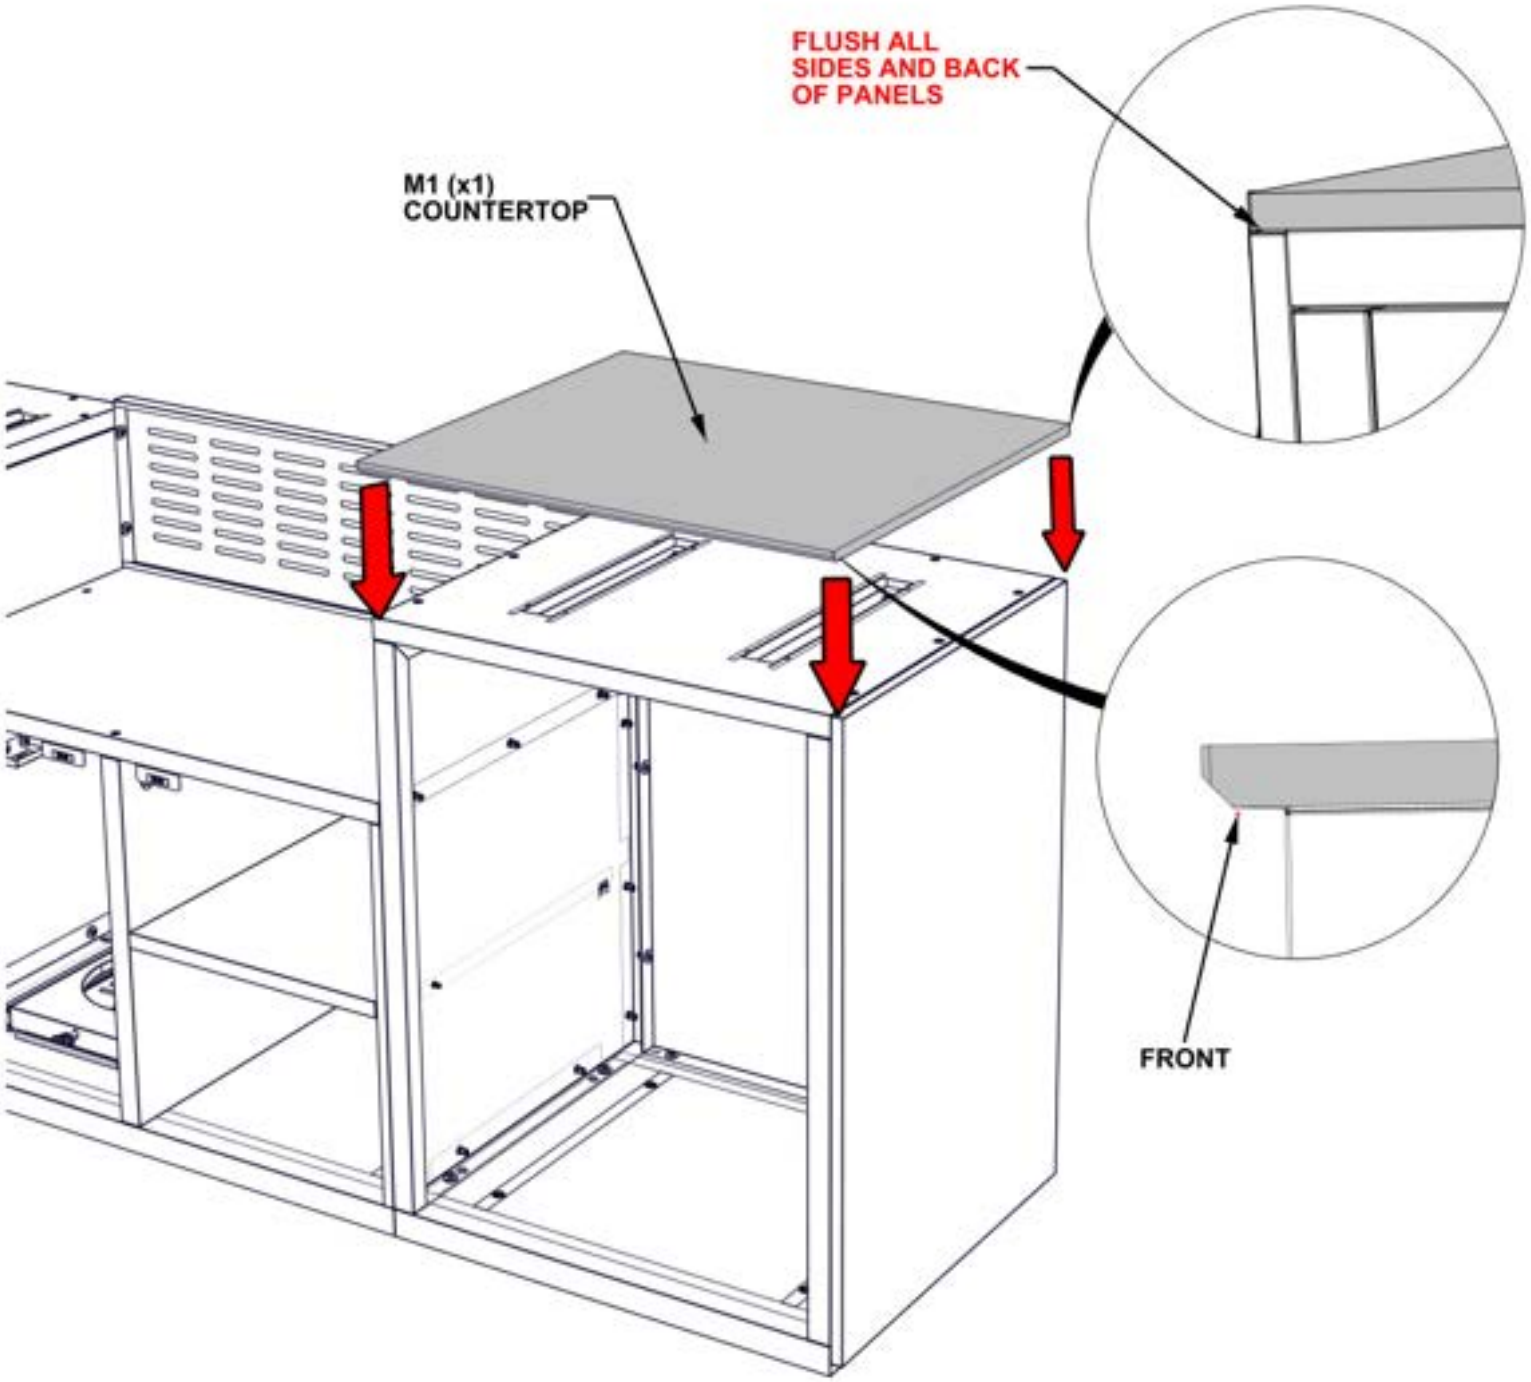

STEP 25 - COUNTERTOP ASSEMBLY

Qty	PartNo	Description
4	H101053	STEEL WASHER 6x20
4	H101292	TORX PAN HEAD 1/4-20x13/32"
4	H101054	SEALANT WASHER

- MAKE SURE YOU ARE USING THE CORRECT HARDWARE FOR THIS STEP.
- ONCE COUNTERTOP IS IN PLACE, IT IS RECOMMENDED TO COVER WITH A PIECE OF CARDBOARD OR FOAM UNTIL ASSEMBLY IS FINISHED TO PREVENT DAMAGE.
- DO NOT USE COUNTERTOP SURFACE AS A WORK BENCH.

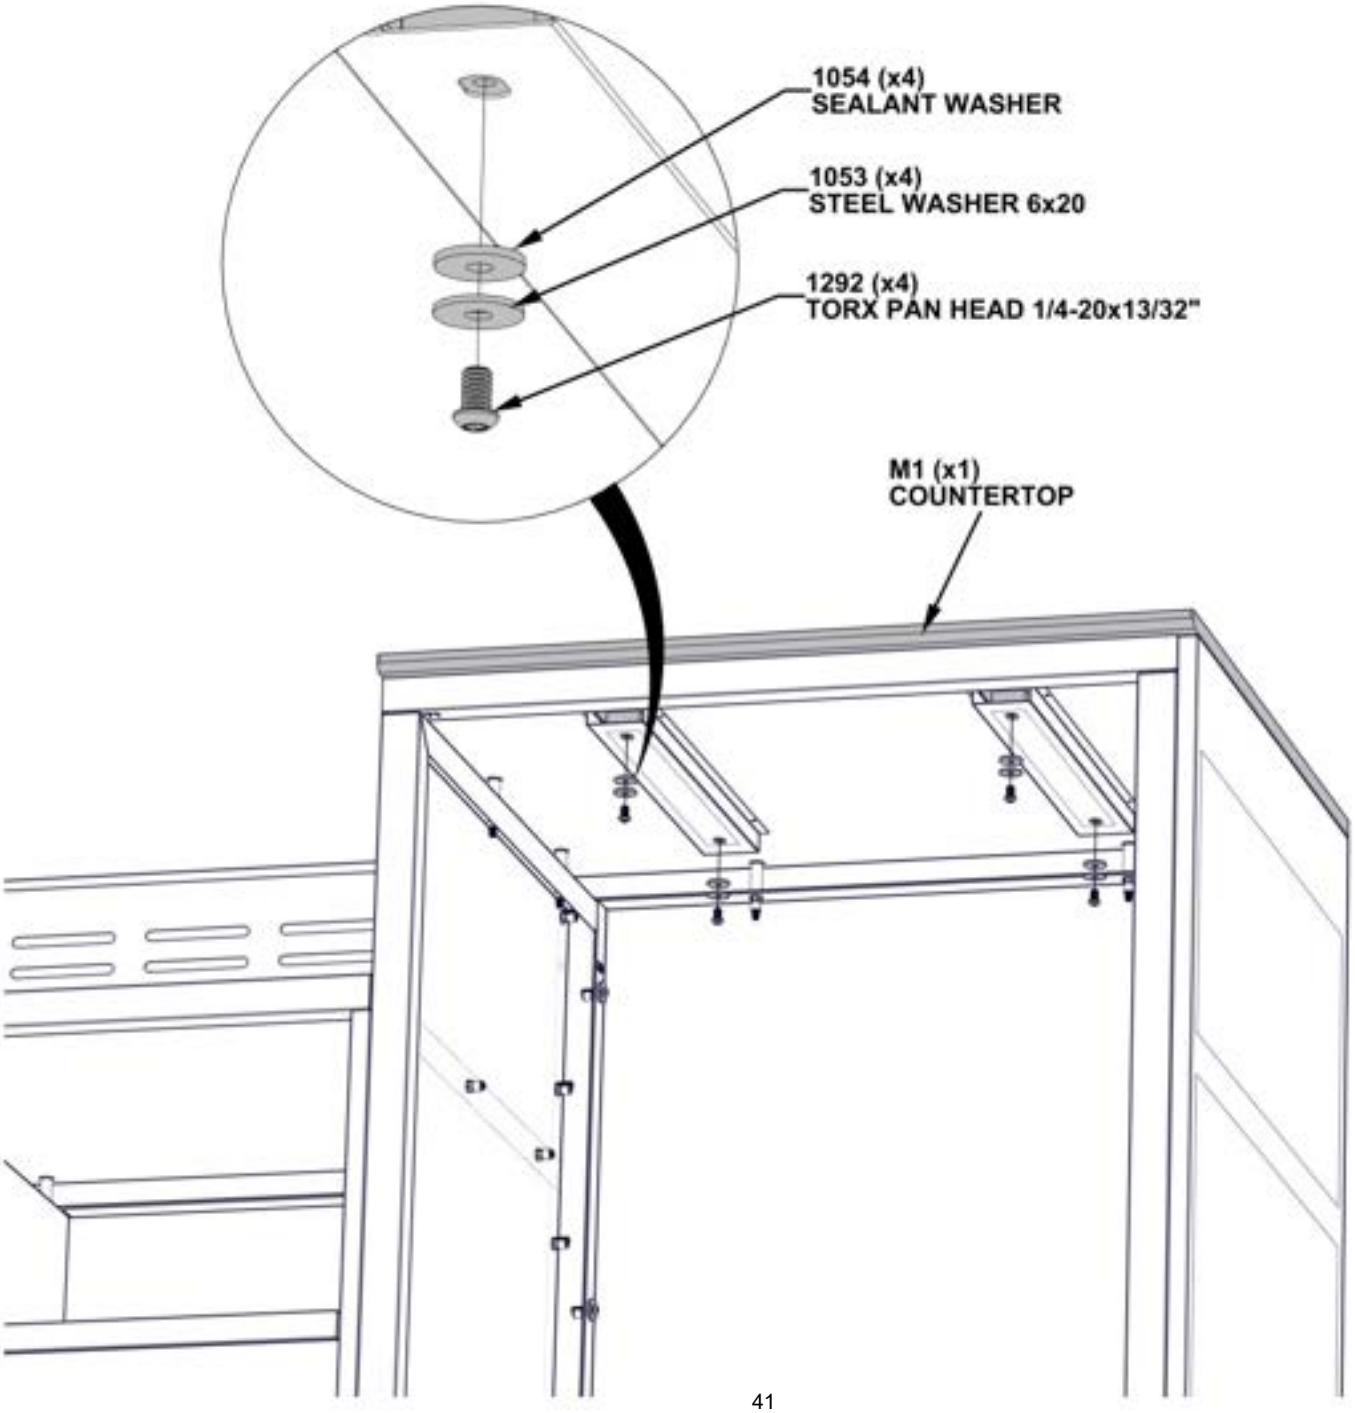


STEP 26 - COUNTERTOP ASSEMBLY



M2 COUNTERTOP - A4M07141
(x1) 1 5/16"x20 5/16"x25 1/8" (33x516x638)

- IT IS RECOMMENDED TO HAVE AT LEAST TWO PEOPLE SET COUNTERTOP IN PLACE.
- SET IN PLACE UNTIL HOLES IN COUNTERTOP ALIGN WITH THE HOLES IN SUPPORT FRAME.


- WHEN SETTING COUNTERTOP IN PLACE, MAKE SURE YOUR FINGERS ARE CLEAR AND NOT UNDERNEATH COUNTERTOP.

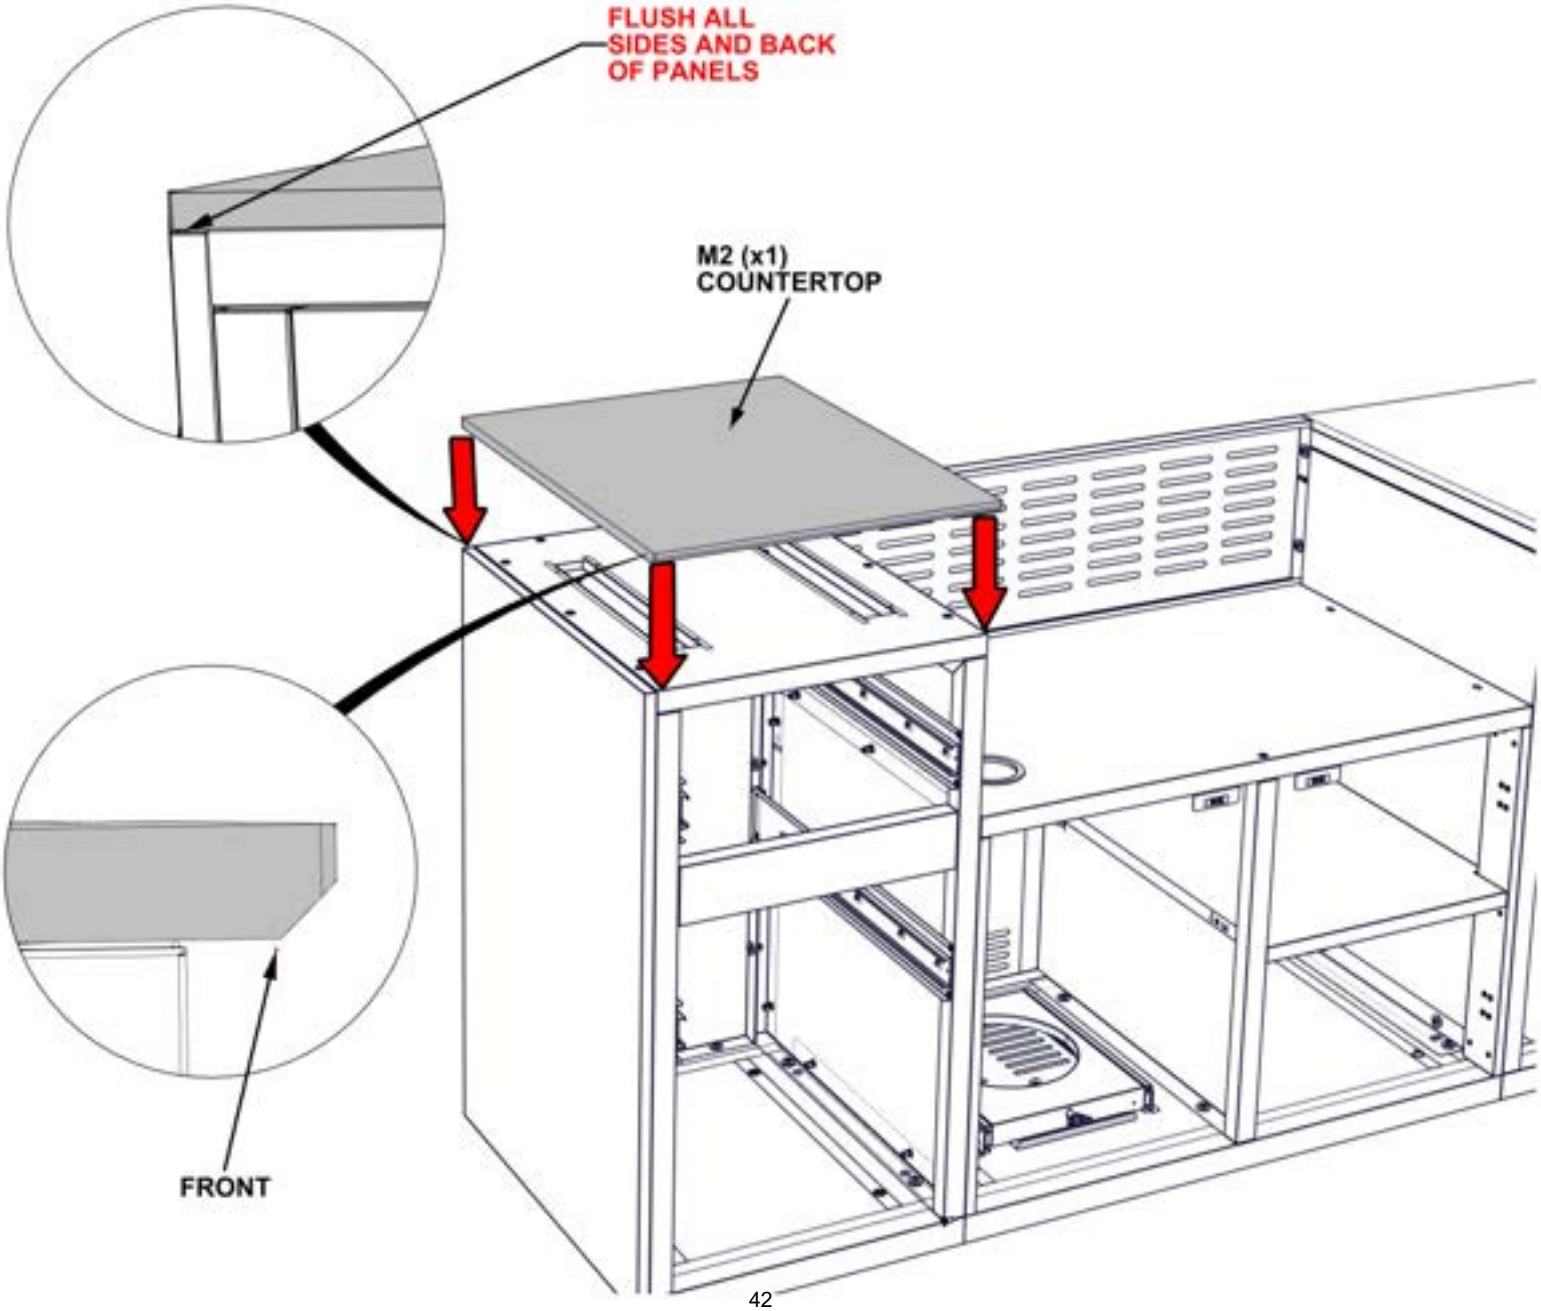


STEP 27 - COUNTERTOP ASSEMBLY

Qty	PartNo	Description
4	H101053	STEEL WASHER 6x20
4	H101292	TORX PAN HEAD 1/4-20x13/32"
4	H101054	SEALANT WASHER


- MAKE SURE YOU ARE USING THE CORRECT HARDWARE FOR THIS STEP.
- ONCE COUNTERTOP IS IN PLACE, IT IS RECOMMENDED TO COVER WITH A PIECE OF CARDBOARD OR FOAM UNTIL ASSEMBLY IS FINISHED TO PREVENT DAMAGE.
- DO NOT USE COUNTERTOP SURFACE AS A WORK BENCH.

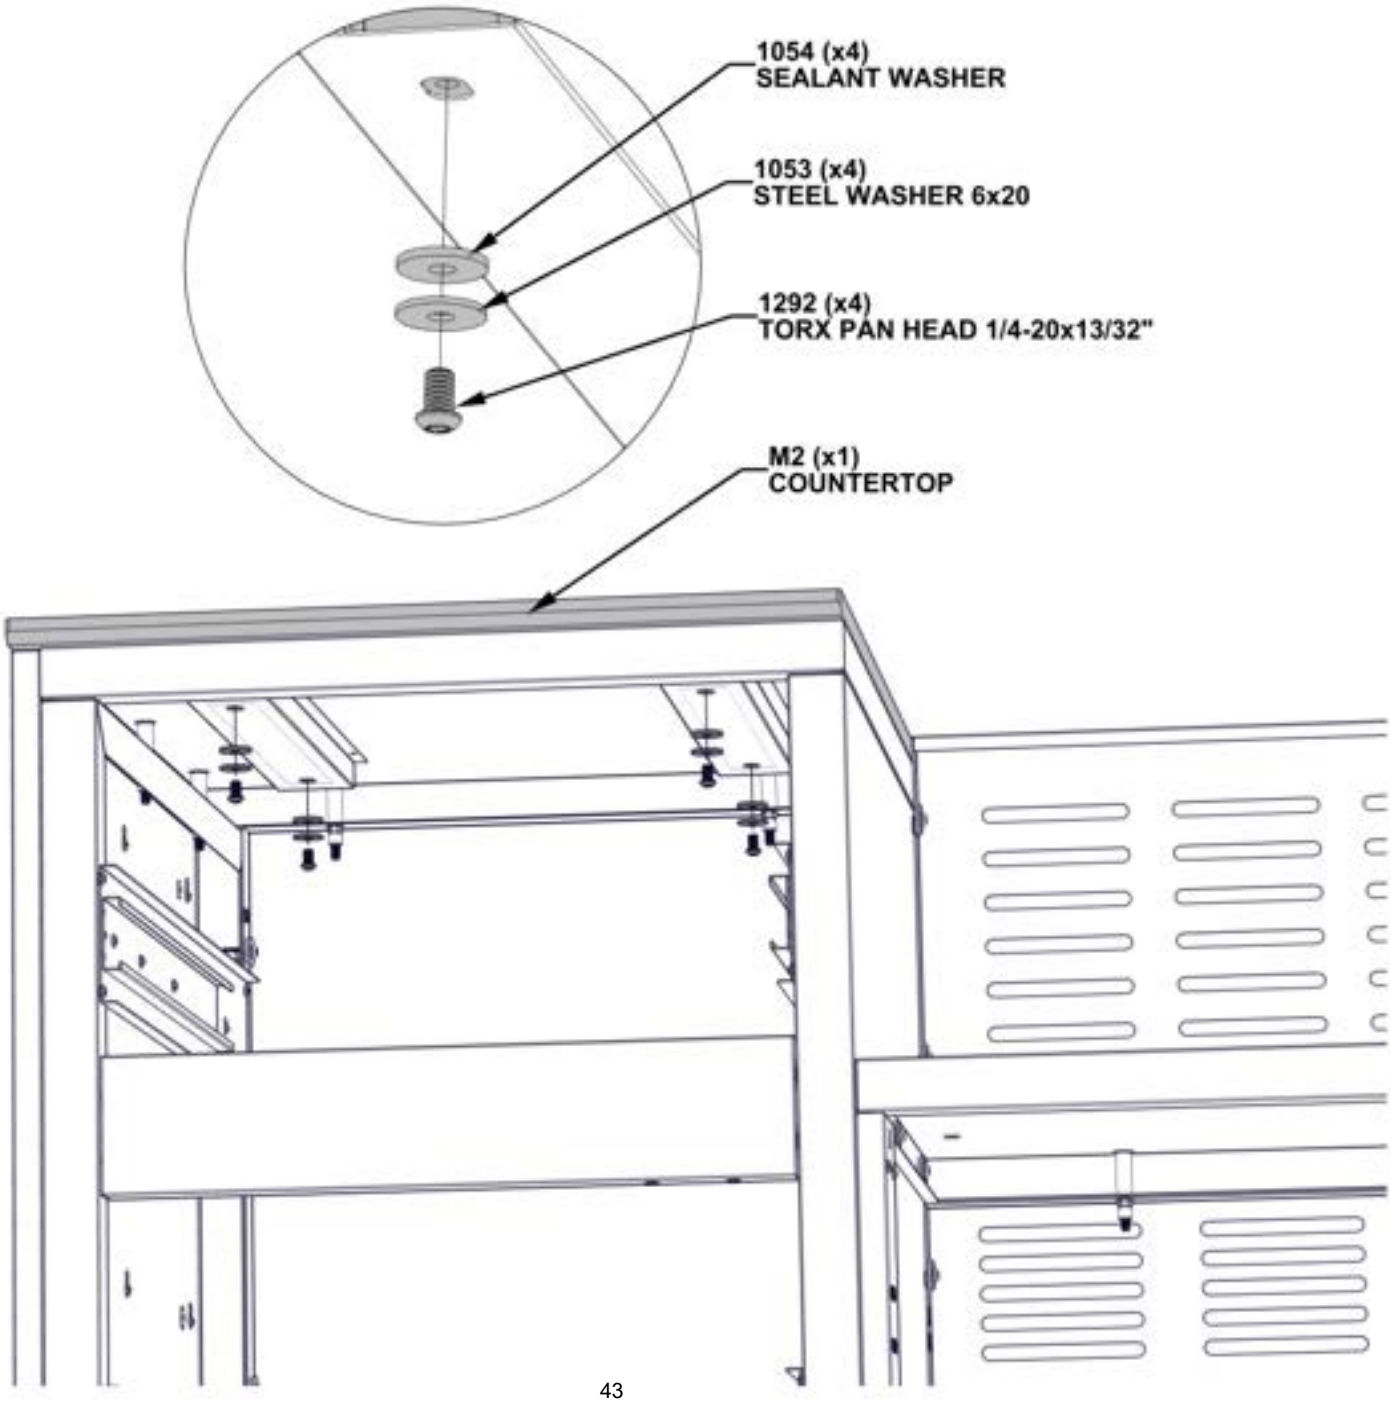

STEP 28A - TRASH CAN CABINET DRAWER ASSEMBLY

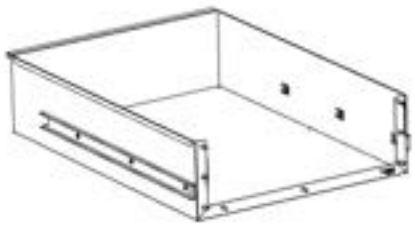


D5 DRAWER BODY ASSEMBLY - A4M06434
(x1) 5 1/8"x16 3/16"x21 3/4" (130x410.7x552)

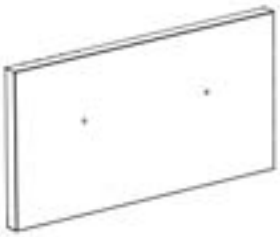

D1 DRAWER PANEL ASSEMBLY - A4M07144
(x1) 15/16"x9 5/8"x18 1/4" (24x245x463)

Qty	PartNo	Description
9	H101289	PAN HEAD SCREW 8-32x1/2" SS

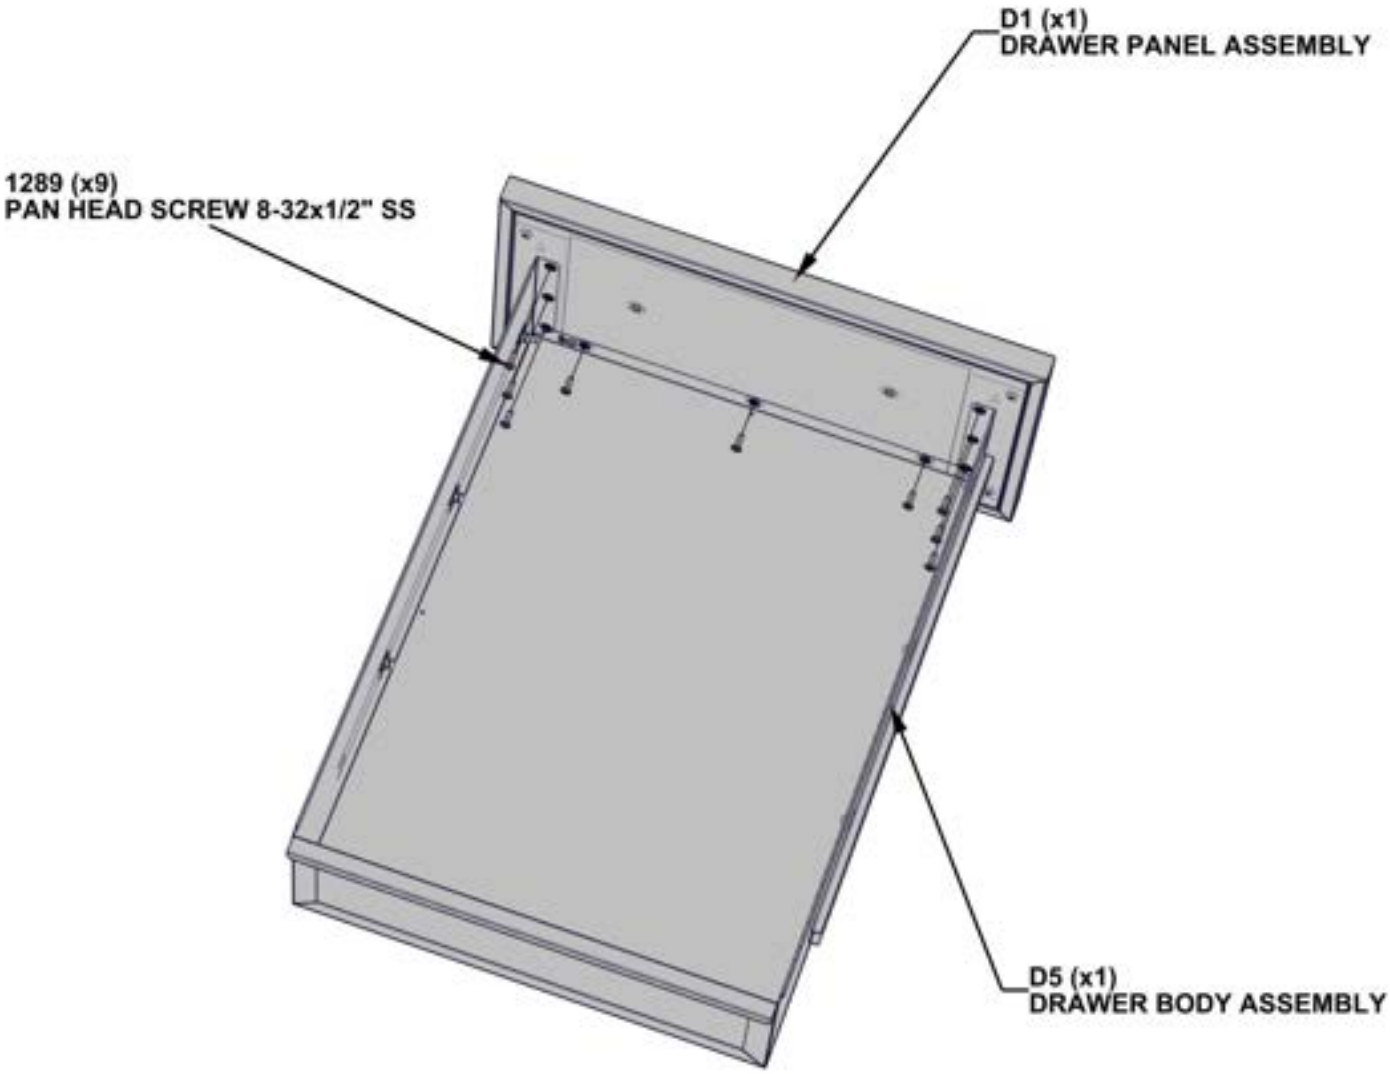


STEP 28B - TRASH CAN CABINET DRAWER ASSEMBLY



Qty	PartNo	Description
2	H101307	SHOULDER BOLT 8-32x30mm SS

H18 ALUMINUM HANDLE - A4M06591
(x1) 3/4"x1 1/2"x8 7/8" (19x38.5x226)

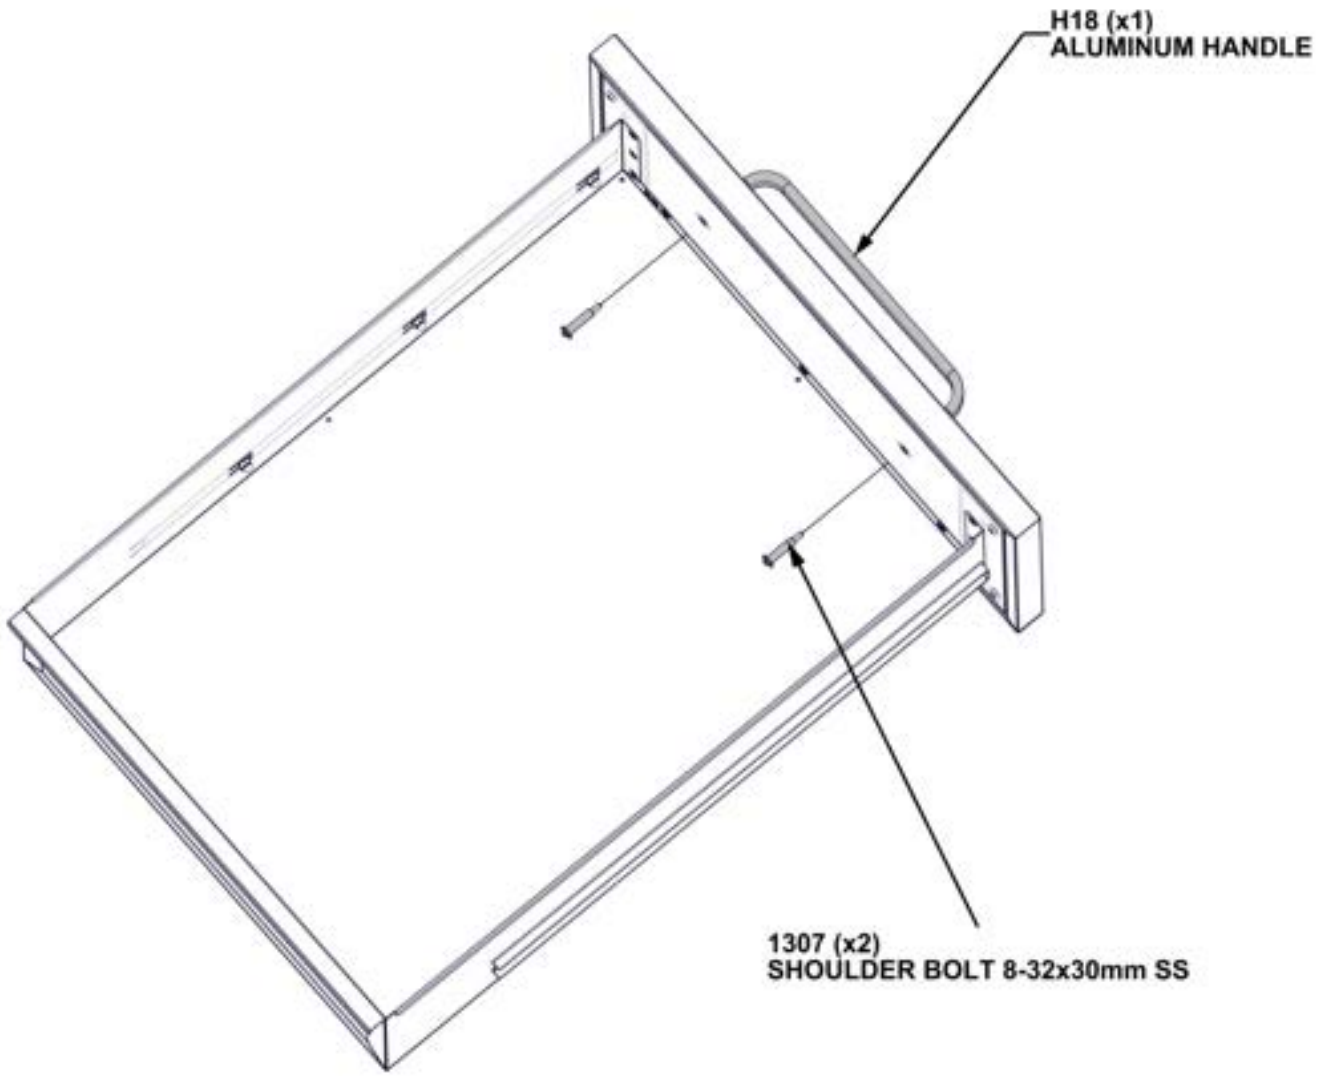


STEP 29 - TRASH CAN CABINET DRAWER ASSEMBLY



DRAWER ASSEMBLY
FROM STEPS 28A - 28B

- ATTACH DRAWER ASSEMBLY BY ALIGNING BOTH ENDS OF FACTORY ASSEMBLED DRAWER SLIDES WITH ONE ANOTHER.
- PRESS TOGETHER UNTIL DRAWER SLIDES CONNECT.

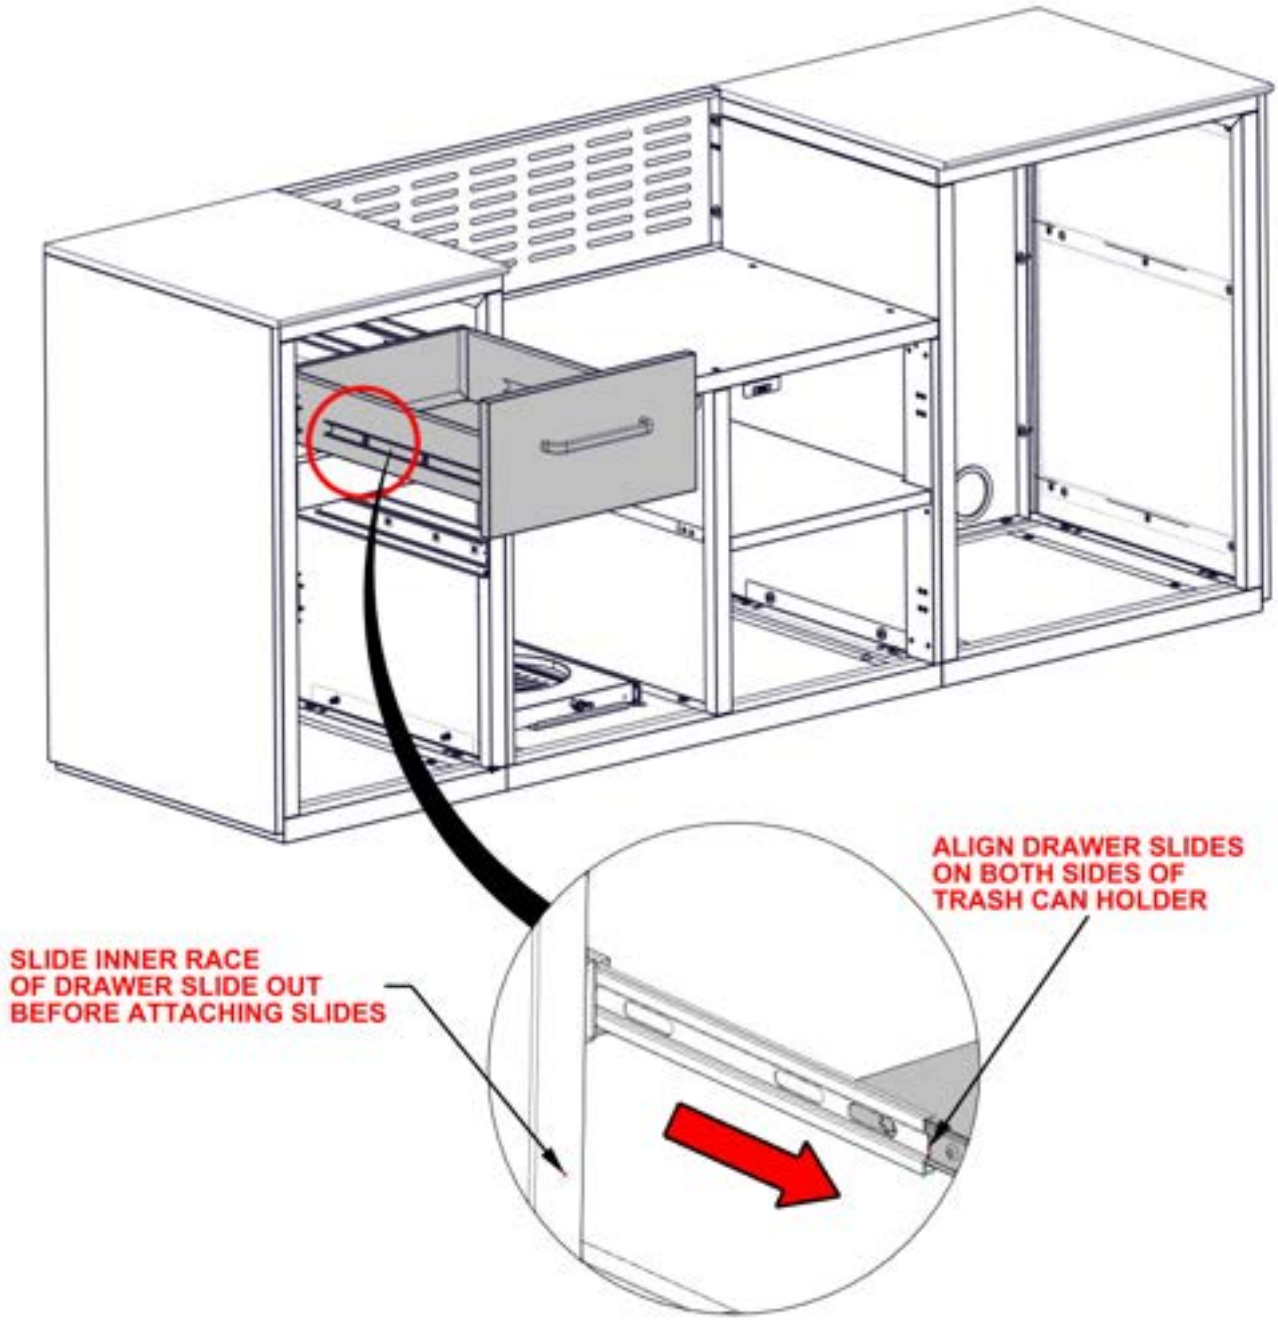

STEP 30A - TRASH CAN ASSEMBLY






Qty	PartNo	Description
6	H101289	PAN HEAD SCREW 8-32x1/2" SS

H12 (x1) TRASH CAN BRACKET ASSEMBLY - A4M06454
1 3/8"x16 1/4"x18 1/16" (35x412.1x458)

A11 (x2) TRIANGLE PANEL - A4M03086
13/16"x13 3/4"x13 3/4" (20x350x350)

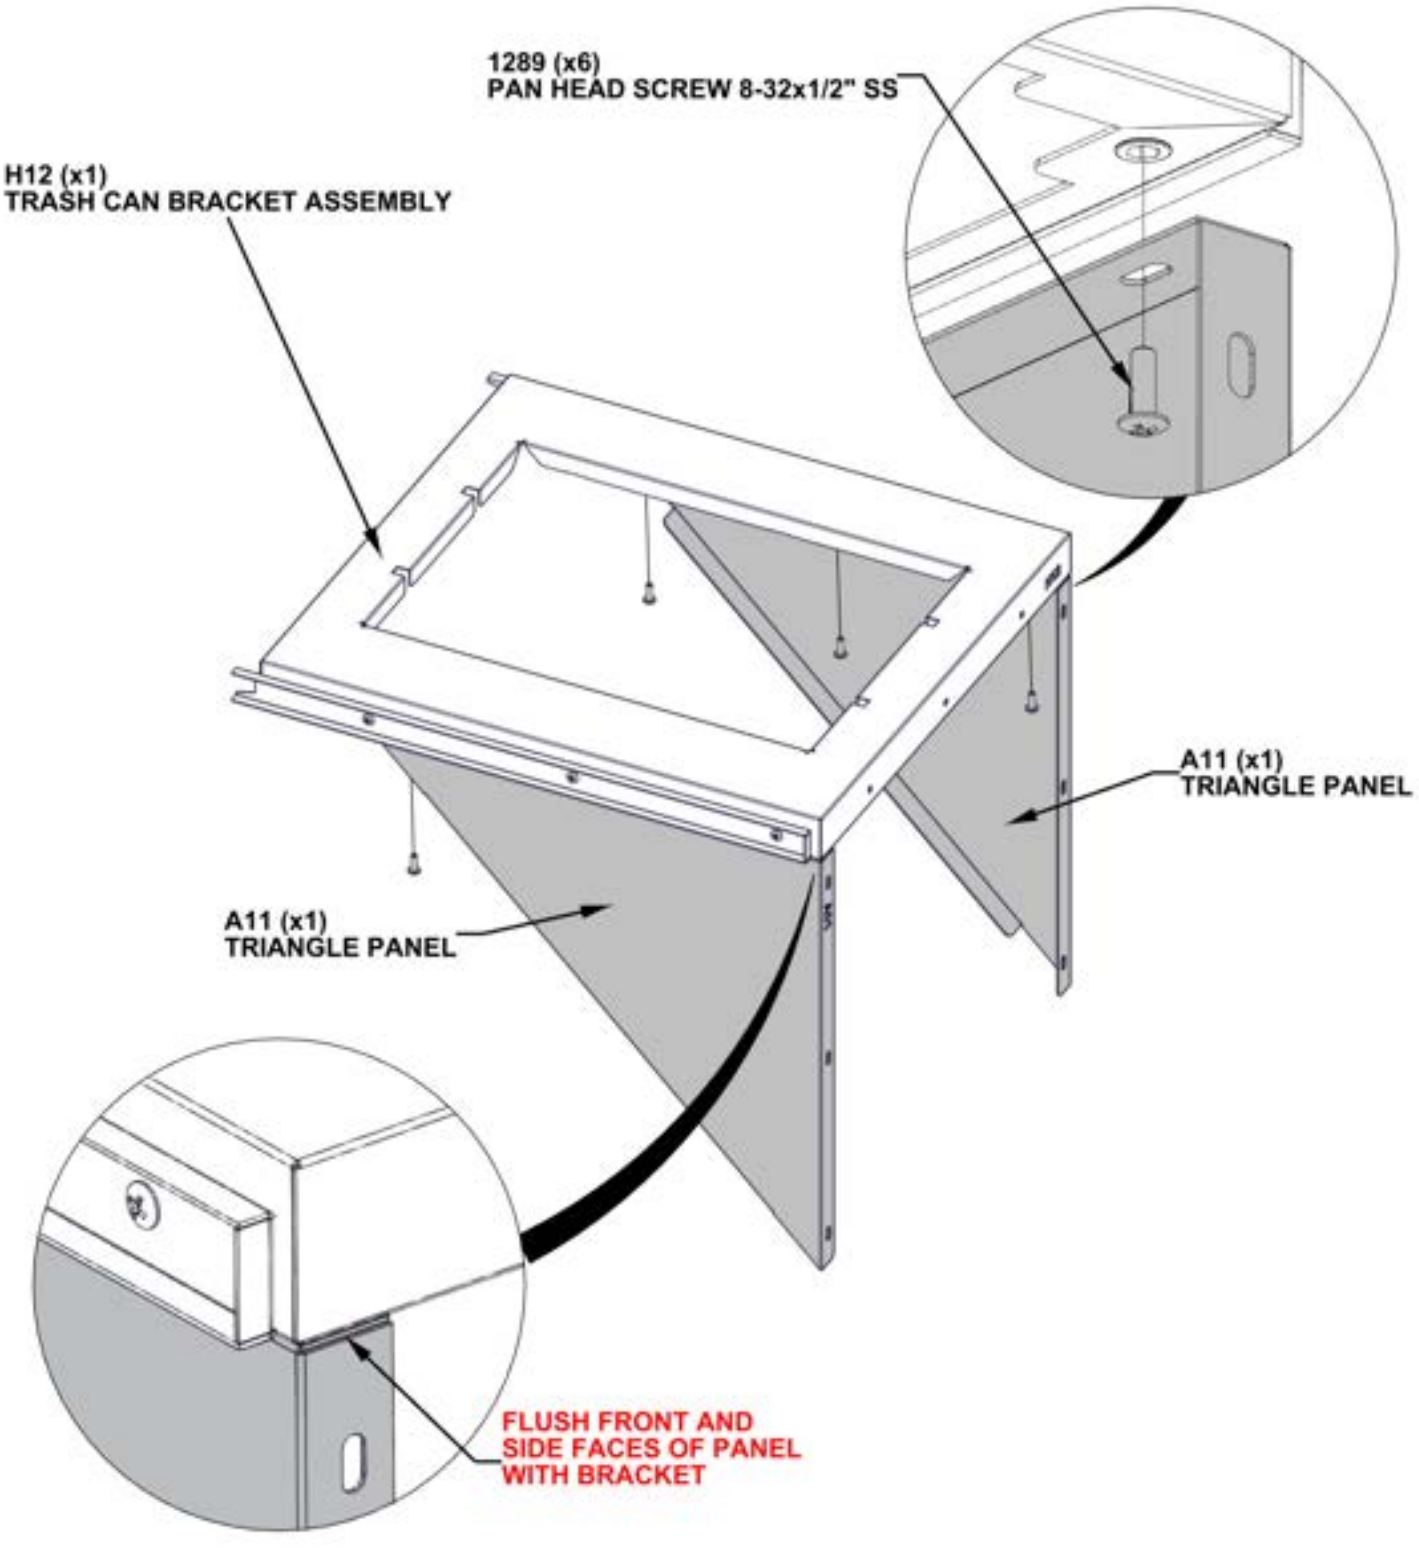


STEP 30B - TRASH CAN ASSEMBLY



D2 DRAWER PANEL ASSEMBLY - A4M07145
(x1) 15/16"x18 1/4"x24 13/16" (24x463x630)

Qty	PartNo	Description
9	H101289	PAN HEAD SCREW 8-32x1/2" SS

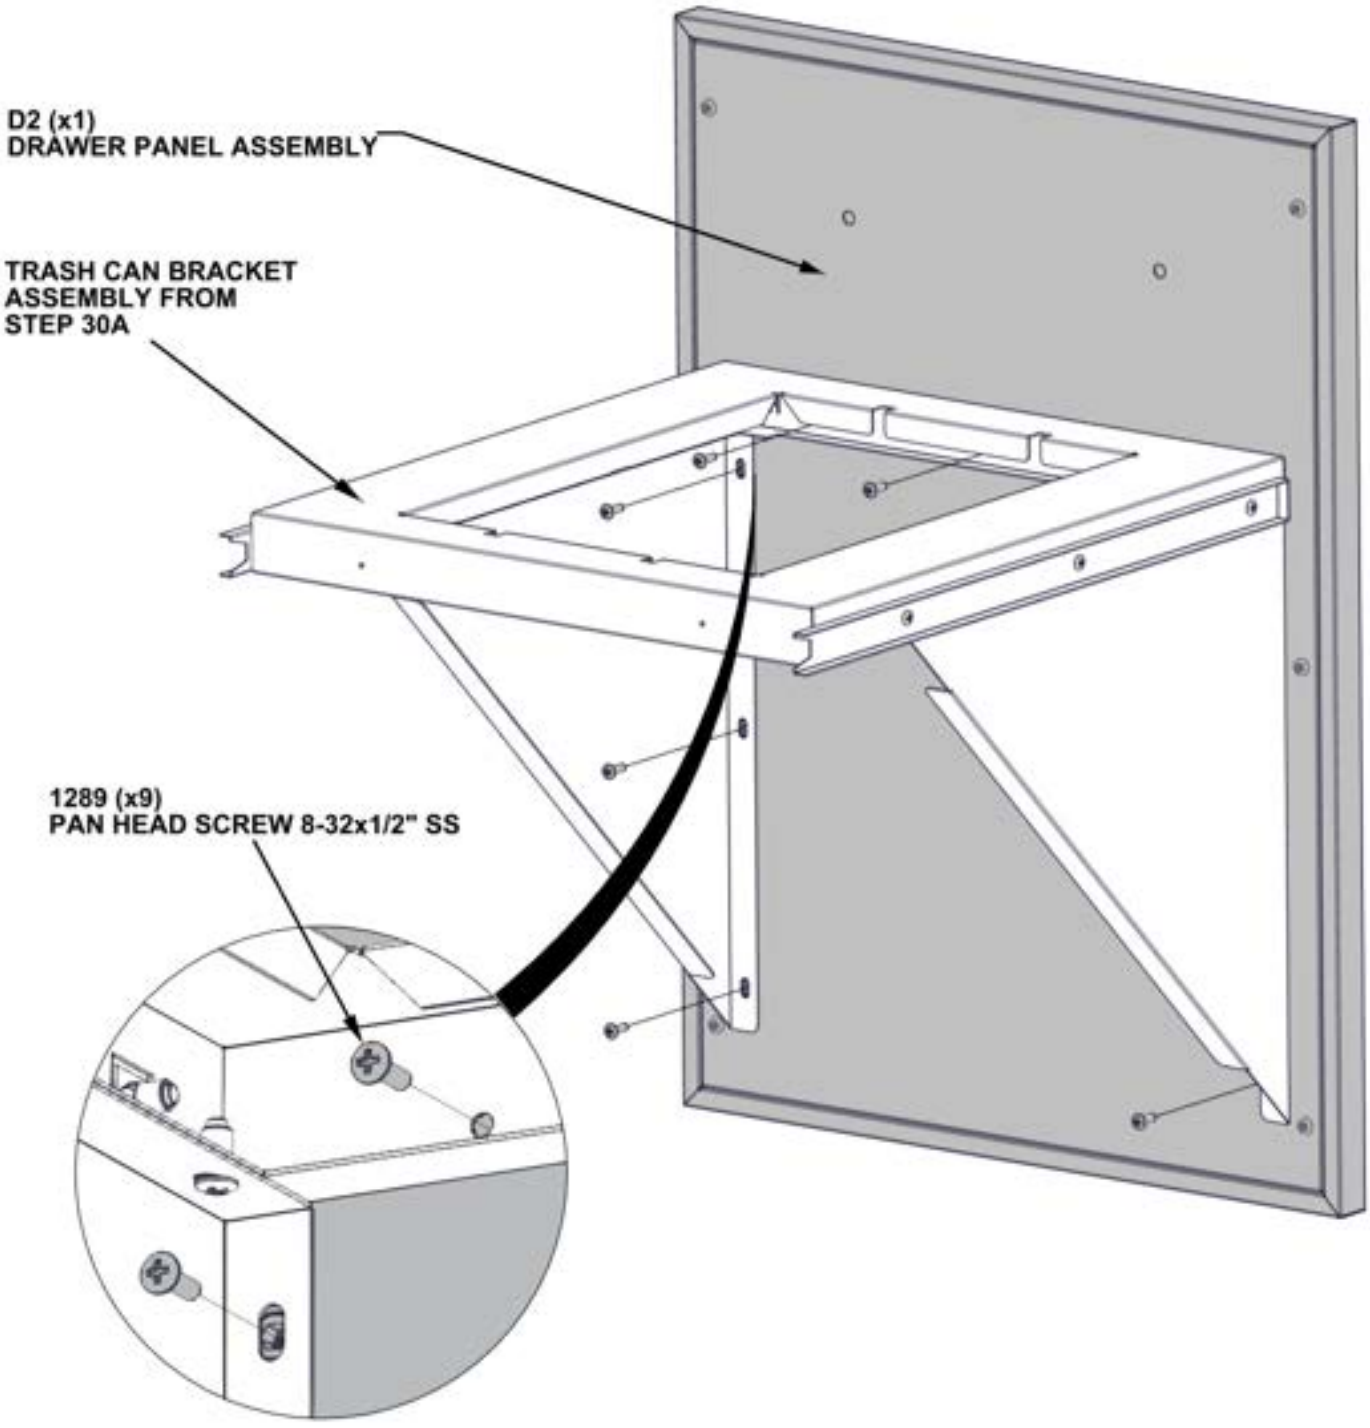


STEP 30C - TRASH CAN ASSEMBLY



Qty	PartNo	Description
2	H101307	SHOULDER BOLT 8-32x30mm SS

H18 ALUMINUM HANDLE - A4M06591
(x1) 3/4"x1 1/2"x8 7/8" (19x38.5x226)

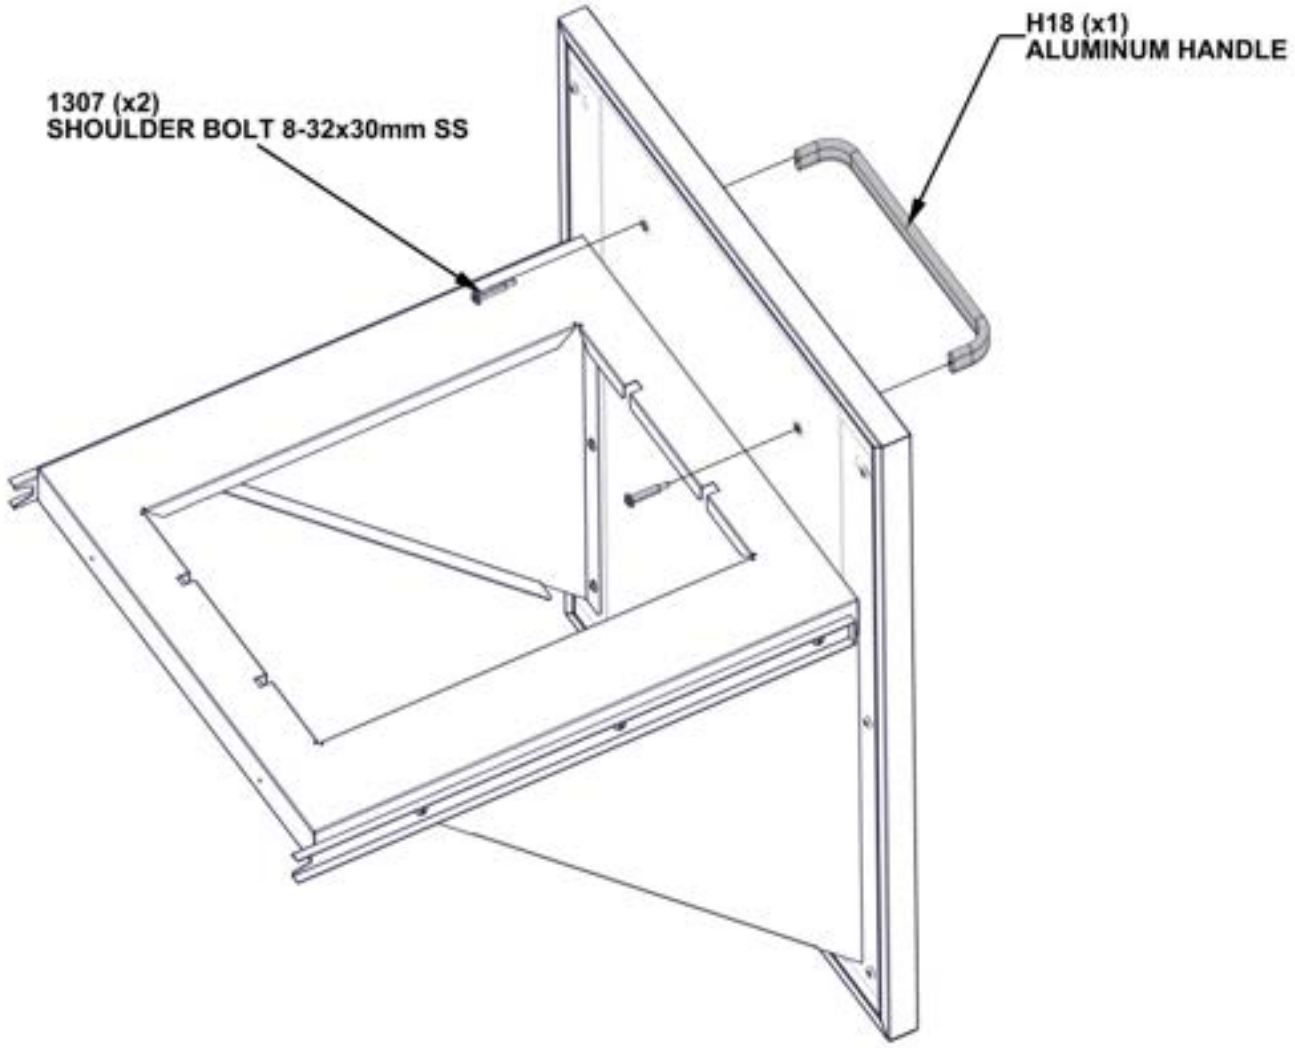


STEP 31 - TRASH CAN ASSEMBLY



TRASH CAN ASSEMBLY
FROM STEPS 30A - 30C

- ATTACH TRASH CAN ASSEMBLY BY ALIGNING BOTH ENDS OF FACTORY ASSEMBLED DRAWER SLIDES WITH ONE ANOTHER.
- PRESS TOGETHER UNTIL DRAWER SLIDES CONNECT.

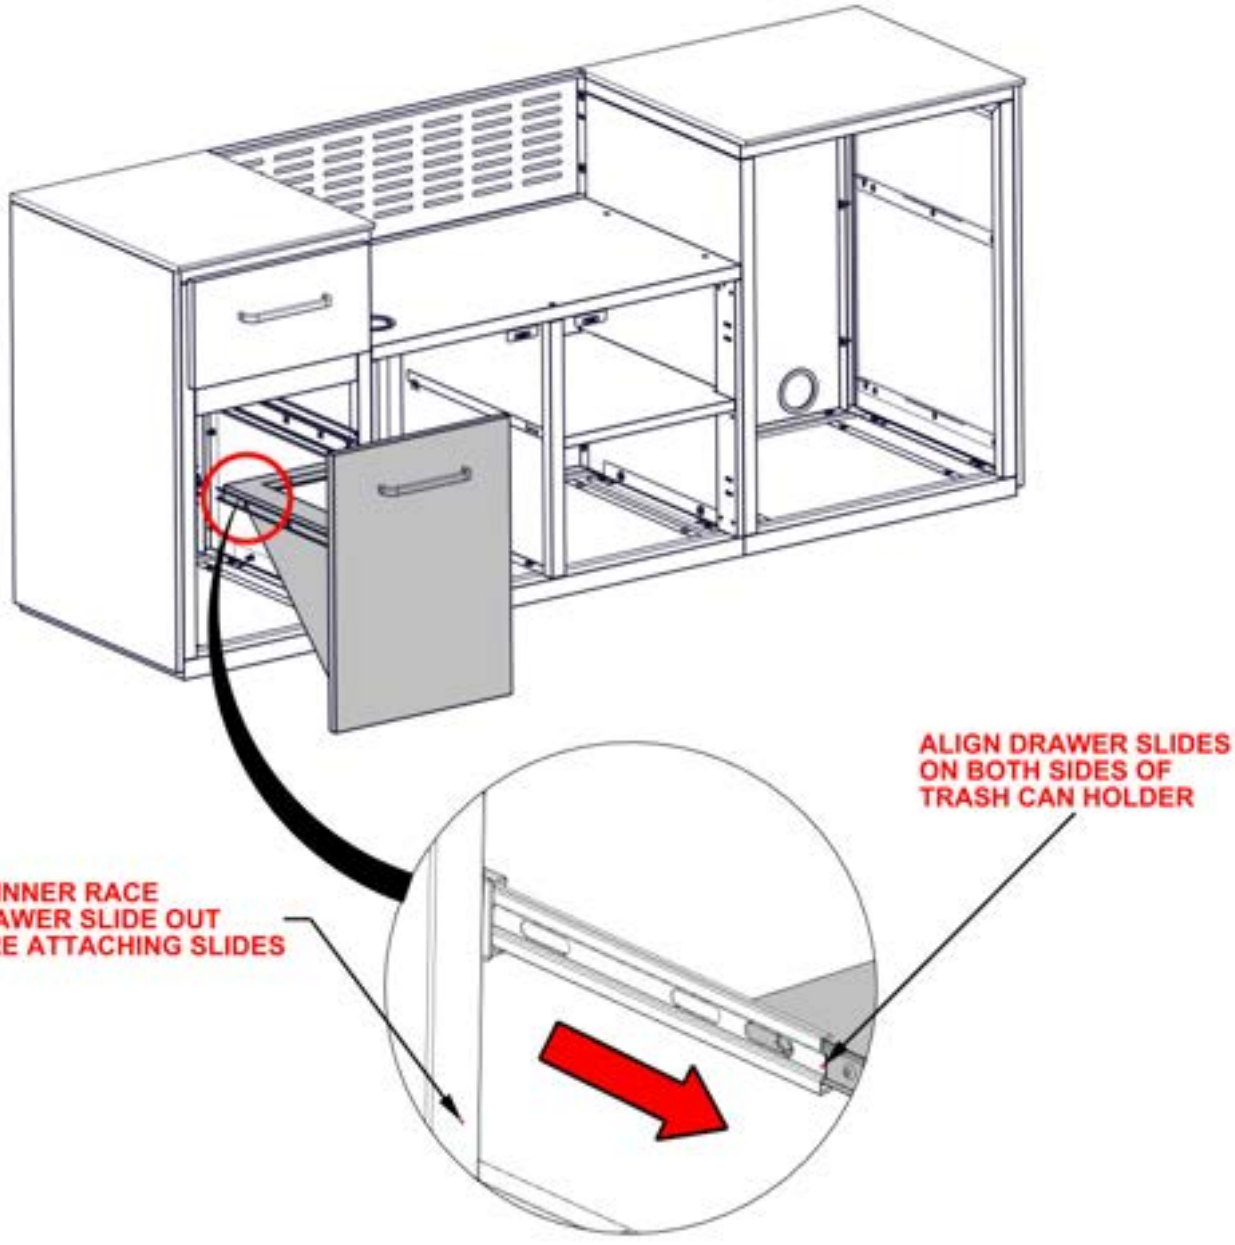

STEP 32A - DOOR ASSEMBLY



D4 RIGHT DOOR ASSEMBLY - A4M07147
(x1) 15/16"x19"x24 13/16" (24x483x630)

Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW




D3 LEFT DOOR ASSEMBLY - A4M07146
(x1) 15/16"x19"x24 13/16" (24x483x630)



3025 FULL OVERLAY HINGE - A4M03025
(x4)

- INSTALL CABINET HINGES TO TWO DOORS.

- DO NOT OVERTIGHTEN HARDWARE.
- REPEAT FOR ALL DOORS.

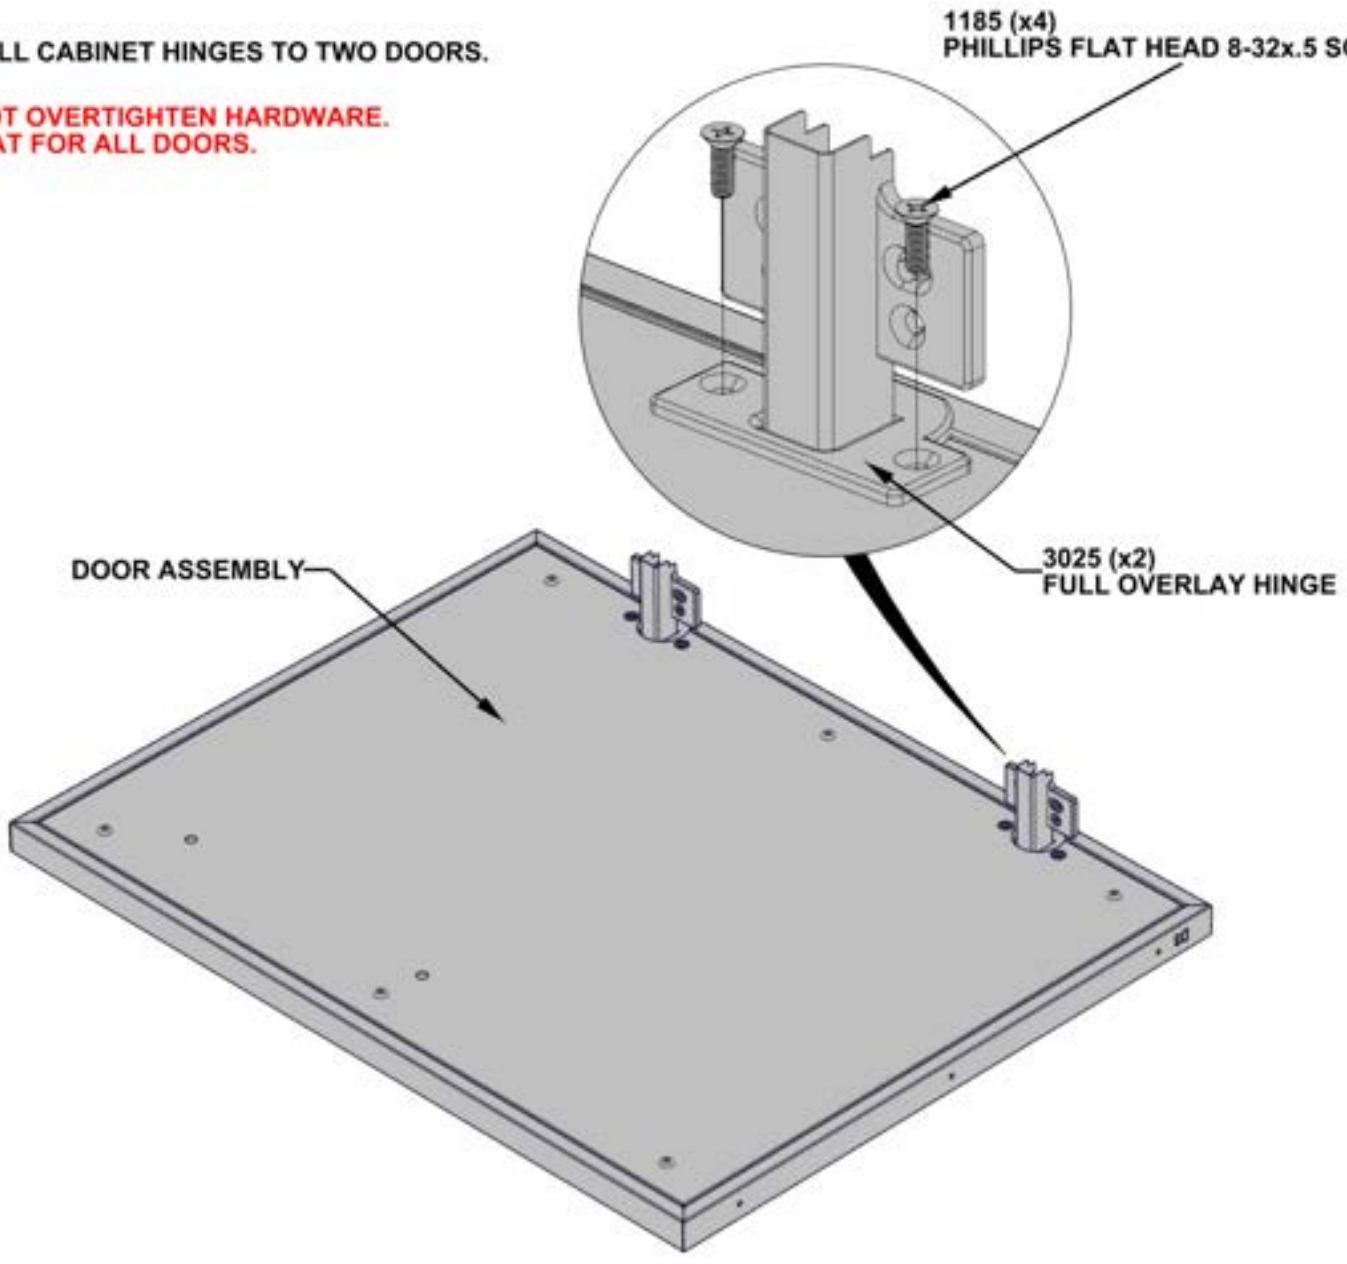


STEP 32B - DOOR ASSEMBLY



Qty	PartNo	Description
4	H101307	SHOULDER BOLT 8-32x30mm SS

H18 (x2) ALUMINUM HANDLE - A4M06591
8 7/8"x1 1/2"x3/4" (19x38.5x226)

- REPEAT THIS STEP TWICE.

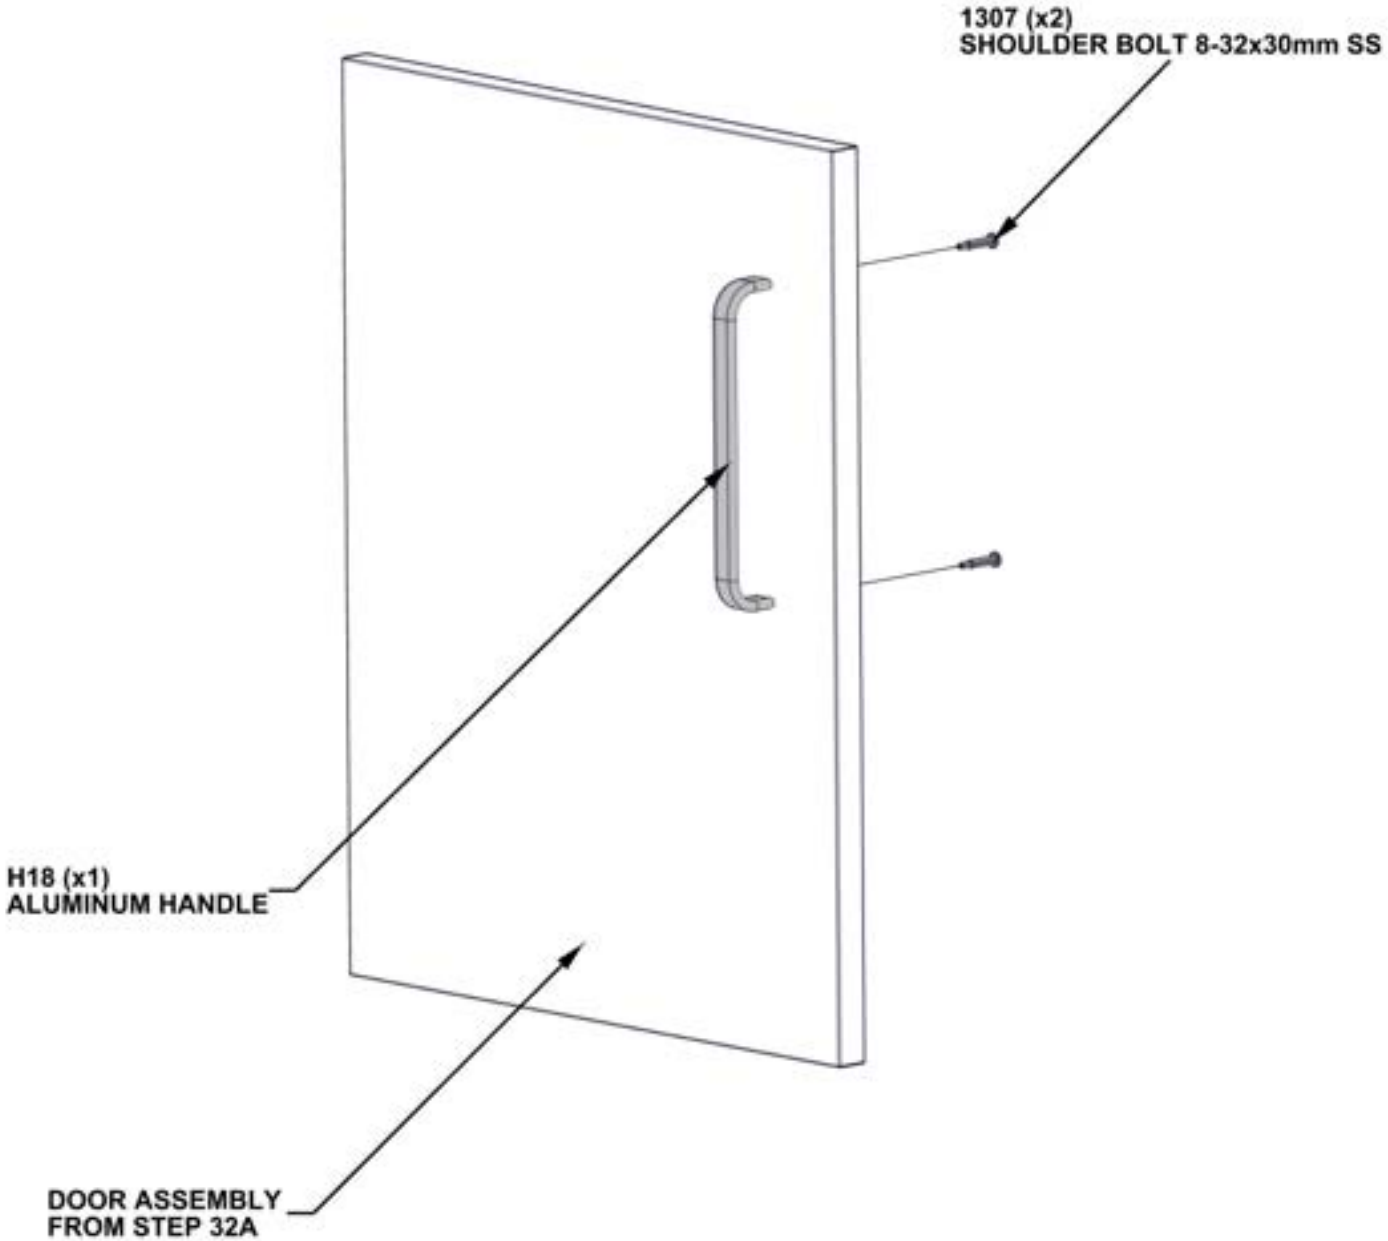


STEP 32C - DOOR ASSEMBLY



D3 DOOR ASSEMBLY FROM STEPS 32A-32B

Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.

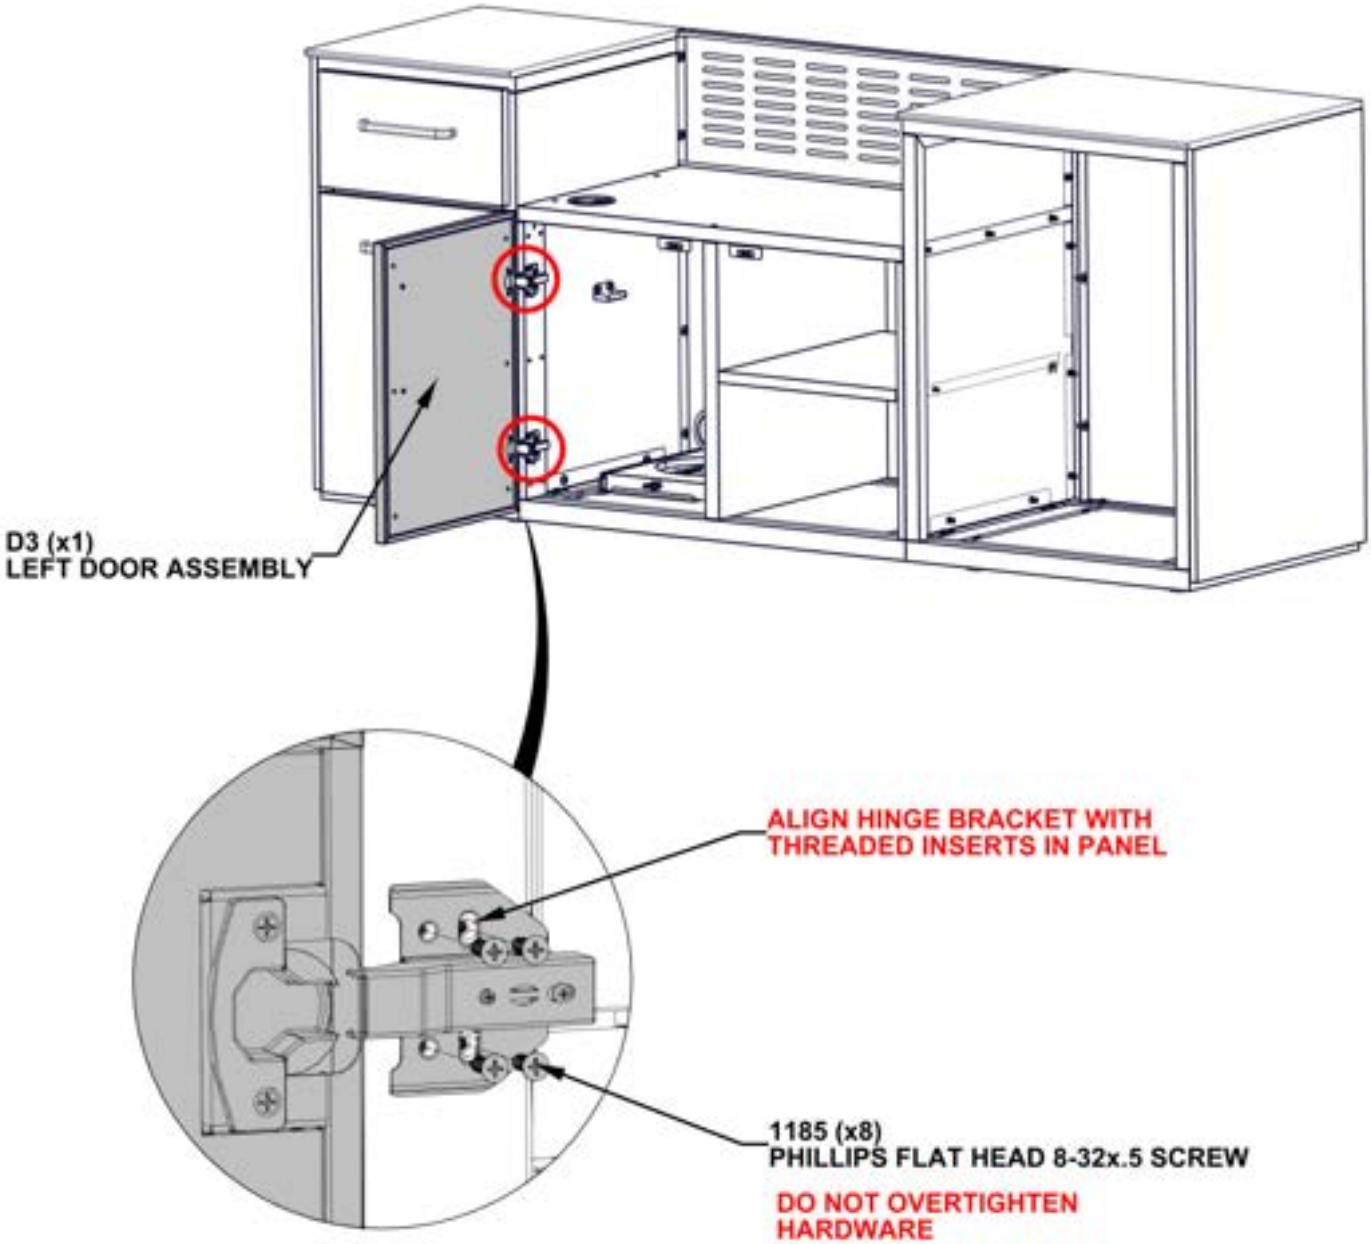


STEP 32D - CABINET DOOR ATTACHMENT



Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW


D4 DOOR ASSEMBLY FROM STEPS 32A-32B

- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.

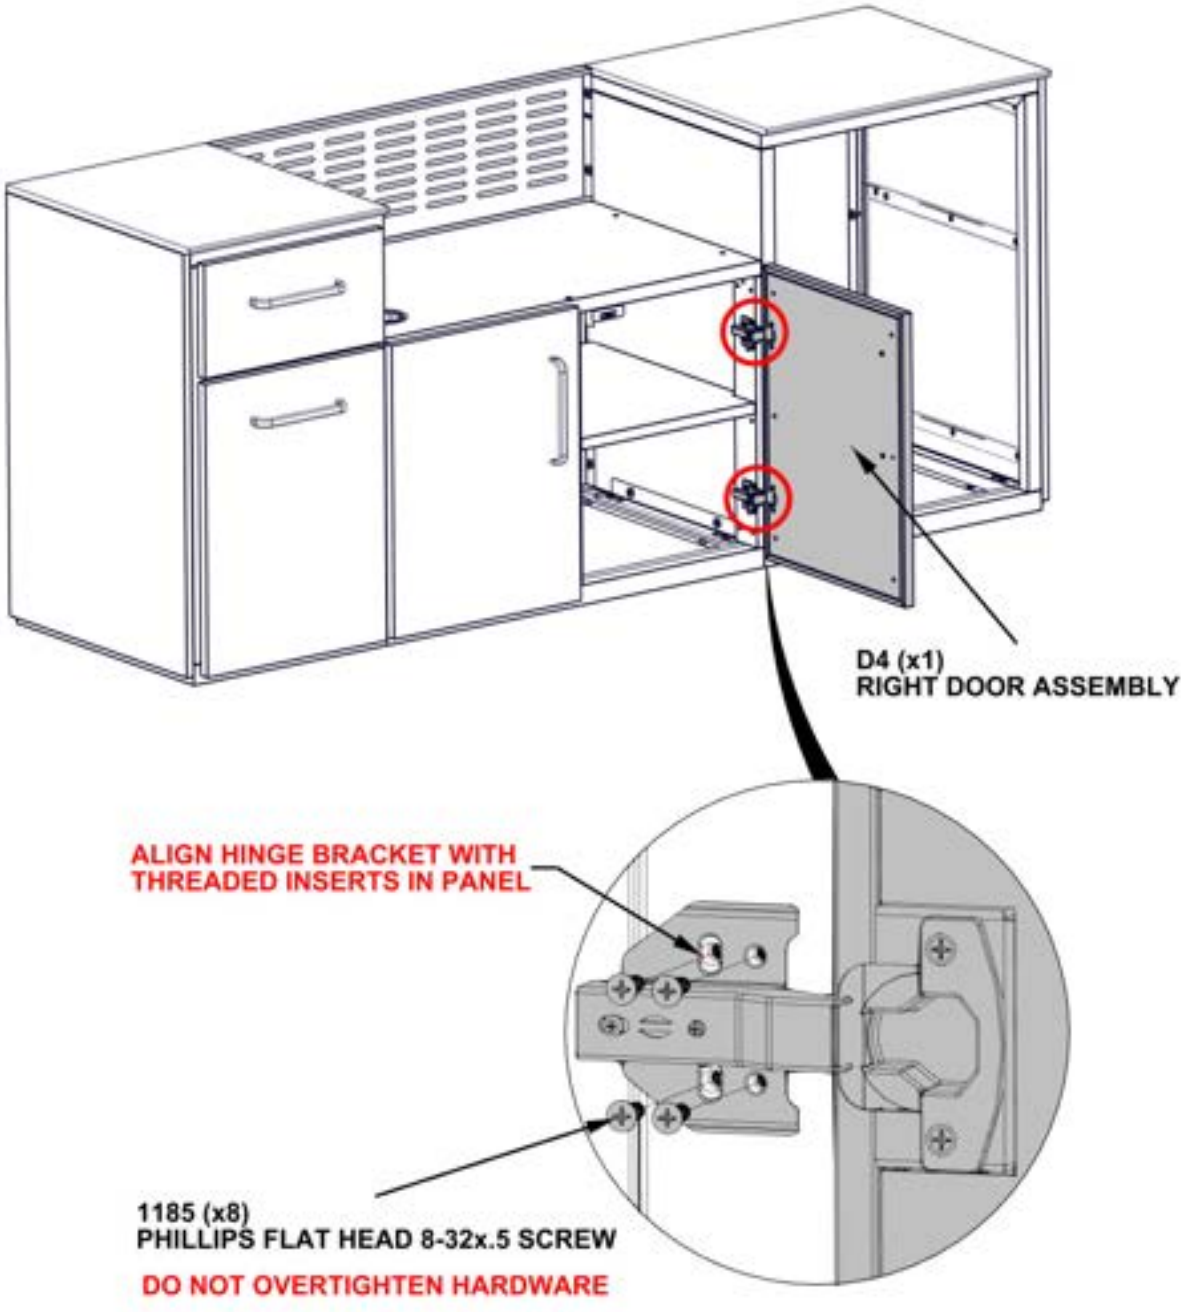

STEP 33 - CABINET DOOR ADJUSTMENT (AS NEEDED)

- ADJUST HINGES (AS NEEDED) SO THAT THE GAP AROUND ALL DOORS IS THE SAME AND THERE IS NO INTERFERENCE BETWEEN DOORS AND CABINETS.
- ADJUST MAGNET CATCH BRACKETS AS NEEDED.

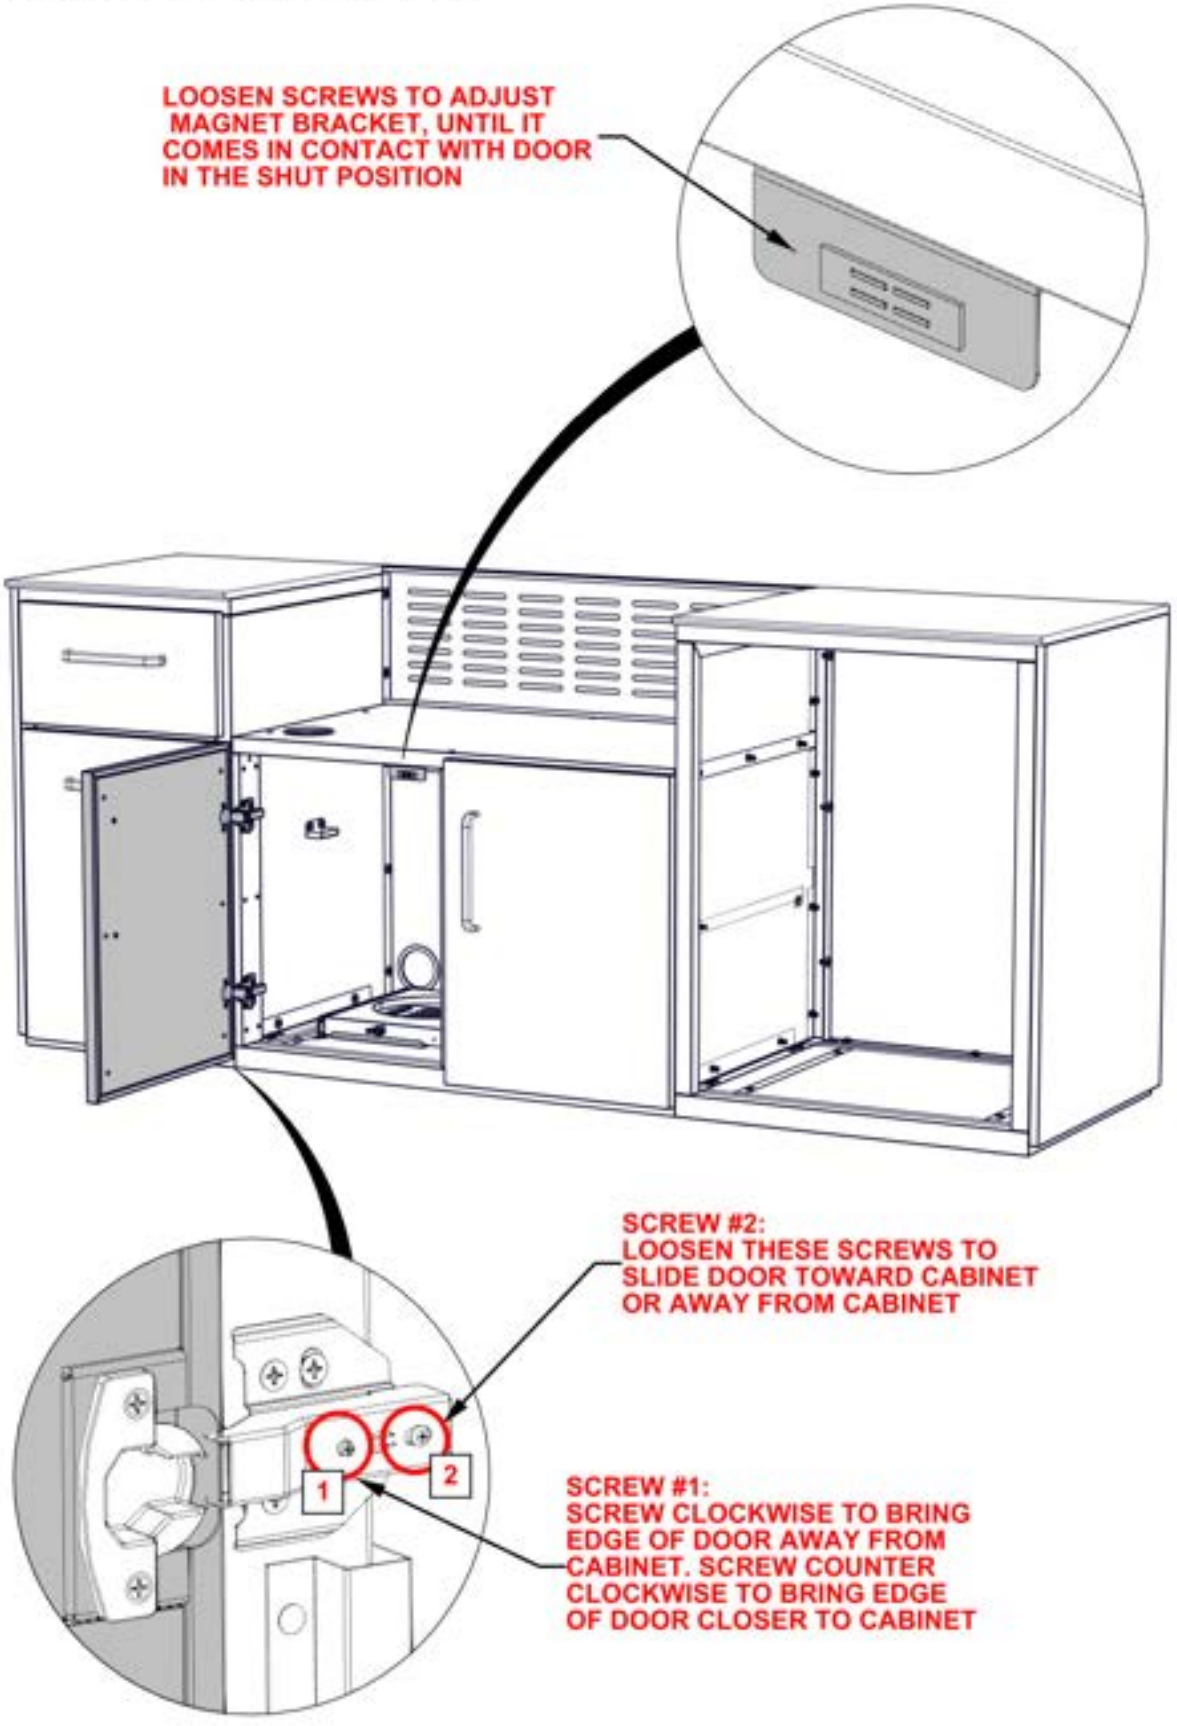


OUTDOOR KITCHEN FRIDGE



9240162 OUTDOOR KITCHEN FRIDGE - RIGHT OPEN (x1)


- FOR INSTALLATION OF OUTDOOR KITCHEN FRIDGE, REFER TO PAGES IN THIS INSTRUCTION MANUAL.
- FOR DETAILED INFORMATION OF OUTDOOR KITCHEN FRIDGE, REFER TO ASSEMBLY INSTRUCTIONS THAT COME PACKAGED WITH THE OUTDOOR KITCHEN FRIDGE.
- FOLLOW DIRECTIONS FOR PROPER CARE AND USE.

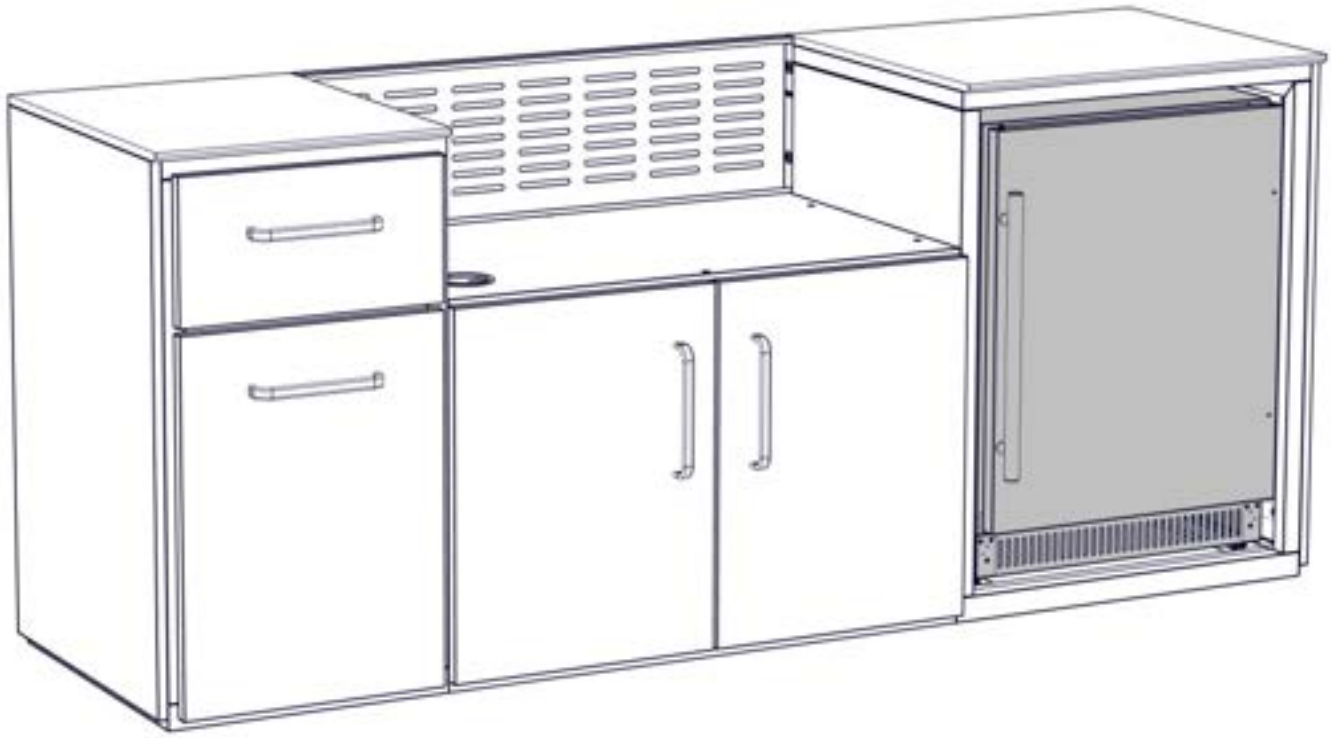


OUTDOOR KITCHEN FRIDGE

- CAREFULLY SLIDE FRIDGE INTO CABINET OPENING MAKING SURE THAT THE ELECTRICAL CORD IS ROUTED THROUGH THE HOLES IN THE SIDE PANELS OF THE CABINET.


- IF FRIDGE IS NOT IN UPRIGHT POSITION, PLEASE LET SIT FOR 24 HRS BEFORE PLUGGING INTO RECEPTACLE.
- FRIDGE CANNOT BE CONNECTED TO ELECTRICAL ENCLOSURE ATTACHED TO OUTDOOR STRUCTURE.

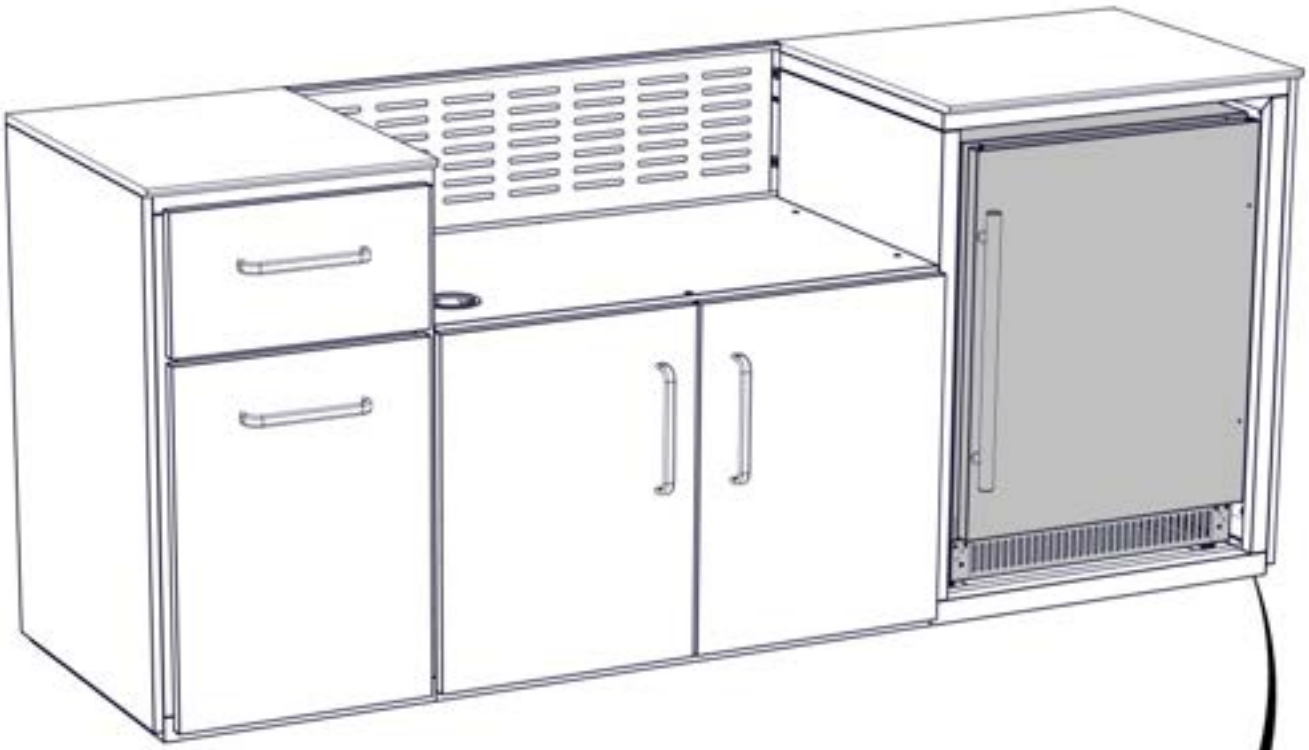

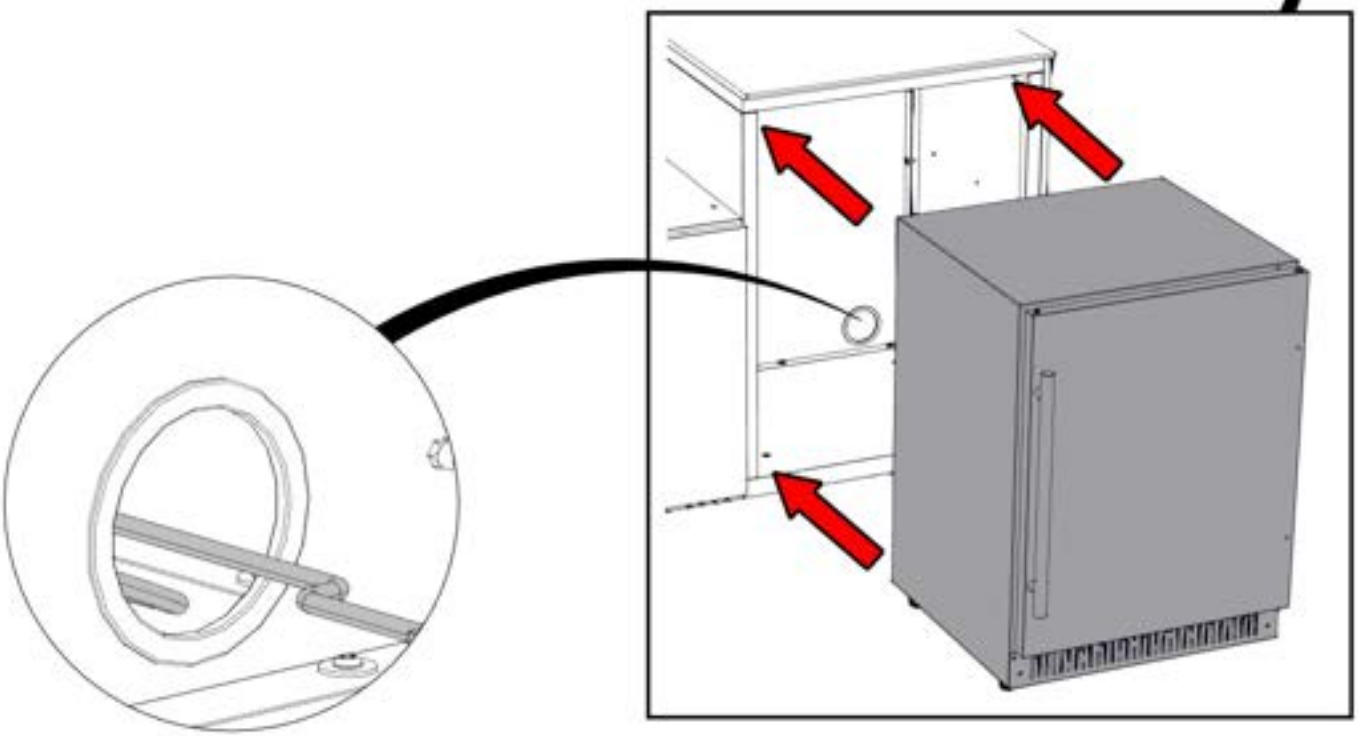

OUTDOOR KITCHEN FRIDGE


- ALIGN FEET ON FRIDGE UNIT SO THAT IT IS LEVEL AND DOES NOT TILT.
- TURN FEET CLOCKWISE TO EXTEND THEM AND COUNTERCLOCKWISE TO SHORTEN. REPEAT THIS FOR ALL FOUR FRIDGE FEET AS NEEDED TO LEVEL.

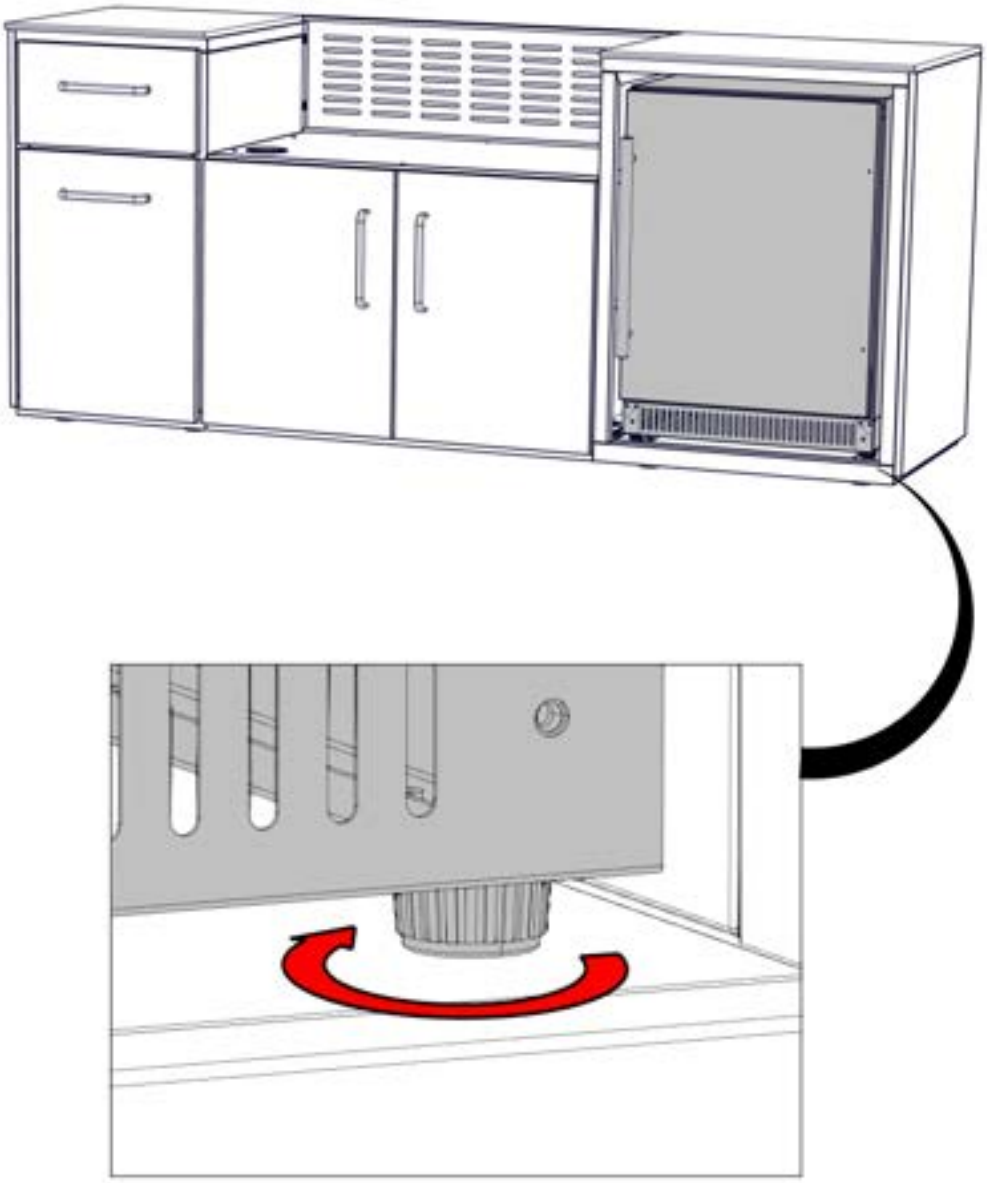

OUTDOOR KITCHEN APPLIANCE COVER INSTALLATION

- APPLIANCE COVERS WILL COME PACKAGED WITH EACH RESPECTIVE APPLIANCE.
- CABINET COVER WILL HAVE CUTOUTS FOR EACH APPLIANCE LOCATION.

- INSTALL CABINET COVER OVER FULLY ASSEMBLED KITCHEN PACKAGE.
  NOTE: COVER SHOULD GO ON AFTER APPLIANCES ARE INSTALLED.
- INSTALL INDIVIDUAL APPLIANCE COVERS OVER EACH APPLIANCE, MAKING SURE FLAPS ARE ON THE OUTSIDE OF THE CABINET COVER, AND VELCRO STRIPS ARE FIRMLY CONNECTED.

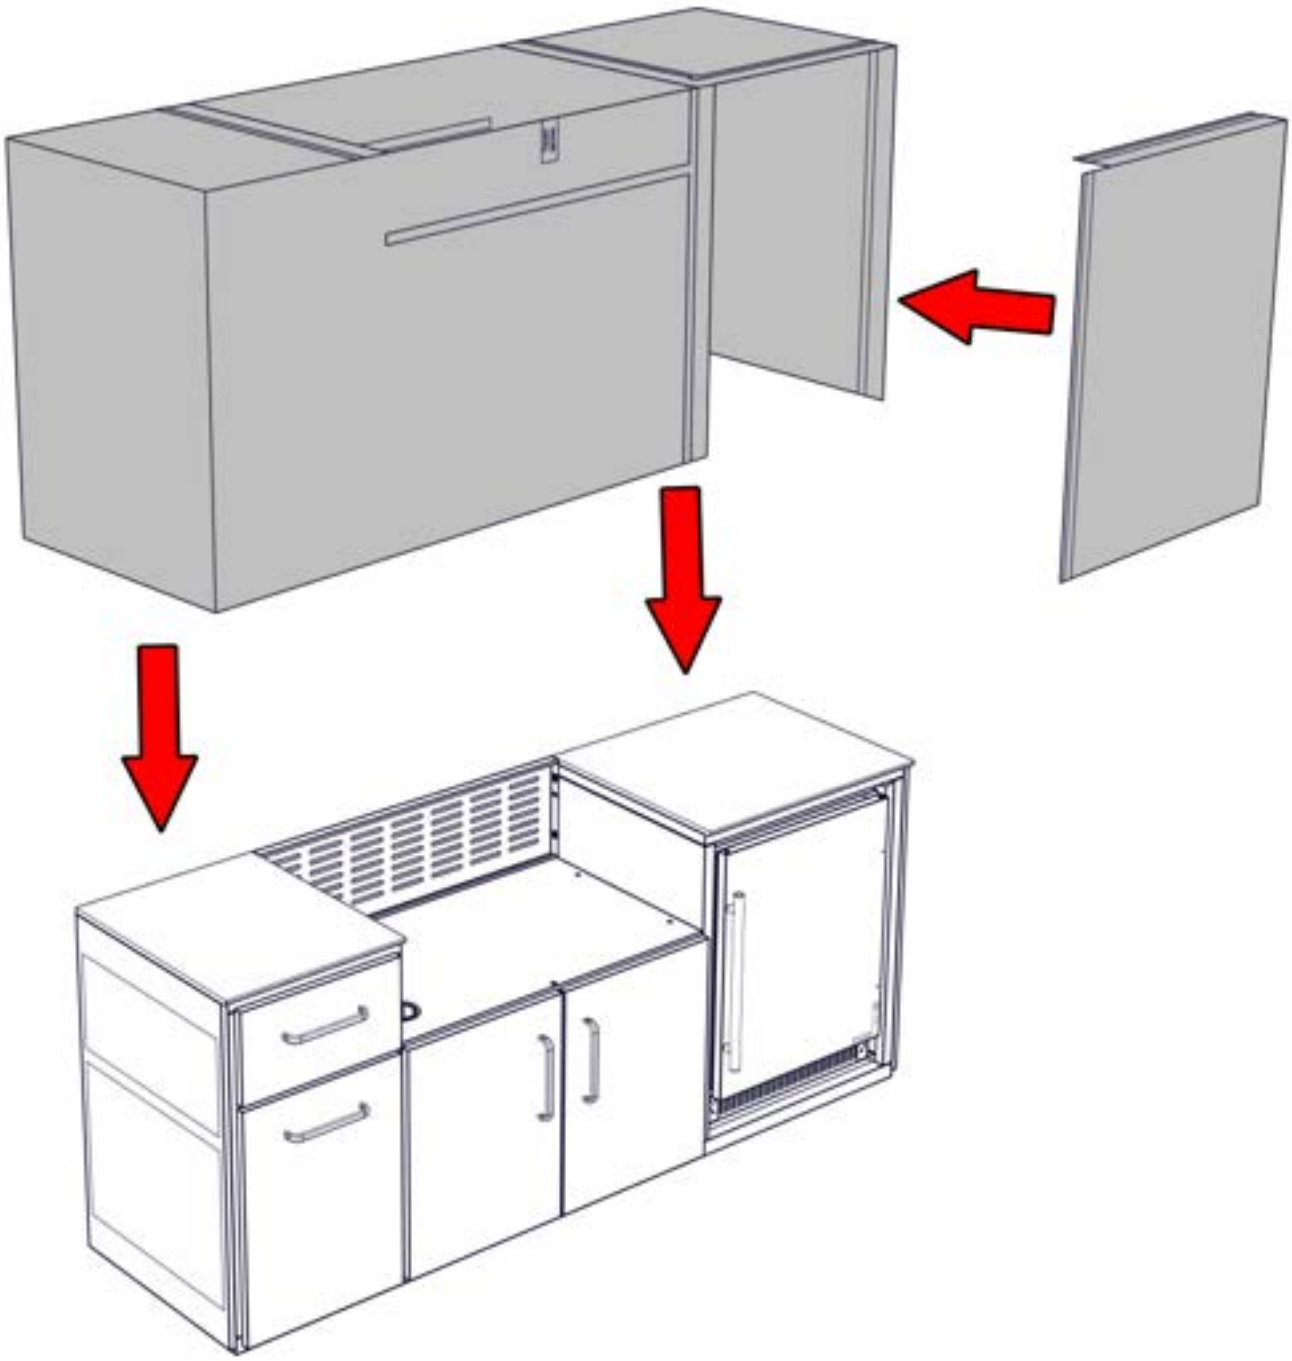

FOR APPLIANCE INSTALLATION REFER TO ASSEMBLY INSTRUCTIONS THAT COME PACKAGED WITH EACH INDIVIDUAL APPLIANCE. FOLLOW DIRECTIONS FOR PROPER INSTALLATION.