

RANGE
OUTDOOR LIVING

Manufactured by:
Range Outdoor Living
3305 Airport Drive, Pittsburg, KS 66762
833-689-8428

Basepoint Business Centre: Rivermead Drive, Westlea, Swindon SN5 7EX Phone: 0800-118-2476 J.P. Coenstraat 7, The Bridge, The Hague, 2595 WP, Netherlands Phone: 08005678990

EMORY 12' OUTDOOR KITCHEN ISLAND

MODEL # : 2404458D, 2601154D, 2601116D



Please visit www.rangeoutdoorliving.com
For the most up to date assembly manual, to register your product, or to order replacement parts *Para obtener instrucciones en español, visite*
www.rangeoutdoorliving.com






EASY STEP-BY-STEP
3D INTERACTIVE INSTRUCTIONS
DOWNLOAD THE FREE APP




OWNER'S MANUAL - BASIC SETUP DIMENSIONS & ASSEMBLY NOTES

- Pay close attention to the items needed for each step. Make sure you are using the correct hardware for each step. Using incorrect hardware may result in improper assembly
 - Remember to double check for underground utilities and overhead electrical lines
-

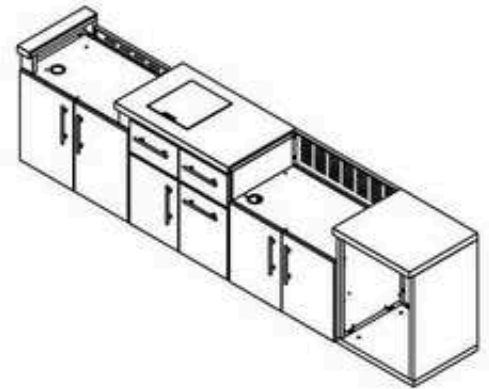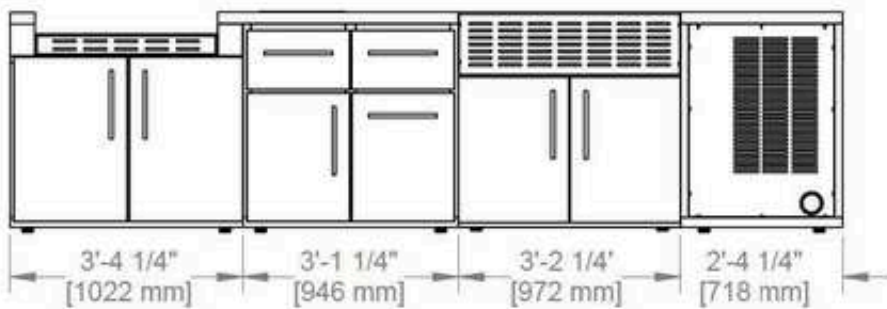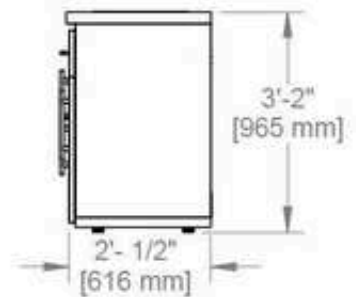

OWNER'S MANUAL - UTILITY LAYOUT

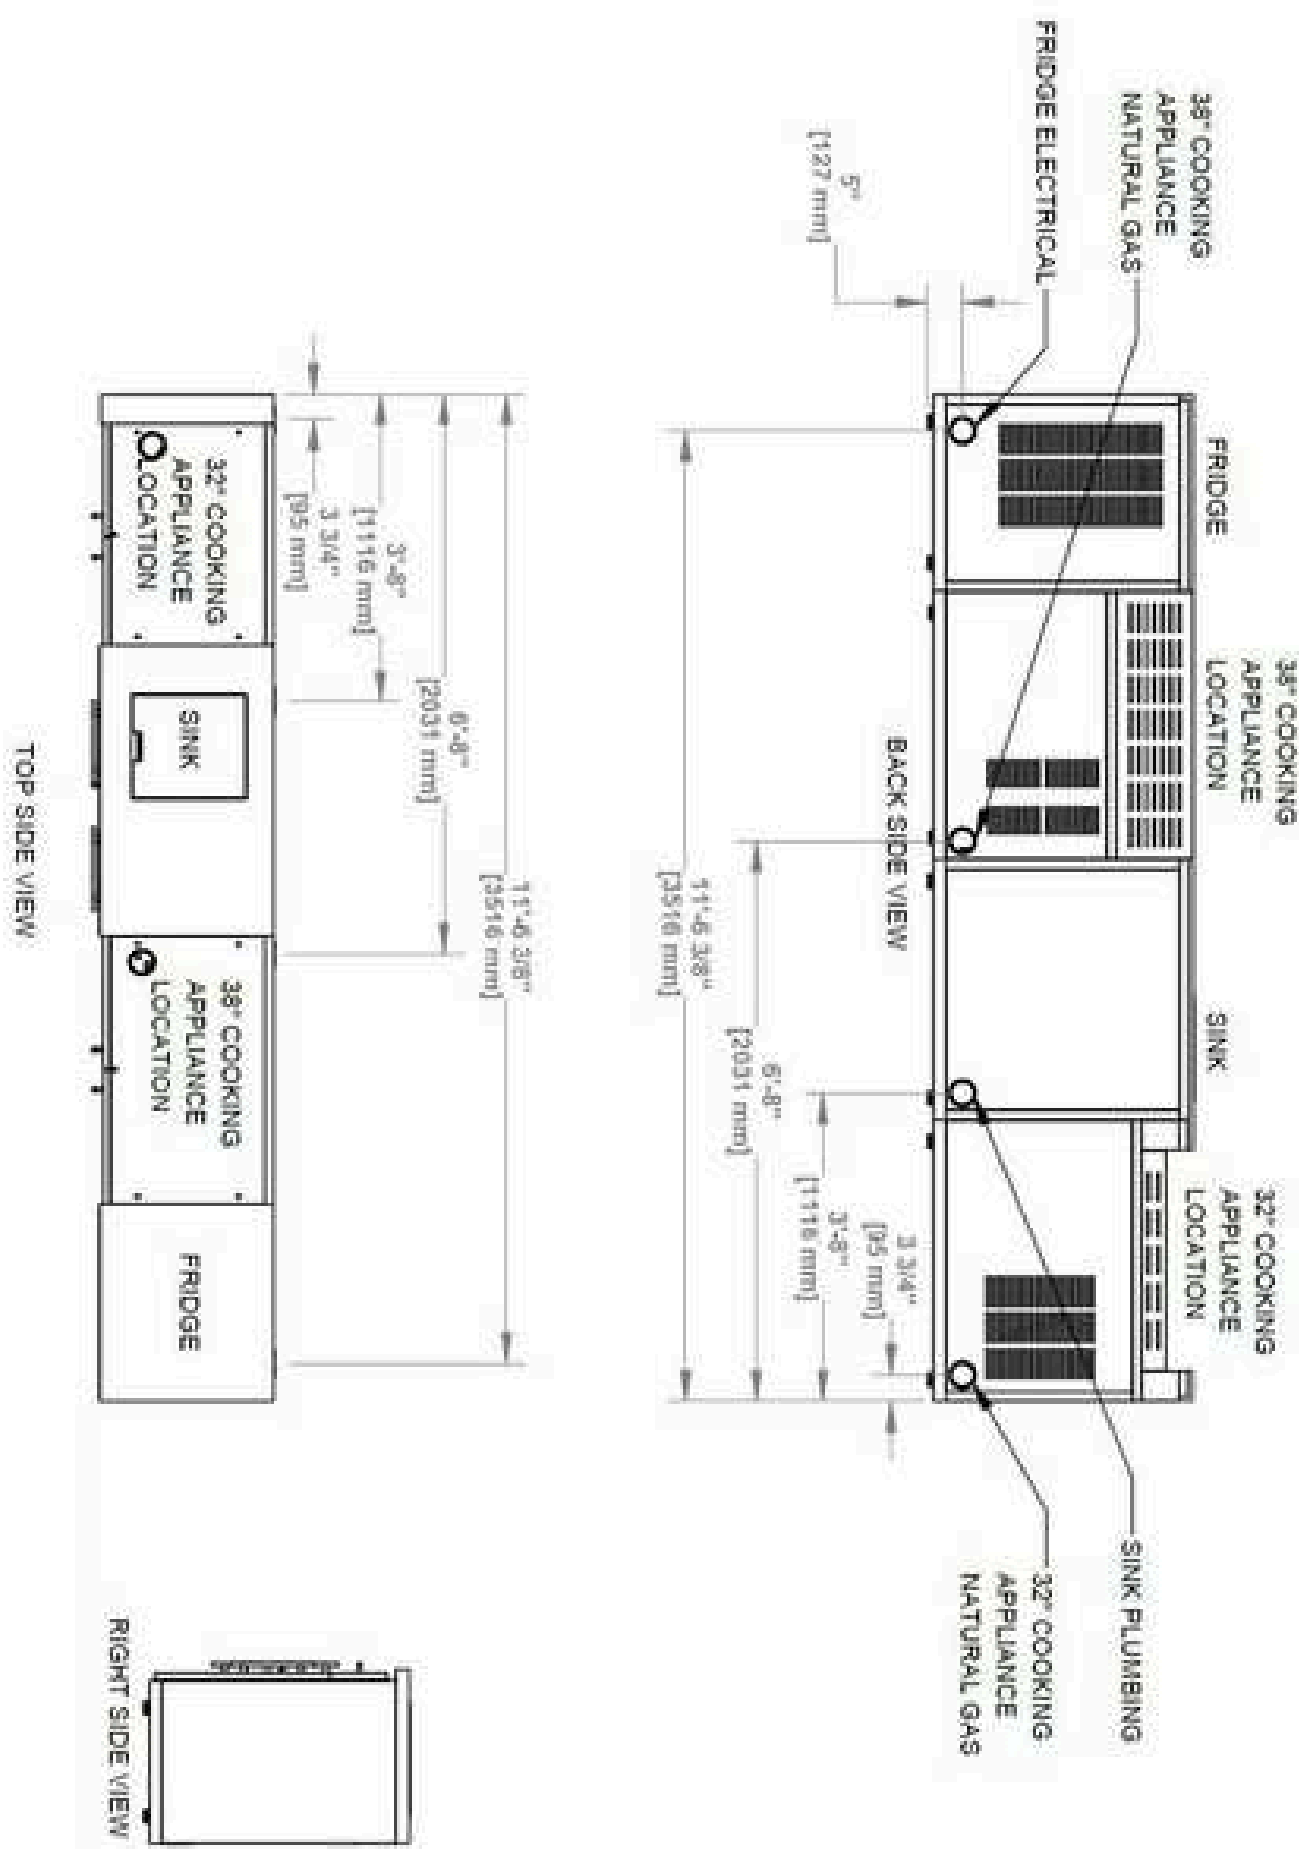

OWNER'S MANUAL - PARTS IDENTIFICATION


METAL COMPONENTS (NOT TO SCALE)




D1 CABINET DOOR ASSEMBLY L - A4M03546
(x1) 28 7/16"x19 5/8"x15/16" (24x498x722.5)



D2 CABINET DOOR ASSEMBLY R - A4M03555
(x1) 28 7/16"x19 5/8"x15/16" (24x498x722.5)

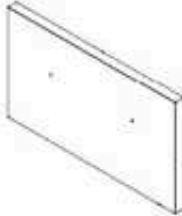

D3 CABINET DRAWER PANEL ASSEMBLY - A4M03569
(x1) 17 3/4"x10 1/4"x15/16" (24x260x451)

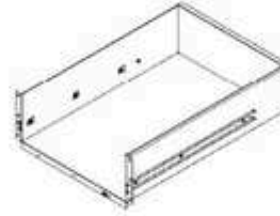


D4 CABINET DRAWER BODY ASSEMBLY - A4M03571
(x1) 22 1/4"x16 1/16"x6 7/16" (164.2x408.4x565.4)




D5 SINK CABINET TRIM PANEL - A4M03576
(x1) 17 13/16"x10 1/4"x1" (26x260x452)



D6 CABINET DOOR ASSEMBLY L - A4M03577
(x1) 22 1/4"x17 13/16"x15/16" (24x452x565)

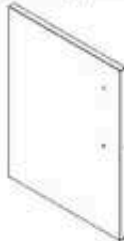

D7 CABINET DOOR ASSEMBLY L - A4M03587
(x1) 24 13/16"x19 1/16"x15/16" (24x484.15x630)

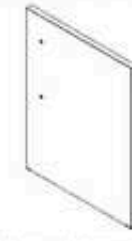


D8 CABINET DOOR ASSEMBLY R - A4M03590
(x1) 24 13/16"x19 1/16"x15/16" (24x484.15x630)



D9 TRASH CAN PANEL ASSEMBLY - A4M03608
(x1) 22 1/4"x17 3/4"x15/16" (24.00x451.00x565.00)



G10 CABINET BACK PANEL ASSEMBLY - A4M03055
(x1) 1 3/16"x22 7/8"x38 3/16" (30x581x970)

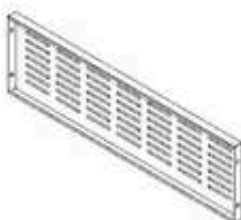

G11 VENTILATION PANEL - A4M03056
(x1) 1 5/16"x11 3/16"x38 3/16" (33x284x970)



H3 TRASH CAN BRACKET ASSEMBLY - A4M03610
(x1) 18 1/16"x15 13/16"x (35x401.60x458)

OWNER'S MANUAL - PARTS IDENTIFICATION

METAL COMPONENTS (NOT TO SCALE)



L1 CABINET SHELF - A4M03548
(x1) 23 1/4"x19 5/16"x1" (25.00x490.50x591.00)



H4 HORIZONTAL BEAM ASSEMBLY - A4M03575
(x4) 16 1/4"x3 3/8"x1" (25x85x413)



A2 MAGNET BRACKET - A4M03026
(x5) 1"x1 1/4"x3 1/8" (25x31x80)



A5 SHELF BRACKET - A4M03141
(x4) 5/8"x7/8"x2 1/16" (16x22x53)



A6 ANGLED BRACKET - A4M03053
(x3) 1 3/8"x1 15/16"x17 1/8" (35x50x435)



A9 HOSE BRACKET ASSEMBLY - A4M03060
(x2) 1 1/4"x1 7/16"x2 9/16" (31.5x36.5x65)




A13 GAS TANK HOLDER ASSEMBLY - A4M03047
(x2) 1 15/16"x12 7/8"x14 3/4" (49x327x374)



A11 TRIANGLE PANEL - A4M03086
(x2) 13/16"x13 3/4"x13 3/4" (20x350x350)



M1 COUNTERTOP - A4M06161
(x1) 24 13/16"x4 5/16"x1 15/16" (50x109x630)

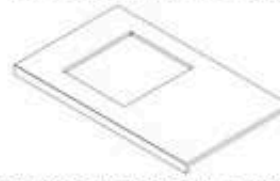

M2 SINK COUNTERTOP - A4M06162
(x1) 41 1/2"x24 15/16"x1 15/16" (49x633x1054)




M3 COUNTERTOP - A4M06163
(x1) 28 1/8"x24 15/16"x1 15/16" (50x634x715)



L2 SHELF ASSEMBLY - A4M03589
(x1) 23 1/4"x18 3/8"x1" (25.00x467.00x591.00)




H5 CABINET HINGE CHANNEL ASSEMBLY - A4M03558
(x1) 26 5/8"x2 15/16"x11/16" (18x74.80x676)

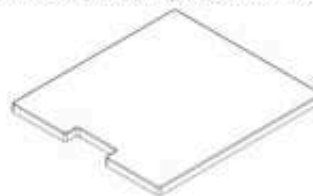


M5 SINK COVER COUNTERTOP - A4M05949
(x1) 11/16"x14 3/4"x16 5/16" (18x375x415)

OWNER'S MANUAL - PARTS IDENTIFICATION


METAL COMPONENTS (NOT TO SCALE)

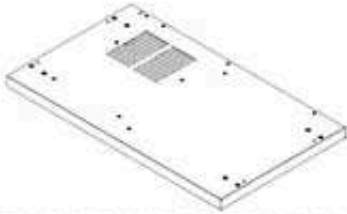


F1 CABINET FLOOR PANEL ASSEMBLY - A4M03538
(x1) 40 3/16"x23 3/8"x2 5/8" (66x594x1020)

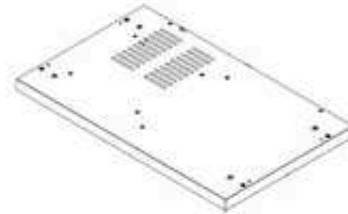

F2 CABINET FLOOR PANEL ASSEMBLY - A4M03048
(x1) 2 5/8"x23 3/8"x38 1/4" (66x594x972)

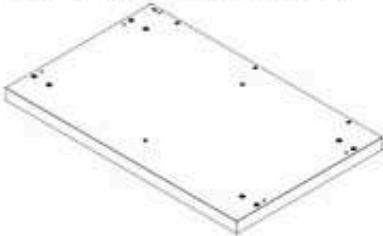

F3 CABINET FLOOR PANEL ASSEMBLY - A4M03560
(x1) 37 3/16"x23 3/8"x2 5/8" (66x594x944)

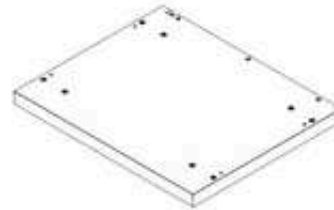

F4 FRIDGE CABINET FLOOR PANEL ASSEMBLY - A4M03595
(x1) 28 1/8"x23 3/8"x2 5/8" (66x594x715)



H2 STAINLESS STEEL HANDLE - A4M03024
(x8) 5/8"x1 9/16"x11 13/16" (16x40x300)



G1 CABINET BACK PANEL ASSEMBLY - A4M03542
(x1) 38 3/4"x26 1/2"x1 3/16" (30x673.5x984)



O8 VENTILATION PANEL - A4M03078
(x1) 1 3/16"x3 3/4"x31 7/16" (30x95x798)



G3 SINK CABINET BACK PANEL ASSEMBLY - A4M03564
(x1) 34 5/16"x33 3/8"x1 3/16" (30x847.2x872)




G4 FRIDGE CABINET BACK PANEL ASSEMBLY - A4M03599
(x1) 25 5/16"x33 3/8"x1 3/16" (30x847.2x643)



T5 CABINET COUNTERTOP PANEL ASSEMBLY L - A4M03549
(x1) 24 1/8"x4 5/16"x6 3/4" (109x172.2x612)



T7 FRIDGE CABINET TABLETOP - A4M03641
(x1) 27 3/8"x24 1/8"x1 1/4" (32x612x696)

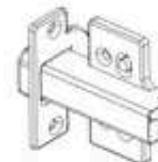

A4M03025 FULL OVERLAY HINGE
(x10)

OWNER'S MANUAL - PARTS IDENTIFICATION

METAL COMPONENTS (NOT TO SCALE)



S14 CABINET SIDE PANEL ASSEMBLY - A4M04536
(x1) 26 9/16"x23 3/8"x1 3/8" (35x594x675)



S2 CABINET SIDE PANEL ASSEMBLY M - A4M03545
(x1) 26 1/2"x23 3/8"x1 3/8" (35x593x673.5)




S3 SINK CABINET SIDE PANEL ASSEMBLY L - A4M03562
(x1) 33 3/8"x23 3/8"x1 3/8" (35.00x594.00x848.20)



S4 SINK CABINET SIDE PANEL ASSEMBLY R - A4M03563
(x1) 33 3/8"x23 3/8"x2 5/8" (67x594x848.20)



S5 SINK CABINET SIDE PANEL ASSEMBLY M - A4M03567
(x1) 33 3/8"x23 3/8"x2 3/16" (56.2x593x847)

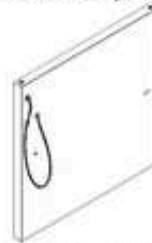


S6 CABINET SIDE PANEL ASSEMBLY M - A4M03586
(x1) 23 3/8"x22 7/8"x1 3/8" (35x581x593)




S7 FRIDGE CABINET SIDE PANEL ASSEMBLY L - A4M03597
(x1) 33 7/16"x23 3/8"x2 1/16" (53x594x849.7)




S8 FRIDGE CABINET SIDE PANEL ASSEMBLY R - A4M04535
(x1) 33 3/8"x23 3/8"x1 15/16" (50x594x848.20)

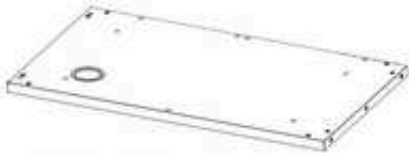


T1 CABINET TABLETOP ASSEMBLY - A4M05629
(x1) 40 3/16"x23 3/8"x1 1/4" (32x594x1020)

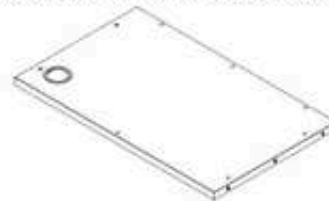

T2 TABLETOP ASSEMBLY - A4M03057
(x1) 1 1/4"x23 3/8"x38 3/16" (32x594x970)

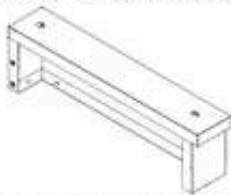

T3 CABINET PANEL ASSEMBLY R - A4M03551
(x1) 612x4 5/16"x6 3/4" (109x172.2x612)

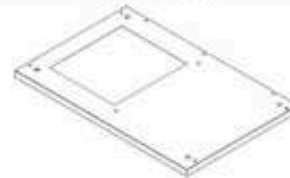

T4 SINK CABINET TABLETOP FRAME - A4M03566
(x1) 37 3/16"x24 1/8"x1 1/4" (32x612x944)

OWNER'S MANUAL - PARTS IDENTIFICATION


METAL COMPONENTS (NOT TO SCALE)




A16 SINK ASSEMBLY - A4M03143
(x1) 15 1/8"x15 5/16"x16 7/8" (384x389x429)



A4M03151 GARDEN HOSE ADAPTER
(x1)

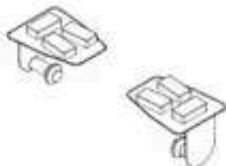

A4M02290 MAGNETIC PAPER TOWEL HOLDER
(x1)

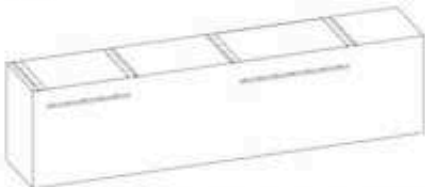


A6P01385 OUTDOOR KITCHEN CABINET COVER
(x1)



9240162 OUTDOOR KITCHEN FRIDGE - RIGHT OPEN
(x1)

OWNER'S MANUAL - PARTS IDENTIFICATION


HARDWARE COMPONENTS




H101185 PHILLIPS FLAT HEAD
(x60) 8-32x.5 SCREW




H101103 TOR SOCKET SCREW
(x27)

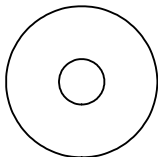


H101054 SEALANT WASHER
(x10)




H101287 PAN HEAD SCREW
(x6) 8-32x1" SS




H101307 SHOULD BOLT
(x14) 8-32x30mm SS

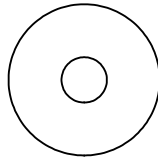


H101053 STEEL WASHER
(x10) 6x20




H101289 PAN HEAD SCREW
(x42) 8-32x1/2" SS




H101292 TOR PAN HEAD
(x18) 1/4-20x13/32"

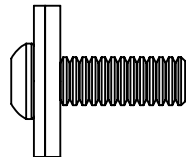


H101202 TOR PAN HEAD
(x118) 1/4-20x3/4 ASSY




H101294 HE DRIVER
(x1)




H100147 TOR BIT
(x1) T-30

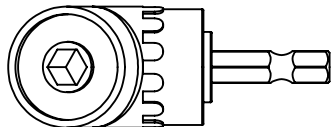

H101114 RIGHT ANGLE DRILL ADAPTER
(x1)



H101100 MAGNETIC DRIVER
(x1)

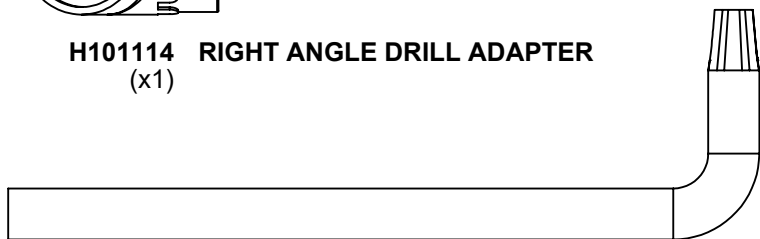

H100114 TOR WRENCH
(x1) T-30


PRE-ASSEMBLY STEP 1 - SORTING PARTS

It is critical for ease of assembly that you take the time to sort and organize the metal and hardware.

METAL PARTS:


- Organize metal parts by the three-digit, alpha-numeric part label on each bag (ex. A01).
- If there are multiple parts with the same part label, stack those pieces together.
- Part labels can be found on the bags of the parts.
- Keep parts in bags until required step.
- Allow yourself plenty of room - the metal pieces can take up a significant amount of space.

NOTE: CARTONS ARE NOT ORGANIZED BY PART OR STEP NUMBER.

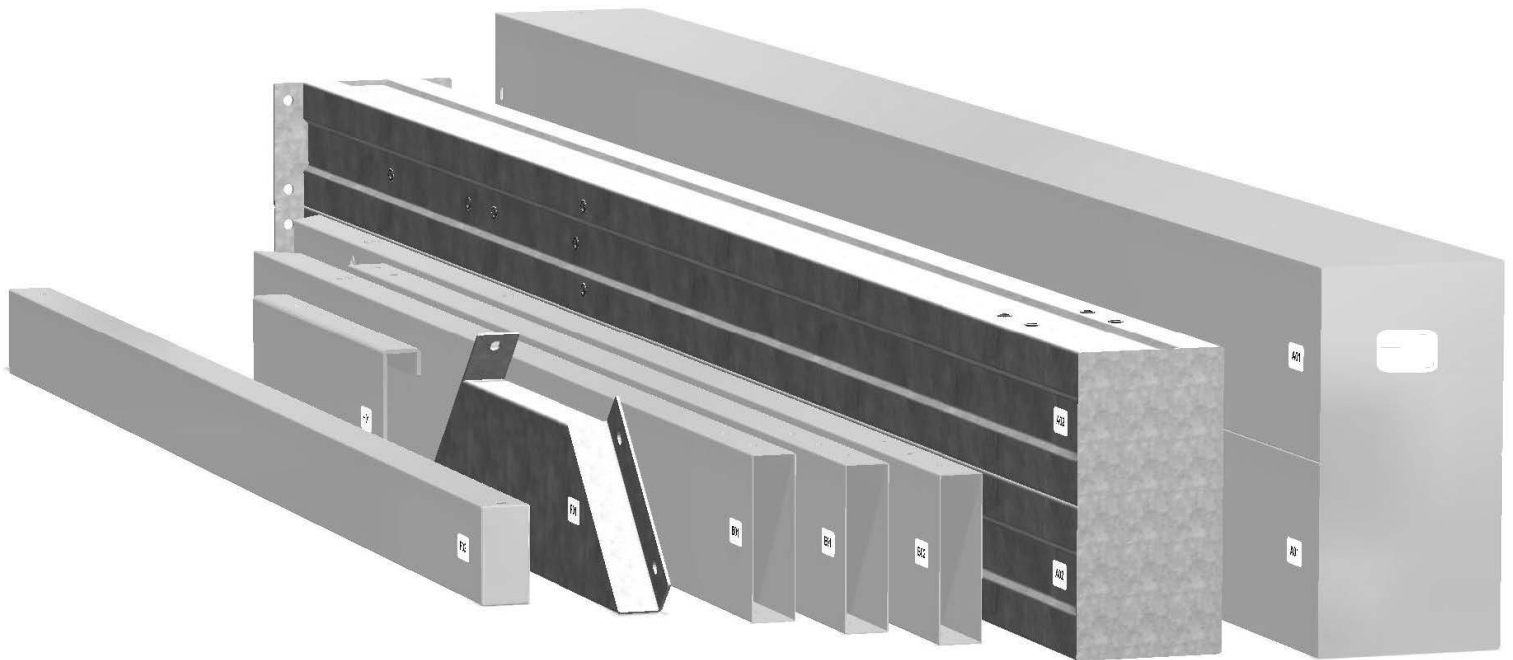


HARDWARE PARTS:

- We recommend that you have a separate table to organize the hardware.
- Hardware bags are printed with a seven-digit, alpha-numeric part number.
- You can organize your hardware by part number or group by hardware type (e.g. bolts, nuts, etc.).
- During assembly you only need to reference the last four digits of the number.

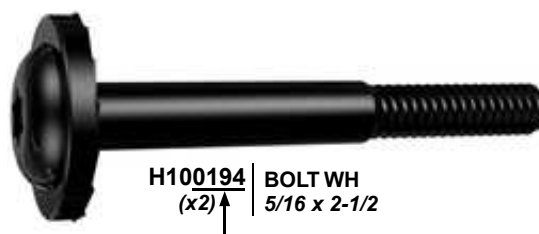


PRE-ASSEMBLY STEP 2 - TOOLS REQUIRED

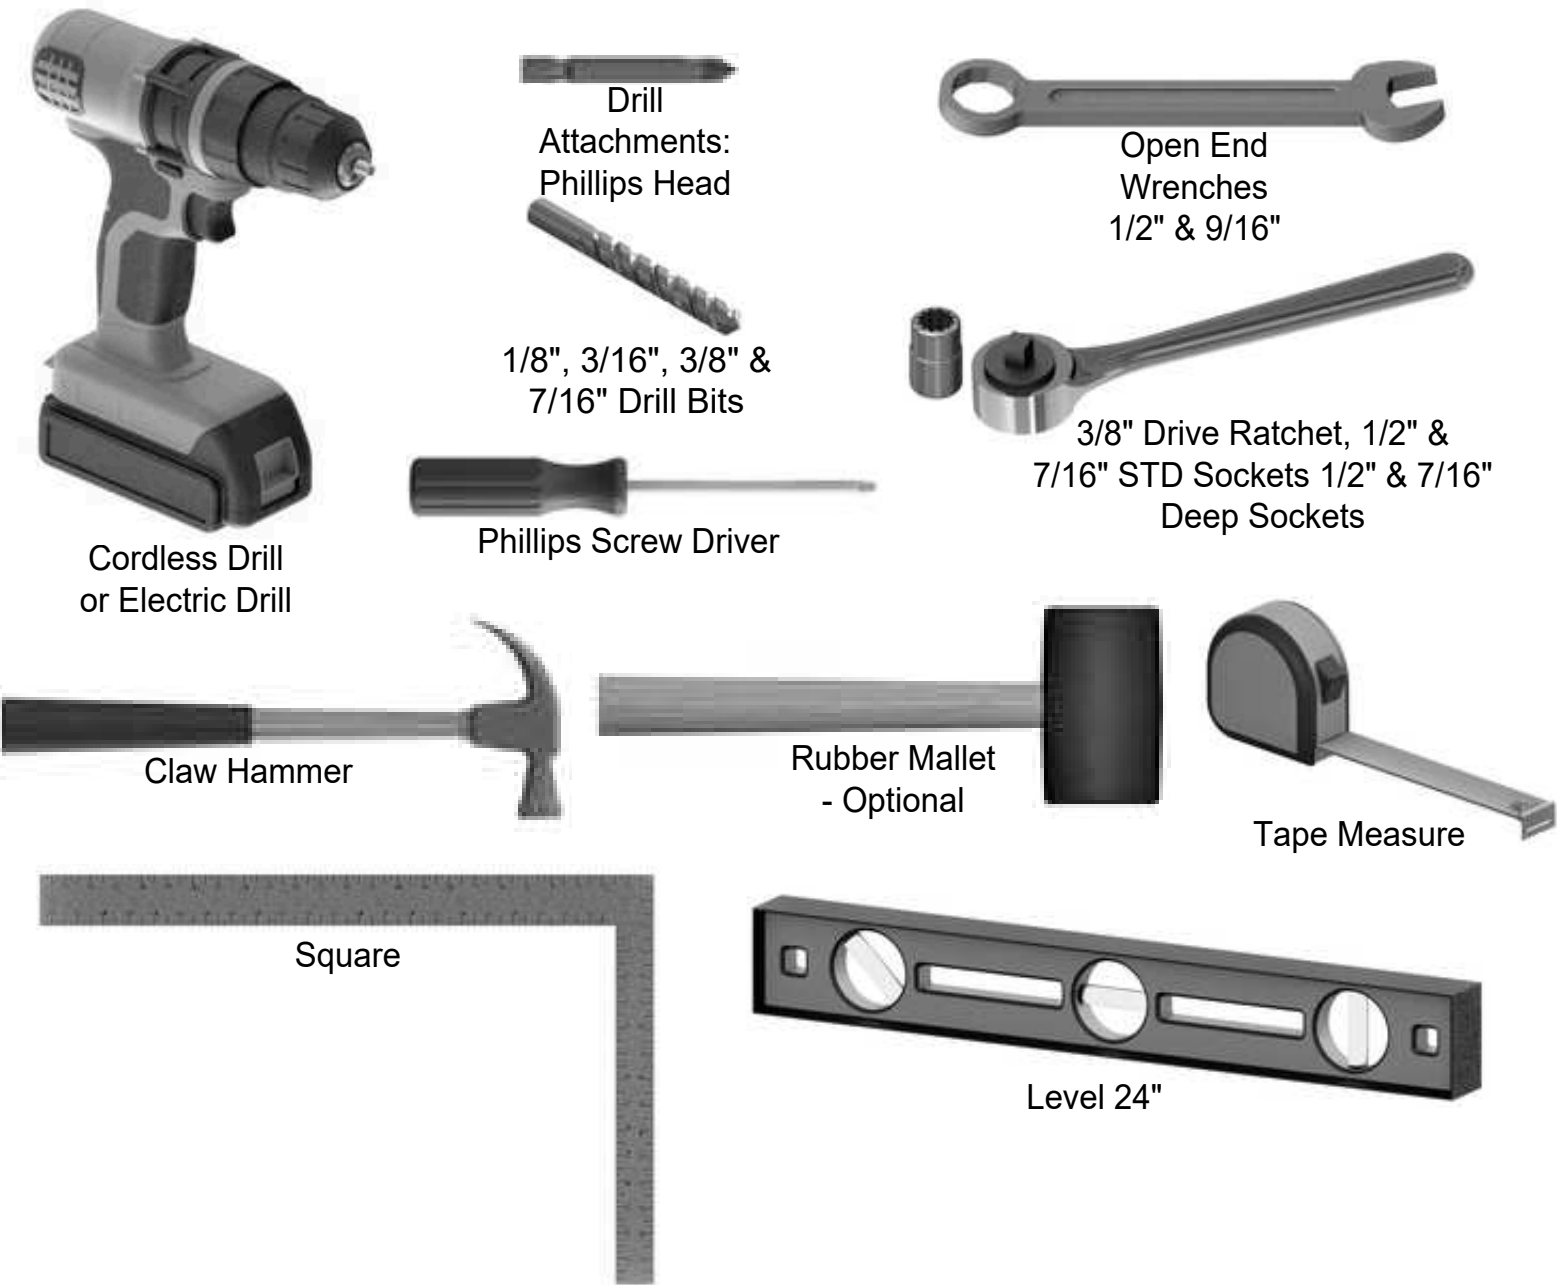

PRE-ASSEMBLY STEP 3 - CHOOSE YOUR ASSEMBLY METHOD

There are several types of assembly instructions available to you.

1. Printed Assembly Manual included with your set
2. BILT APP - 3D interactive instructions
3. Combination of the Printed Manual and BILT APP (Note: Step numbers can differ between the two methods)

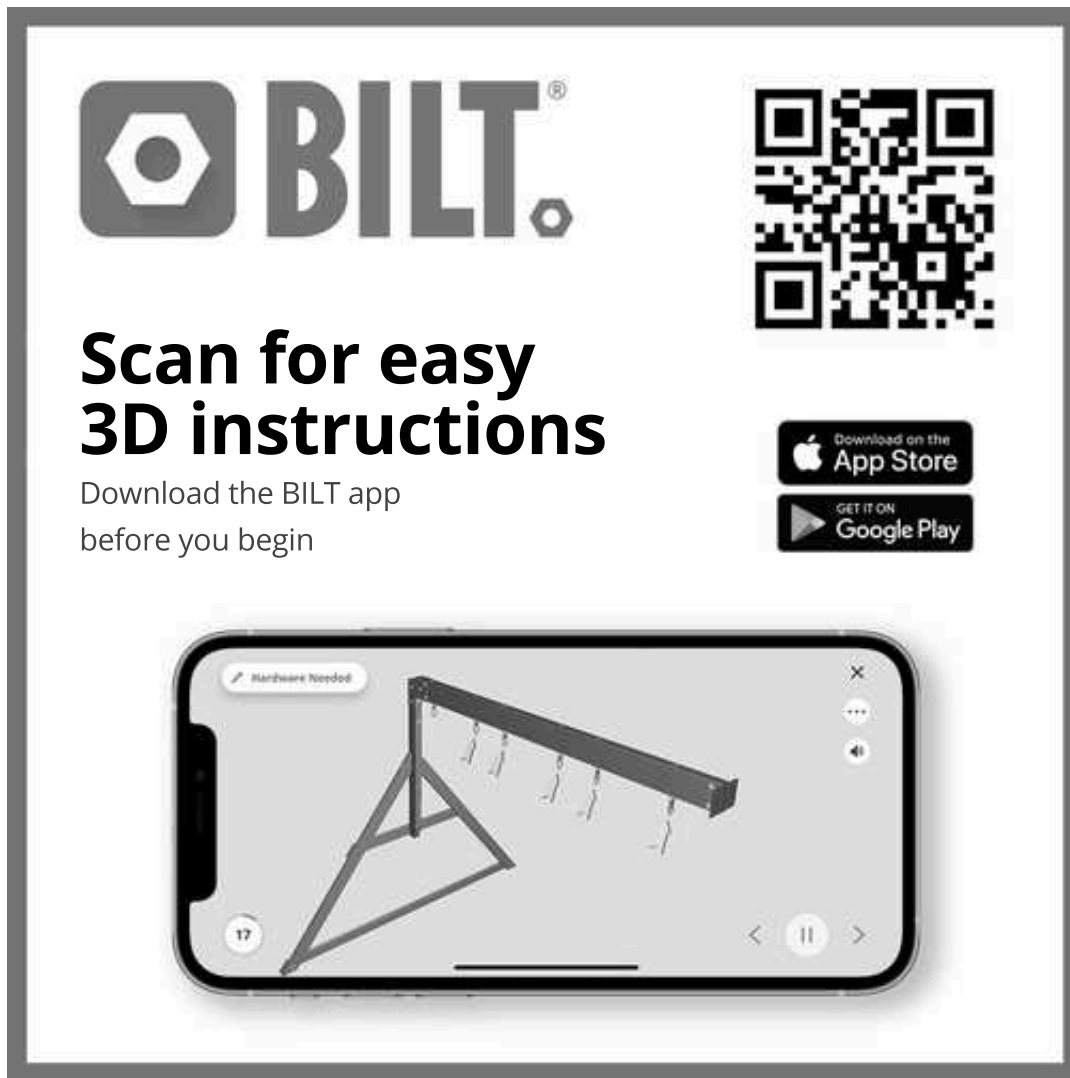

The graphic is a promotional banner for the BILT app. It features the BILT logo at the top left, which consists of a hexagonal icon with a white dot inside, followed by the word "BILT." in a bold, sans-serif font. To the right of the logo is a square QR code. Below the logo, the text "Scan for easy 3D instructions" is written in a large, bold, black font. Underneath this, in a smaller font, it says "Download the BILT app before you begin". To the right of the text are two buttons: "Download on the App Store" with the Apple logo and "GET IT ON Google Play" with the Google Play logo. At the bottom of the graphic is a smartphone displaying the BILT app interface. The screen shows a 3D model of a mechanical assembly, a progress bar at the top, and a step number "17" in a circle at the bottom left. Navigation icons like back, pause, and forward are visible at the bottom right of the phone screen.

BILT.

**Scan for easy
3D instructions**

Download the BILT app
before you begin

Download on the
App Store


GET IT ON
Google Play

Hardware Needed

17

STEP 1 - FRIDGE CABINET ASSEMBLY

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

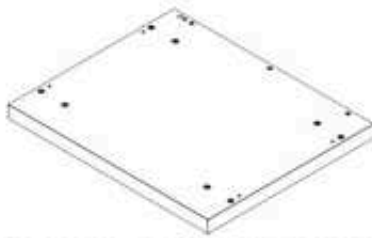


F4 FRIDGE CABINET FLOOR PANEL ASSEMBLY - A4M03595
(x1) 28 1/8"x23 3/8"x2 5/8" (66x594x715)



S8 FRIDGE CABINET SIDE PANEL ASSEMBLY R - A4M04535
(x1) 33 3/8"x23 3/8"x1 15/16" (50x594x848.20)

- POSITION FLOOR PANEL IN THE PROXIMITY OF WHERE YOUR KITCHEN WILL BE.
- EACH FLOOR PANEL HAS FACTORY INSTALLED ADJUSTABLE FEET. USE PROVIDED HEX DRIVER TO ADJUST EACH FOOT UNTIL PANEL IS LEVEL.

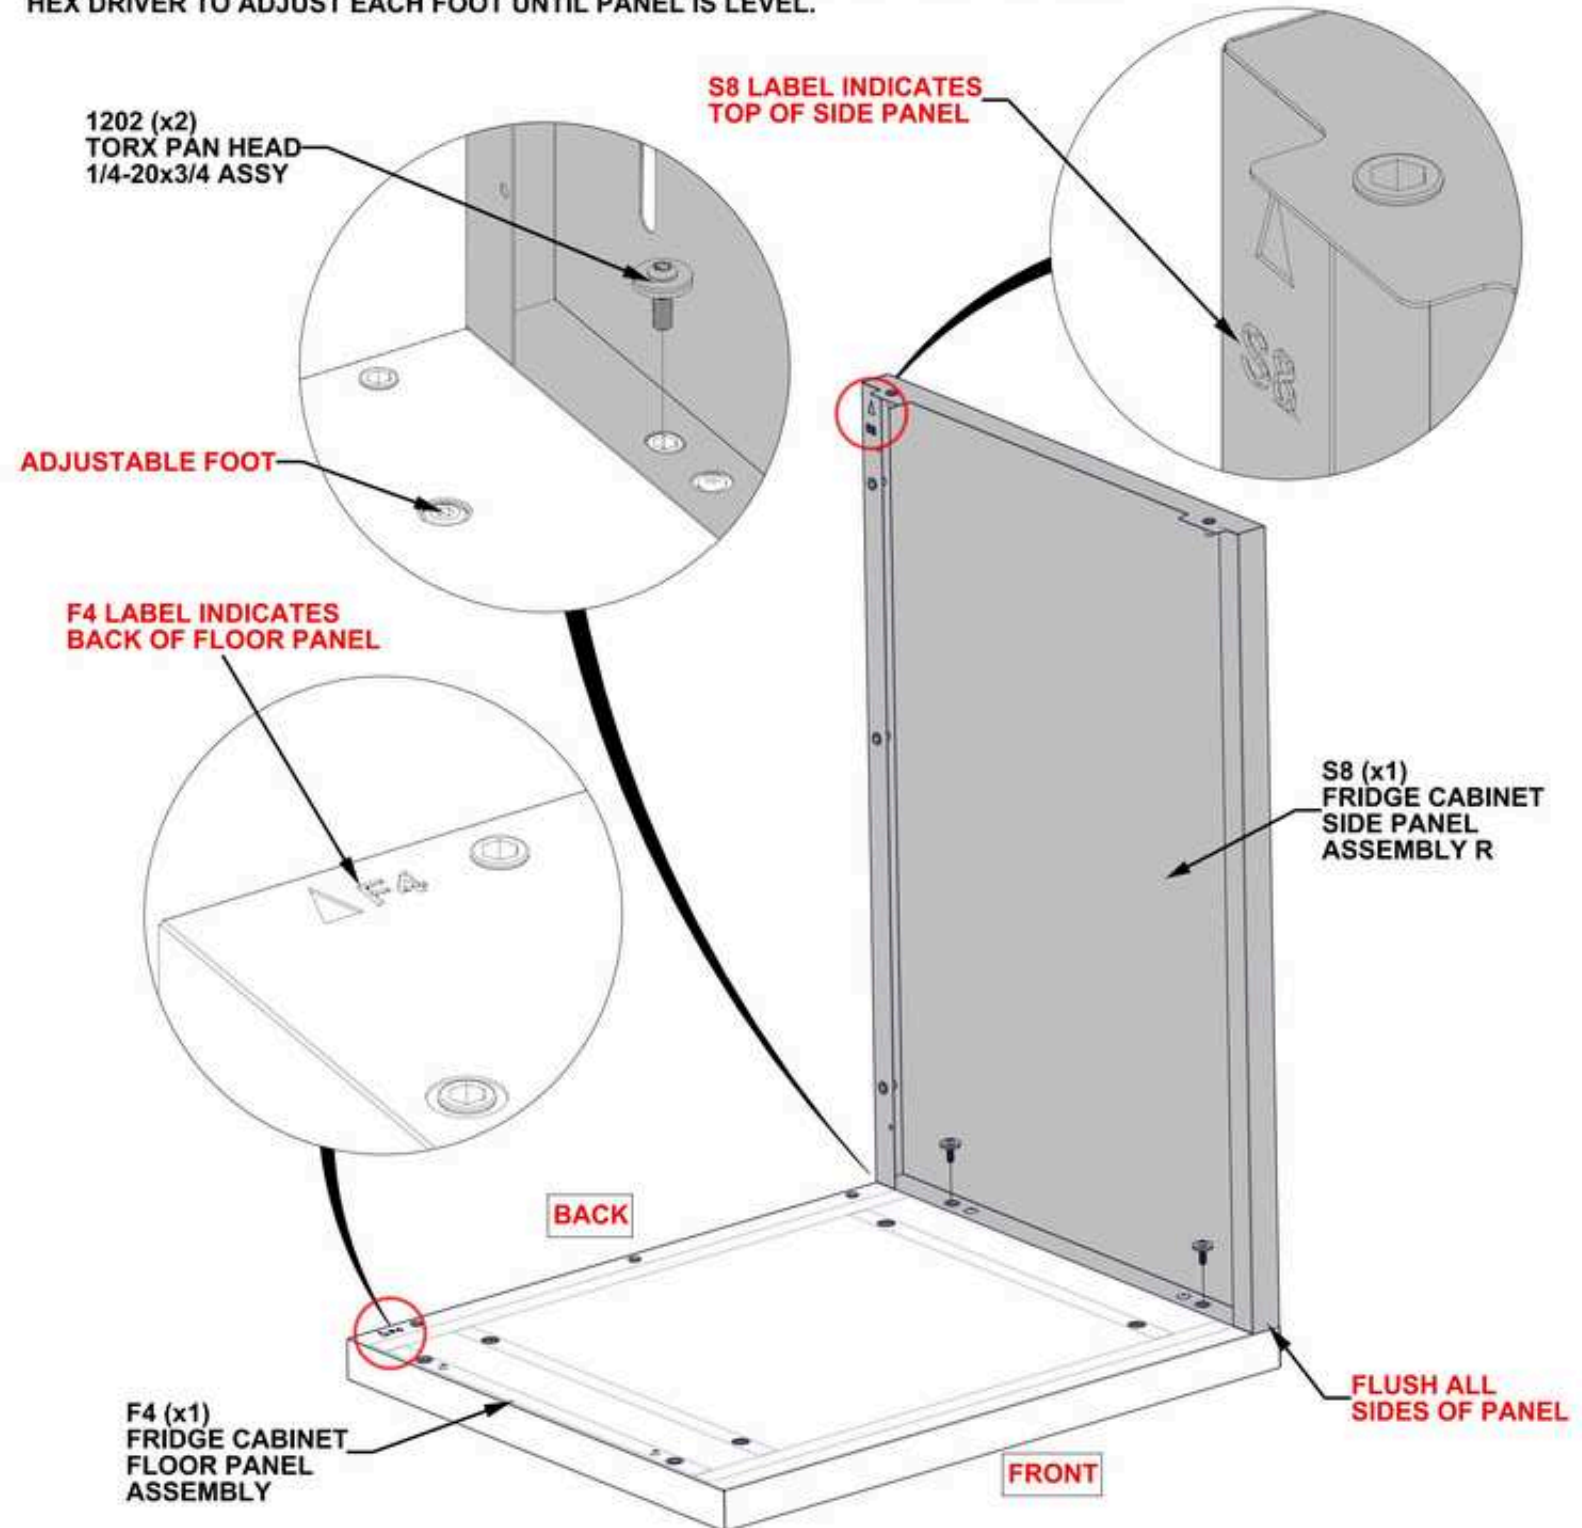


STEP 2 - FRIDGE CABINET ASSEMBLY

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




S7 FRIDGE CABINET SIDE PANEL ASSEMBLY L - A4M03597
(x1) 33 7/16"x23 3/8"x2 1/16" (53x594x849.7)

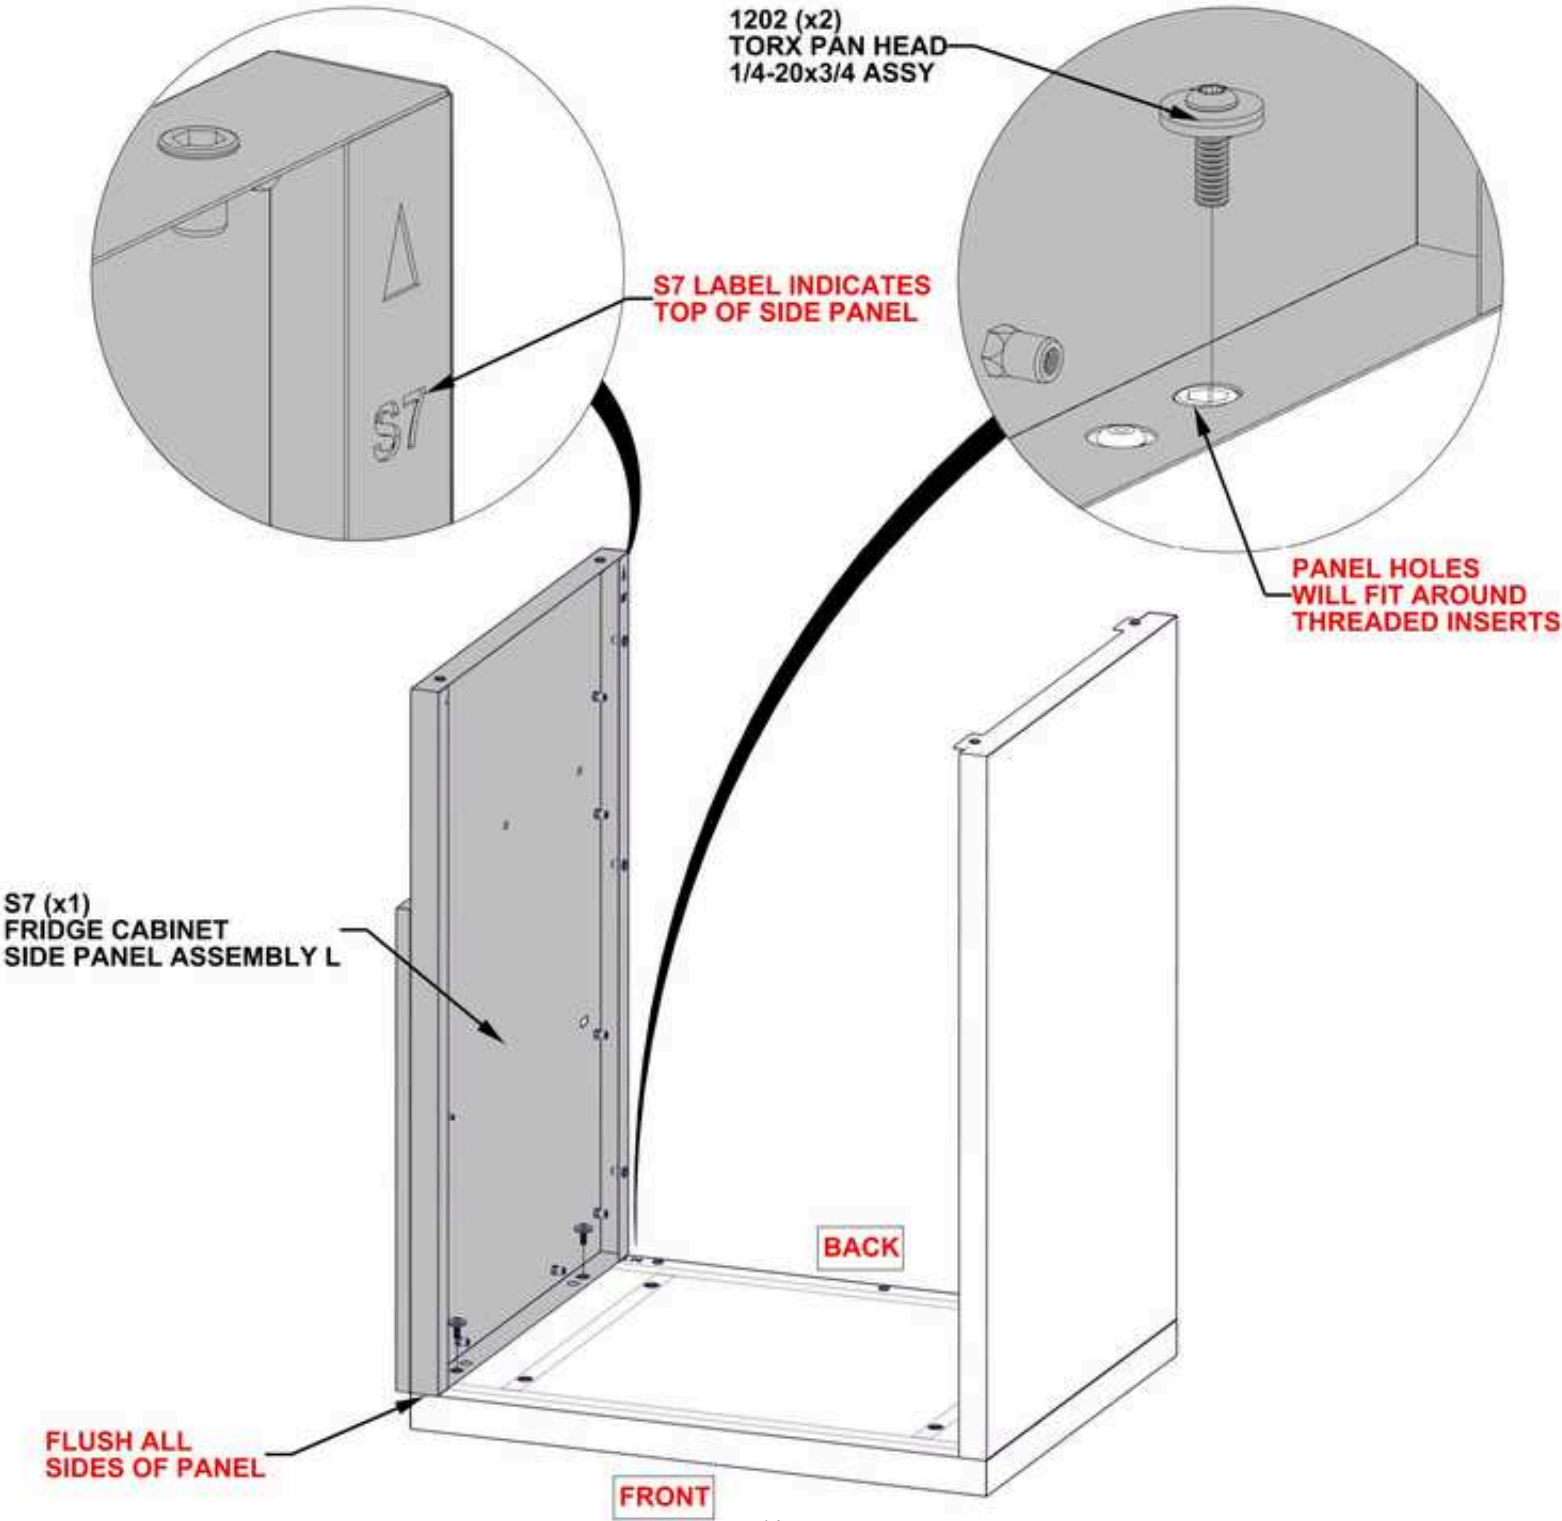


STEP 3 - FRIDGE CABINET ASSEMBLY

Qty	PartNo	Description
9	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

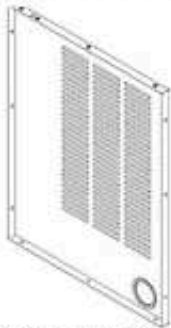


G4 FRIDGE CABINET BACK PANEL ASSEMBLY - A4M03599
(x1) 25 5/16"x33 3/8"x1 3/16" (30x847.2x643)

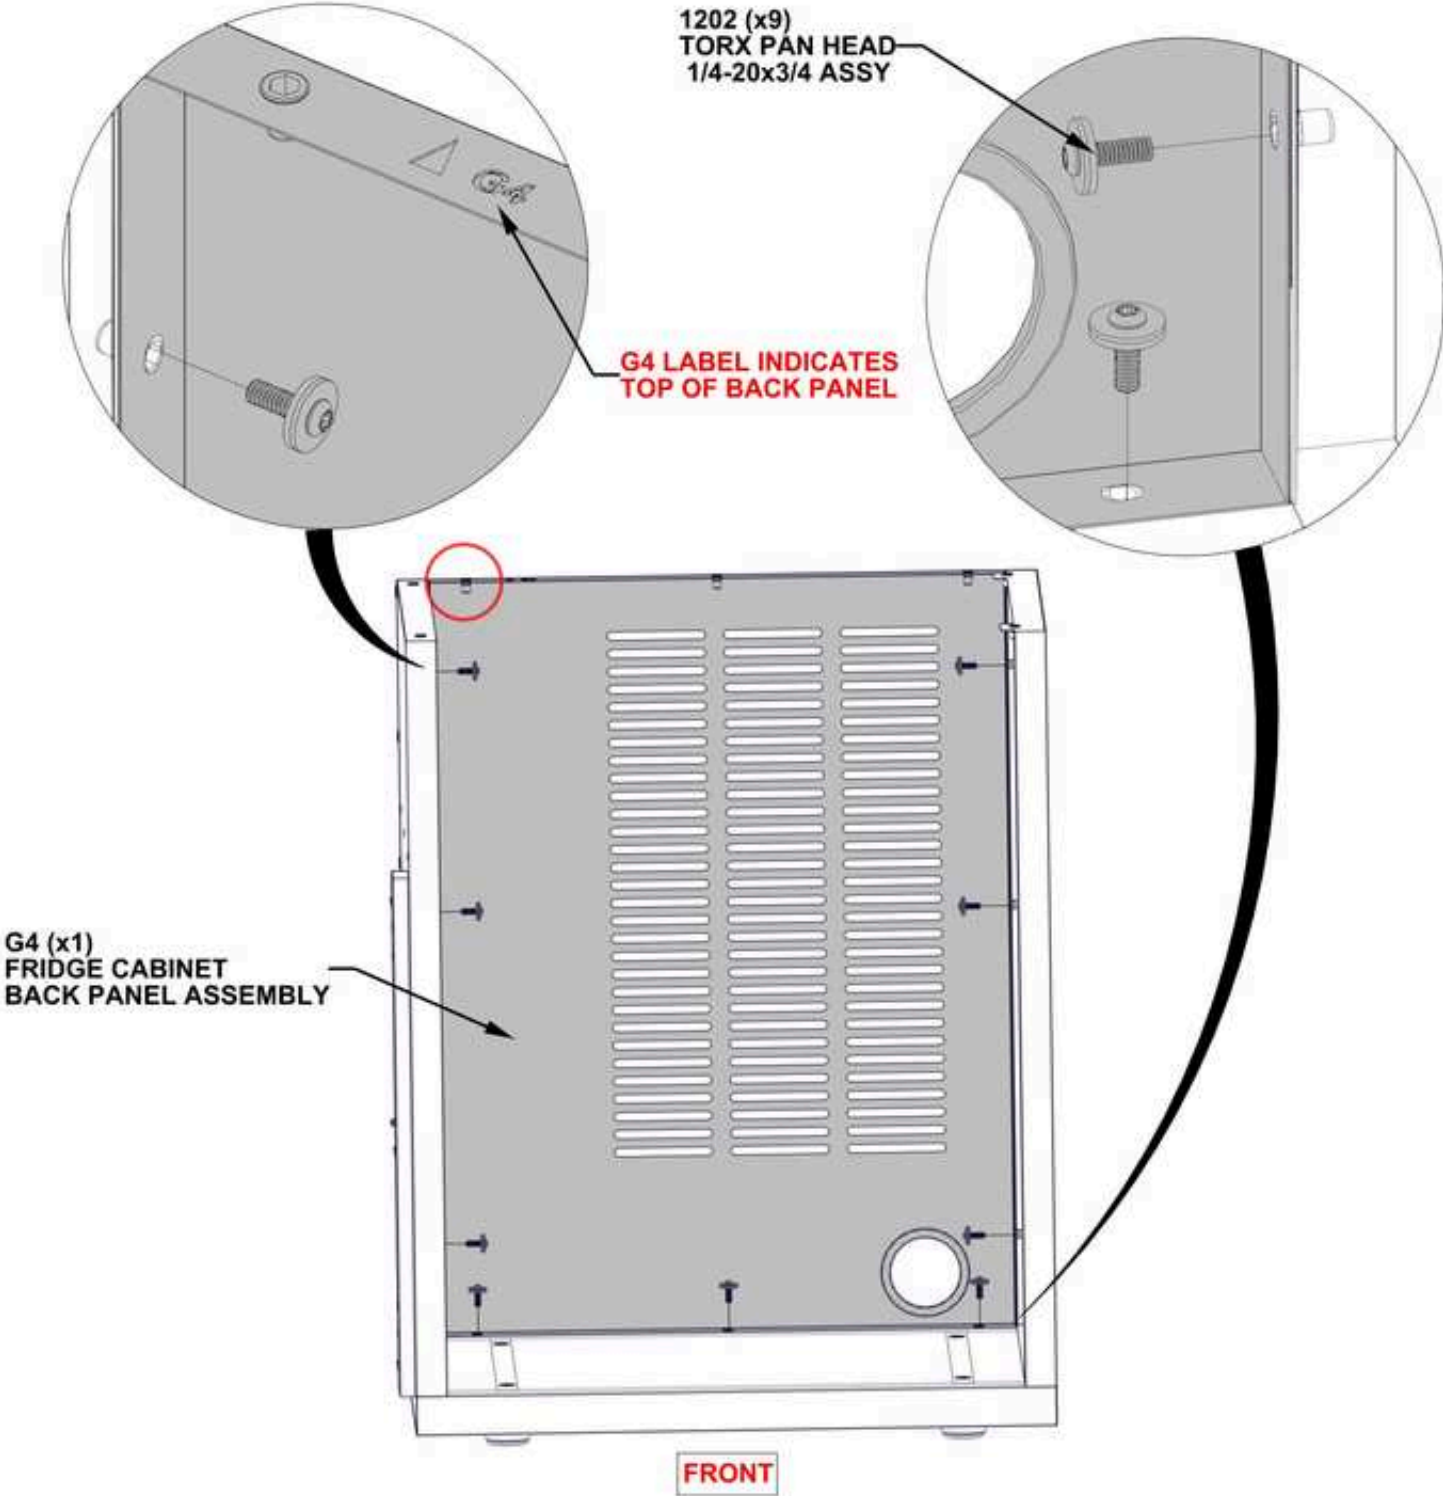


STEP 4 - FRIDGE CABINET ASSEMBLY

Qty	PartNo	Description
7	H101103	TORX SOCKET SCREW 1/4-20

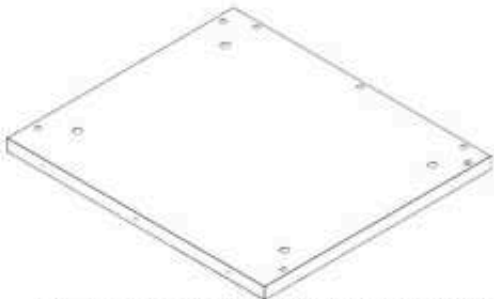


T7 FRIDGE CABINET TABLETOP - A4M03641
(x1) 27 3/8"x24 1/8"x1 1/4" (32x612x696)

- FLUSH BACK AND SIDES OF PANEL ASSEMBLY.
- SQUARE ALL SIDES OF CABINET BEFORE TIGHTENING HARDWARE.

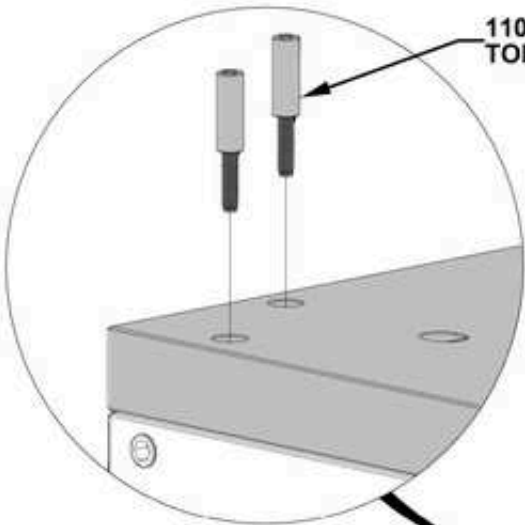


1103 (x7)
TORX SOCKET SCREW 1/4-20

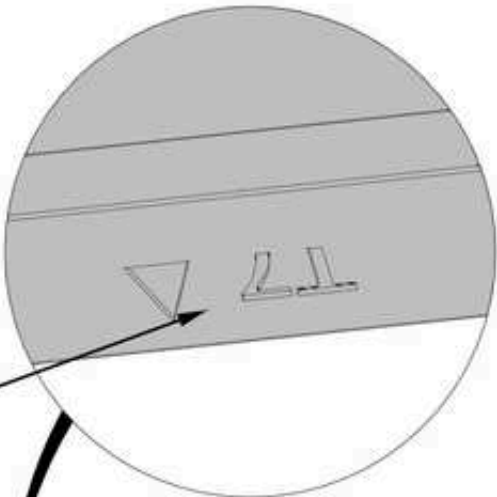

T7 LABEL ON BOTTOM
SIDE INDICATES BACK

T7 (x1)
FRIDGE CABINET TABLETOP

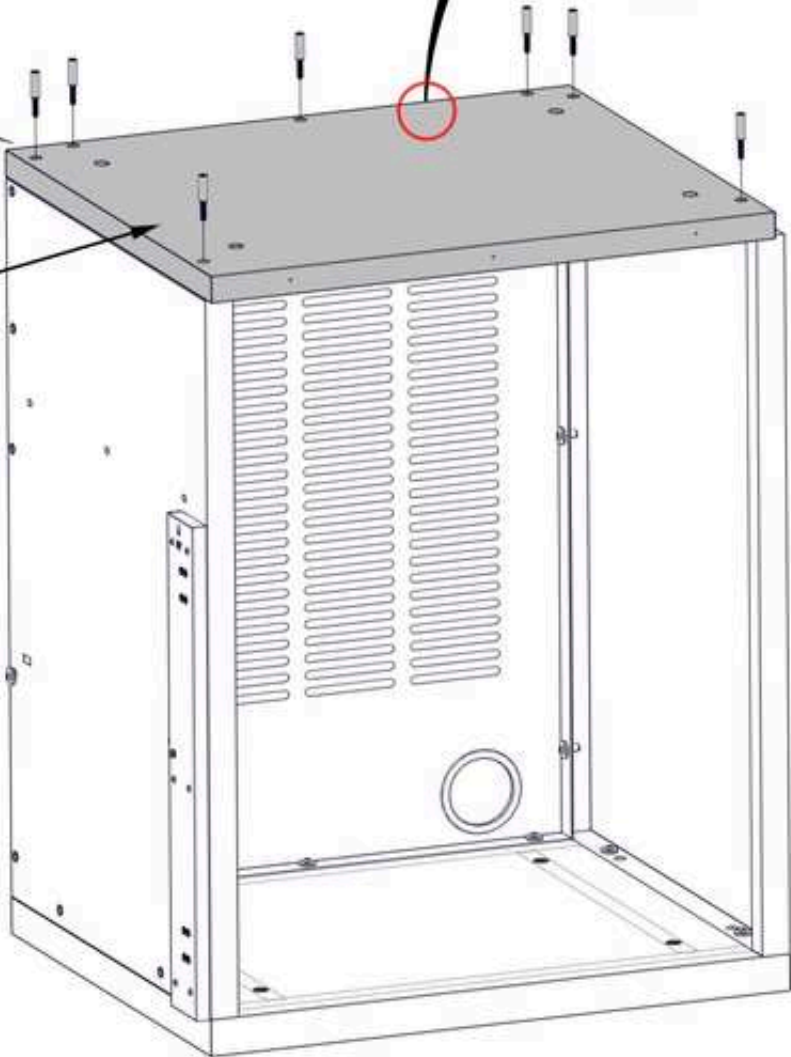

STEP 5 - SINK CABINET ASSEMBLY

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




F3 CABINET FLOOR PANEL ASSEMBLY - A4M03560
(x1) 37 3/16"x23 3/8"x2 5/8" (66x594x944)




S3 SINK CABINET SIDE PANEL ASSEMBLY L - A4M03562
(x1) 33 3/8"x23 3/8"x1 3/8" (35.00x594.00x848.20)

- POSITION FLOOR PANEL IN THE PROXIMITY OF WHERE YOUR KITCHEN WILL BE.
- EACH FLOOR PANEL HAS FACTORY INSTALLED ADJUSTABLE FEET. USE PROVIDED HEX DRIVER TO ADJUST EACH FOOT UNTIL PANEL IS LEVEL.

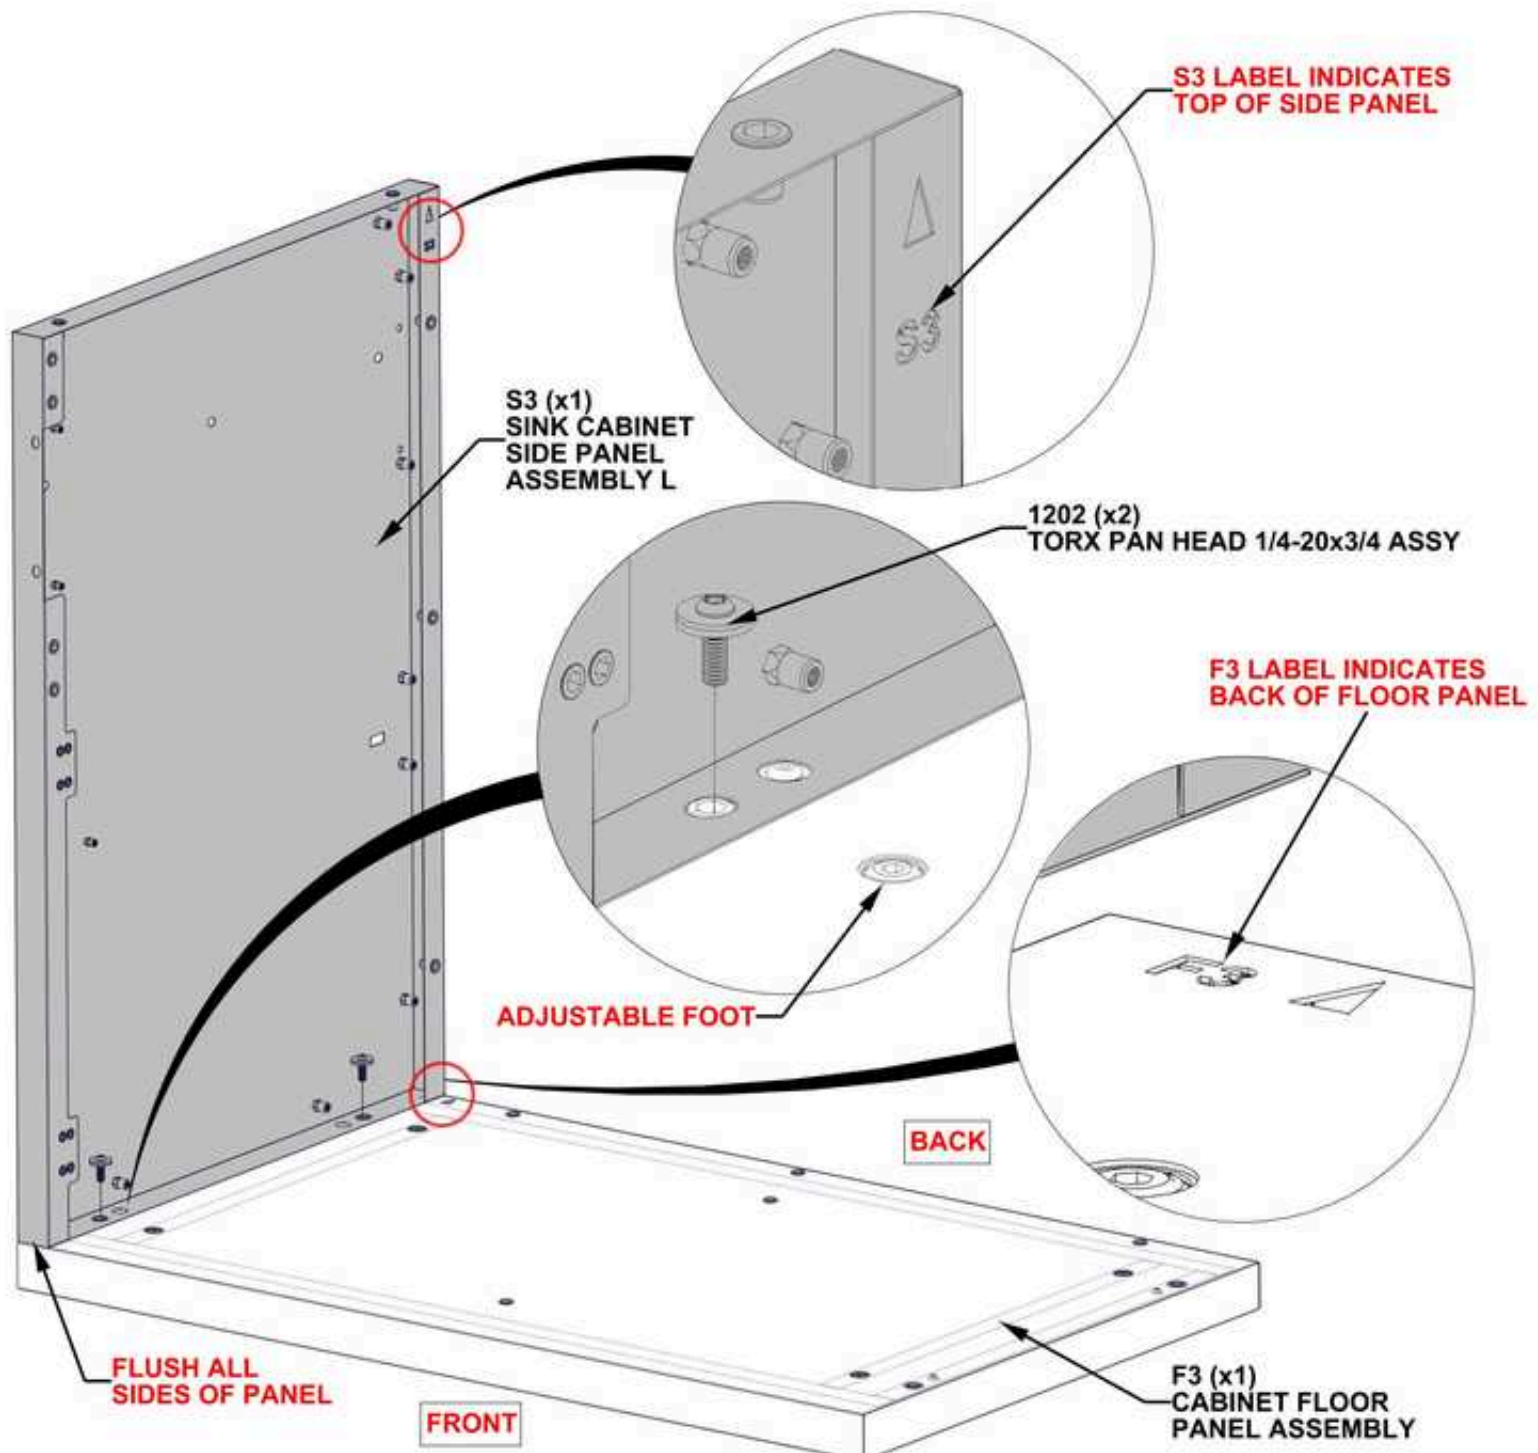


STEP 6 - SINK CABINET ASSEMBLY

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

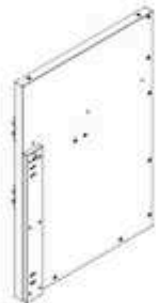

S4 SINK CABINET SIDE PANEL ASSEMBLY R - A4M03563
(x1) 33 3/8"x23 3/8"x2 5/8" (67x594x848.20)

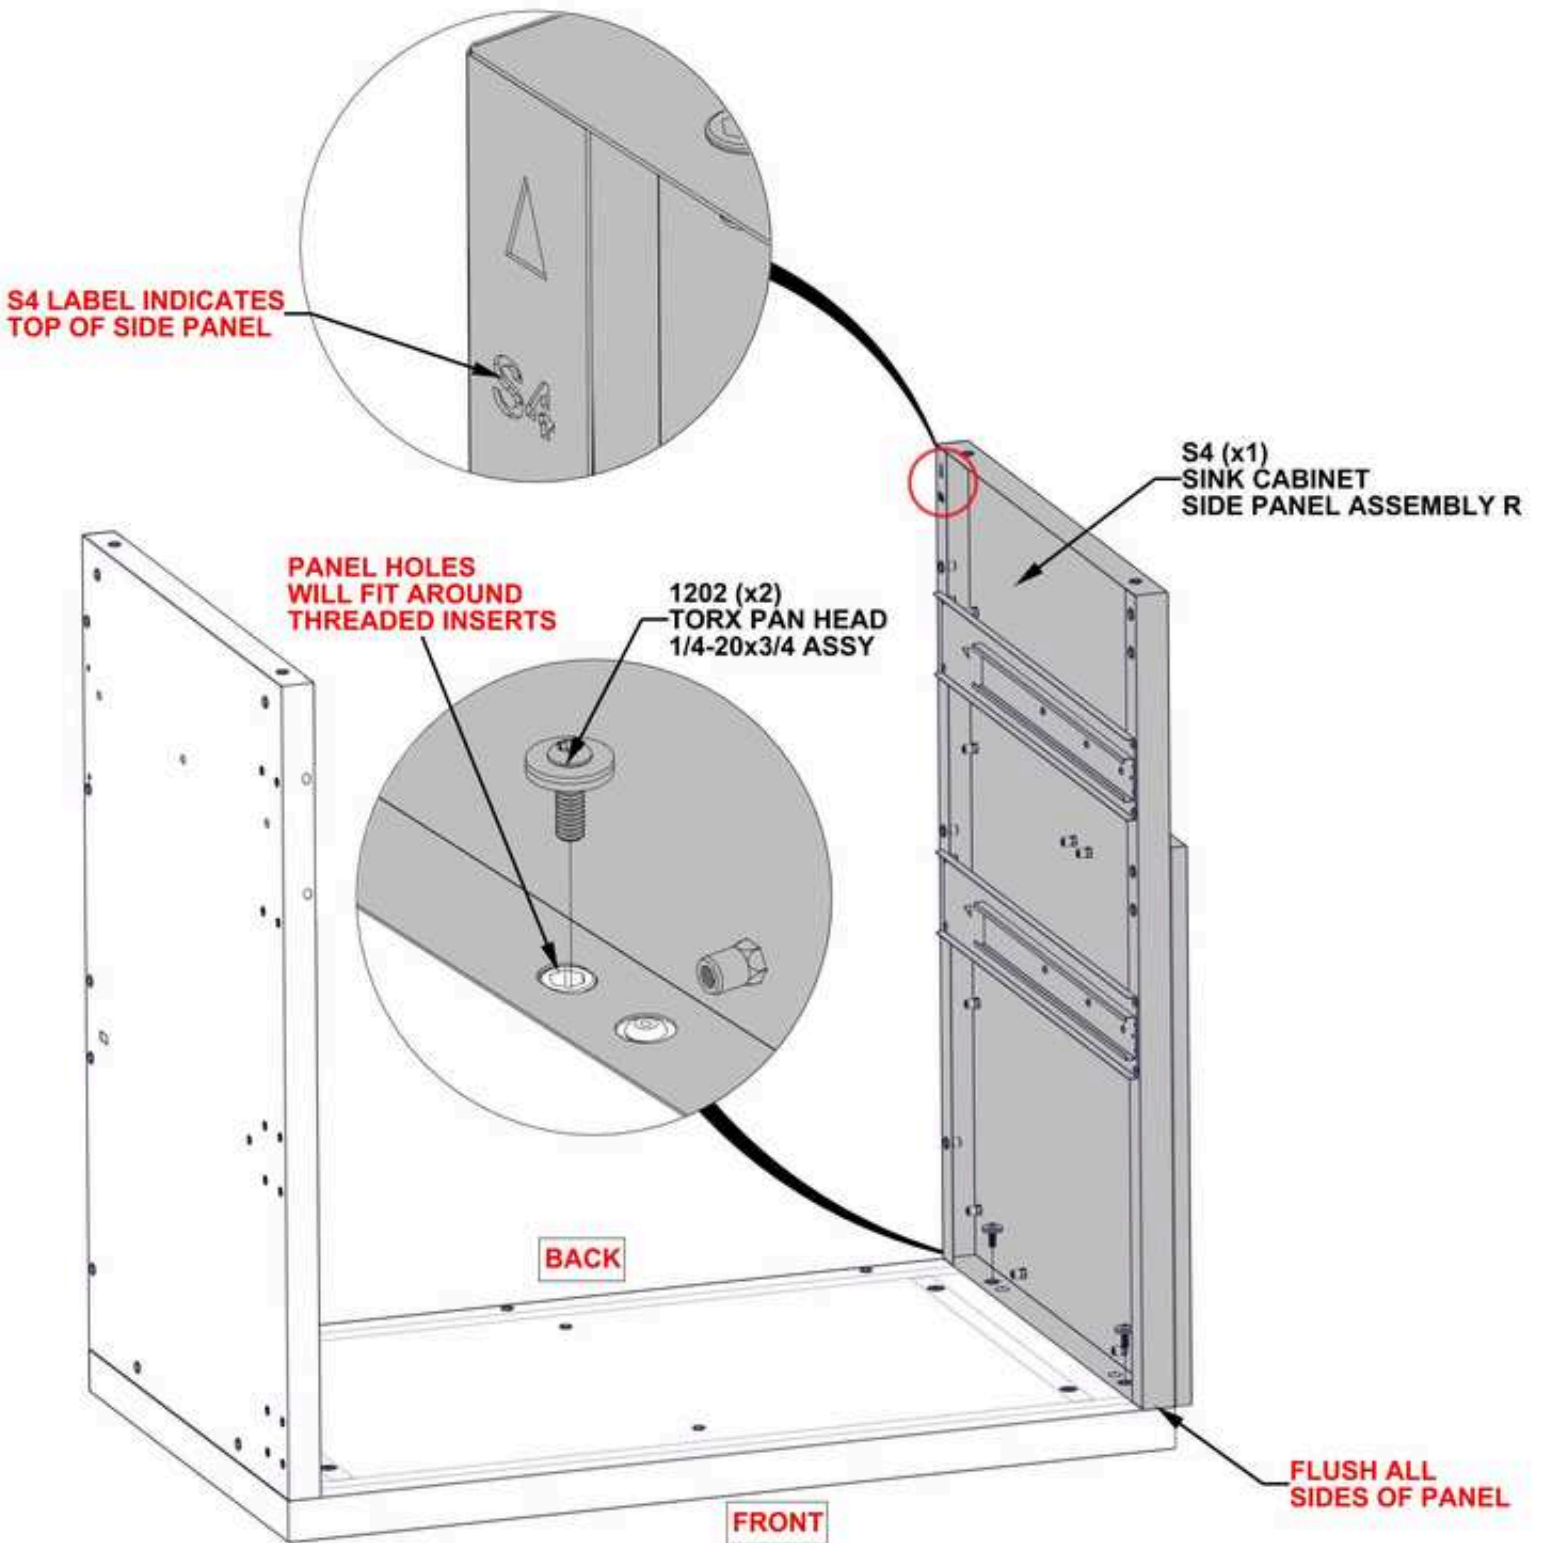


STEP 7 - SINK CABINET ASSEMBLY

Qty	PartNo	Description
9	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY





G3 SINK CABINET BACK PANEL ASSEMBLY - A4M03564
(x1) 34 5/16"x33 3/8"x1 3/16" (30x847.2x872)

G3 LABEL INDICATES
TOP OF BACK PANEL

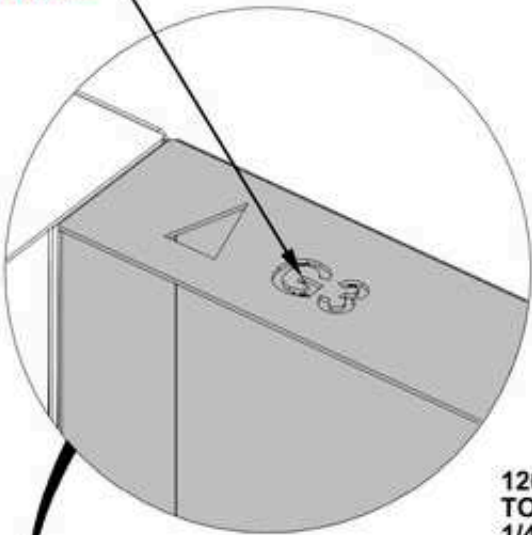

1202 (x9)
TORX PAN HEAD
1/4-20x3/4 ASSY

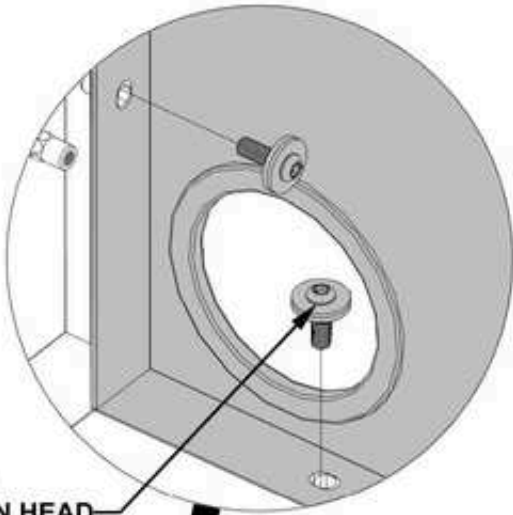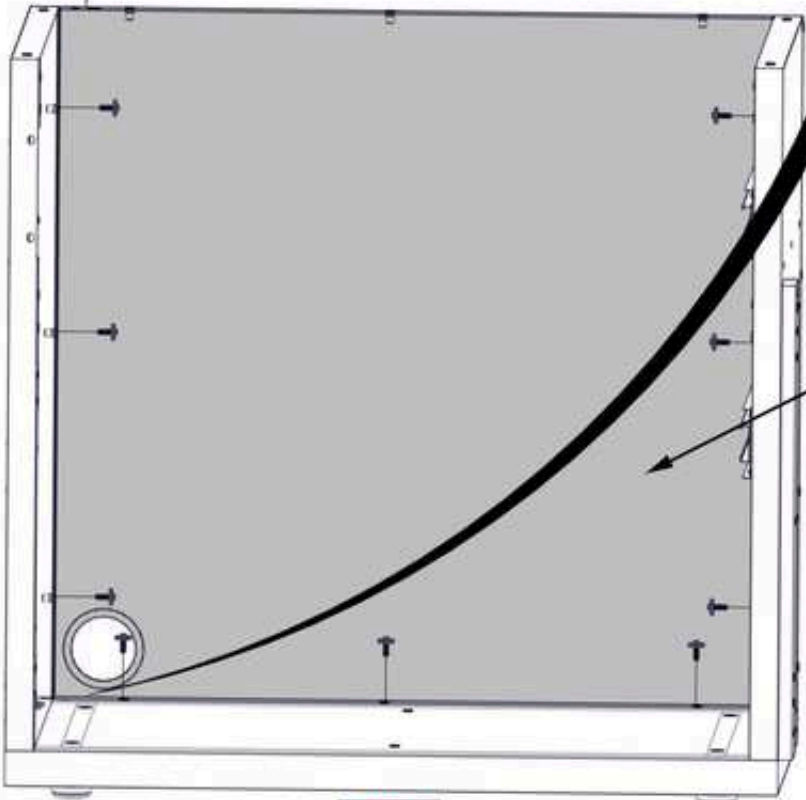

G3 (x1)
SINK CABINET BACK
PANEL ASSEMBLY

FRONT

STEP 8 - SINK CABINET ASSEMBLY

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




S5 SINK CABINET SIDE PANEL ASSEMBLY M - A4M03567
(x1) 33 3/8"x23 3/8"x2 3/16" (56.2x59.3x84.7)

1202 (x2)
TORX PAN HEAD
1/4-20x3/4 ASSY

FLUSH FRONT
SURFACE

S5 LABEL INDICATES
TOP OF SIDE PANEL

S5 (x1)
SINK CABINET SIDE
PANEL ASSEMBLY M

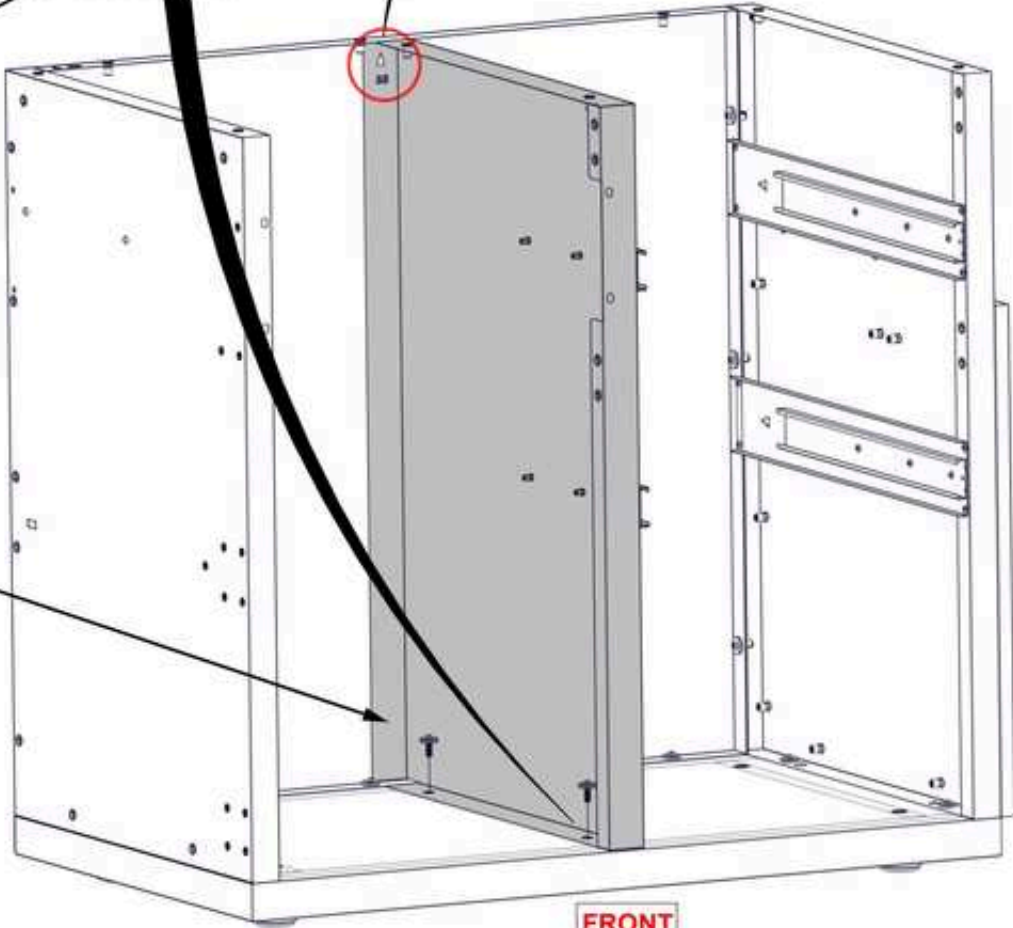


STEP 9 - SINK CABINET ASSEMBLY

Qty	PartNo	Description
16	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY



H4 HORIZONTAL BEAM ASSEMBLY - A4M03575
(x4) 16 1/4"x3 3/8"x1" (25x85x413)

- HARDWARE ATTACHES ON INSIDE OF CABINET

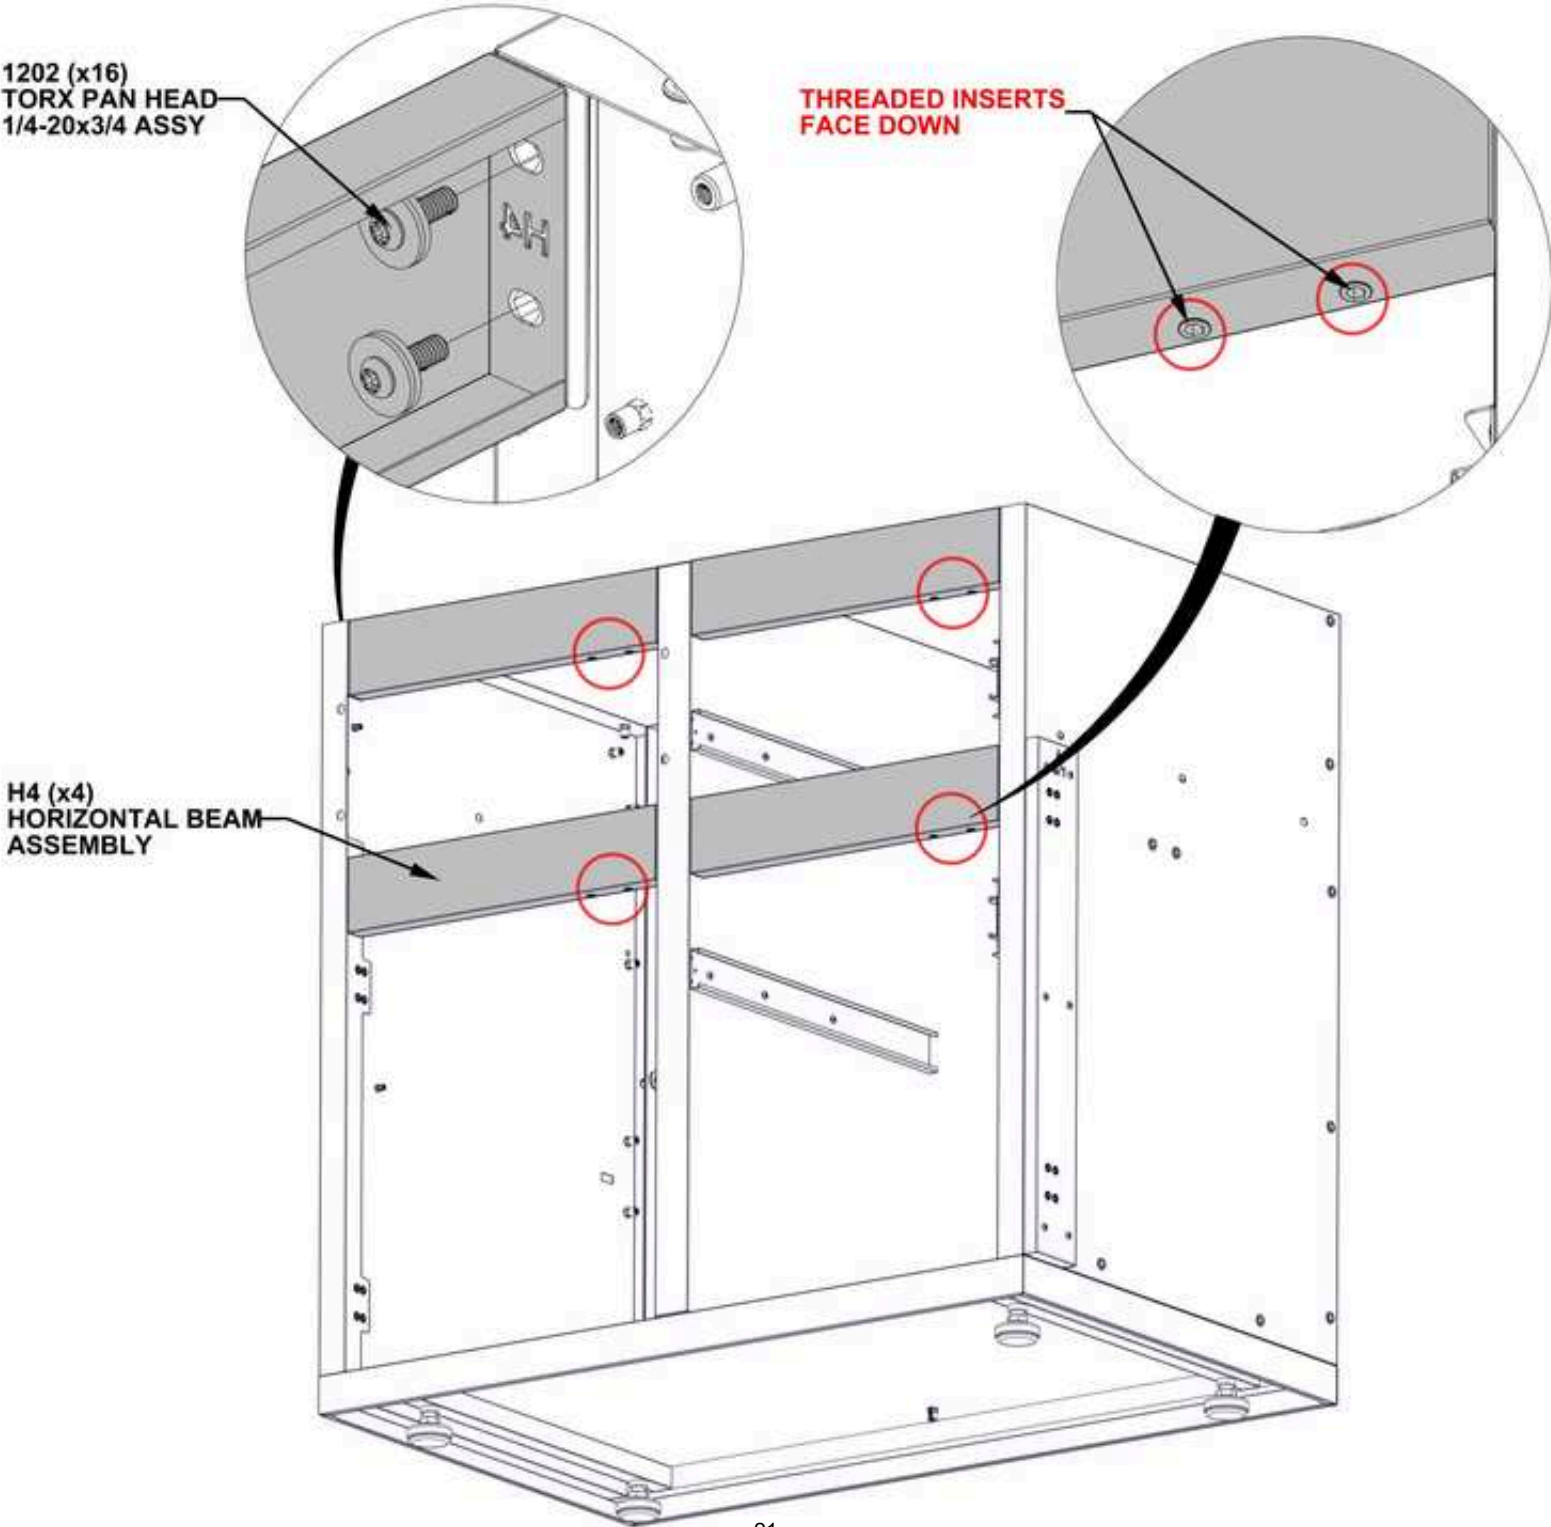


STEP 10 - SINK CABINET ASSEMBLY

Qty	PartNo	Description
2	H101289	PAN HEAD SCREW 8-32x1/2" SS



A2 MAGNET BRACKET - A4M03026
(x1) 1"x1 1/4"x3 1/8" (25x31x80)

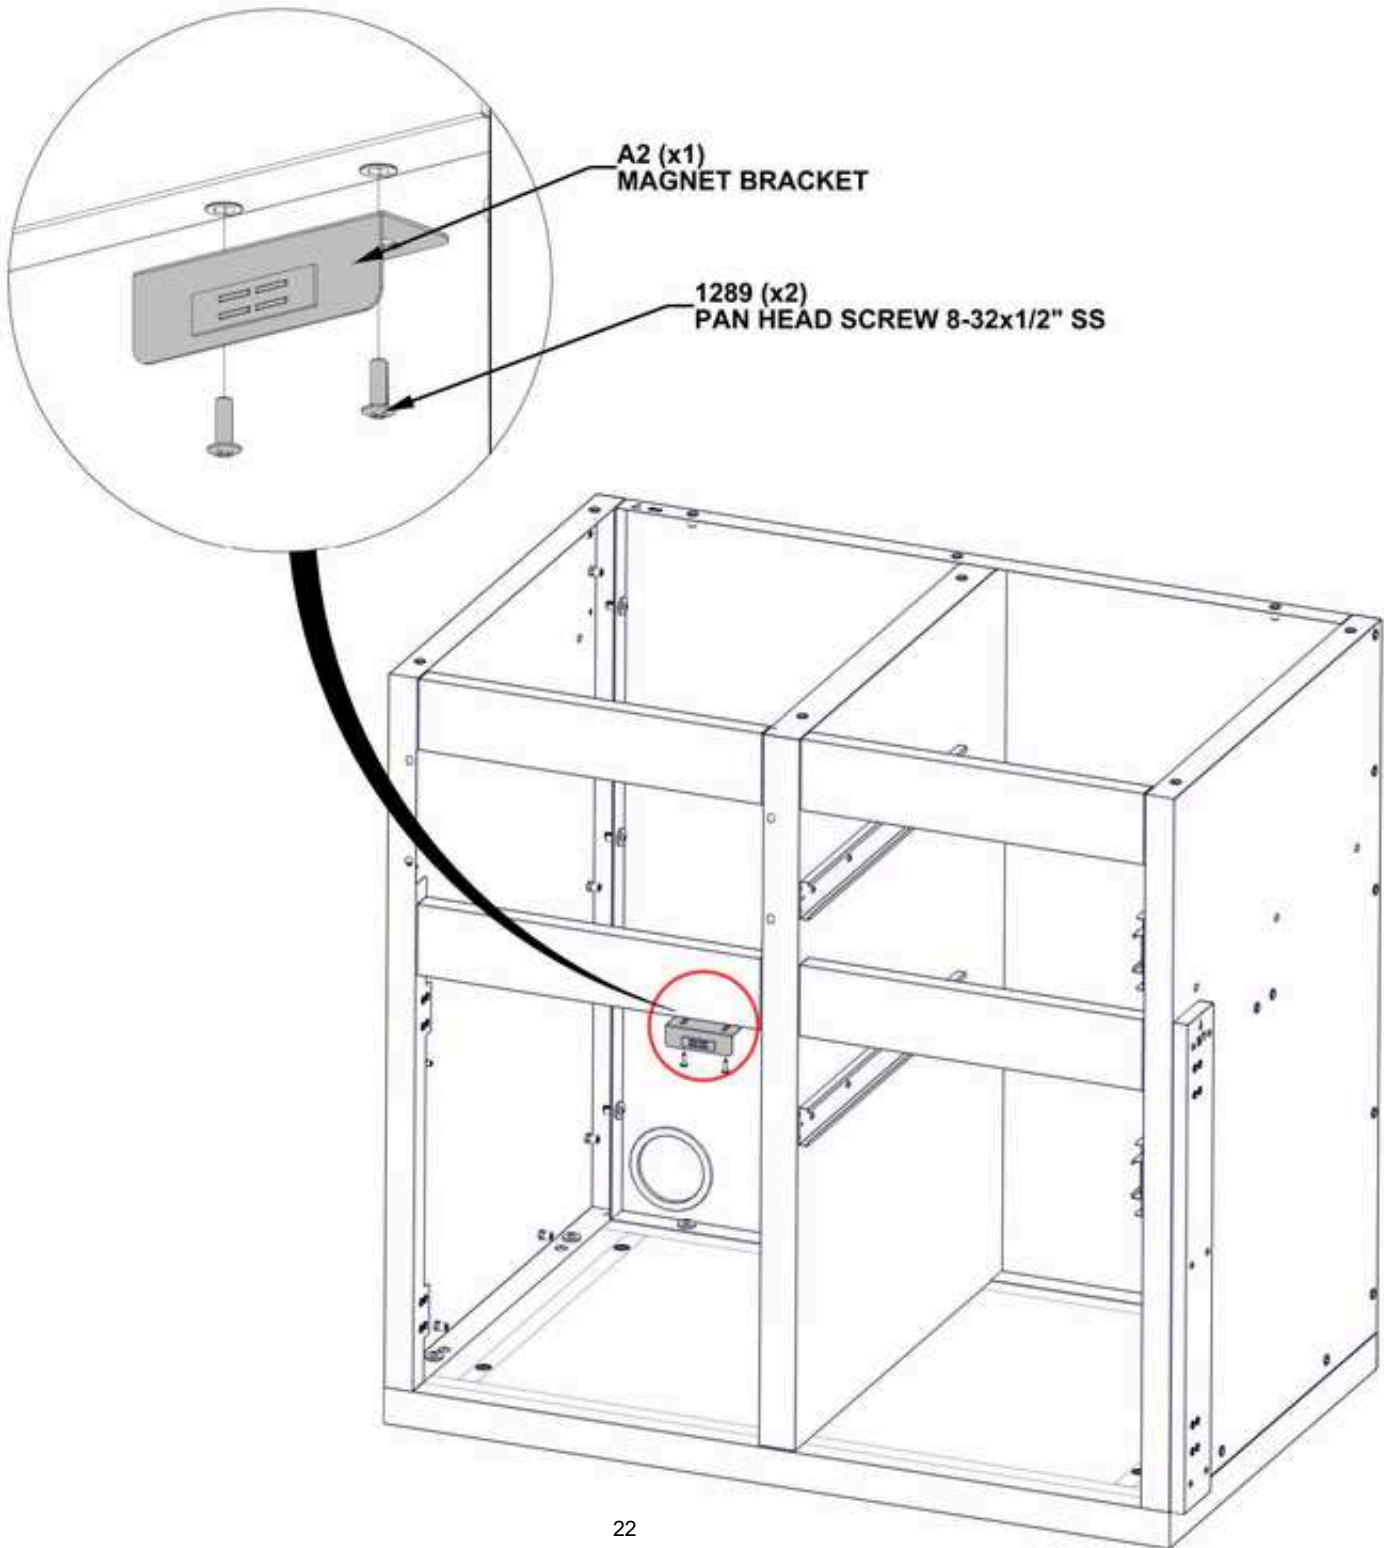


STEP 11 - SINK CABINET ASSEMBLY

Qty	PartNo	Description
6	H101287	PAN HEAD SCREW 8-32x1" SS




H5 CABINET HINGE CHANNEL ASSEMBLY - A4M03558
(x1) 26 5/8"x2 15/16"x11/16" (18x74.80x676)

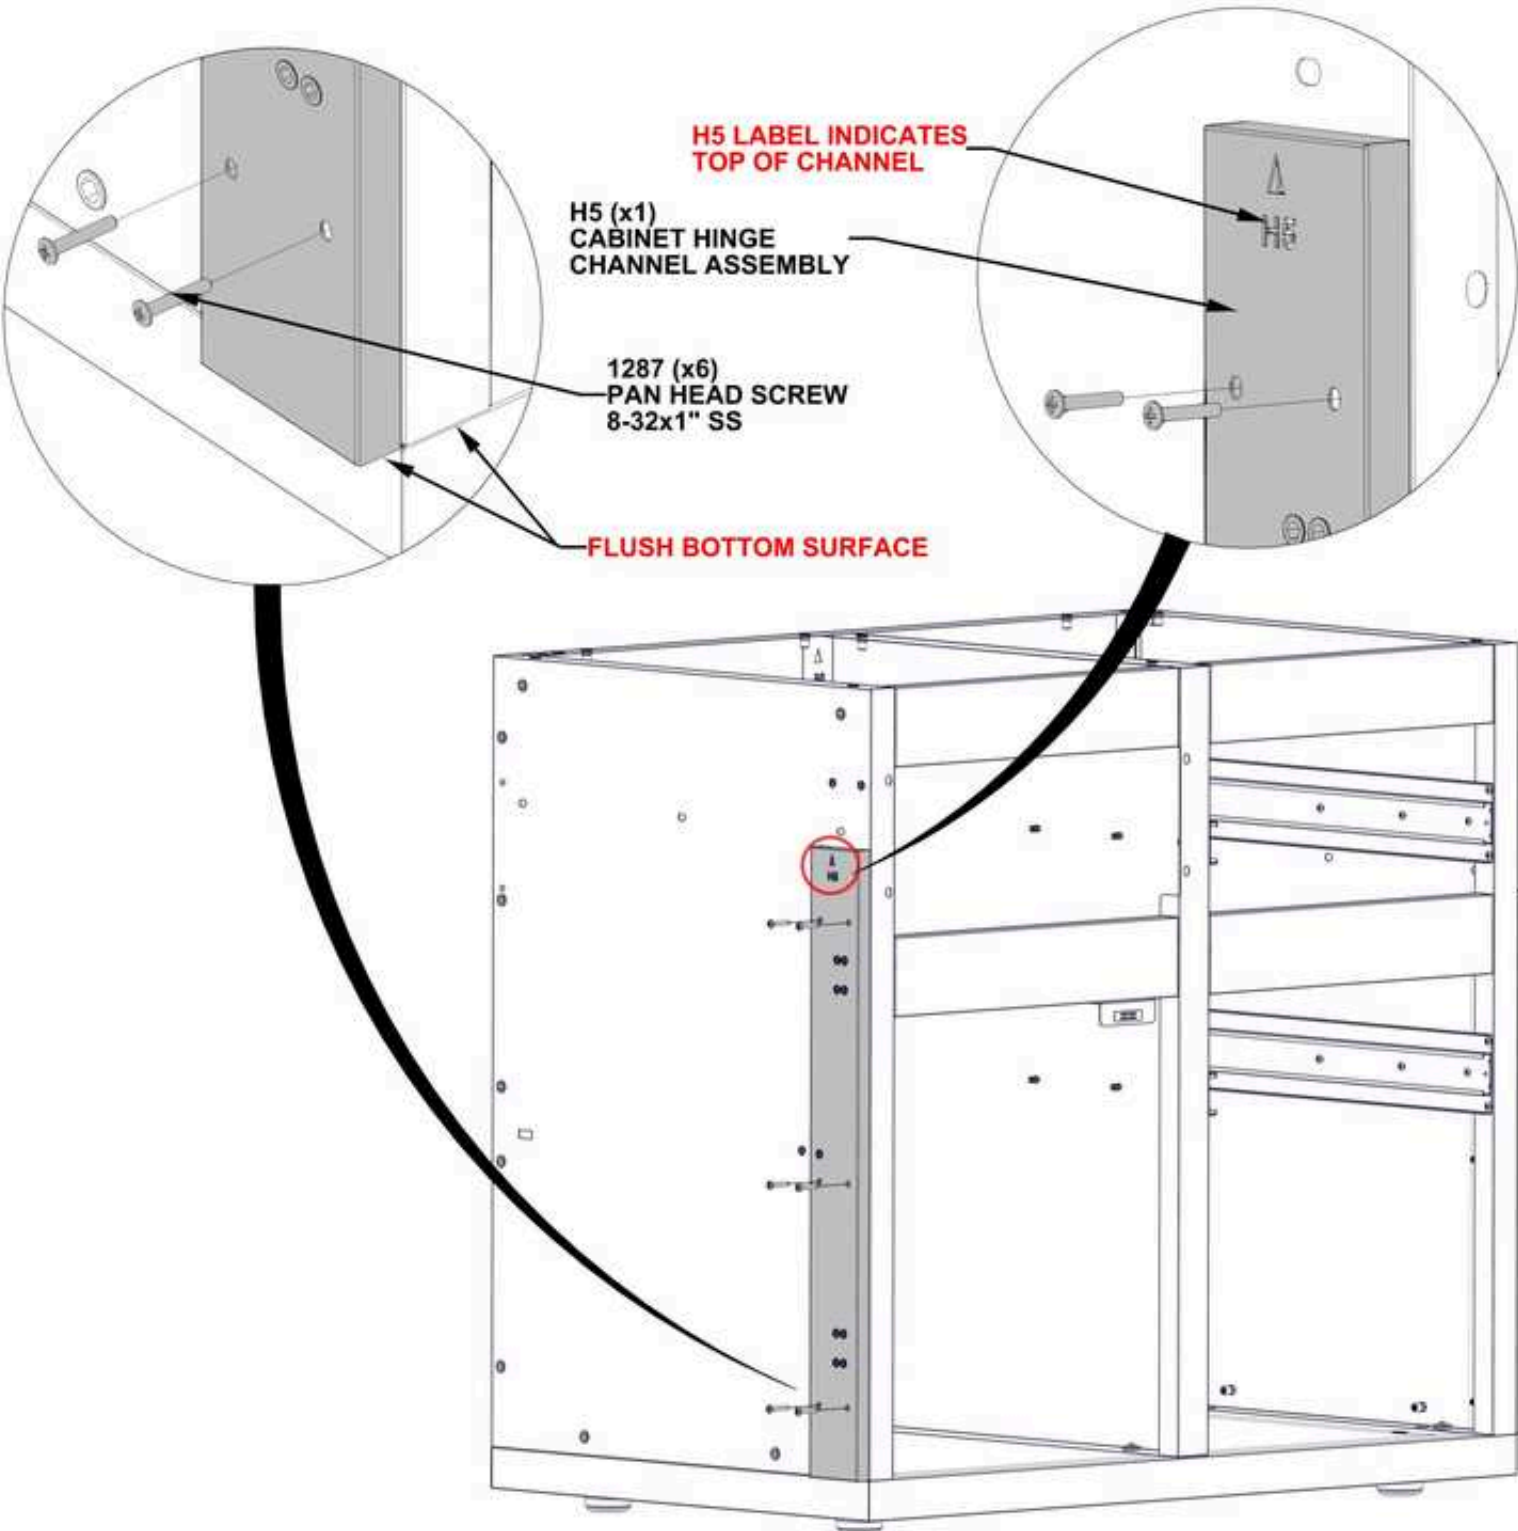


STEP 12 - SINK CABINET ASSEMBLY

Qty	PartNo	Description
9	H101103	TORX SOCKET SCREW 1/4-20

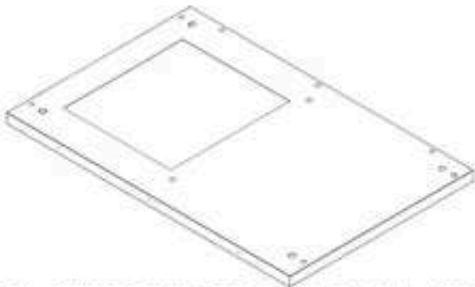

T4 SINK CABINET TABLETOP FRAME - A4M03566
(x1) 37 3/16"x24 1/8"x1 1/4" (32x612x944)

- FLUSH BACK AND SIDE OF PANEL ASSEMBLY.
- SQUARE ALL SIDES OF CABINET BEFORE TIGHTENING HARDWARE.

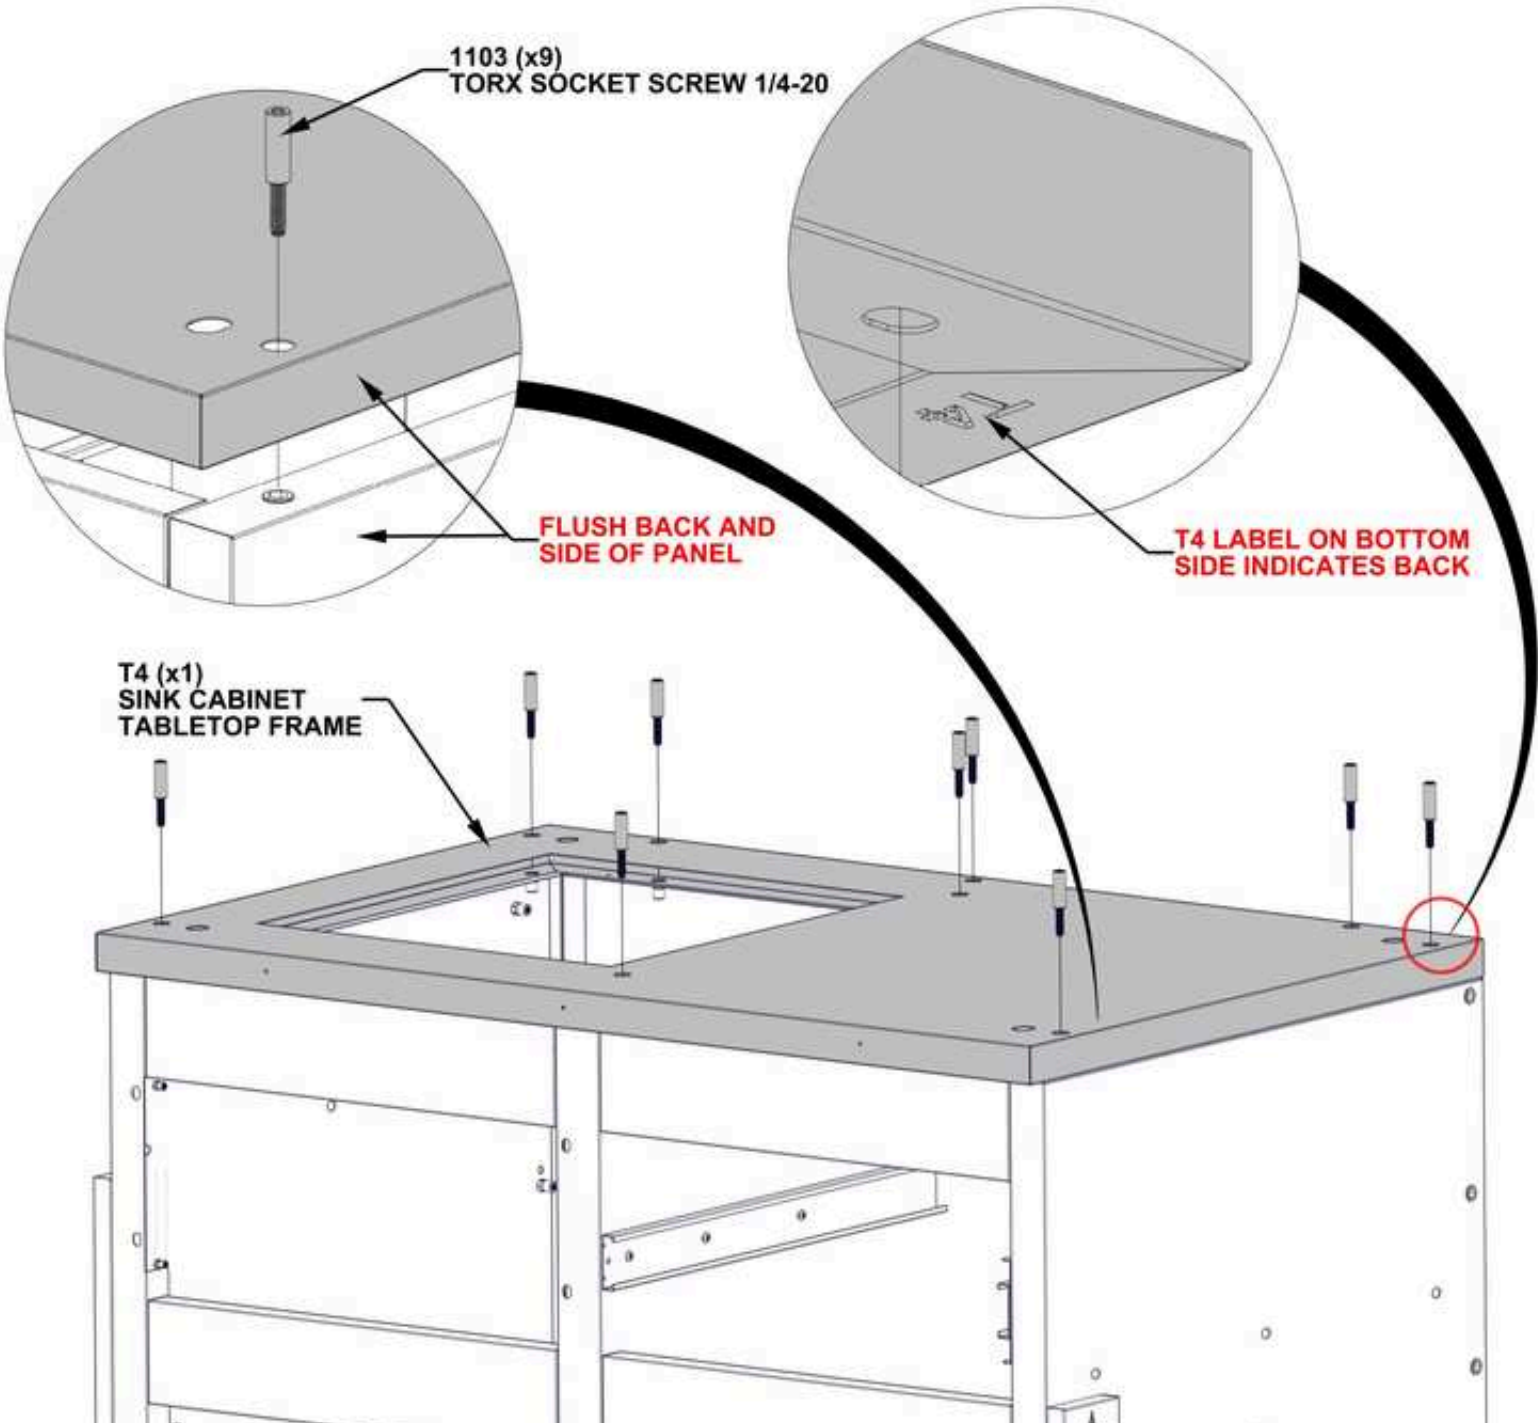


STEP 13 - SINK CABINET INSTALLATION




SINK CABINET FROM
STEPS 5 - 12


-
- POSITION SINK CABINET ASSEMBLY ON THE LEFT SIDE OF FRIDGE CABINET.
 - DISTANCE BETWEEN FRIDGE CABINET WILL BE DETERMINED IN NEXT STEP.

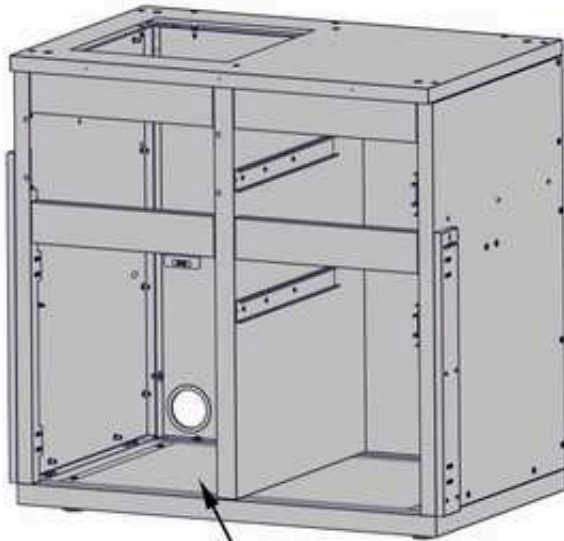

SINK CABINET
FROM STEPS 5 - 12

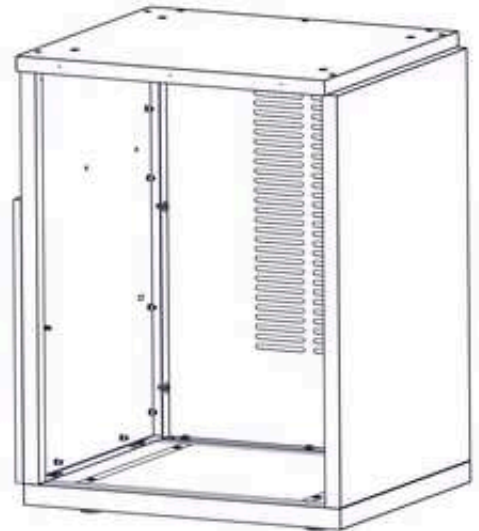


STEP 14 - CABINET ASSEMBLY

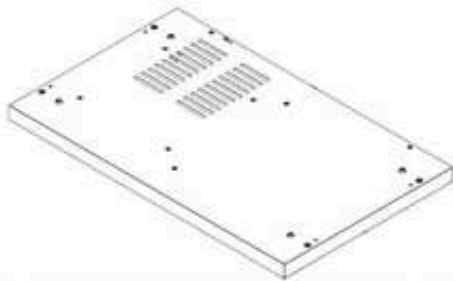


F2 CABINET FLOOR PANEL ASSEMBLY - A4M03048
(x1) 2 5/8"x23 3/8"x38 1/4" (66x594x972)

- LOOKING AT THE FRONT SIDE OF THE CABINETS,
SLIDE FLOOR PANEL IN BETWEEN SINK AND FRIDGE CABINETS.

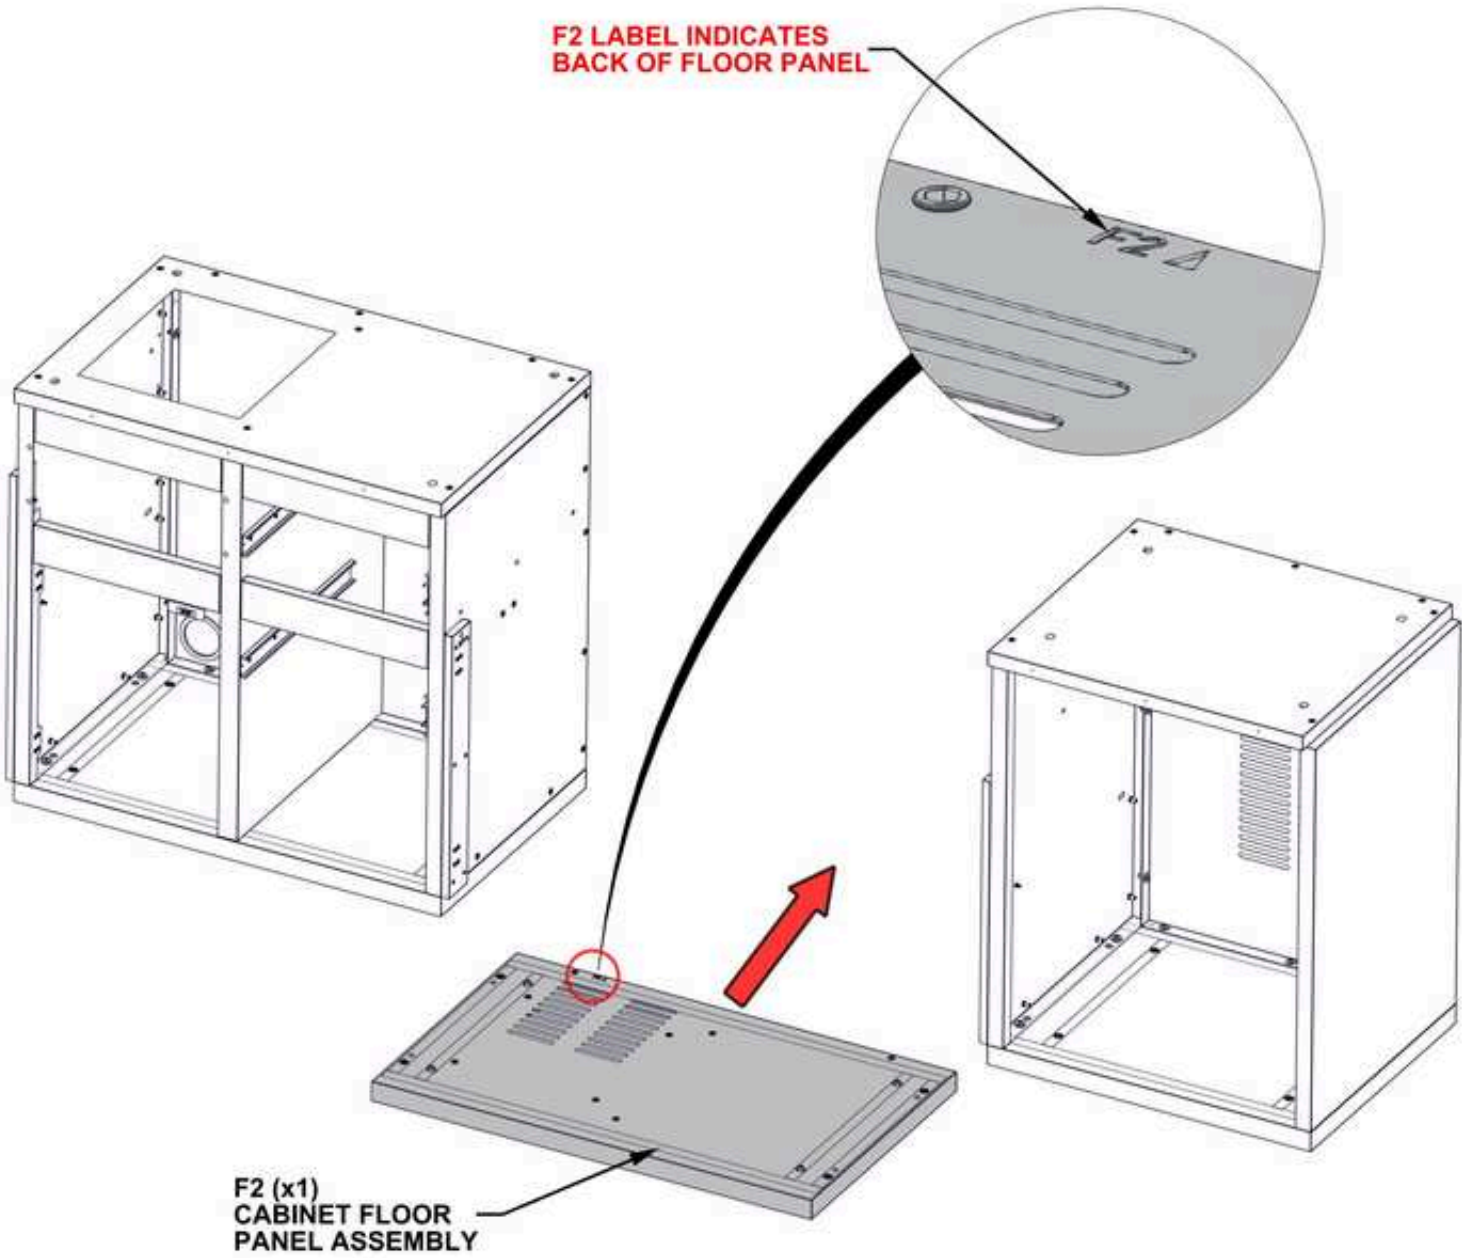


STEP 15 - CABINET ASSEMBLY

- POSITION FLOOR PANEL AS SHOWN BELOW.
- EACH FLOOR PANEL HAS FACTORY INSTALLED ADJUSTABLE FEET. USE PROVIDED HEX DRIVER TO ADJUST EACH FOOT UNTIL PANEL IS LEVEL.
- ADJUST SINK AND FRIDGE CABINET TO ELIMINATE GAPS BETWEEN FLOOR PANEL AND CABINETS.


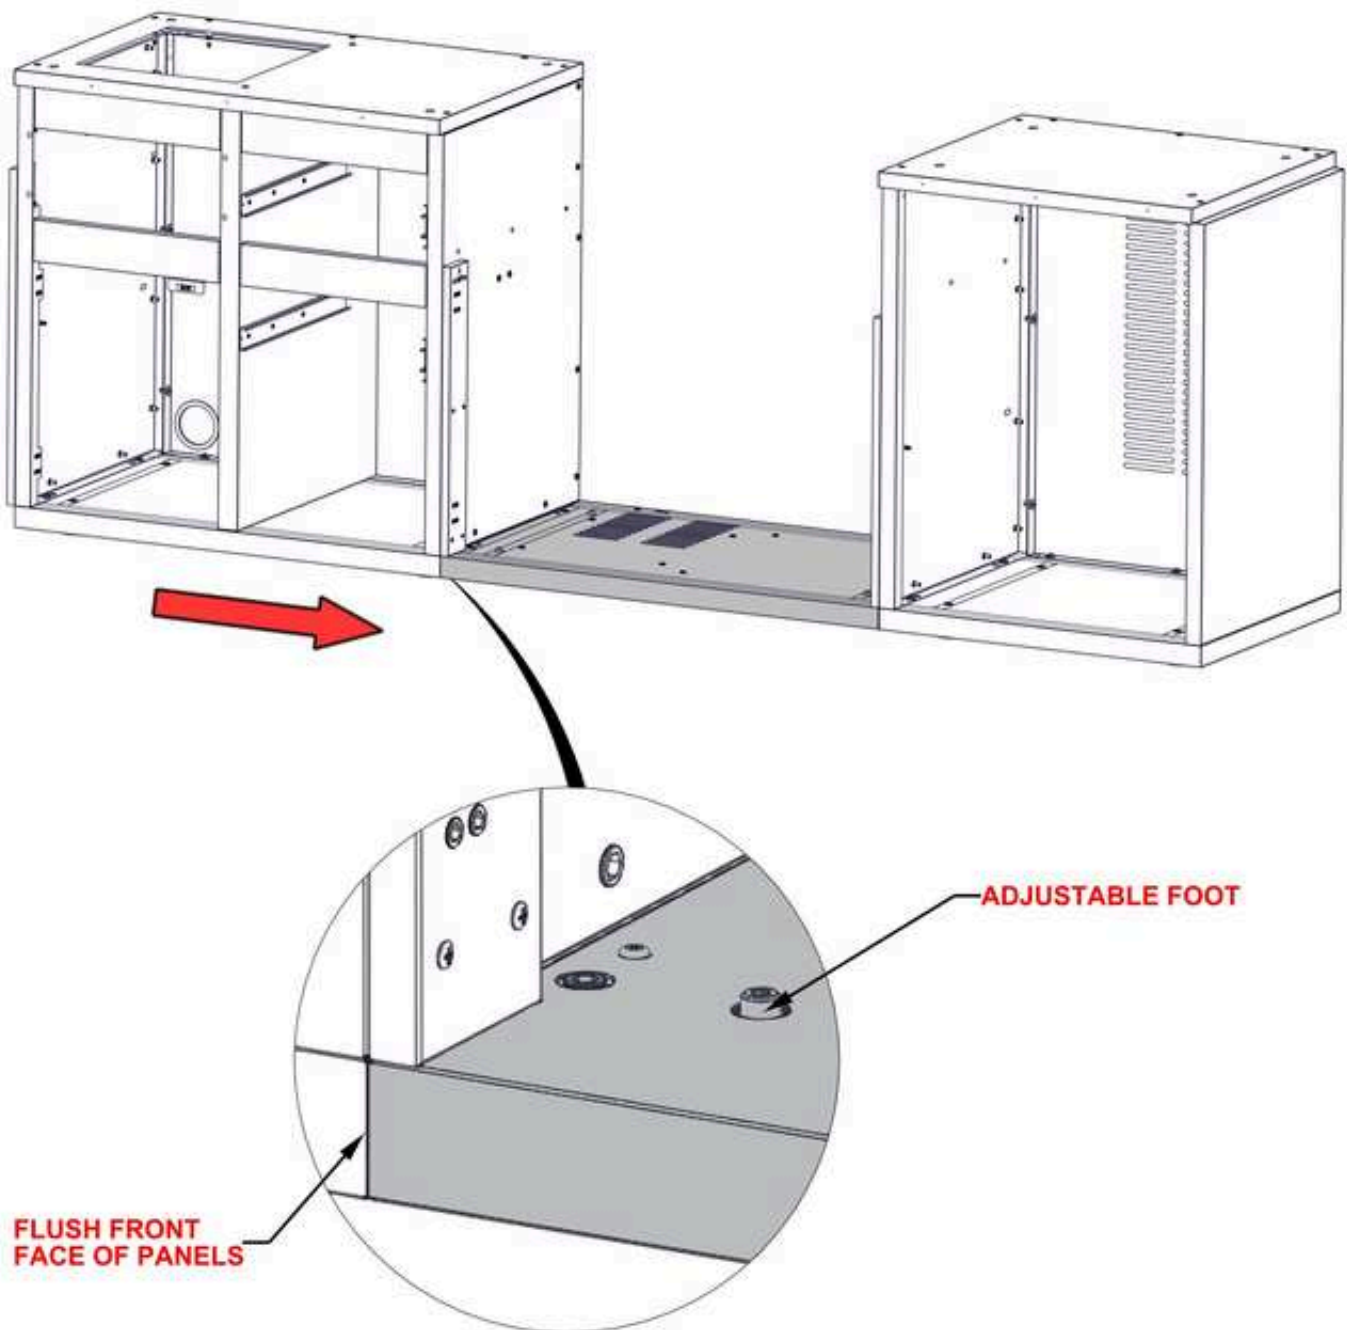


STEP 16 - CABINET ASSEMBLY

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

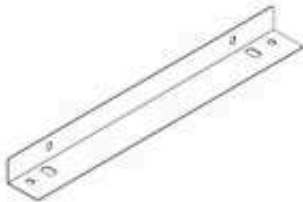

A6 ANGLED BRACKET - A4M03053
(x1) 1 3/8"x1 15/16"x17 1/8" (35x50x435)

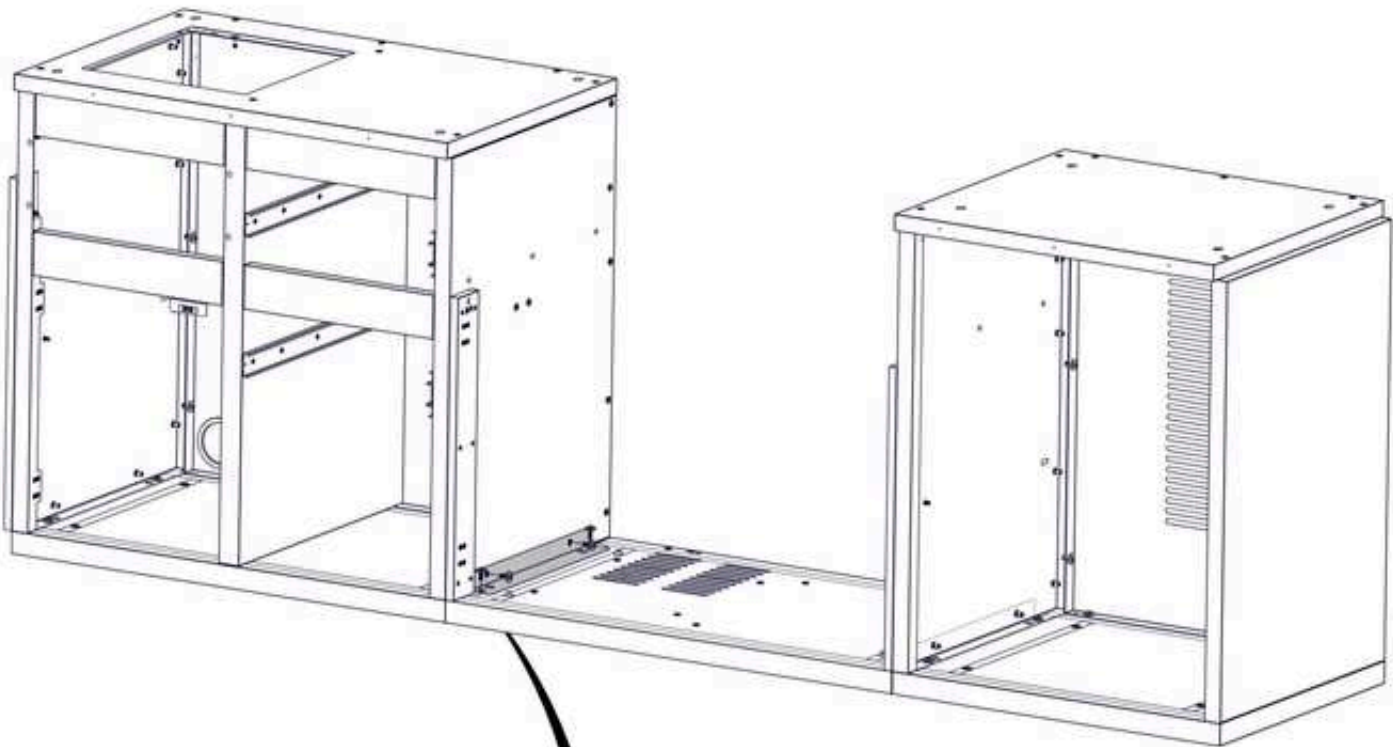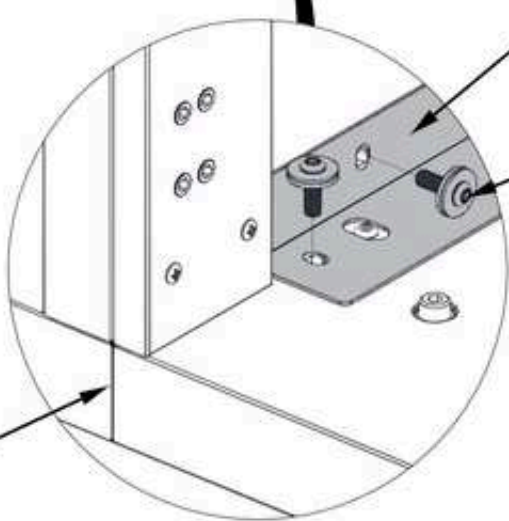


A6 (x1)
ANGLED BRACKET

1202 (x4)
TORX PAN HEAD 1/4-20x3/4 ASSY


MAKE SURE FRONT
FACE OF FLOOR
PANELS ARE FLUSH

STEP 17 - CABINET ASSEMBLY

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

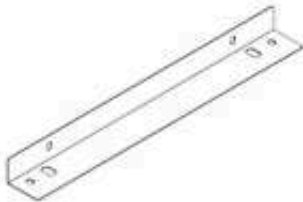


A6 ANGLED BRACKET - A4M03053
(x1) 1 3/8"x1 15/16"x17 1/8" (35x50x435)

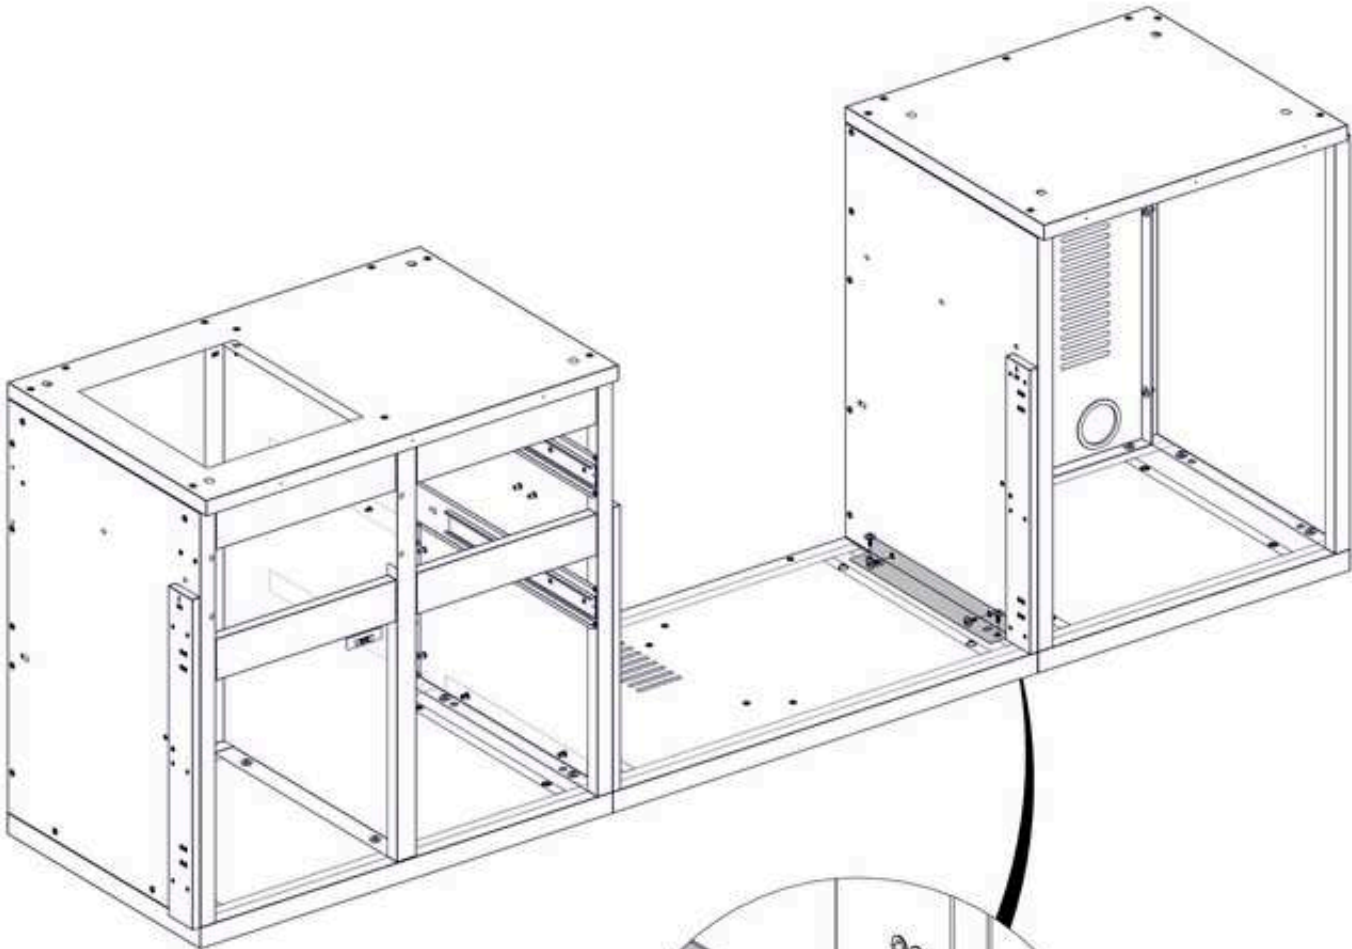

1202 (x4)
TORX PAN HEAD 1/4-20x3/4 ASSY

A6 (x1)
ANGLED BRACKET

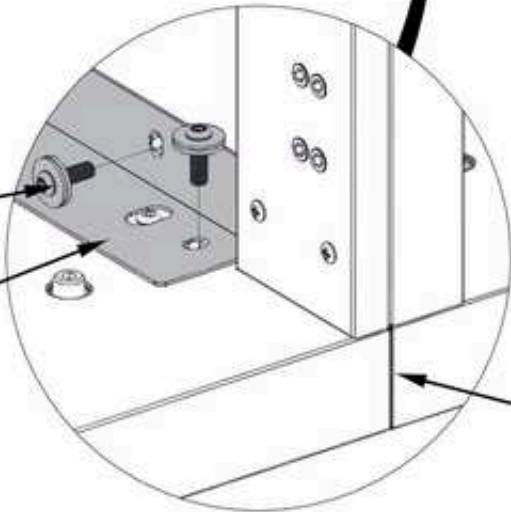

MAKE SURE FRONT
FACE OF FLOOR
PANELS ARE FLUSH


STEP 18 - CABINET ASSEMBLY

Qty	PartNo	Description
8	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




G10 CABINET BACK PANEL ASSEMBLY - A4M03055
(x1) 1 3/16"x22 7/8"x38 3/16" (30x581x970)

G10 LABEL INDICATES
TOP OF BACK PANEL

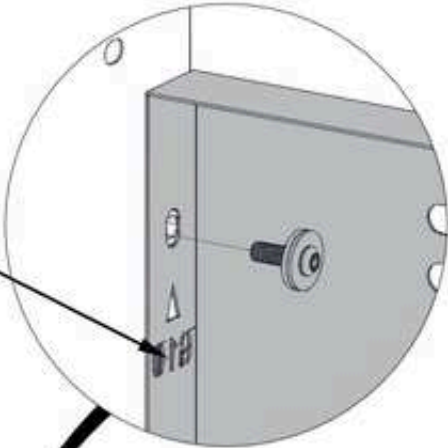


G10 (x1)
CABINET
BACK PANEL
ASSEMBLY

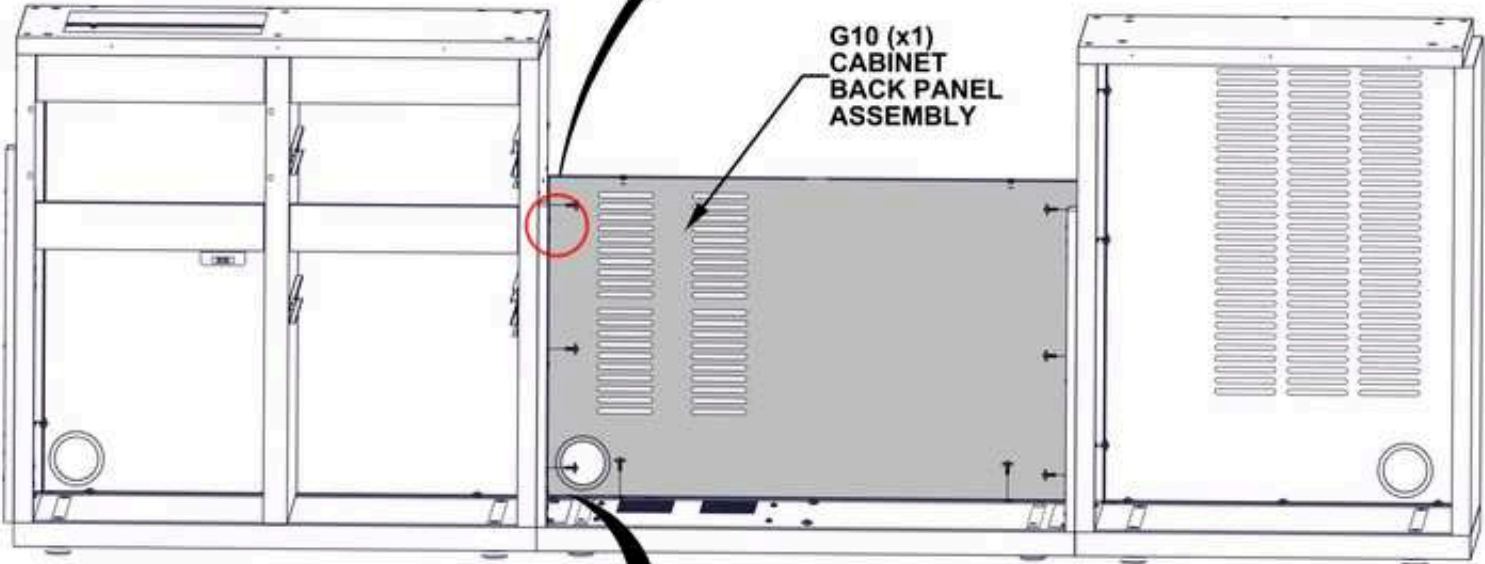

1202 (x8)
TORX PAN HEAD 1/4-20x3/4 ASSY

HAND TIGHTEN ONLY

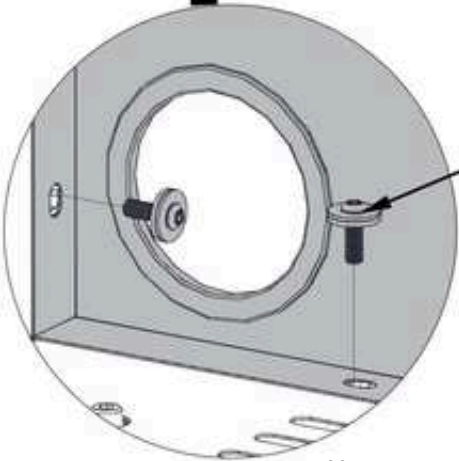


STEP 19 - CABINET ASSEMBLY

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




S6 CABINET SIDE PANEL ASSEMBLY M - A4M03586
(x1) 23 3/8"x22 7/8"x1 3/8" (35x581x593)

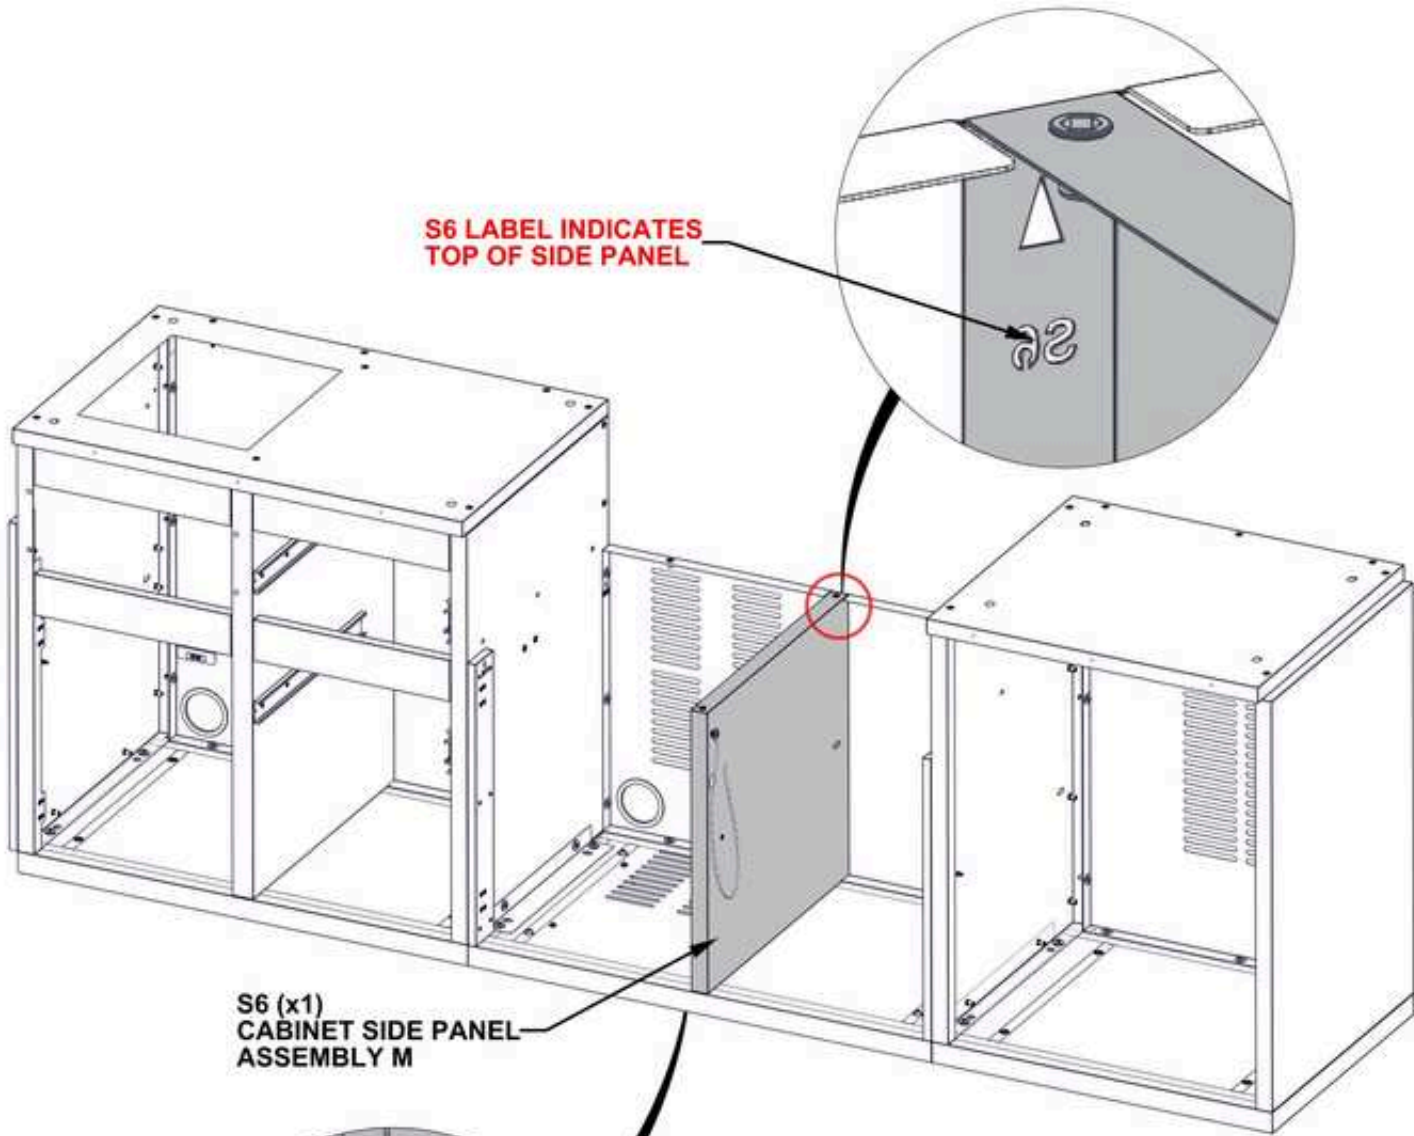

S6 LABEL INDICATES
TOP OF SIDE PANEL

S6 (x1)
CABINET SIDE PANEL
ASSEMBLY M

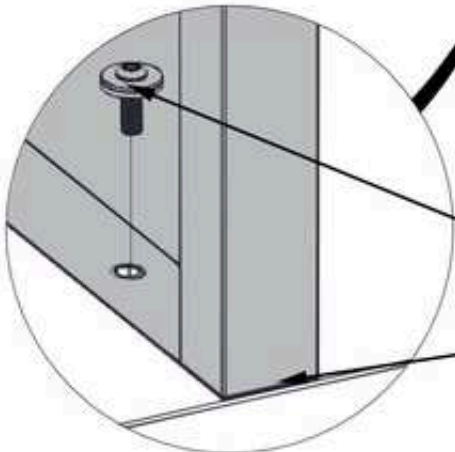

TIGHTEN ALL HARDWARE

1202 (x2)
TORX PAN HEAD 1/4-20x3/4 ASSY


FLUSH FRONT FACE
OF SIDE PANEL WITH
FLOOR PANEL

STEP 20A - CABINET ASSEMBLY



A5 SHELF BRACKET - A4M03141
(x2) 5/8"x7/8"x2 1/16" (16x22x53)

- BRACKETS WILL BE TOWARD THE BACK OF THE CABINET.
- ATTACH SHELF BRACKETS ON BOTH SIDES OF CENTER CABINET.

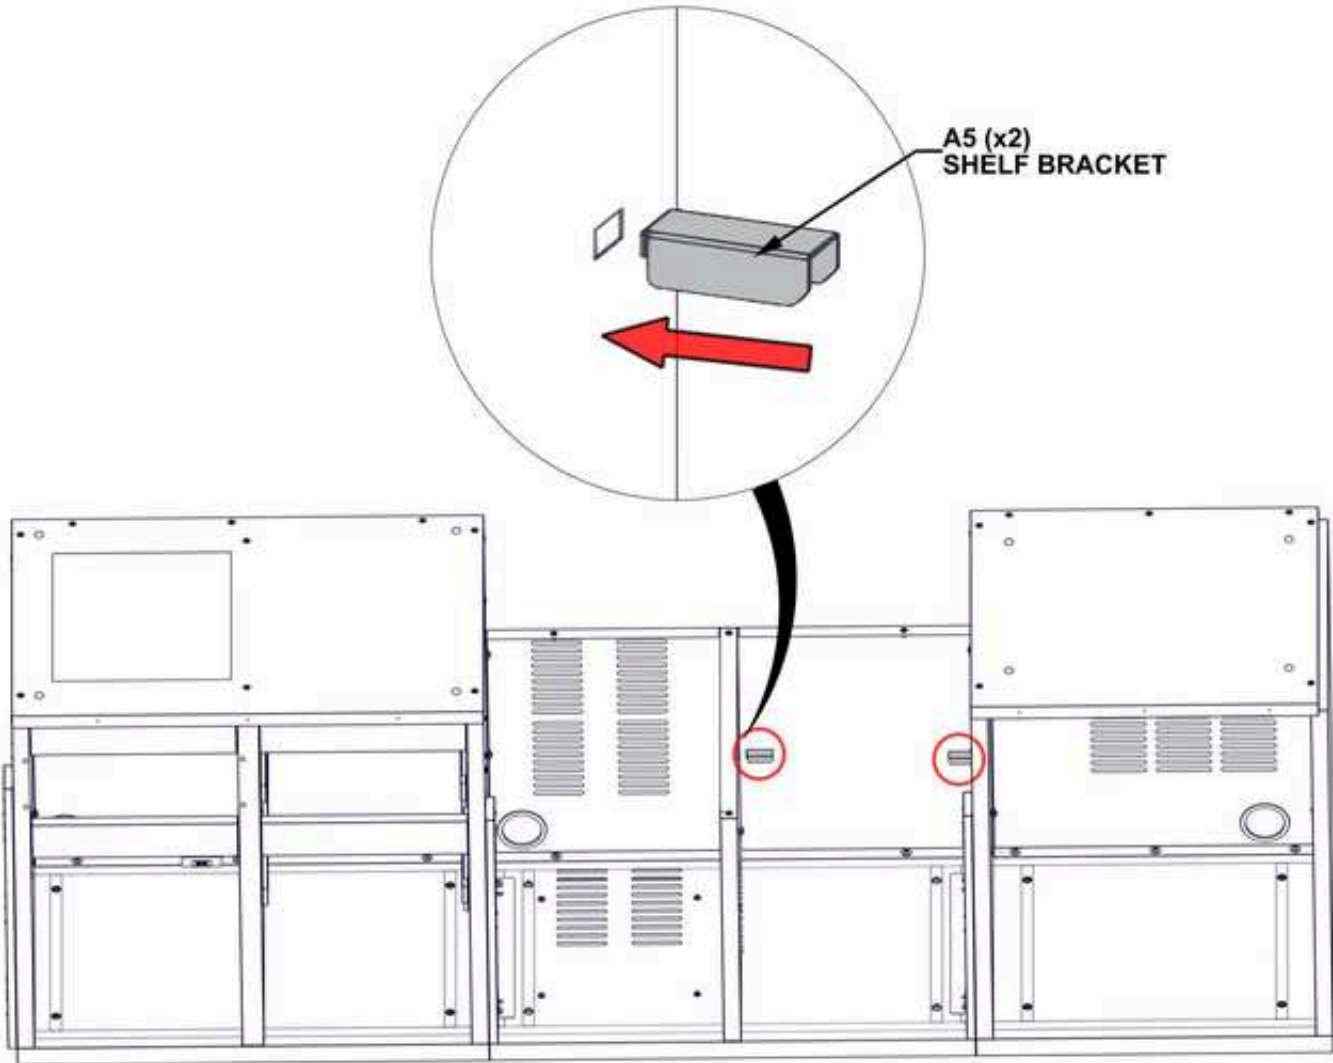


STEP 20B - CABINET ASSEMBLY

Qty	PartNo	Description
3	H101289	PAN HEAD SCREW 8-32x1/2" SS



L2 SHELF ASSEMBLY - A4M03589
(x1) 23 1/4"x18 3/8"x1" (25.00x467.00x591.00)

- ALIGN SHELF WITH THREADED INSERTS AND ATTACH HARDWARE TO FASTEN IN PLACE.

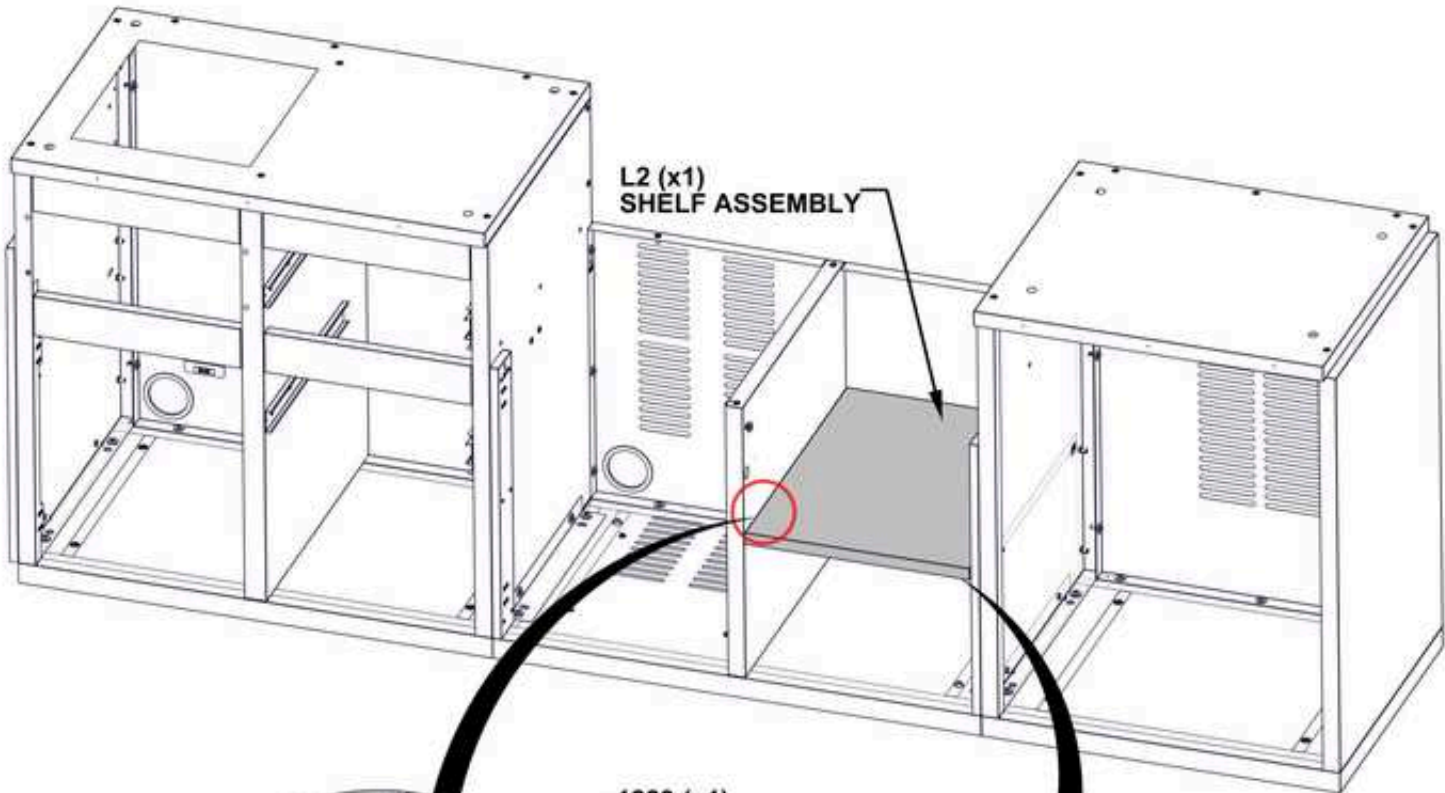

L2 (x1)
SHELF ASSEMBLY

1289 (x1)
PAN HEAD SCREW
8-32x1/2" SS

1289 (x2)
PAN HEAD SCREW
8-32x1/2" SS


L2 LABEL INDICATES
FRONT OF SHELF

STEP 21 - CABINET ASSEMBLY

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




A9 HOSE BRACKET ASSEMBLY - A4M03060
(x1) 1 1/4"x1 7/16"x2 9/16" (31.5x36.5x65)

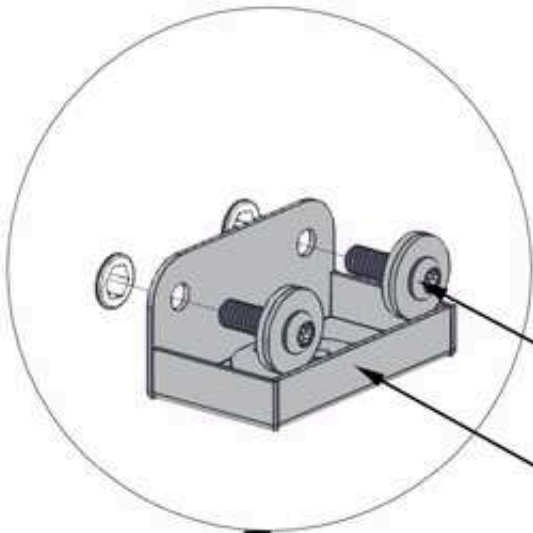

1202 (x2)
TORX PAN HEAD 1/4-20x3/4 ASSY

A9 (x1)
HOSE BRACKET ASSEMBLY

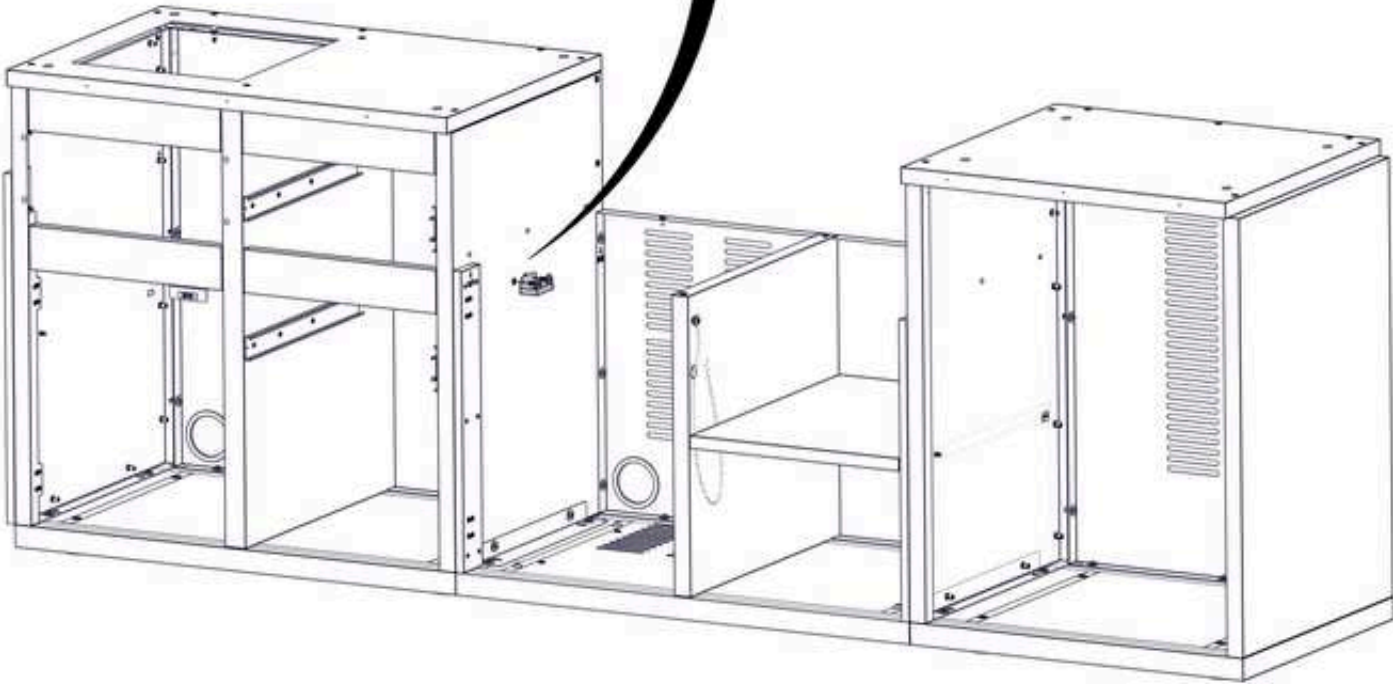


STEP 22 - CABINET ASSEMBLY

Qty	PartNo	Description
4	H101292	TORX PAN HEAD 1/4-20x13/32"




A13 GAS TANK HOLDER ASSEMBLY - A4M03047
(x1) 1 15/16"x12 7/8"x14 3/4" (49x327x374)

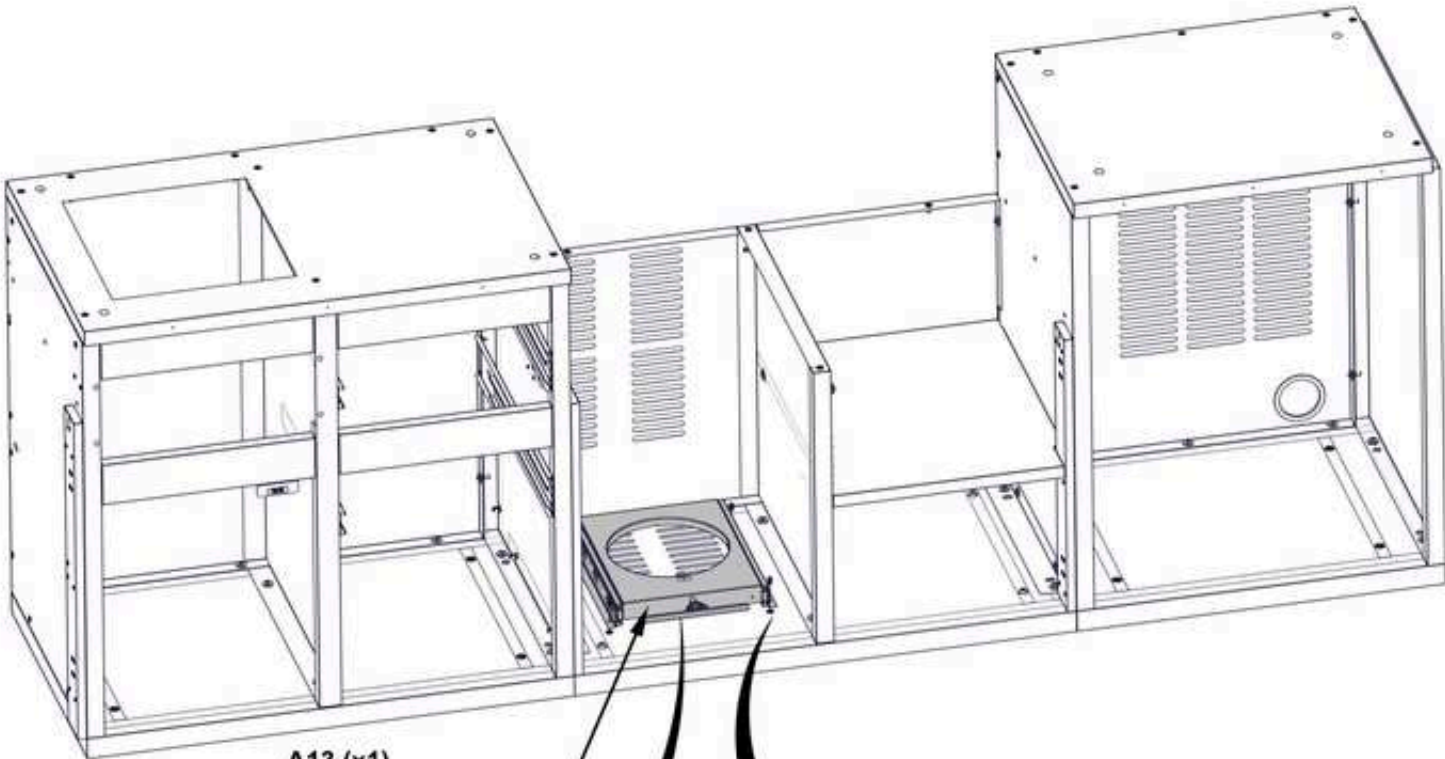

A13 (x1)
GAS TANK HOLDER
ASSEMBLY

1292 (x4)
TORX PAN HEAD 1/4-20x13/32"

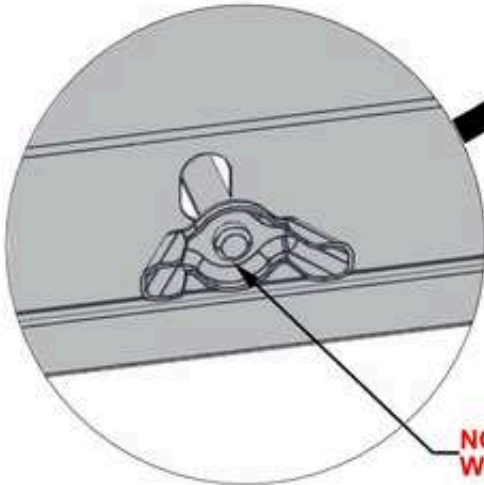

NOTE ORIENTATION OF
WING NUT TOWARDS FRONT

STEP 23 - CABINET ASSEMBLY


Qty	PartNo	Description
4	H101289	PAN HEAD SCREW 8-32x1/2" SS



T2 TABLETOP ASSEMBLY - A4M03057
(x1) 1 1/4"x23 3/8"x38 3/16" (32x594x970)




A2 MAGNET BRACKET - A4M03026
(x2) 1"x1 1/4"x3 1/8" (25x31x80)

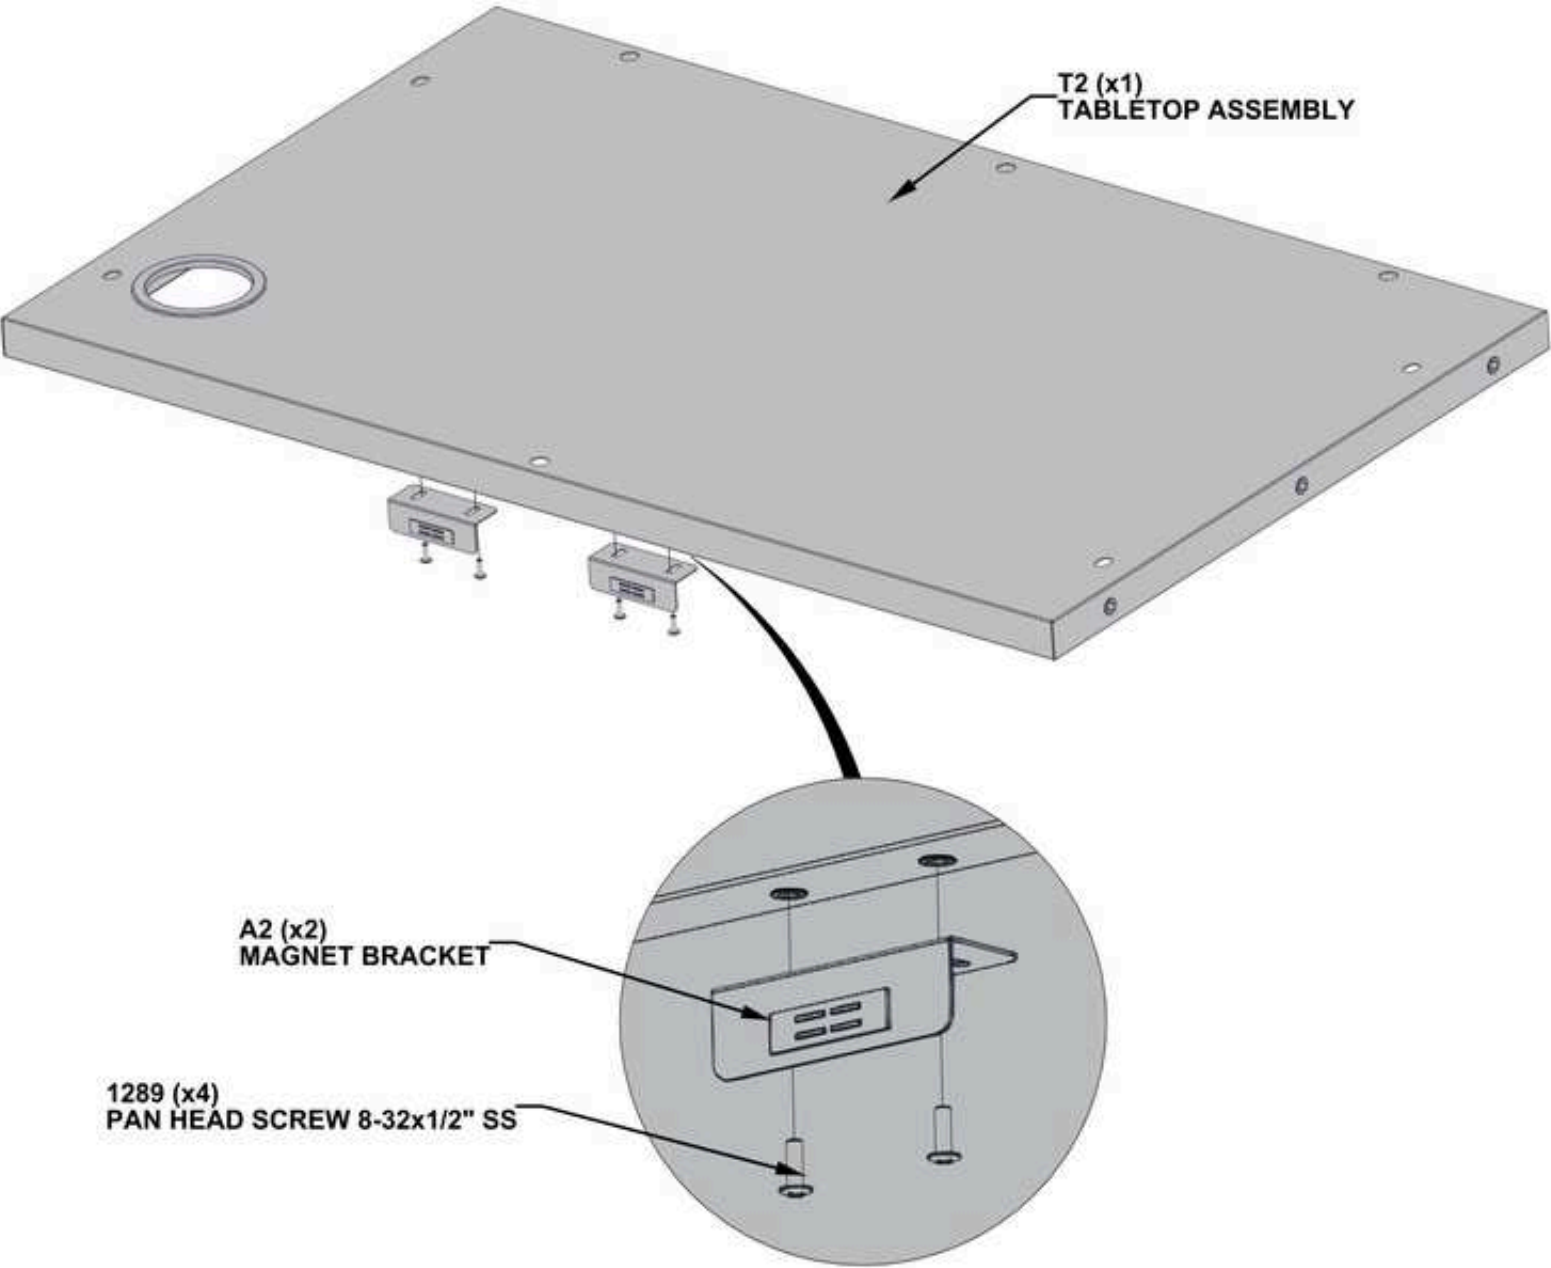


STEP 24A - CABINET ASSEMBLY

Qty	PartNo	Description
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

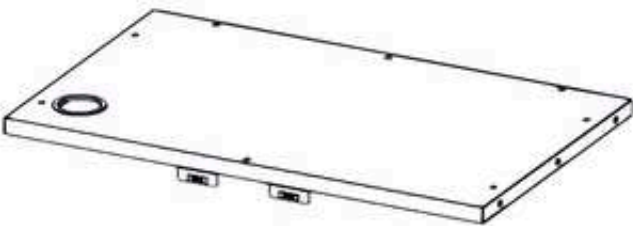


TABLETOP ASSEMBLY
FROM STEP 23

- HARDWARE ATTACHES ON INSIDE OF ADJACENT CABINETS.

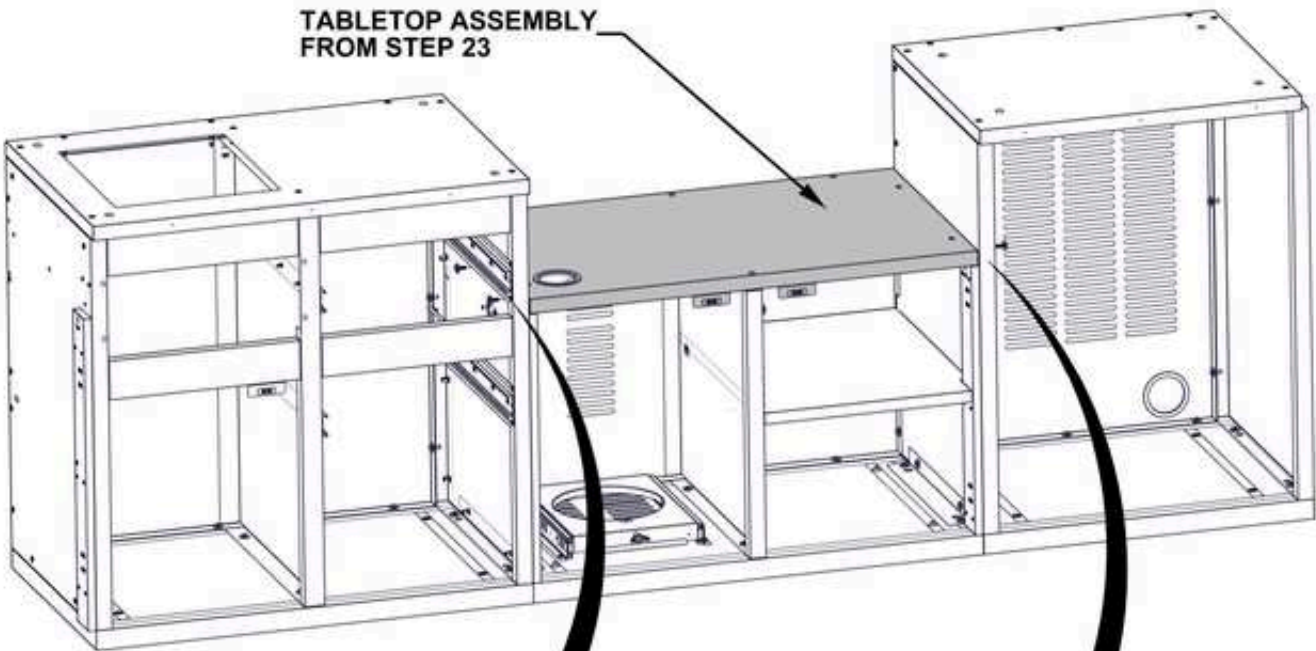


HAND TIGHTEN ONLY

1202 (x3)
TORX PAN HEAD
1/4-20x3/4 ASSY

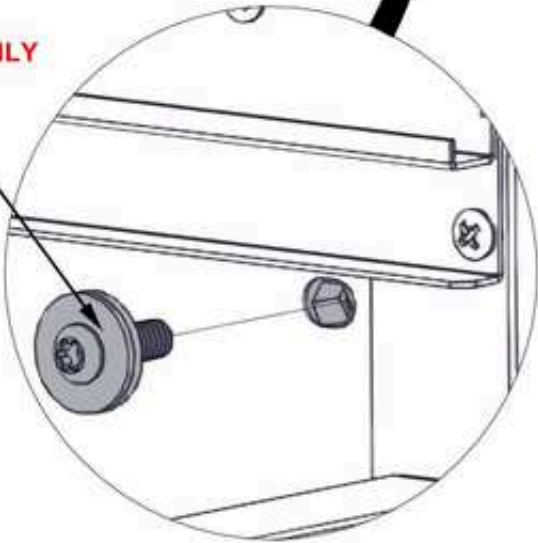



HAND TIGHTEN ONLY

1202 (x3)
TORX PAN HEAD
1/4-20x3/4 ASSY

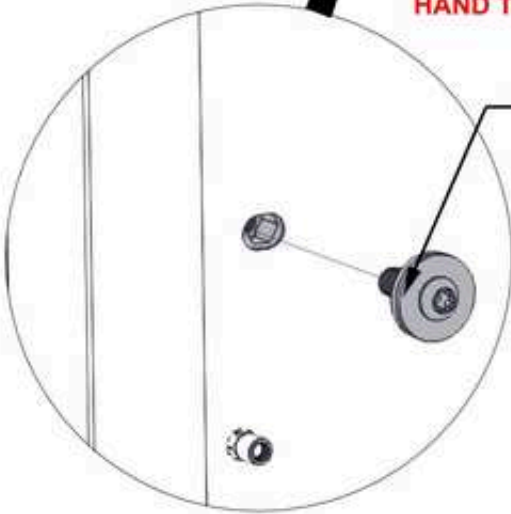

STEP 24B - CABINET ASSEMBLY

Qty	PartNo	Description
4	H101103	TORX SOCKET SCREW 1/4-20

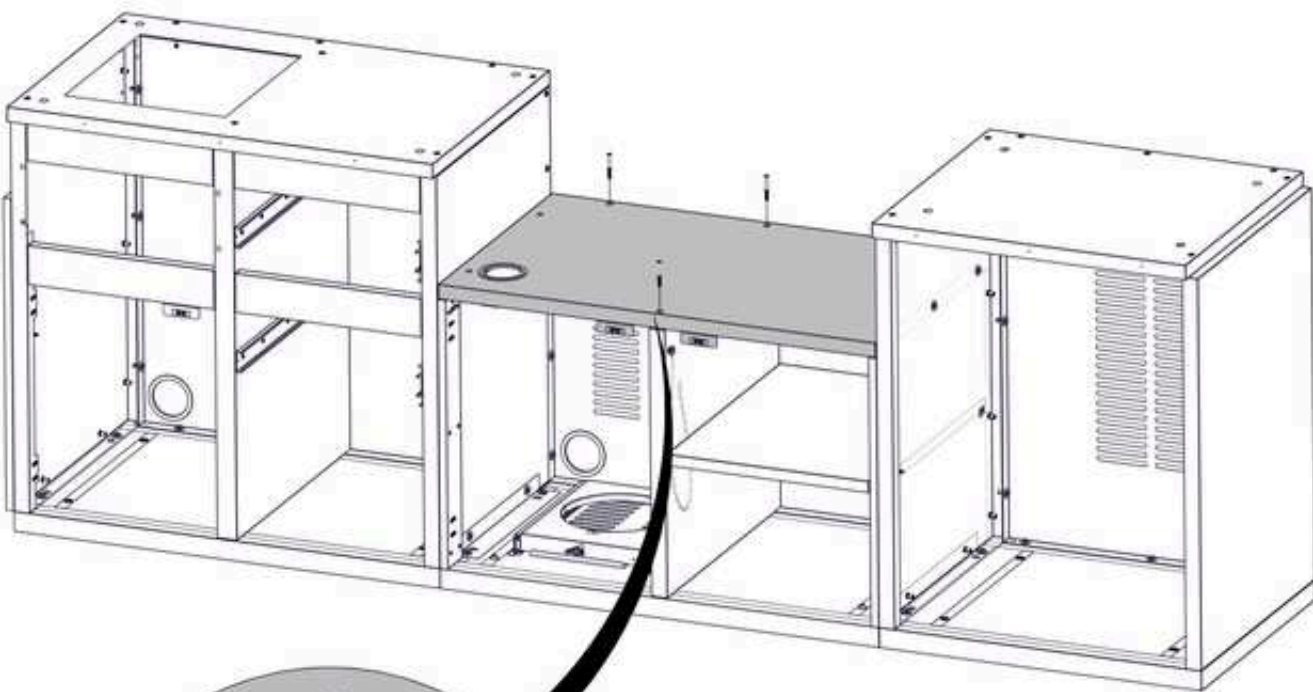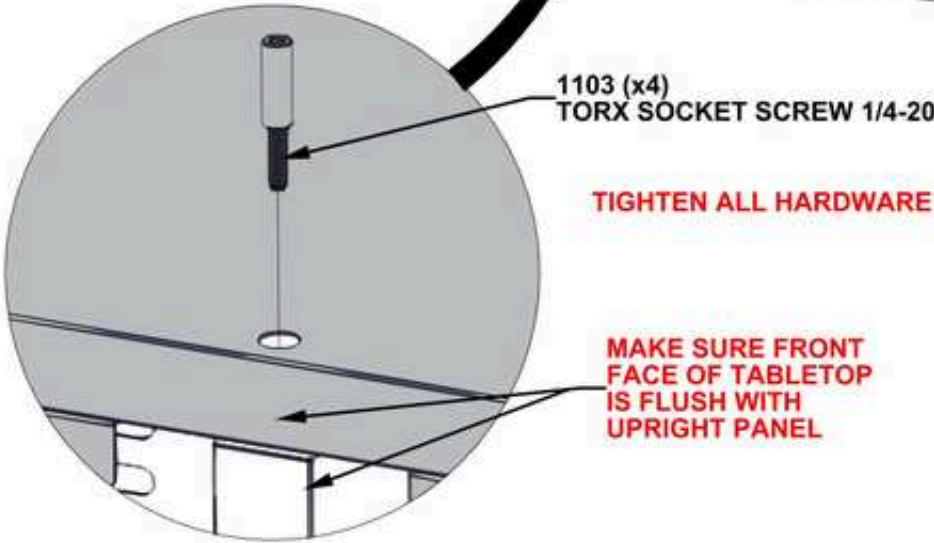


1103 (x4)
TORX SOCKET SCREW 1/4-20

TIGHTEN ALL HARDWARE


**MAKE SURE FRONT
FACE OF TABLETOP
IS FLUSH WITH
UPRIGHT PANEL**

STEP 25 - CABINET ASSEMBLY


Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

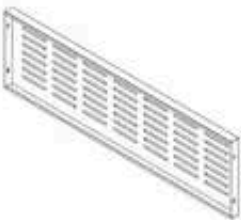


G11 VENTILATION PANEL - A4M03056
(x1) 1 5/16"x11 3/16"x38 3/16" (33x284x970)

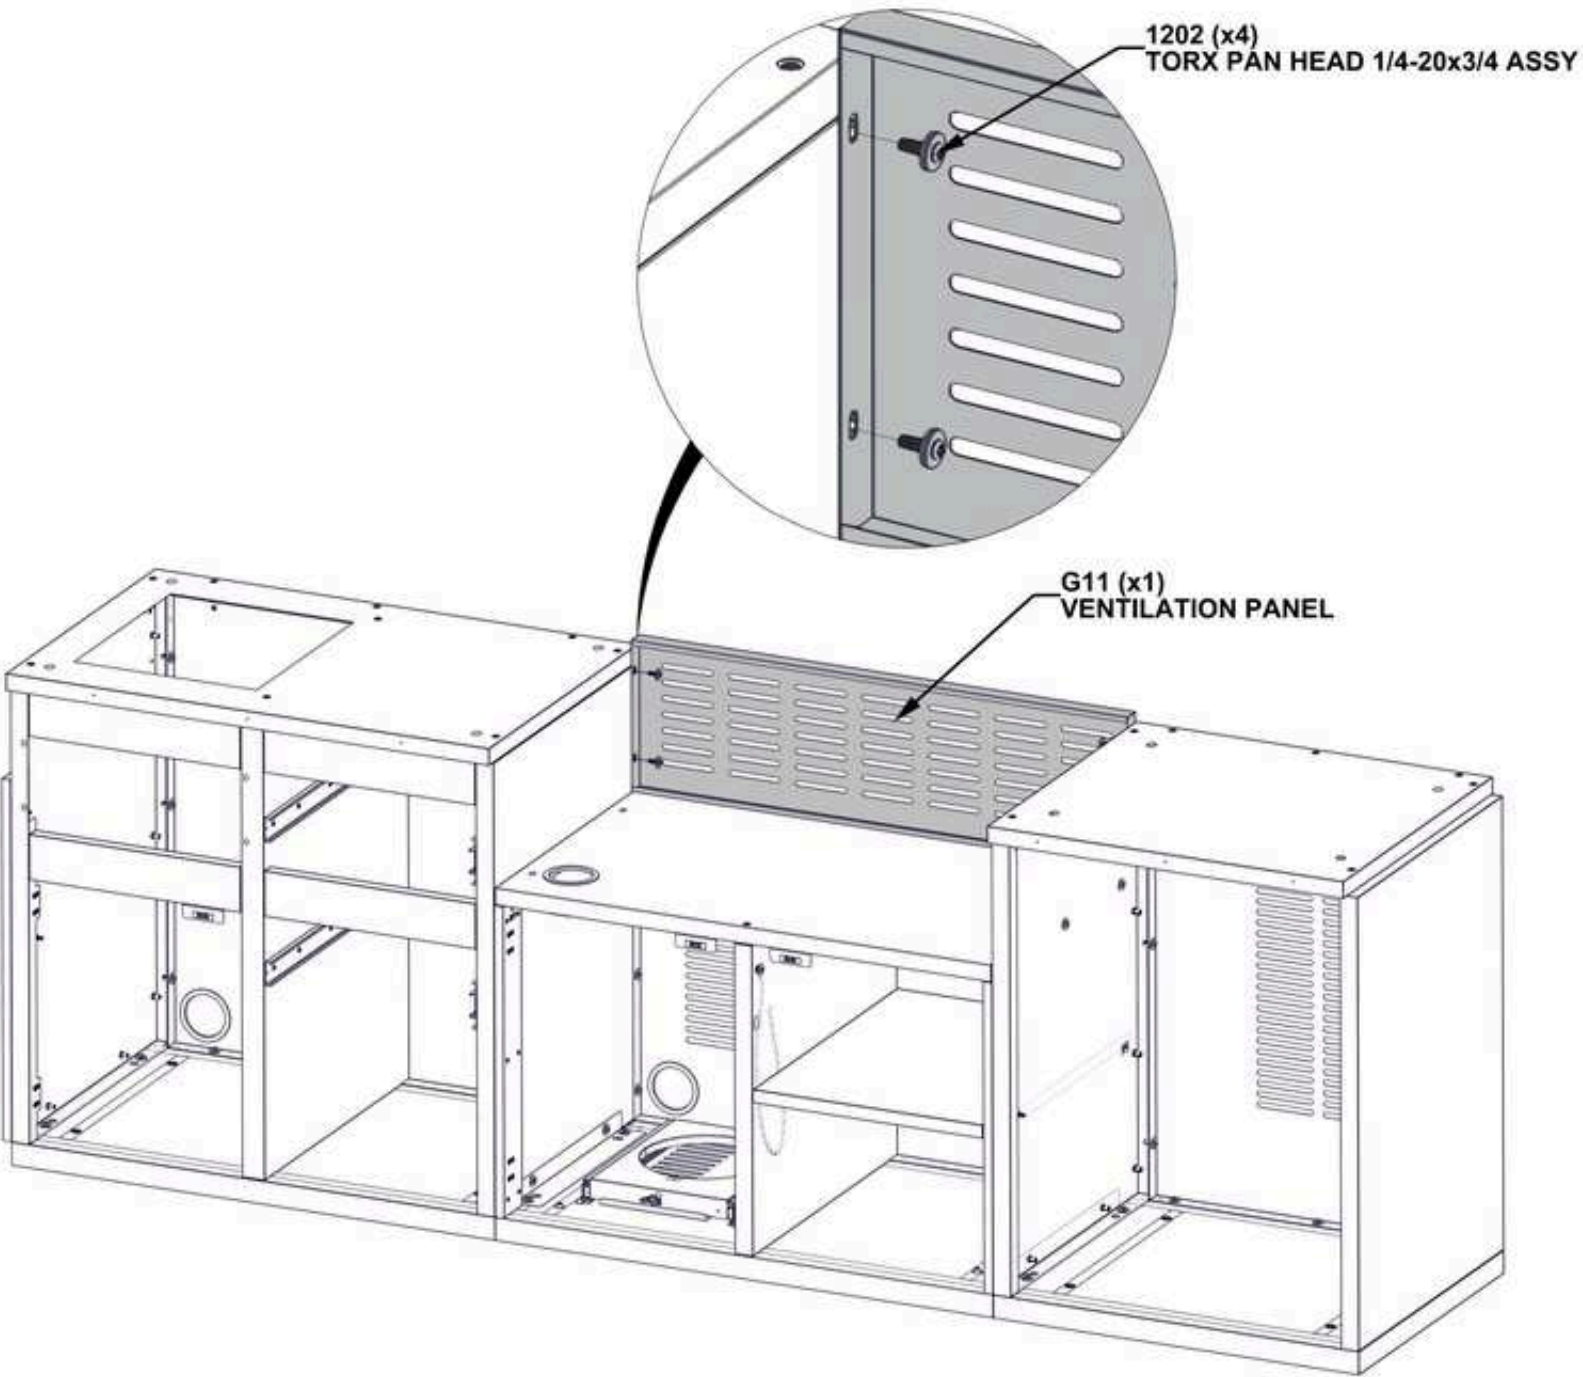

STEP 26A - CABINET ASSEMBLY

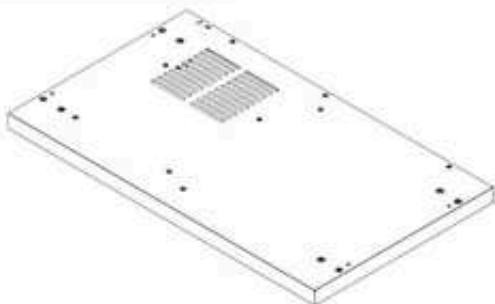


F1 CABINET FLOOR PANEL ASSEMBLY - A4M03538
(x1) 40 3/16"x23 3/8"x2 5/8" (66x594x1020)

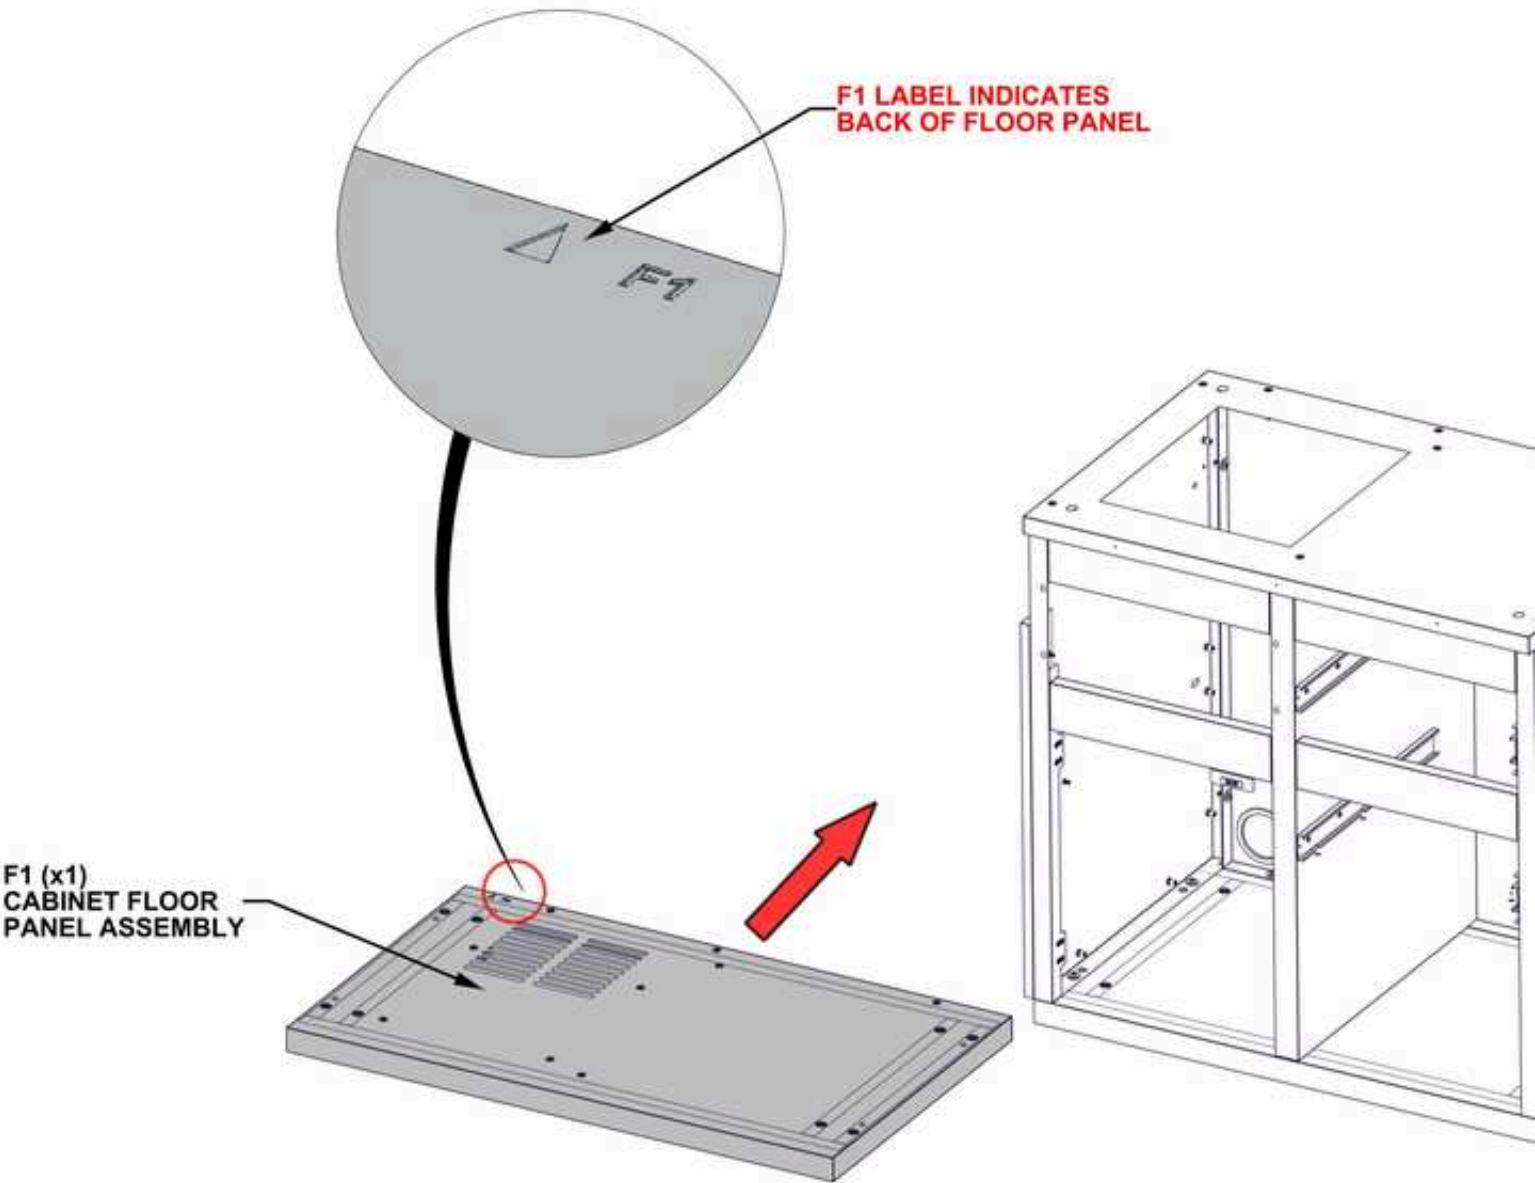


STEP 26B - CABINET ASSEMBLY

- POSITION FLOOR PANEL AS SHOWN BELOW.
- EACH FLOOR PANEL HAS FACTORY INSTALLED ADJUSTABLE FEET. USE PROVIDED HEX DRIVER TO ADJUST EACH FOOT UNTIL PANEL IS LEVEL.

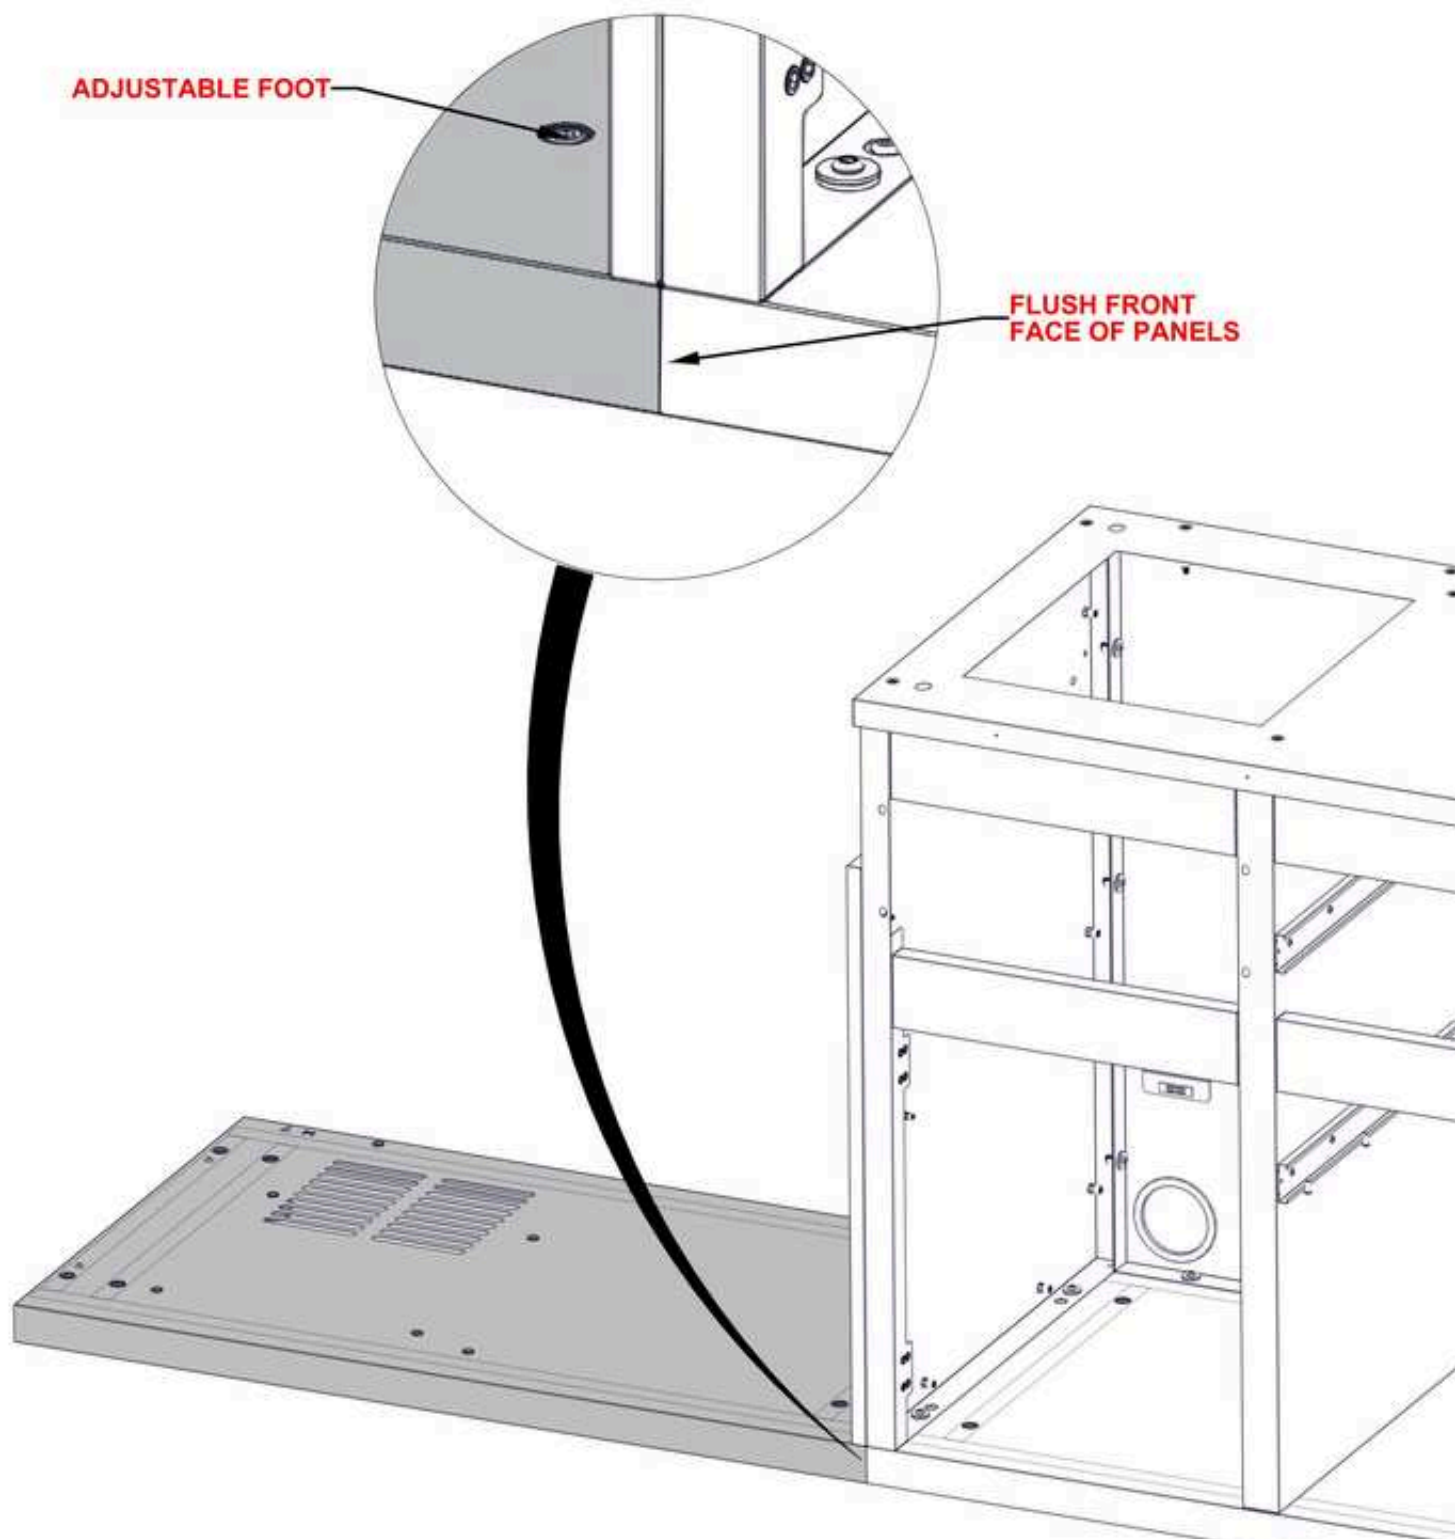


STEP 27 - CABINET ASSEMBLY

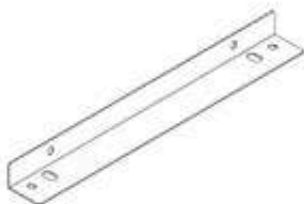

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

A6 ANGLED BRACKET - A4M03053
(x1) 1 3/8"x1 15/16"x17 1/8" (35x50x435)

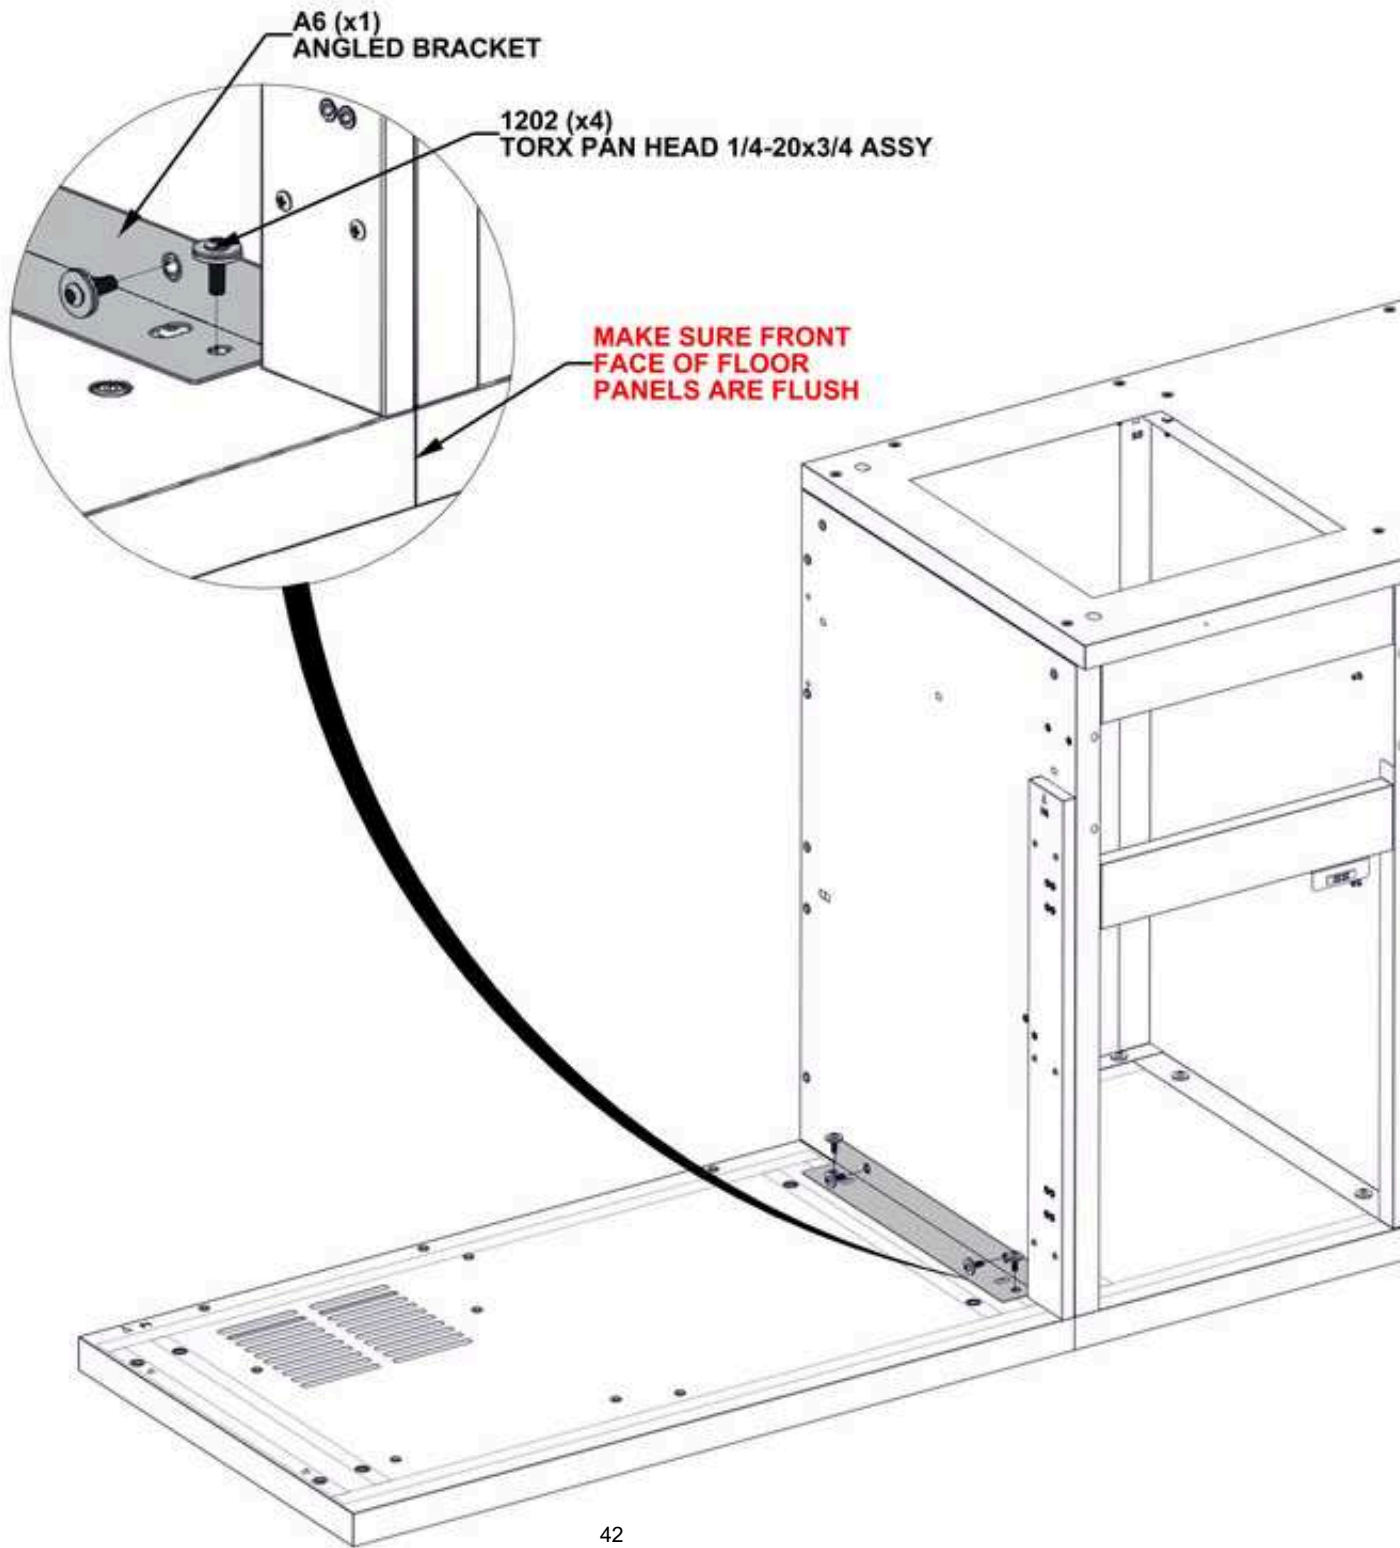


STEP 28 - CABINET ASSEMBLY



Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

S14 CABINET SIDE PANEL ASSEMBLY - A4M04536
(x1) 26 9/16"x23 3/8"x1 3/8" (35x594x675)

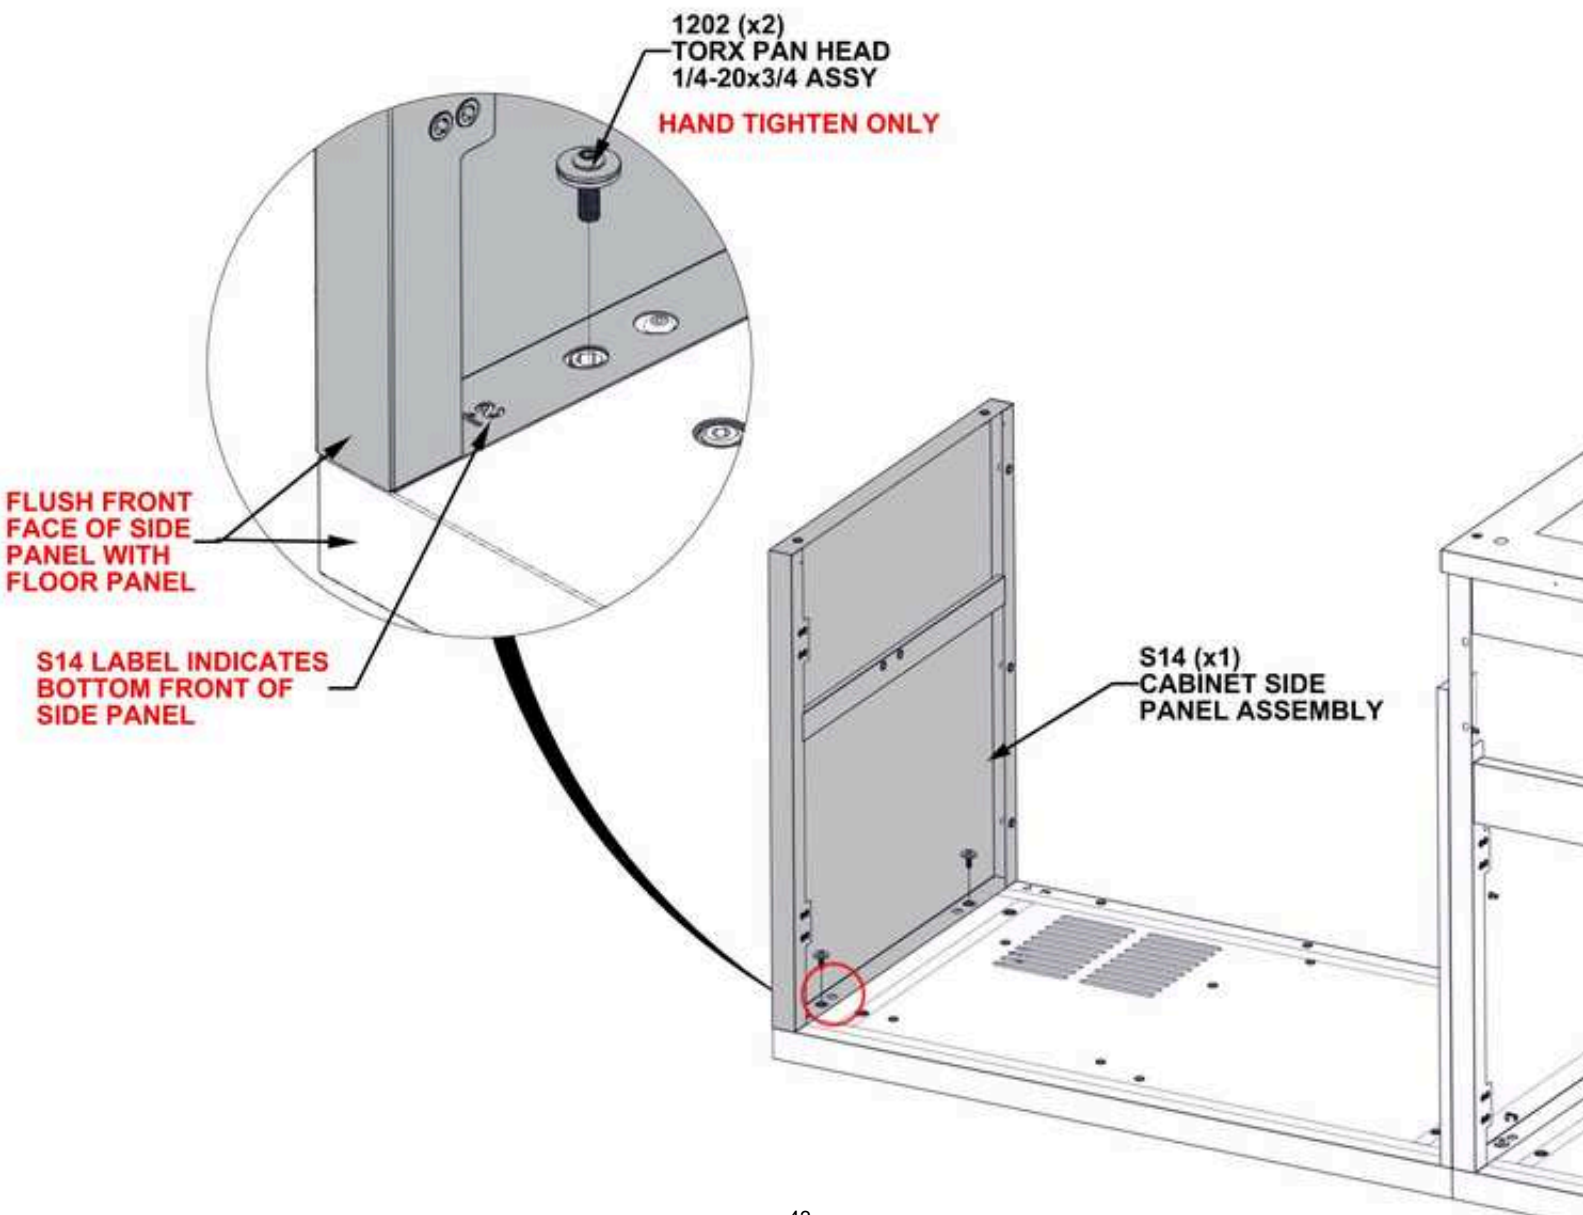

STEP 29 - CABINET ASSEMBLY



Qty	PartNo	Description
9	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY


G1 CABINET BACK PANEL ASSEMBLY - A4M03542
(x1) 38 3/4"x26 1/2"x1 3/16" (30x673.5x984)

HAND TIGHTEN ONLY


1202 (x9)
TORX PAN HEAD
1/4-20x3/4 ASSY

G1 LABEL INDICATES
TOP OF BACK PANEL

G1 (x1)
CABINET BACK
PANEL ASSEMBLY

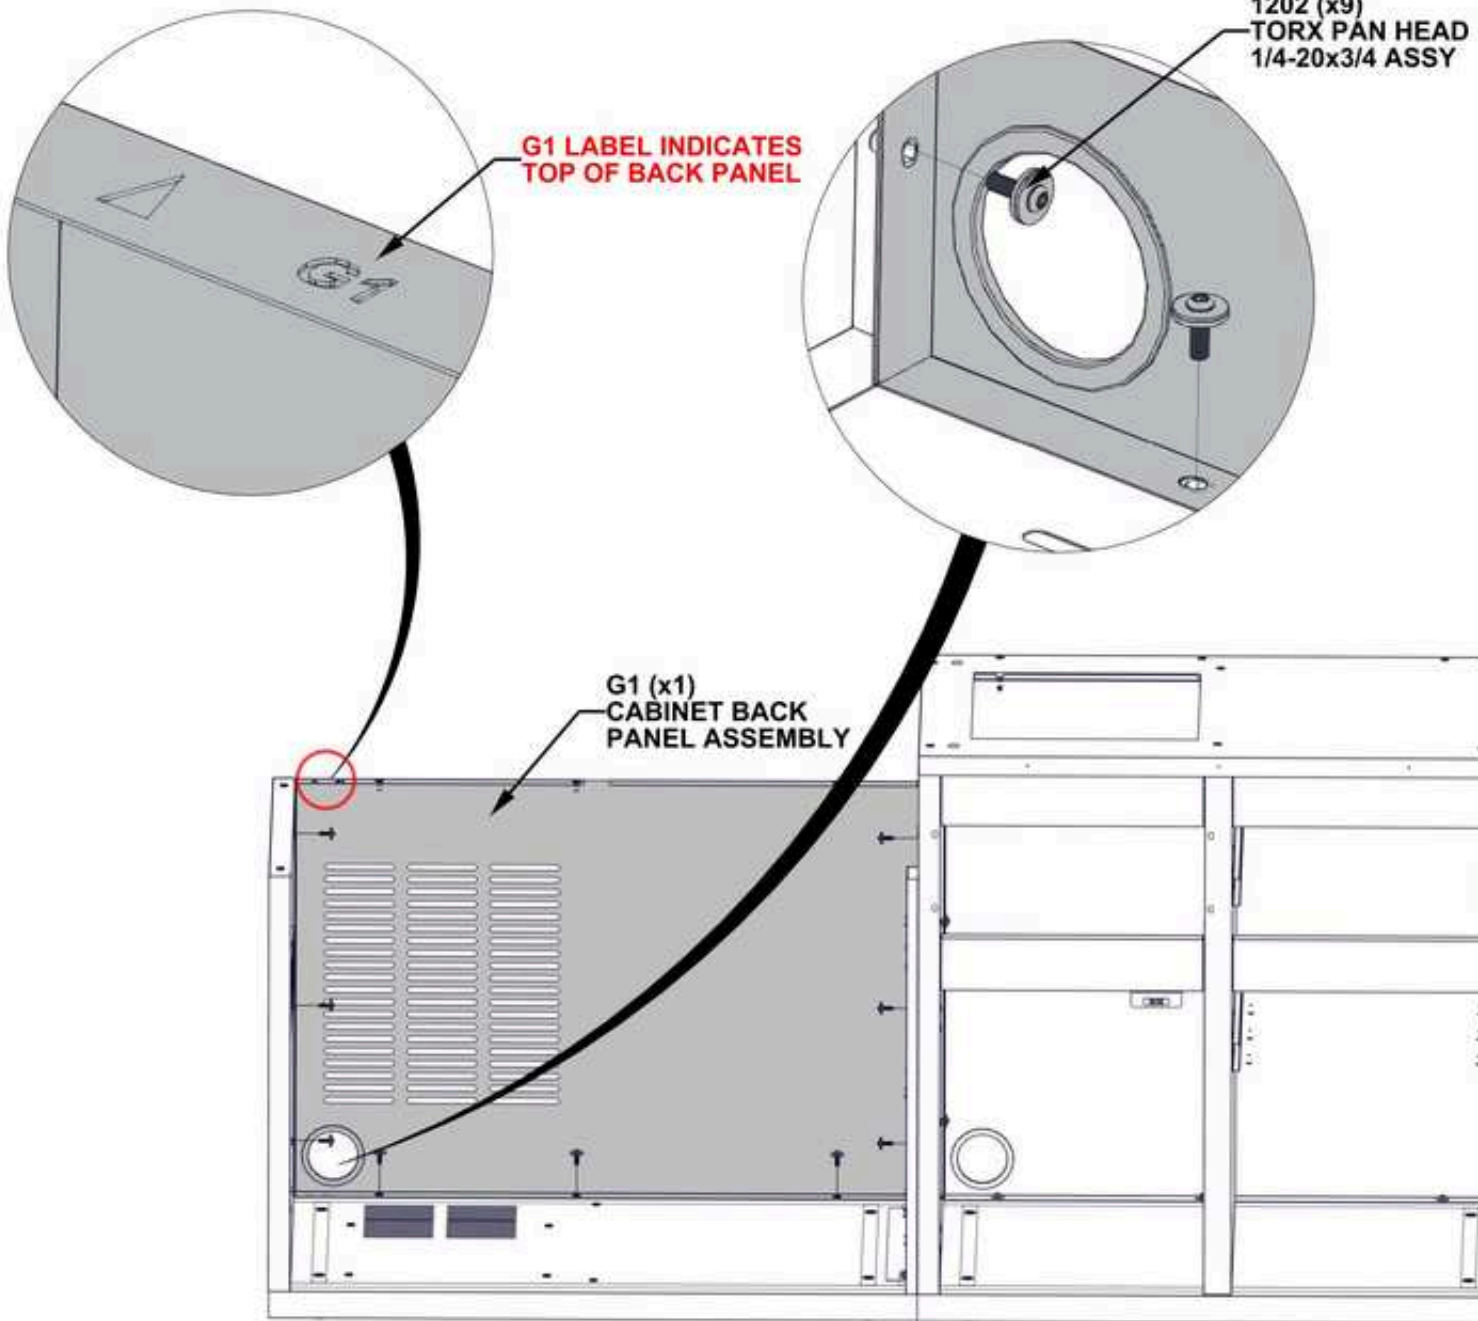


STEP 30 - CABINET ASSEMBLY

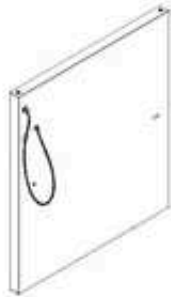

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

S2 CABINET SIDE PANEL ASSEMBLY M - A4M03545
(x1) 26 1/2"x23 3/8"x1 3/8" (35x593x673.5)

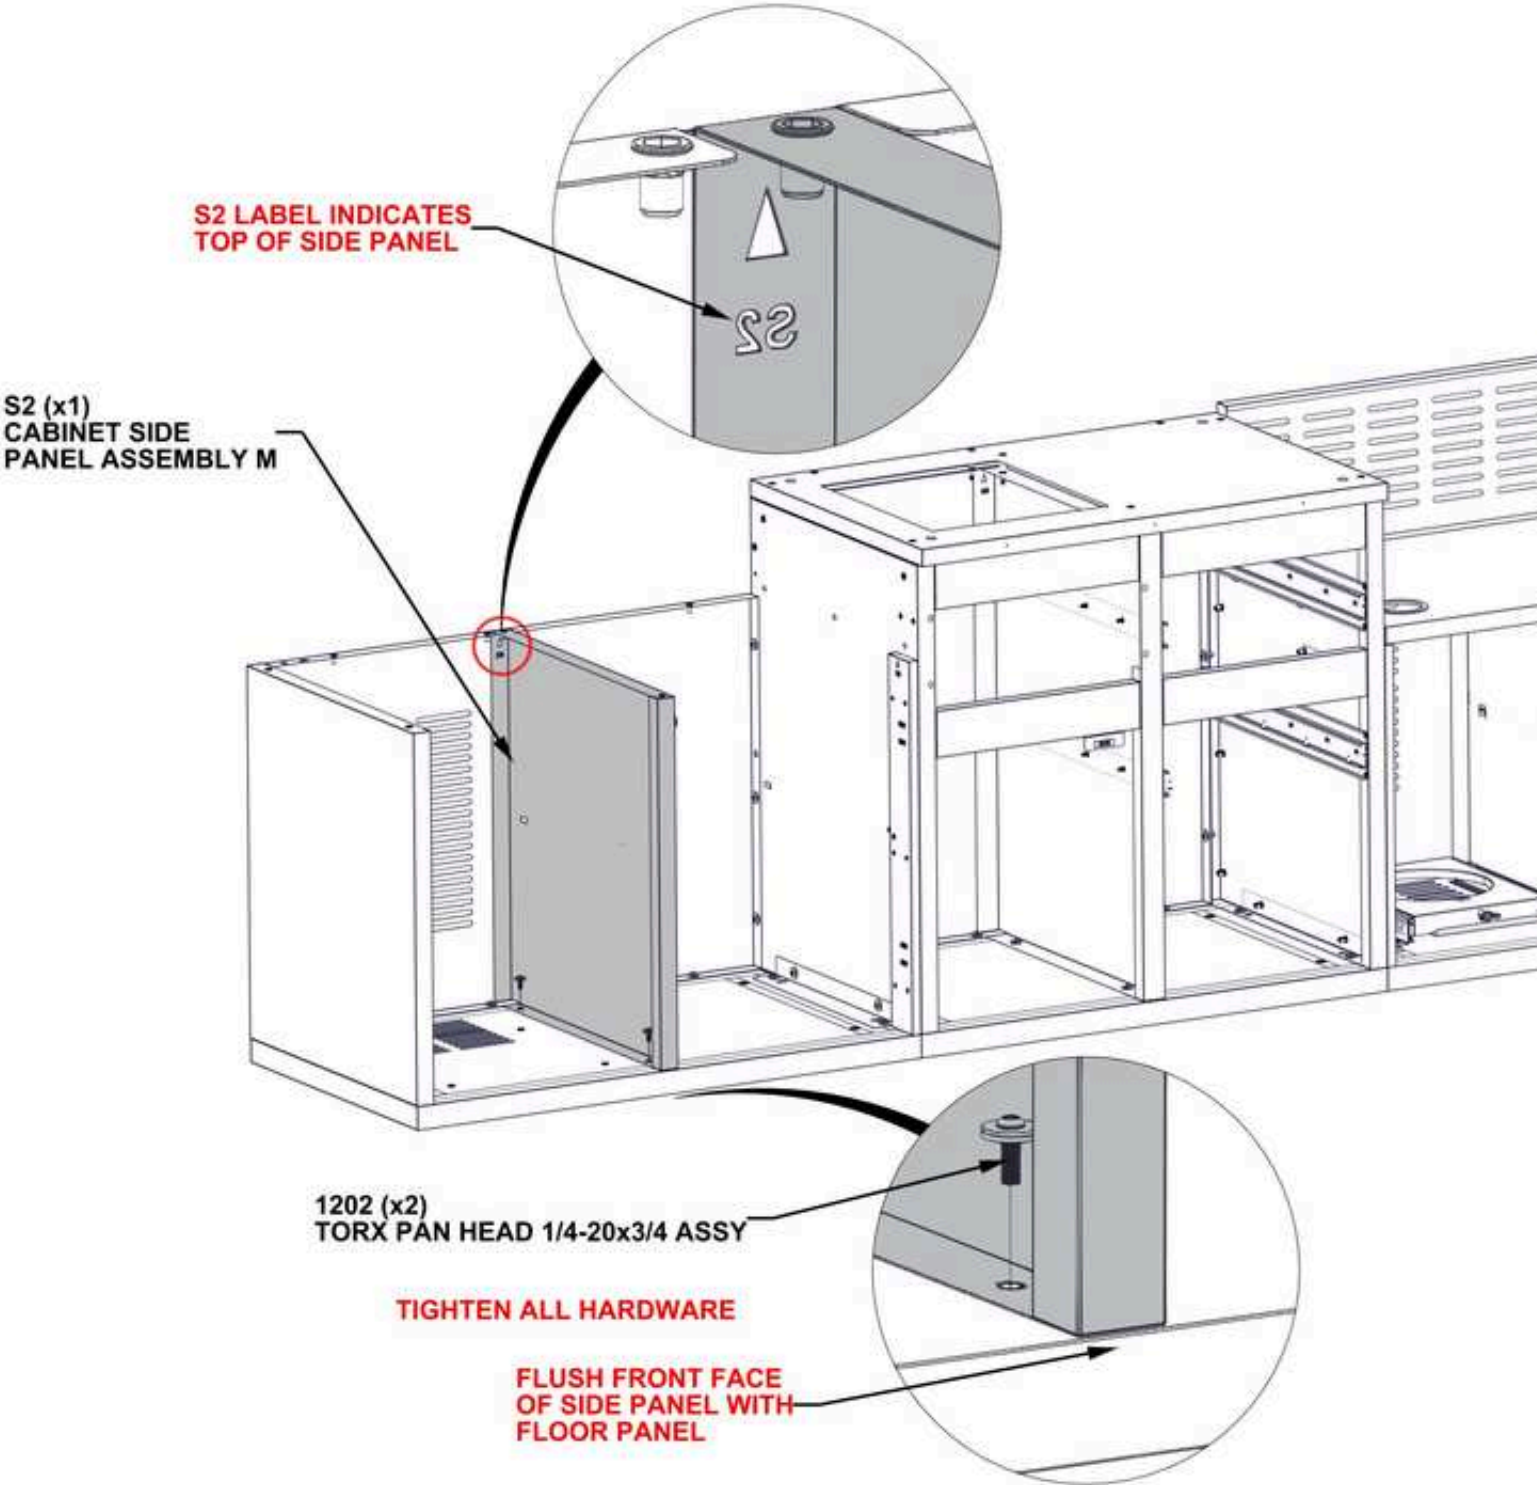


STEP 31A - CABINET ASSEMBLY



A5 SHELF BRACKET - A4M03141
(x2) 5/8"x7/8"x2 1/16" (16x22x53)

- BRACKETS WILL BE TOWARD THE BACK OF THE CABINET.
- ATTACH SHELF BRACKETS ON BOTH SIDES OF CENTER CABINET.

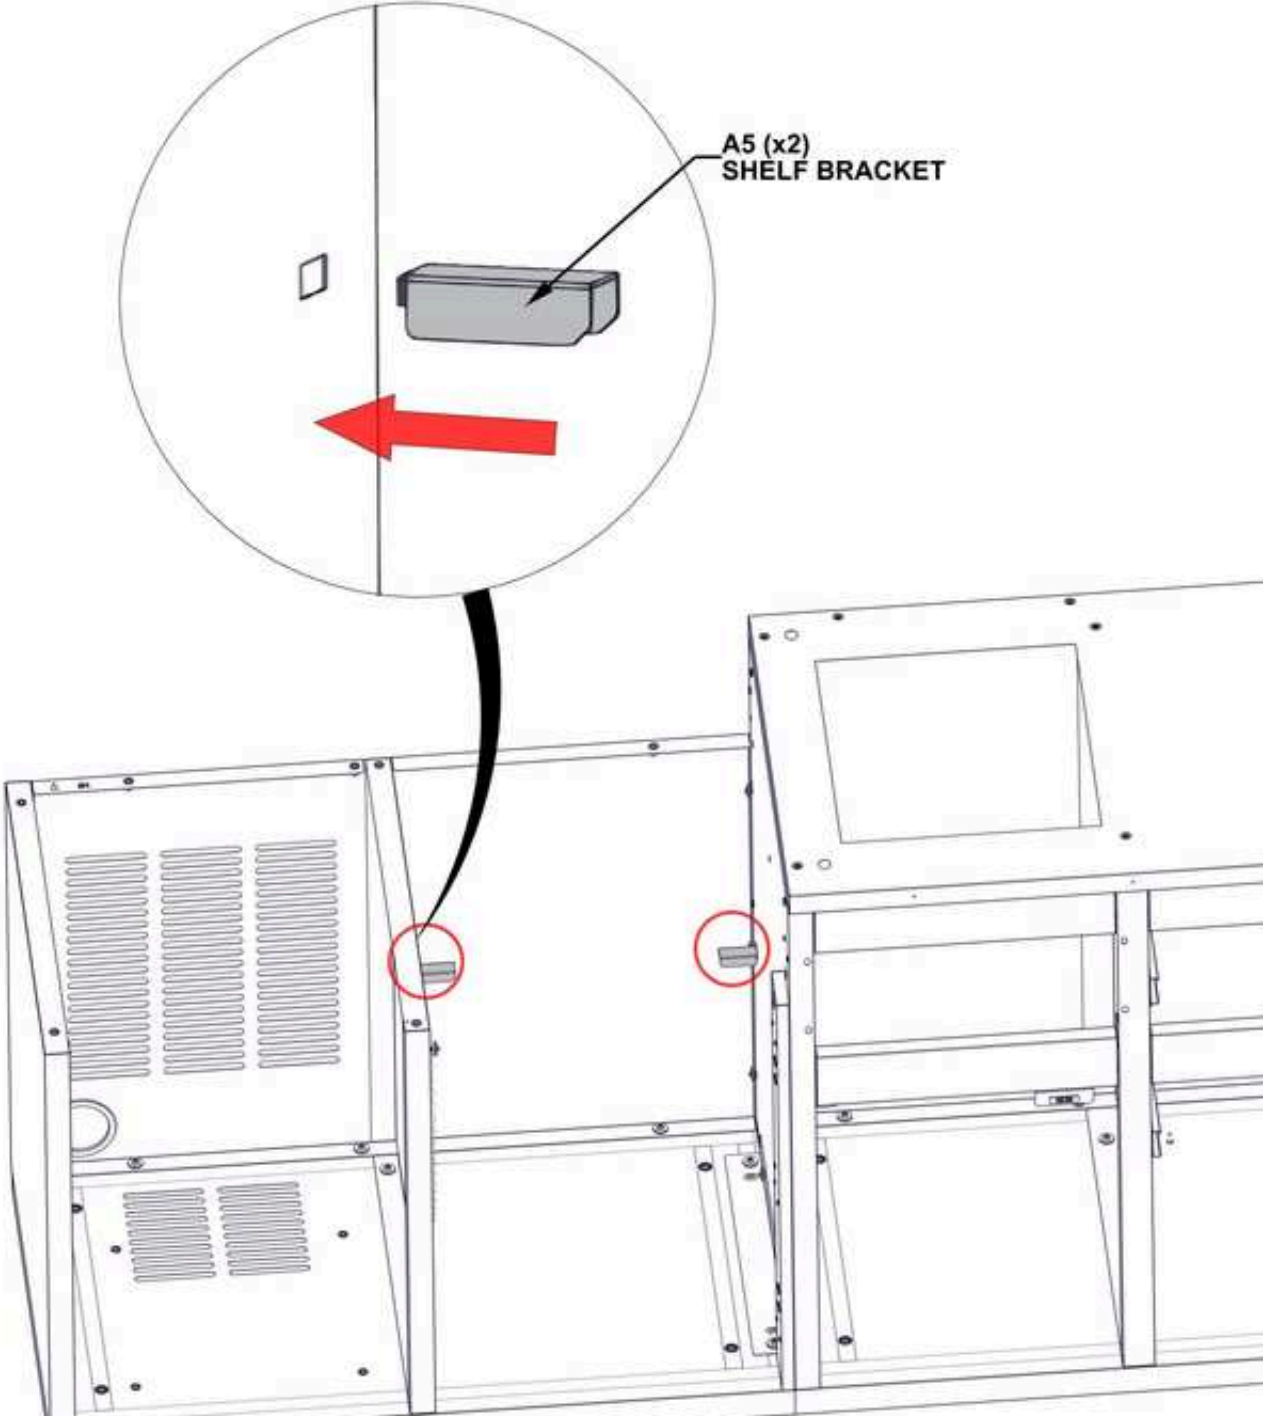


STEP 31B - CABINET ASSEMBLY



Qty	PartNo	Description
3	H101289	PAN HEAD SCREW 8-32x1/2" SS

L1 CABINET SHELF - A4M03548
(x1) 23 1/4"x19 5/16"x1" (25.00x490.50x591.00)

- ALIGN SHELF WITH THREADED INSERTS AND ATTACH HARDWARE TO FASTEN IN PLACE.

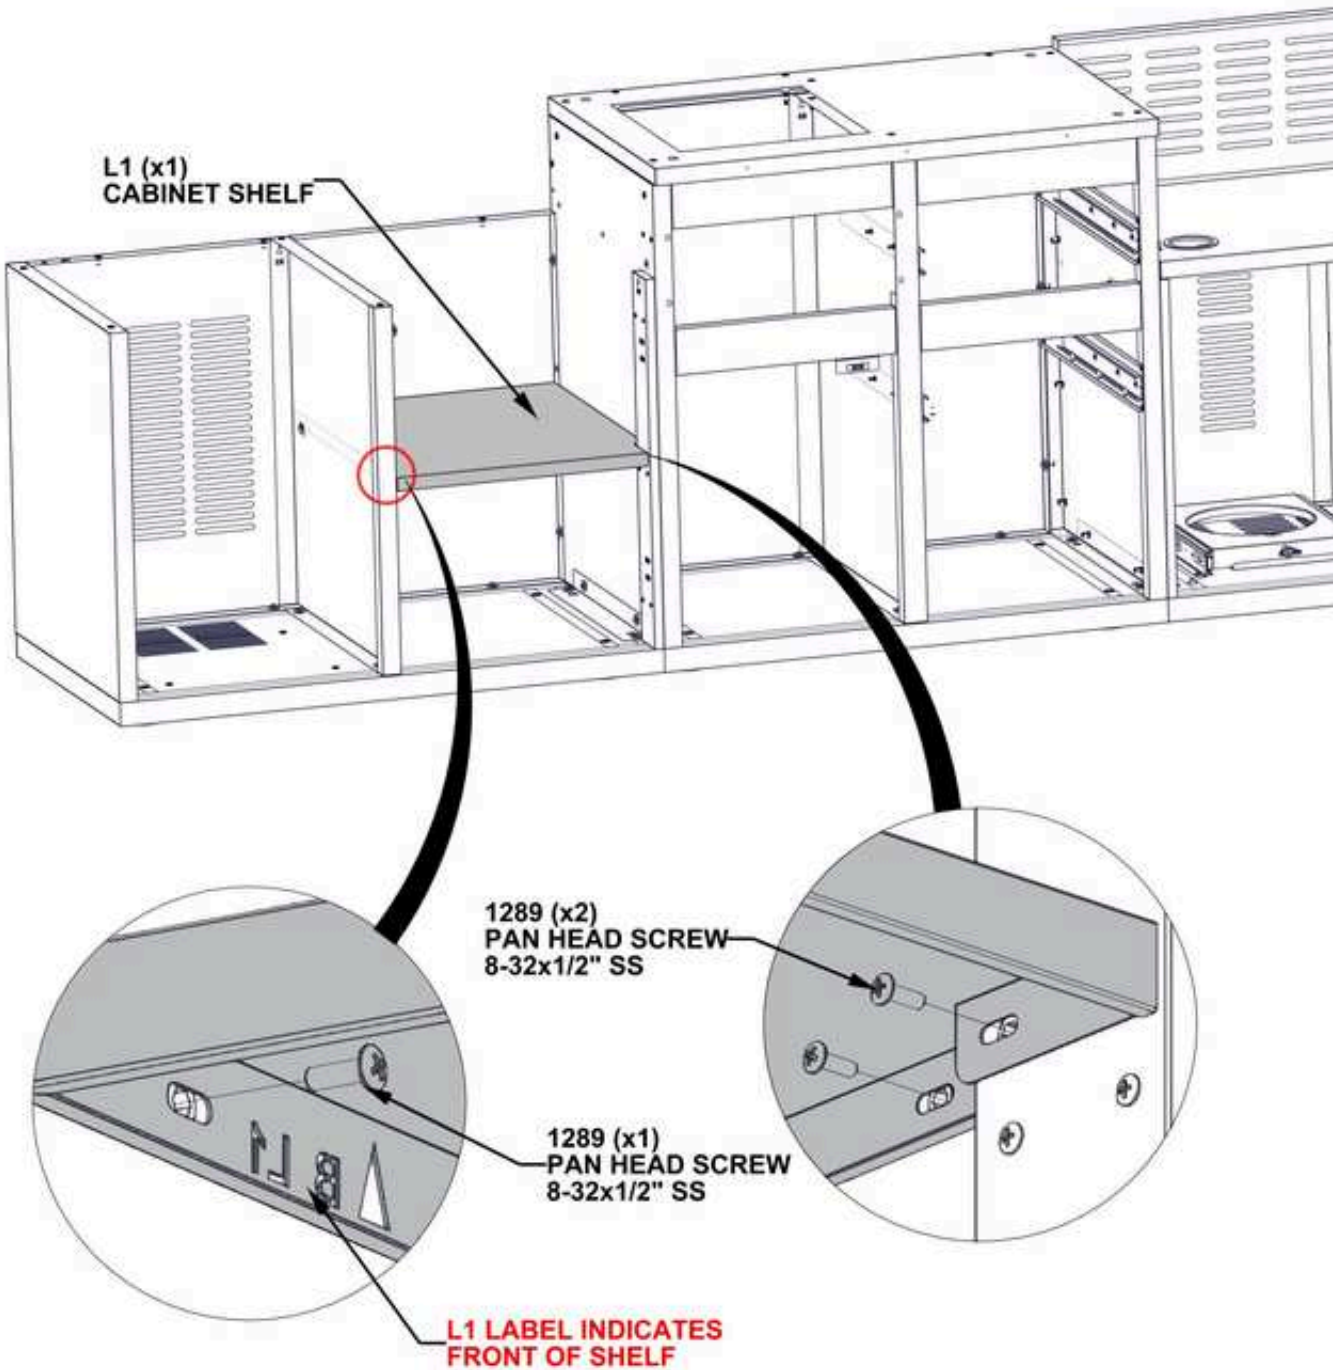


STEP 32 - CABINET ASSEMBLY



A9 HOSE BRACKET ASSEMBLY - A4M03060
(x1) 1 1/4"x1 7/16"x2 9/16" (31.5x36.5x65)

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

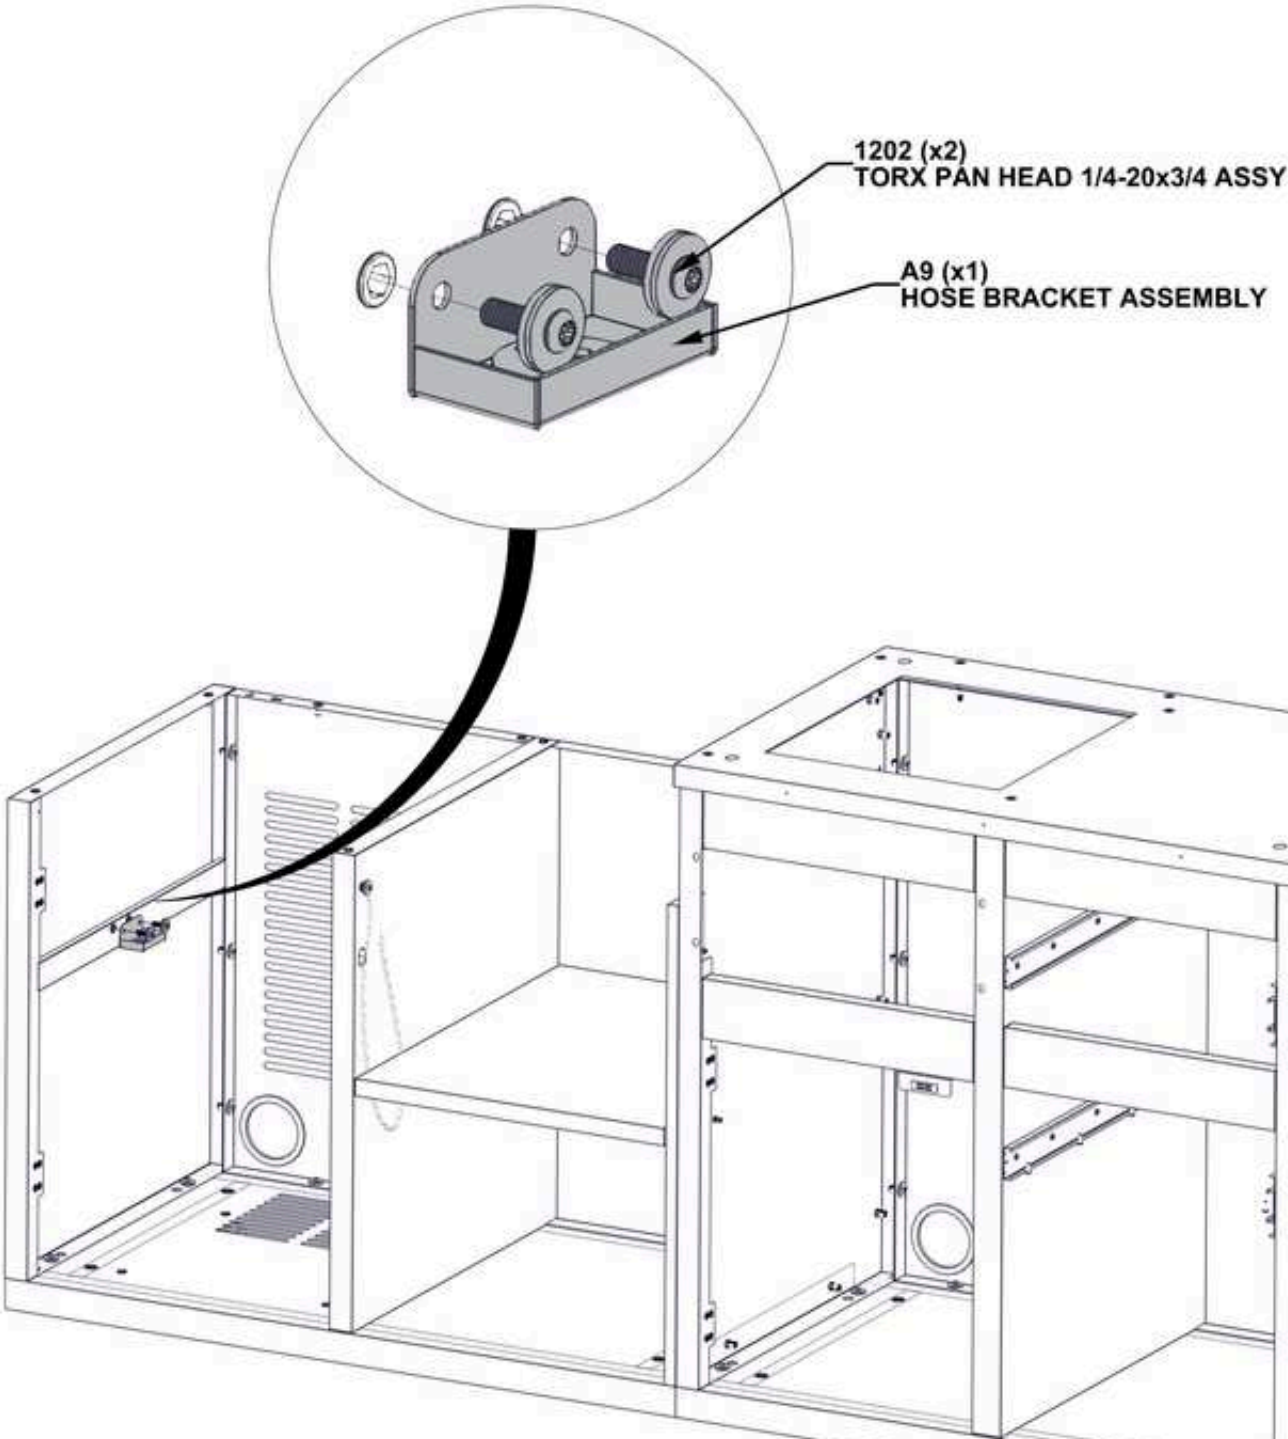


STEP 33 - CABINET ASSEMBLY




Qty	PartNo	Description
4	H101292	TORX PAN HEAD 1/4-20x13/32"

A13 GAS TANK HOLDER ASSEMBLY - A4M03047
(x1) 1 15/16"x12 7/8"x14 3/4" (49x327x374)

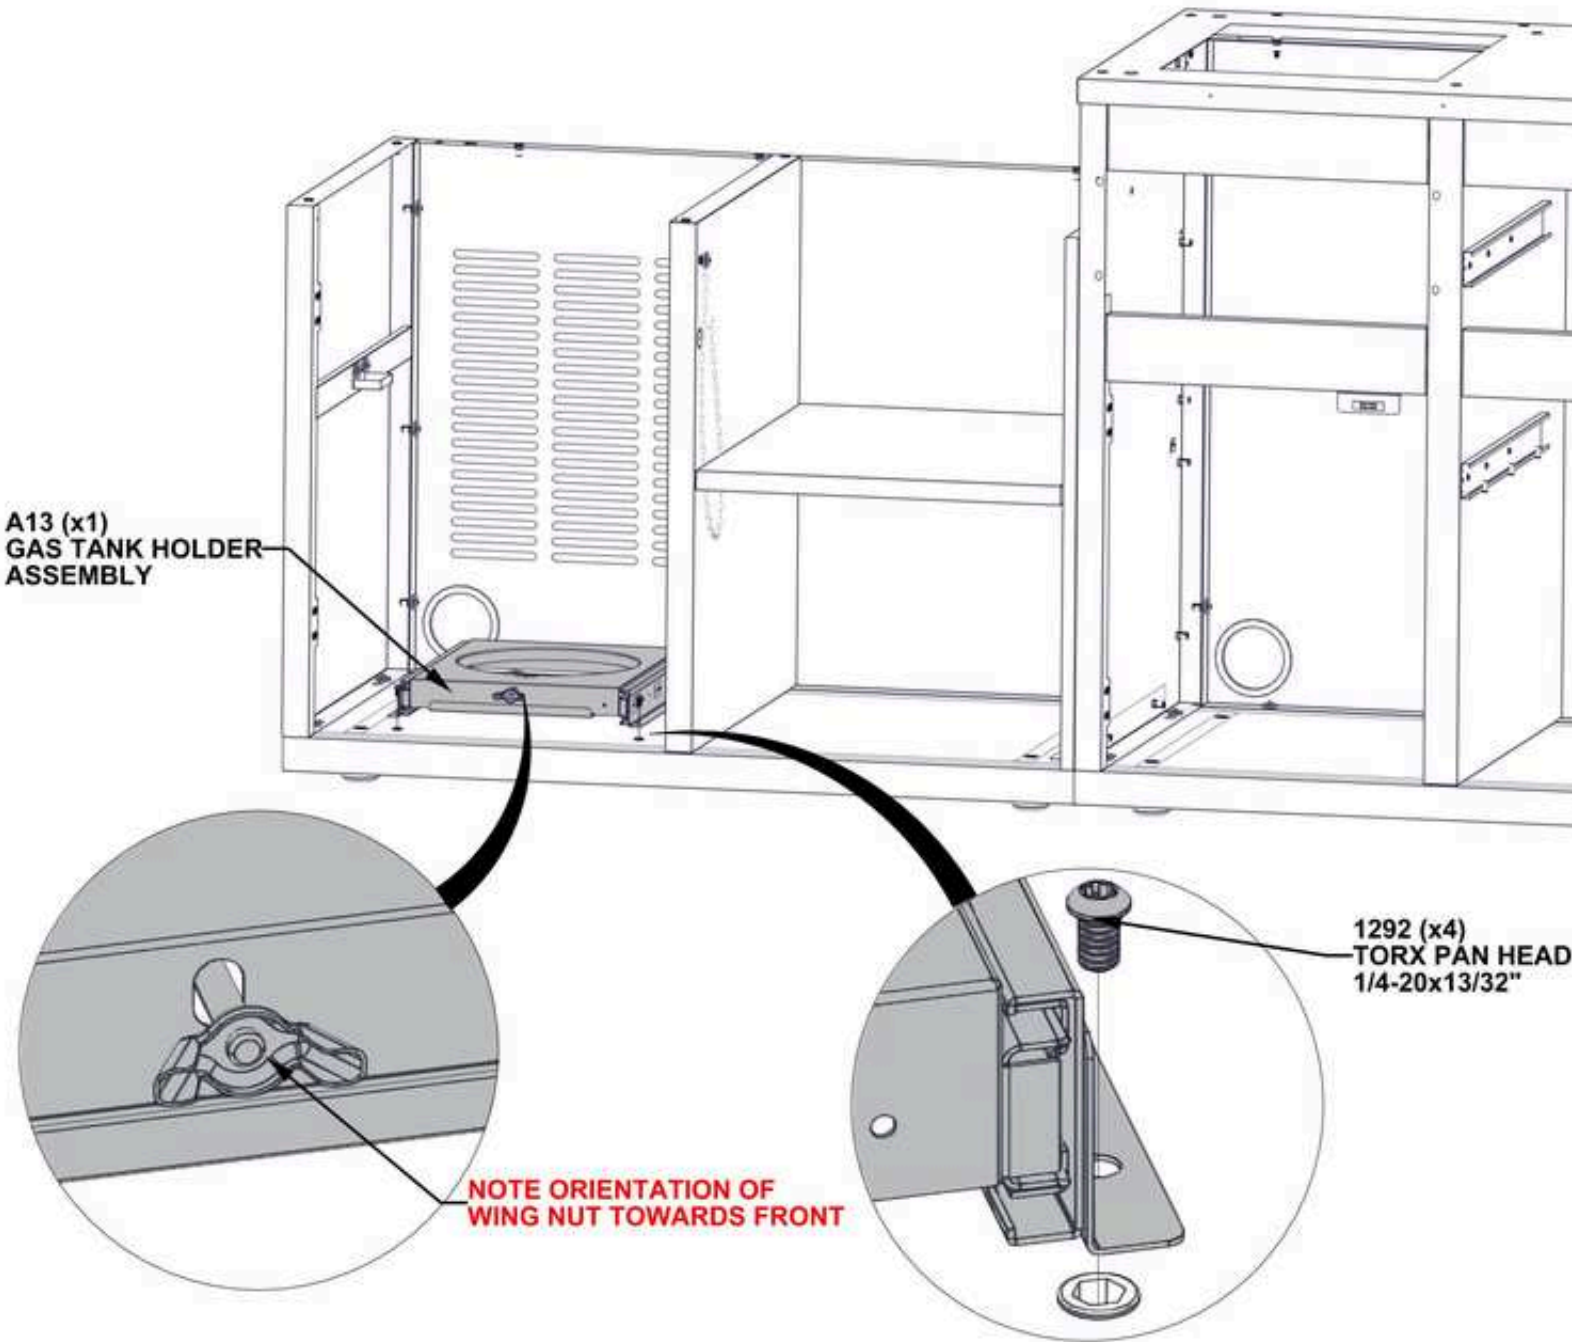

STEP 34 - CABINET ASSEMBLY


Qty	PartNo	Description
4	H101289	PAN HEAD SCREW 8-32x1/2" SS

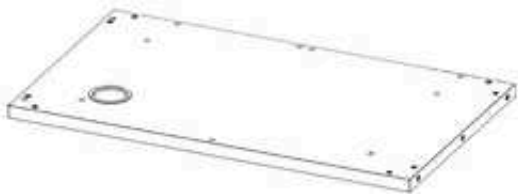

T1 CABINET TABLETOP ASSEMBLY - A4M05629
(x1) 40 3/16"x23 3/8"x1 1/4" (32x594x1020)



A2 MAGNET BRACKET - A4M03026
(x2) 1"x1 1/4"x3 1/8" (25x31x80)

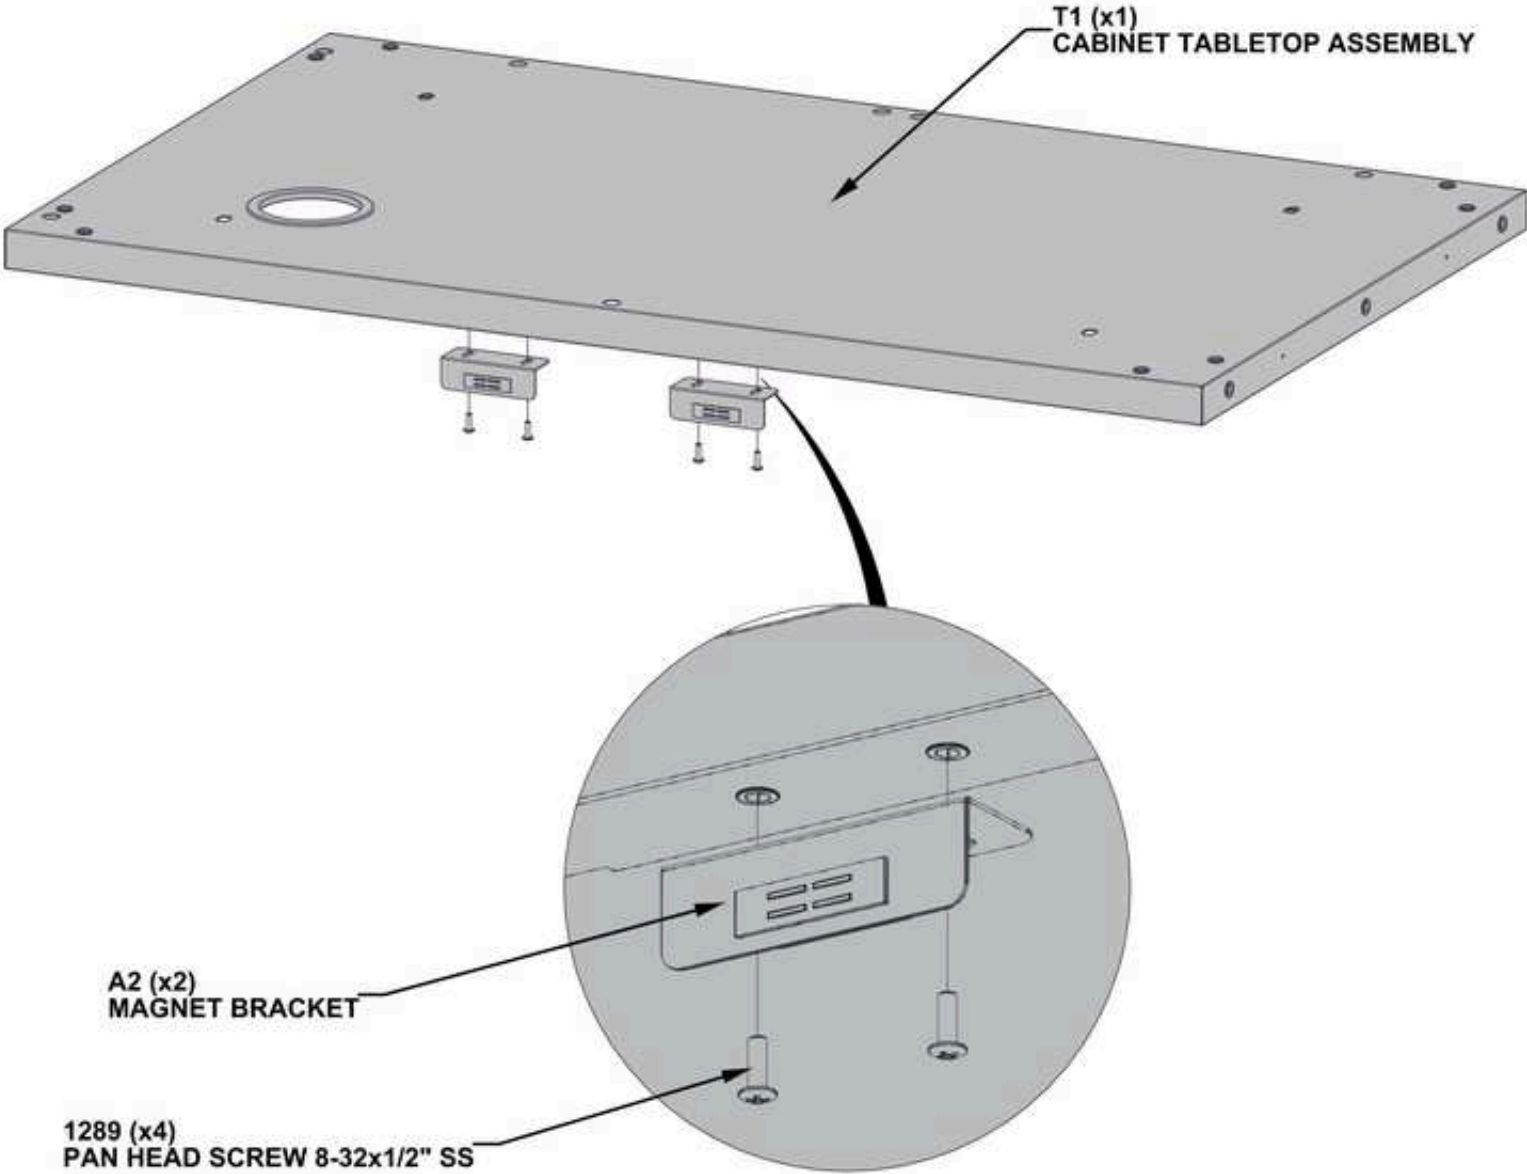

STEP 35A - CABINET ASSEMBLY





TABLETOP ASSEMBLY
FROM STEP 34

Qty	PartNo	Description
3	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- HARDWARE ATTACHES ON INSIDE OF CABINET

TABLETOP ASSEMBLY
FROM STEP 34

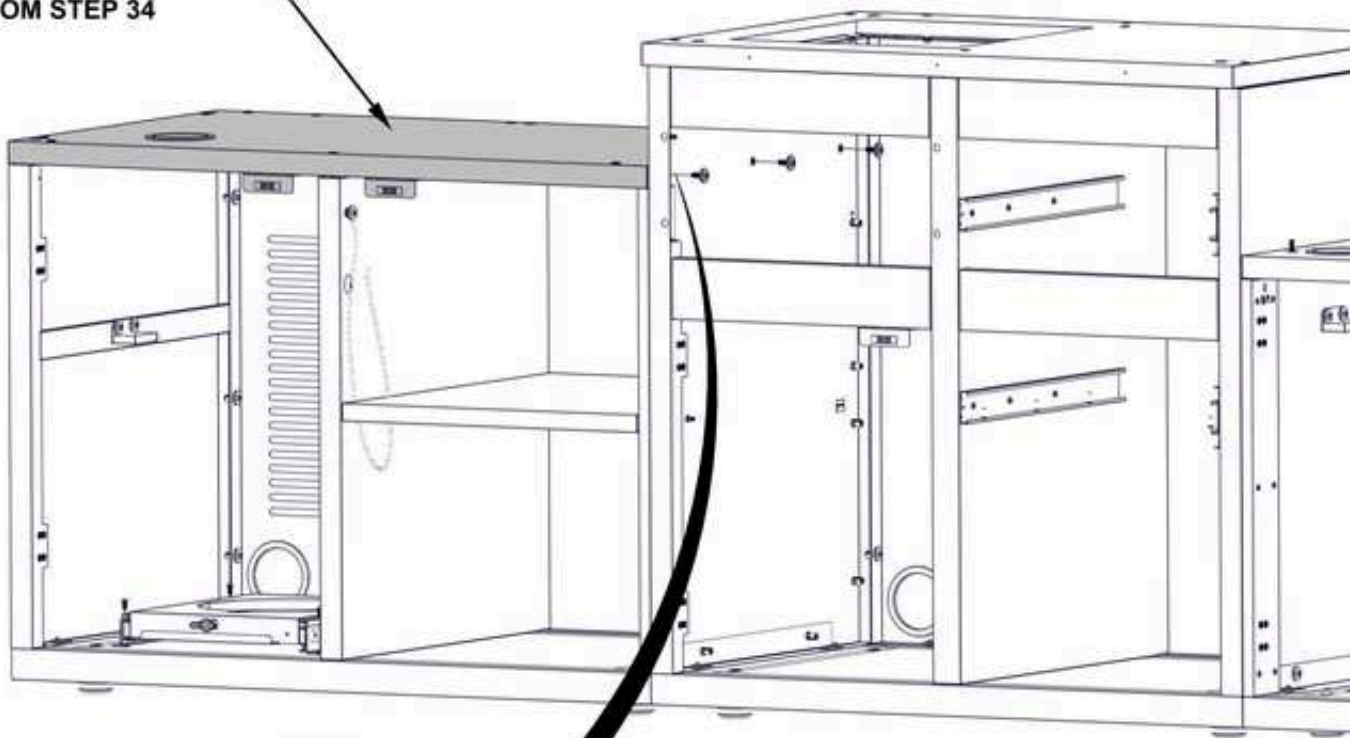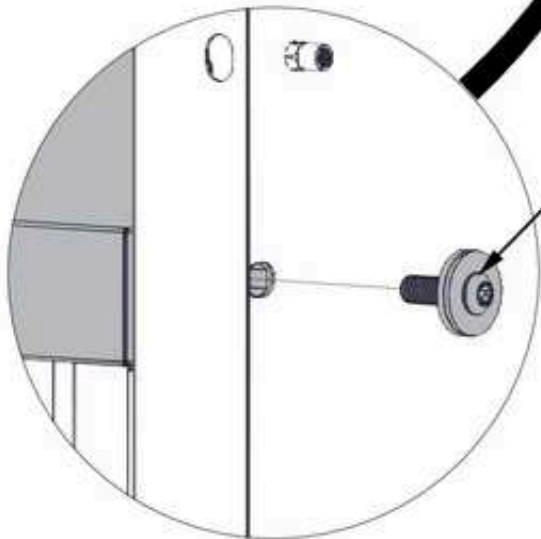


1202 (x3)
TORX PAN HEAD 1/4-20x3/4 ASSY

HAND TIGHTEN ONLY

STEP 35B - CABINET ASSEMBLY

Qty	PartNo	Description
7	H101103	TORX SOCKET SCREW 1/4-20

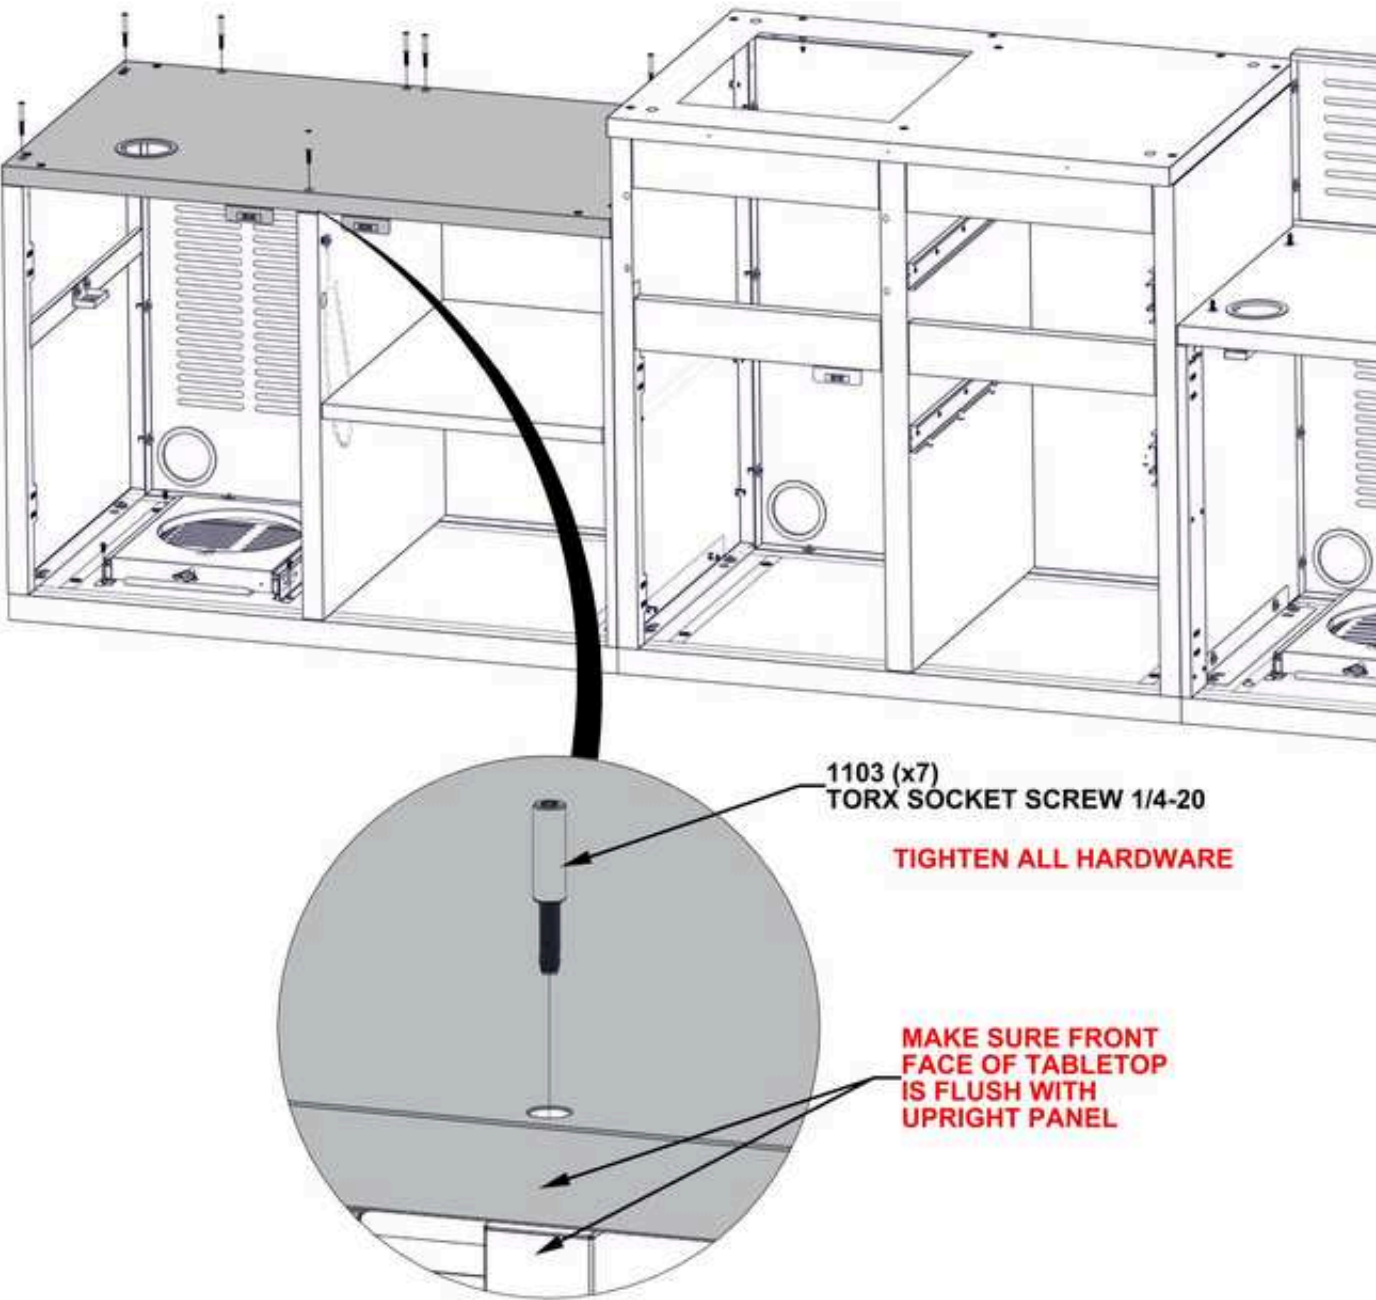


STEP 36 - CABINET ASSEMBLY




T5 CABINET COUNTERTOP PANEL ASSEMBLY L - A4M04537
(x1) 24 1/8"x4 5/16"x6 3/4" (109x172.2x612)

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

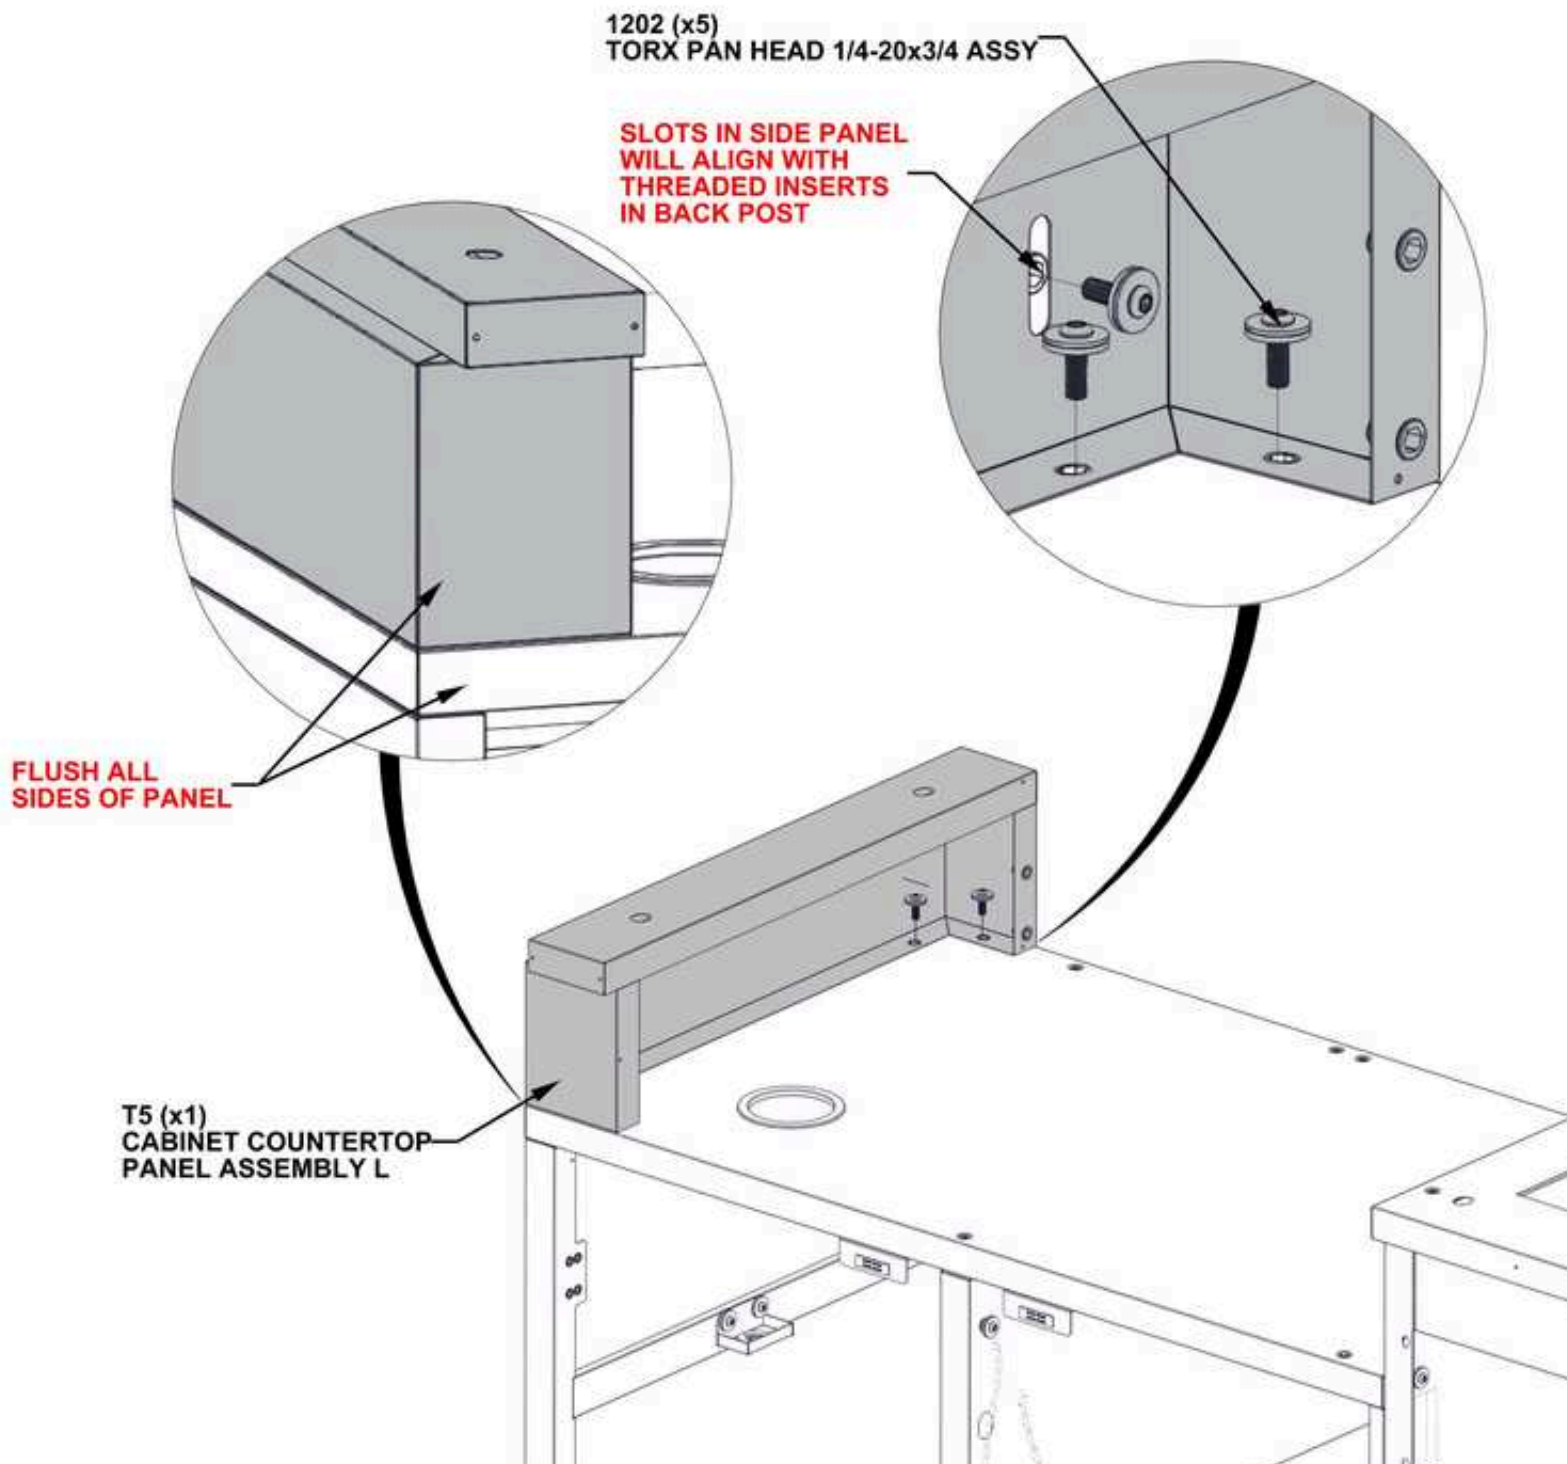


STEP 37 - CABINET ASSEMBLY

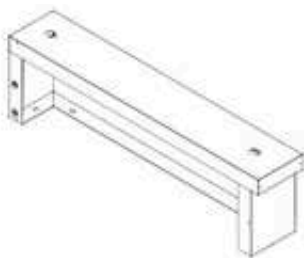

Qty	PartNo	Description
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

T3 CABINET COUNTERTOP PANEL ASSEMBLY R - A4M03551
(x1) 612x4 5/16"x6 3/4" (109x172.2x612)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

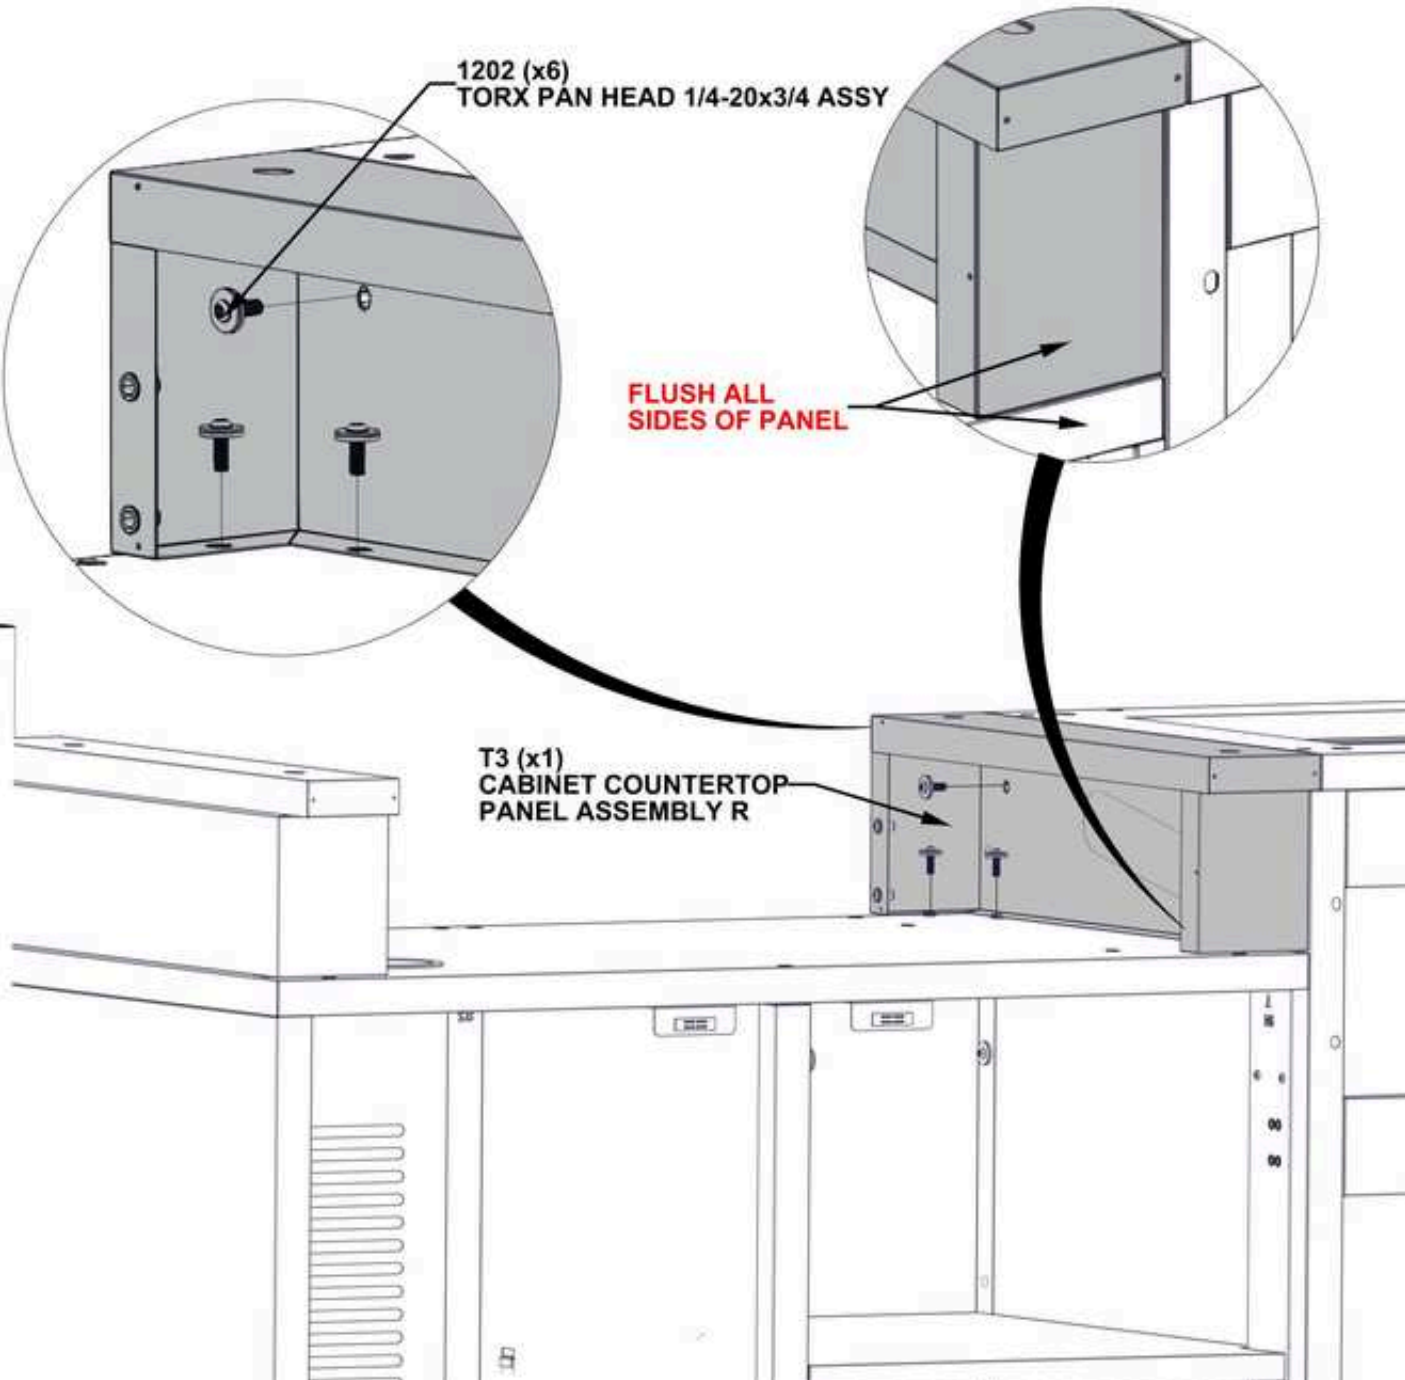


STEP 38 - CABINET ASSEMBLY




Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

O8 VENTILATION PANEL - A4M03078
(x1) 1 3/16"x3 3/4"x31 7/16" (30x95x798)

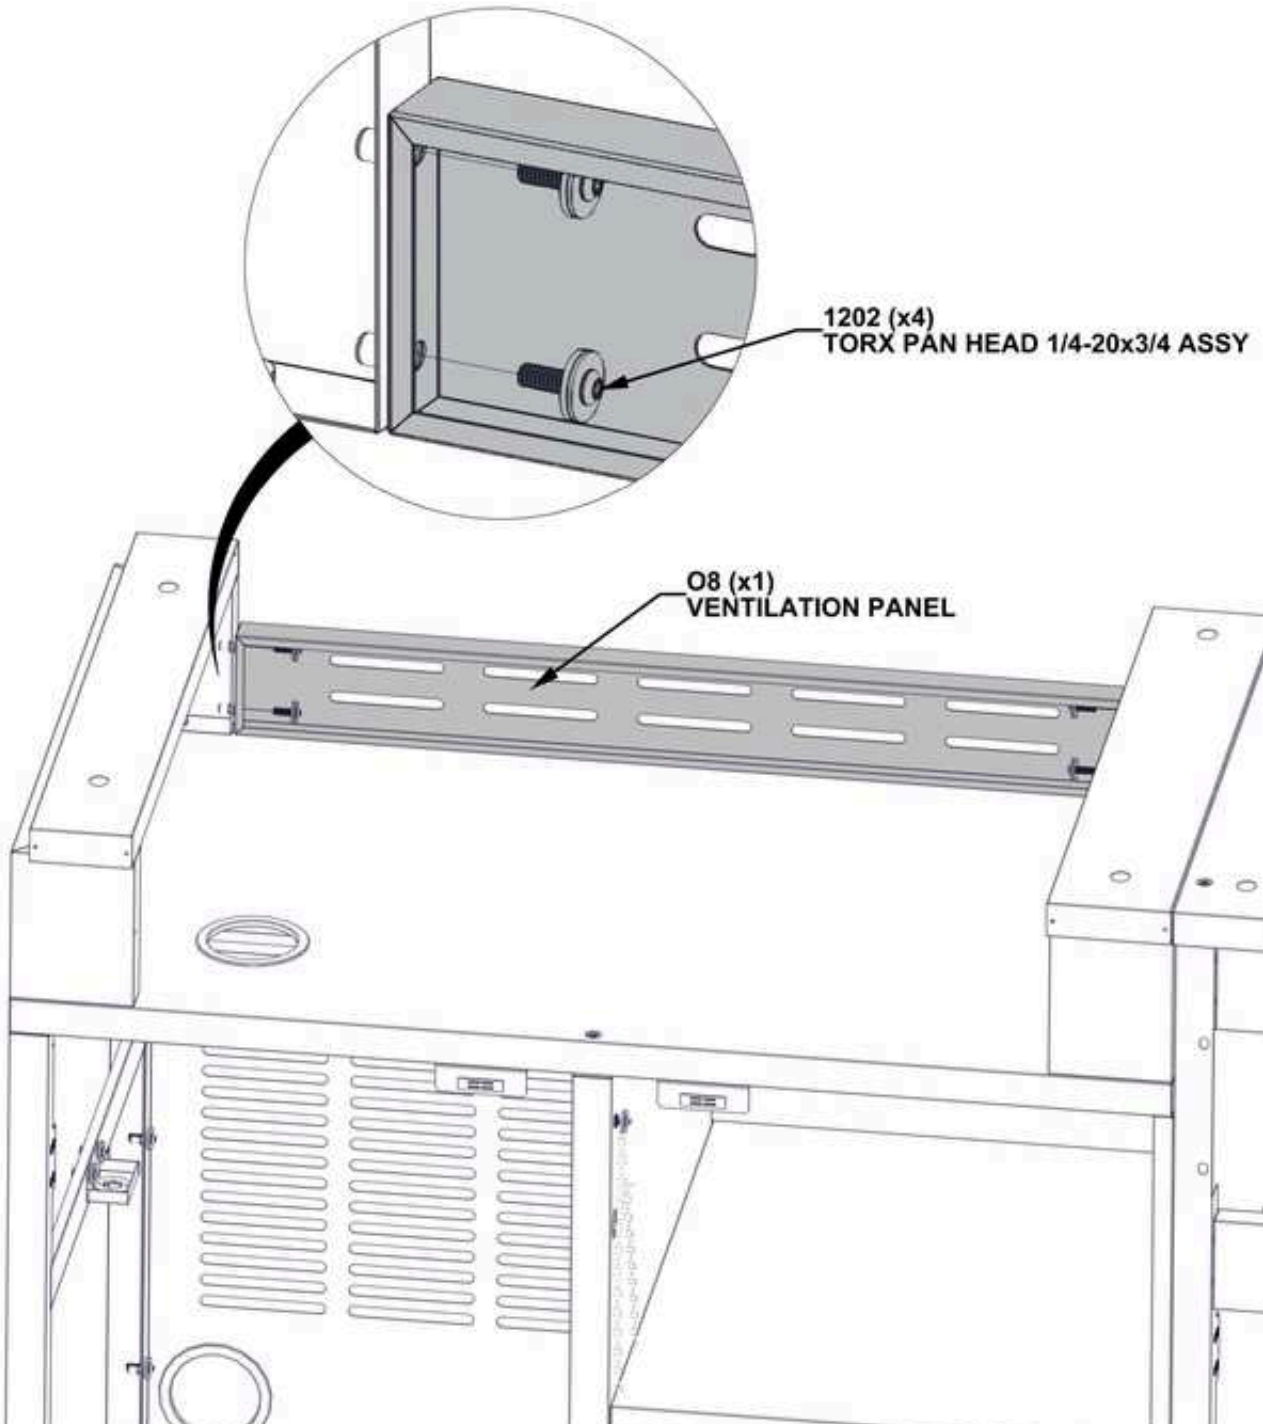

STEP 39 - SINK CABINET FALSE PANEL ASSEMBLY


Qty	PartNo	Description
2	H101289	PAN HEAD SCREW 8-32x1/2" SS

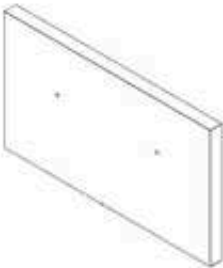

D5 SINK CABINET TRIM PANEL - A4M03576
(x1) 17 13/16"x10 1/4"x1" (26x260x452)



H2 STAINLESS STEEL HANDLE - A4M03024
(x1) 5/8"x1 9/16"x11 13/16" (16x40x300)

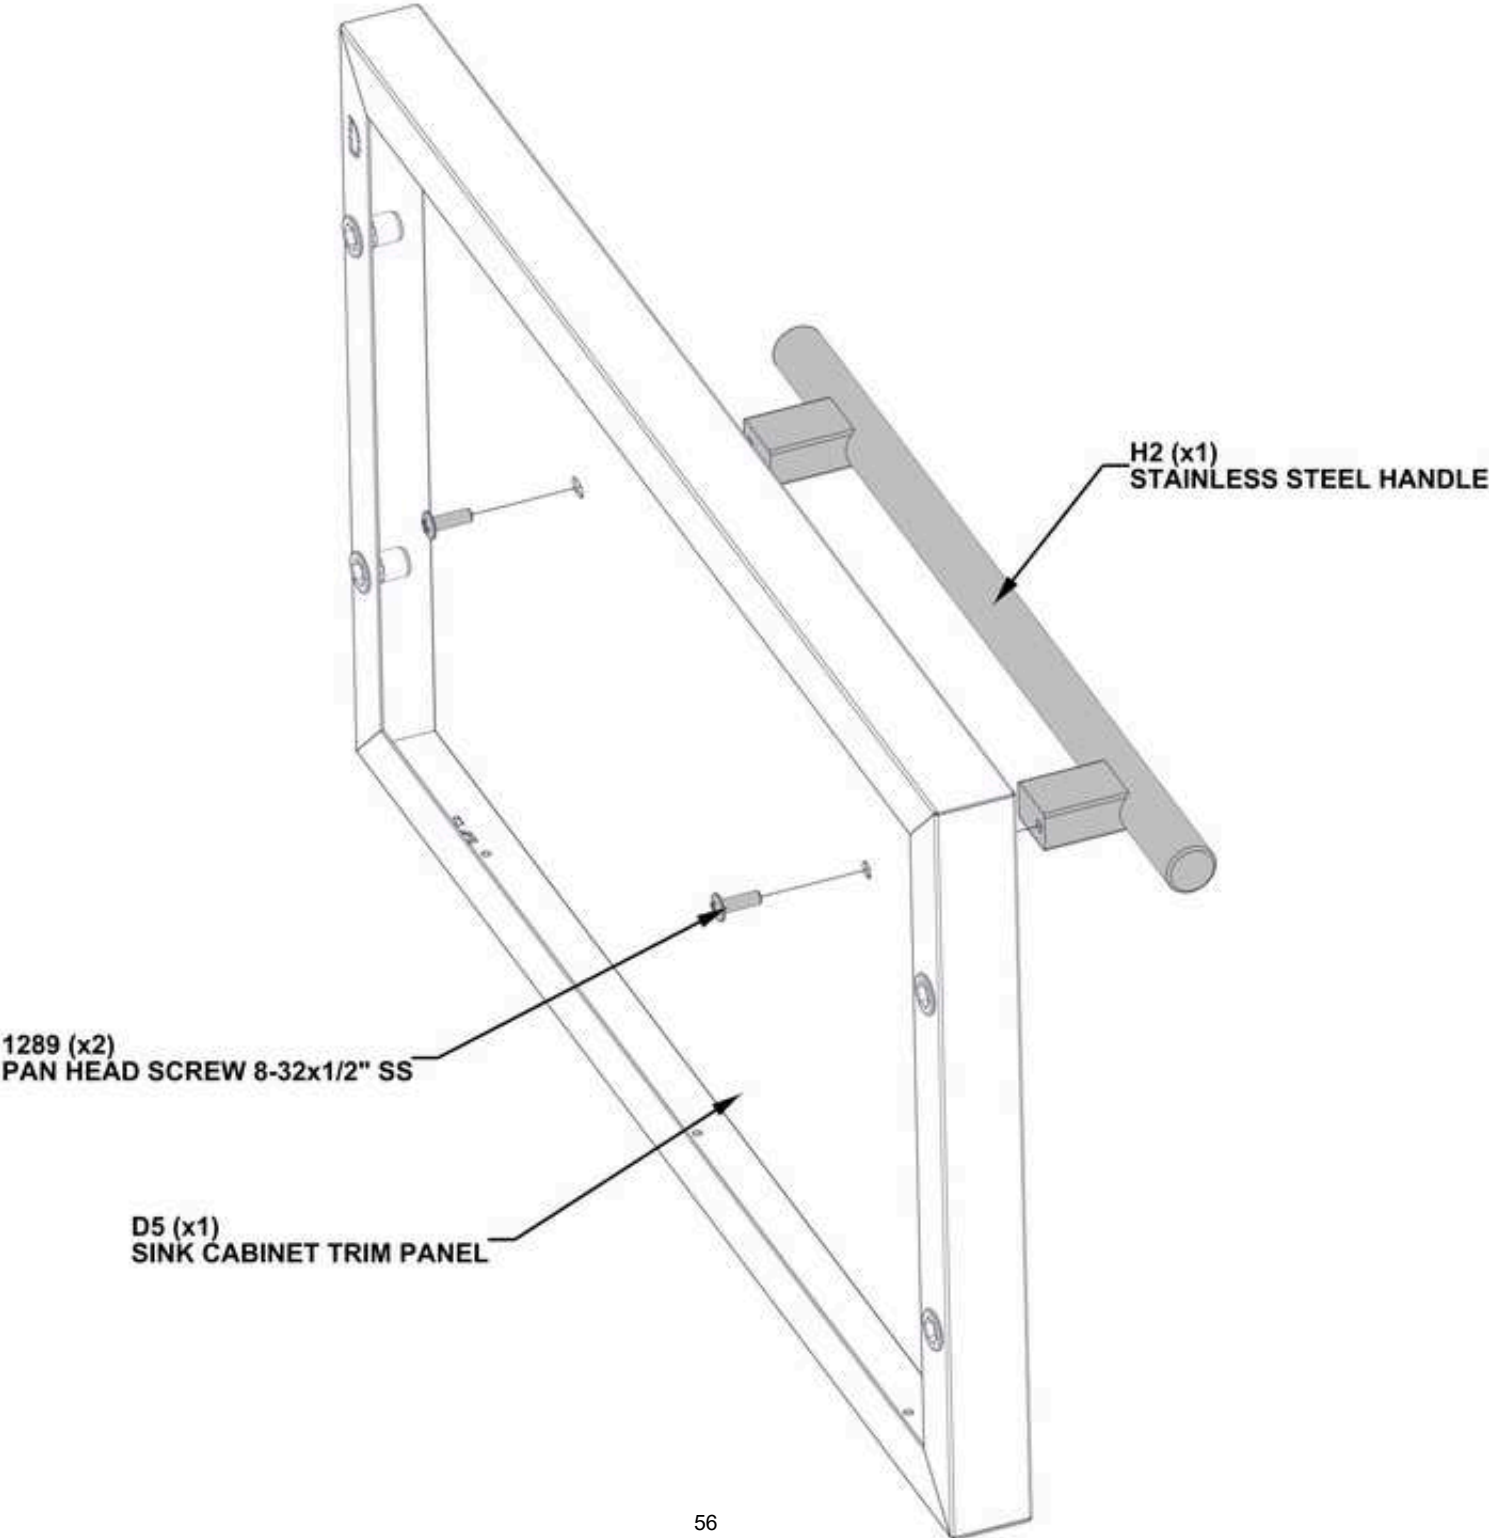


H2 (x1)
STAINLESS STEEL HANDLE

1289 (x2)
PAN HEAD SCREW 8-32x1/2" SS

D5 (x1)
SINK CABINET TRIM PANEL


STEP 40 - SINK CABINET FALSE PANEL ATTACHMENT

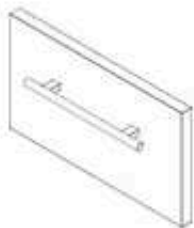

FALSE PANEL ASSEMBLY
FROM STEP 39

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- HARDWARE ATTACHES ON INSIDE OF CABINET.

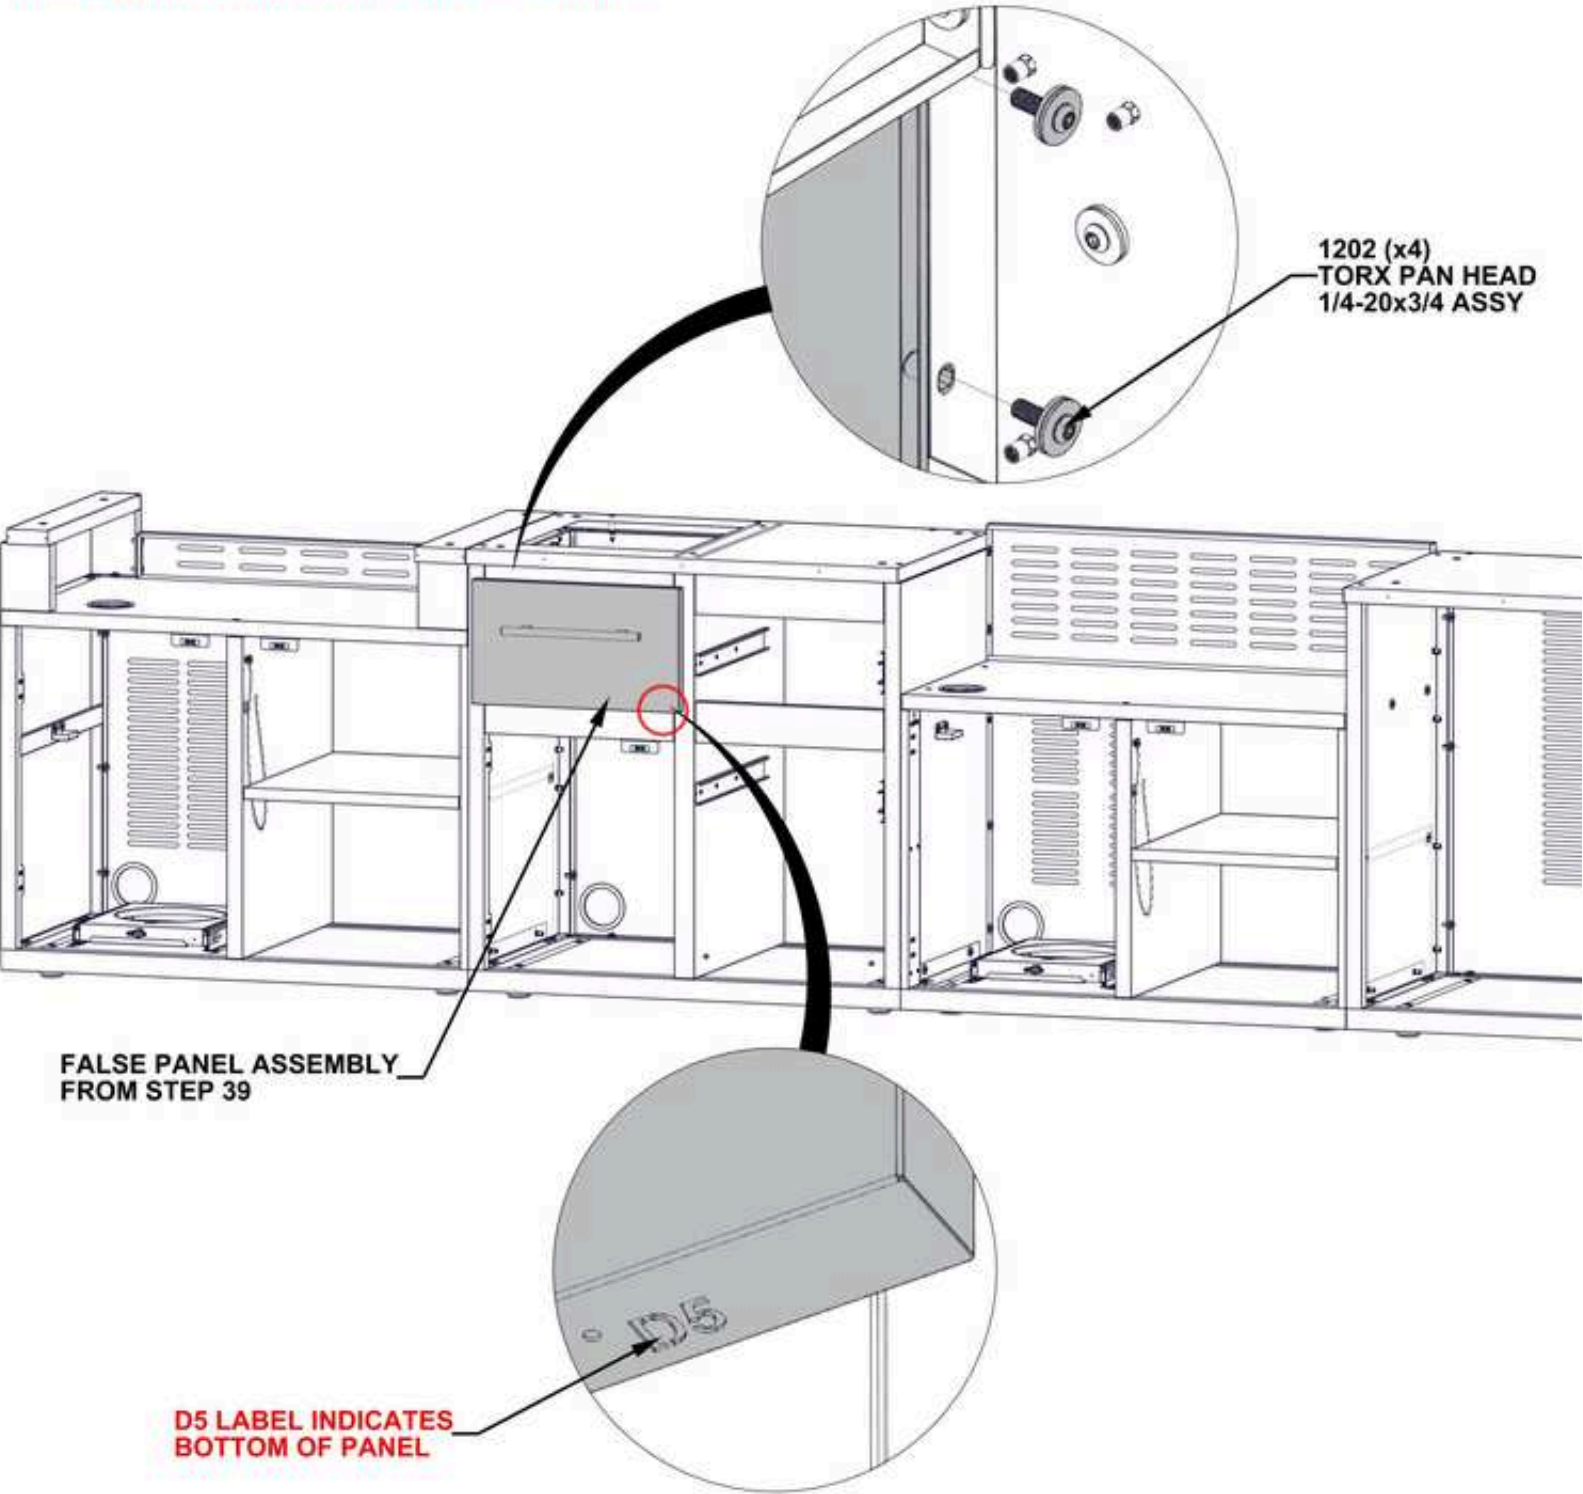


STEP 41A - SINK PRE-ASSEMBLY



A16 SINK ASSEMBLY - A4M03143
(x1) 15 1/8"x15 5/16"x16 7/8" (384x389x429)


1. INSTALLING THE SINK DRAIN

- SET DRAIN INSIDE OF SINK BODY, PLACING FOAM GASKET BETWEEN SURFACES.
- FASTEN IN PLACE USING RUBBER GASKET AND DRAIN NUT FROM BOTTOM SIDE.

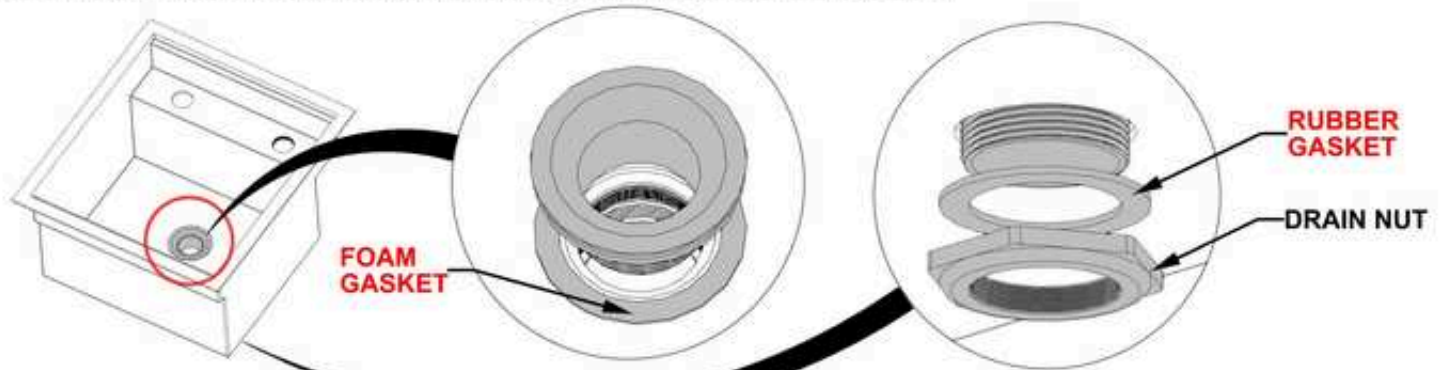


2. INSTALLING THE FAUCET

- INSTALL FAUCET BY PLACING HANDLE AND SPOUT INTO SINK OPENINGS AND SECURING IN PLACE VIA NUT.
- INSERT SCREWS TO LOCK.
- CONNECT WATER FAUCET LINES TOGETHER.

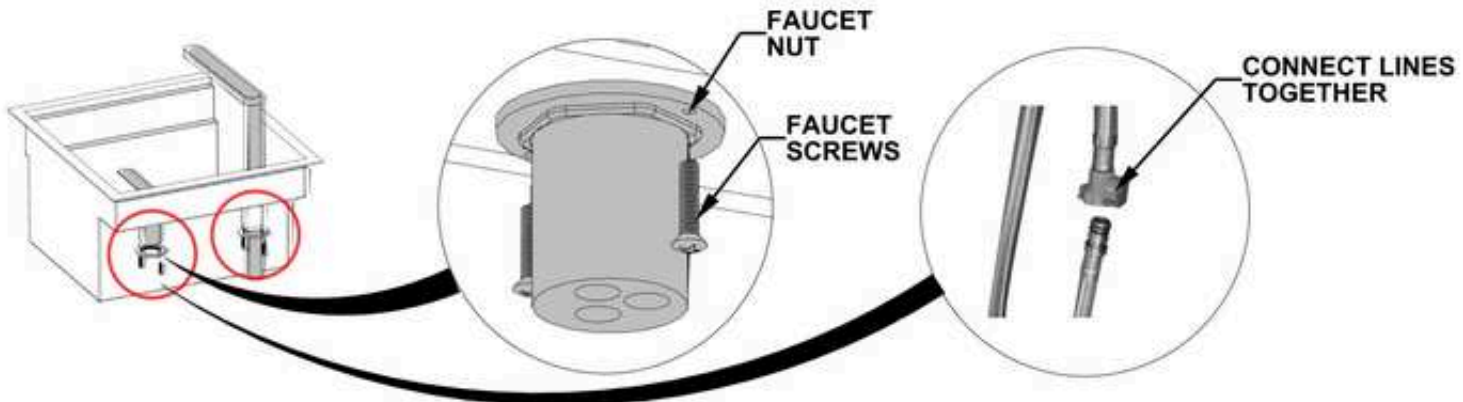

3. INSTALLING THE DRAIN FITTING

- ATTACH DRAIN FITTING TO SINK DRAIN.

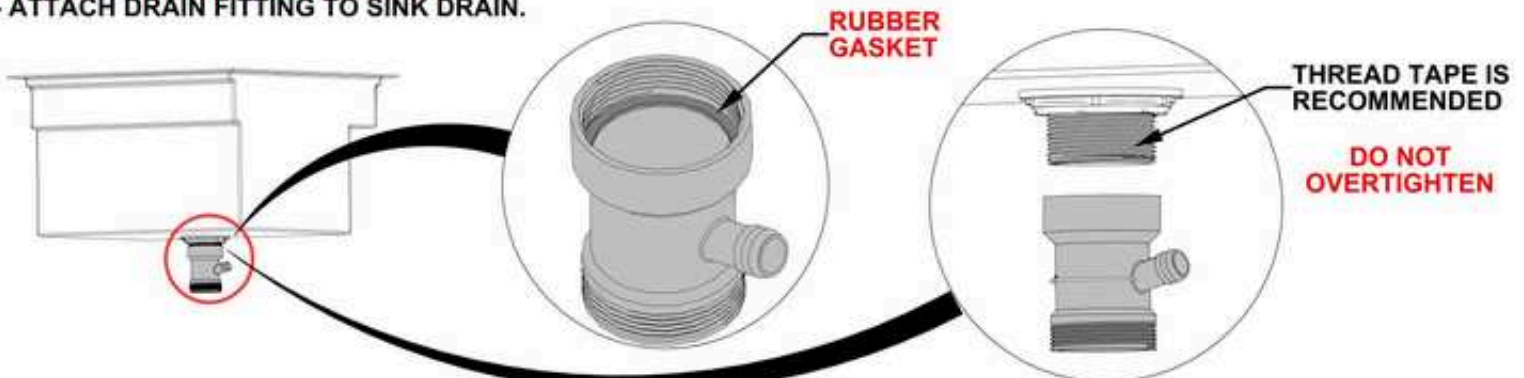


STEP 41B - SINK PRE-ASSEMBLY



A16 SINK ASSEMBLY - A4M03143
(x1) 15 1/8"x15 5/16"x16 7/8" (384x389x429)


4. INSTALLING THE OVERFLOW DRAIN

- MAKE SURE RUBBER GASKET IS INSTALLED IN OVERFLOW DRAIN.
- INSERT DRAIN SCREW TO HOLD IN PLACE.

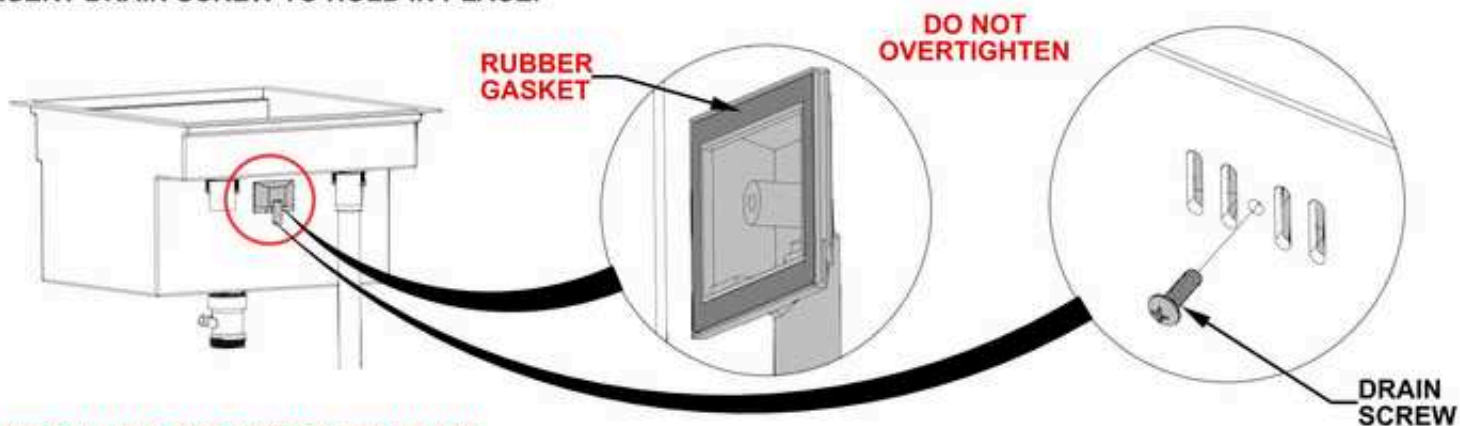


5. INSTALLING THE OVERFLOW DRAIN

- ATTACH OVERFLOW DRAIN BY CONNECTING EACH END AS SHOWN.

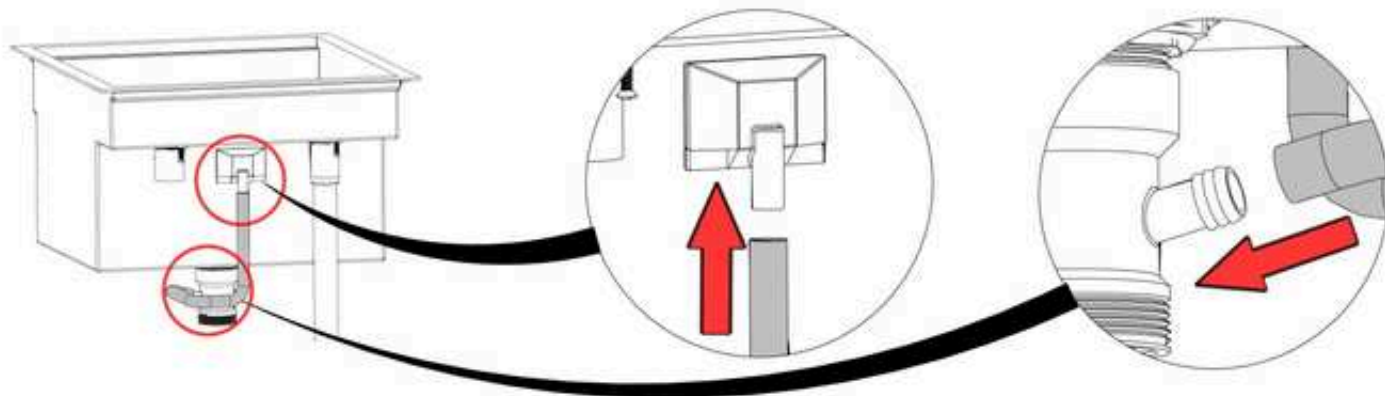


6. INSTALLING THE MAIN DRAIN AND TRAP

- ATTACH TRAP AND CORRUGATED DRAIN HOSE TO DRAIN FITTING.

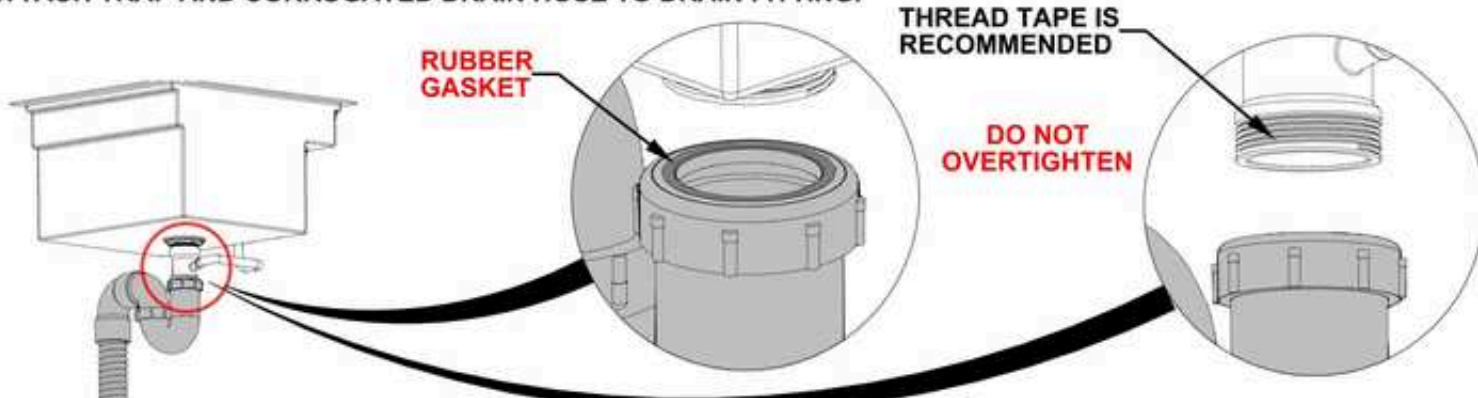

STEP 41C - SINK INSTALLATION

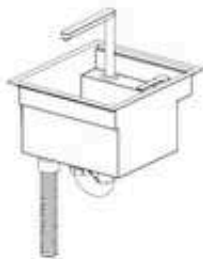

A16 SINK ASSEMBLY - A4M03143
(x1) 15 1/8"x15 5/16"x16 7/8" (384x389x429)



A4M03151 GARDEN HOSE ADAPTER
(x1)

- DRAIN STRAINER MUST BE USED WHEN DISCARDING FOOD INSIDE OF SINK.
- DO NOT LET SOLID MATERIAL ENTER SINK BASIN.

OPTIONS FOR WATER INLET SUPPLY HOOKUP:

- GARDEN HOSE ATTACHMENT USING PROVIDED ADAPTER
- WATER INLET SUPPLY LINE

OPTIONS FOR DRAIN DISCHARGE:


- BUCKET OR GREY WATER CONTAINER
- FRENCH DRAIN OR DRY BASIN
- INTEGRATED SEWER SYSTEM
- CHECK YOUR LOCAL REQUIREMENTS.

**ATTACH ADAPTER
TO INLET LINE AND
TIGHTEN WITH WRENCH**


3151 (x1)
GARDEN HOSE
ADAPTER

**IT IS RECOMMENDED TO
APPLY A FINE BEAD OF
SILICONE, TO UNDERNEATH
SIDE OF ALL SINK FLANGES
BEFORE INSTALLING**

A16 (x1)
SINK ASSEMBLY

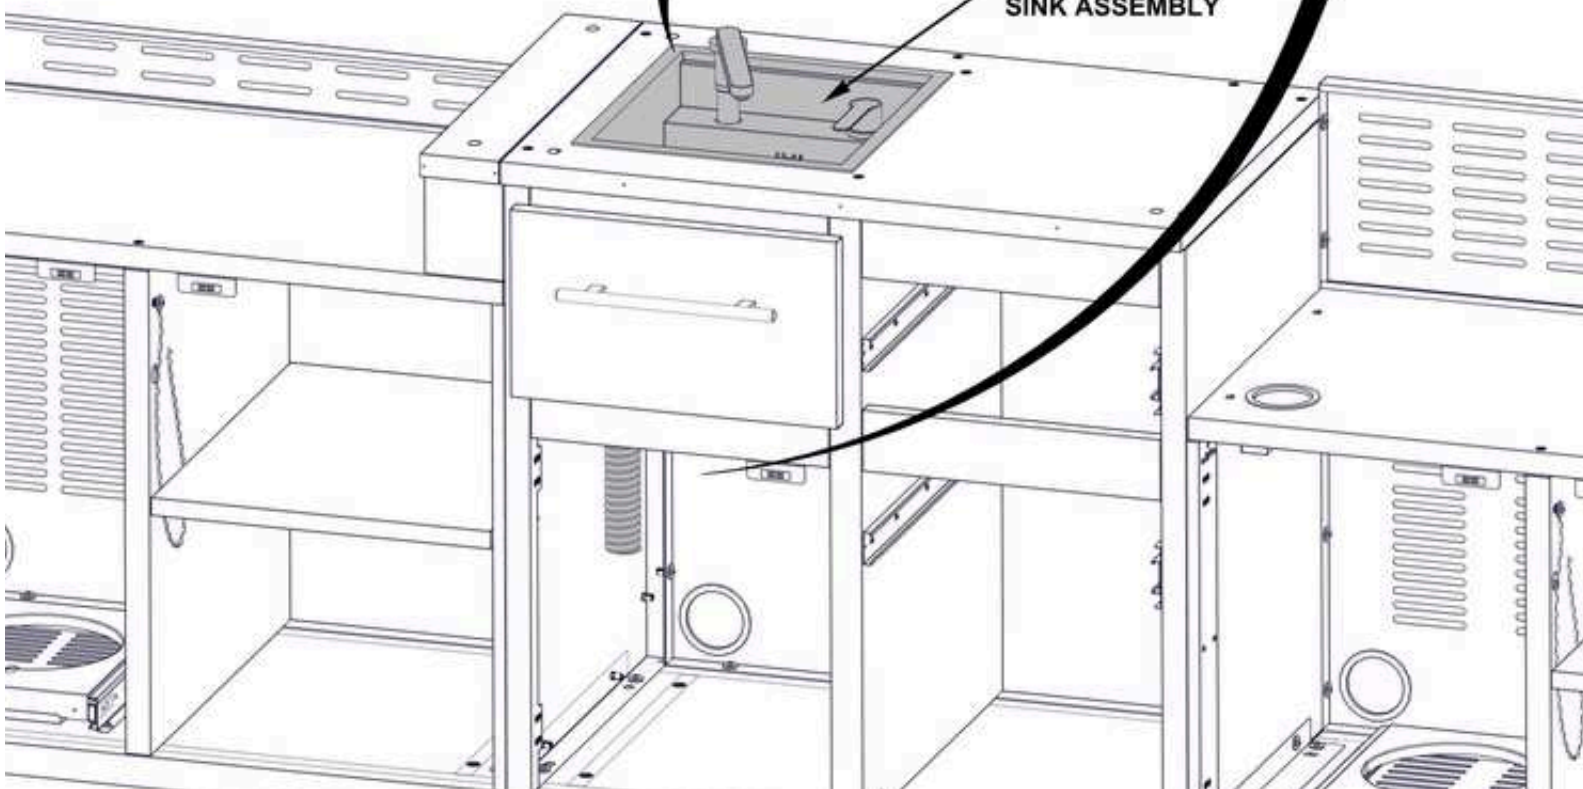


STEP 42A - FRIDGE CABINET COUNTERTOP INSTALLATION

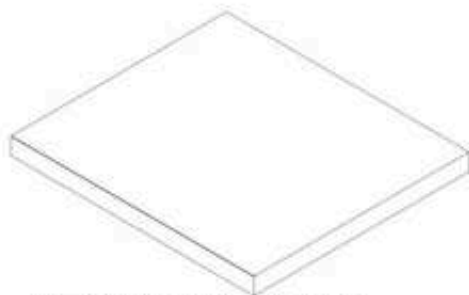


M3 COUNTERTOP - A4M06163
(x1) 28 1/8"x24 15/16"x1 15/16" (50x634x715)

- IT IS RECOMMENDED TO HAVE AT LEAST TWO PEOPLE SET COUNTERTOP IN PLACE.
- SLIDE IN PLACE UNTIL COUNTERTOP IS TIGHT AGAINST CABINET AND SIDES ARE FLUSH WITH PANEL.
- **WHEN SETTING COUNTERTOP IN PLACE, MAKE SURE YOUR FINGERS ARE CLEAR AND NOT UNDERNEATH.**

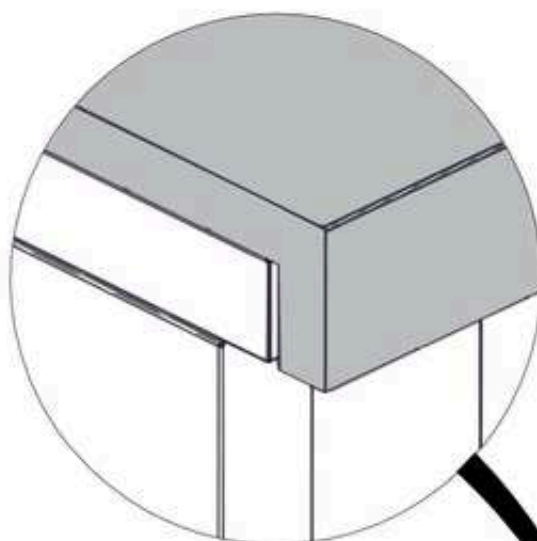


M3 (x1)
COUNTERTOP

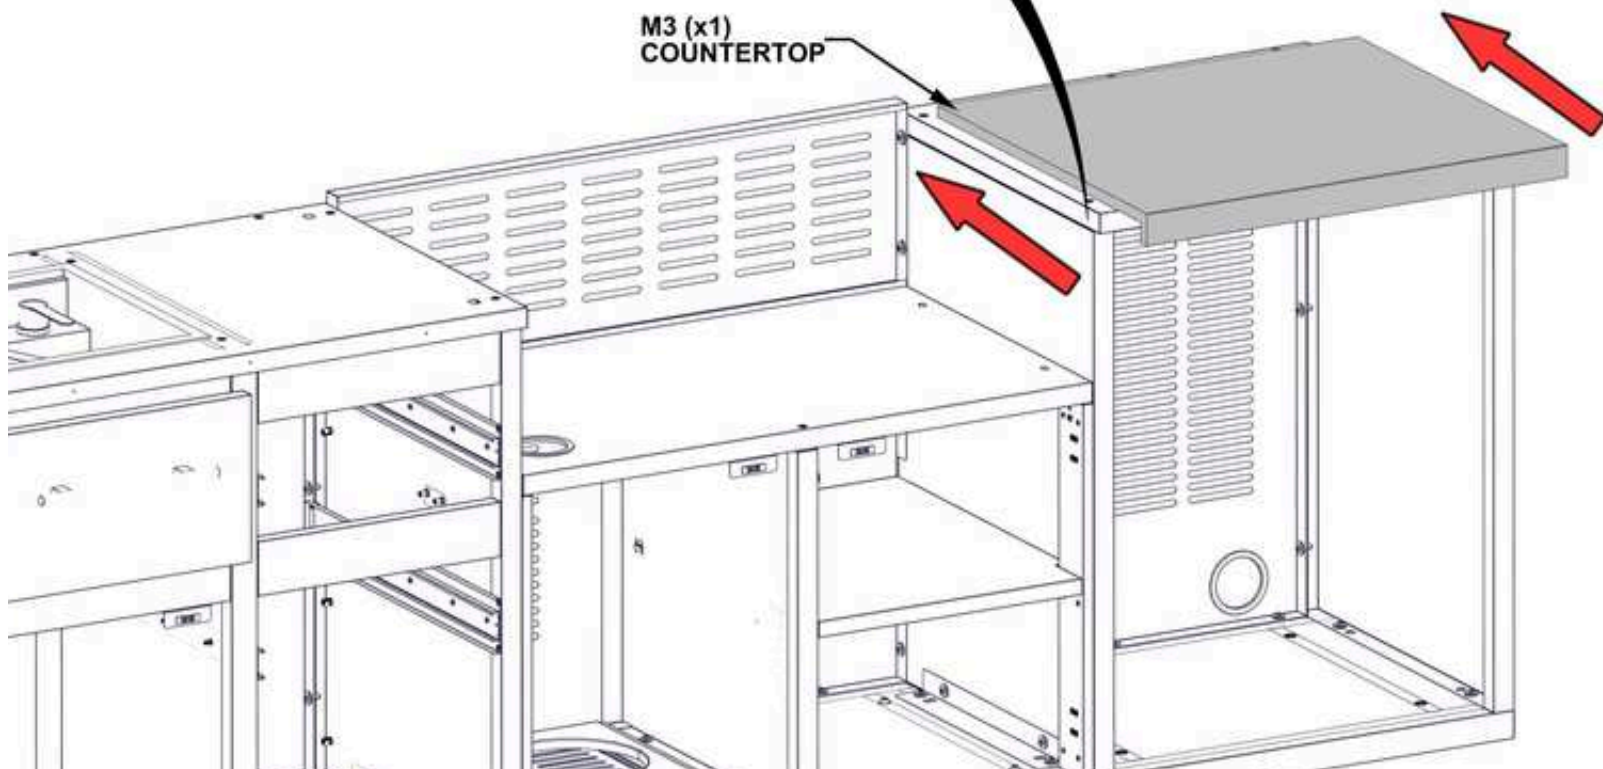


STEP 42B - FRIDGE CABINET COUNTERTOP INSTALLATION

Qty	PartNo	Description
4	H101292	TORX PAN HEAD 1/4-20x13/32"
4	H101053	STEEL WASHER 6x20
4	H101054	SEALANT WASHER

- MAKE SURE YOU ARE USING THE CORRECT HARDWARE FOR THIS STEP.
- ONCE COUNTERTOP IS IN PLACE, IT IS RECOMMENDED TO COVER WITH A PIECE OF CARDBOARD OR FOAM UNTIL ASSEMBLY IS FINISHED TO PREVENT DAMAGE.
- DO NOT USE COUNTERTOP SURFACE AS A WORK BENCH.

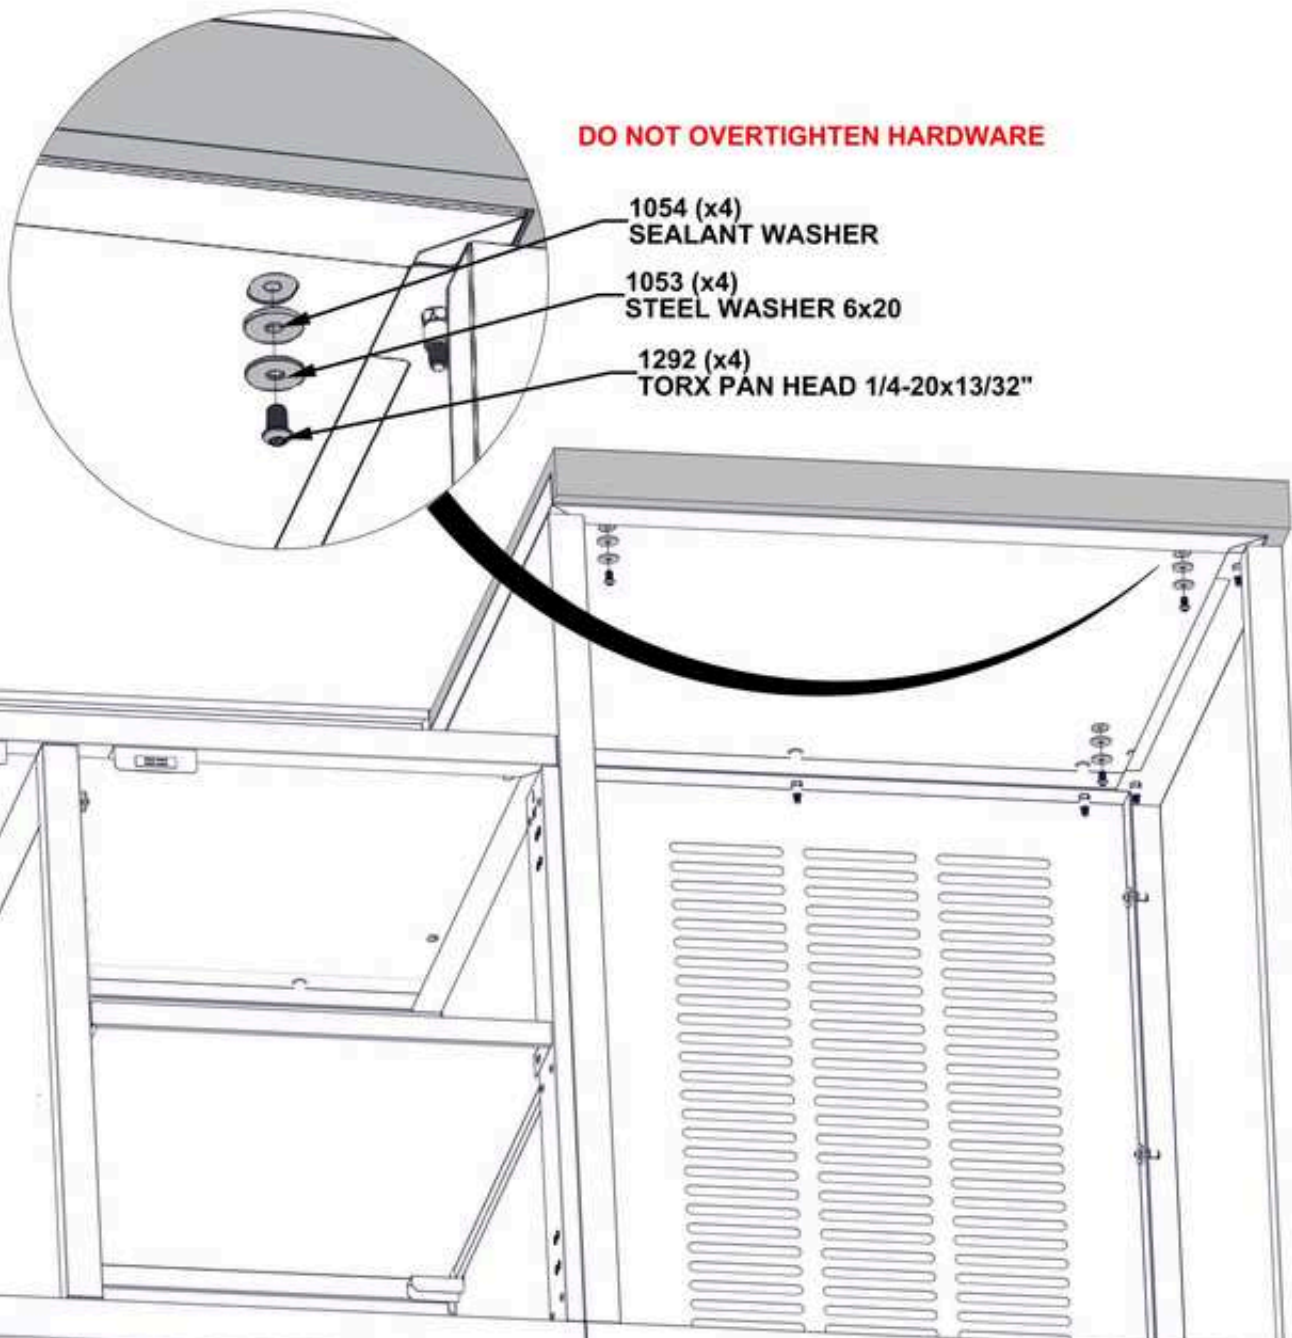


STEP 43A - SINK CABINET COUNTERTOP INSTALLATION

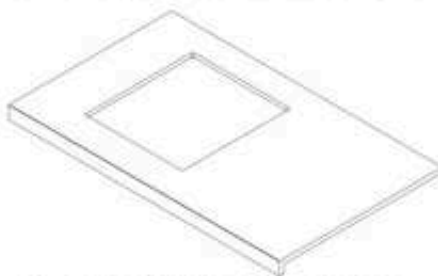

M2 SINK COUNTERTOP - A4M06162
(x1) 41 1/2"x24 15/16"x1 15/16" (49x633x1054)


- IT IS RECOMMENDED TO HAVE AT LEAST TWO PEOPLE SET COUNTERTOP IN PLACE.
- SLIDE IN PLACE UNTIL COUNTERTOP IS TIGHT AGAINST CABINET AND SIDES ARE FLUSH WITH PANEL.
- **WHEN SETTING COUNTERTOP IN PLACE, MAKE SURE YOUR FINGERS ARE CLEAR AND NOT UNDERNEATH.**

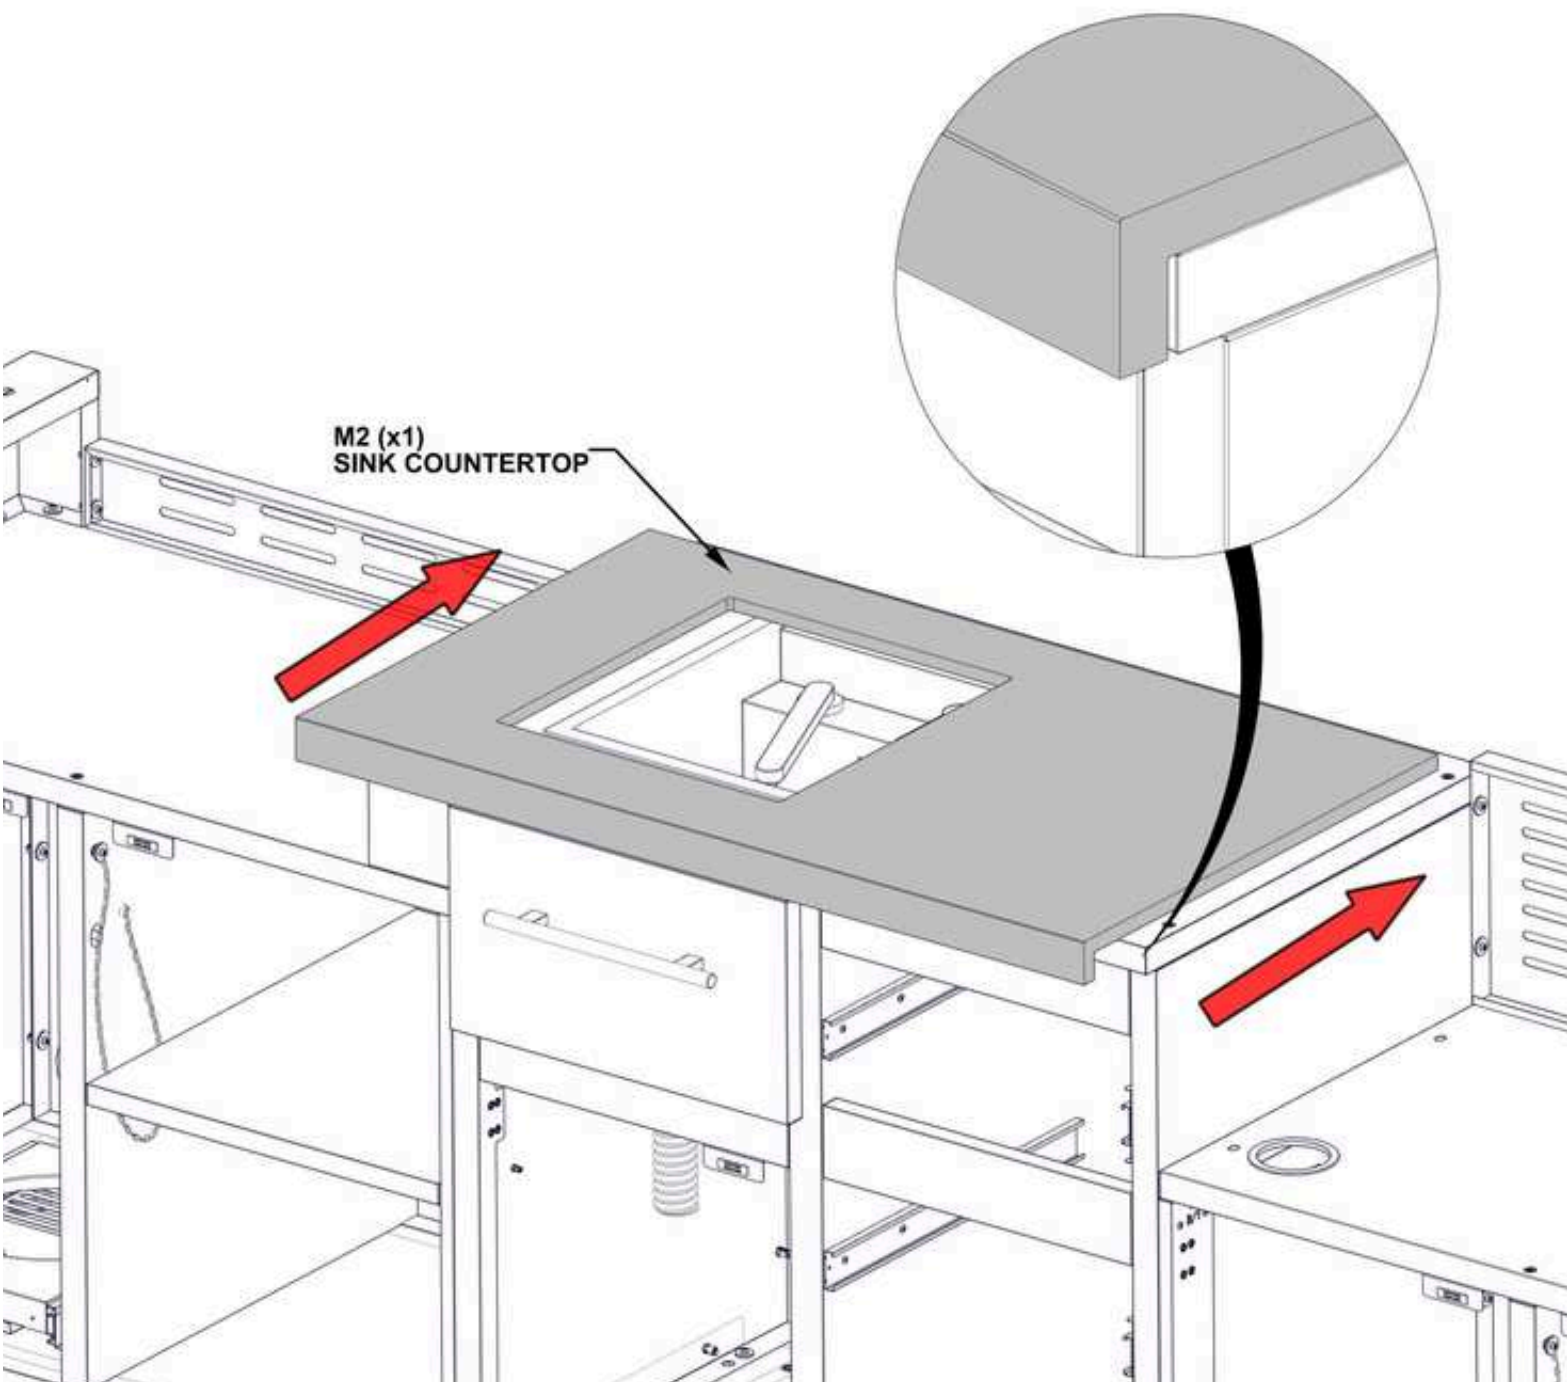


STEP 43B - SINK CABINET COUNTERTOP INSTALLATION

Qty	PartNo	Description
4	H101292	TORX PAN HEAD 1/4-20x13/32"
4	H101053	STEEL WASHER 6x20
4	H101054	SEALANT WASHER


- MAKE SURE YOU ARE USING THE CORRECT HARDWARE FOR THIS STEP.
- ONCE COUNTERTOP IS IN PLACE, IT IS RECOMMENDED TO COVER WITH A PIECE OF CARDBOARD OR FOAM UNTIL ASSEMBLY IS FINISHED TO PREVENT DAMAGE.
- DO NOT USE COUNTERTOP SURFACE AS A WORK BENCH.

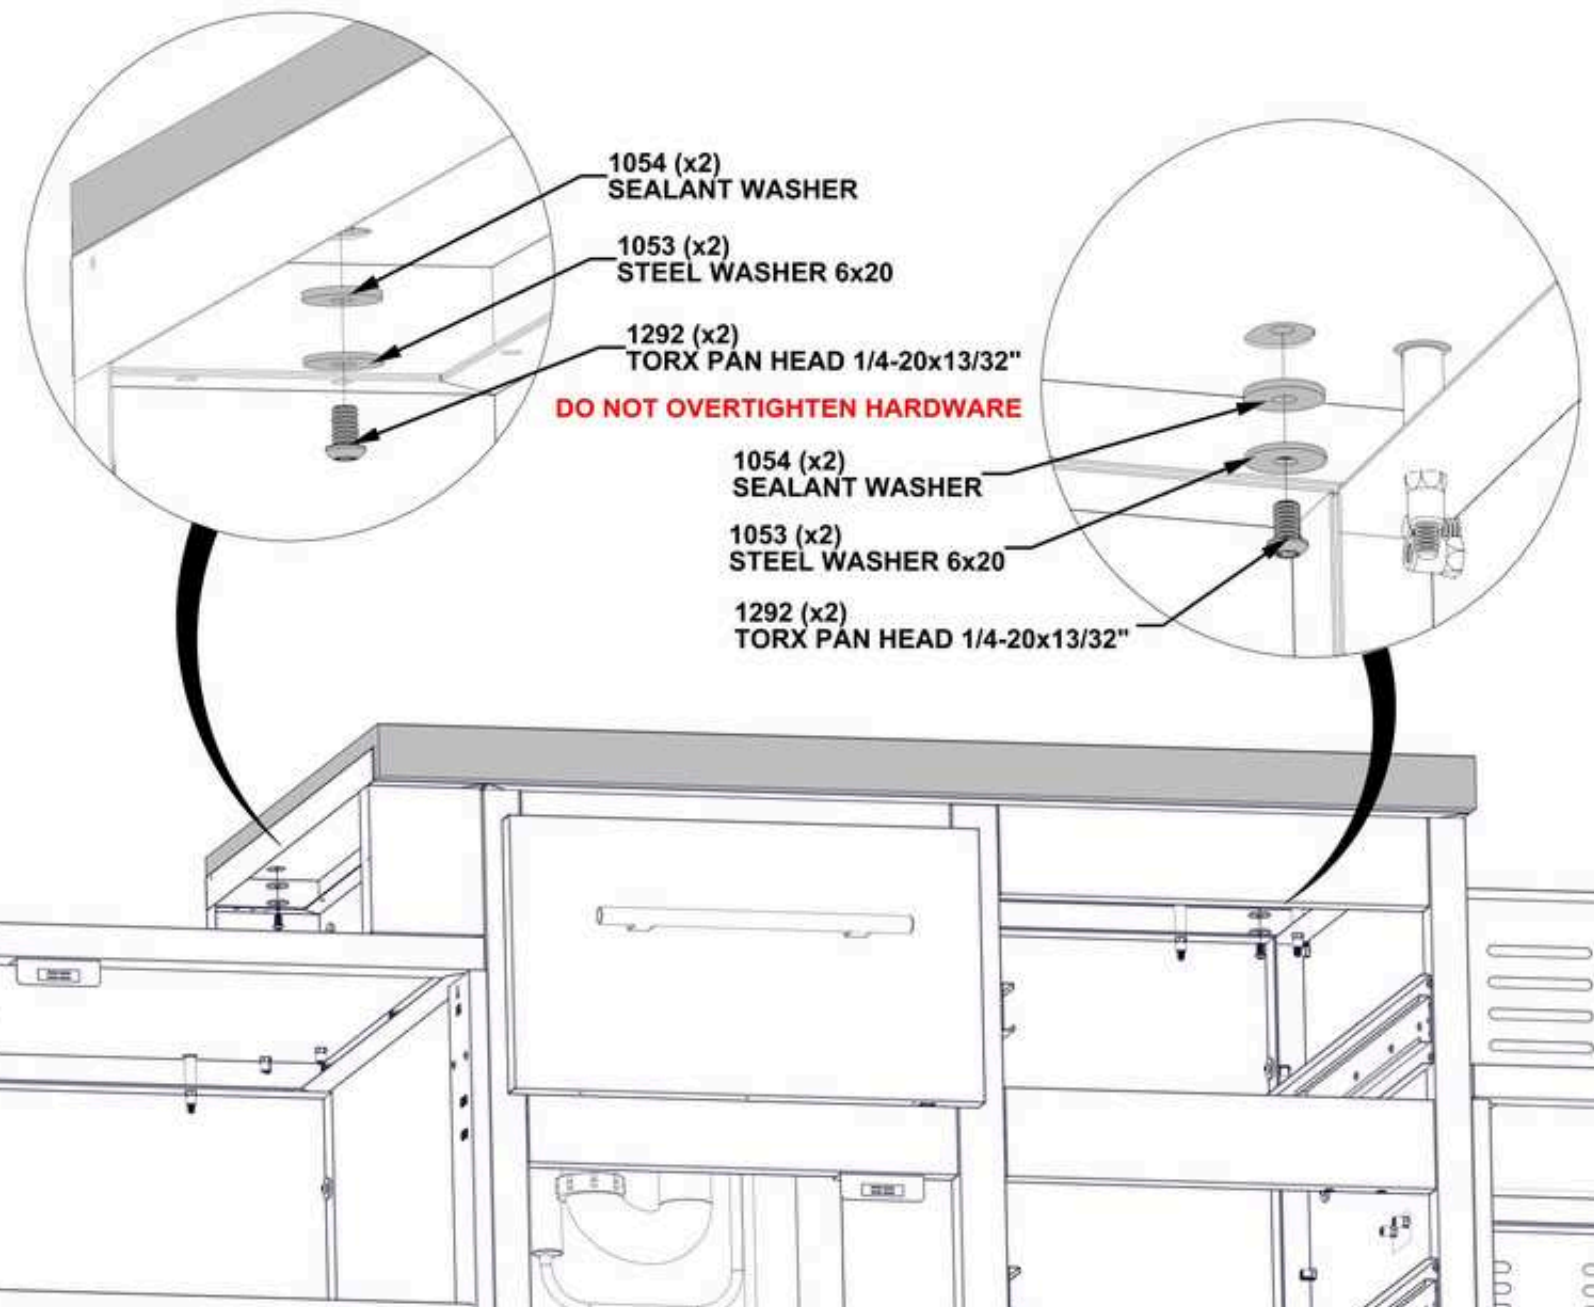

STEP 44 - SINK CABINET COUNTERTOP INSTALLATION

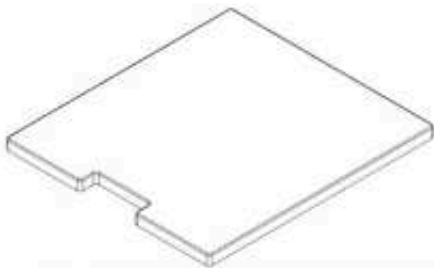

M5 SINK COVER COUNTERTOP - A4M05949
(x1) 11/16"x14 3/4"x16 5/16" (18x375x415)

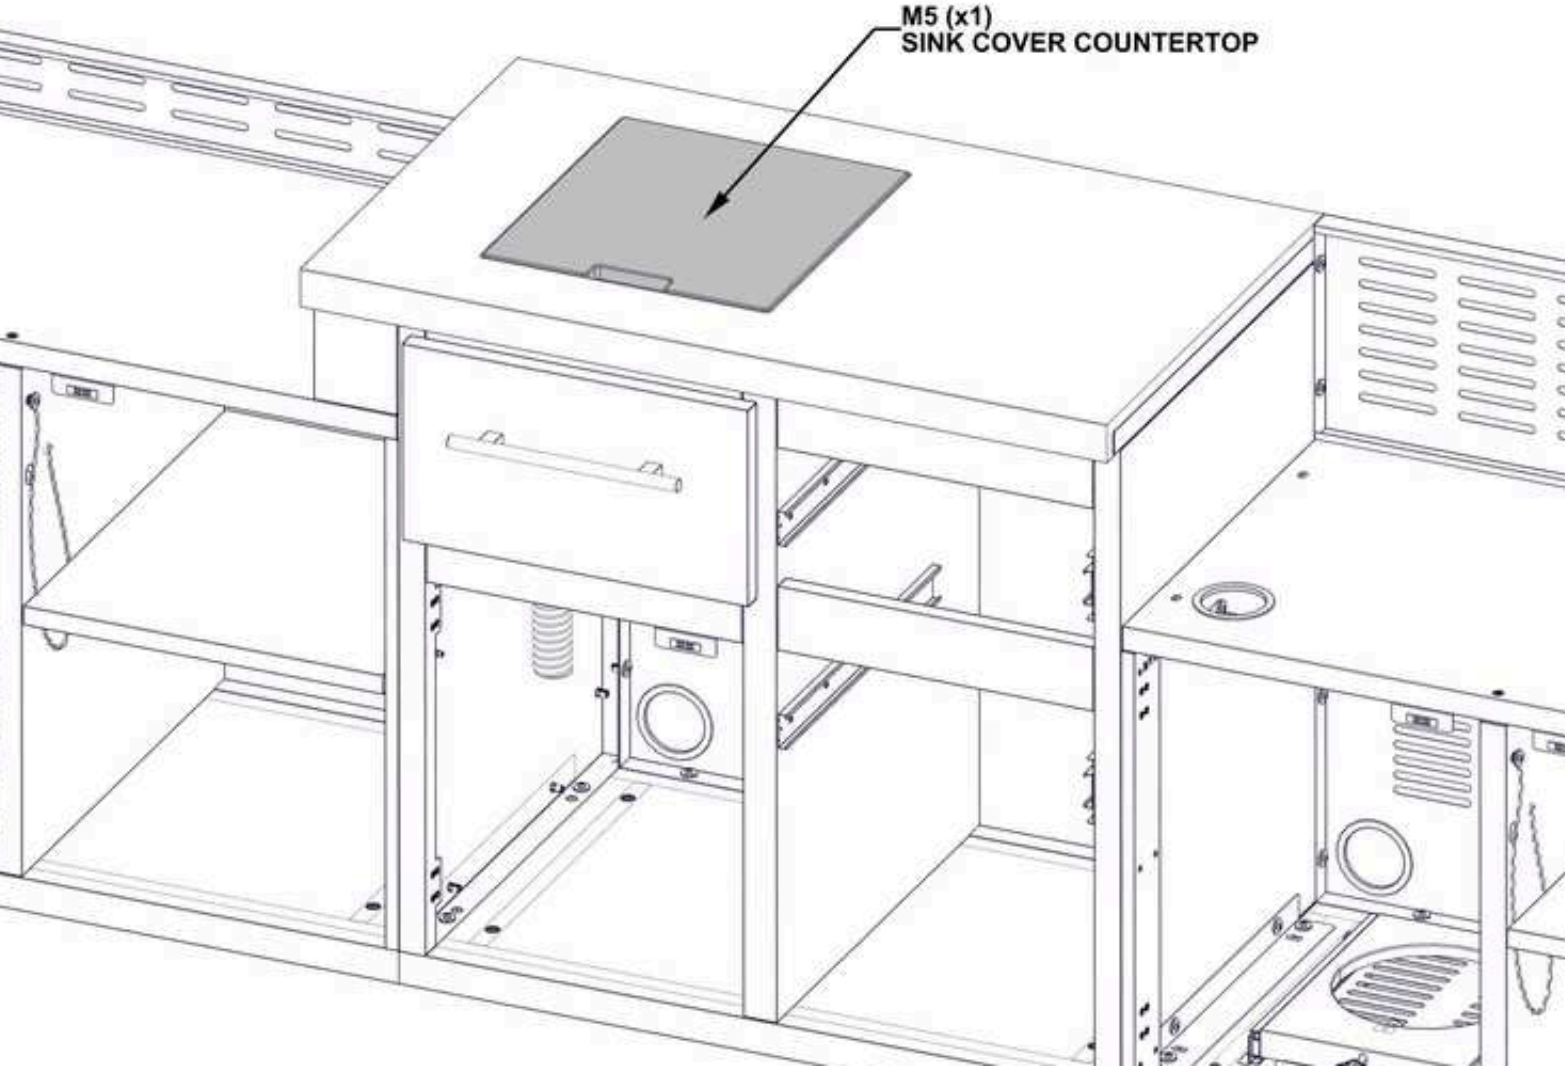


M5 (x1)
SINK COVER COUNTERTOP

STEP 45A - CABINET COUNTERTOP INSTALLATION



M1 COUNTERTOP - A4M06161
(x1) 24 13/16"x4 5/16"x1 15/16" (50x109x630)

- IT IS RECOMMENDED TO HAVE AT LEAST TWO PEOPLE SET COUNTERTOP IN PLACE.
- SLIDE IN PLACE UNTIL COUNTERTOP IS TIGHT AGAINST CABINET AND SIDES ARE FLUSH WITH PANEL.
- **WHEN SETTING COUNTERTOP IN PLACE, MAKE SURE YOUR FINGERS ARE CLEAR AND NOT UNDERNEATH.**

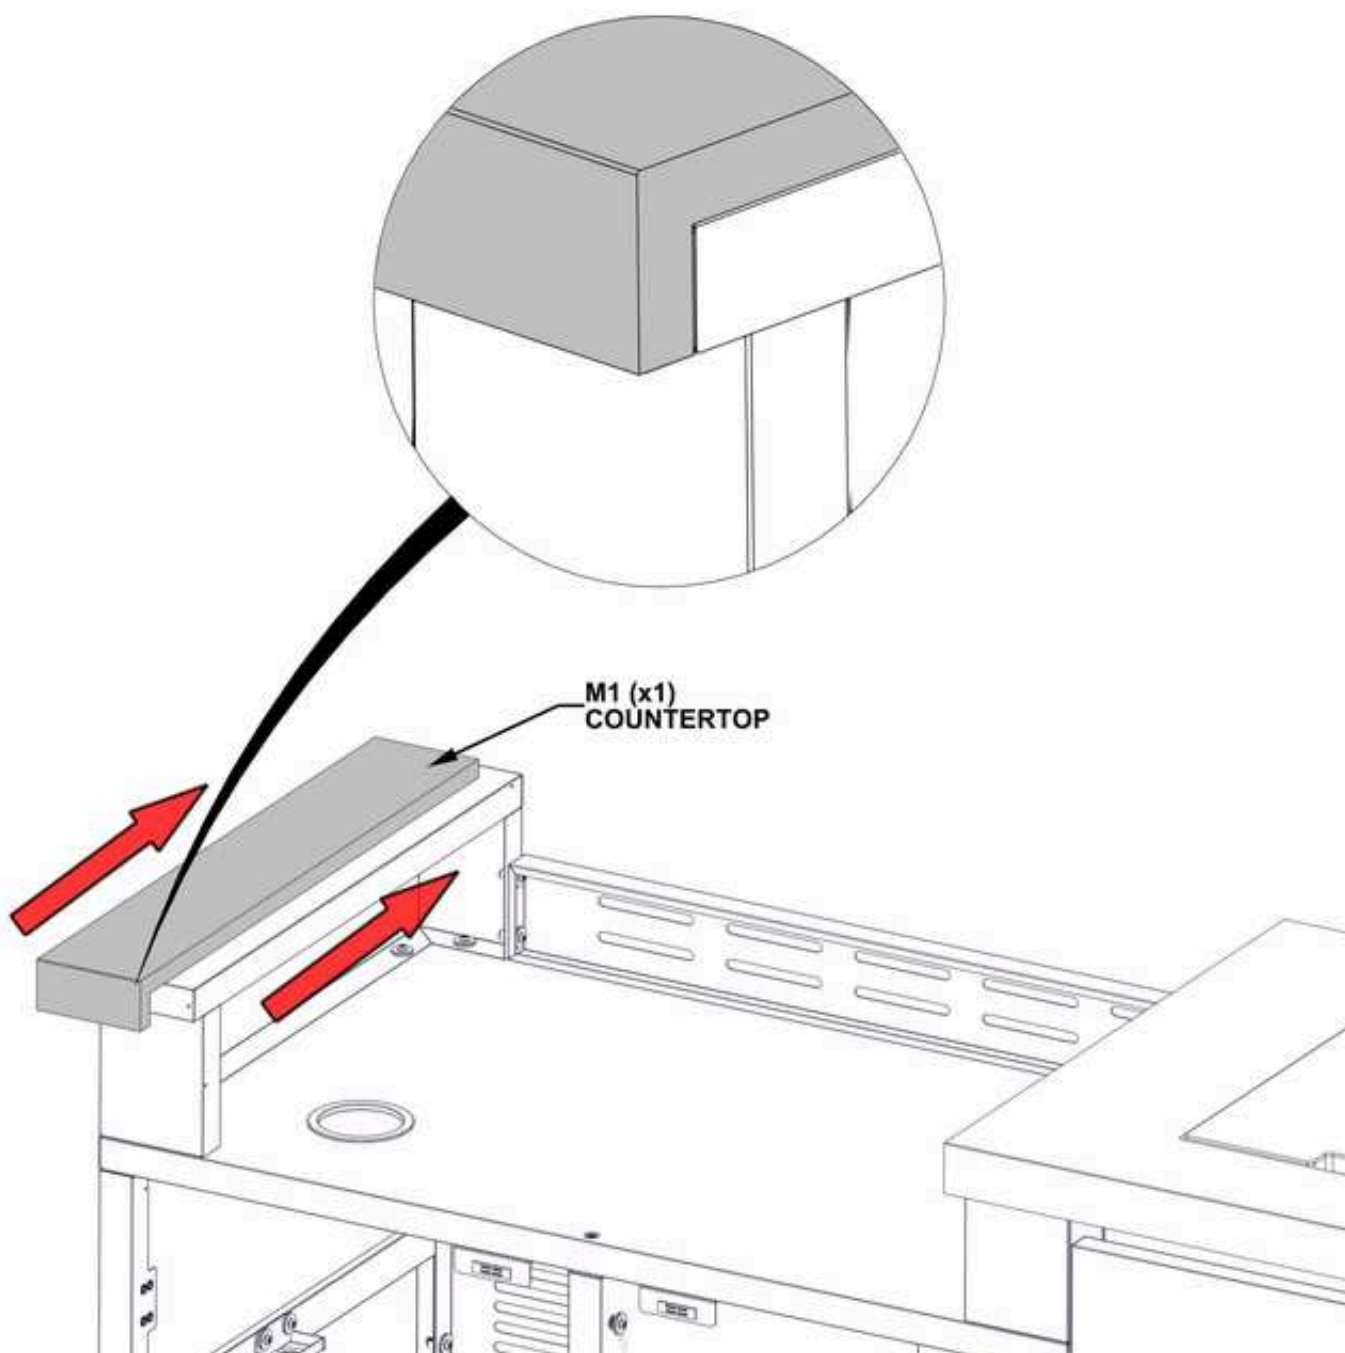

STEP 45B - CABINET COUNTERTOP INSTALLATION

Qty	PartNo	Description
2	H101292	TORX PAN HEAD 1/4-20x13/32"
2	H101053	STEEL WASHER 6x20
2	H101054	SEALANT WASHER


- MAKE SURE YOU ARE USING THE CORRECT HARDWARE FOR THIS STEP.
- ONCE COUNTERTOP IS IN PLACE, IT IS RECOMMENDED TO COVER WITH A PIECE OF CARDBOARD OR FOAM UNTIL ASSEMBLY IS FINISHED TO PREVENT DAMAGE.
- DO NOT USE COUNTERTOP SURFACE AS A WORK BENCH.

DO NOT OVERTIGHTEN HARDWARE

1054 (x2)
SEALANT WASHER

1053 (x2)
STEEL WASHER 6x20

1292 (x2)
TORX PAN HEAD 1/4-20x13/32"

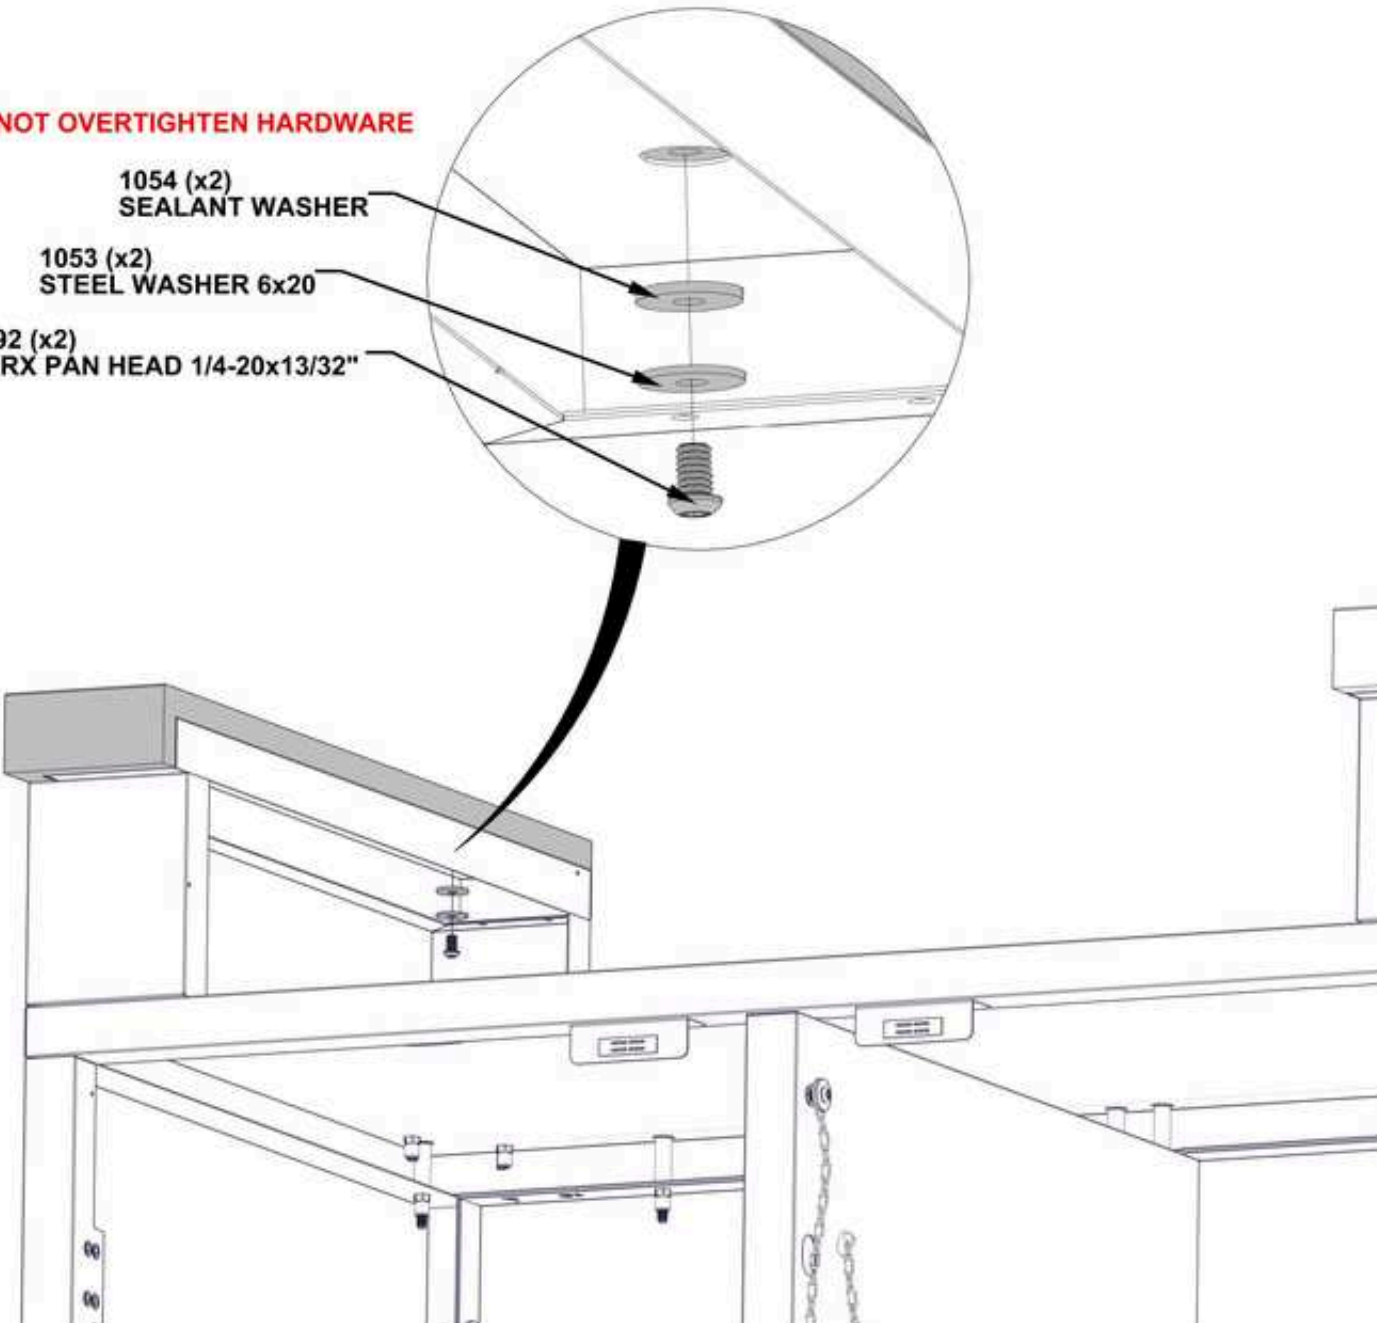

STEP 46A - KITCHEN TRASH CAN ASSEMBLY


Qty	PartNo	Description
6	H101289	PAN HEAD SCREW 8-32x1/2" SS




H3 TRASH CAN BRACKET ASSEMBLY - A4M03610
(x1) 18 1/16"x15 13/16"x (35x401.60x458)



A11 TRIANGLE PANEL - A4M03086
(x2) 13/16"x13 3/4"x13 3/4" (20x350x350)

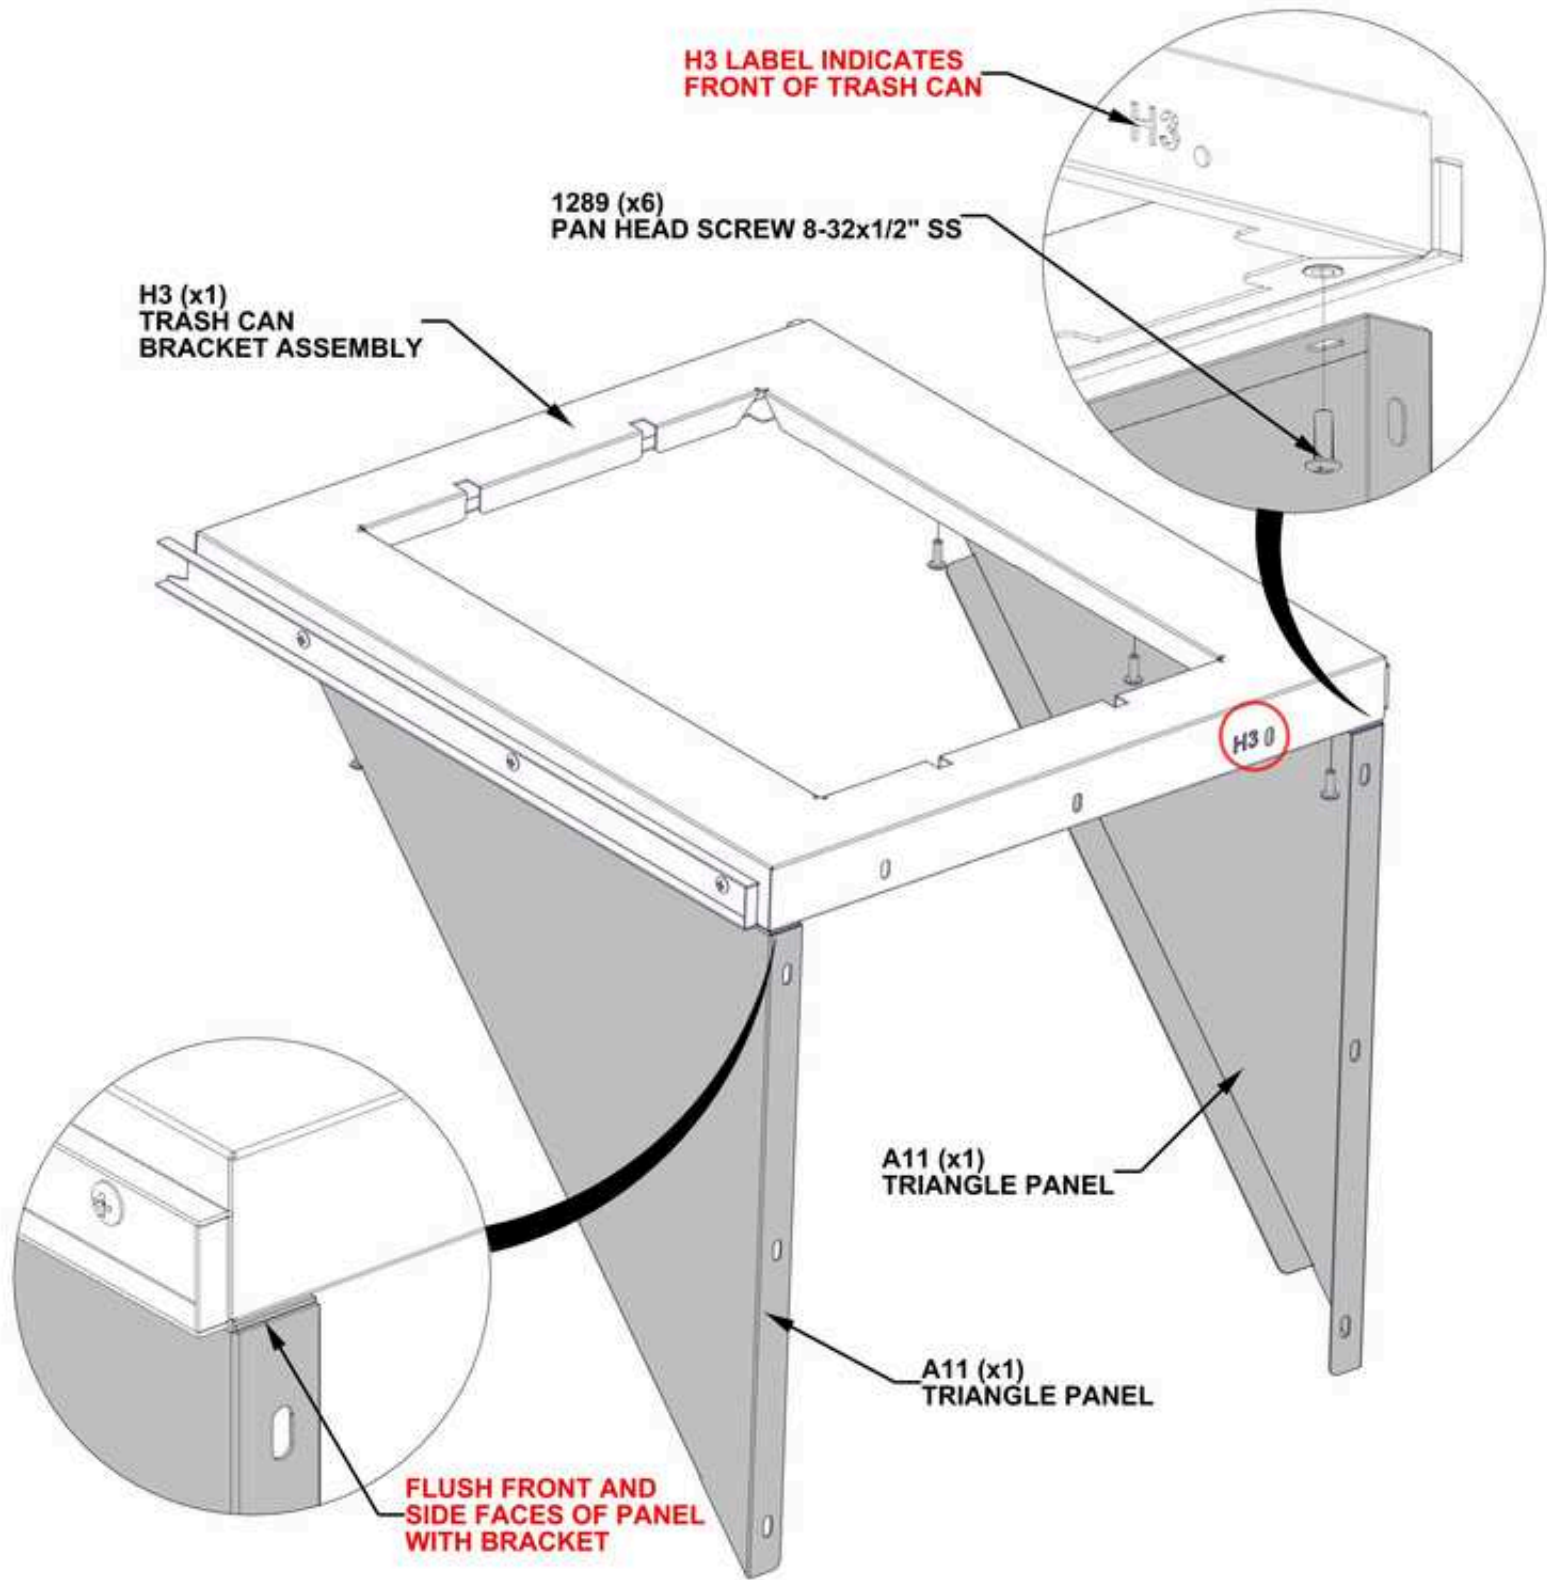


STEP 46B - KITCHEN TRASH CAN ASSEMBLY

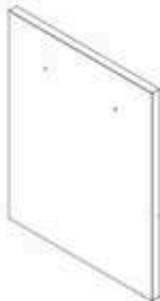

Qty	PartNo	Description
9	H101289	PAN HEAD SCREW 8-32x1/2" SS

D9 TRASH CAN PANEL ASSEMBLY - A4M03608
(x1) 22 1/4"x17 3/4"x15/16" (24.00x451.00x565.00)

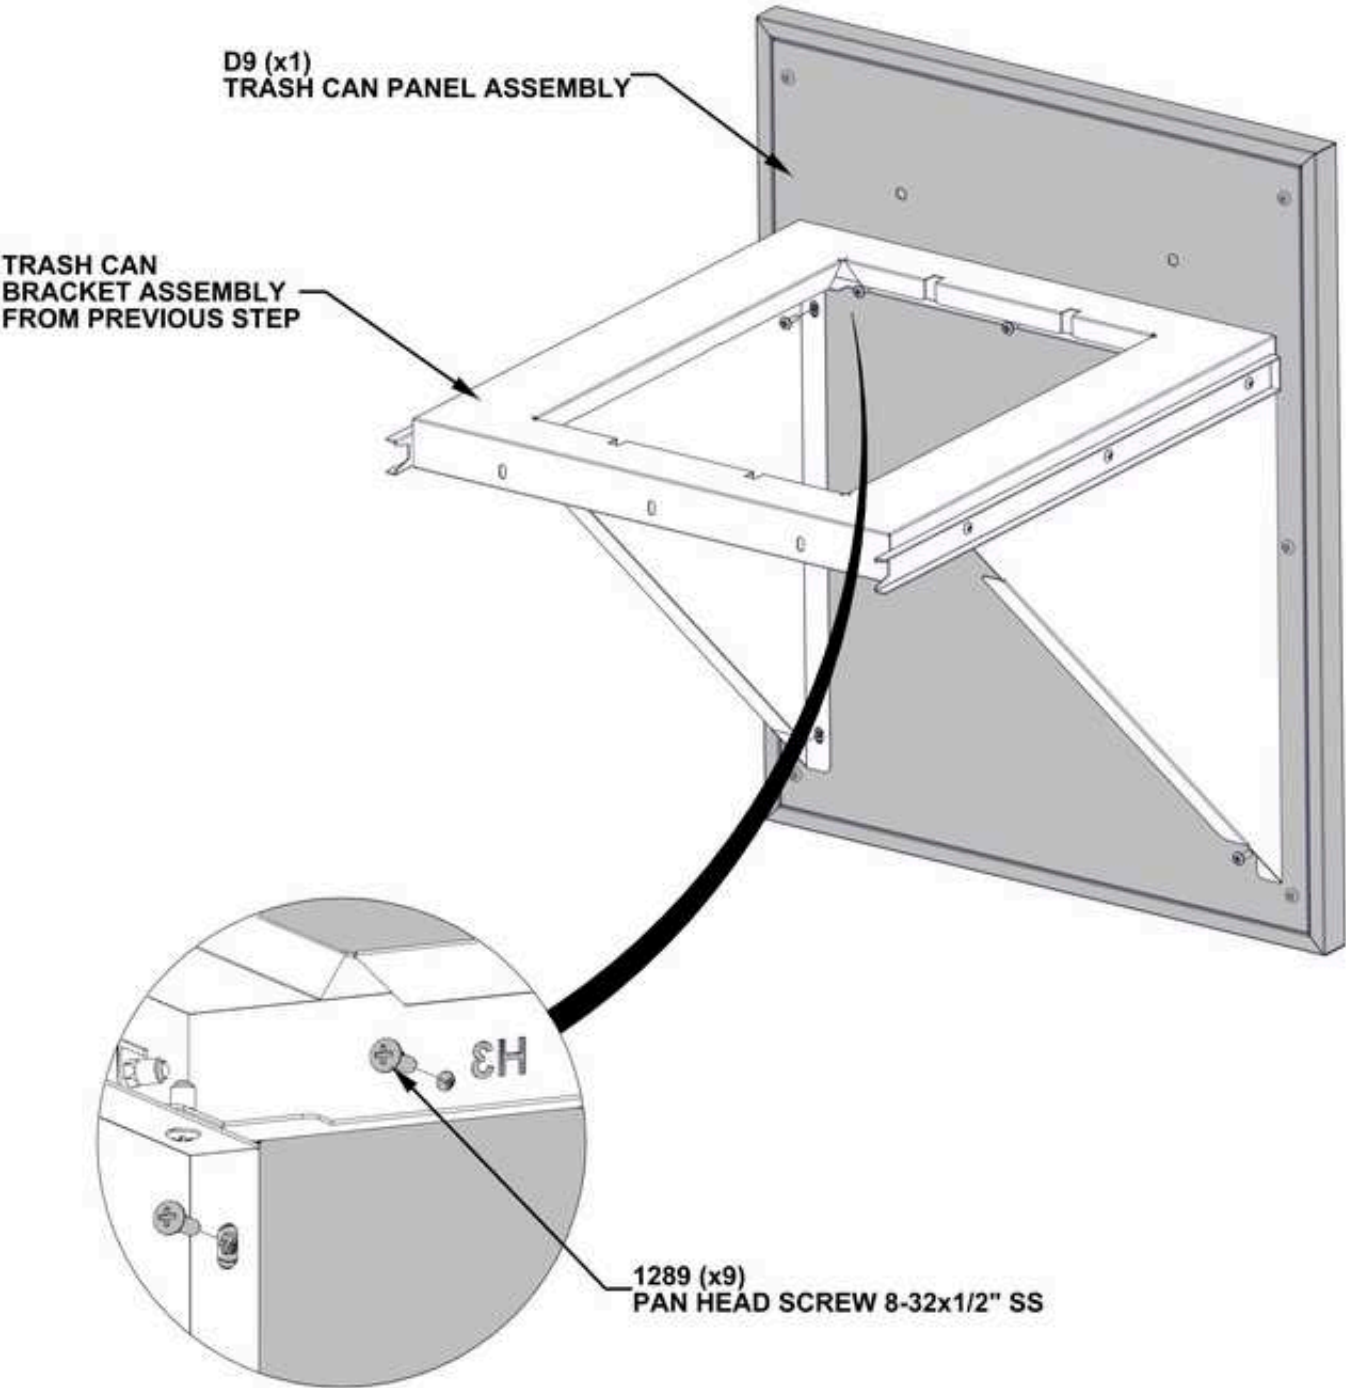


STEP 46C - KITCHEN TRASH CAN ASSEMBLY



Qty	PartNo	Description
2	H101307	SHOULDER BOLT 8-32x30mm SS

H2 STAINLESS STEEL HANDLE - A4M03024
(x1) 5/8"x1 9/16"x11 13/16" (16x40x300)

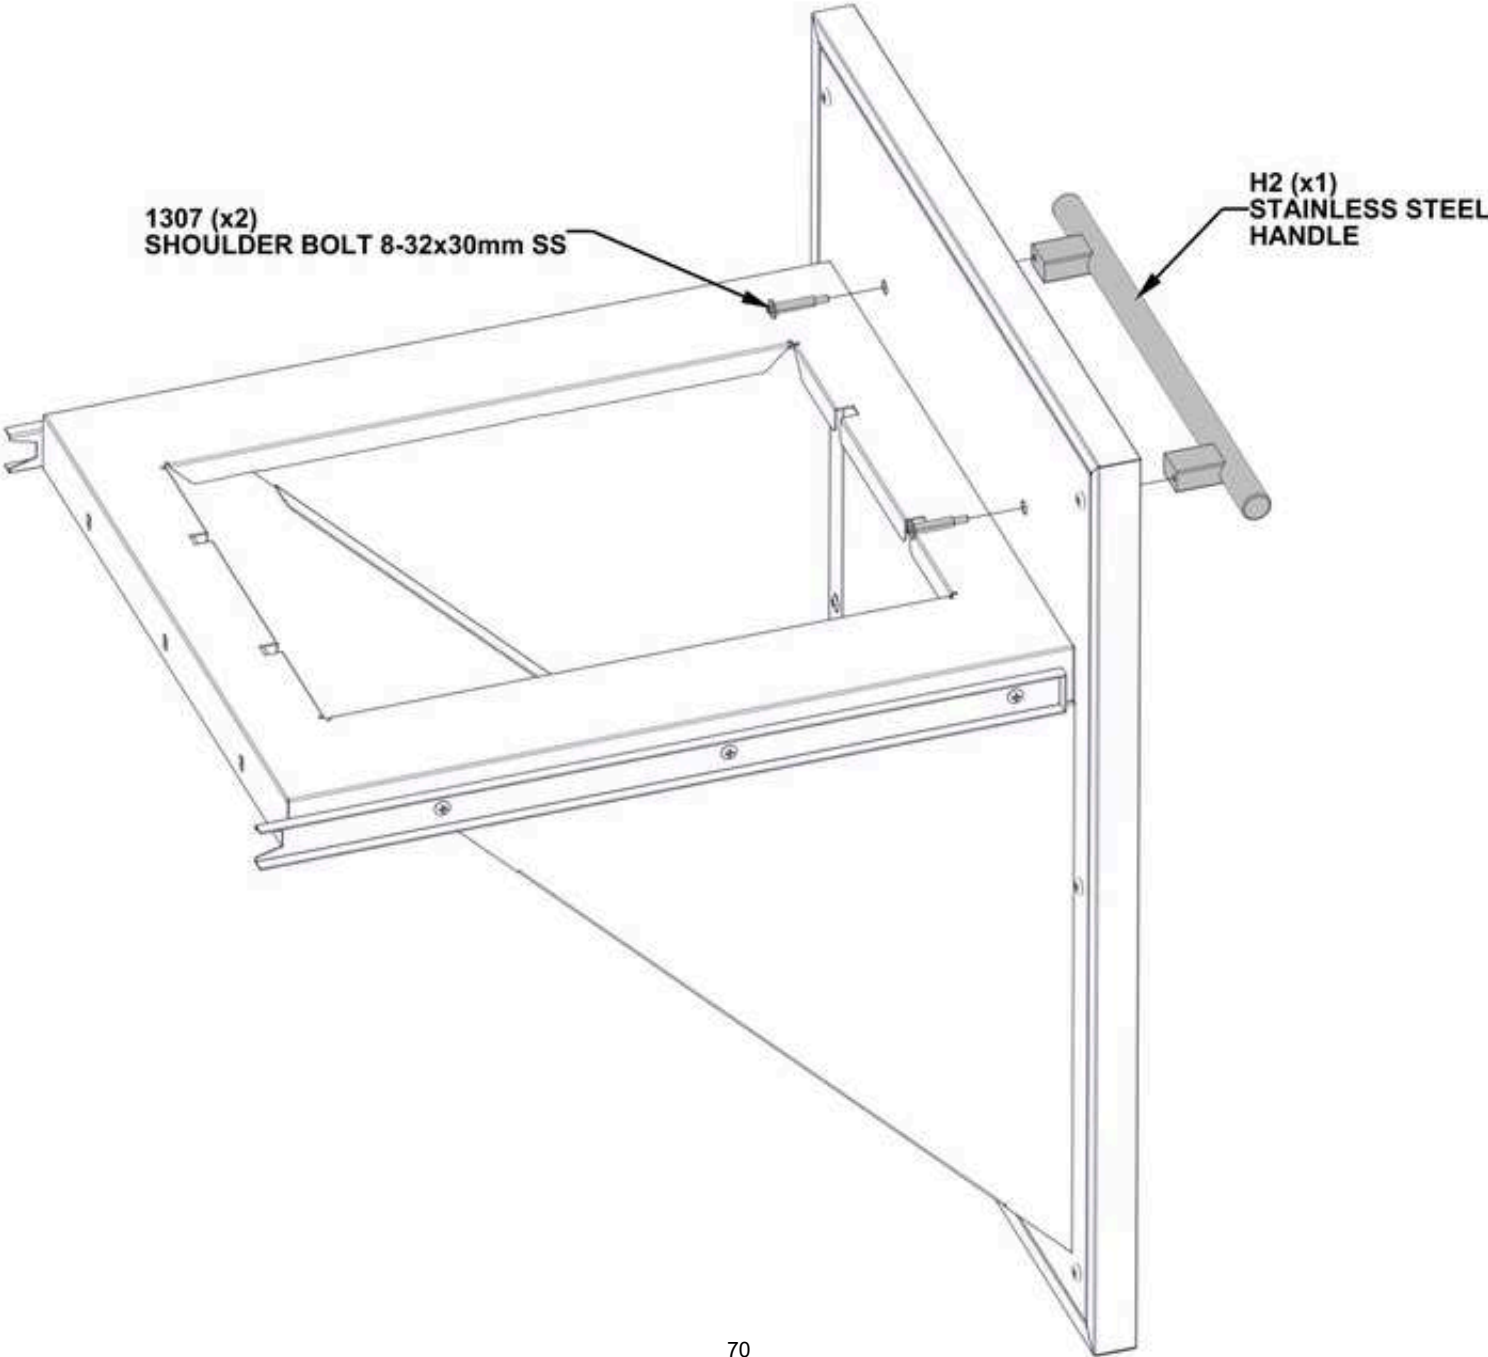


STEP 47 - KITCHEN TRASH CAN INSTALLATION




TRASH CAN ASSEMBLY
FROM STEP 46

- ATTACH TRASH CAN ASSEMBLY BY ALIGNING BOTH ENDS OF FACTORY ASSEMBLED DRAWER SLIDES WITH ONE ANOTHER.
- PRESS TOGETHER UNTIL DRAWER SLIDES CONNECT.

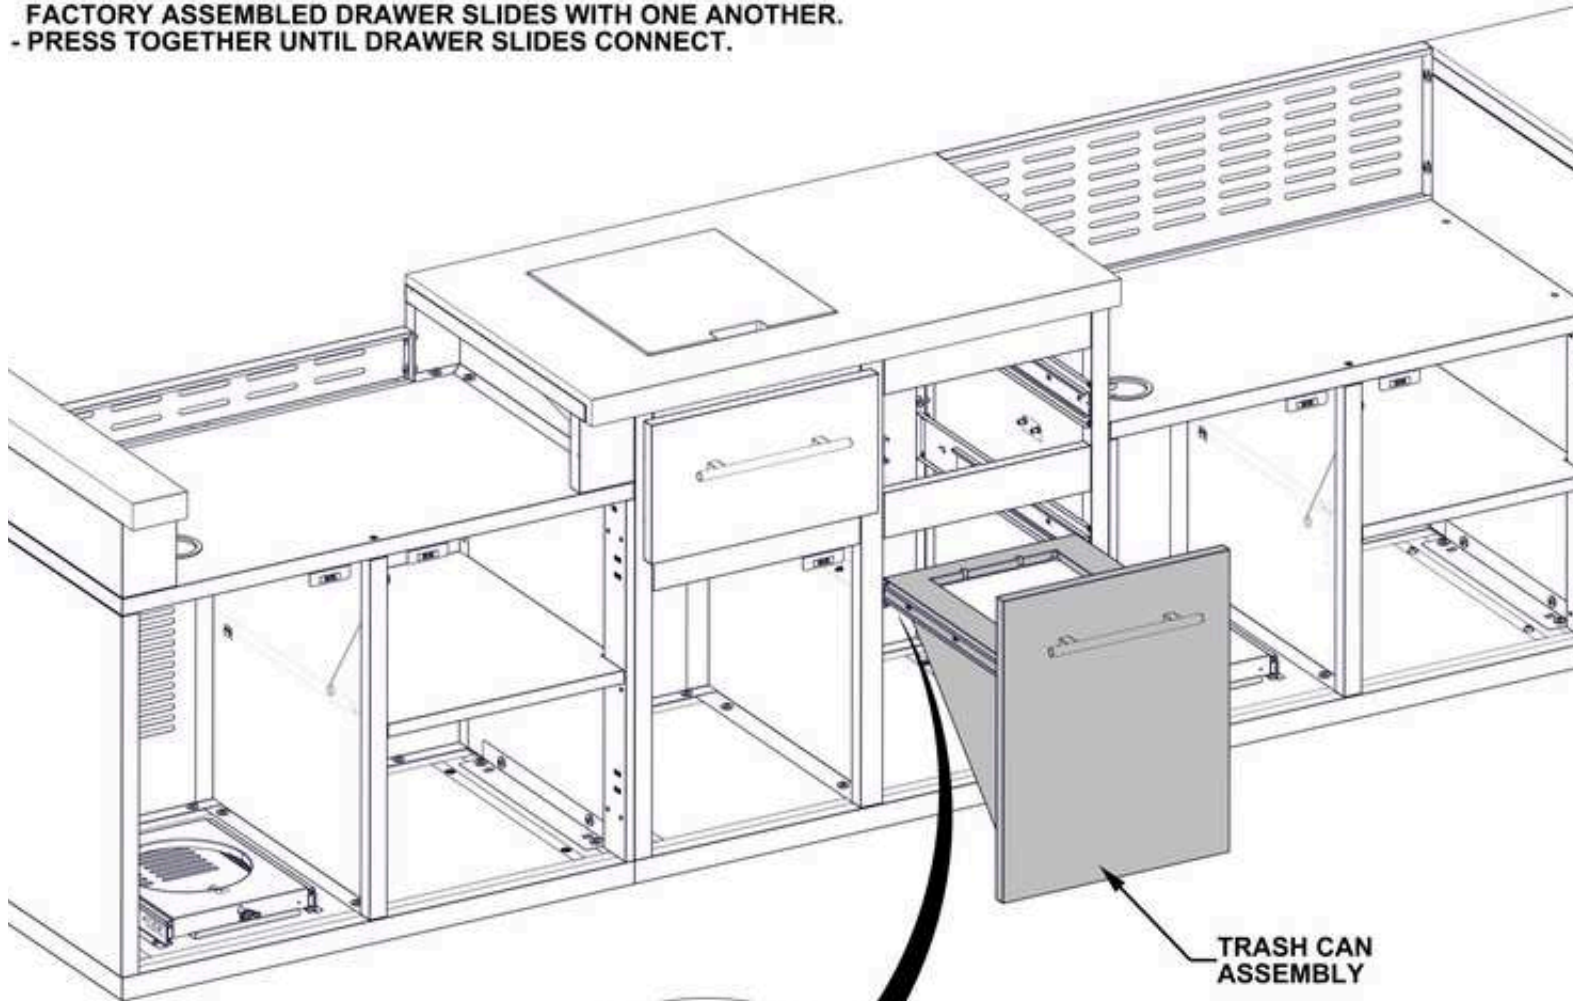

TRASH CAN
ASSEMBLY

SLIDE INNER RACE
OF DRAWER SLIDE OUT
BEFORE ATTACHING SLIDES

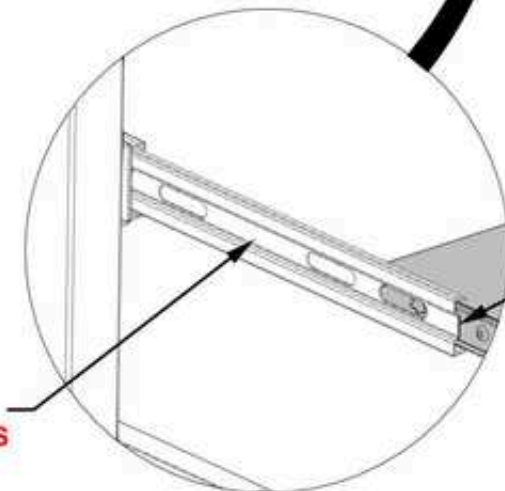

ALIGN DRAWER SLIDES
ON BOTH SIDES OF TRASH
CAN HOLDER

STEP 48A - KITCHEN DRAWER ASSEMBLY


Qty	PartNo	Description
9	H101289	PAN HEAD SCREW 8-32x1/2" SS




D4 CABINET DRAWER BODY ASSEMBLY - A4M03571
(x1) 22 1/4"x16 1/16"x6 7/16" (164.2x408.4x565.4)



D3 CABINET DRAWER PANEL ASSEMBLY - A4M03569
(x1) 17 3/4"x10 1/4"x15/16" (24x260x451)

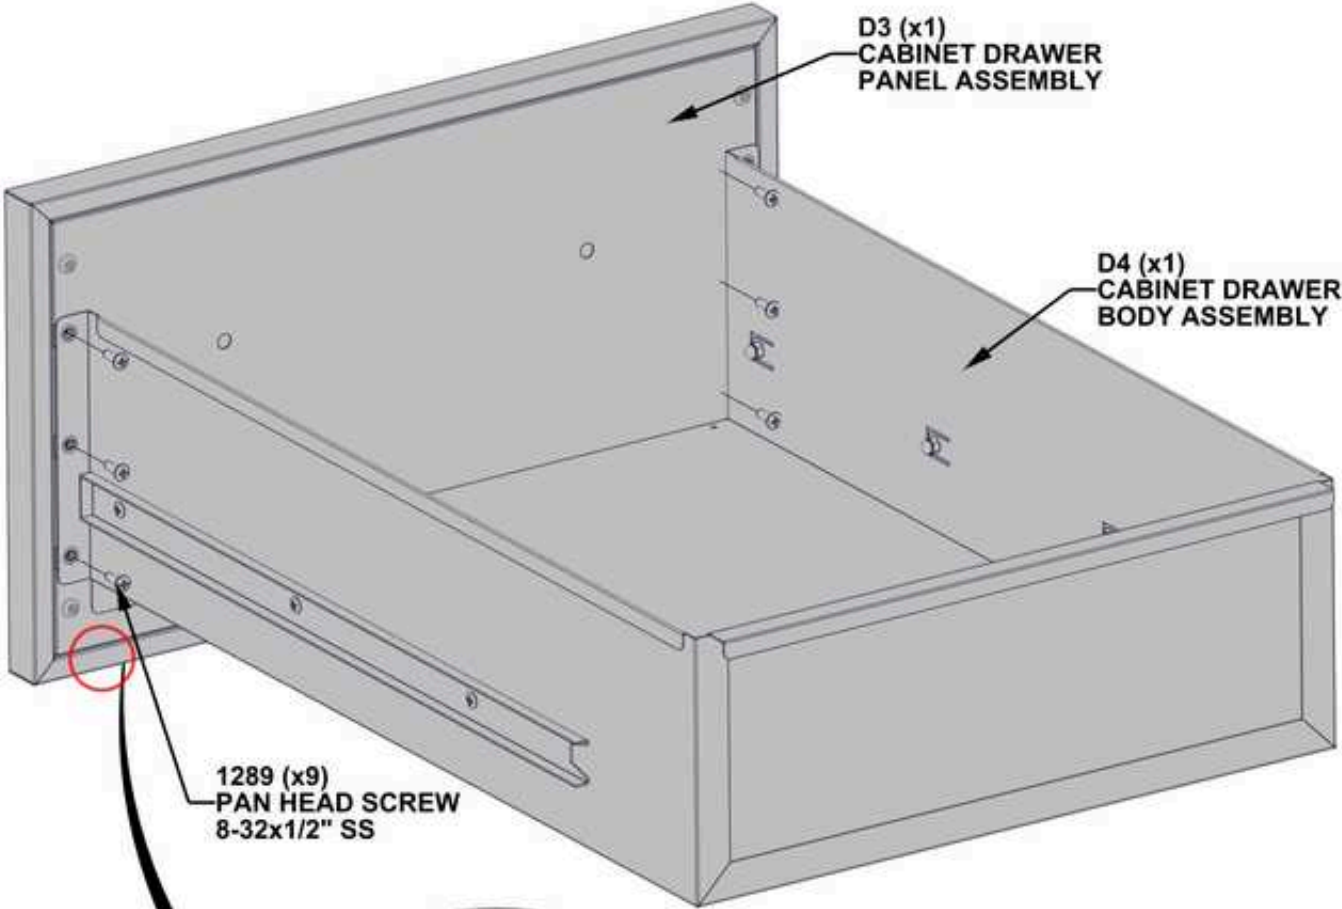

1289 (x9)
PAN HEAD SCREW
8-32x1/2" SS

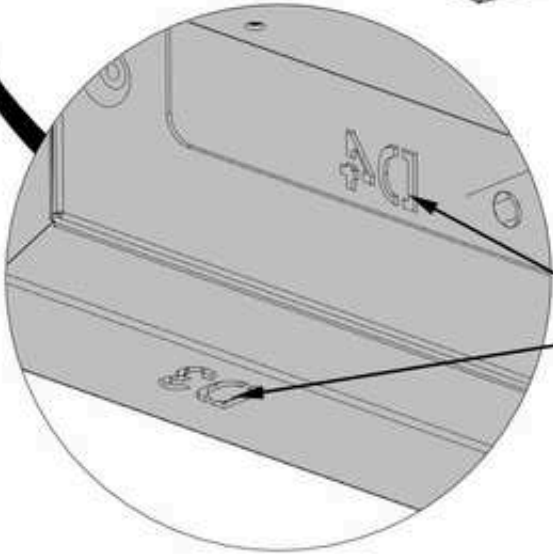

D3 AND D4 LABELS INDICATE
BOTTOM OF DRAWER

STEP 48B - KITCHEN DRAWER ASSEMBLY




Qty	PartNo	Description
2	H101307	SHOULDER BOLT 8-32x30mm SS


H2 STAINLESS STEEL HANDLE - A4M03024
(x1) 5/8"x1 9/16"x11 13/16" (16x40x300)

1307 (x2)
SHOULDER BOLT 8-32x30mm SS

H2 (x1)
STAINLESS STEEL
HANDLE

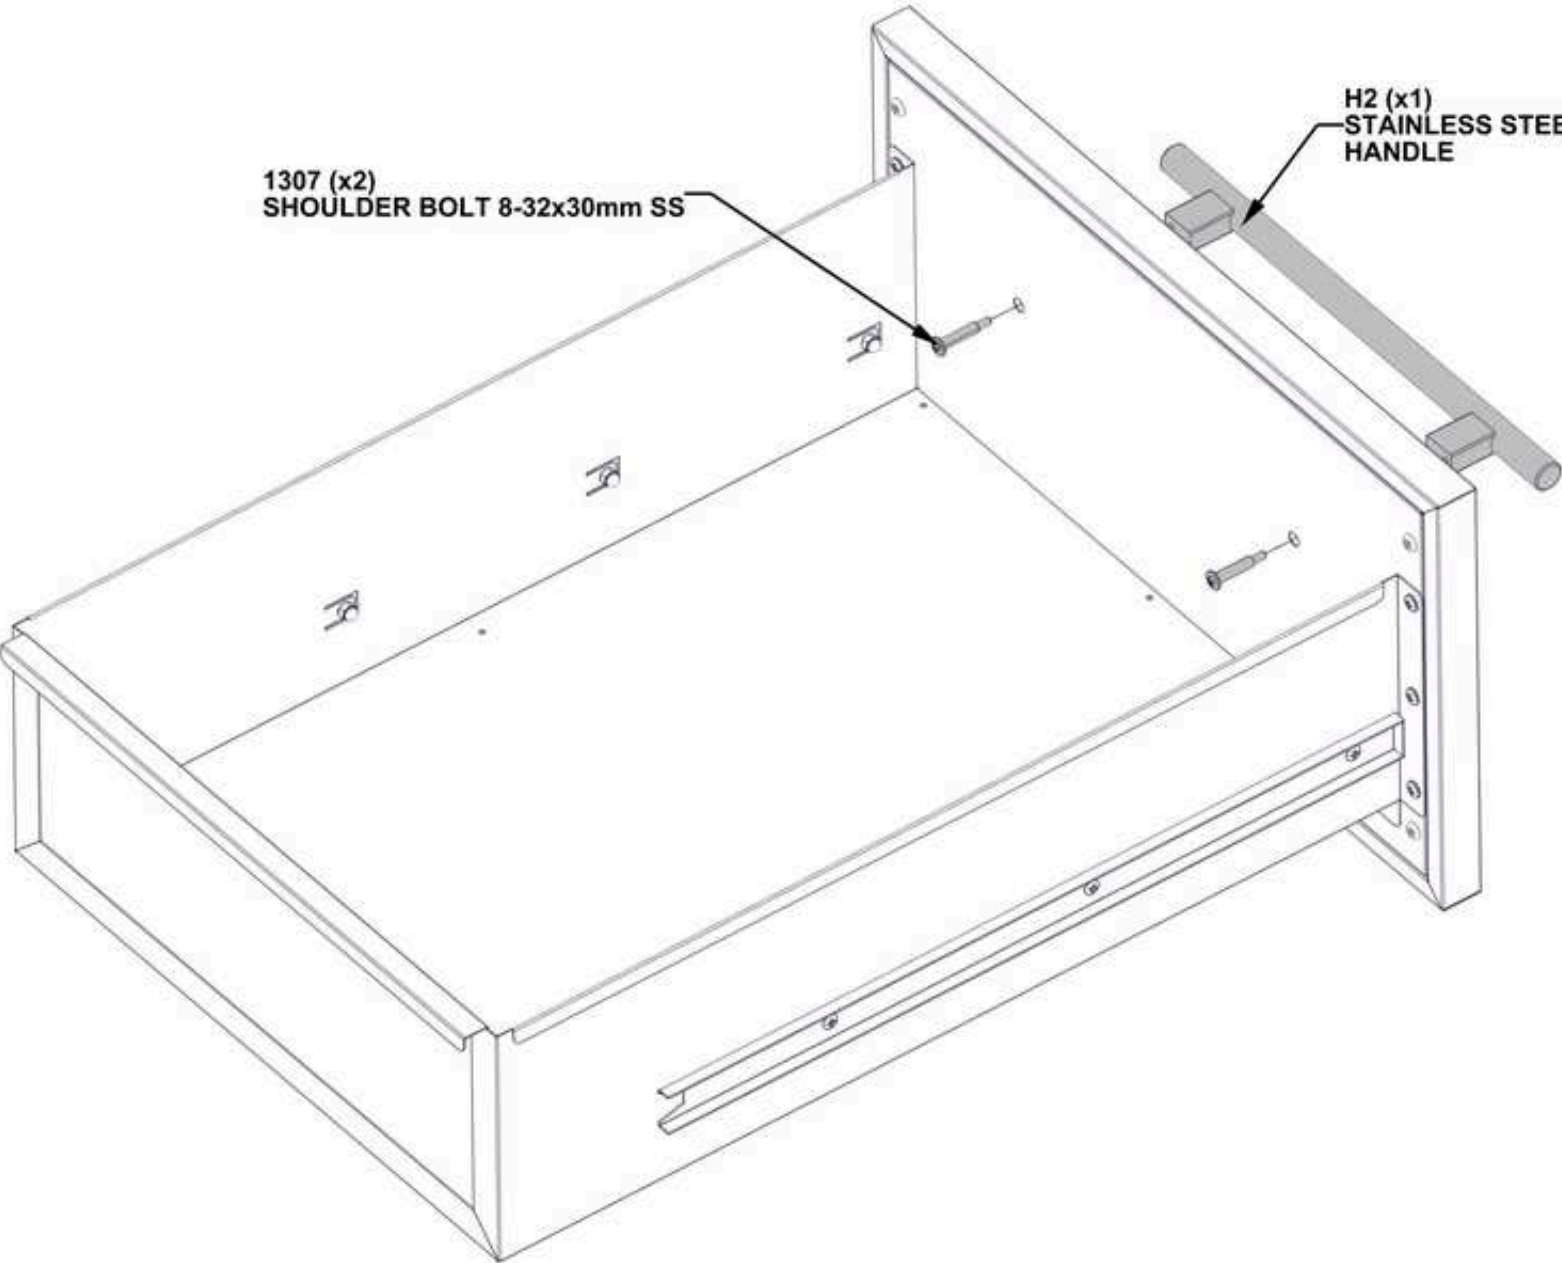


STEP 49 - KITCHEN DRAWER INSTALLATION

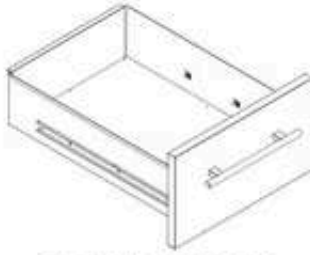


DRAWER ASSEMBLY
FROM STEP 48

- ATTACH DRAWER ASSEMBLY BY ALIGNING BOTH ENDS OF FACTORY ASSEMBLED DRAWER SLIDES WITH ONE ANOTHER.
- PRESS TOGETHER UNTIL DRAWER SLIDES CONNECT.

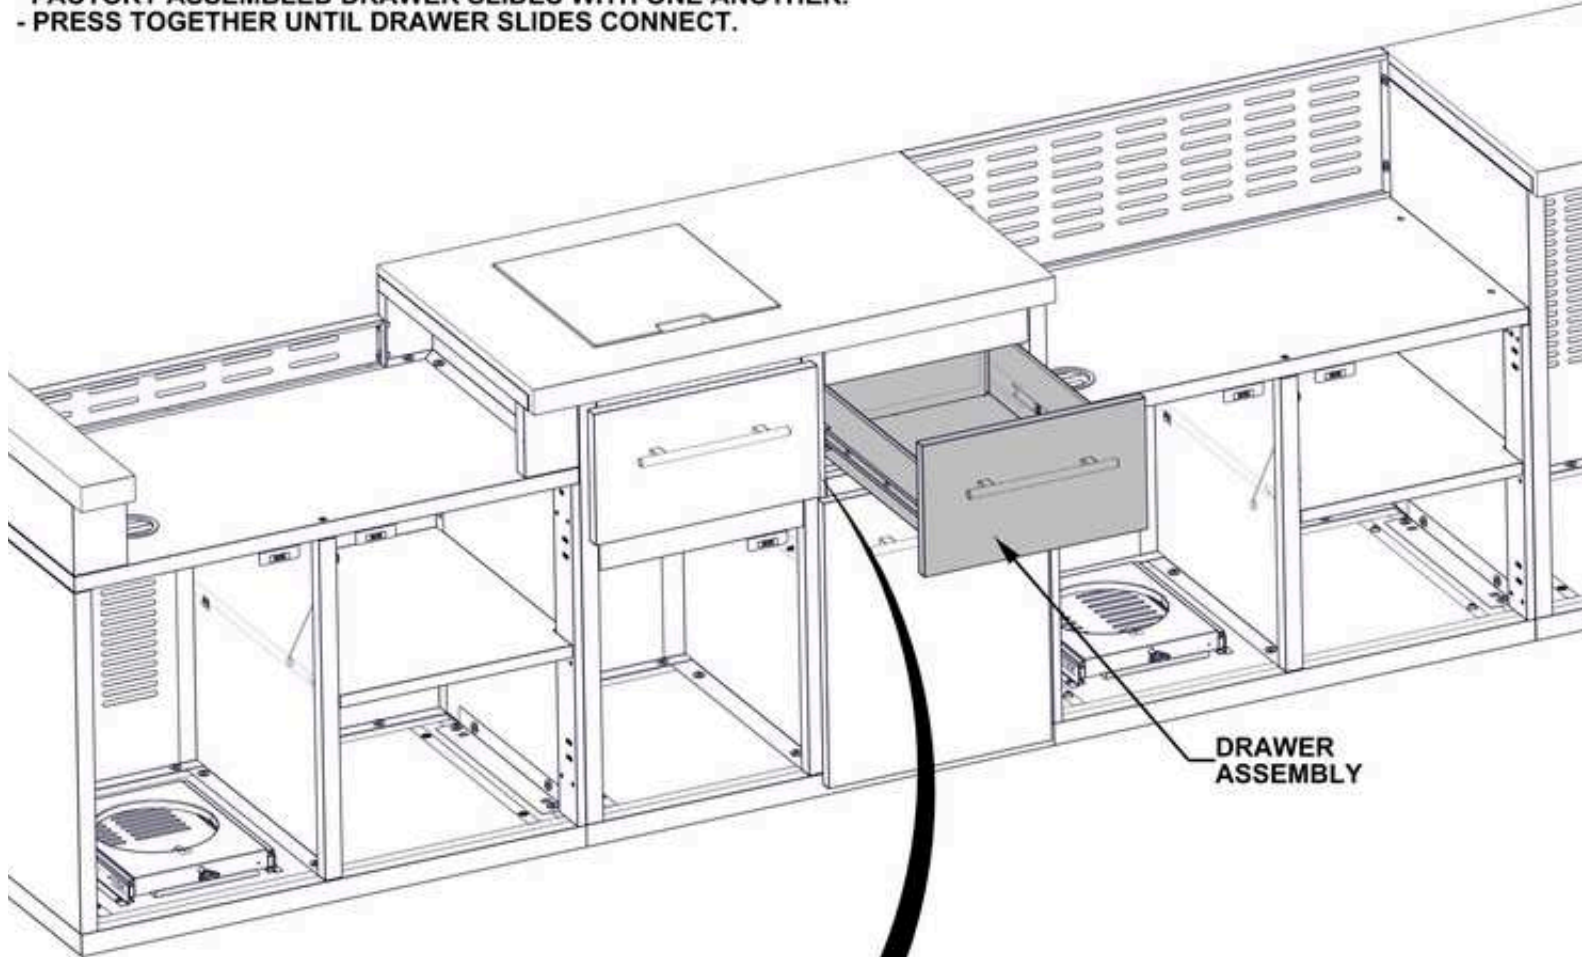

DRAWER
ASSEMBLY

SLIDE INNER RACE
OF DRAWER SLIDE OUT
BEFORE ATTACHING SLIDES

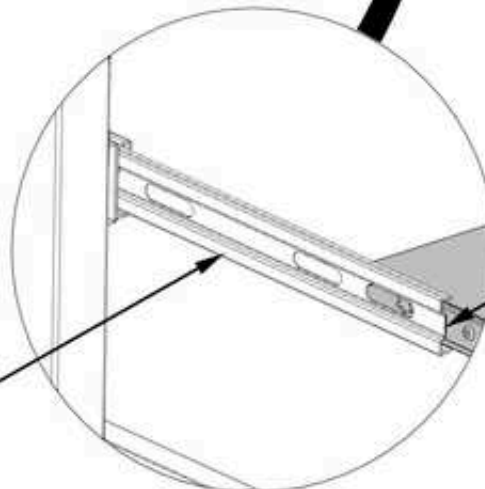

ALIGN DRAWER SLIDES
ON BOTH SIDES OF TRASH
CAN HOLDER

STEP 50A - DOOR ASSEMBLY

Qty	PartNo	Description
20	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW



D1 CABINET DOOR ASSEMBLY L - A4M03546
(x1) 28 7/16"x19 5/8"x15/16" (24x498x722.5)



D2 CABINET DOOR ASSEMBLY R - A4M03555
(x1) 28 7/16"x19 5/8"x15/16" (24x498x722.5)



D6 CABINET DOOR ASSEMBLY L - A4M03577
(x1) 22 1/4"x17 13/16"x15/16" (24x452x565)



D7 CABINET DOOR ASSEMBLY L - A4M03587
(x1) 24 13/16"x19 1/16"x15/16" (24x484.15x630)




D8 CABINET DOOR ASSEMBLY R - A4M03590
(x1) 24 13/16"x19 1/16"x15/16" (24x484.15x630)



A4M03025 FULL OVERLAY HINGE
(x10)

- INSTALL CABINET HINGES TO THE FIVE DOORS.

DO NOT OVERTIGHTEN HARDWARE

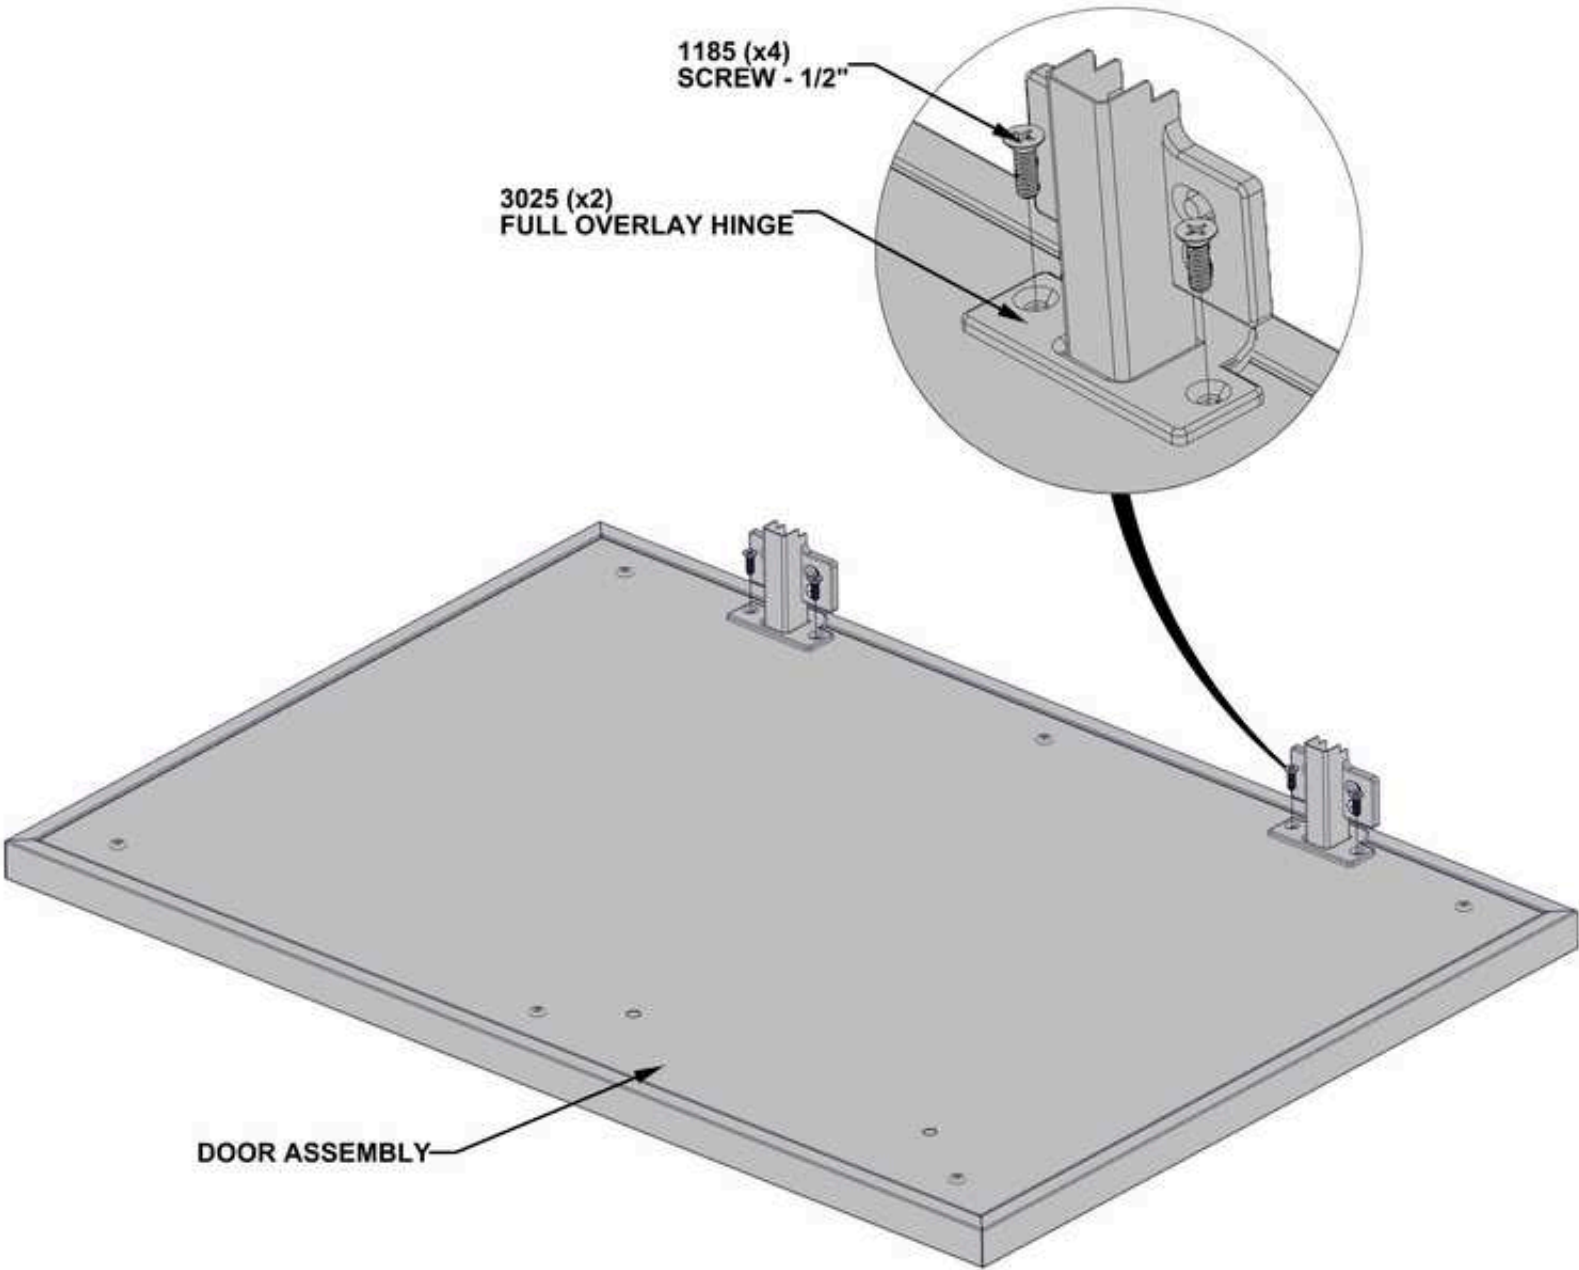


STEP 50B - DOOR ASSEMBLY

Qty	PartNo	Description
10	H101307	SHOULDER BOLT 8-32x30mm SS



H2 STAINLESS STEEL HANDLE - A4M03024
(x5) 5/8"x1 9/16"x11 13/16" (16x40x300)

- INSTALL CABINET HANDLES ON THE FIVE DOORS FROM PREVIOUS STEP.

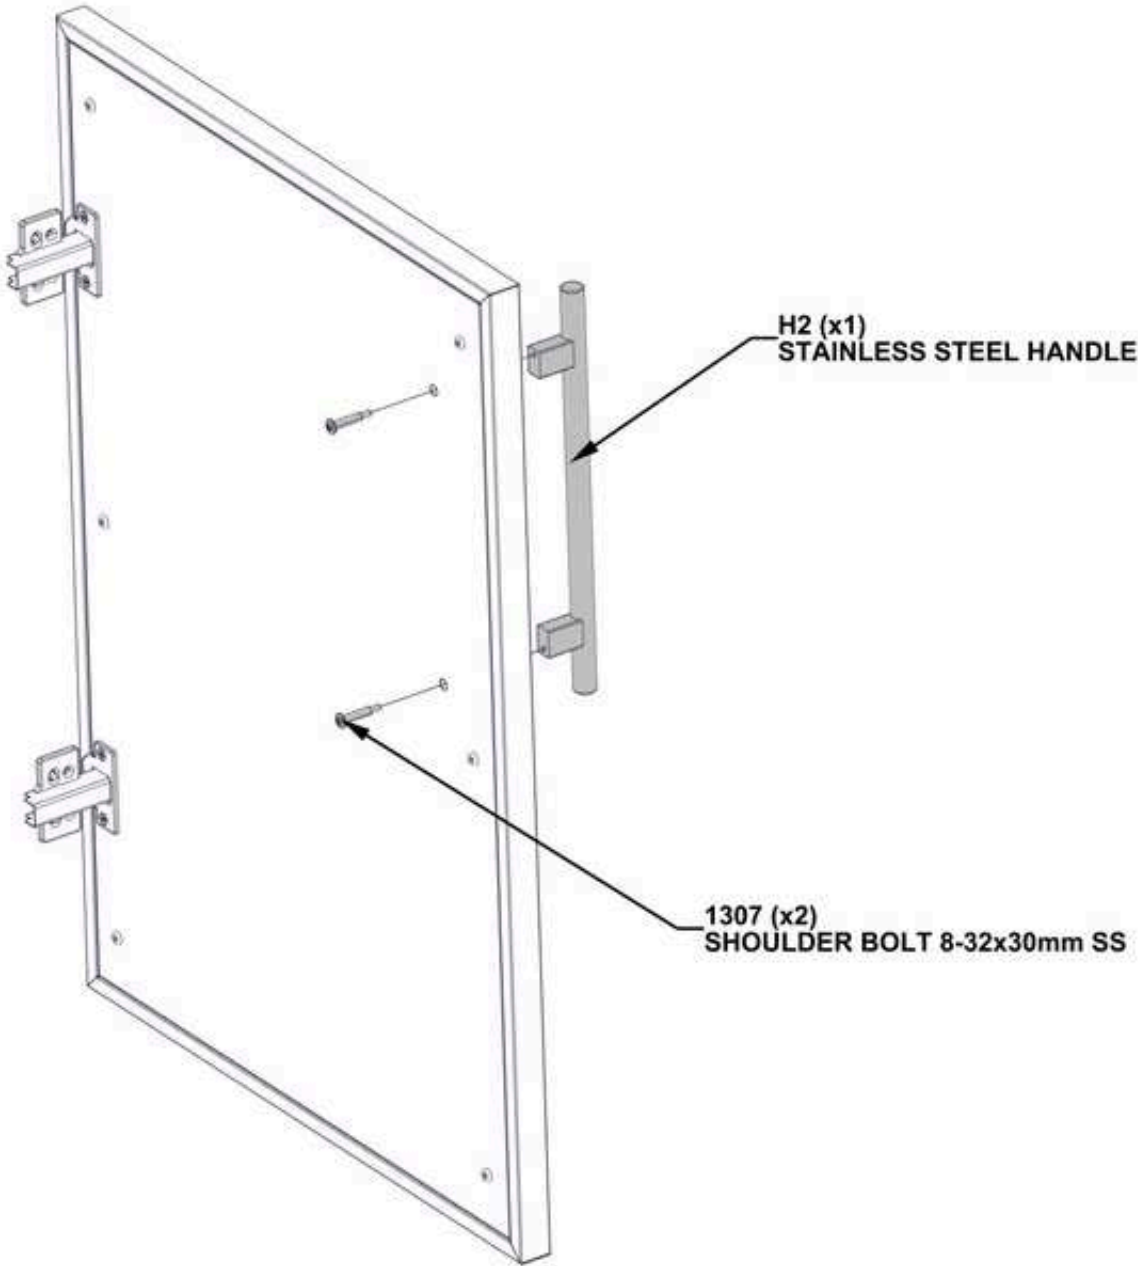


STEP 51 - CABINET DOOR ATTACHMENT



Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

D1 CABINET DOOR ASSEMBLY L - A4M03546
(x1) 28 7/16"x19 5/8"x15/16" (24x498x722.5)

- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.

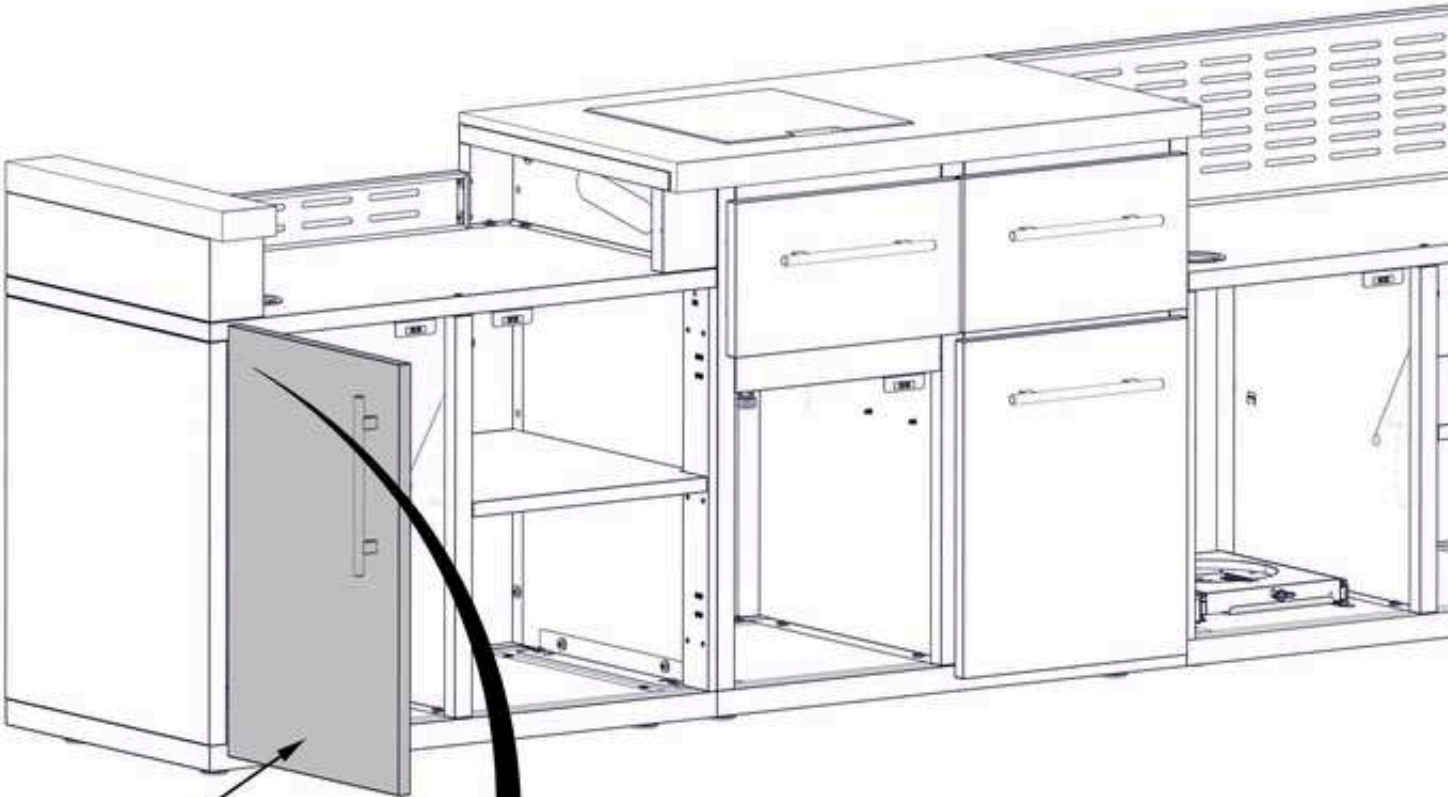

D1 (x1)
CABINET DOOR
ASSEMBLY L

ALIGN HINGE BRACKET WITH
THREADED INSERTS IN PANEL

DO NOT OVERTIGHTEN HARDWARE

1185 (x8)
SCREW - 1/2"


STEP 52 - CABINET DOOR ATTACHMENT



Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

D2 CABINET DOOR ASSEMBLY R - A4M03555
(x1) 28 7/16"x19 5/8"x15/16" (24x498x722.5)

- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.

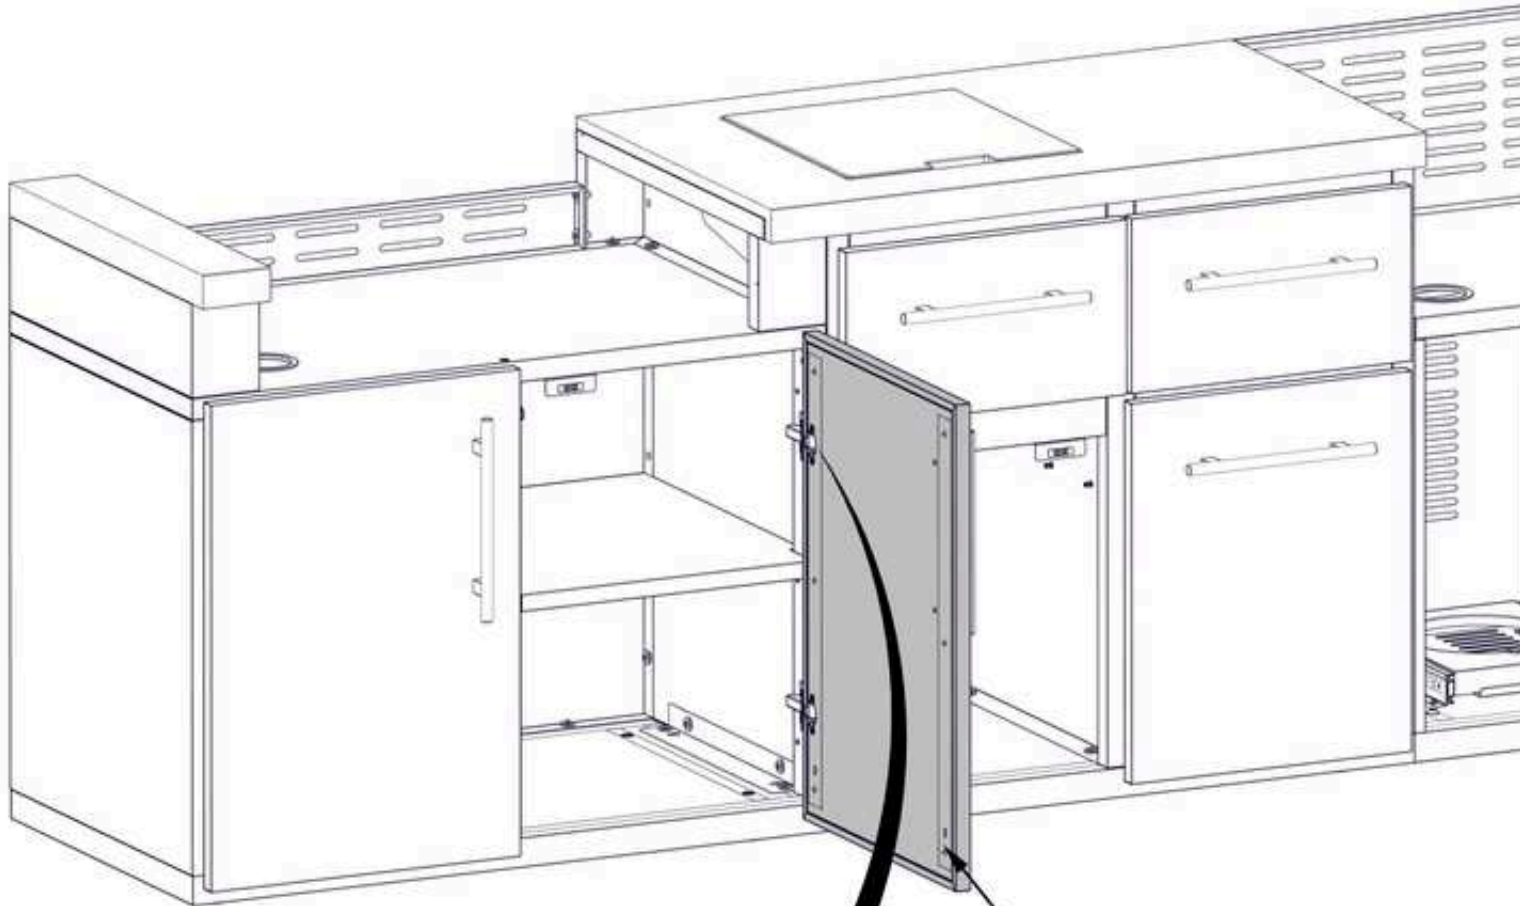


D2 (x1)
CABINET DOOR
ASSEMBLY R

ALIGN HINGE BRACKET WITH
THREADED INSERTS IN PANEL

DO NOT OVERTIGHTEN HARDWARE

1185 (x8)
SCREW - 1/2"

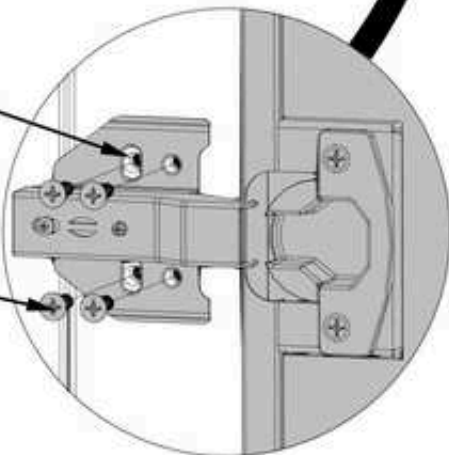


STEP 53 - CABINET DOOR ATTACHMENT




Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

D6 CABINET DOOR ASSEMBLY L - A4M03577
(x1) 22 1/4"x17 13/16"x15/16" (24x452x565)

- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.

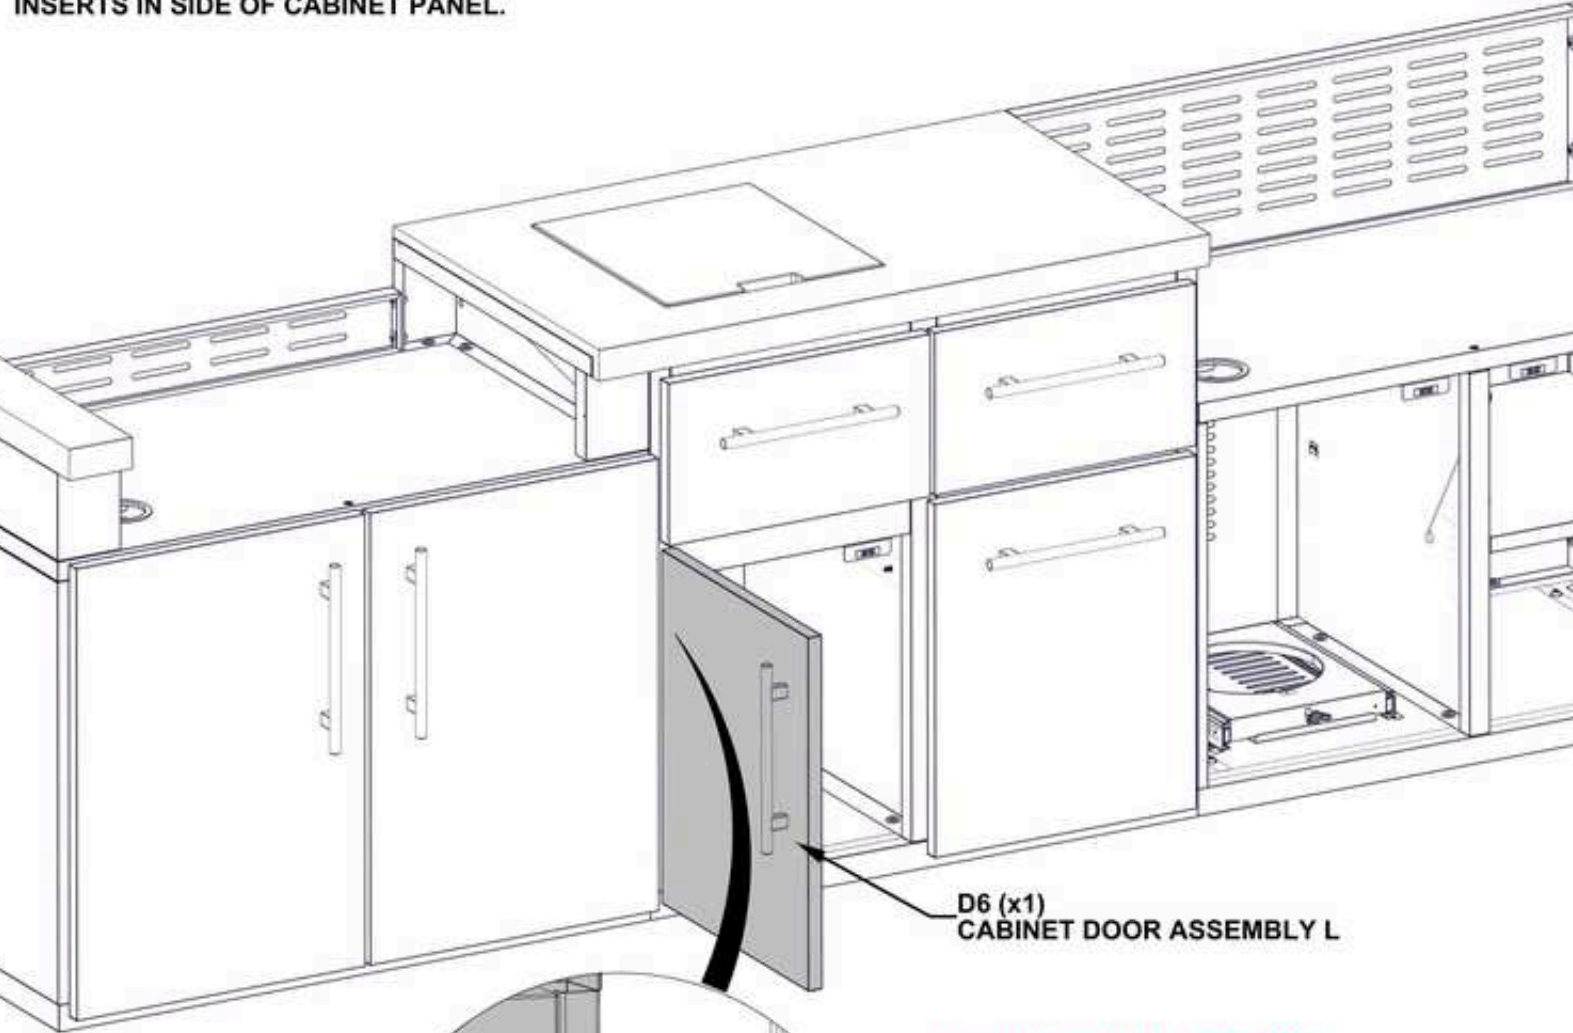

D6 (x1)
CABINET DOOR ASSEMBLY L

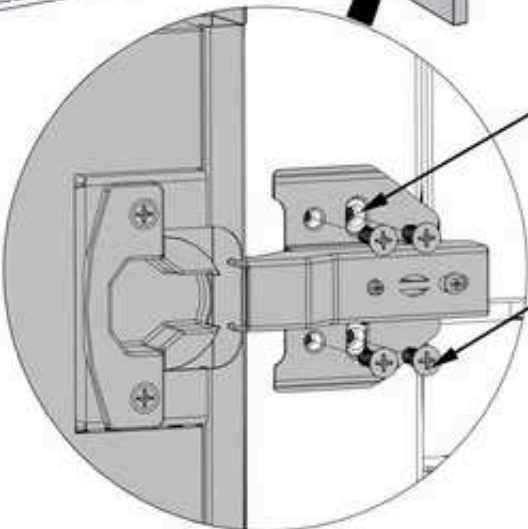

ALIGN HINGE BRACKET WITH
THREADED INSERTS IN PANEL

DO NOT OVERTIGHTEN HARDWARE

1185 (x8)
SCREW - 1/2"



STEP 54 - CABINET DOOR ATTACHMENT



Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

D7 CABINET DOOR ASSEMBLY L - A4M03587
(x1) 24 13/16"x19 1/16"x15/16" (24x484.15x630)

- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.

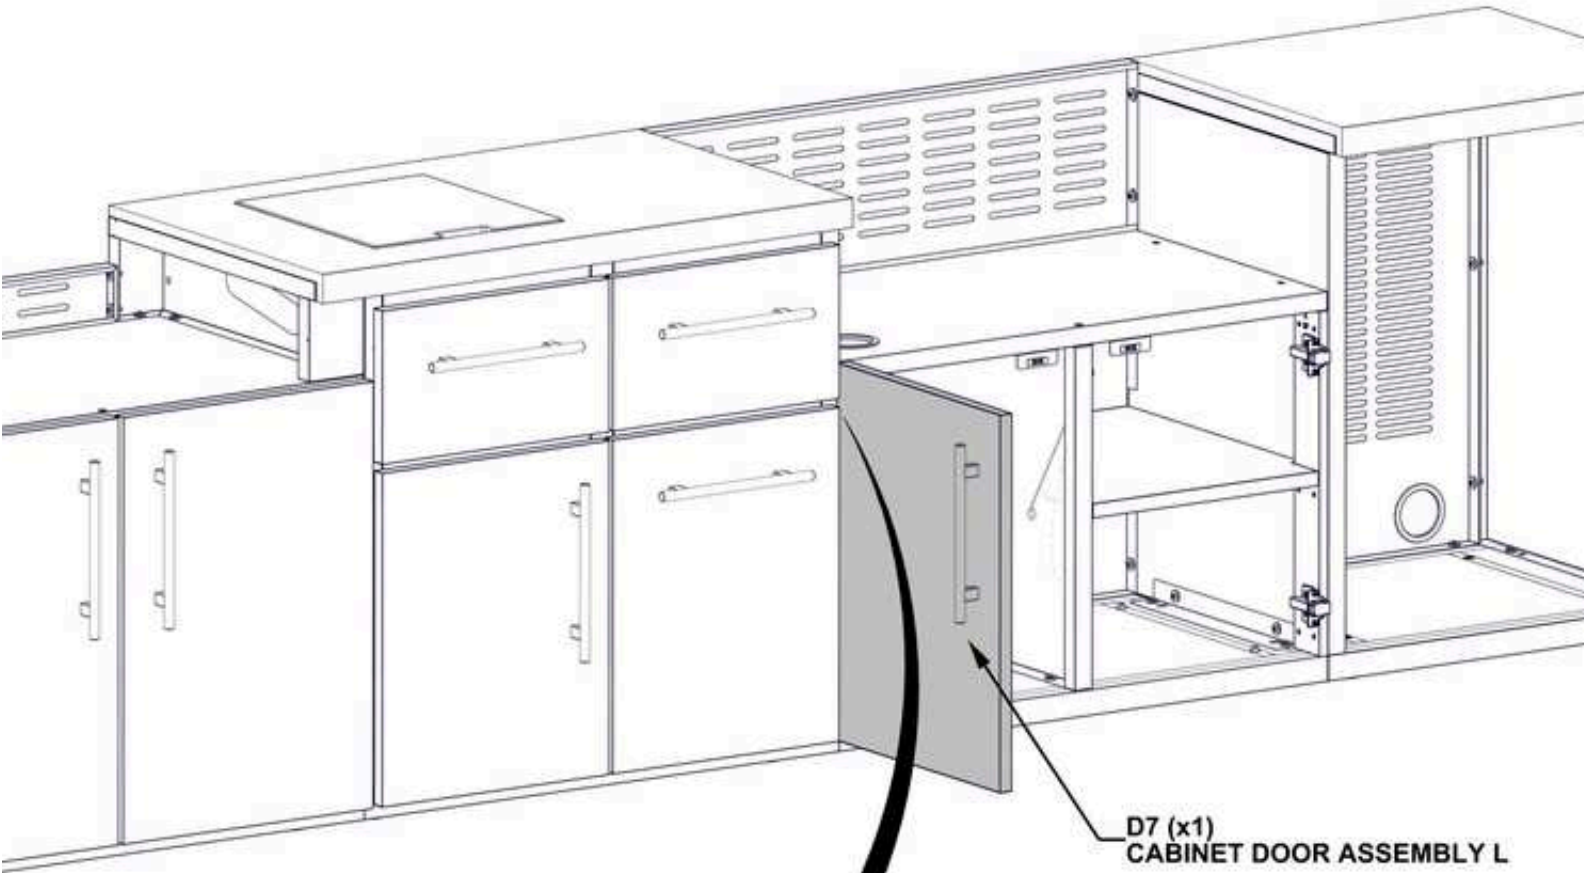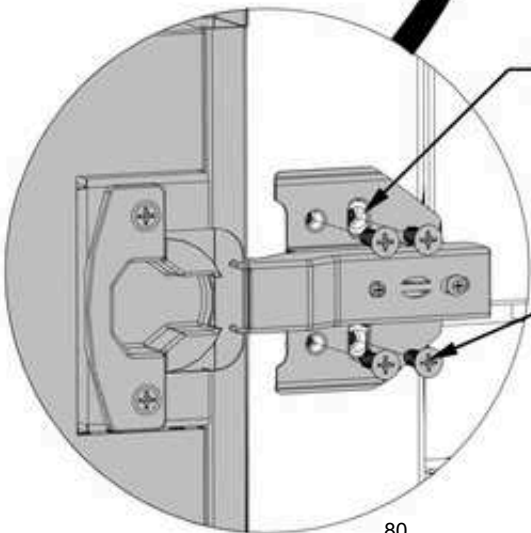

ALIGN HINGE BRACKET WITH
THREADED INSERTS IN PANEL

DO NOT OVERTIGHTEN HARDWARE

1185 (x8)
SCREW - 1/2"


STEP 55 - CABINET DOOR ATTACHMENT



D8 CABINET DOOR ASSEMBLY R - A4M03590
(x1) 24 13/16"x19 1/16"x15/16" (24x484.15x630)

Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.

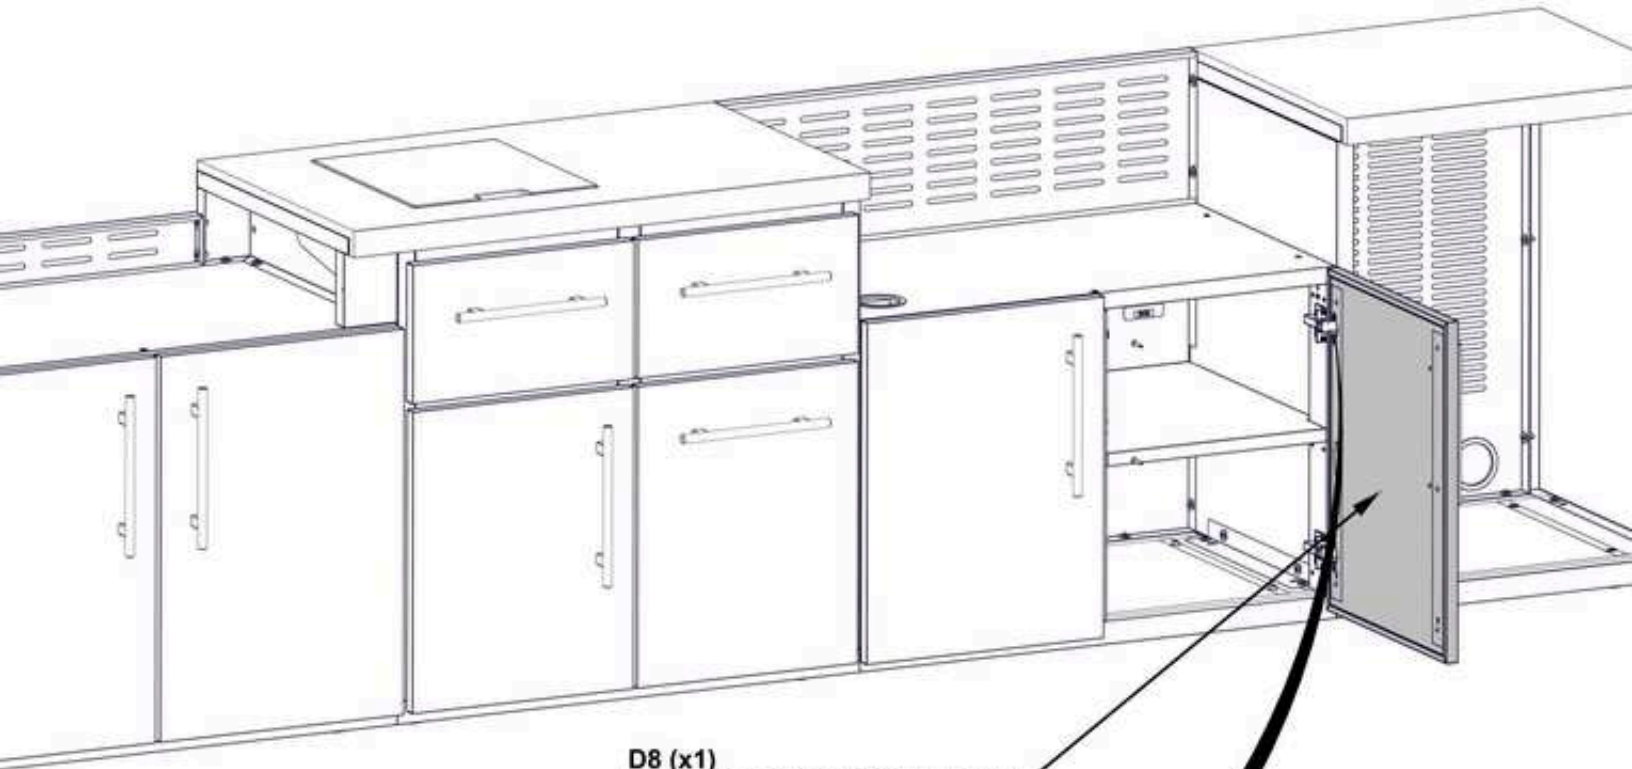


D8 (x1)
CABINET DOOR ASSEMBLY R

ALIGN HINGE BRACKET WITH
THREADED INSERTS IN PANEL

DO NOT OVERTIGHTEN HARDWARE



1185 (x8)
SCREW - 1/2"

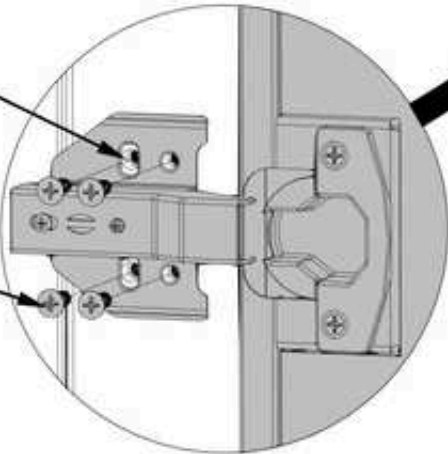

STEP 56 - CABINET DOOR ADJUSTMENT (AS NEEDED)


- ADJUST HINGES (AS NEEDED) SO THAT THE GAP AROUND ALL DOORS IS THE SAME AND THERE IS NO INTERFERENCE BETWEEN DOORS AND CABINETS.
- ADJUST MAGNET CATCH BRACKETS AS NEEDED.

**LOOSEN SCREWS TO ADJUST
MAGNET BRACKET, UNTIL IT
COMES IN CONTACT WITH
DOOR IN THE SHUT POSITION**

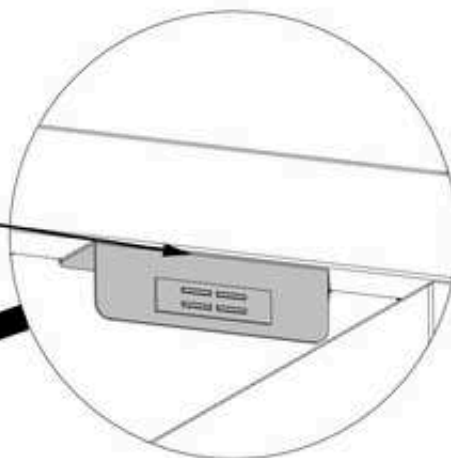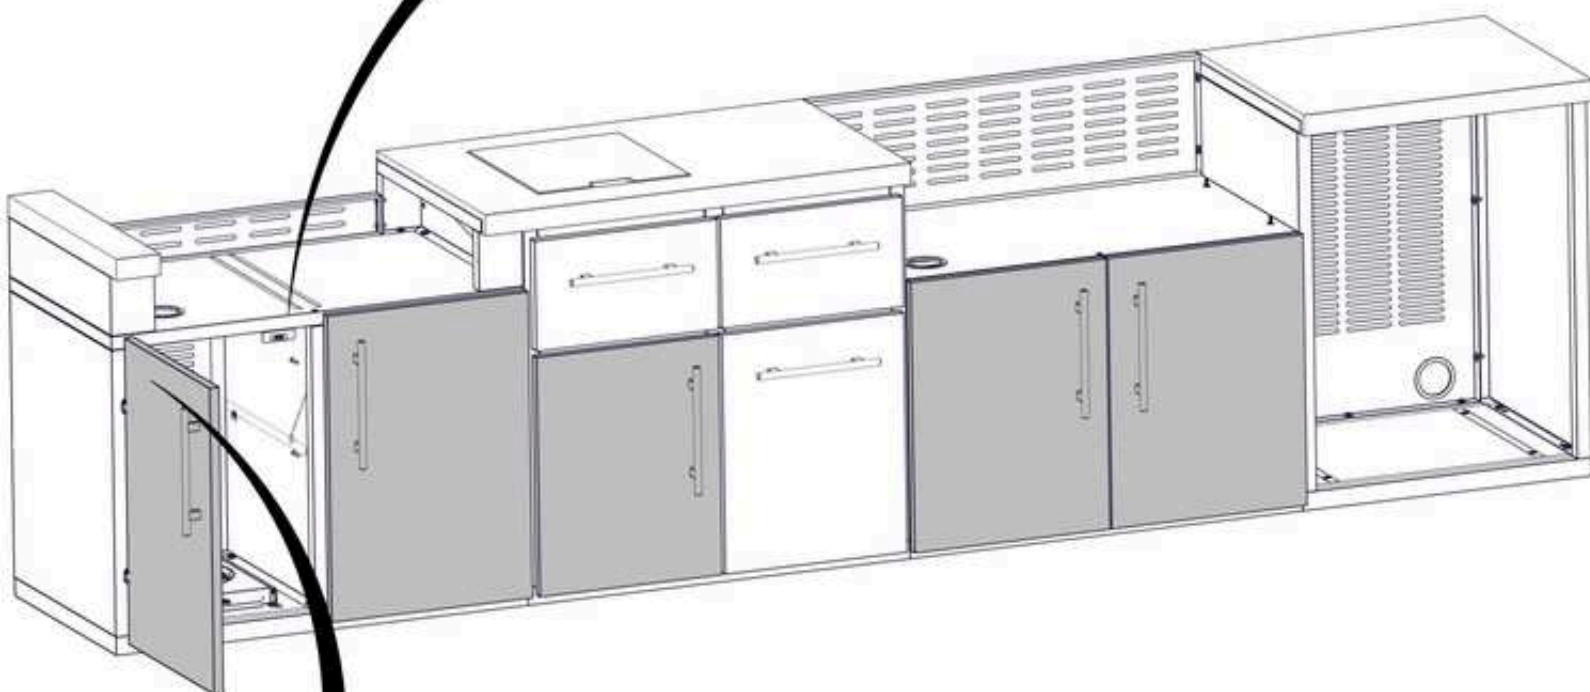


**SCREW #1:
SCREW CLOCKWISE TO BRING EDGE OF DOOR AWAY FROM
CABINET. SCREW COUNTER CLOCKWISE TO BRING EDGE OF DOOR
CLOSER TO CABINET**

**SCREW #2:
LOOSEN THESE SCREWS TO SLIDE DOOR TOWARD CABINET OR
AWAY FROM CABINET**

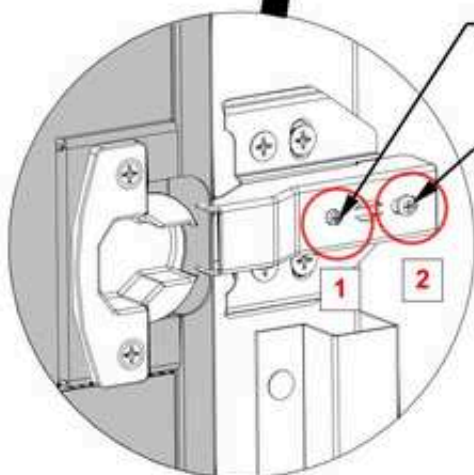


STEP 57 - KITCHEN ACCESSORY

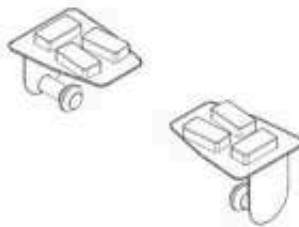

A4M02290 MAGNETIC PAPER TOWEL HOLDER
(x1)

- MAGNETIC PAPER TOWEL HOLDER CAN BE ATTACHED TO ANY METAL SURFACE ON KITCHEN.
- WE RECOMMEND ATTACHING TO THE INSIDE OF GRILL CABINET DOORS.
- **MAKE SURE TO KEEP PAPER TOWEL HOLDER AT A SAFE DISTANCE FROM GRILLING SURFACE.**

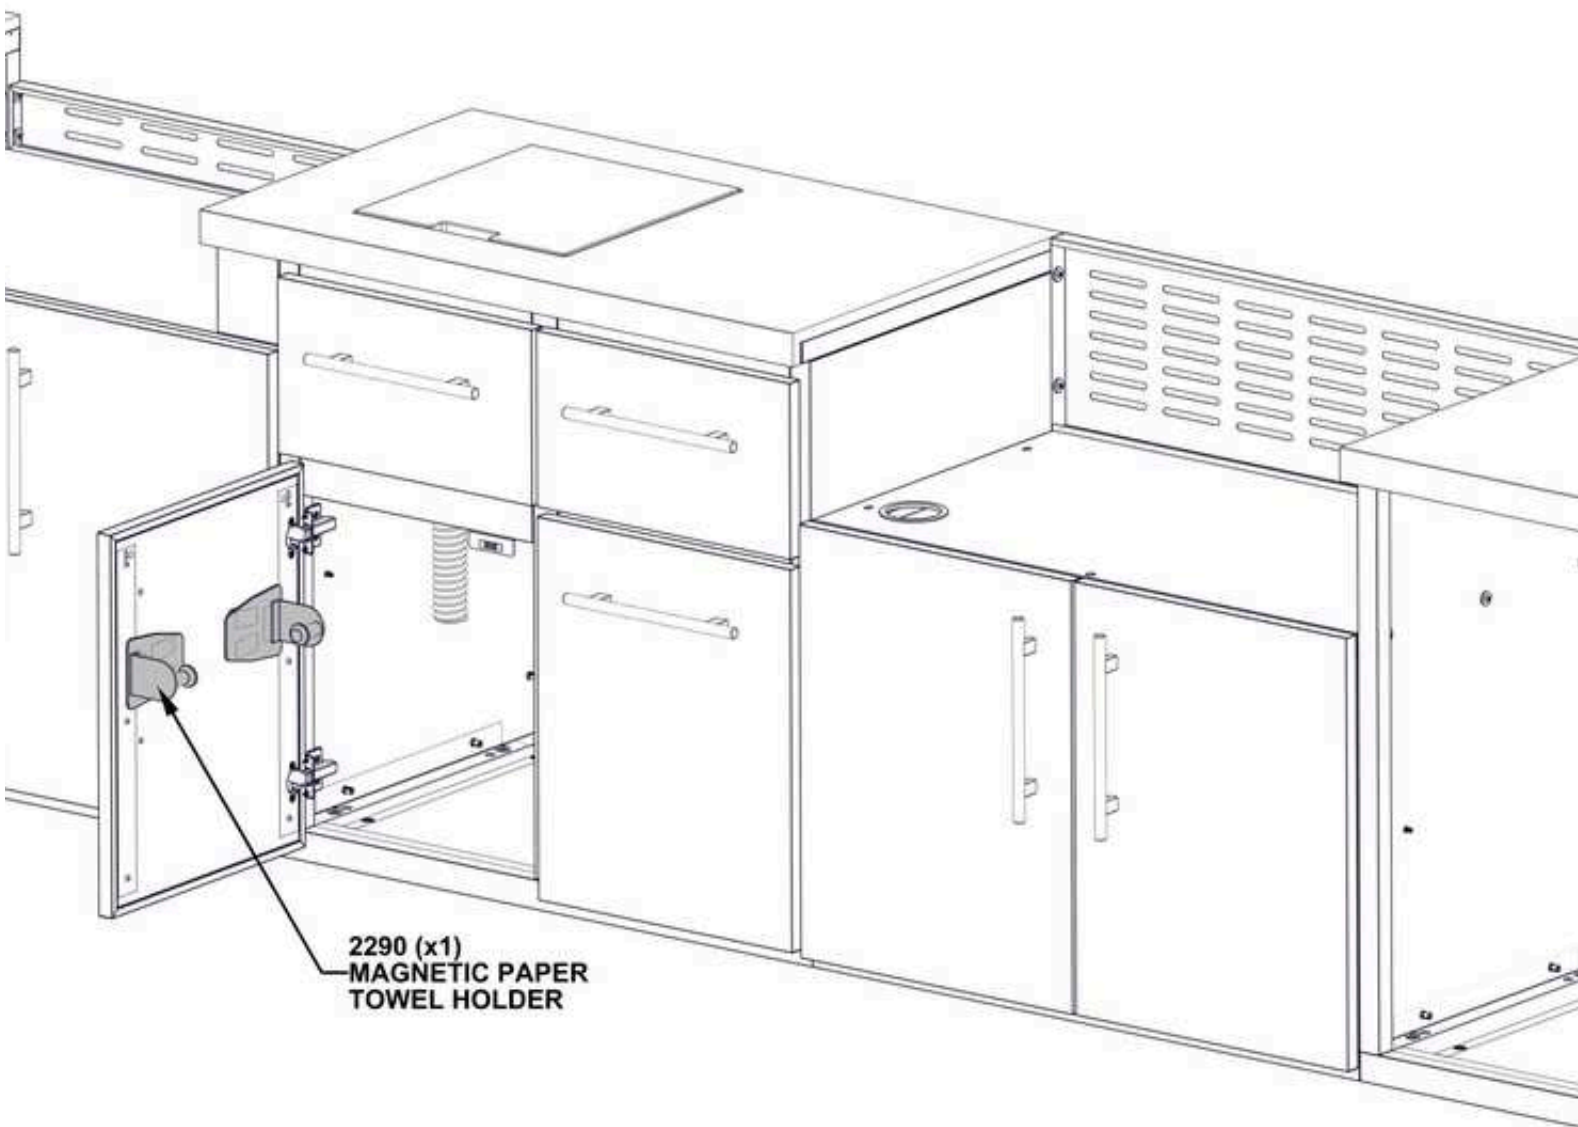


2290 (x1)
MAGNETIC PAPER
TOWEL HOLDER

OUTDOOR KITCHEN FRIDGE



9240162 OUTDOOR KITCHEN FRIDGE - RIGHT OPEN
(x1)



-
- FOR INSTALLATION OF OUTDOOR KITCHEN FRIDGE, REFER TO PAGES IN THIS INSTRUCTION MANUAL.
 - FOR DETAILED INFORMATION OF OUTDOOR KITCHEN FRIDGE, REFER TO ASSEMBLY INSTRUCTIONS THAT COME PACKAGED WITH THE OUTDOOR KITCHEN FRIDGE.
 - FOLLOW DIRECTIONS FOR PROPER CARE AND USE.

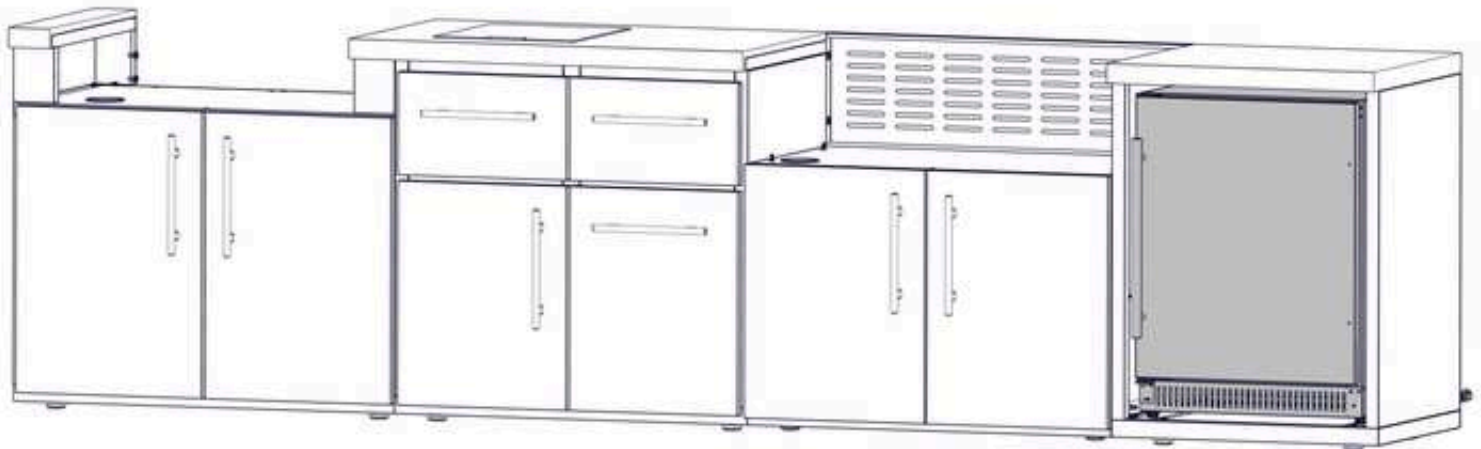

OUTDOOR KITCHEN FRIDGE



- CAREFULLY SLIDE FRIDGE INTO CABINET OPENING MAKING SURE THAT THE ELECTRICAL CORD IS ROUTED THROUGH THE HOLES IN THE BACK PANEL OF THE CABINET.

- IF FRIDGE IS NOT IN UPRIGHT POSITION, PLEASE LET SIT FOR 24 HRS BEFORE PLUGGING INTO RECEPTACLE.

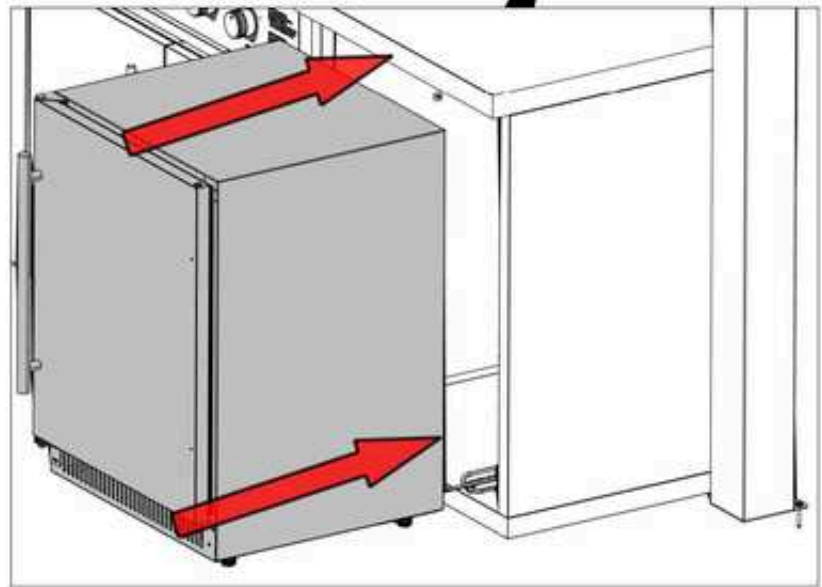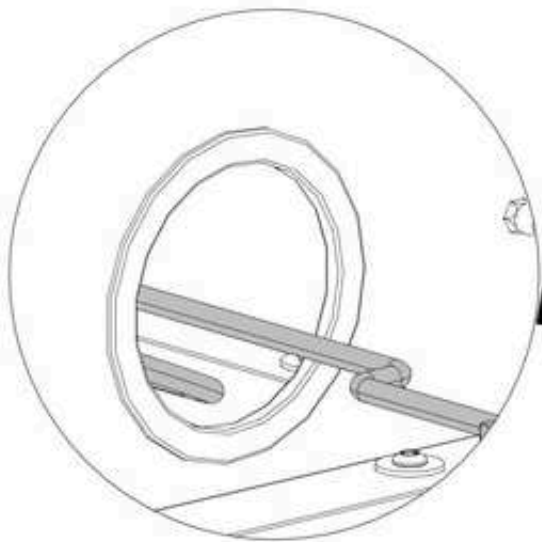

OUTDOOR KITCHEN FRIDGE

- ALIGN FEET ON FRIDGE UNIT SO THAT IT IS LEVEL AND DOES NOT TILT.
- TURN FEET CLOCKWISE TO EXTEND THEM AND COUNTERCLOCKWISE TO SHORTEN. REPEAT THIS FOR ALL FOUR FRIDGE FEET AS NEEDED TO LEVEL.

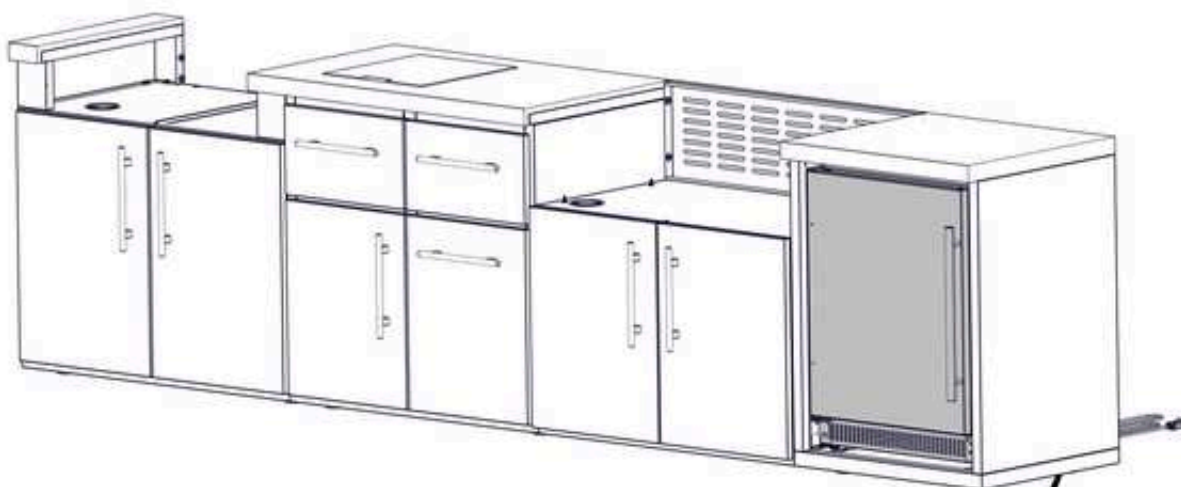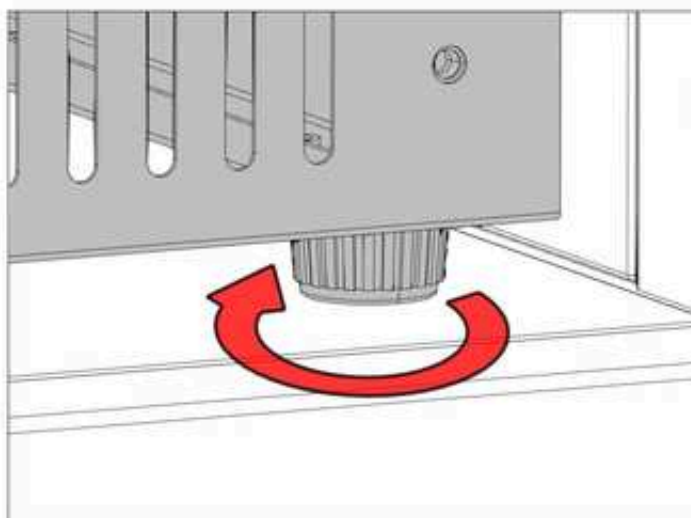

FOR APPLIANCE INSTALLATION, REFER TO ASSEMBLY INSTRUCTIONS THAT COME PACKAGED WITH EACH INDIVIDUAL APPLIANCE. FOLLOW DIRECTIONS FOR PROPER INSTALLATION.