


Required tools



Wrench
O





- A** Glass 1X
- B** Stand 1X
- C** Leg 2X
- D** Tray 1X
- E** Side Bracket 2X
- F** Pad Hook 2X
- G** Cap 2X
- H** Leg Bolt 2X
- I** Washer 2X
- J** Screw 3X
- K** Washer 6X
- L** Nut 3X
- M** Castor 2X
- N** Castor w/Brake 2X
- O** Wrench 1X




1

Attach legs and casters with wrench provided

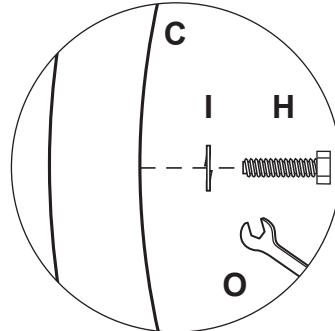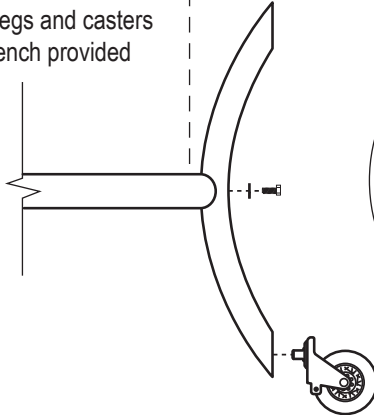


Bolt and washer

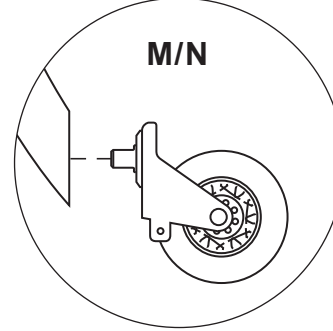

Attach (1X) locking castor and (1X) non-locking castor per leg.

2

Upright stand.
Lock casters.
Inspect glass edge protectors, before attaching marker tray.

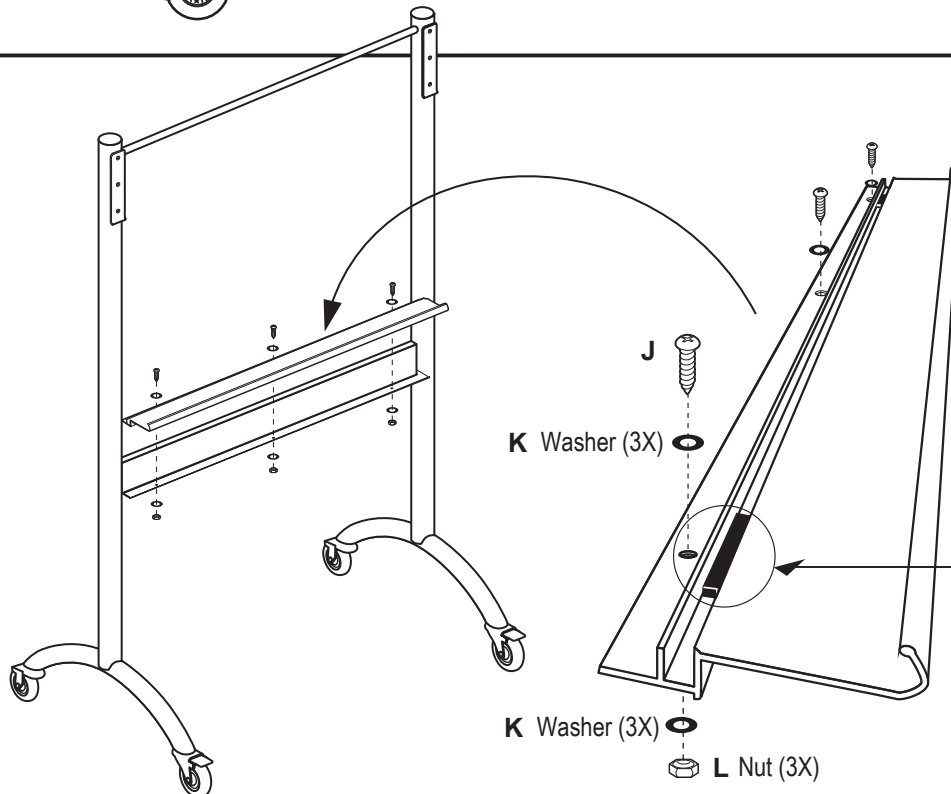

K Washer (3X)



K Washer (3X)

L Nut (3X)

CAUTION!


Be sure glass edge protectors (2X) are in place to protect glass.

CAUTION!


Lock casters (2X) before inserting glass.

3


Locate side brackets (2X).
Set glass in place and attach
side brackets over glass edge.

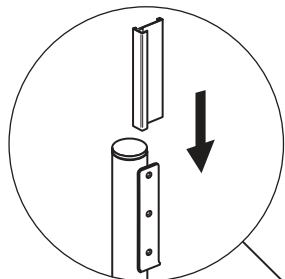


Side brackets
secure glass
to upright

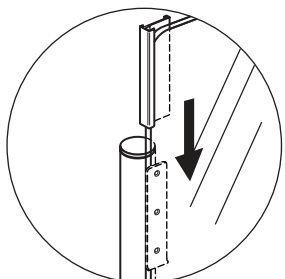

Slide brackets with
glass in place

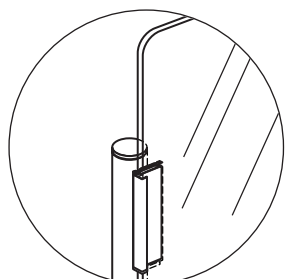


Glass in place

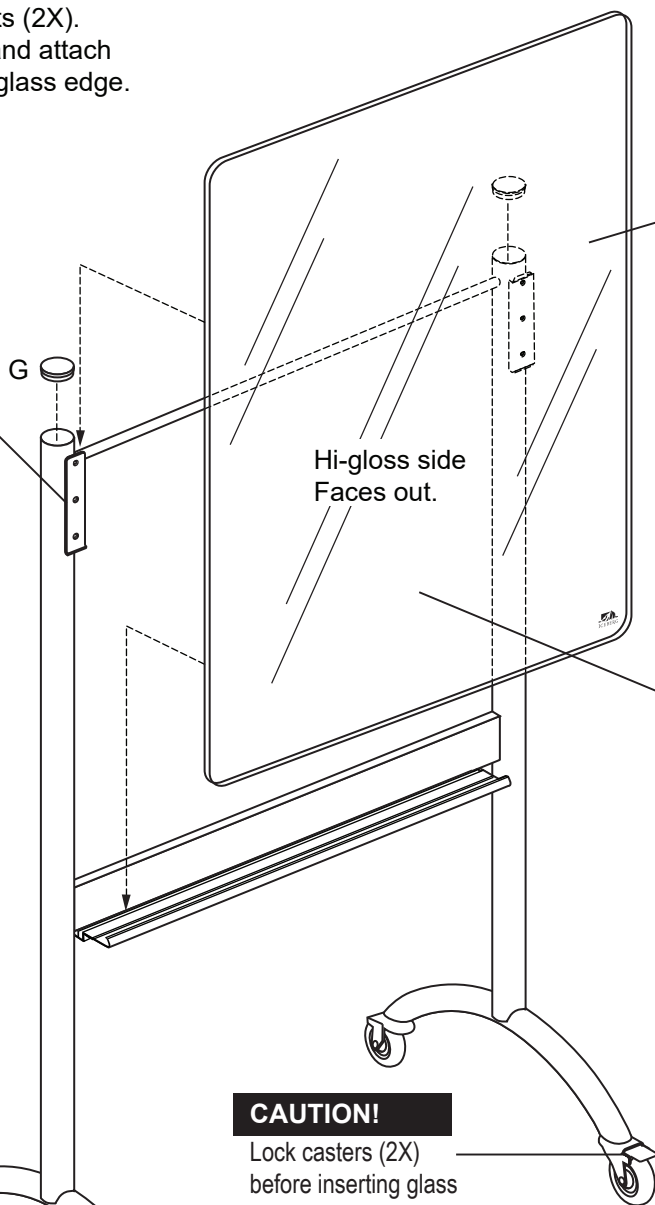


CAUTION!

Lock casters (2X)
before inserting glass

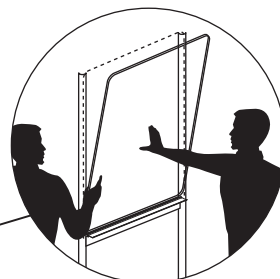

CAUTION!

Hold glass
against upright.
1 person assist
with sliding
side brackets
over glass.

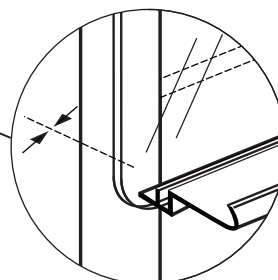

Align edge
of glass
with post.
Be sure glass
is set flush
in tray.

4

Attach pad hooks
Clean glass.

