


FIGURE 1

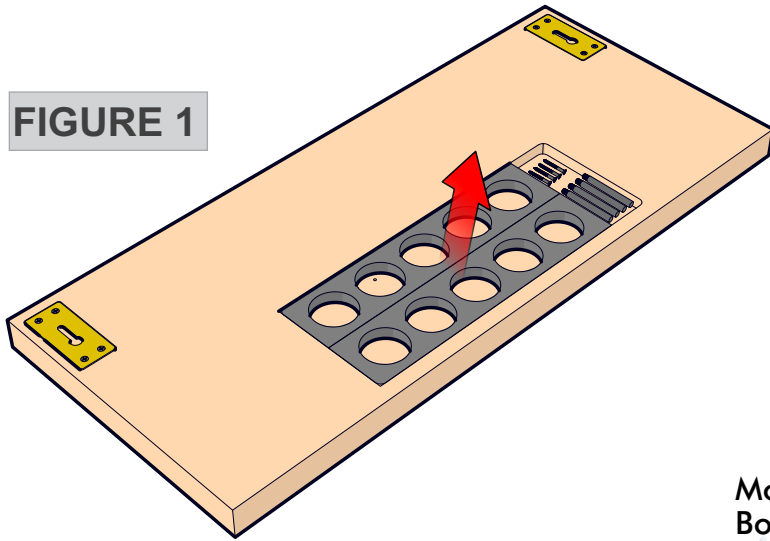

1. Remove parts from the back of the board. See **Figure 1**.

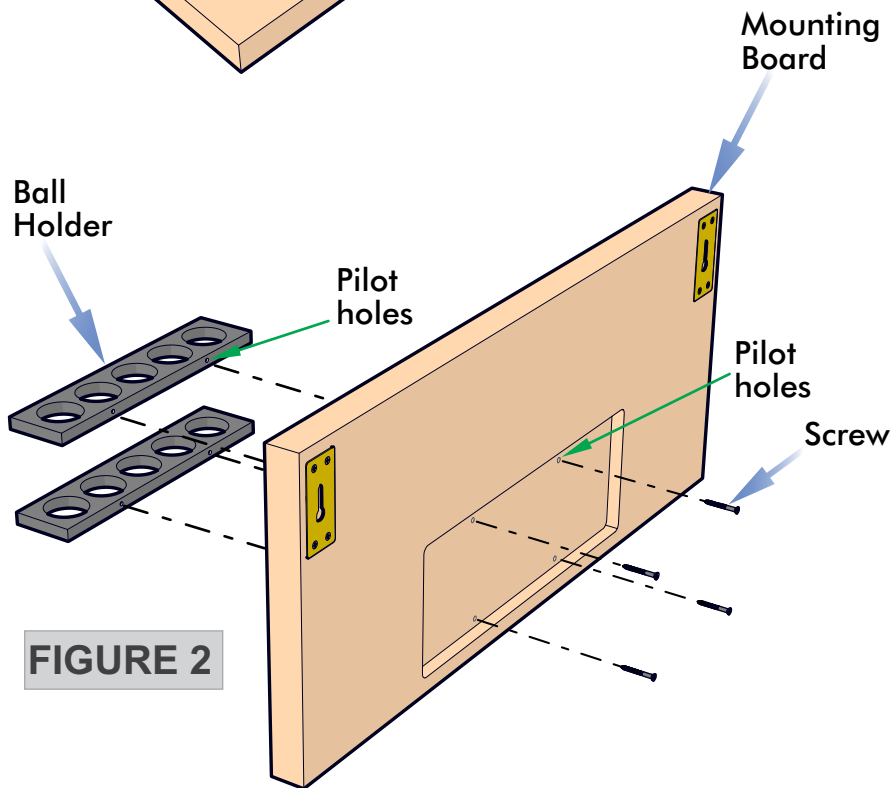


FIGURE 2

TOOL NEEDED



Phillips

2. Match up the pre-drilled pilot holes on the **Ball Holders & Mounting Board** then install the Ball Holders with Phillips Screws. See **Figure 2**.

NOTE: Do not over tighten screws. Over tightening can cause screws to strip out of the wood components.

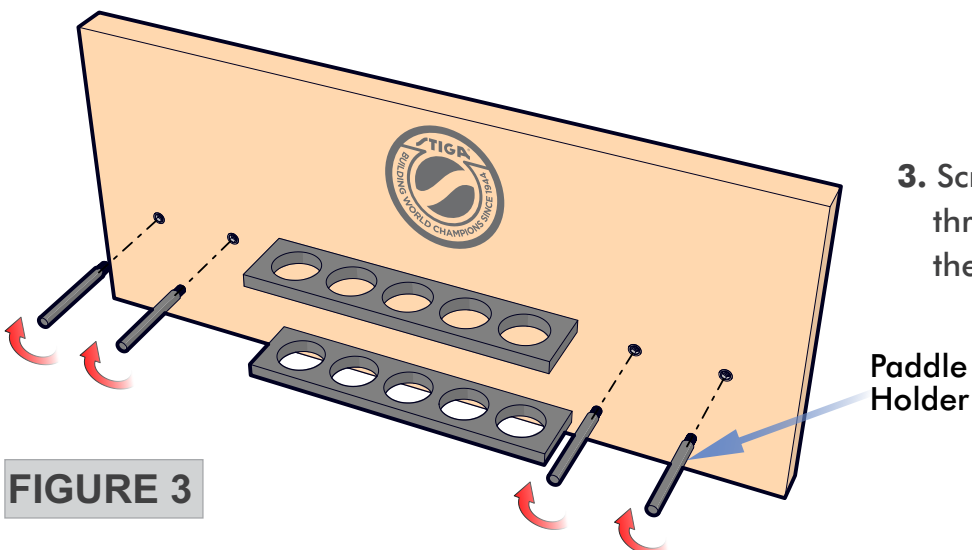


FIGURE 3

3. Screw the Paddle Holders to the threaded inserts on the front side of the Mounting Board. See **Figure 3**.