



Manufactured by:
Backyard Discovery
3305 Airport Drive, Pittsburg, KS 66762
800-856-4445

Basepoint Business Centre: Rivermead Drive, Westlea, Swindon SN5 7EX Phone: 0800-118-2476 J.P. Coenstraat 7, The Bridge, The Hague, 2595 WP, Netherlands Phone: 08005678990

20x9.5 STONEBRIDGE GAZEBO GUTTER KIT

MODEL #: 9250406



Please visit www.backyarddiscovery.com


**For the most up to date assembly manual, to register your product, or to order
replacement parts Para obtener instrucciones en español, visite
www.backyarddiscovery.com**

OWNER'S MANUAL - PARTS IDENTIFICATION


Hardware Components



H101414 SCREW SELF PIERCING #8x1/2 BLK
(x10) #8 x 1/2



H101480 SCREW SELF TAPPING #9x1 BLK
(x20) 1/4 x 1




H101278 6" MAGNETIC DRIVER EXTENSION
(x1)




A6P01531 10 OZ SILICONE TUBE
(x1)

OWNER'S MANUAL - PARTS IDENTIFICATION


Accessory Components (NOT TO SCALE)

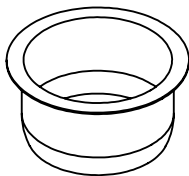


A4M04761 DOWNSPOUT OUTLET
(x2) 1 7/16"x2 7/8" [37x73]

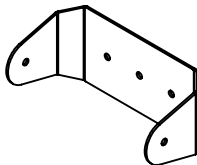


A4M04782 DOWNSPOUT CLIP
(x4) 1 7/16"x1 7/16"x3 1/8" [36x36x79]

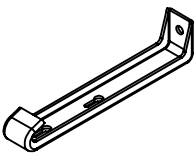


A4M04759 GUTTER HANGER
(x12) 3/4"x1"x4 15/16" [19x25x125]

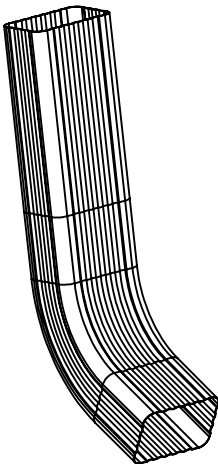


A4M06238 LONG DOWNSPOUT ELBOW
(x2) 3"x10 5/8"x10 11/16" [76x270x271]

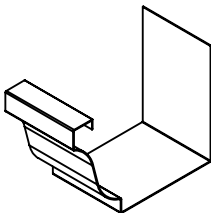


A4M04765 GUTTER SPLICE
(x1) 2 1/2"x3 11/16"x5 1/16" [63x94x129]



A4M06685 DOWNSPOUT - 66"
(x2)2"x3"x66" [51x76x1675]



A4M06246 LEFT GUTTER
(x2) 3 5/8"x5 1/8"x122 13/16" [93x130x3119]





A4M06247 RIGHT GUTTER
(x2) 3 5/8"x5 1/8"x122 13/16" [93x130x3119]

GUTTER SPLICE PAGE

NOTE:


- APPLY SILICONE TO INSIDE CHANNEL ON BOTH SIDES.
- ENSURE SILICONE IS EVENLY APPLIED ALONG THE CHANNEL.
- AFTER GUTTER SPLICE HAS BEEN SLID ONTO GUTTERS AND SILICONE HAS HAD TIME TO CURE, USING HAND PRESSURE ONLY, FOLD THE TOP TAB OVER EDGE OF GUTTER

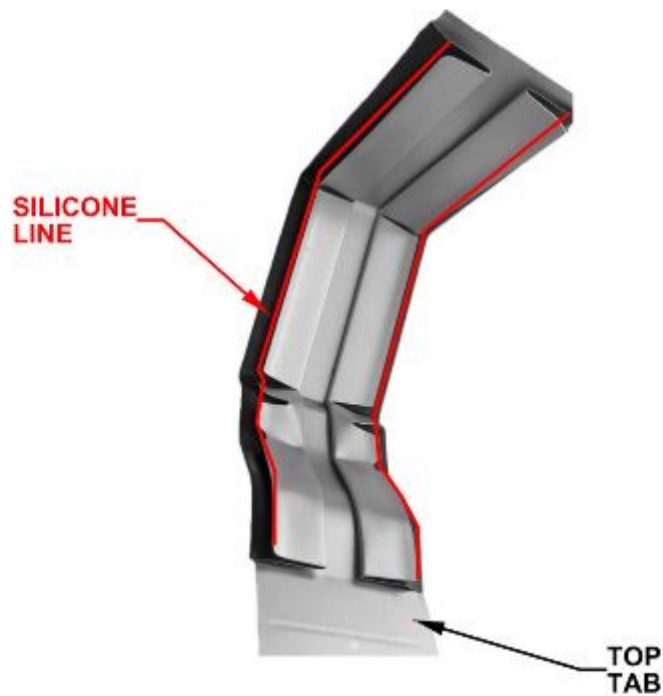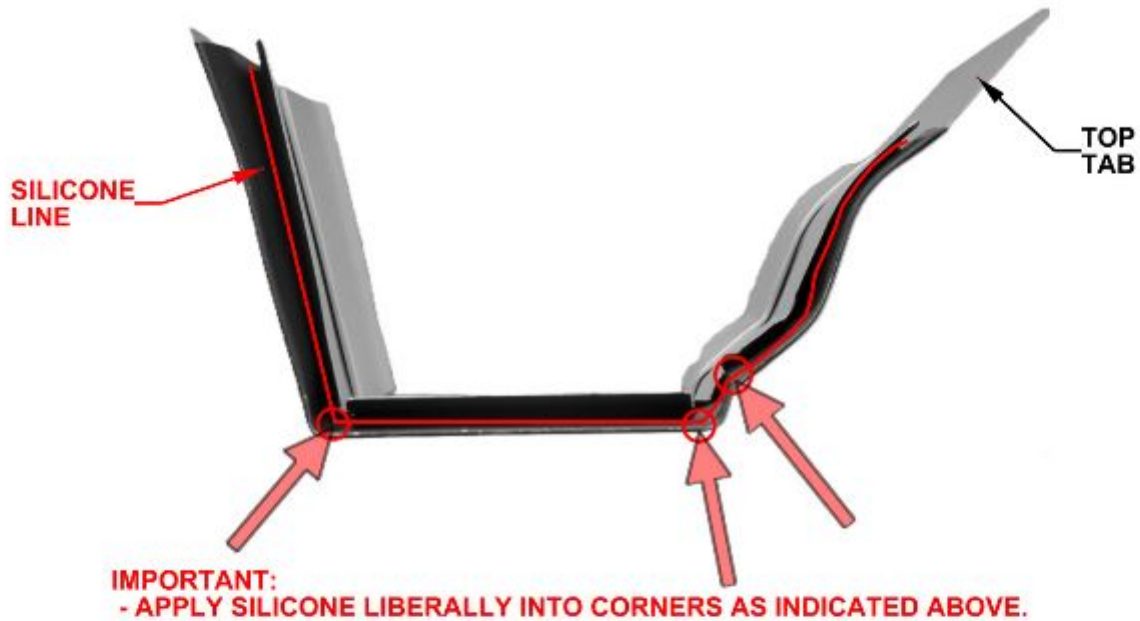


WAIT APPROXIMATELY 45 MINUTES FOR SILICONE TO BECOME TACKY.
AFTER 24 HOURS, SILICONE HAS CURED AND CAN HOLD WATER

OFFSET ORIENTATION

TO ENSURE WATER FLOWS PROPERLY, IT IS IMPORTANT TO ORIENT DOWNSPOUT PIPING CORRECTLY. STARTING AT THE TOP, DOWNSPOUTS MUST FEED INTO THE NEXT SECTION AS SHOWN.

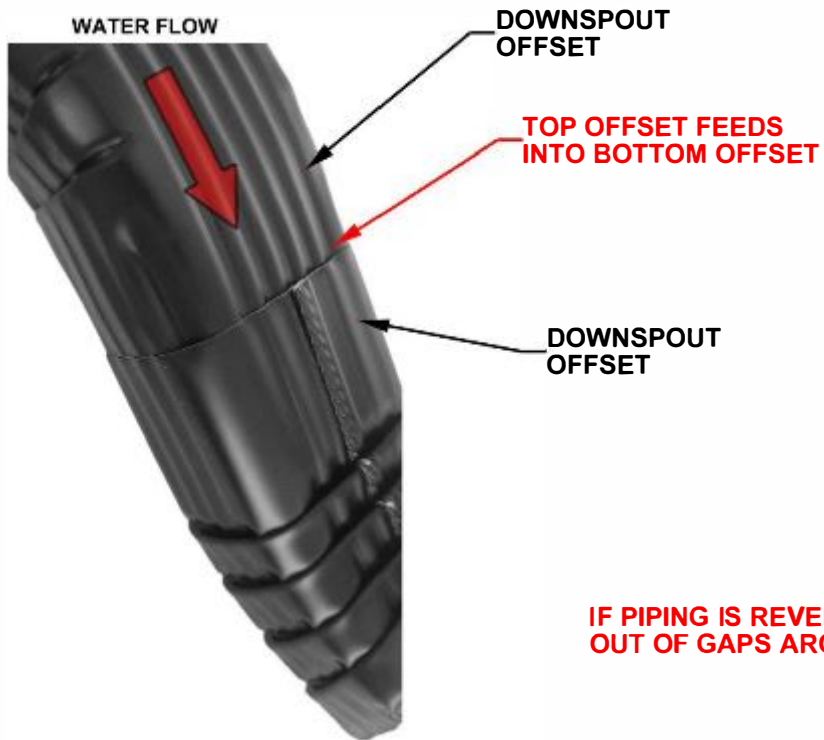


IF PIPING IS REVERSED, WATER WILL RUN OUT OF GAPS AROUND JOINTS

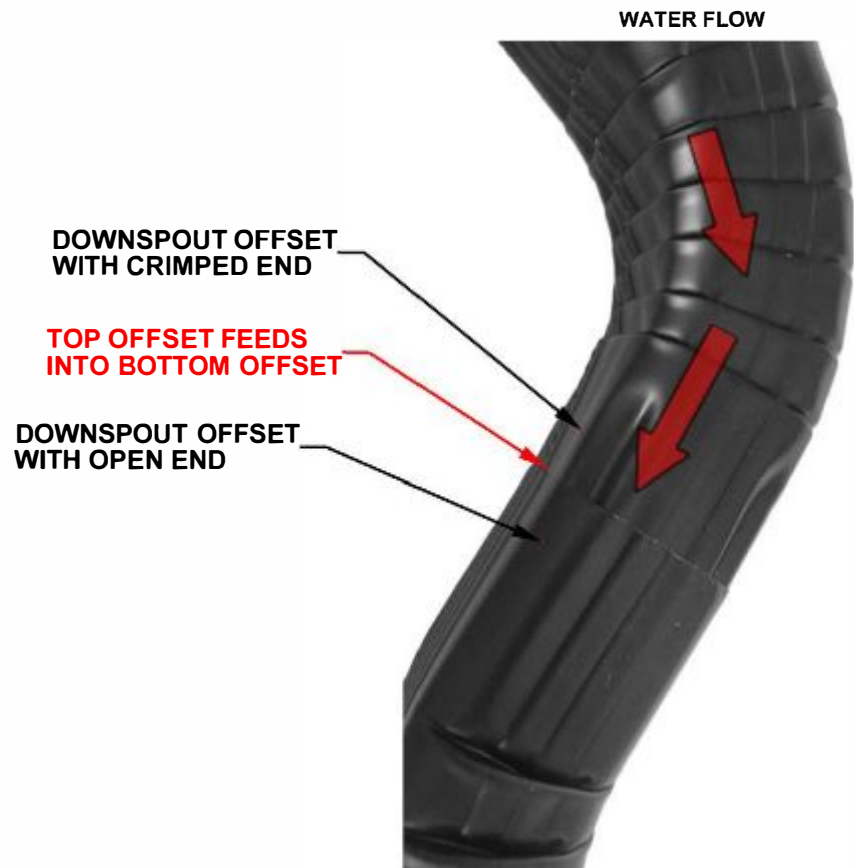

STEP 1A - GUTTER ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
4	H101116	SCREW SELF TAPPING 1/4x1 BLK



- REMOVE CORNER TRIM AND HARDWARE, SET ASIDE FOR LATER USE.

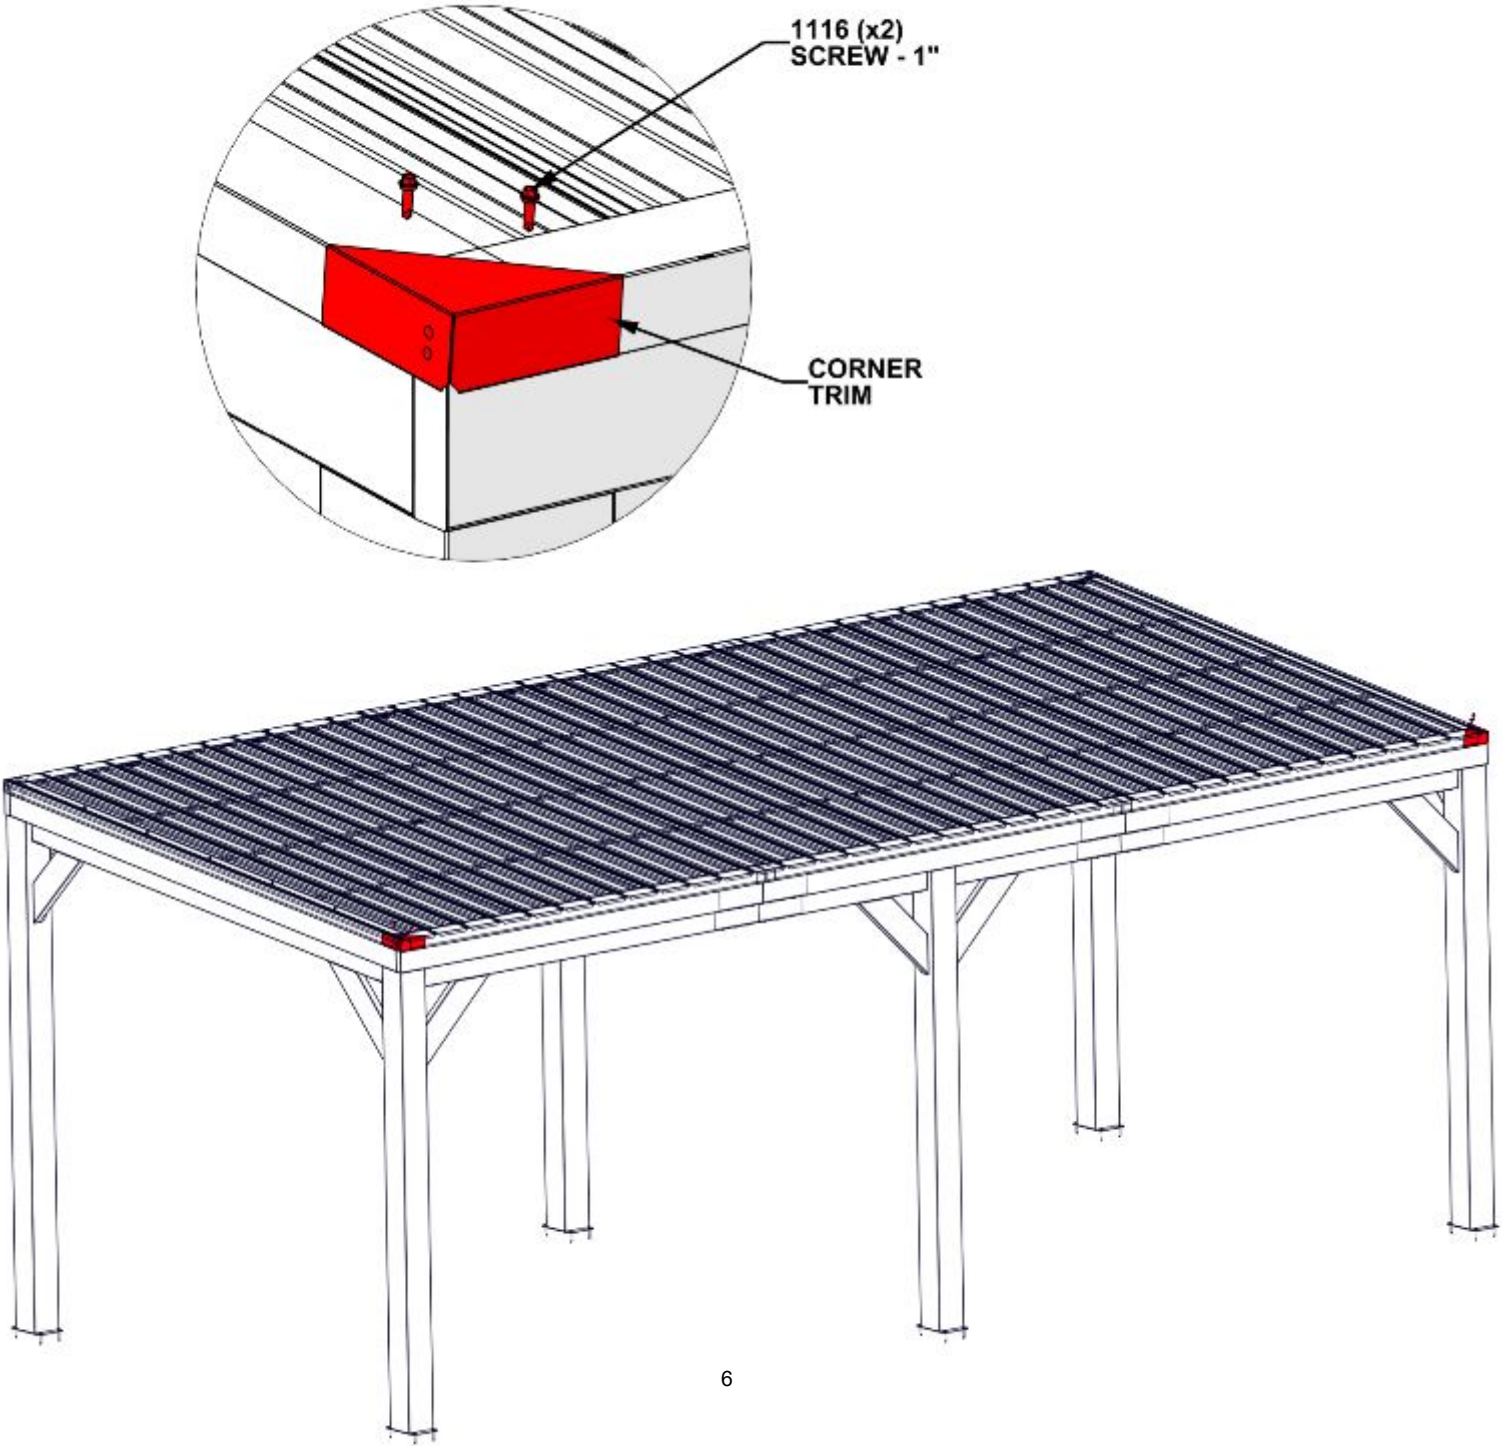

STEP 1B - GUTTER ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
20	H101116	SCREW SELF TAPPING 1/4x1 BLK


- REMOVE HARDWARE FIRST, THE SLIDE EDGE TRIM UNDER SHEET METAL AND REATTACH USING PREVIOUSLY REMOVED HARDWARE.
- SLIDE CORNER TRIM UNDER ROOF SHEETS AND ATTACH WITH HARDWARE PREVIOUSLY REMOVED.

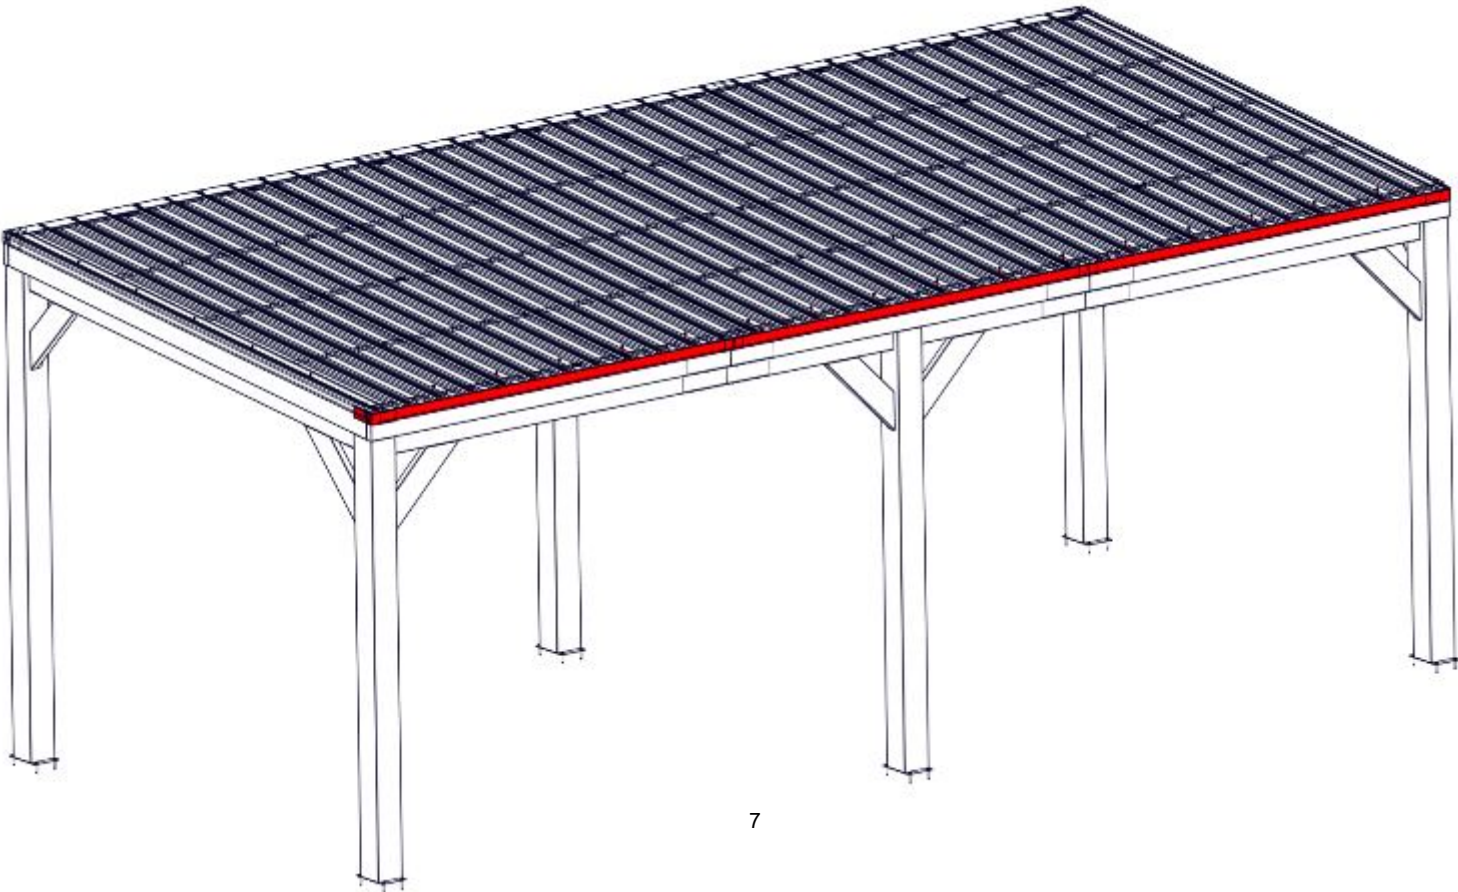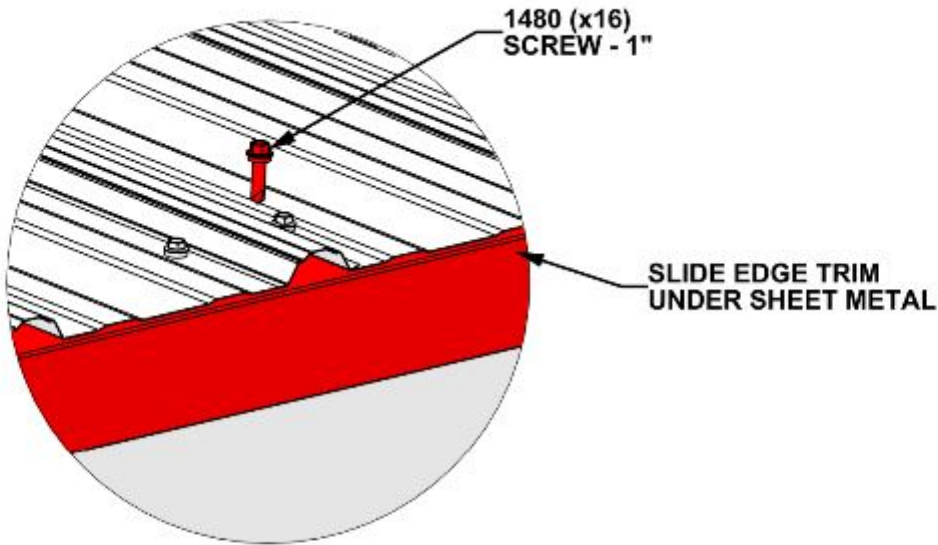


STEP 2 - GUTTER ASSEMBLY




- APPLY A BEAD OF SILICONE AROUND THE BOTTOM LIP OF THE DOWNSPOUT OUTLET AND PLACE OUTLET INSIDE GUTTER.

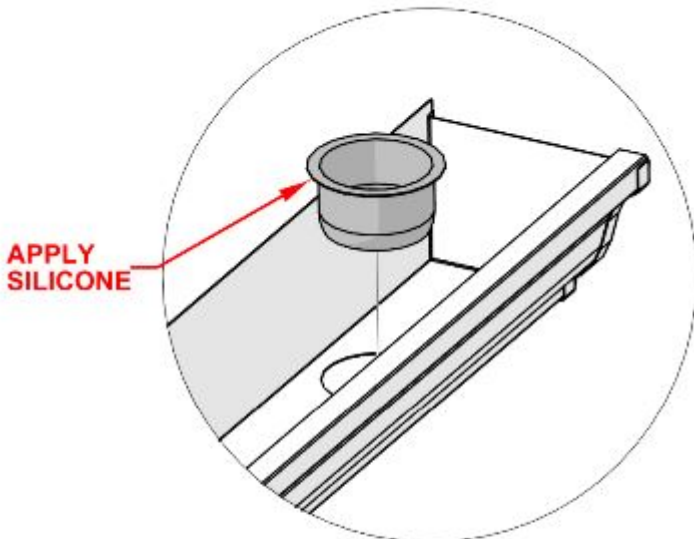

TIP: PRESSURE MAY NEED TO BE APPLIED TO GET OUTLET INTO POSITION. USE A WET FINGER TO FLATTEN SILICONE AFTER INSTALL.

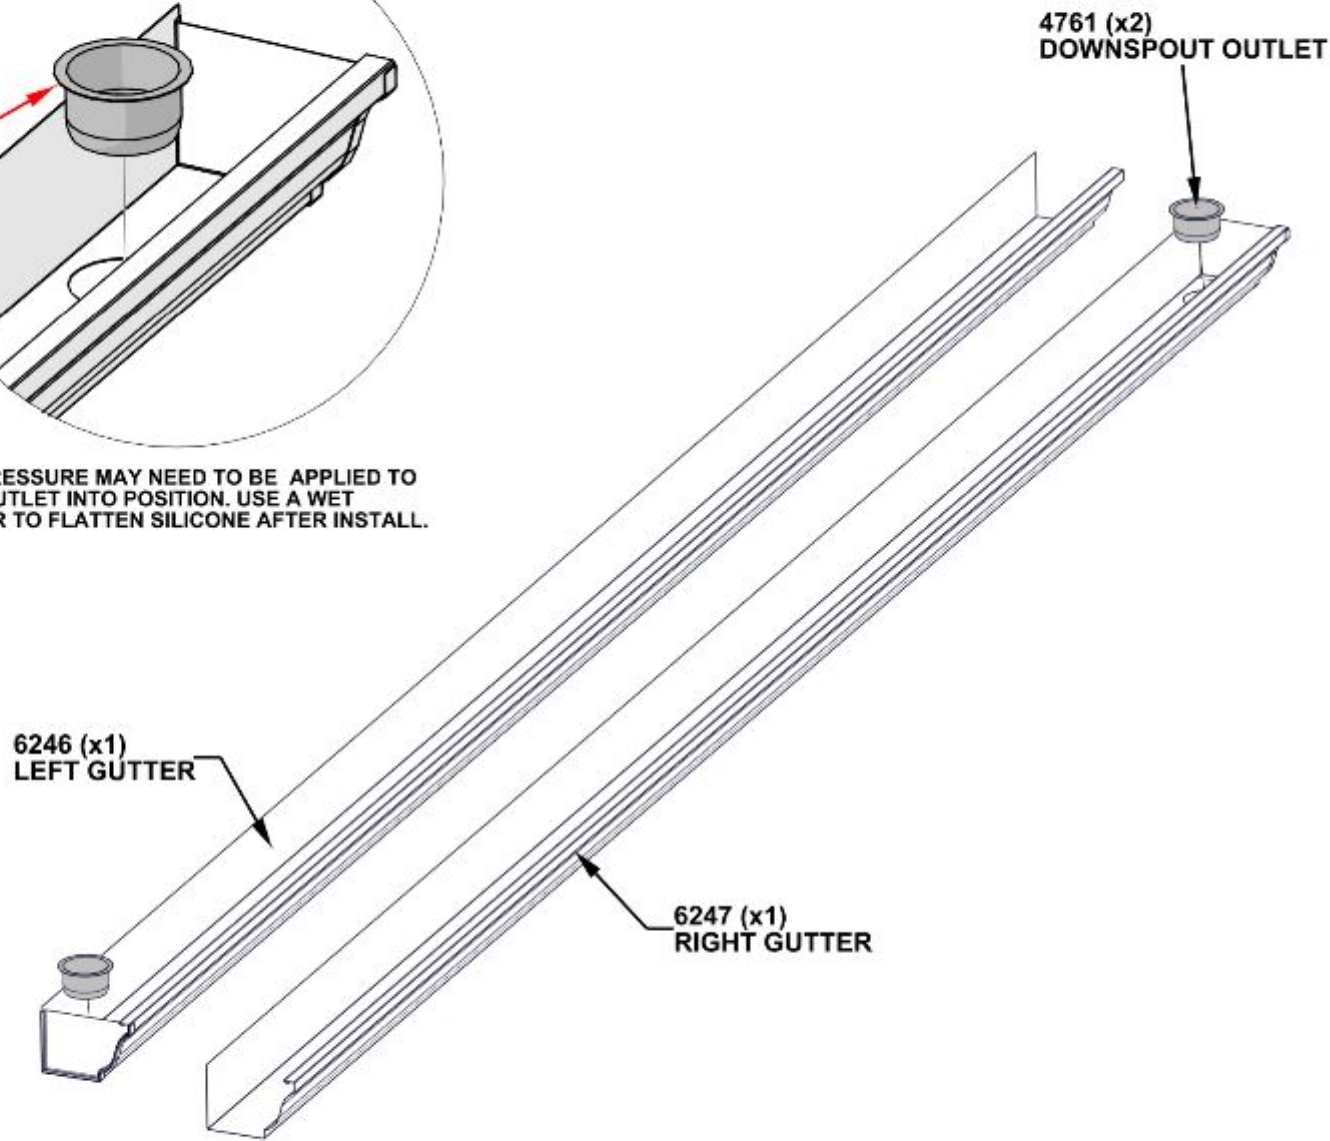

STEP 3 - GUTTER ASSEMBLY

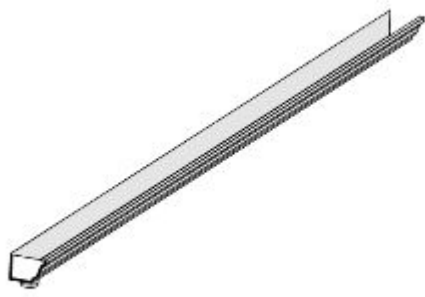



LEFT GUTTER ASSEMBLY - STEP 1

QTY	PART NUMBER	DESCRIPTION
2	H101480	SCREW SELF TAPPING #9x1 BLK




A4M04759 GUTTER HANGER (x2)

- SLIDE GUTTER BEHIND DRIP EDGE AND UP TO ROOF LINE.
- FLUSH THE END OF THE GUTTER WITH THE END OF THE GAZEBO
- ATTACH THE FIRST HANGER APPROXIMATELY 4" [100mm] FROM THE EDGE OF THE GUTTER.
- ATTACH THE SECOND HANGER AT APPROXIMATELY THE 13TH ROOF RIB.
- PRE-DRILL 1/8" [3mm] PILOT HOLES FOR EASE OF ASSEMBLY.
- USE A CLAMP TO HOLD GUTTER FOR EASE OF ASSEMBLY.

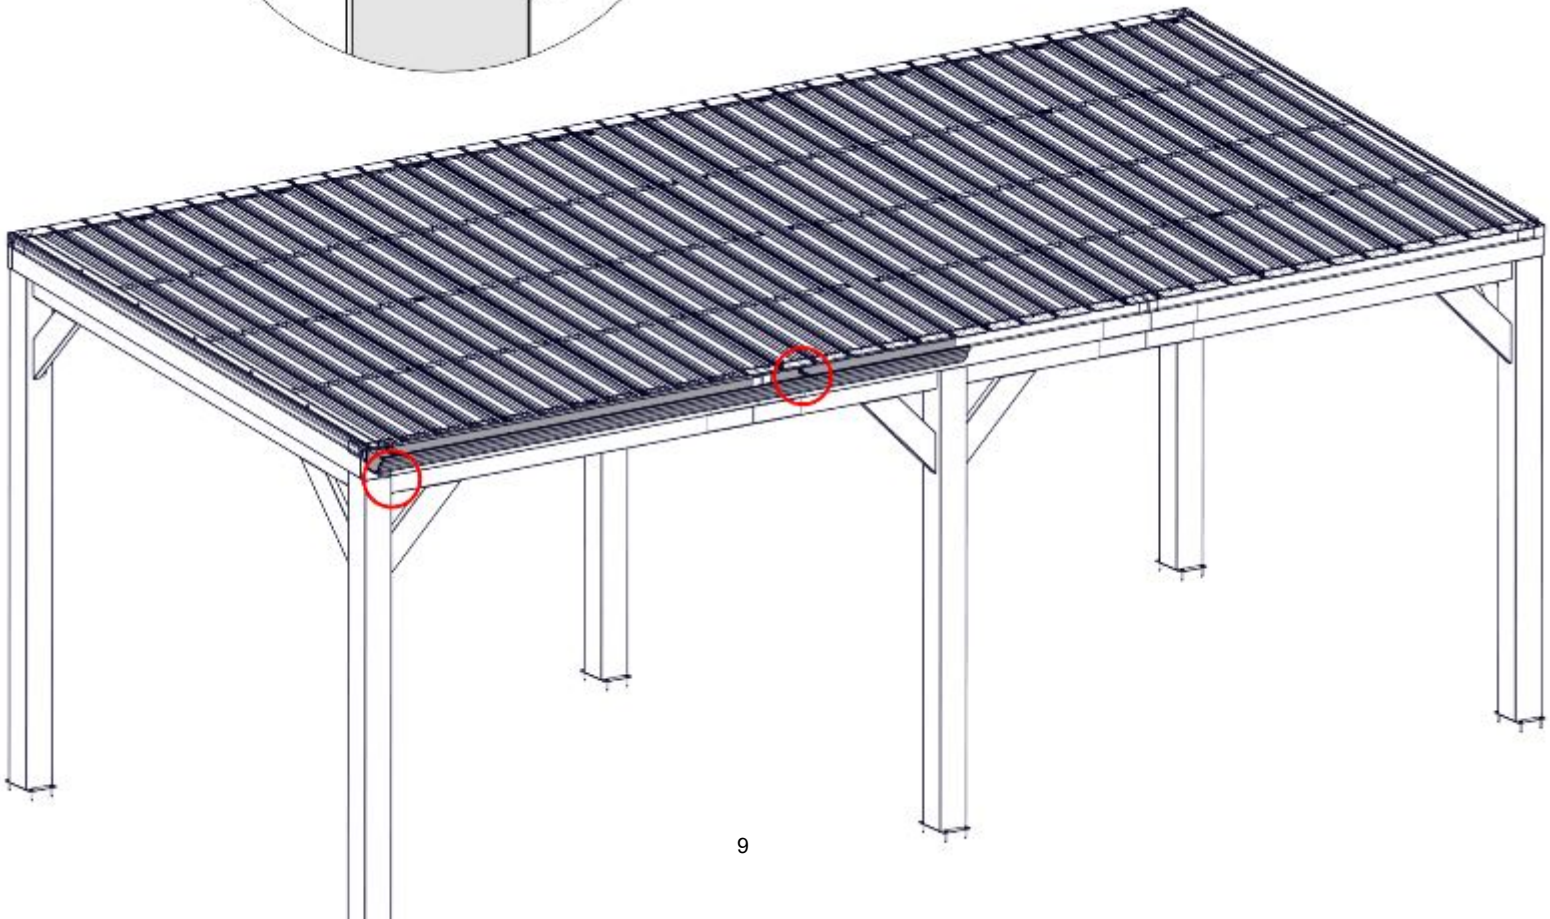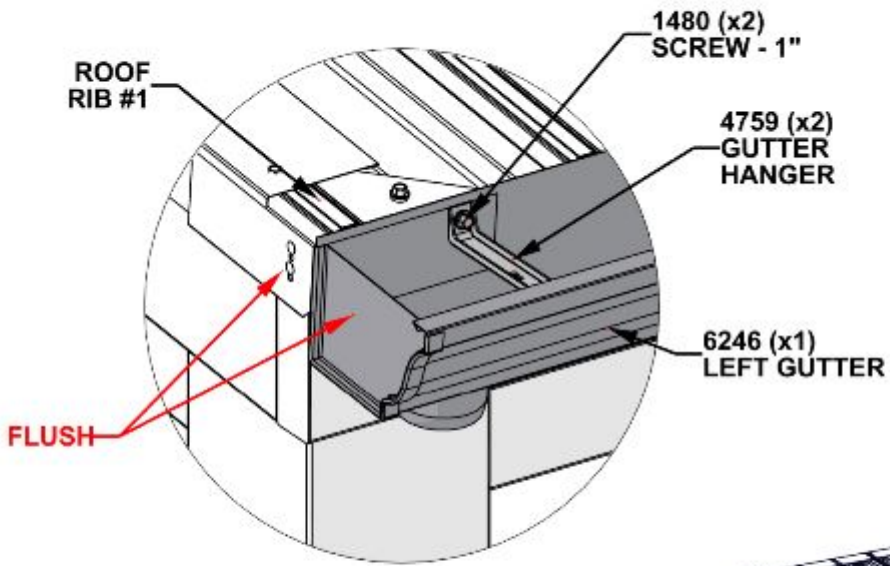


STEP 4 - GUTTER ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
2	H101480	SCREW SELF TAPPING #9x1 BLK

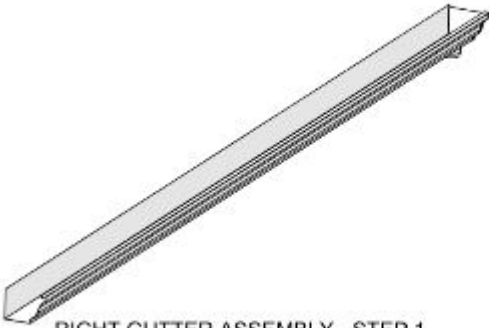

RIGHT GUTTER ASSEMBLY - STEP 1

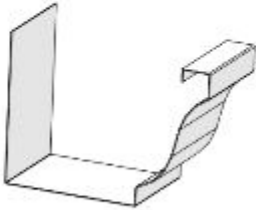


A4M04765 GUTTER SPLICE (x1)




A4M04759 GUTTER HANGER (x2)

- SLIDE GUTTER BEHIND DRIP EDGE AND UP TO ROOF LINE.
- FLUSH THE END OF THE GUTTER WITH THE END OF THE GAZEBO
- ATTACH THE FIRST HANGER APPROXIMATELY 4" [100mm] FROM THE EDGE OF THE GUTTER.
- ATTACH THE SECOND HANGER AT APPROXIMATELY THE 13TH ROOF RIB.
- PRE-DRILL 1/8" [3mm] PILOT HOLES FOR EASE OF ASSEMBLY.
- USE A CLAMP TO HOLD GUTTER FOR EASE OF ASSEMBLY.


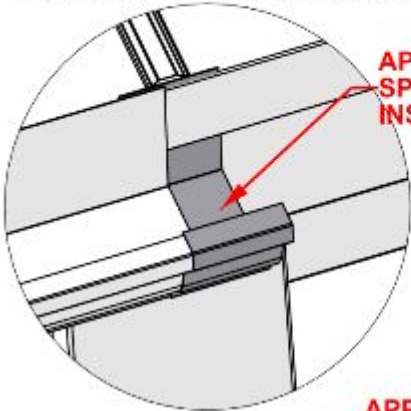


APPLY SILICONE TO
SPLICE GROOVE BEFORE
INSERTING INTO GUTTER

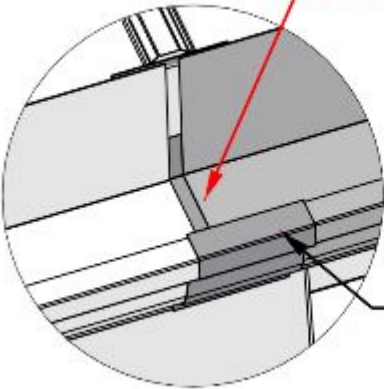


APPLY SILICONE TO SPLICE
GROOVE BEFORE INSERTING
GUTTER INTO SPLICE

4765 (x1)
GUTTER
SPLICE

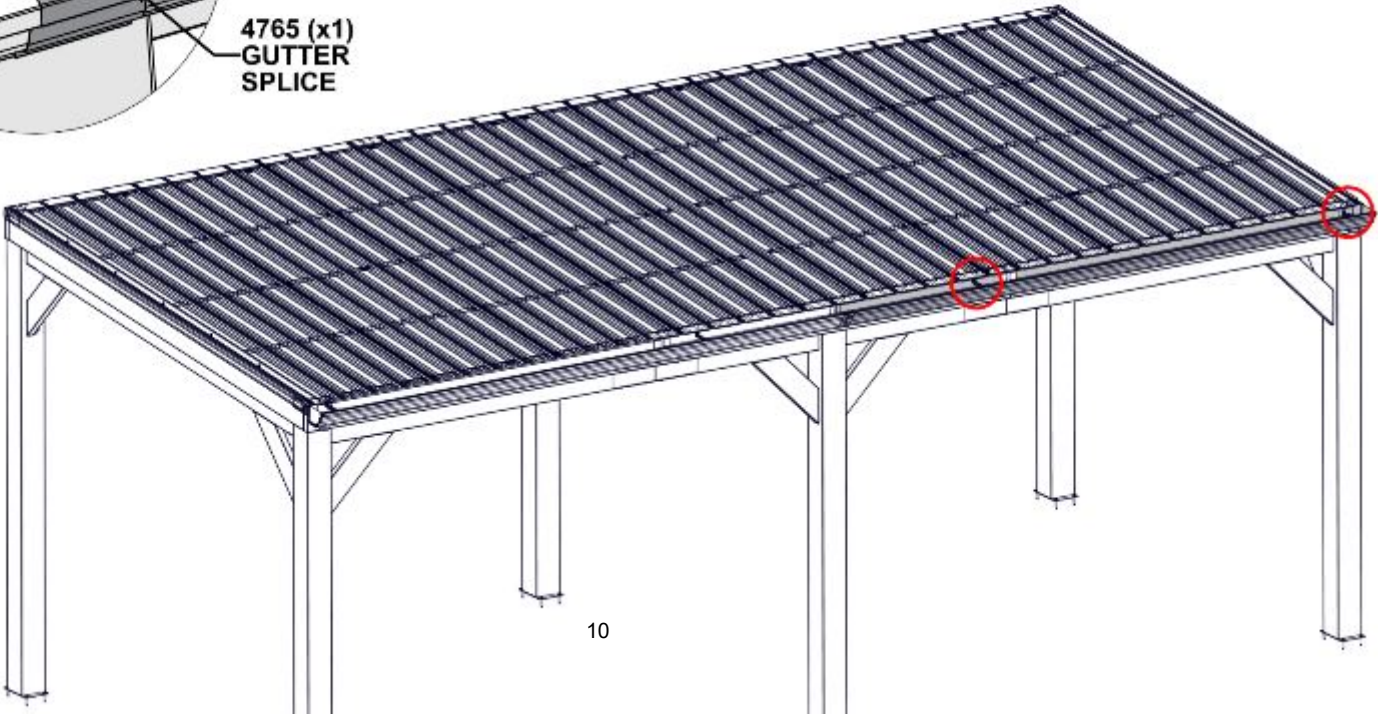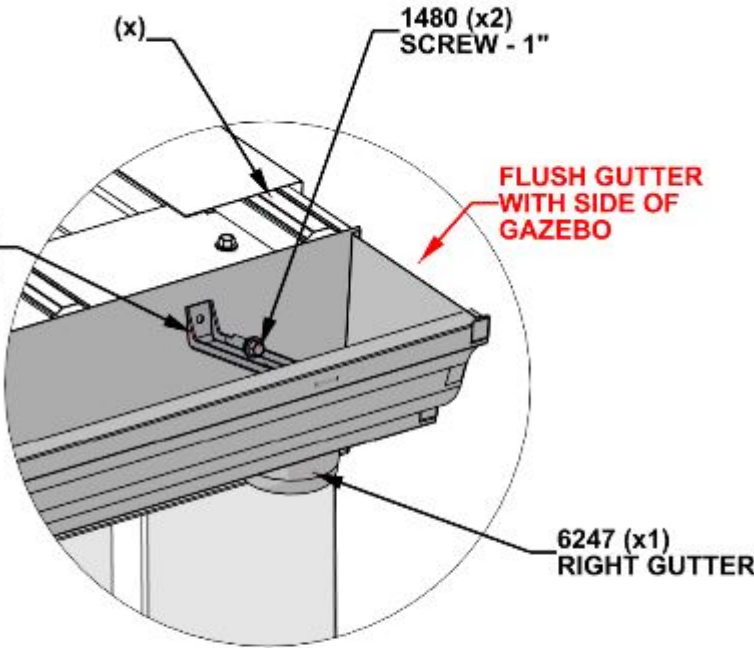




STEP 5 - GUTTER ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
8	H101480	SCREW SELF TAPPING #9x1 BLK

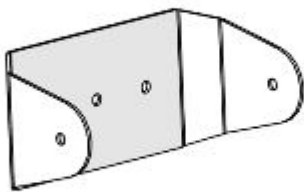

A4M04782 DOWNSPOUT CLIP
(x4)

- IT IS IMPORTANT TO CENTER 4782 CLIP AND HARDWARE ON POST AS SHOWN.
- ATTACH GUTTER CLIP APPROXIMATELY 12-1/2" [315mm] AND 79" [2005mm] OFF THE GROUND.

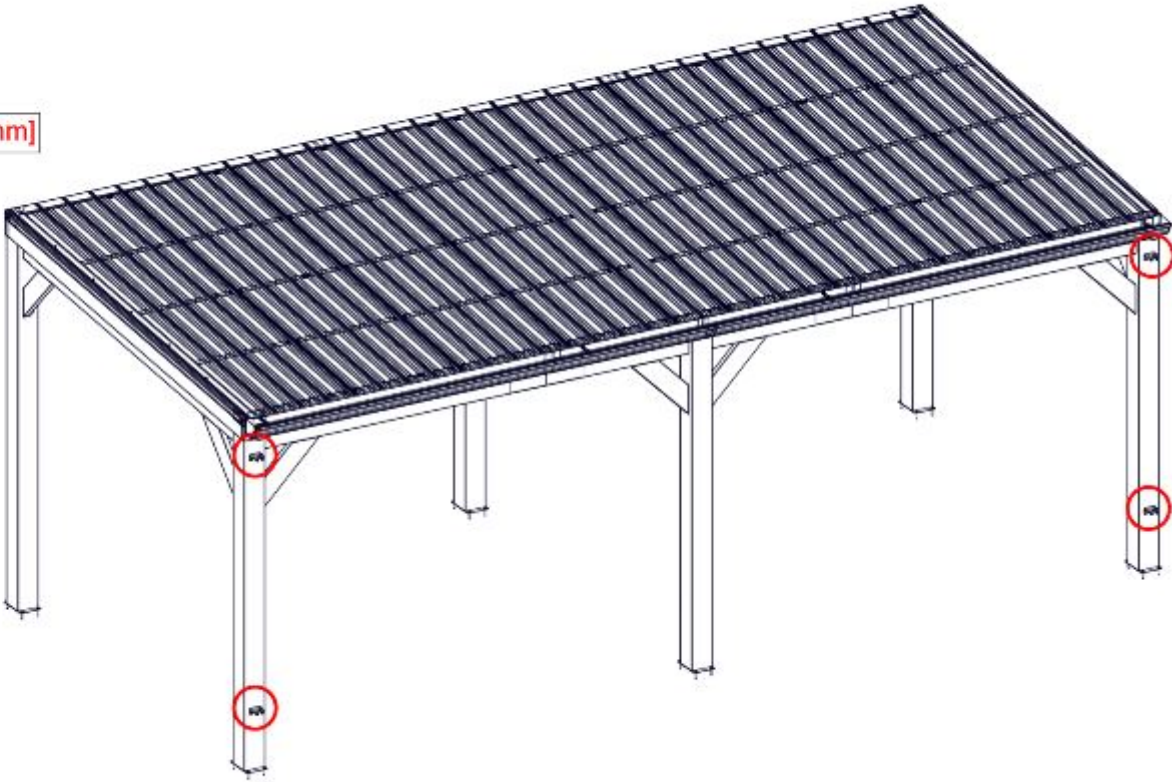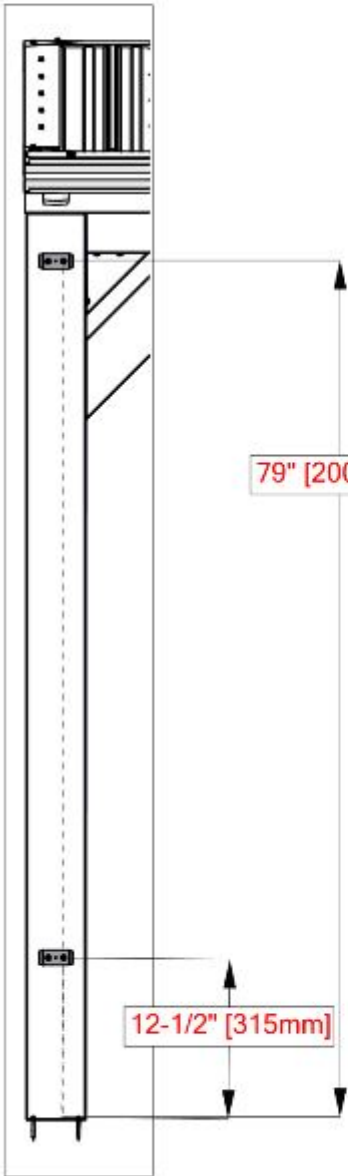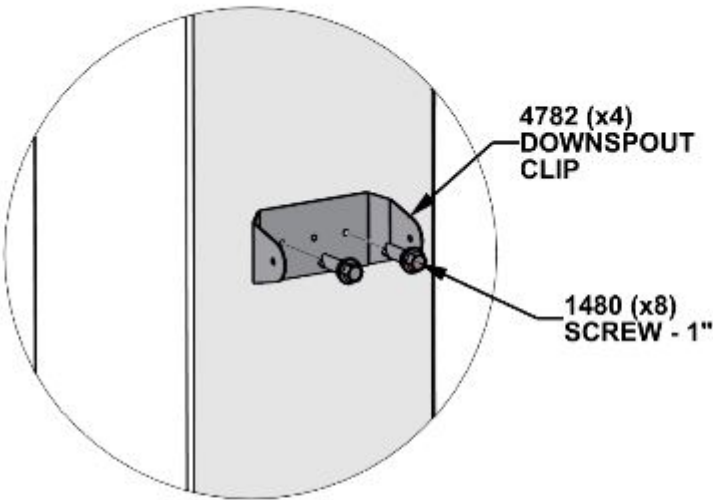

STEP 6 - GUTTER ASSEMBLY




A4M06238 DOWNSPOUT ELBOW - LONG
(x2)



A4M06685 DOWNSPOUT - 66"
(x2)

- INSERT TAPERED ENDS INTO LARGER ENDS AS SHOWN.
- NOTE ORIENTATION OF DOWNSPOUT OFFSET. SEE DOWNSPOUT OFFSET PAGE FOR DETAIL.
- COMPLETE THIS STEP TWICE.

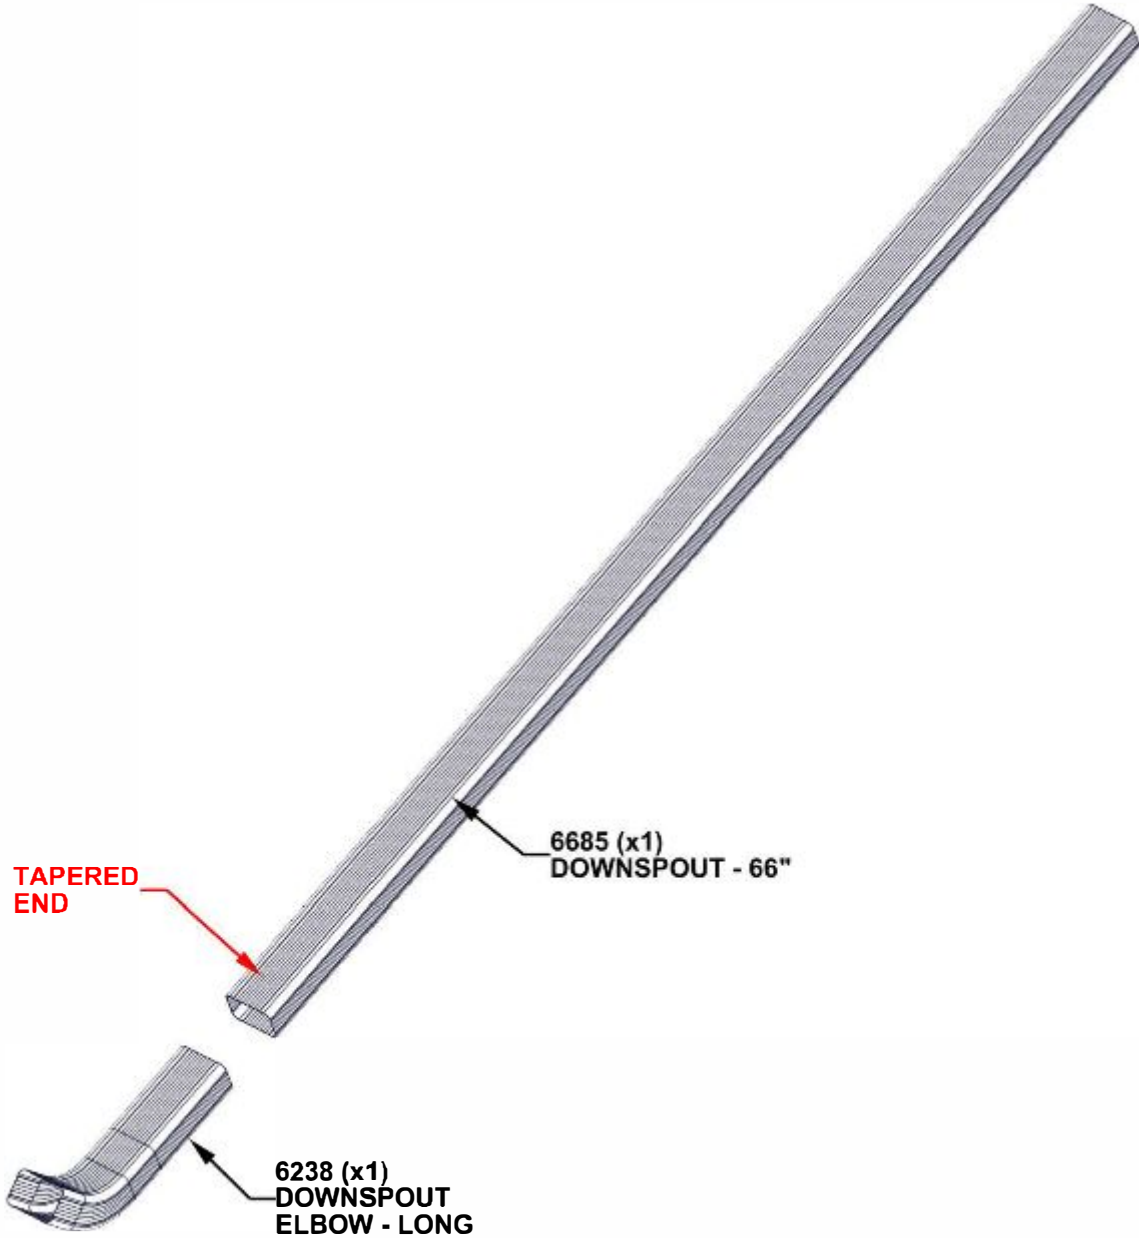



STEP 7 - GUTTER ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
2	H101414	SCREW SELF PIERCING #8x1/2 BLK



DOWNSPOUT ASSEMBLY - STEP 6



- SLIDE DOWNPOUT ASSEMBLY OVER GUTTER OUTLET AND ATTACH WITH HARDWARE PROVIDED.
- NOTE GUTTER WILL NOT EXTEND TO GROUND, THERE WILL BE FLOATING SPACE.

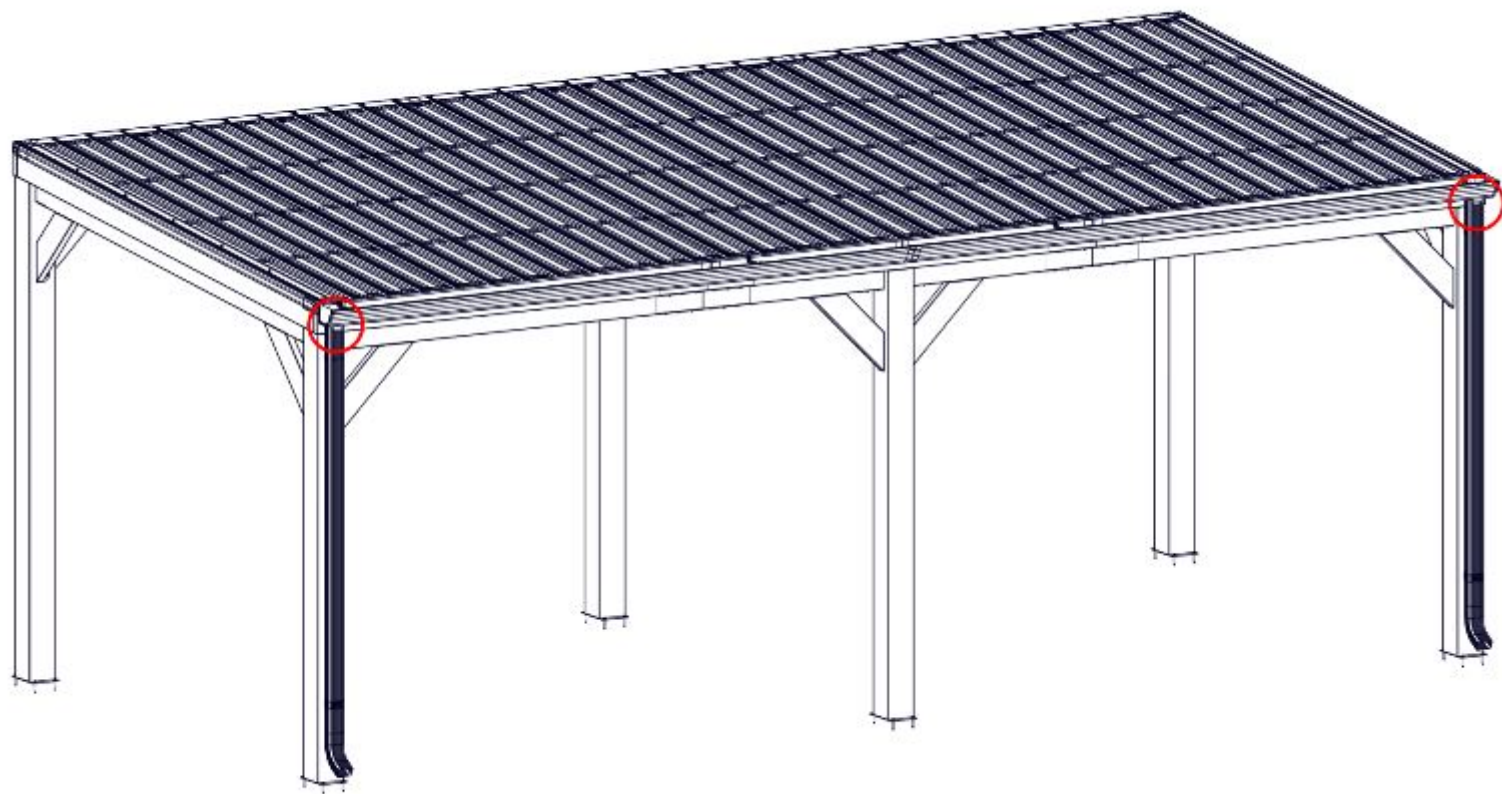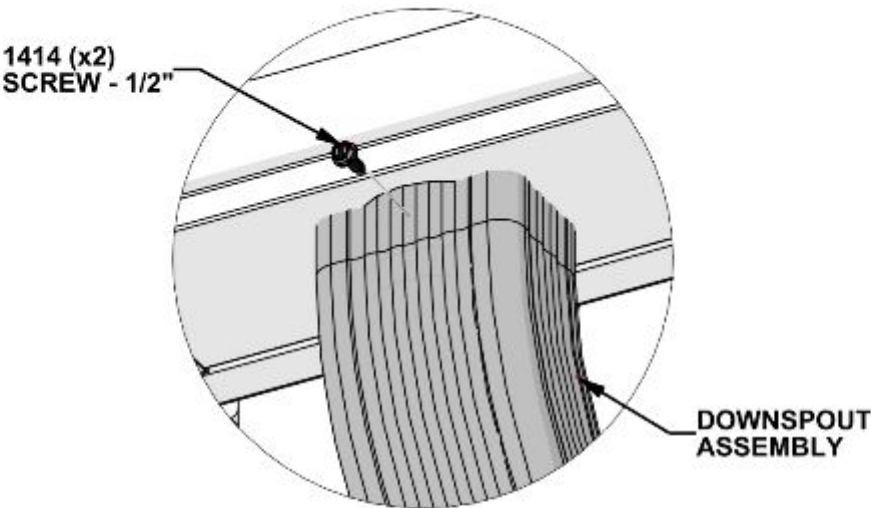

STEP 8 - GUTTER ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
8	H101414	SCREW SELF PIERCING #8x1/2 BLK

- SLIDE DOWNSPOUT ASSEMBLY OVER GUTTER OUTLET AND ATTACH WITH HARDWARE PROVIDED.
- NOTE GUTTER WILL NOT EXTEND TO GROUND, THERE WILL BE FLOATING SPACE.

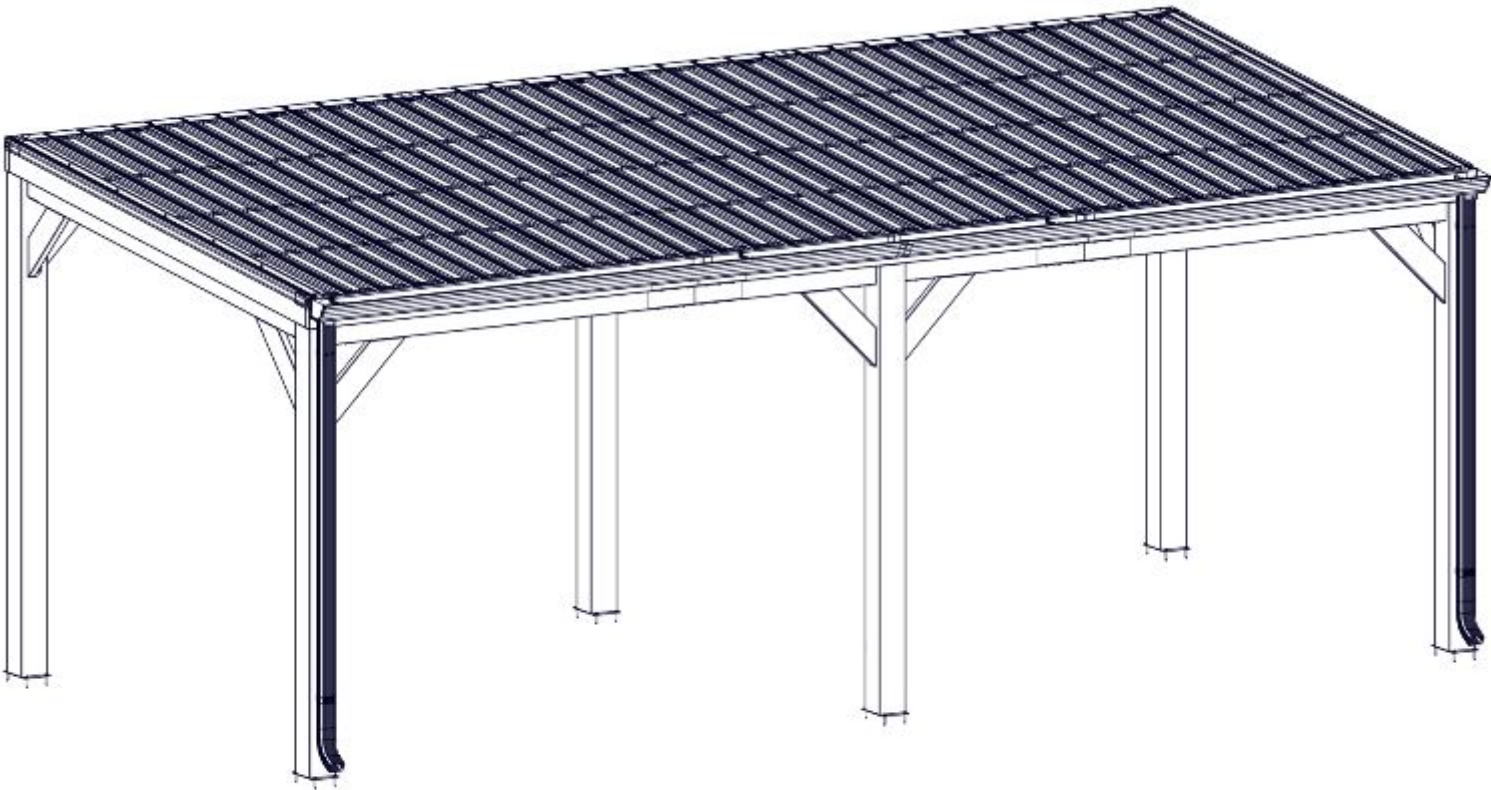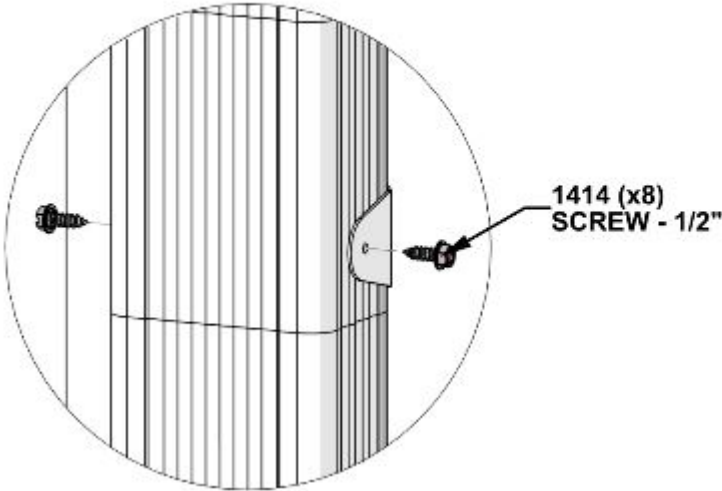


STEP 9 - GUTTER ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
8	H101480	SCREW SELF TAPPING #9x1 BLK



A4M04759 GUTTER HANGER
(x8)

- ATTACH ALL REMAINING GUTTER HANGERS
- EVENLY SPACE HANGERS AS SHOWN APPROXIMATELY 21-1/2" [547mm] APART

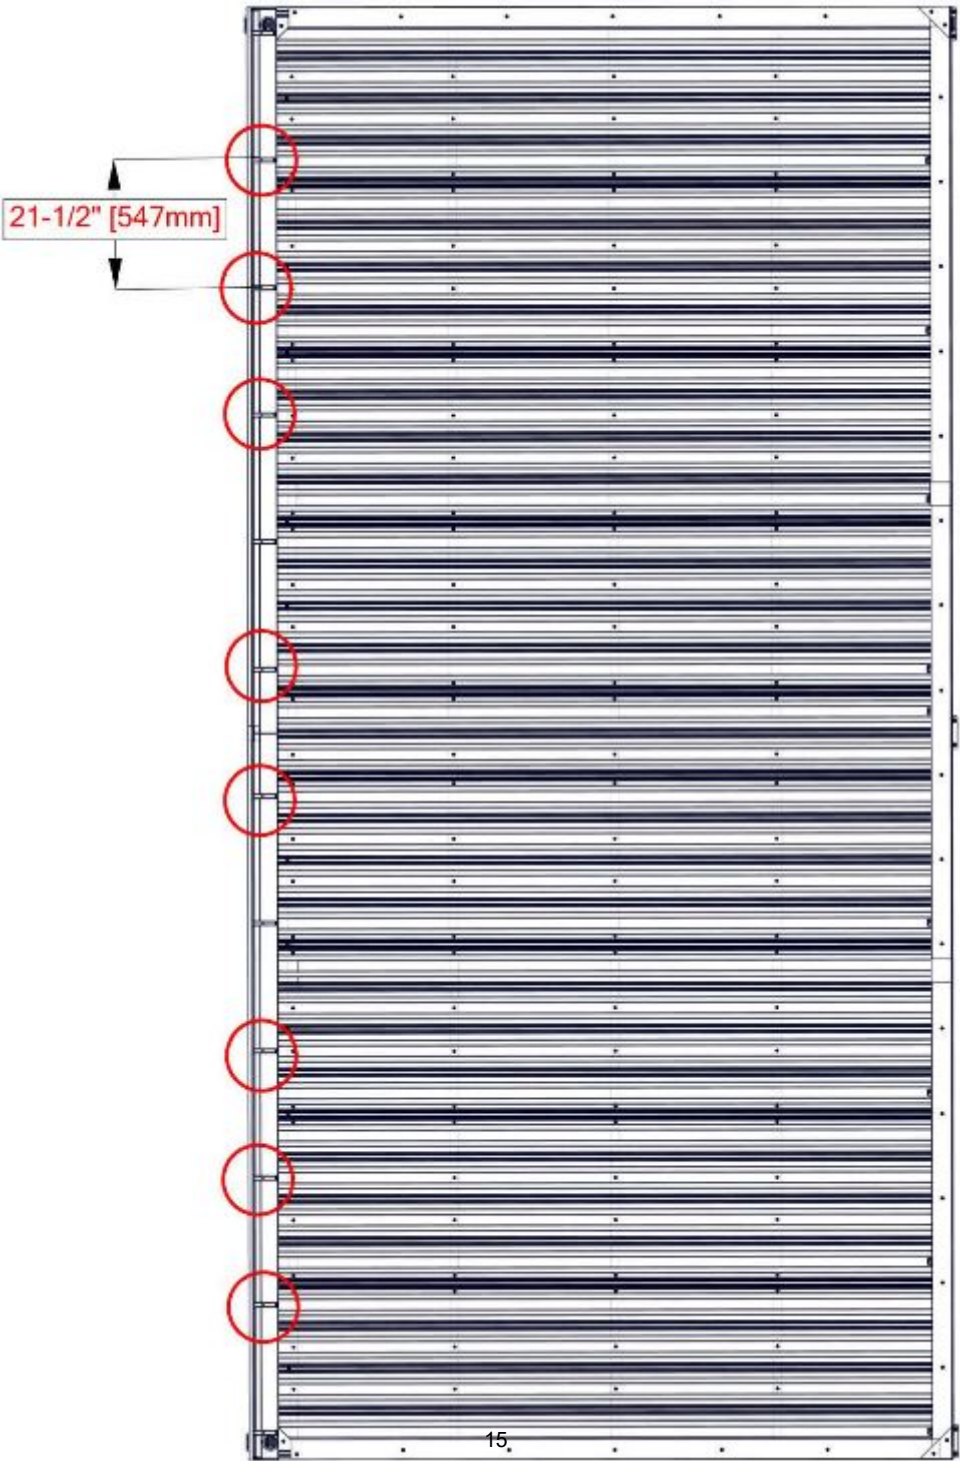

STEP 10 - GUTTER ASSEMBLY

NOTE:

- IT IS RECOMMENDED TO APPLY A SECOND BEAD OF SILICONE AT THE GUTTER SPLICE POSITION.
- BY WETTING ONES FINGER, GENTLY PUSH CAULK INTO SPLICE TAB AND CORNERS TO ENSURE PROPER SEALING.
- SEE BELOW FOR LOCATION.

