

CISK-A, CISM-A AND AK-4 INSTALLATION INSTRUCTIONS

The CISK-A includes:

PART #	DESCRIPTION	QTY
W135-0105*	Cast Centre	1
W135-0042*	Cast Sides	2
W135-0104*	Cast Top Pieces	2
W080-0438	Centre Bracket	1
W080-0439	Side Casting Brackets	2
W570-0080	Machine Screws	14

The AK-4 includes:

PART #	DESCRIPTION	QTY
W080-0489	Cast Flashing Brackets	2
W570-0004	#10 x 3/4" Screws	4
W510-0005	#10 - 12 Anchors	4

* To complete the part number for finish colours, add:
"f" for green, "k" for black, "m" for metallic or "n" for brown

For ease of assembly and to avoid damaging the surround, installation should be done using two people. Always place the cast parts on a flat protected surface to avoid scratching the finished surfaces during assembly.

If the fireplace opening is greater than 20.5" high and 35.75" wide then it is recommended to use *Backer Plate Kit* GIZBP6-3. It is also recommended to place the unit (and backer kit, if used) into the fireplace opening before proceeding. Move the unit into its final position and install the two cast flashing brackets to the wall as illustrated (**FIGURE B**) using the 4 - #10 x .75 screws and the 4 - #10 - 12 anchors (if necessary).

Drilling measurements - vertical measurement from the floor to the drilled holes - 23.75"
horizontal measurement between closest drilled holes to the unit on either side - 46.5"
horizontal measurement between the first and second drilled hole on each side - 1.25"

Assembly of the Cast Surround

1. Place the cast centre face down on a protective surface such as a carpet or blanket. Align the two cast top pieces over the cast centre. Using the illustration as guidance for appropriate positioning and six machine screws, secure the centre bracket to the three cast pieces.

2. Position the two cast sides to either cast top end, align and secure using the two side casting brackets and 8 machine screws.

Installation of the Cast Surround

Once completely assembled, stand the surround up. **Hint:** to avoid damaging the finish, this should be done using two people. Align the two side casting brackets attached to the back of the surround, with the two cast flashing brackets now attached to the wall. Lift the surround assembly and lower onto the two cast flashing brackets. (**FIGURE C**)

FIGURE A - REAR VIEW

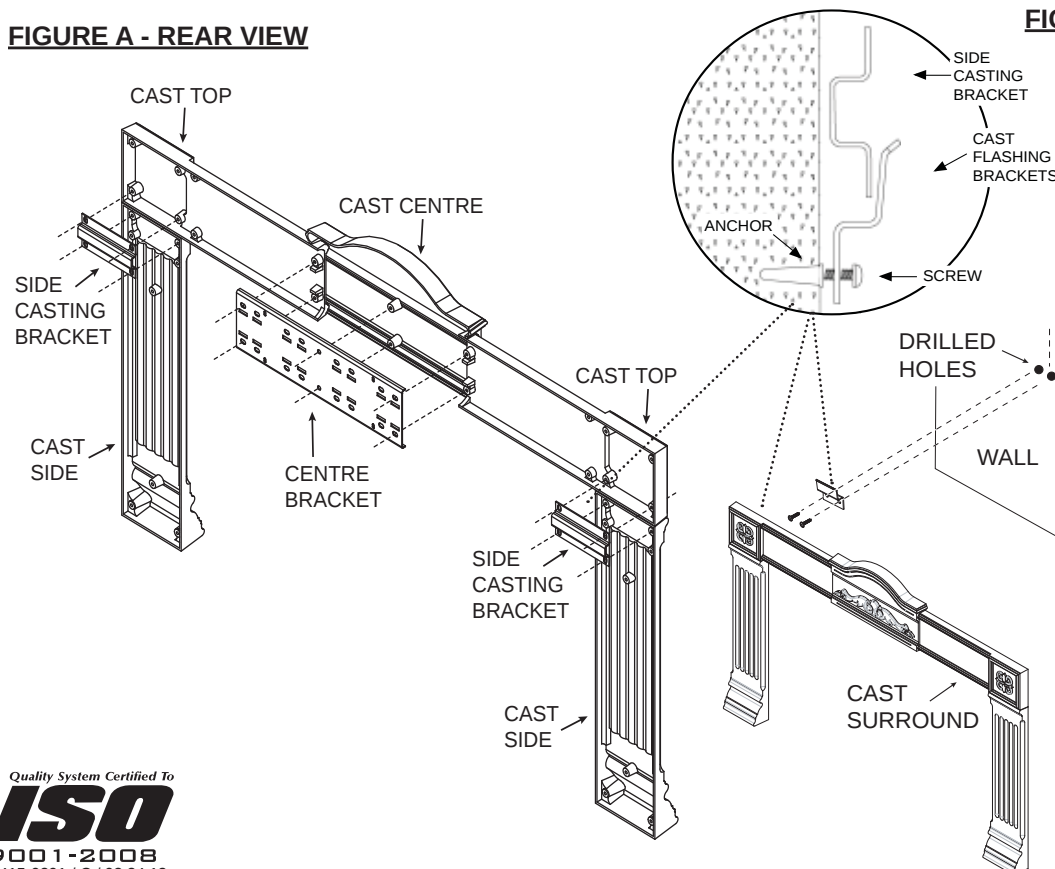


FIGURE C - ENLARGED VIEW


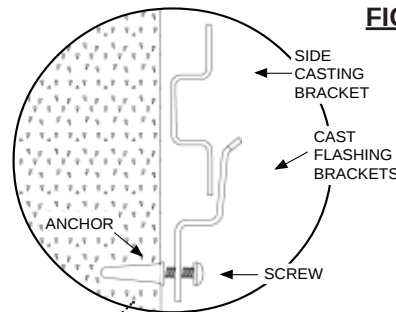


FIGURE B - FRONT VIEW

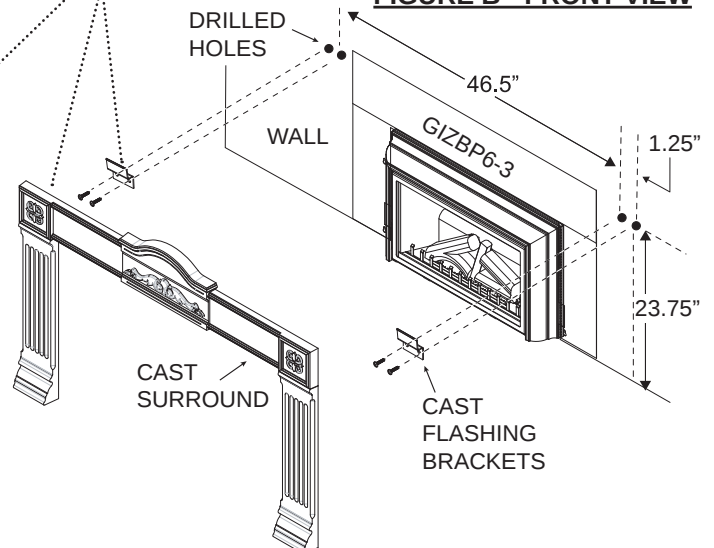

INSTRUCTIONS D'INSTALLATION DU AK-4, DU CISM-A ET DU CISK-A

Le CISK-A comprend :

N° DE PIÈCE	DESCRIPTION	QTÉ
W135-0105*	Pièce centrale en fonte	1
W135-0142*	Pièces de côté en fonte	2
W135-0104*	Pièces supérieures en fonte	1
W080-0438	Support central	1
W080-0439	Supports de côté	2
W570-0080	Vis à métal	14

Le AK-4 comprend :

N° DE PIÈCE	DESCRIPTION	QTÉ
W080-0489	Supports de contour en fonte	2
W570-0004	Vis #10 x ¾"	4
W510-0005	Dispositifs d'ancrage #10-12	4

*** Pour compléter le code des articles en couleur de finitions, ajoutez la lettre "f" pour vert, "k" pour noir, "m" pour métallique et "n" pour brun**

Afin de faciliter l'assemblage et d'éviter d'endommager le contour, l'installation devrait être effectuée par deux personnes. Lors de l'assemblage, déposez toujours les pièces en fonte sur une surface plate et protégée afin d'éviter d'égratigner leur fini.

Si l'ouverture du foyer dépasse 20,5" de hauteur et 35,75" de largeur, nous vous conseillons d'utiliser l'ensemble de plaque de fond GIZBP6-3. Nous vous conseillons aussi de placer l'appareil (et l'ensemble de plaque de fond, si utilisé) dans l'ouverture du foyer avant de procéder. Placez l'appareil dans sa position définitive et installez les deux supports de contour en fonte sur le mur tel qu'illustré (**FIGURE B**) en utilisant les 4 vis #10 x ¾" et les 4 dispositifs d'ancrage #10 - 12 (si nécessaire).

Mesures de perçage - Mesure verticale entre le plancher et les trous percés -23,75"
 - Mesure horizontale entre les trous percés les plus rapprochés de chaque côté de l'appareil -46,5"
 - Mesure horizontale entre le premier et le second trou percé de chaque côté de l'appareil -1,25"

Assemblage du contour en fonte

1. Placez la pièce centrale en fonte face contre terre sur une surface protégée comme un tapis ou une couverture. Alignez les deux pièces supérieures en fonte sur la pièce centrale. En vous servant de l'illustration comme guide pour positionner les six vis à métal adéquatement, fixez solidement le support central aux trois pièces en fonte.

2. Positionnez les deux pièces de côté en fonte à chaque extrémité des pièces supérieures, alignez et fixez solidement à l'aide des deux supports de côté et de 8 vis à métal.

Installation du contour en fonte

Une fois l'assemblage du contour terminé, mettez-le debout. **Conseil :** pour éviter d'endommager le fini, cette opération devrait être effectuée par deux personnes. Alignez les deux supports de côté fixés à l'arrière du contour en fonte, avec les deux supports de contour en fonte fixés au mur. Soulevez le contour et abaissez-le sur les deux supports de contour en fonte, tel qu'illustré à la **FIGURE C**.

FIGURE A - VUE ARRIÈRE

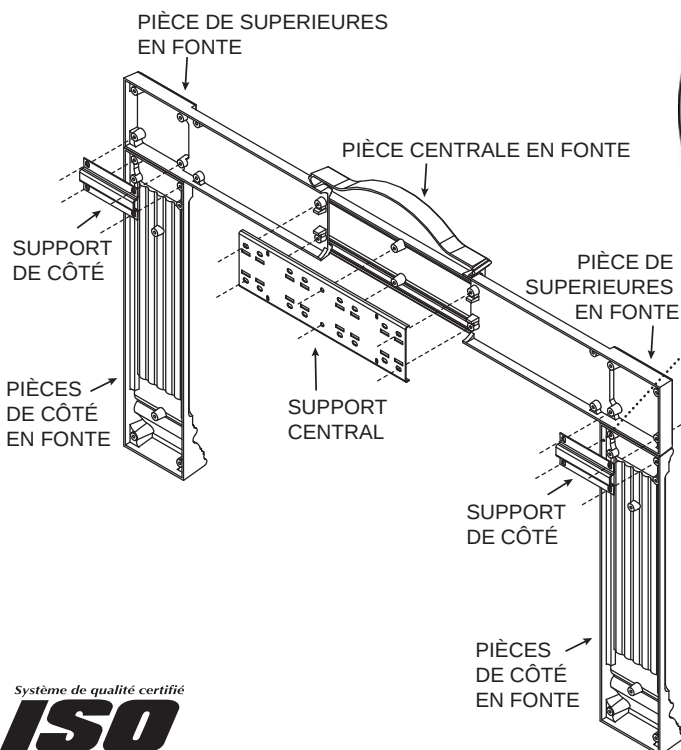


FIGURE C - VUE AGRANDIE

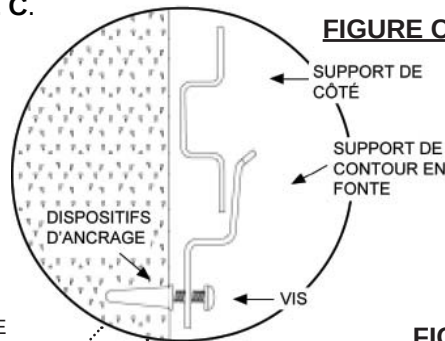


FIGURE B - VUE DE FACE

