



PRP25 PORCELAIN REFLECTIVE RADIANT PANEL INSTALLATION INSTRUCTIONS



This kit includes:

#	Name	Part #	QTY.
1	Rear Panel	W090-0133	1
2	Right Panel	W090-0134	1
3	Left Panel	W090-0135	1
4	Screws	W570-0001	4



1. Remove the glass door & logs.

2. Remove the 2 screws in the firebox back as illustrated. Place the rear panel against the back wall of the firebox. Secure in place using the 2 screws. (Fig. 1)

3. Place the left panel into the side of the firebox and align the two holes with the corresponding holes in the rear panel, the panel will be on an angle. Secure in place using screws. (Fig. 2)

4. Repeat step 3 for the right panel.

5. Replace the logs and glass door.

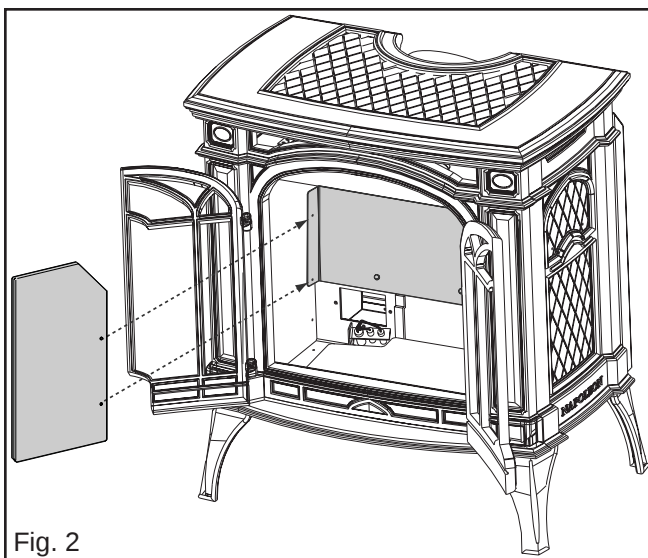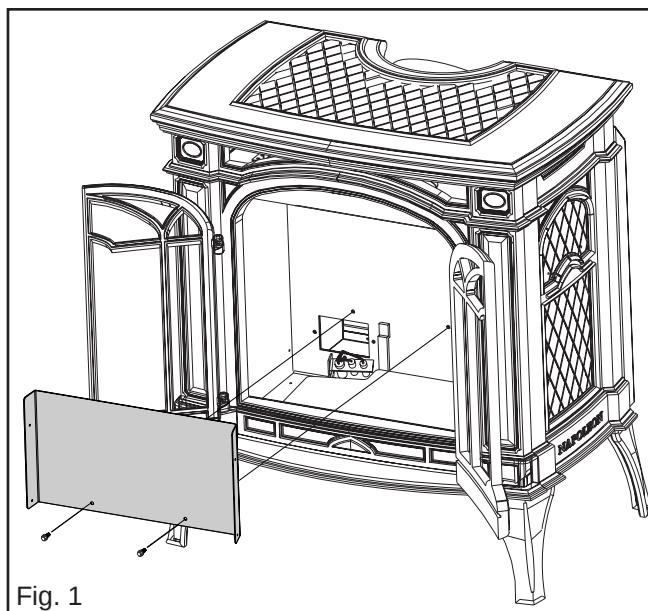

W415-0558 / 01.18.06

Cet ensemble comprend :

#	Description	N° de pièce	QTÉ
1	Panneau arrière	W090-0133	1
2	Panneau droit	W090-0134	1
3	Panneau gauche	W090-0135	1
4	Vis	W570-0001	4

1. Retirez la porte vitrée et les bûches.
2. Retirez les deux vis à l'arrière de la chambre de combustion, tel qu'illustré. Installez le panneau arrière contre le mur arrière de la chambre de combustion. Fixez le panneau en place à l'aide des deux vis. (Fig. 1)
3. Installez le panneau gauche contre le côté de la chambre de combustion et alignez les deux trous avec les trous correspondants du panneau arrière; le panneau sera de biais. Fixez en place avec les vis. (Fig. 2)
4. Répétez l'étape 3 pour le panneau droit.
5. Remettez en place les bûches et la porte vitrée.

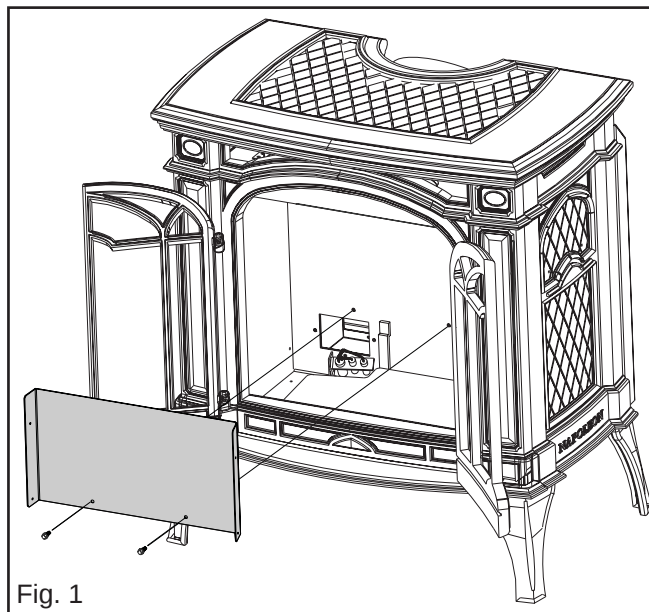


Fig. 1

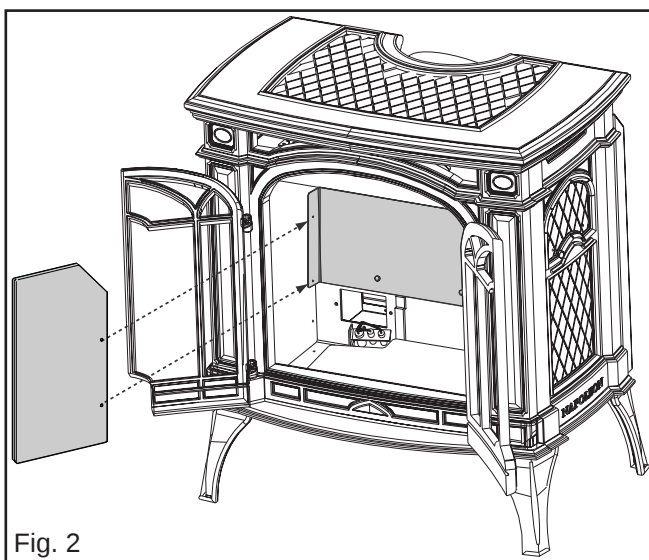


Fig. 2