



Manufactured by:
Backyard Discovery
3305 Airport Drive, Pittsburg, KS 66762
800-856-4445

Basepoint Business Centre: Rivermead Drive, Westlea, Swindon SN5 7EX Phone: 0800-118-2476
J.P. Coenstraat 7, The Bridge, The Hague, 2595 WP, Netherlands Phone: 08005678990

ATLAS MONKEY BAR

Accessory

Model # 9260610

The assembly manual must be retained
since it contains important information



WARNING

Adult Assembly Required.

Not suitable for children under 36 months due to small parts.
FOR DOMESTIC USE ONLY. INTENDED FOR OUTDOOR USE.



Please visit www.backyarddiscovery.com

For the most up to date assembly manual, to register your product, or to order
replacement parts Para obtener instrucciones en español, visite
www.backyarddiscovery.com



EASY STEP-BY-STEP



3D INTERACTIVE INSTRUCTIONS
DOWNLOAD THE FREE APP



OWNER'S MANUAL - BASIC SETUP DIMENSIONS & ASSEMBLY NOTES

Place the set on level ground, not less than 6'-7" [2 m] from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.

- While assembling unit, take time before and after each phase to make sure fort is level. If fort is not level, assembly will be difficult and improper assembly may result. Extra care must be taken to insure the fort is square.
 - The safe play area refers to a zone extending 6'-7" (2m) beyond the play product on all sides, including the space above the play product.
-

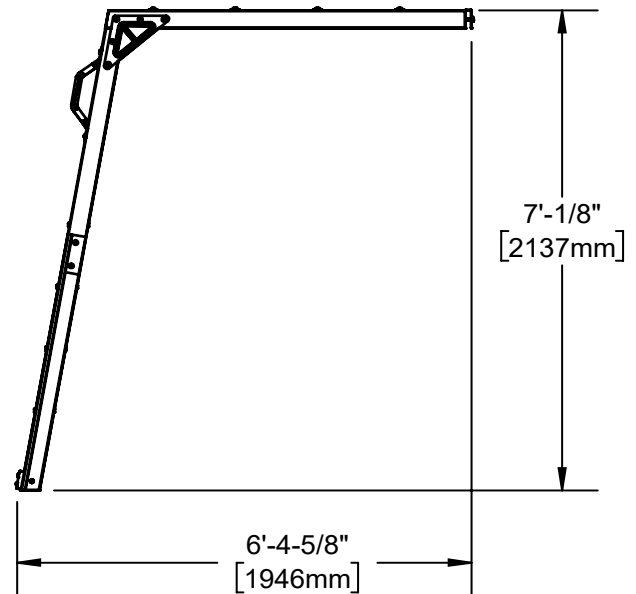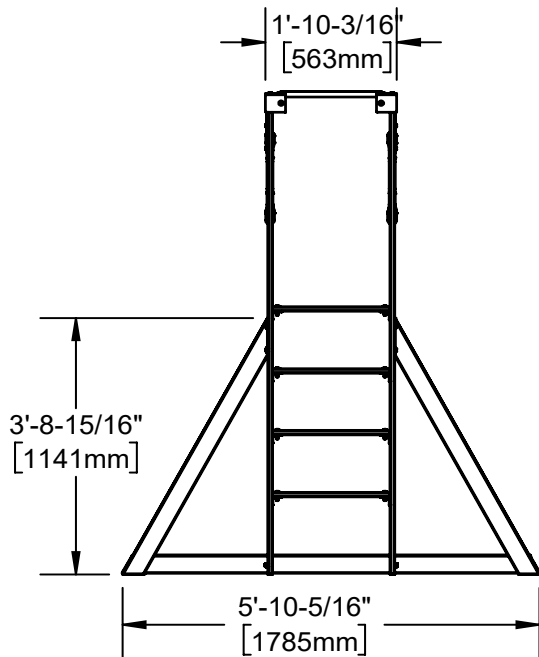


OWNER'S MANUAL - PARTS IDENTIFICATION


METAL COMPONENTS (NOT TO SCALE)



MB01 MONKEY BAR RAIL ASSEMBLY - A4M04819
(x1) 61 3/4"x3 3/8"x3 1/4" (83x87x1569)



MB02 MONKEY BAR RAIL ASSEMBLY - A4M04822
(x1) 61 3/4"x3 3/8"x3 1/4" (83x87x1569)



MB03 MONKEY BAR UPRIGHT ASSEMBLY - A4M04823
(x1) 82 7/8"x3 1/8"x2 3/8" (61x80x2104)




MB04 MONKEY BAR GROUND TUBE ASSEMBLY - A4M04824
(x1) 70 3/8"x3 1/8"x3/4" (20x80x1786)



MB05 MONKEY BAR BRACE ASSEMBLY - A4M04826
(x1) 51 5/8"x13 5/8"x3" (77x346x1312)




A4M02252 AUGER GROUND STAKE
(x2)



MB06 MONKEY BAR UPRIGHT ASSEMBLY - A4M04828
(x1) 82 7/8"x3 1/8"x2 3/8" (61x80x2104)



MB07 MONKEY BAR BRACE ASSEMBLY - A4M04829
(x1) 51 5/8"x3 1/8"x3" (77x80x1311)

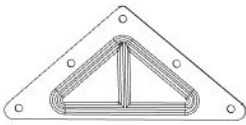


A4M00614 TRIANGLE PLATE 100° 5 HOLE
(x2)



A4M00613 HAND GRIP
(x2)



A4M00616 METAL RUNG 547
(x4)

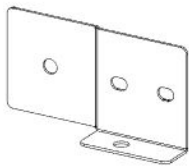

A4M07391 BRACKET
(x1)

OWNER'S MANUAL - PARTS IDENTIFICATION


COMPOSITE COMPONENTS (NOT TO SCALE)




W15 LADDER BOARD - A5C00051
(x4) 19 11/16"x3 9/16"x13/16" (20x90x500)

OWNER'S MANUAL - PARTS IDENTIFICATION


HARDWARE COMPONENTS

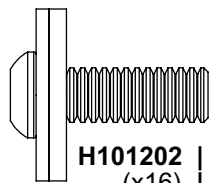


H101202 | TORX PAN HEAD
(x16) | 1/4-20x3/4 ASSY

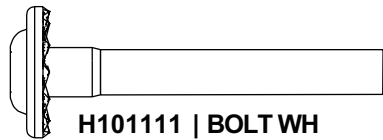


H101111 | BOLT WH
(x12) | 1/4 X 1 3/4 BLK LT

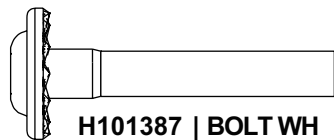


H101387 | BOLT WH
(x24) | 1/4 X 1 1/2 BLK LT

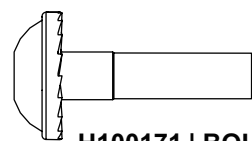


H100171 | BOLT WH
(x2) | 1/4x1 BLK

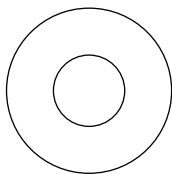


H100770 | WASHER FLAT
(x2) | 9.5 X 22




H100147 | TORX BIT
(x1) | T-30




H101100 | MAGNETIC DRIVER
(x1) |

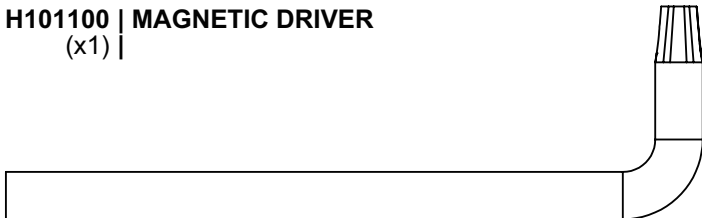

H100114 | TORX BIT
(x1) | T-30

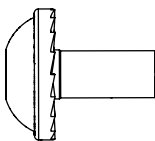

H100401 | NUT BARREL WH
(x1) | 1/4 X 1/2 BLK

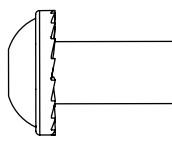


H100404 | NUT BARREL WH
(x1) | 1/4 X 5/8 BLK

PRE-ASSEMBLY STEP 1 - SORTING PARTS

It is critical for ease of assembly that you take the time to sort and organize the parts and hardware.

COMPOSITE PARTS:


- Organize wood parts by the three-digit, alpha-numeric number stamped on each board (ex. W01).
- If there are multiple boards with the same stamped number, stack those pieces together.
- Stamps can be found on the flat surface of the boards or on the end of the boards.
- Allow yourself plenty of room - the wood pieces can take up a significant amount of space.

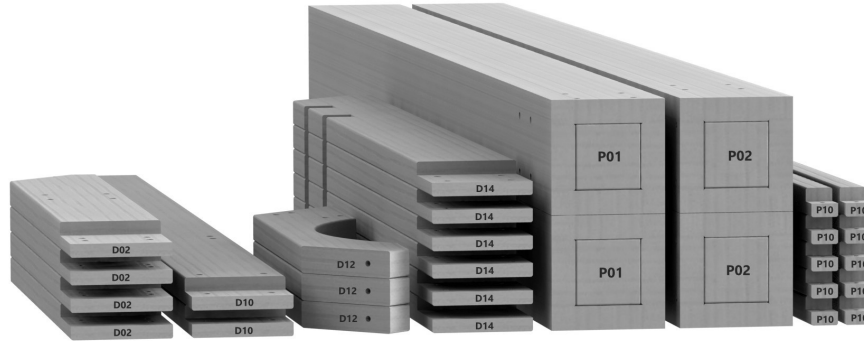

NOTE: CARTONS ARE NOT ORGANIZED BY BOARD OR STEP NUMBER.

METAL PARTS:


- Organize metal parts by the three-digit, alpha-numeric number stamped on each bag (ex. A01).
- If there are multiple parts with the same stamped number, stack those pieces together.
- Stamps can be found on the flat surface of the parts or on the end of the parts.
- Allow yourself plenty of room - the parts can take up a significant amount of space.

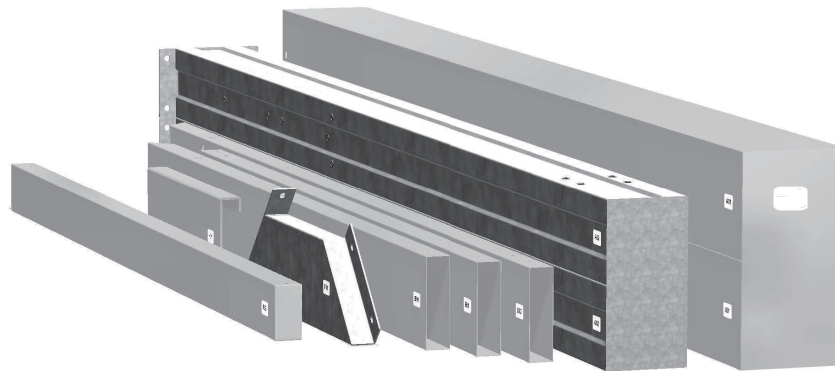

NOTE: CARTONS ARE NOT ORGANIZED BY PART OR STEP NUMBER.

HARDWARE PARTS:

- We recommend that you have a separate table to organize the hardware.
- Hardware bags are printed with a seven-digit, alpha-numeric part number.
- You can organize your hardware by part number or group by hardware type (e.g. bolts, nuts, etc.).
- During assembly you only need to reference the last four digits of the number.

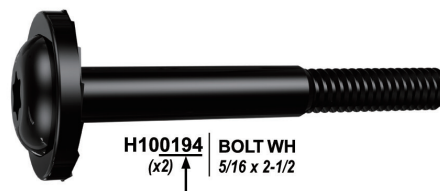

PRE-ASSEMBLY STEP 2 - TOOLS REQUIRED



Cordless Drill or
Electric Drill



Drill Attachments:
Phillips Head



1/8", 3/16", 3/8" &
7/16" Drill Bits



Phillips Screw Driver




Open End Wrench
7/16"




3/8" Drive Ratchet, 1/2" &
7/16" STD Sockets 1/2" & 7/16"
Deep Sockets




Claw Hammer

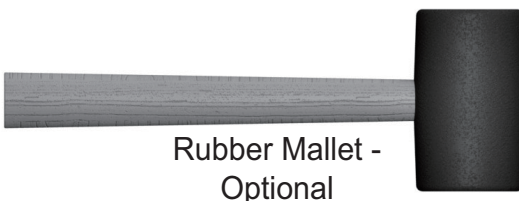

Rubber Mallet -
Optional

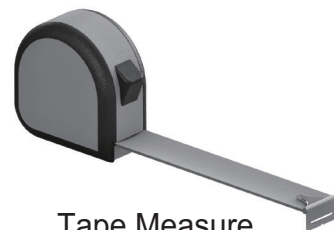

Tape Measure

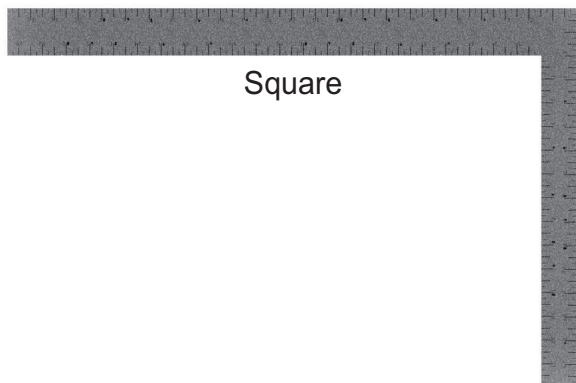

Square



Level 24"

PRE-ASSEMBLY STEP 3 - CHOOSE YOUR ASSEMBLY METHOD

There are several types of assembly instructions available to you.


1. Printed Assembly Manual included with your set
2. BILT APP - 3D interactive instructions
3. Combination of the Printed Manual and BILT APP (Note: Step numbers can differ between the two methods)



Scan for easy 3D instructions

Download the BILT app
before you begin



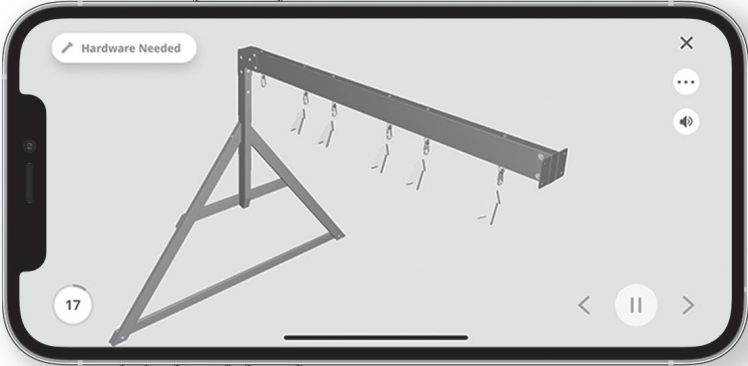


STEP 1 - MONKEY BARS

Qty	PartNo	Description
8	H101111	BOLT WH 1/4x3/4 BLK
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




MB01 MONKEY BAR RAIL ASSEMBLY - A4M04819
(x1) 61 3/4"x3 3/8"x3 1/4" (83x87x1569)




A4M00616 METAL RUNG 547
(x4)



MB02 MONKEY BAR RAIL ASSEMBLY - A4M04822
(x1) 61 3/4"x3 3/8"x3 1/4" (83x87x1569)



A4M00614 TRIANGLE PLATE 100° 5 HOLE
(x2)

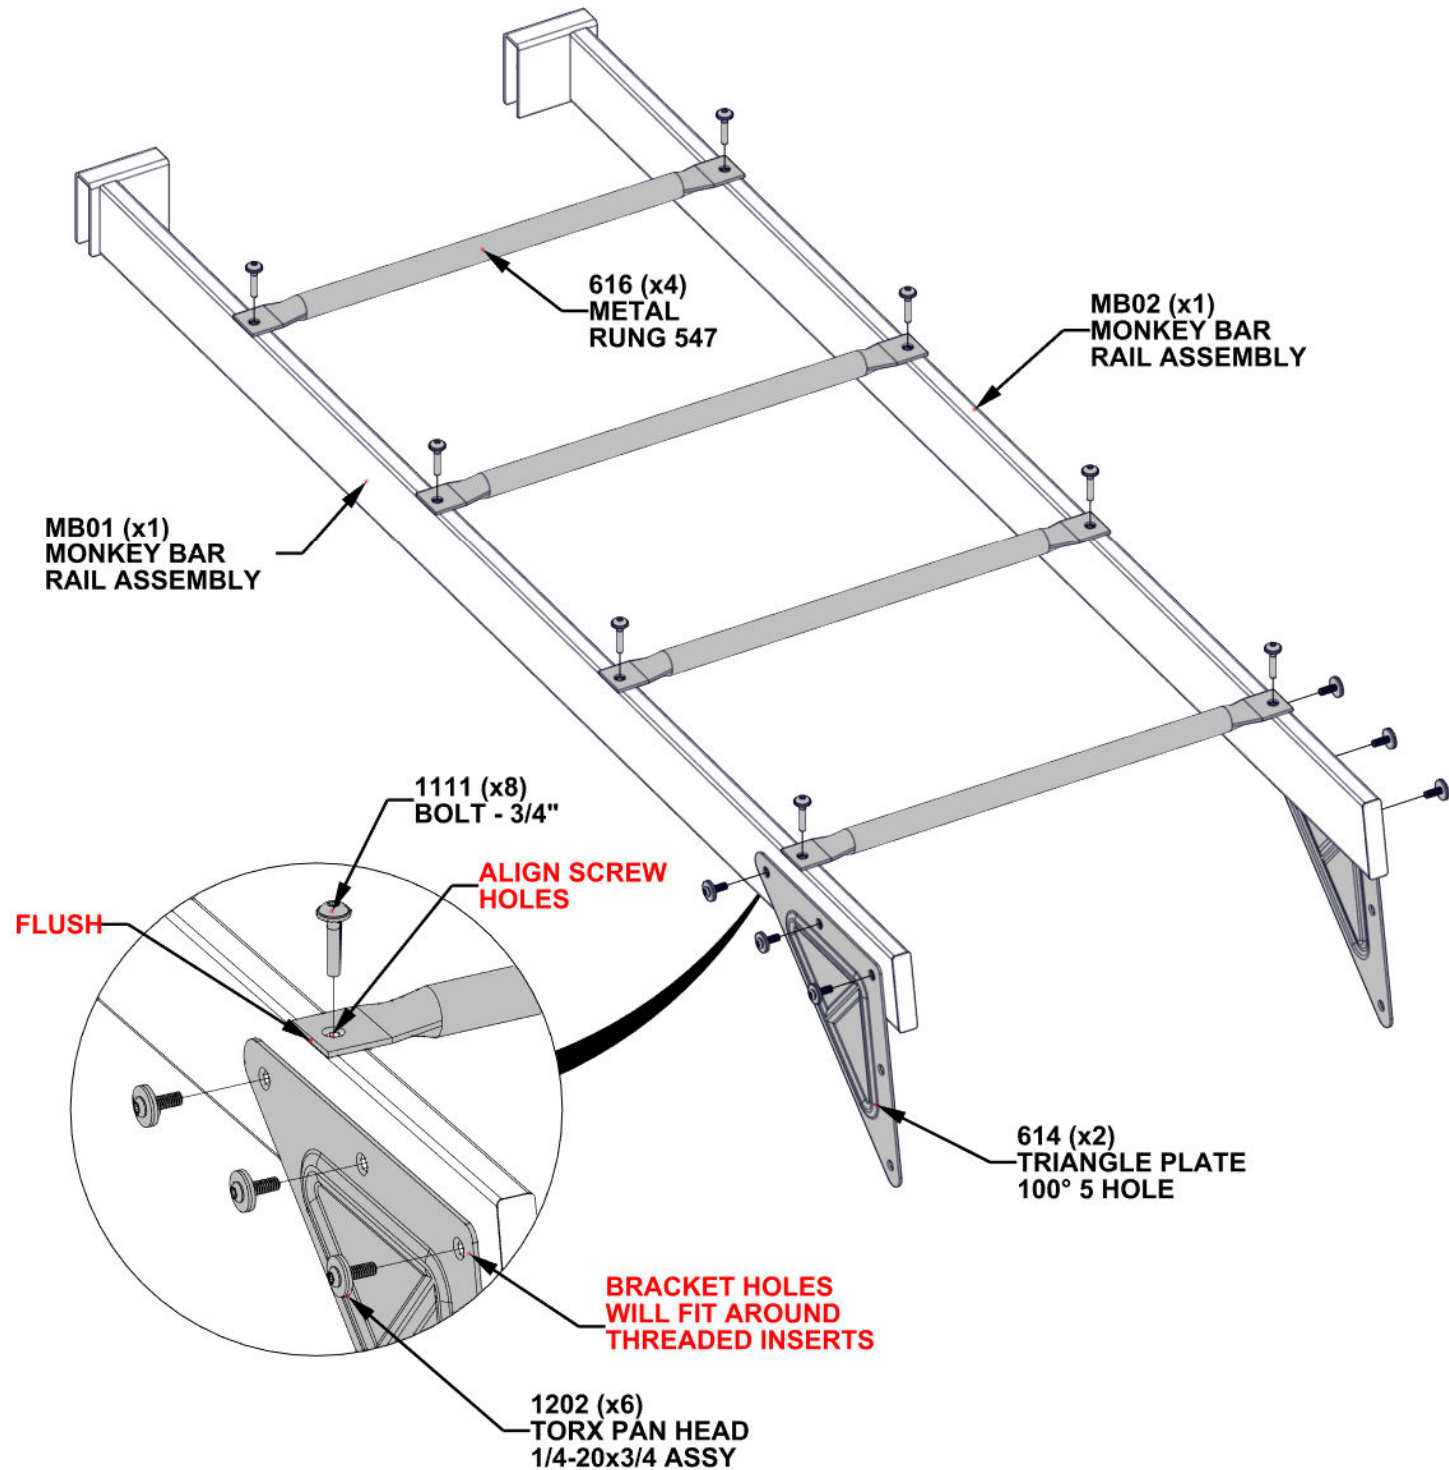

STEP 2 - MONKEY BARS


Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY



MB03 MONKEY BAR UPRIGHT ASSEMBLY - A4M04823
(x1) 82 7/8"x3 1/8"x2 3/8" (61x80x2104)



MB06 MONKEY BAR UPRIGHT ASSEMBLY - A4M04828
(x1) 82 7/8"x3 1/8"x2 3/8" (61x80x2104)

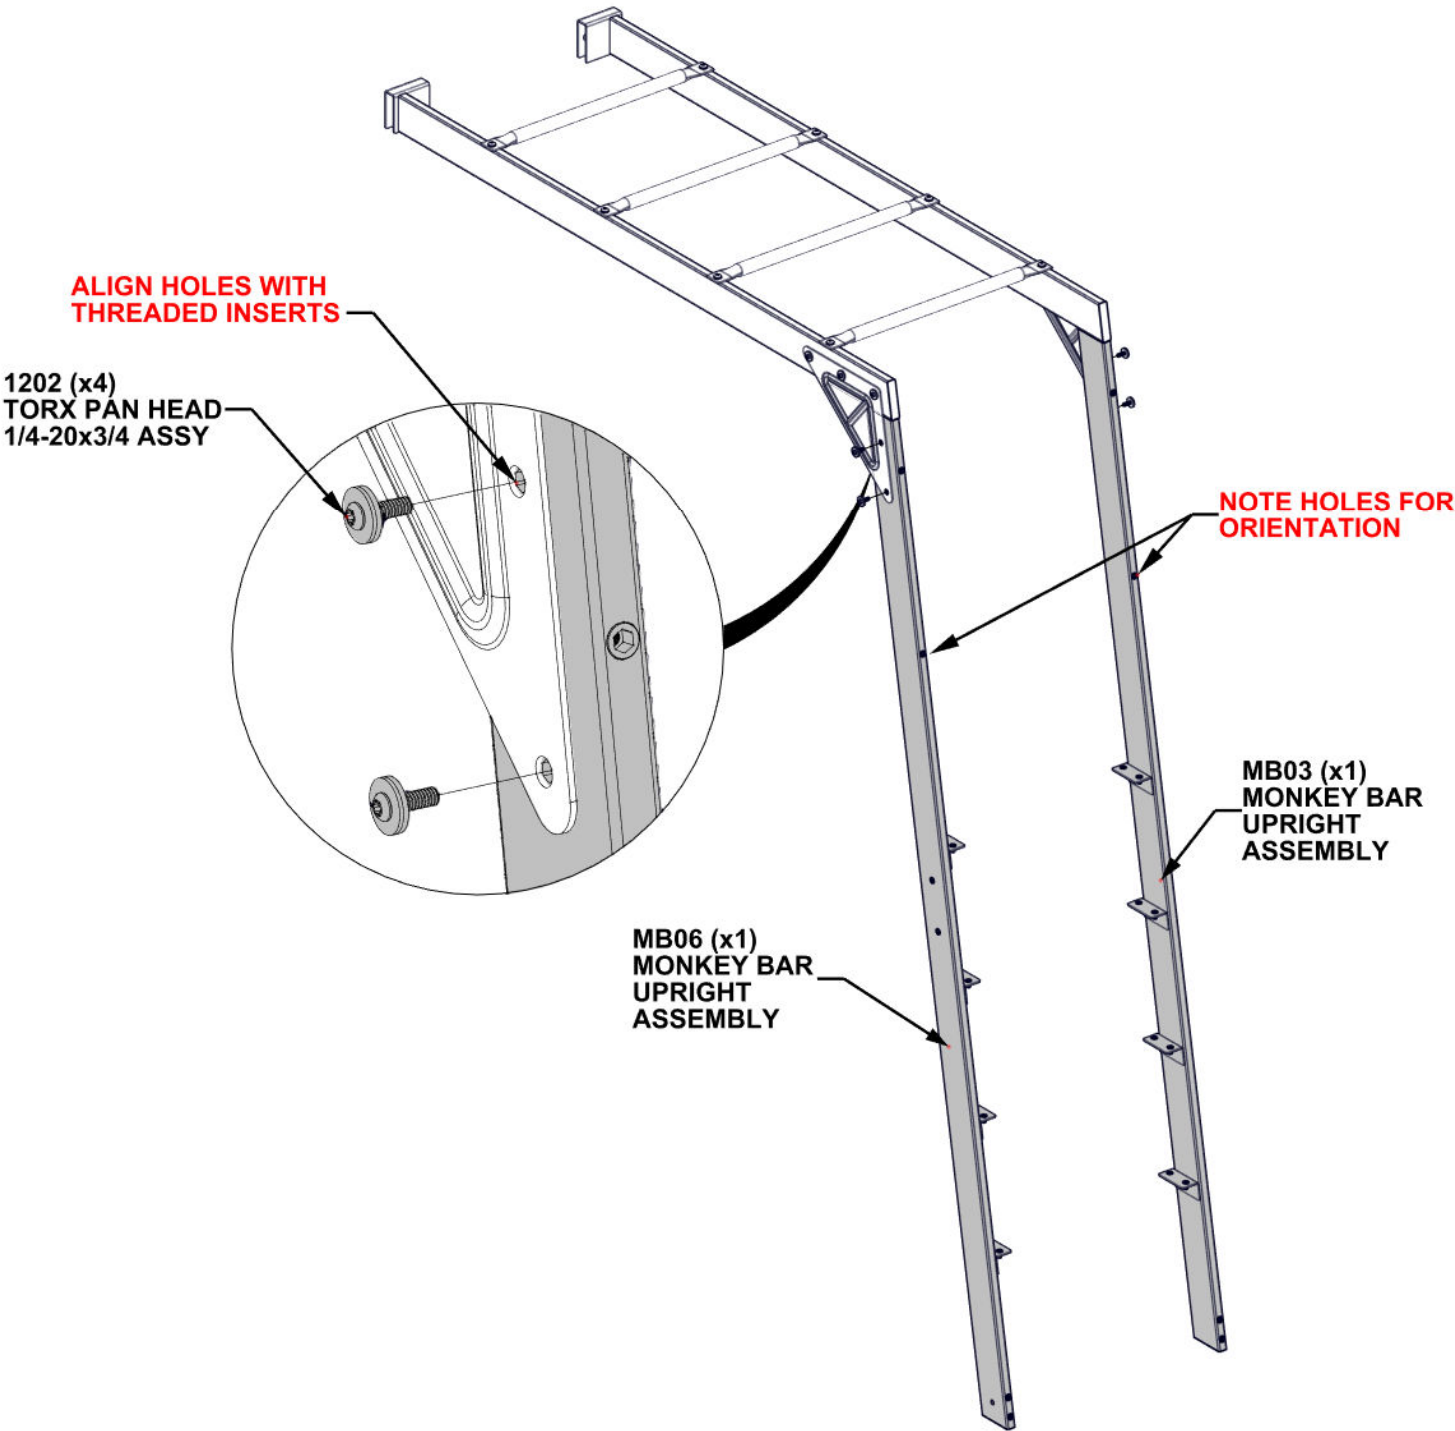


STEP 3 - MONKEY BARS


Qty	PartNo	Description
8	H101387	BOLT WH 1/4x1 1/2 BLK LT
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY



MB04 MONKEY BAR GROUND TUBE ASSEMBLY - A4M04824
(x1) 70 3/8"x3 1/8"x3/4" (20x80x1786)




MB05 MONKEY BAR BRACE ASSEMBLY - A4M04826
(x1) 51 5/8"x13 5/8"x3" (77x346x1312)



MB07 MONKEY BAR BRACE ASSEMBLY - A4M04829
(x1) 51 5/8"x3 1/8"x3" (77x80x1311)

- HAND TIGHTEN ONLY.

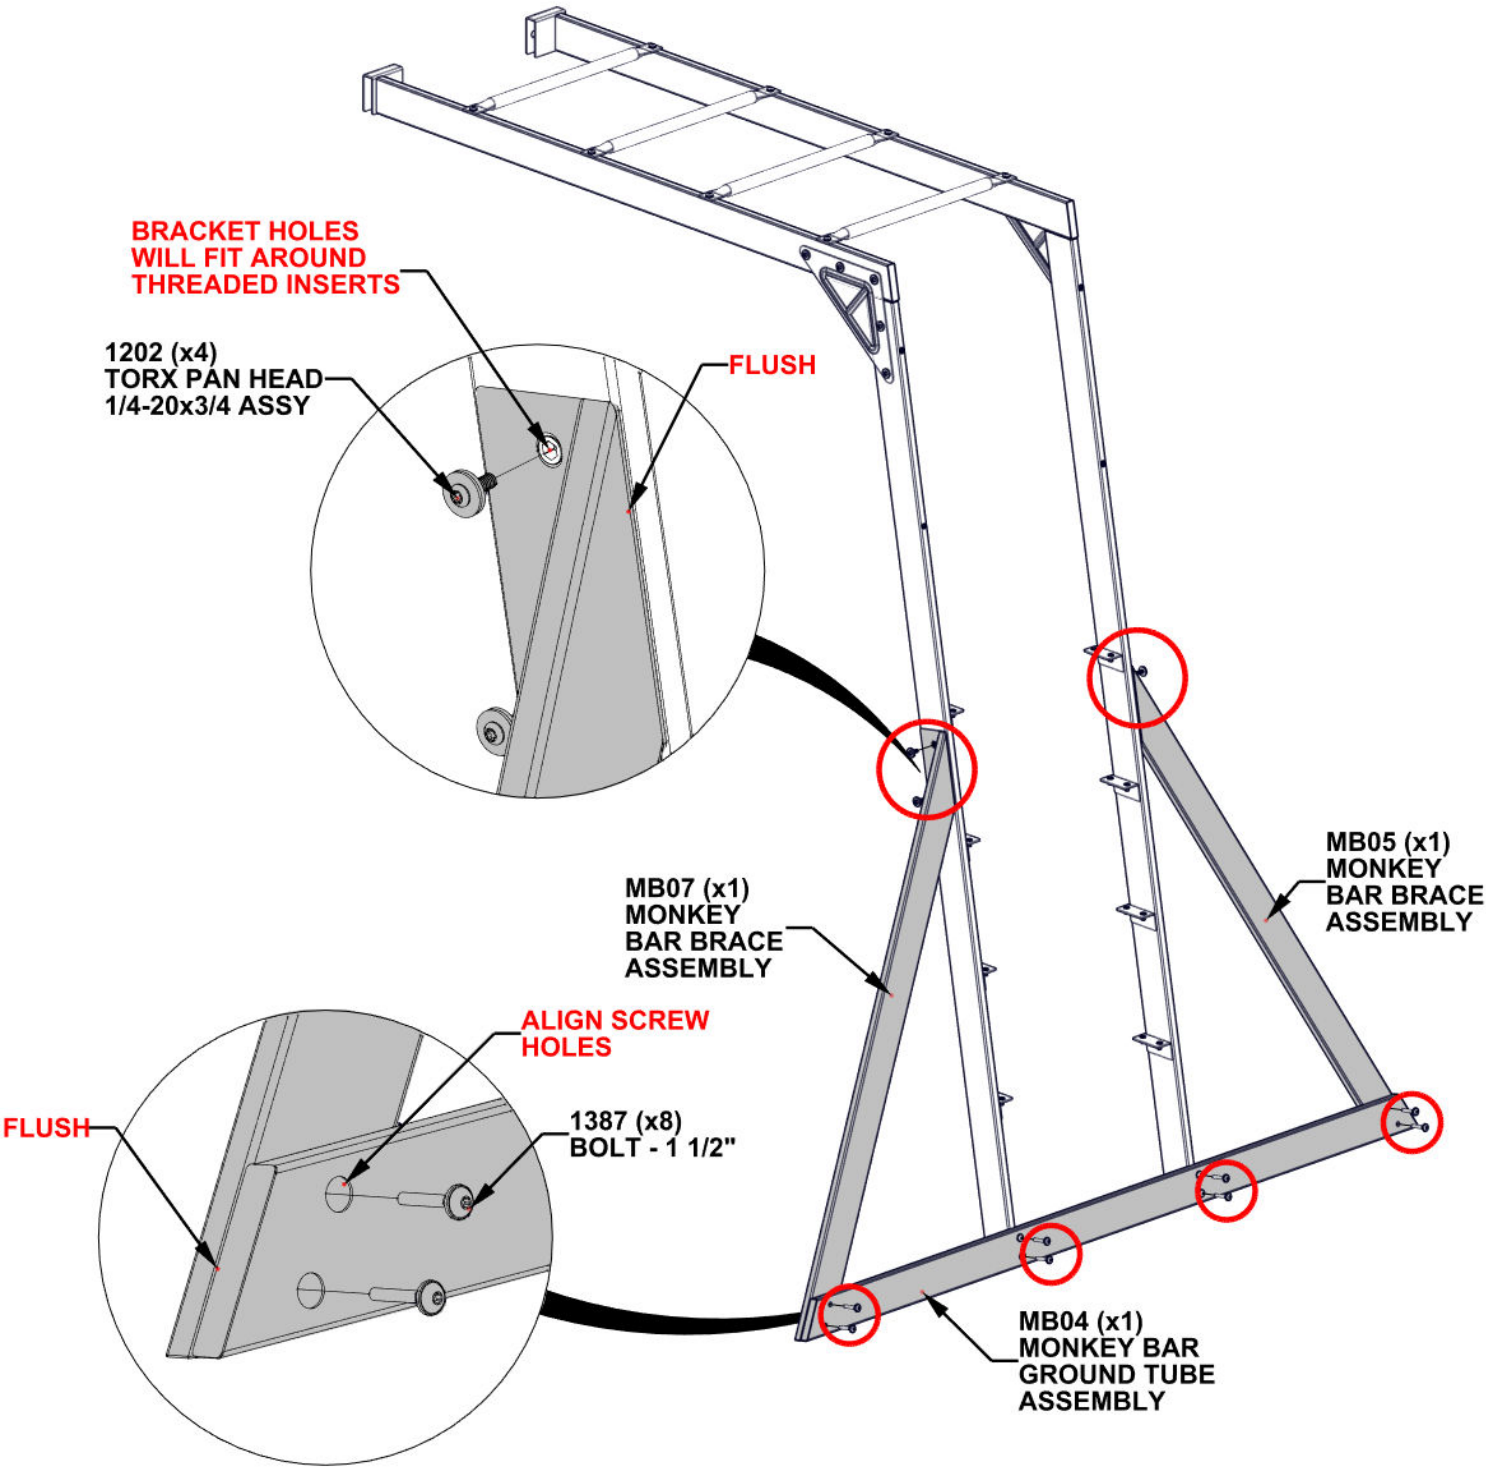


STEP 4 - MONKEY BARS

Qty	PartNo	Description
16	H101387	BOLT WH 1/4x1 1/2 BLK LT



W15 LADDER BOARD - A5C00051
(x4) 19 11/16"x3 9/16"x13/16" (20x90x500)

- ALIGN SCREW HOLES AND TIGHTEN ALL HARDWARE.

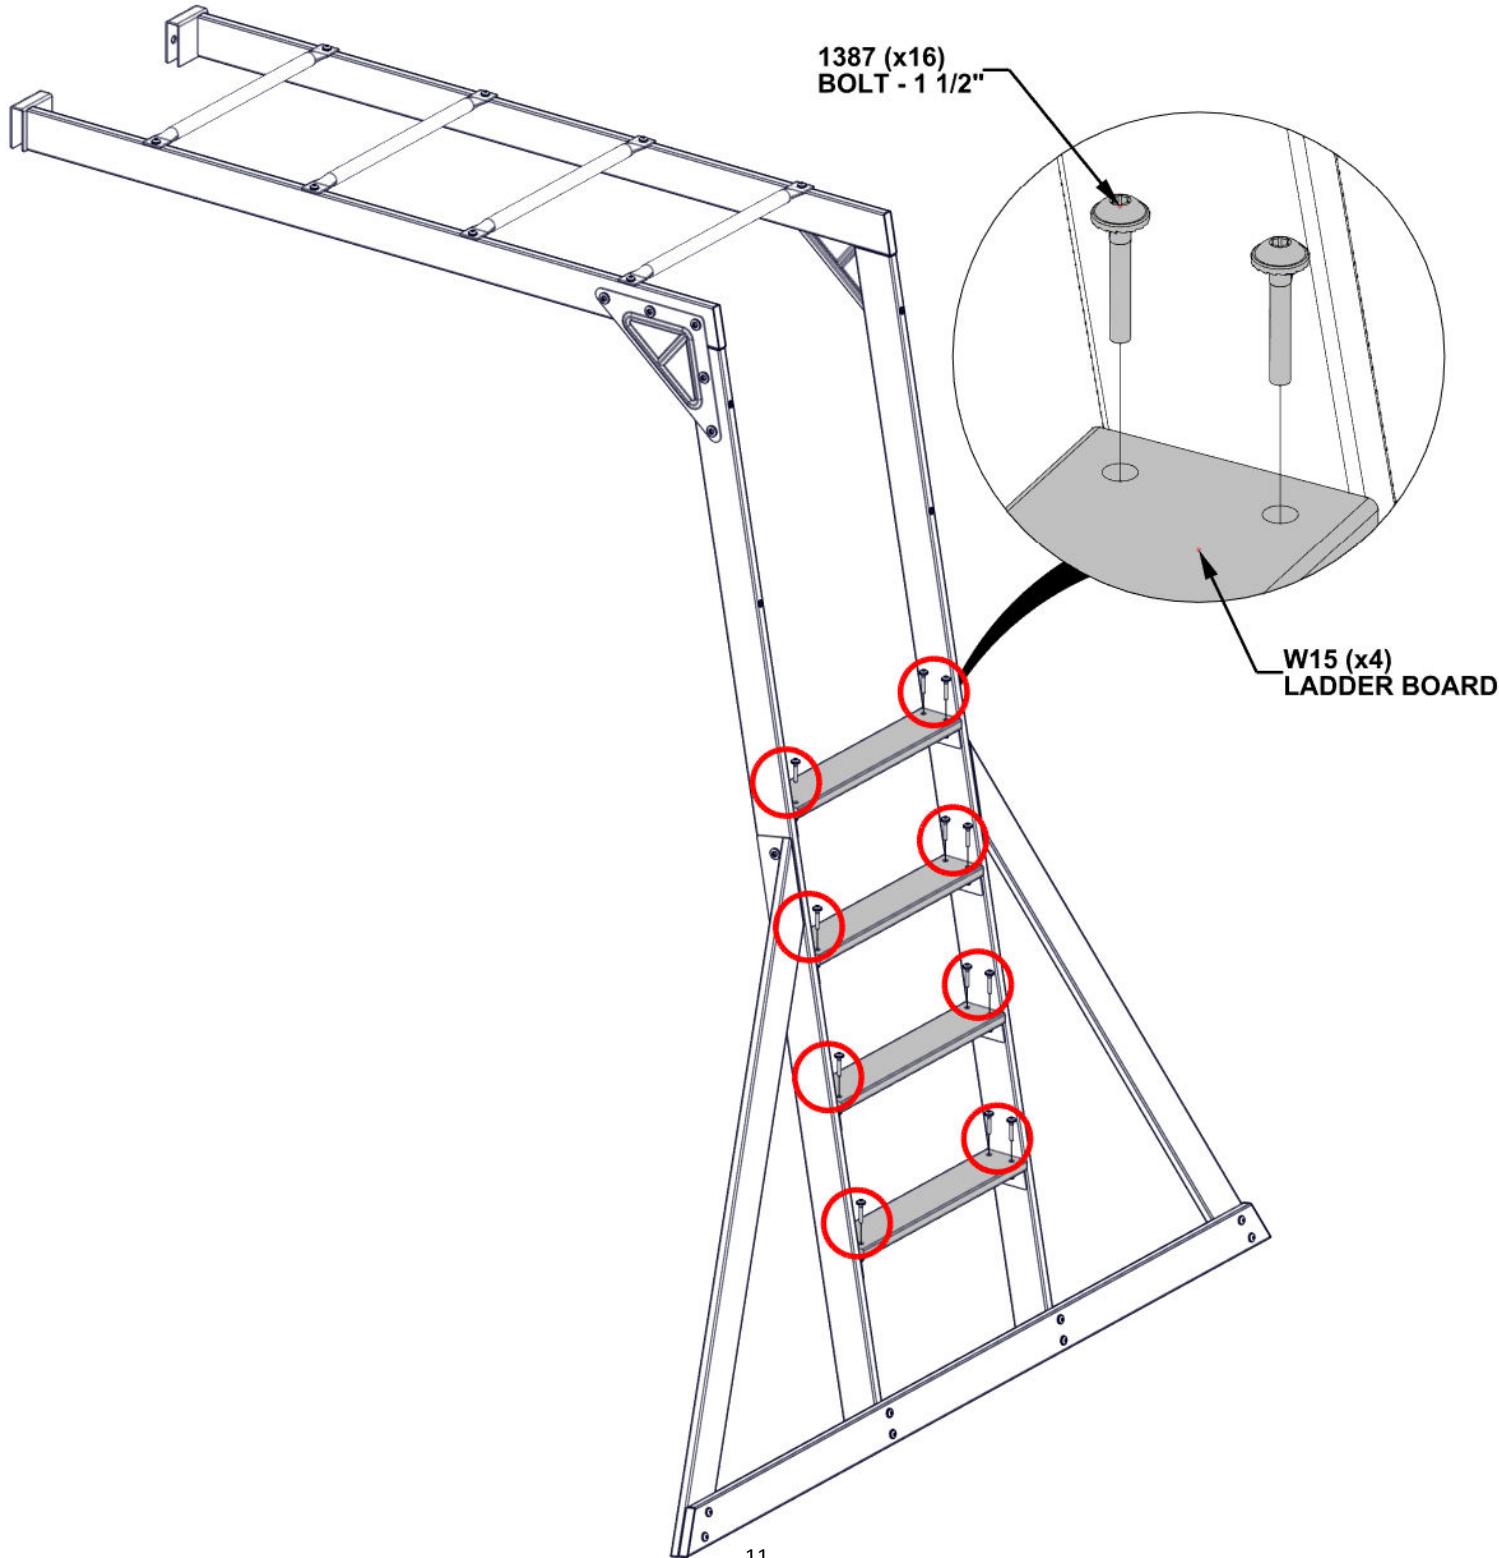


STEP 5 - MONKEY BARS

Qty	PartNo	Description
4	H101111	BOLT WH 1/4x3/4 BLK



A4M00613 HAND GRIP
(x2)

- ALIGN SCREW HOLES.

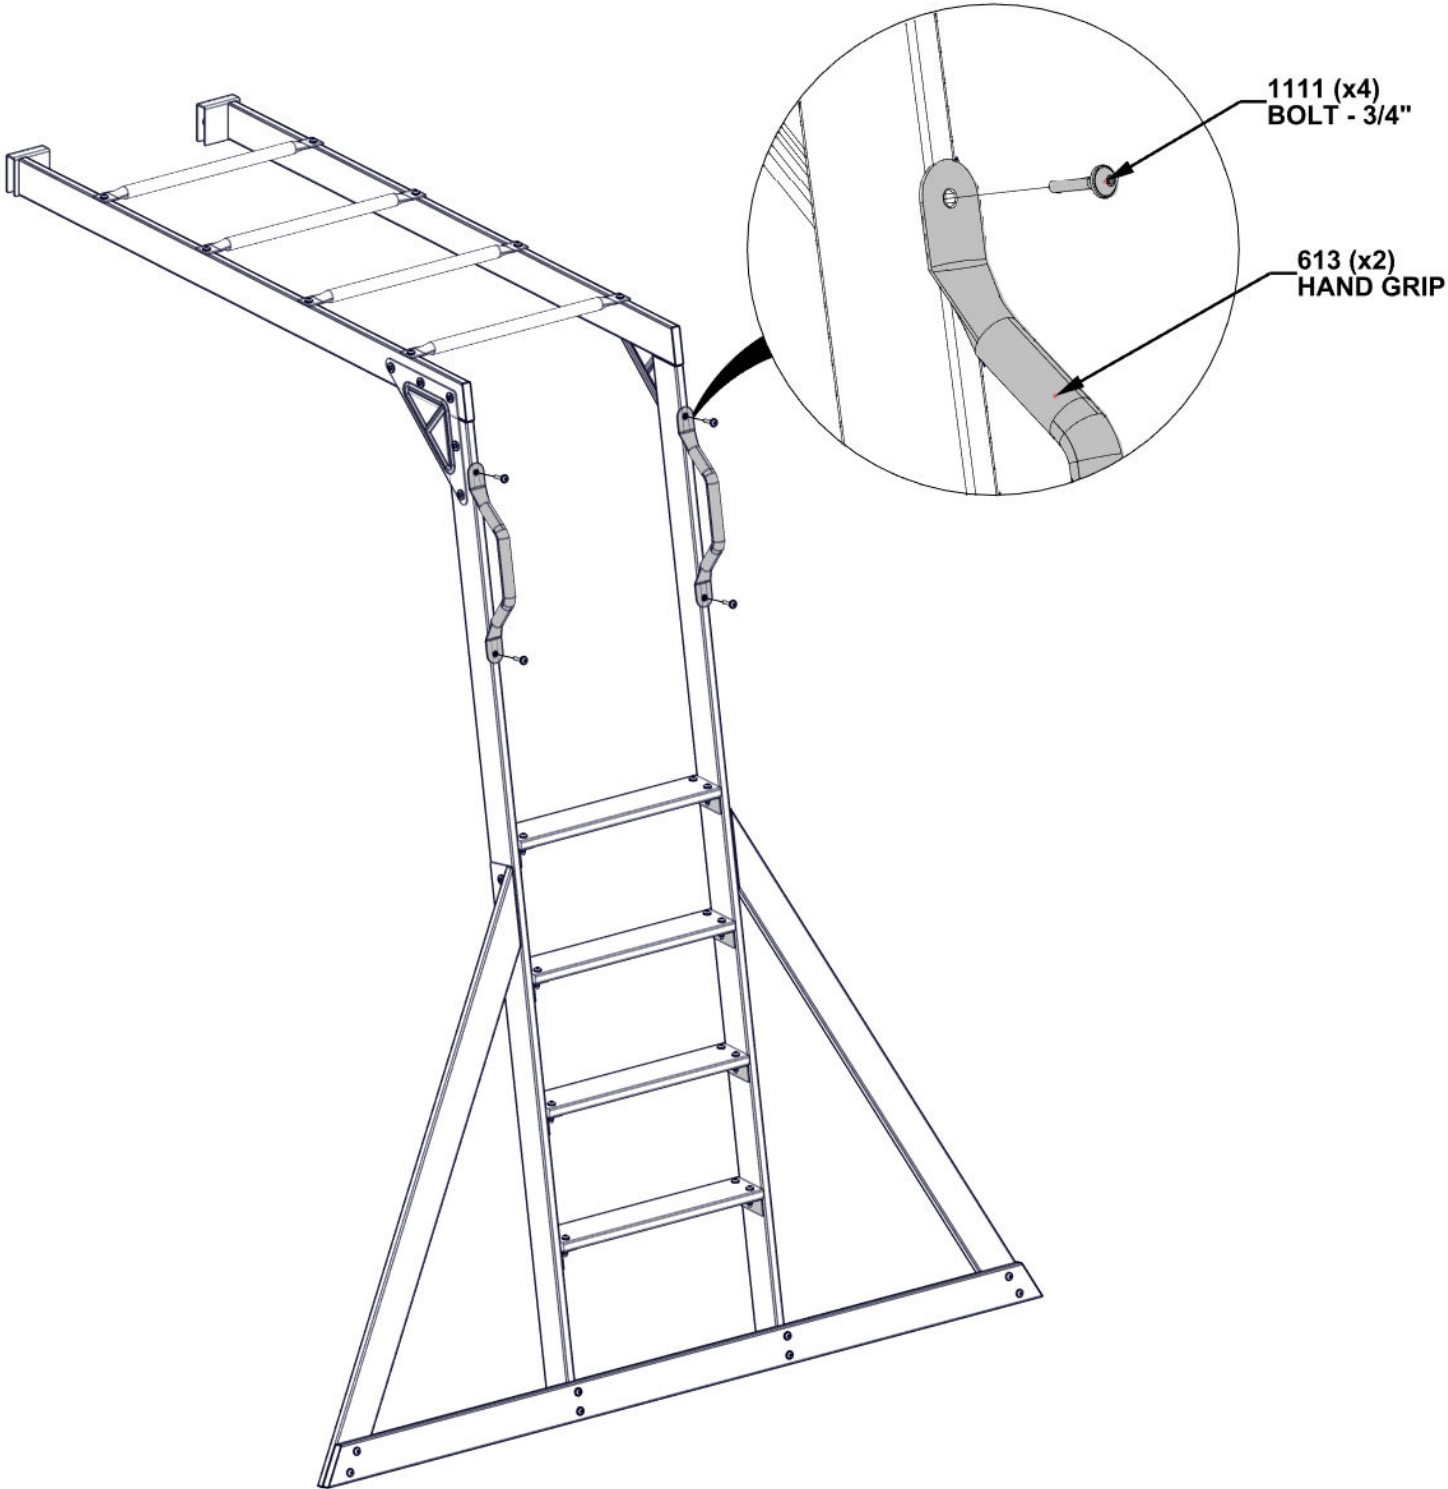

STEP 6 - MONKEY BARS

Qty	PartNo	Description
2	H100770	WASHER FLAT 9.5 X 22 BLK
2	H100171	BOLT WH 1/4 X 1 BLK



A4M02252 AUGER GROUND STAKE
(x2)

- TWIST GROUND STAKES INTO GROUND WHERE SHOWN.

