RANGE
OUTDOOR LIVING

Manufactured by:
Range Outdoor Living
3305 Airport Drive, Pittsburg, KS 66762
833-689-8428

Basepoint Business Centre: Rivermead Drive,Westlea, Swindon SN5 7EX Phone: 0800-118-2476
J.P. Coenstraat 7, The Bridge, The Hague, 2595 WP, Netherlands Phone: 08005678990

AVERY L-SHAPE OUTDOOR KITCHEN

MODEL #: SEE VARIANTS ON PAGE 2

USE THIS ASSEMBLY INSTRUCTION IF WANTING TO CONFIGURE YOUR APPLIANCE ON THE RIGHT

⚠ WARNING
Cancer and Reproductive Harm
www.P65Warnings.ca.gov



Please visit www.rangeoutdoorliving.com
For the most up to date assembly manual, to register your product, or to order replacement parts *Para obtener instrucciones en español, visite www.rangeoutdoorliving.com*

BILT®
EASY STEP-BY-STEP
3D INTERACTIVE INSTRUCTIONS
DOWNLOAD THE FREE APP
Download on the App Store

BEFORE YOU BEGIN THE ASSEMBLY OF YOUR RANGE OUTDOOR LIVING OUTDOOR KITCHEN, PLEASE USE THE TABLE BELOW TO ENSURE YOU RECEIVED ALL COMPONENTS NEEDED FOR THE ITEM # YOU PURCHASED. IF YOU ARE MISSING ANY COMPONENTS PLEASE CONTACT OUR CUSTOMER SERVICE TEAM AT 1- 833-689-8428.

ITEM # ORDERED	NAME	COMPONENT LIST	
2601338	AVERY-LSHAPE-BLK-LLW-38GR	9260825	CABINET KIT-AVERY-LSHAPE
		9240025	OUTDOOR KITCHEN GRILL
		9240162	OUTDOOR KITCHEN FRIDGE-RIGHT OPEN
		9260955	LLW-COUNTERTOPKIT-AVERY-LSHAPE
		9260917	BLK-DOORKIT-AVERY-LSHAPE
2602038	AVERY-LSHAPE-WO-LLW-38GR	9260825	CABINET KIT-AVERY-LSHAPE
		9240025	OUTDOOR KITCHEN GRILL
		9240162	OUTDOOR KITCHEN FRIDGE-RIGHT OPEN
		9260955	LLW-COUNTERTOPKIT-AVERY-LSHAPE
		9260924	WO-DOORKIT-AVERY-LSHAPE
2602168	AVERY-LSHAPE-DW-LLW-38GR	9260825	CABINET KIT-AVERY-LSHAPE
		9240025	OUTDOOR KITCHEN GRILL
		9240162	OUTDOOR KITCHEN FRIDGE-RIGHT OPEN
		9260955	LLW-COUNTERTOPKIT-AVERY-LSHAPE
		9260931	DW-DOORKIT-AVERY-LSHAPE
2601956	AVERY-LSHAPE-BLK-CMG-38GR	9260825	CABINET KIT-AVERY-LSHAPE
		9240025	OUTDOOR KITCHEN GRILL
		9240162	OUTDOOR KITCHEN FRIDGE-RIGHT OPEN
		9260849	CMG-COUNTERTOPKIT-AVERY-LSHAPE
		9260917	BLK-DOORKIT-AVERY-LSHAPE
2602052	AVERY-LSHAPE-WO-CMG-38GR	9260825	CABINET KIT-AVERY-LSHAPE
		9240025	OUTDOOR KITCHEN GRILL
		9240162	OUTDOOR KITCHEN FRIDGE-RIGHT OPEN
		9260849	CMG-COUNTERTOPKIT-AVERY-LSHAPE
		9260924	WO-DOORKIT-AVERY-LSHAPE
2602182	AVERY-LSHAPE-DW-CMG-38GR	9260825	CABINET KIT-AVERY-LSHAPE
		9240025	OUTDOOR KITCHEN GRILL
		9240162	OUTDOOR KITCHEN FRIDGE-RIGHT OPEN
		9260849	CMG-COUNTERTOPKIT-AVERY-LSHAPE
		9260931	DW-DOORKIT-AVERY-LSHAPE
2601970	AVERY-LSHAPE-BLK-LLW-38GD	9260825	CABINET KIT-AVERY-LSHAPE
		9240742	38INCH OUTDOOR KITCHEN GRIDDLE
		9240162	OUTDOOR KITCHEN FRIDGE-RIGHT OPEN
		9260955	LLW-COUNTERTOPKIT-AVERY-LSHAPE
		9260917	BLK-DOORKIT-AVERY-LSHAPE
2602076	AVERY-LSHAPE-WO-LLW-38GD	9260825	CABINET KIT-AVERY-LSHAPE
		9240742	38INCH OUTDOOR KITCHEN GRIDDLE
		9240162	OUTDOOR KITCHEN FRIDGE-RIGHT OPEN
		9260955	LLW-COUNTERTOPKIT-AVERY-LSHAPE
		9260924	WO-DOORKIT-AVERY-LSHAPE
2602212	AVERY-LSHAPE-DW-LLW-38GD	9260825	CABINET KIT-AVERY-LSHAPE
		9240742	38INCH OUTDOOR KITCHEN GRIDDLE
		9240162	OUTDOOR KITCHEN FRIDGE-RIGHT OPEN
		9260955	LLW-COUNTERTOPKIT-AVERY-LSHAPE
		9260931	DW-DOORKIT-AVERY-LSHAPE
2601994	AVERY-LSHAPE-BLK-CMG-38GD	9260825	CABINET KIT-AVERY-LSHAPE
		9240742	38INCH OUTDOOR KITCHEN GRIDDLE
		9240162	OUTDOOR KITCHEN FRIDGE-RIGHT OPEN
		9260849	CMG-COUNTERTOPKIT-AVERY-LSHAPE
		9260917	BLK-DOORKIT-AVERY-LSHAPE
2602120	AVERY-LSHAPE-WO-CMG-38GD	9260825	CABINET KIT-AVERY-LSHAPE
		9240742	38INCH OUTDOOR KITCHEN GRIDDLE
		9240162	OUTDOOR KITCHEN FRIDGE-RIGHT OPEN
		9260849	CMG-COUNTERTOPKIT-AVERY-LSHAPE
		9260924	WO-DOORKIT-AVERY-LSHAPE
2602236	AVERY-LSHAPE-DW-CMG-38GD	9260825	CABINET KIT-AVERY-LSHAPE
		9240742	38INCH OUTDOOR KITCHEN GRIDDLE
		9240162	OUTDOOR KITCHEN FRIDGE-RIGHT OPEN
		9260849	CMG-COUNTERTOPKIT-AVERY-LSHAPE
		9260931	DW-DOORKIT-AVERY-LSHAPE

OWNER'S MANUAL - BASIC SETUP DIMENSIONS & ASSEMBLY NOTES


It is critically important that you start with square and level footings or concrete pad to attach your structure.

- **Pay close attention to the items needed for each step. Make sure you are using the correct hardware for each step. Using incorrect hardware may result in improper assembly**
- **Remember to double check for underground utilities and overhead electrical lines**


Post mounts are provided with your structure which allows you to permanently install your structure to a pre-existing or new wood or concrete surface. See Anchor Instructions for further details and recommendations.

- **The hardware to attach the post mounts to the structure is included.**
- **The hardware to mount the structure permanently to a concrete surface is included.**
- **The hardware to mount the structure permanently to a wood deck is NOT included and will need to be purchased separately. You must ensure there is ample structural support under the deck before permanently attaching.**


Imperial measurements rounded to the nearest 1/4".

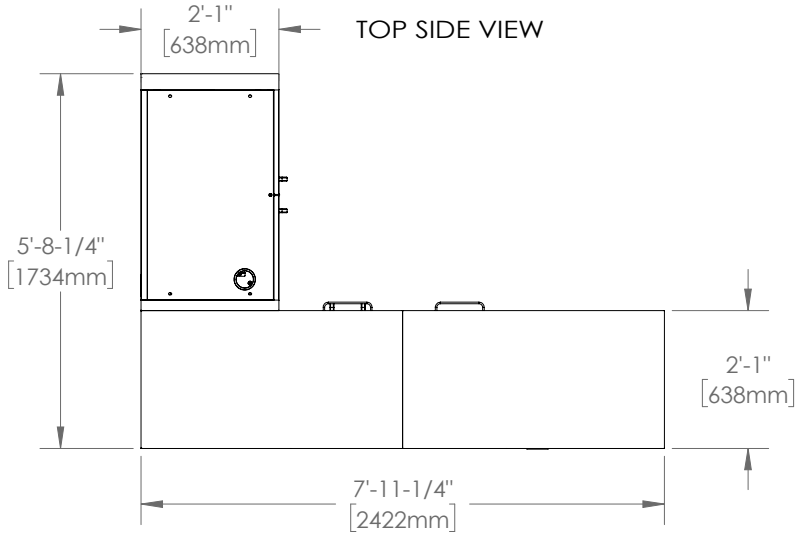

BACK SIDE VIEW

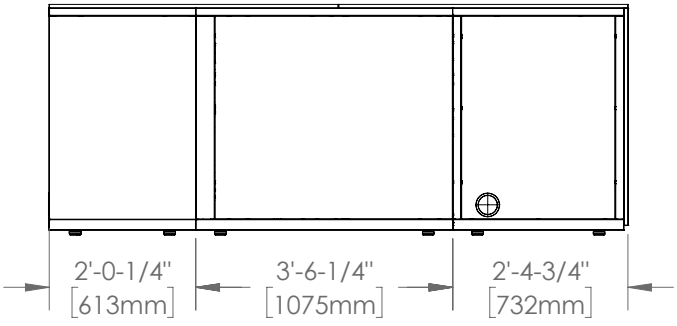


RIGHT SIDE VIEW

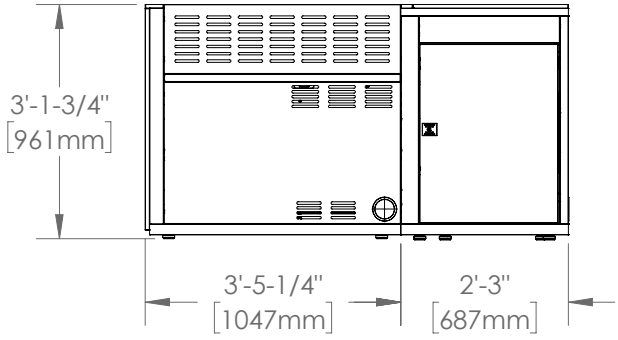


OWNER'S MANUAL - UTILITY LAYOUT

Imperial measurements rounded to the nearest 1/4".


TOP SIDE VIEW

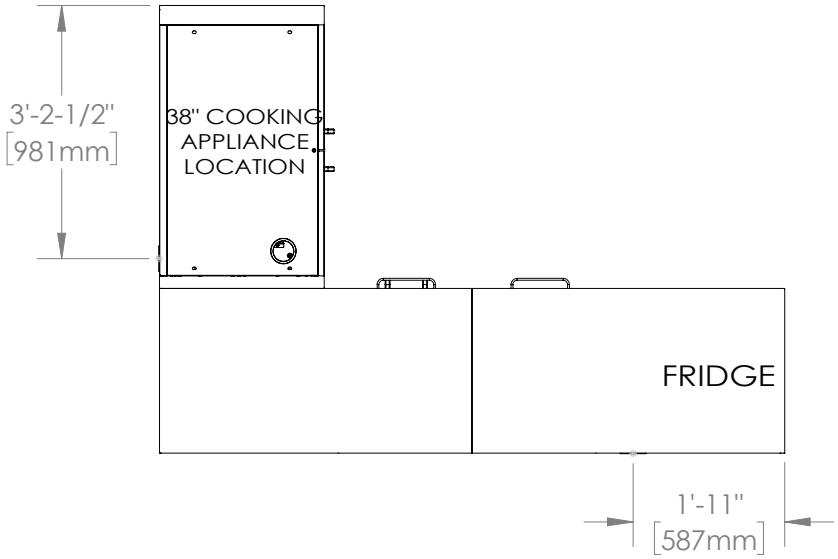

RIGHT SIDE VIEW

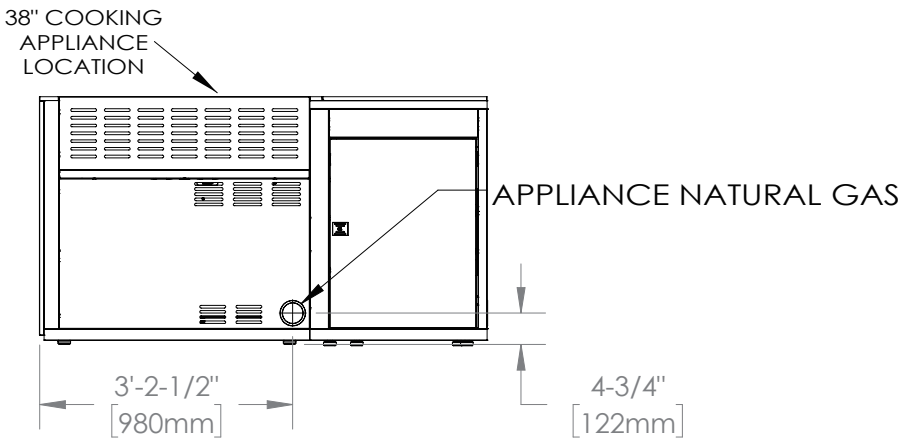


BACK SIDE VIEW

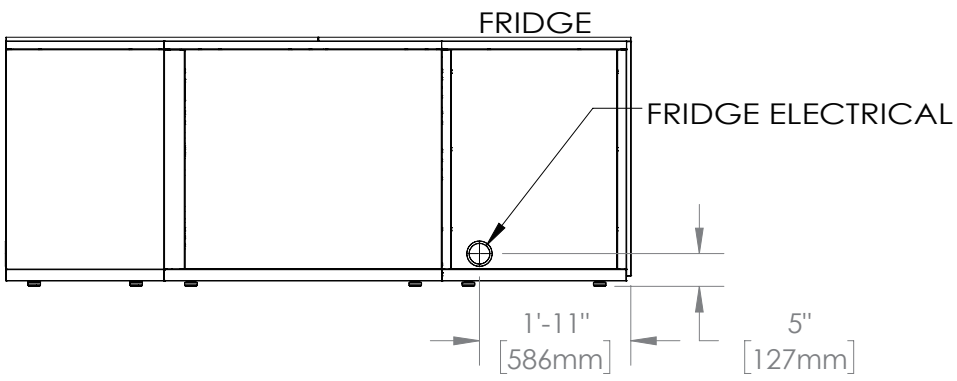


OWNER'S MANUAL - PARTS IDENTIFICATION


COMPONENTS (NOT TO SCALE)

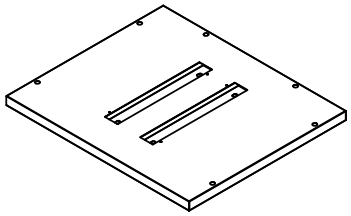


T1 TABLETOP PANEL ASSEMBLY-A4M07160
(x1) 1 1/4"x24 3/16"x28 1/8" (32x614x715)

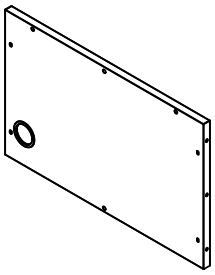


T2 TABLETOP PANEL ASSEMBLY-A4M07045
(x1) 1 1/4"x24 3/16"x38 1/4" (32x614x971)

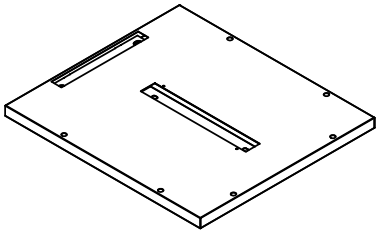


T4 TABLETOP PANEL ASSEMBLY-A4M06733
(x1) 1 1/4"x24 3/16"x27 1/16" (32x614x687)

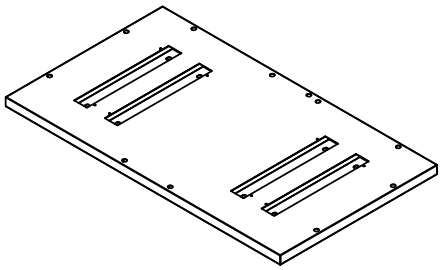


T5 TABLETOP PANEL ASSEMBLY-A4M06722
(x1) 1 1/4"x24 3/16"x42 5/16" (32x614x1074)

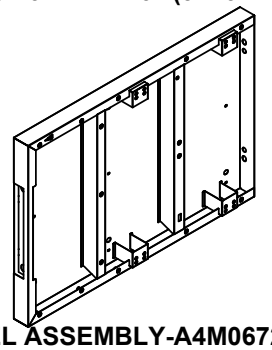


S2 SIDE PANEL ASSEMBLY-A4M06723
(x1) 2 3/4"x24 3/16"x34 13/16" (70x614x885)

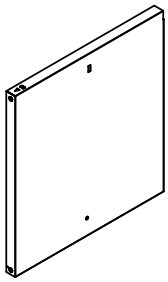


S3 SIDE PANEL ASSEMBLY-A4M06457
(x1) 1 3/8"x22 7/8"x24 1/8" (35x581x613)

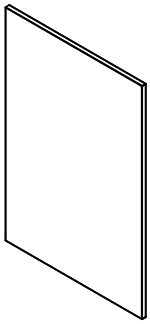


S13 SIDE TRIM PANEL ASSEMBLY-A4M07143
(x2) 11/16"x24 3/16"x35 13/16" (18x614x909)

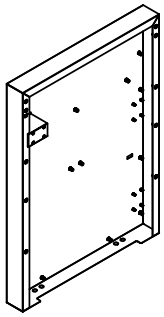

S7 SIDE PANEL ASSEMBLY-A4M06725
(x1) 2 7/8"x24 3/16"x33 9/16" (73x614x852)

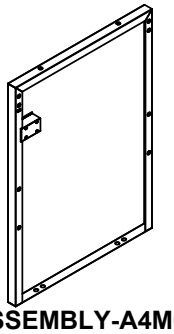


S8 BACK PANEL ASSEMBLY-A4M06735
(x1) 1 1/2"x24 3/16"x33 9/16" (38.3x614x852)

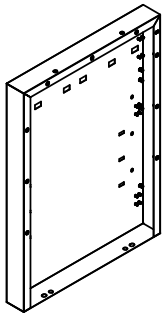


S9 SIDE PANEL ASSEMBLY-A4M06721
(x1) 3 1/16"x24 3/16"x33 9/16" (78x614x852)

OWNER'S MANUAL - PARTS IDENTIFICATION


COMPONENTS (NOT TO SCALE)

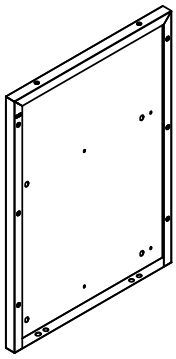


S12 SIDE PANEL ASSEMBLY-A4M06726
(x1) 1 3/8"x24 3/16"x33 9/16" (35x614x852)

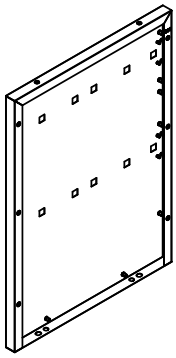


S11 SIDE PANEL ASSEMBLY-A4M06727
(x1) 1 3/8"x24 3/16"x33 9/16" (35x614x852)

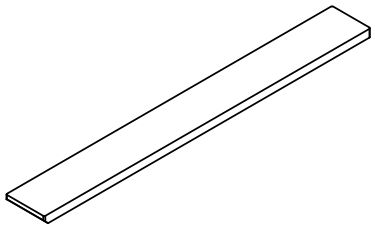


M1 COUNTERTOP-A4M07154
(x1) 1 5/16"x2 15/16"x25 1/8" (33x75x638)

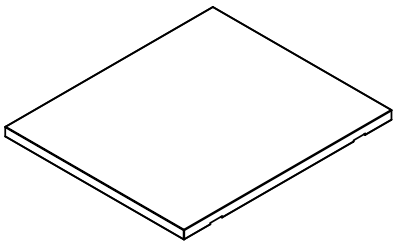


L1 SHELF-A4M06441
(x1) 1"x20 11/16"x24" (25x525x610)

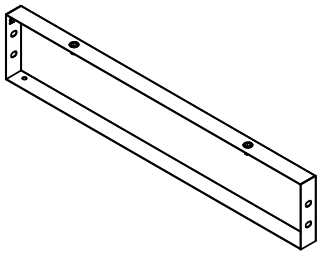


H2 BEAM ASSEMBLY-A4M06734
(x1) 1 3/16"x4 5/16"x22 11/16" (30x110x577)

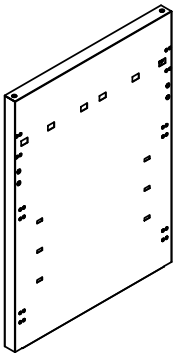


S10 SIDE PANEL ASSEMBLY-A4M06736
(x1) 1 5/8"x24 1/8"x33 1/2" (41x613x851)

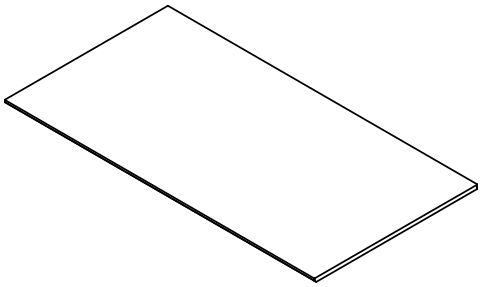


M3 COUNTERTOP-A4M06742
(x2) 1 5/16"x25 1/8"x47 11/16" (33x638x1211)

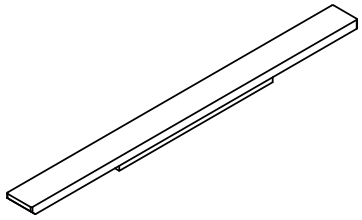

M2 COUNTERTOP-A4M06741
(x1) 1 5/16"x1 15/16"x25 1/8" (33x49x638)

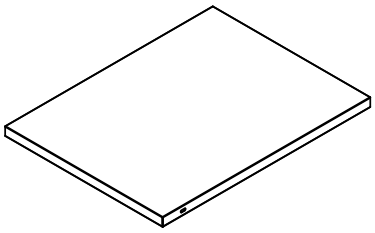


L3 SHELF-A4M06740
(x1) 1"x18 1/4"x24" (25x463x610)

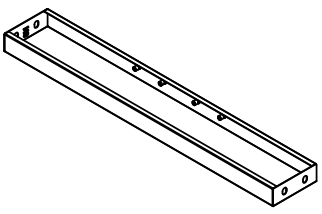


H6 BEAM ASSEMBLY-A4M06196
(x1) 1 3/16"x3 3/8"x20 11/16" (30x85x526)

OWNER'S MANUAL - PARTS IDENTIFICATION


COMPONENTS (NOT TO SCALE)

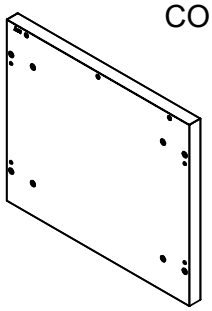


F7 FLOOR PANEL ASSEMBLY-A4M06455
(x1) 2 5/8"x24 3/16"x28 1/8" (66x614x715)

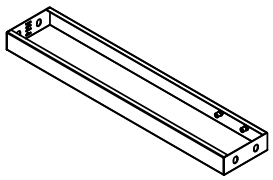


H11 BEAM ASSEMBLY-A4M06199
(x1) 1 3/16"x3 3/8"x16 3/4" (30x85x426)

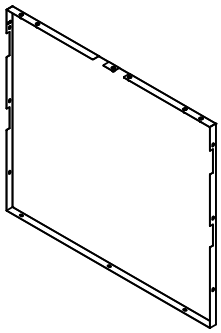


G4 BACK PANEL ASSEMBLY-A4M06732
(x1) 1 3/16"x33 1/2"x39 3/16" (30x851x995)

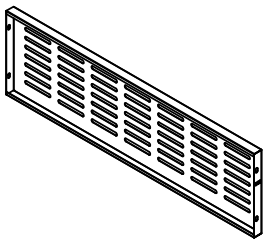


G11 VENTILATION PANEL-A4M03056
(x1) 1 3/16"x11 3/16"x38 3/16" (30x284x970)

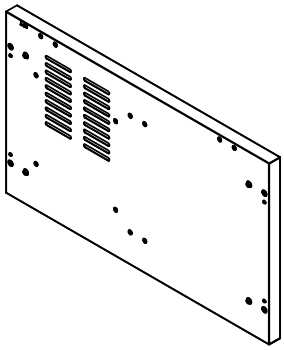


F3 FLOOR PANEL ASSEMBLY-A4M06737
(x1) 2 5/8"x24 3/16"x40 1/2" (66x614x1029)

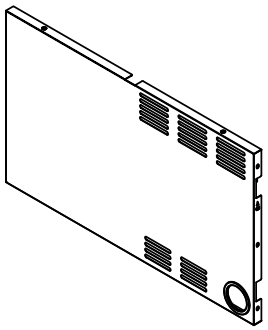


G3 BACK PANEL ASSEMBLY-A4M06719
(x1) 1 3/16"x22 7/8"x38 3/16" (30x581x970)

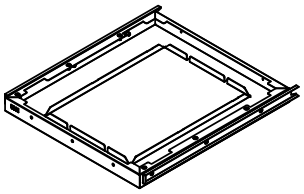


H12 TRASH CAN BRACKET ASSEMBLY-A4M06454
(x1) 1 3/8"x16 1/4"x18 1/16" (35x412.1x458)

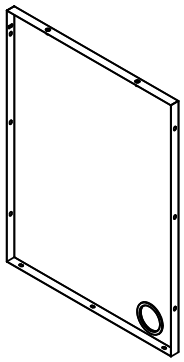

G5 BACK PANEL ASSEMBLY-A4M06751
(x1) 1 3/16"x25 5/16"x33 1/2" (30x643x851)

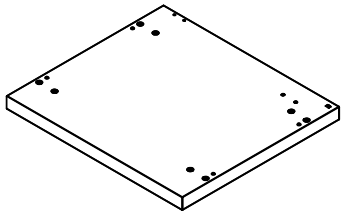


F2 FLOOR PANEL ASSEMBLY-A4M06728
(x1) 2 5/8"x24 3/16"x27 1/16" (66x614x687)

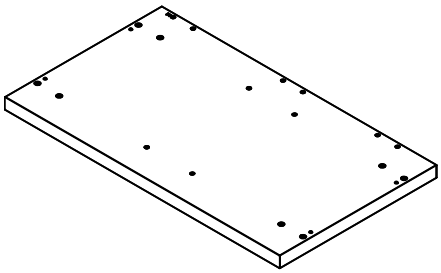


F4 FLOOR PANEL ASSEMBLY-A4M06729
(x1) 2 5/8"x24 3/16"x42 5/16" (66x614x1075)

OWNER'S MANUAL - PARTS IDENTIFICATION


COMPONENTS (NOT TO SCALE)

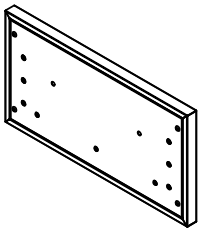


D1 DRAWER PANEL ASSEMBLY-A4M07144
(x1) 15/16"x9 5/8"x18 1/4" (24x245x463)

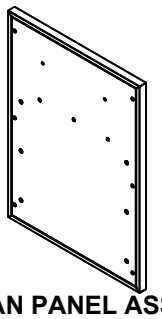


D2 TRASH CAN PANEL ASSEMBLY-A4M07145
(x1) 15/16"x18 1/4"x24 13/16" (24x463x630)

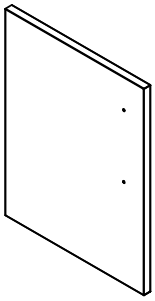


D11 DOOR PANEL ASSEMBLY L-A4M07613
(x1) 15/16"x19 3/16"x24 13/16" (24x488x630)

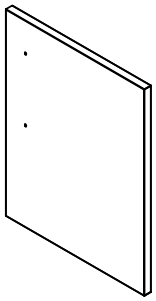


D12 DOOR PANEL ASSEMBLY R-A4M07614
(x1) 15/16"x19 3/16"x24 13/16" (24x488x630)

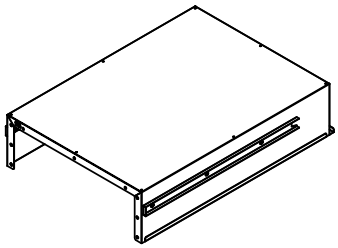


D5 DRAWER BODY ASSEMBLY-A4M06434
(x1) 5 1/8"x16 3/16"x21 3/4" (130x410.7x552)




D6 LEFT DOOR ASSEMBLY-A4M07162
(x1) 15/16"x11"x24 13/16" (24x279.5x630)




D7 RIGHT DOOR ASSEMBLY-A4M07164
(x1) 15/16"x11"x24 13/16" (24x279.5x630)

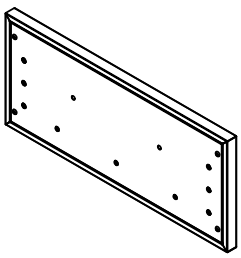

D8 DRAWER PANEL ASSEMBLY-A4M07161
(x1) 15/16"x9 5/8"x22 3/16" (24x245x564)

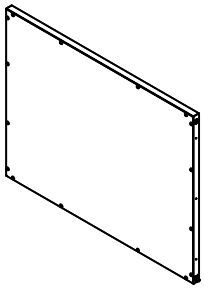


D9 DOOR ASSEMBLY-A4M06720
(x1) 15/16"x22 5/16"x29 5/8" (23.2x567x753.2)

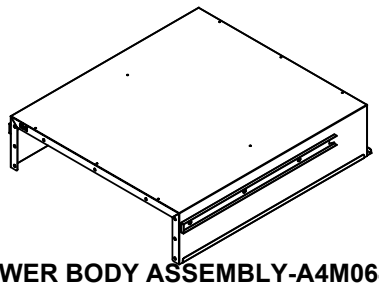


D10 DRAWER BODY ASSEMBLY-A4M06458
(x1) 5 1/8"x20 1/8"x22 1/4" (130x511.2x565.4)

OWNER'S MANUAL - PARTS IDENTIFICATION

COMPONENTS (NOT TO SCALE)

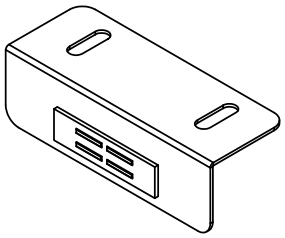


A2 MAGNET BRACKET-A4M03026
(x4) 1"x1 1/4"x3 1/8" (25x31x80)




A3 SPLICE BRACKET ASSEMBLY-A4M06738
(x1) 1 3/16"x4 3/16"x13 3/16" (30x107x335)




A4 SPLICE BRACKET-A4M06739
(x1) 1 3/16"x1 3/16"x23 5/8" (30x30x600)

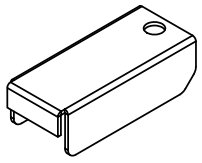


A5 SHELF BRACKET-A4M03141
(x6) 5/8"x7/8"x2 1/16" (16x22x53)

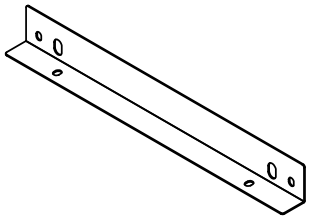


A6 ANGLED BRACKET-A4M03053
(x2) 1 3/8"x1 15/16"x17 1/8" (35x50x435)

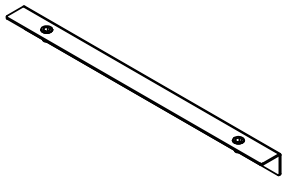


A7 SPLICE BRACKET ASSEMBLY-A4M07153
(x1) 1 3/16"x1 3/16"x15 3/4" (30x30x400)

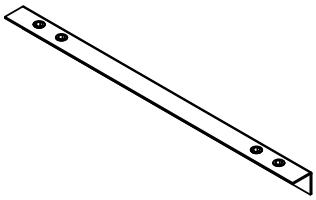

A8 SPLICE BRACKET ASSEMBLY-A4M07152
(x1) 1 3/16"x1 3/16"x17 11/16" (30x30x450)

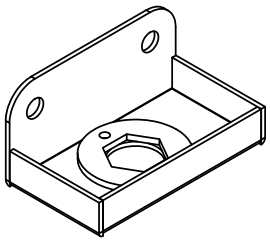


A9 HOSE BRACKET ASSEMBLY-A4M03060
(x1) 1 1/4"x1 7/16"x2 9/16" (31.5x36.5x65)

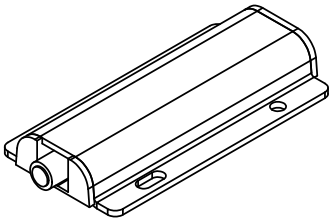


A12 DOOR STOPPER-A4M04128
(x1) 1/2"x1 3/4"x3 11/16" (13.3x45x94)

OWNER'S MANUAL - PARTS IDENTIFICATION


COMPONENTS (NOT TO SCALE)

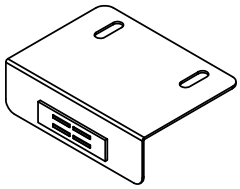


A15 MAGNET BRACKET ASSEMBLY-A4M06756
(x1) 1"x2 5/16"x3 1/8" (25x59x80)

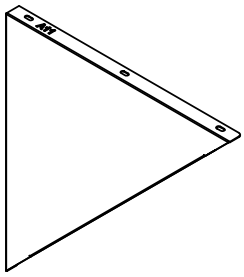


A11 TRIANGLE PANEL-A4M03086
(x2) 13/16"x13 3/4"x13 3/4" (20x350x350)

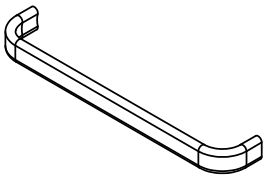


H18 ALUMINUM HANDLE-A4M06591
(x7) 3/4"x1 1/2"x8 7/8" (19x38.5x226)

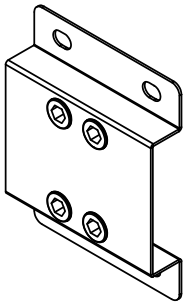


A1 HINGE BRACKET ASSEMBLY-A4M06757
(x2) 1/2"x2 1/4"x2 7/8" (12x56.8x73.4)

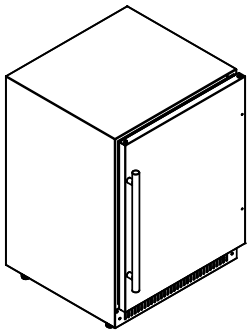


FRIDGE 9240162 (x1)

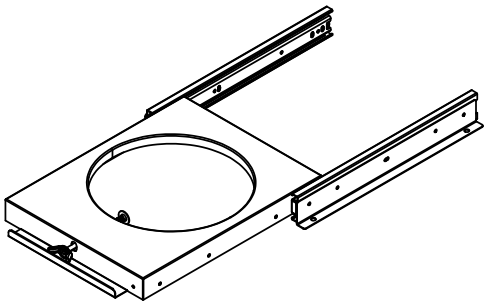


A13 GAS TANK HOLDER ASSEMBLY-A4M03047
(x1) 1 15/16"x12 7/8"x14 3/4" (49x327x374)

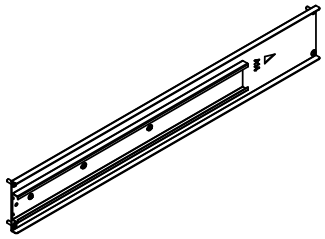

A14 SLIDE BRACKET ASSEMBLY-A4M06462
(x6) 15/16"x3 3/8"x23 7/16" (23x85x595)

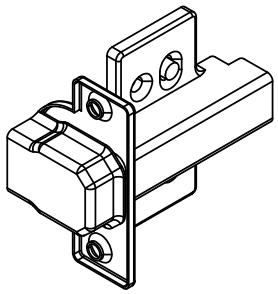


3025 FULL OVERLAY HINGE-A4M03025
(x8)

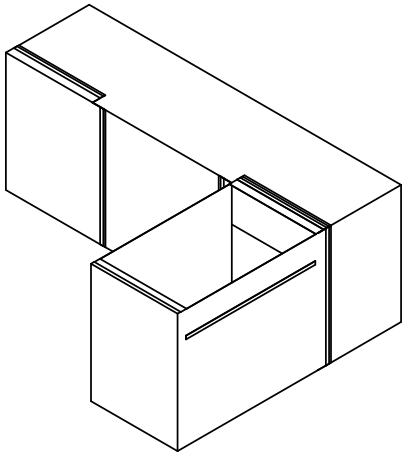


COVER A6P01851 (x1)

OWNER'S MANUAL - PARTS IDENTIFICATION


HARDWARE COMPONENTS

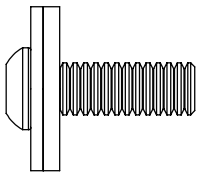

H101202 | TORX PAN HEAD
(x92) | 1/4-20x3/4 ASSY




H101103 | TORX SOCKET SCREW
(x25) | 1/4-20




H101292 | TORX PAN HEAD
(x16) | 1/4-20x13/32"



H101289 | PAN HEAD SCREW
(x99) | 8-32x1/2" SS




H101307 | SHOULDER BOLT
(x14) | 8-32x30mm SS

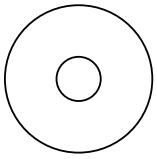


H101053 | STEEL WASHER
(x12) | 6x20




H101185 | PHILLIPS FLAT HEAD
(x48) | 8-32x.5

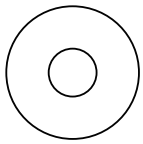

H101054 | SEALANT WASHER
(x12) | 6.5x18




H100147 | TORX BIT
(x1) | T-30




H101100 | MAGNETIC DRIVER
(x1) |

H100114 | TORX WRENCH
(x1) | T-30

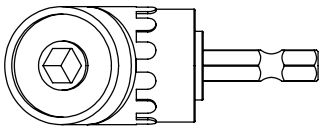

H101114 | RIGHT ANGLE
(x1) | **DRILL ADAPTER**



H101294 | HEX DRIVER
(x1) |


PRE-ASSEMBLY STEP 1 - SORTING PARTS

It is critical for ease of assembly that you take the time to sort and organize the parts and hardware.

METAL PARTS:

- **Organize metal parts by the three-digit, alpha-numeric number stamped on each part (ex. P01).**
- **If there are multiple parts with the same stamped number, stack those pieces together.**
- **Stamps can be found on the flat surface of the parts or on the end of the parts.**
- **Allow yourself plenty of room - the parts can take up a significant amount of space.**

NOTE: CARTONS ARE NOT ORGANIZED BY PART OR STEP NUMBER.

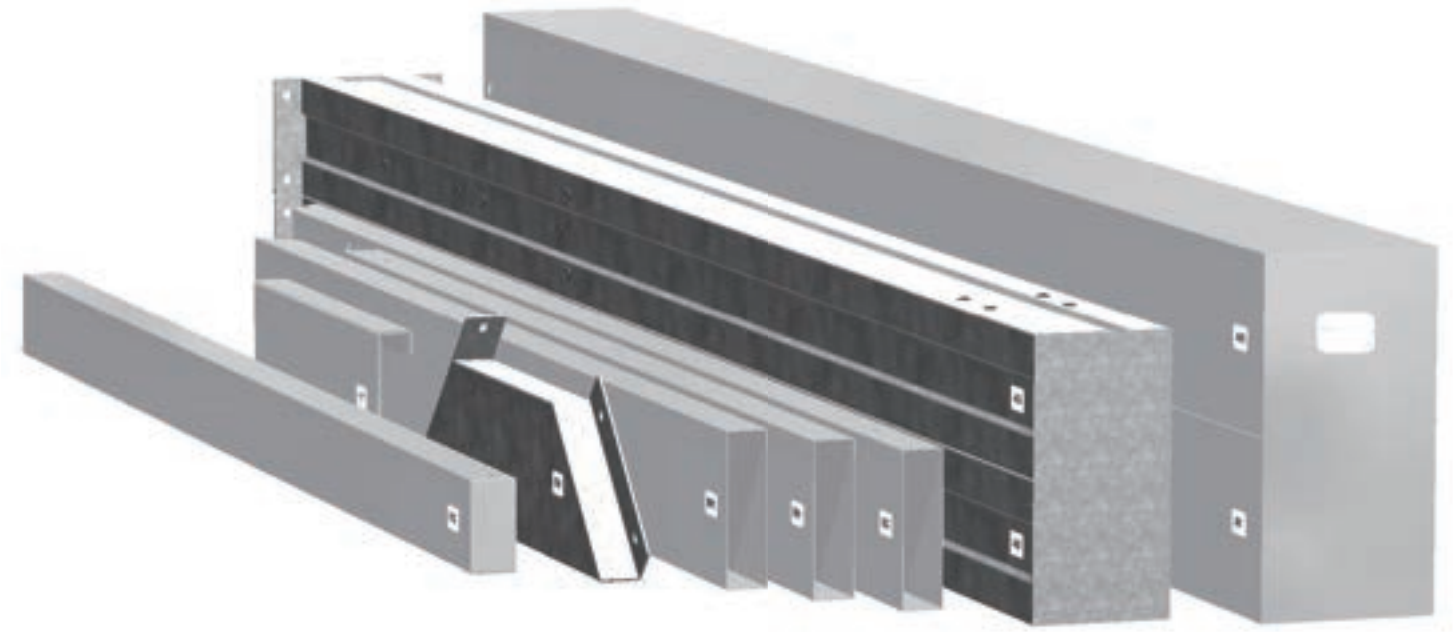

HARDWARE PARTS:

- **We recommend that you have a separate table to organize the hardware.**
- **Hardware bags are printed with a seven-digit, alpha-numeric part number.**
- **You can organize your hardware by part number or group by hardware type (e.g. bolts, nuts, etc.).**
- **During assembly you only need to reference the last four digits of the number.**



PRE-ASSEMBLY STEP 2 - TOOLS REQUIRED



Cordless Drill or
Electric Drill




Drill Attachments:
Phillips Head



1/8", 3/16", 3/8" &
7/16" Drill Bits



Phillips Screw Driver



Open End Wrench
7/16"



3/8" Drive Ratchet, 1/2" &
7/16" STD Sockets 1/2" & 7/16"
Deep Sockets




Claw Hammer



Rubber Mallet -
Optional



Tape Measure

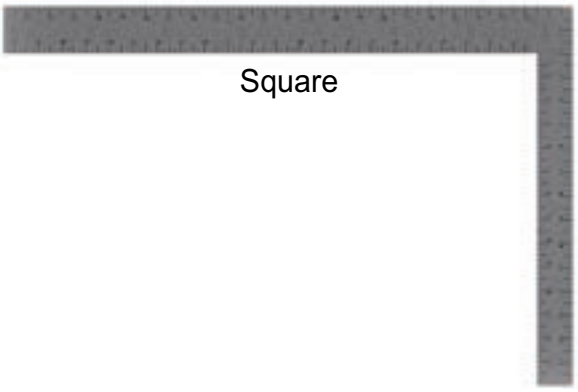

Square




Level 24"

PRE-ASSEMBLY STEP 3 - CHOOSE YOUR ASSEMBLY METHOD

<u>There are several types of assembly instructions available to you.</u>


1. **Printed Assembly Manual included with your set**
2. **BILT APP - 3D interactive instructions**
3. **Combination of the Printed Manual and BILT APP (Note: Step numbers can differ between the two methods)**

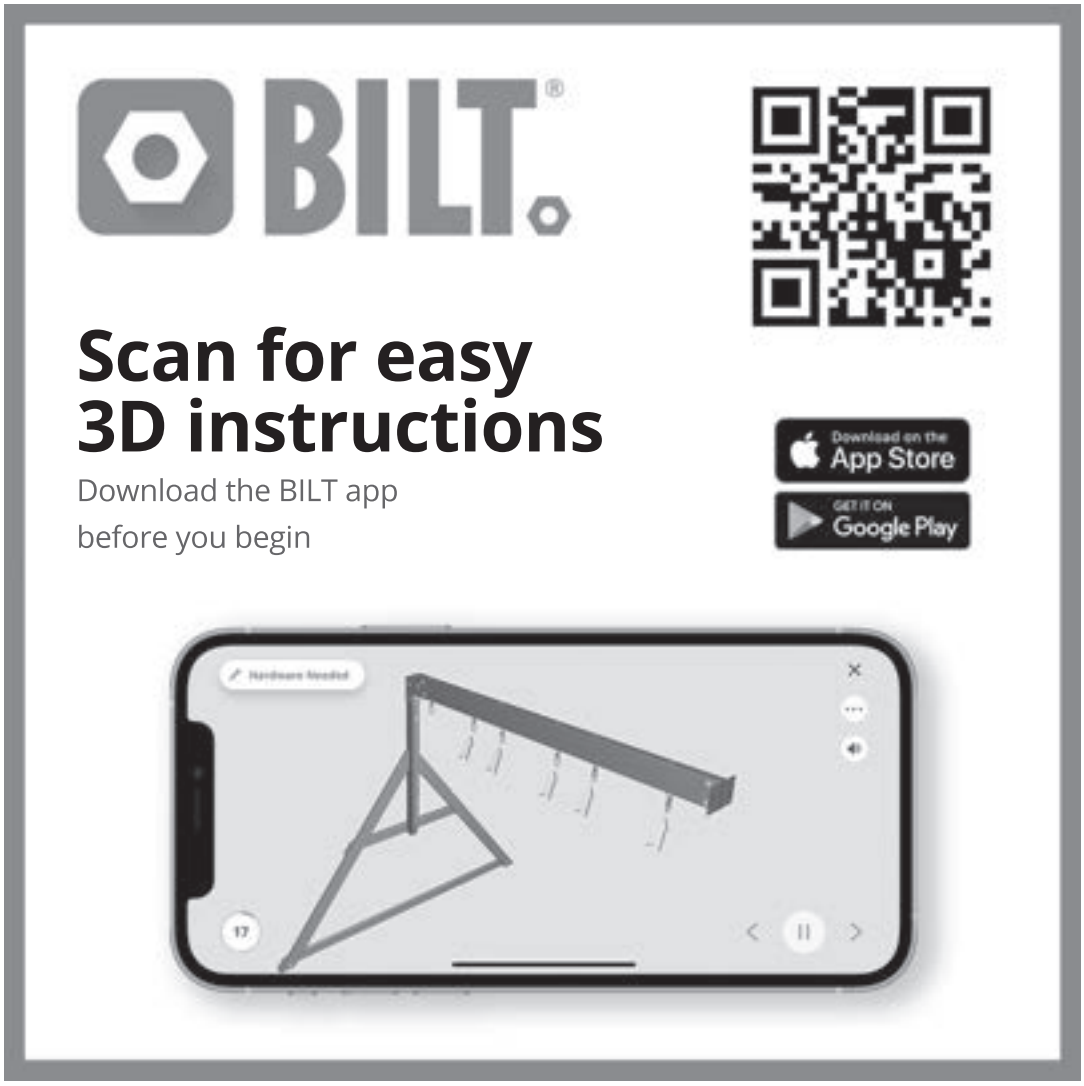


STEP 1 - FLOOR PANEL ASSEMBLY




F7 FLOOR PANEL ASSEMBLY - A4M06455
(x1) 2 5/8"x24 3/16"x28 1/8" (66x614x715)

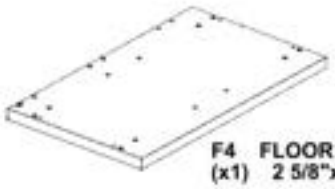

F4 FLOOR PANEL ASSEMBLY - A4M06729
(x1) 2 5/8"x24 3/16"x42 5/16" (66x614x1075)

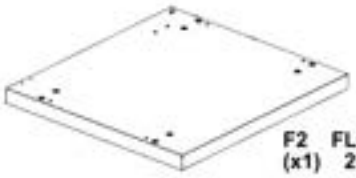


F2 FLOOR PANEL ASSEMBLY - A4M06728
(x1) 2 5/8"x24 3/16"x27 1/16" (66x614x687)

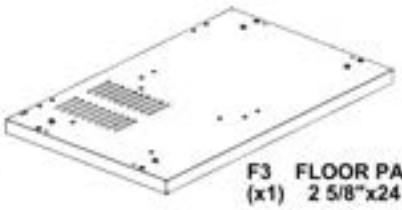

F3 FLOOR PANEL ASSEMBLY - A4M06737
(x1) 2 5/8"x24 3/16"x40 1/2" (66x614x1029)

- POSITION FLOOR PANEL IN THE PROXIMITY OF WHERE YOUR KITCHEN WILL BE.
- EACH FLOOR PANEL HAS FACTORY INSTALLED ADJUSTABLE FEET. USE PROVIDED HEX DRIVER TO ADJUST EACH FOOT UNTIL PANEL IS LEVEL.
- FLUSH ALL SIDES OF FLOOR PANELS.

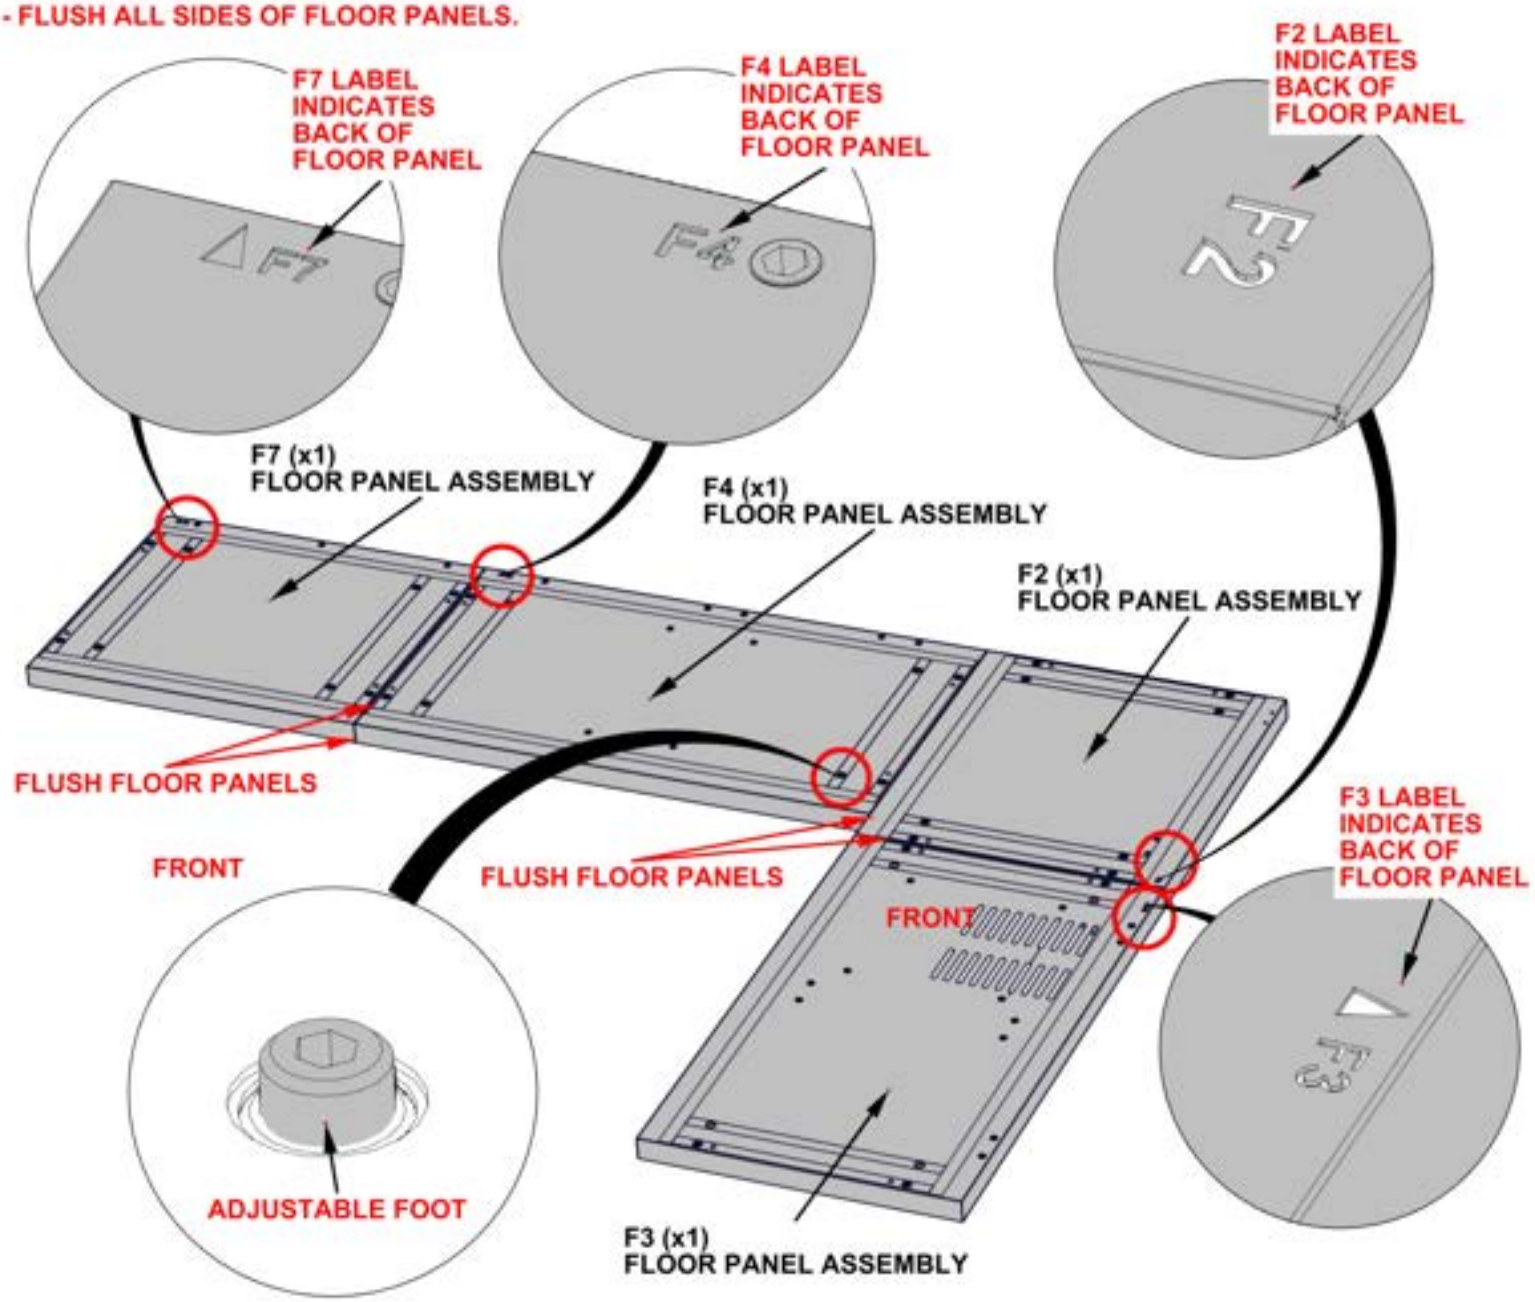


STEP 2 - FRIDGE CABINET ASSEMBLY



Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

S12 SIDE PANEL ASSEMBLY - A4M06726
(x1) 1 3/8"x24 3/16"x33 9/16" (35x614x852)

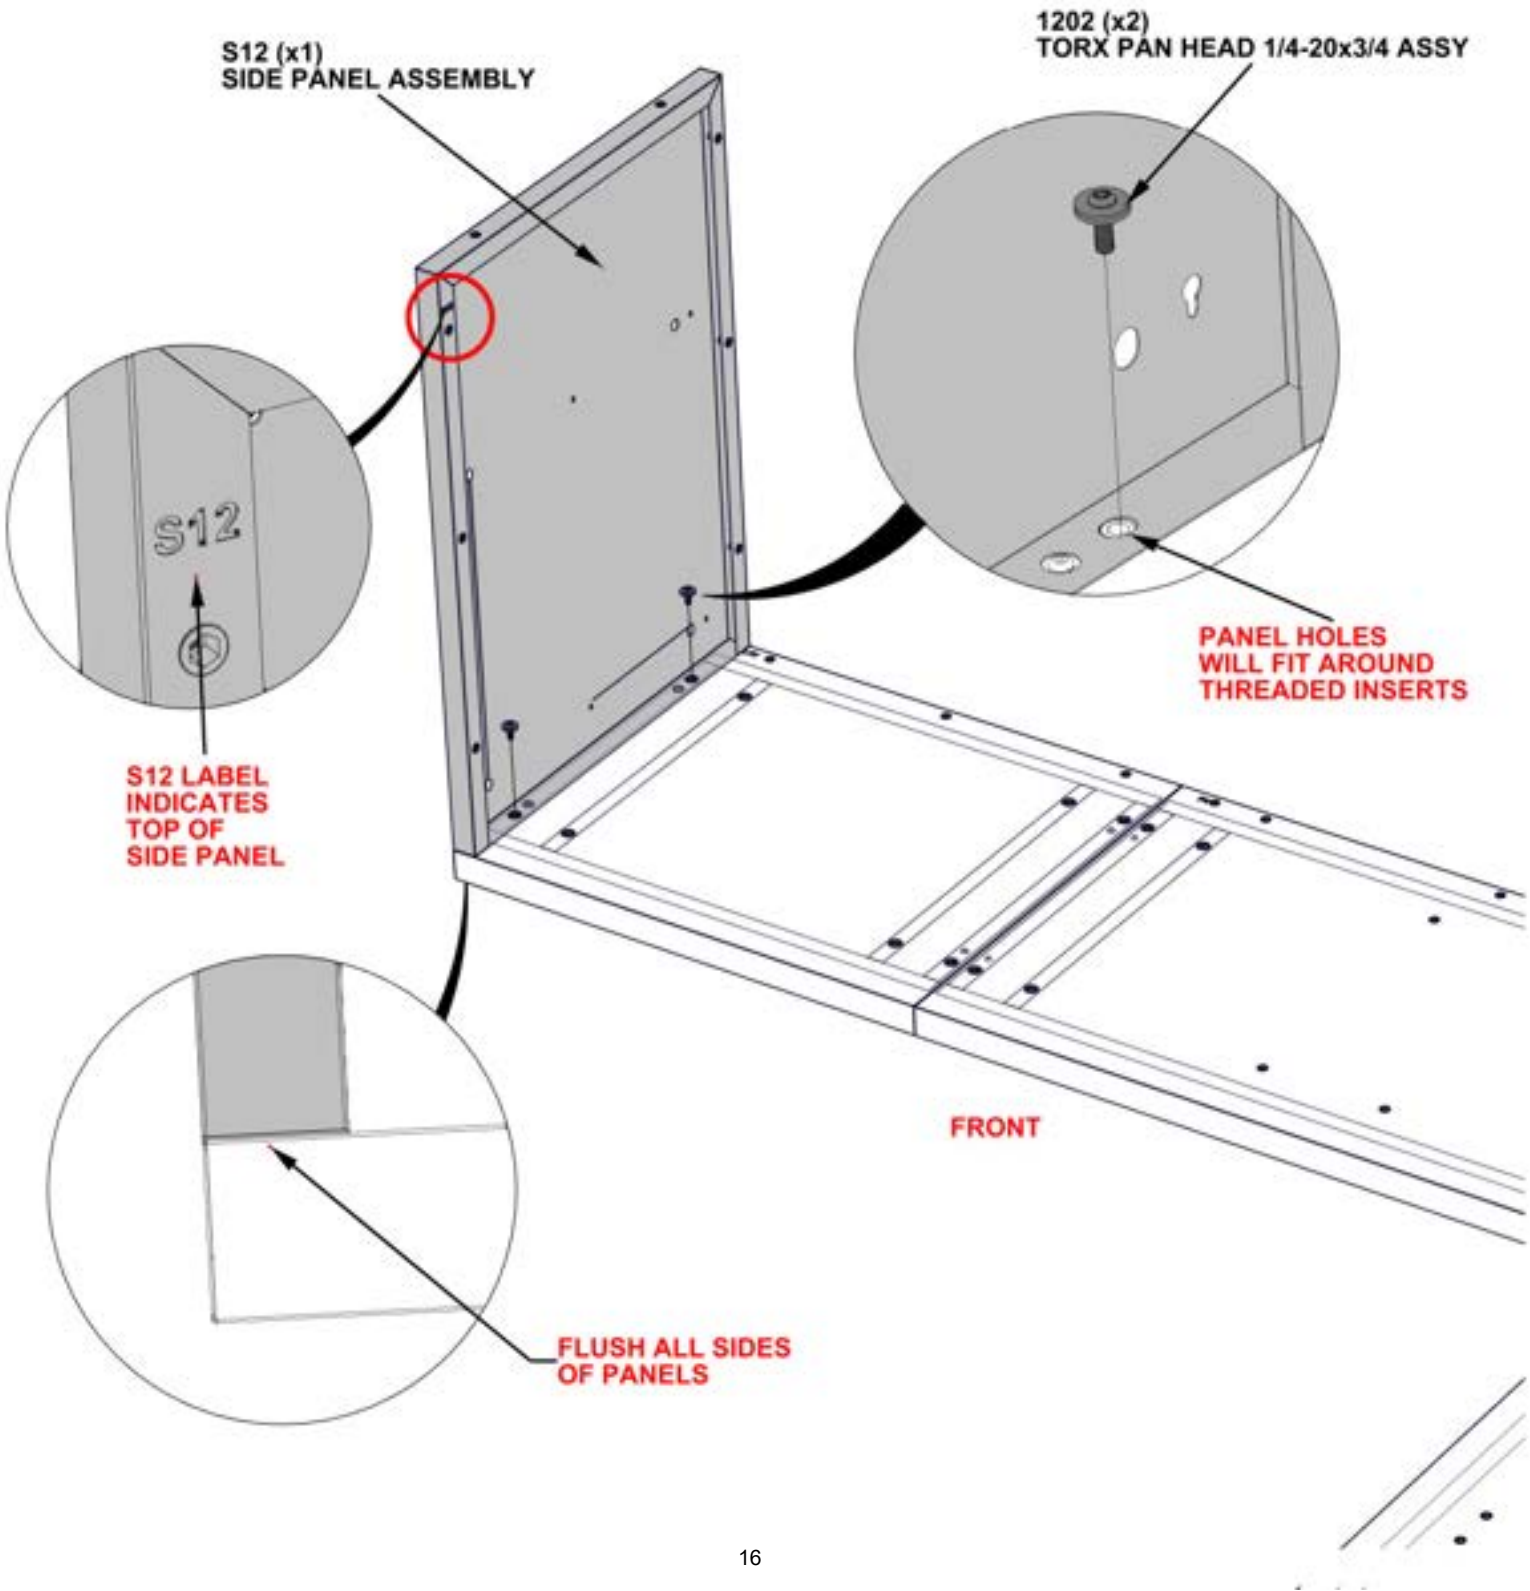


STEP 3 - FRIDGE CABINET ASSEMBLY



S11 SIDE PANEL ASSEMBLY - A4M06727
(x1) 1 3/8"x24 3/16"x33 9/16" (35x614x852)

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

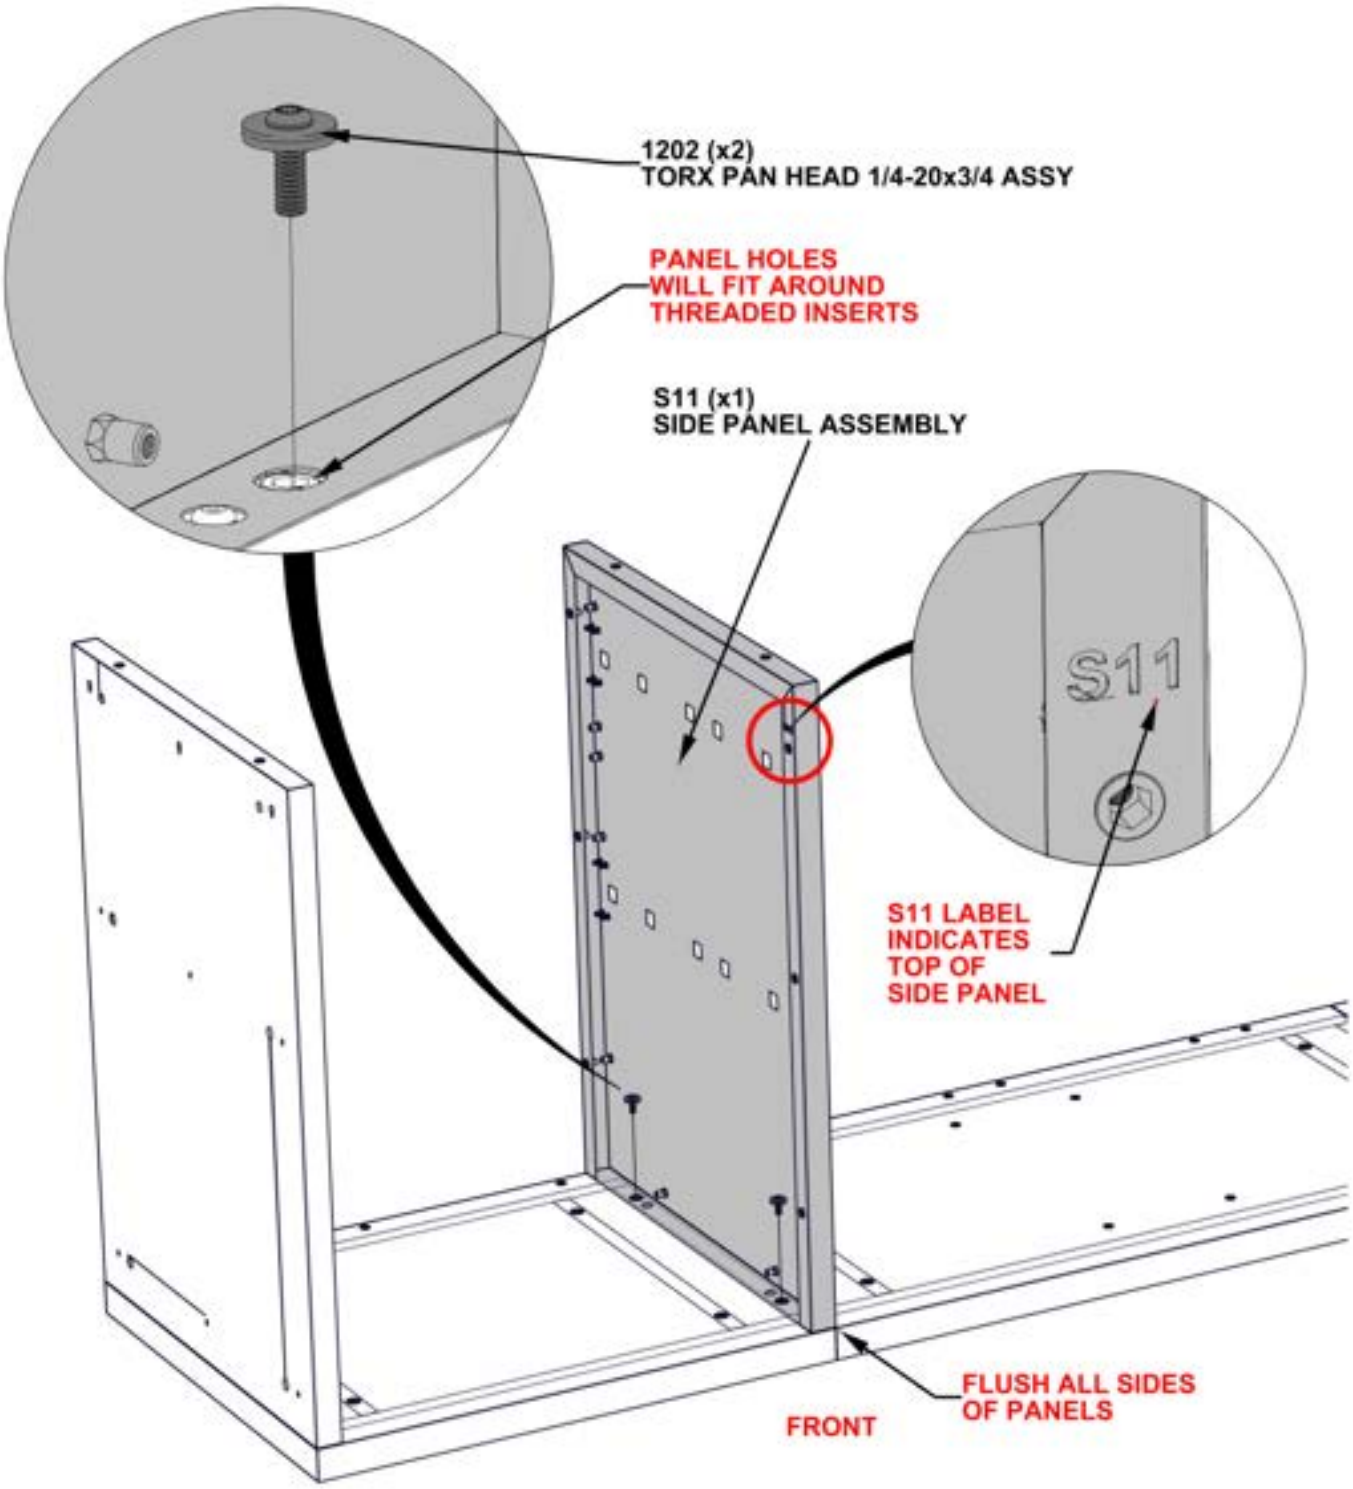


STEP 4 - FRIDGE CABINET ASSEMBLY



Qty	PartNo	Description
9	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

G5 BACK PANEL ASSEMBLY - A4M06751
(x1) 1 3/16"x25 5/16"x33 1/2" (30x643x851)

- FLUSH ALL SIDES OF BACK PANELS.

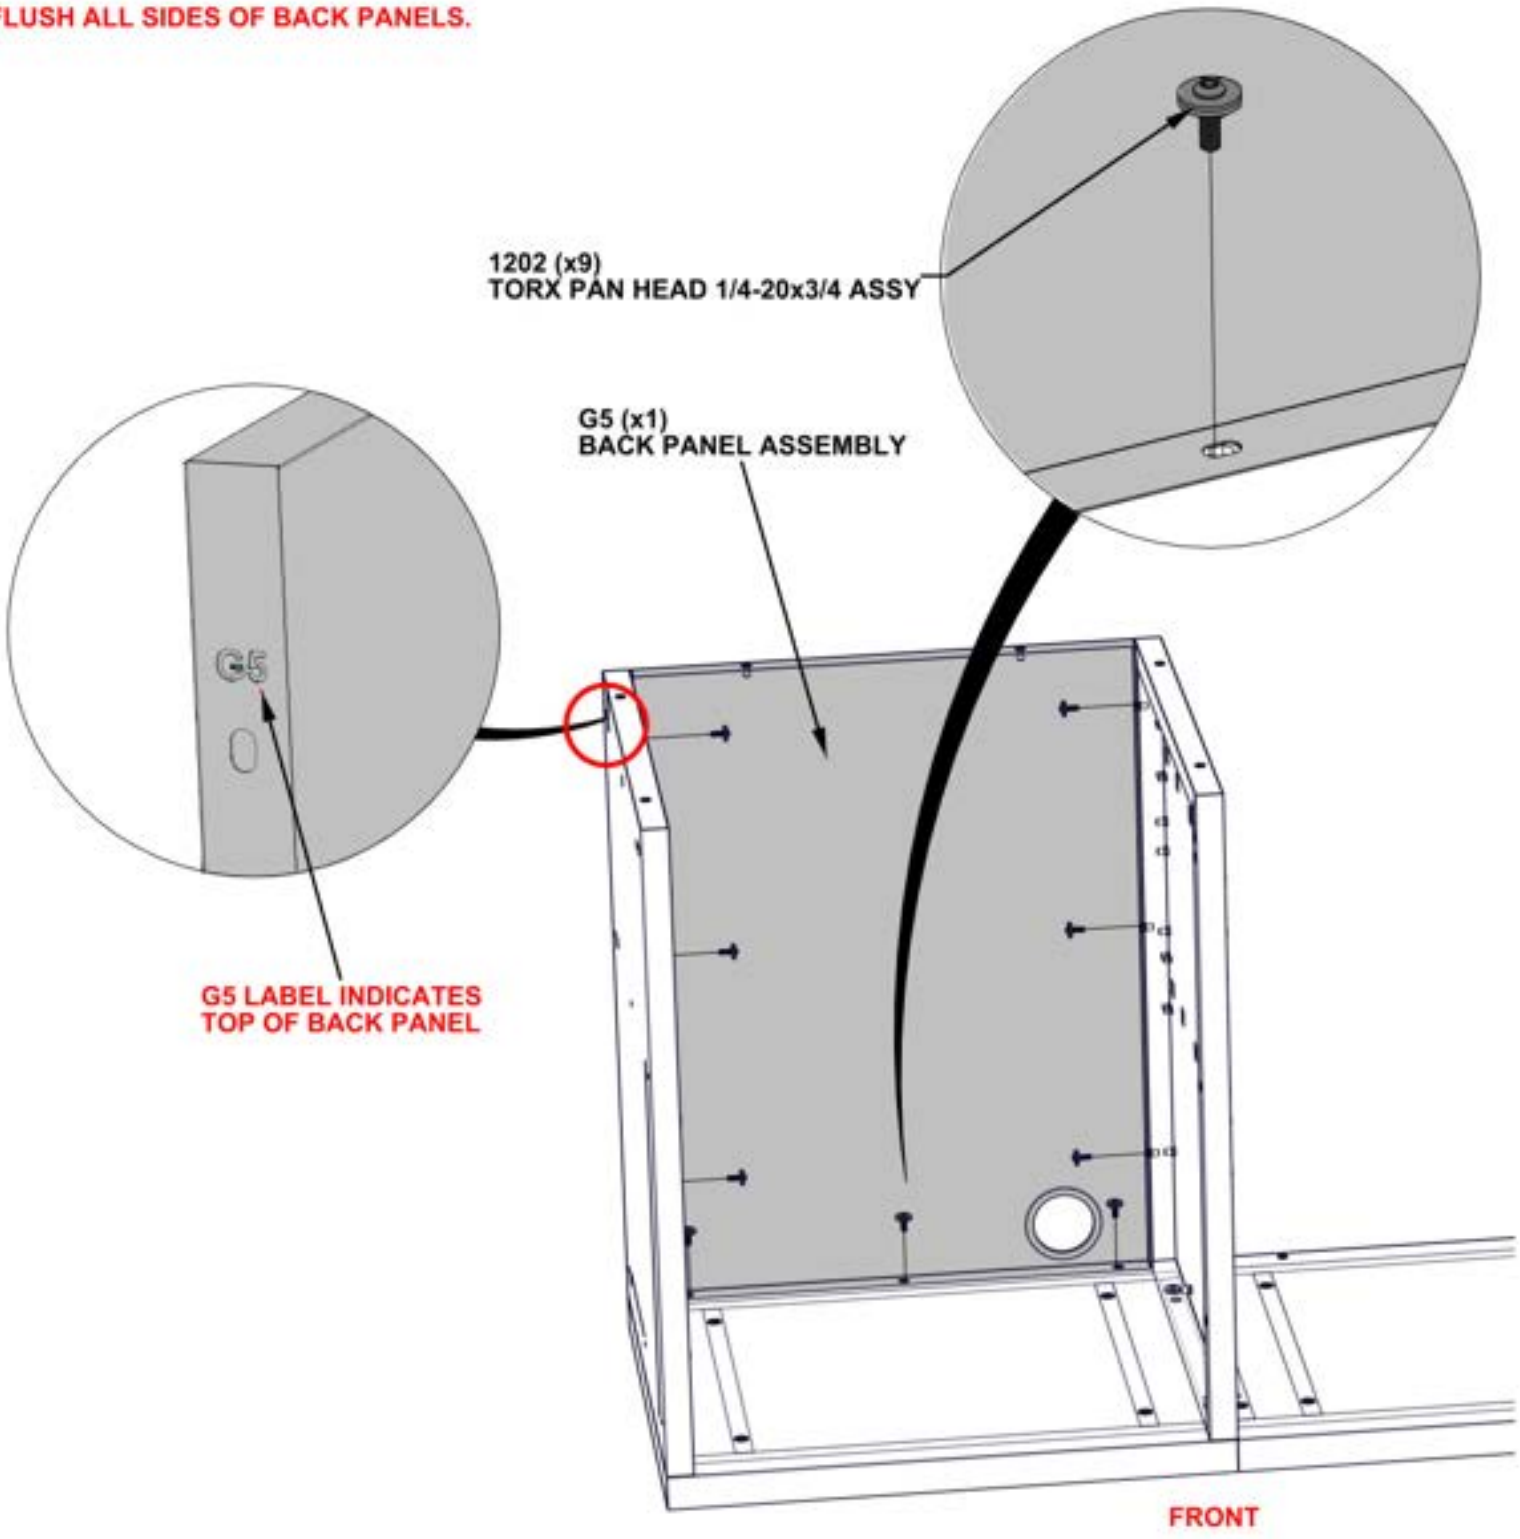


STEP 5 - FRIDGE CABINET ASSEMBLY




Qty	PartNo	Description
3	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

A7 SPLICE BRACKET ASSEMBLY - A4M07153
(x1) 1 3/16"x1 3/16"x15 3/4" (30x30x400)

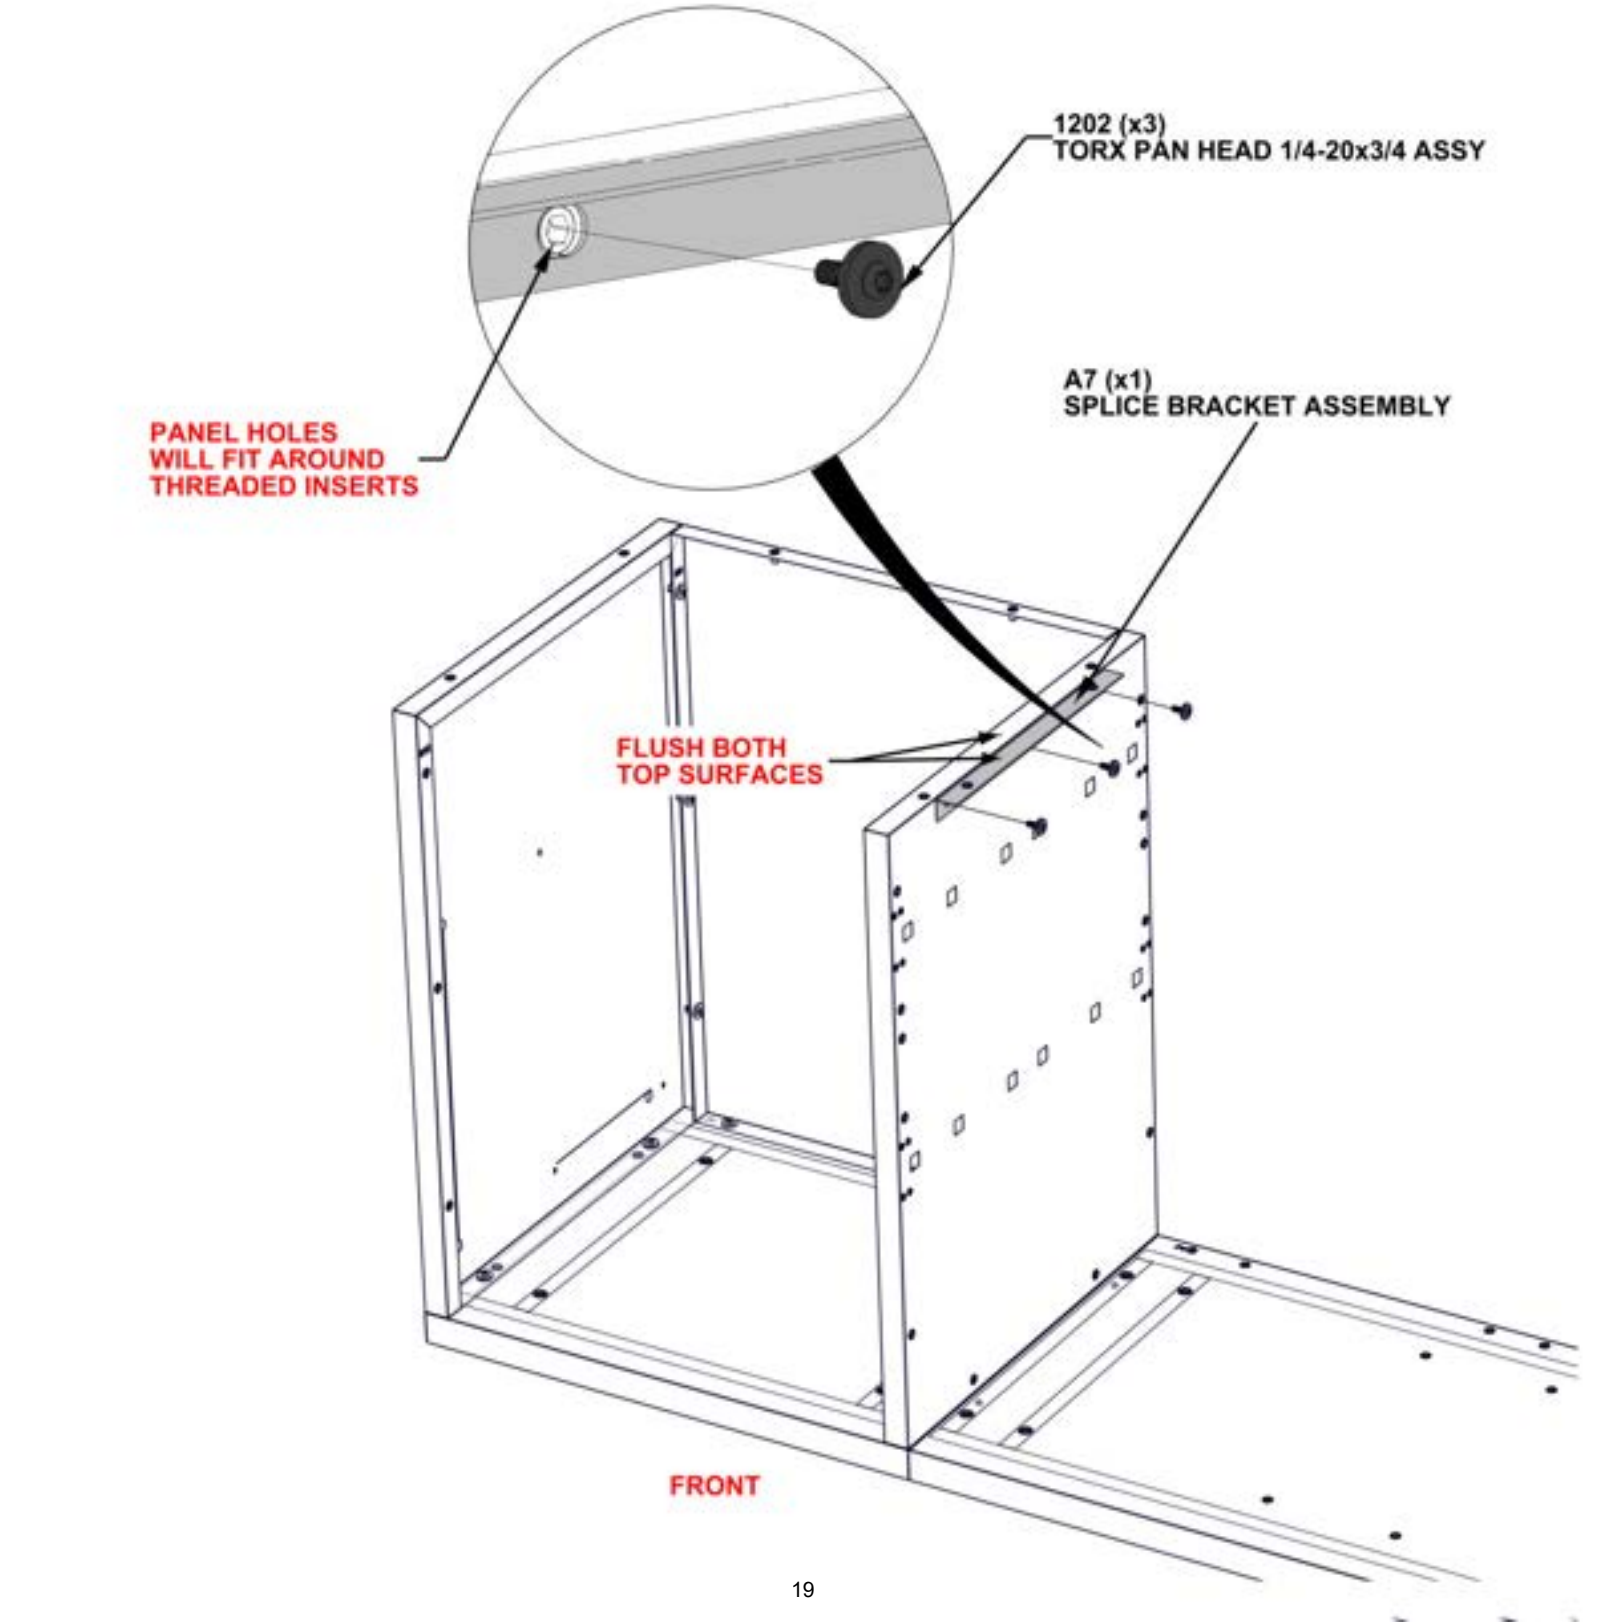

STEP 6 - FRIDGE CABINET ASSEMBLY

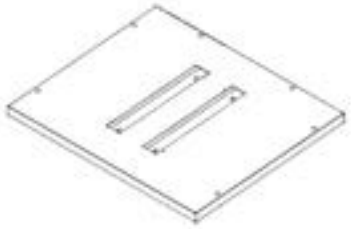

Qty	PartNo	Description
6	H101103	TORX SOCKET SCREW 1/4-20

T1 TABLETOP PANEL ASSEMBLY - A4M07160
(x1) 1 1/4"x24 3/16"x28 1/8" (32x614x715)

- FLUSH BACK AND SIDES OF PANEL ASSEMBLY.
- SQUARE ALL SIDES OF CABINET BEFORE TIGHTENING HARDWARE.

1103 (x6)
TORX SOCKET SCREW 1/4-20

T1

T1 LABEL ON
BOTTOM SIDE
INDICATES BACK

T1 (x1)
TABLETOP PANEL ASSEMBLY


FRONT

STEP 7 - FRIDGE CABINET ASSEMBLY



Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

A6 ANGLED BRACKET - A4M03053
(x1) 1 3/8"x1 15/16"x17 1/8" (35x50x435)

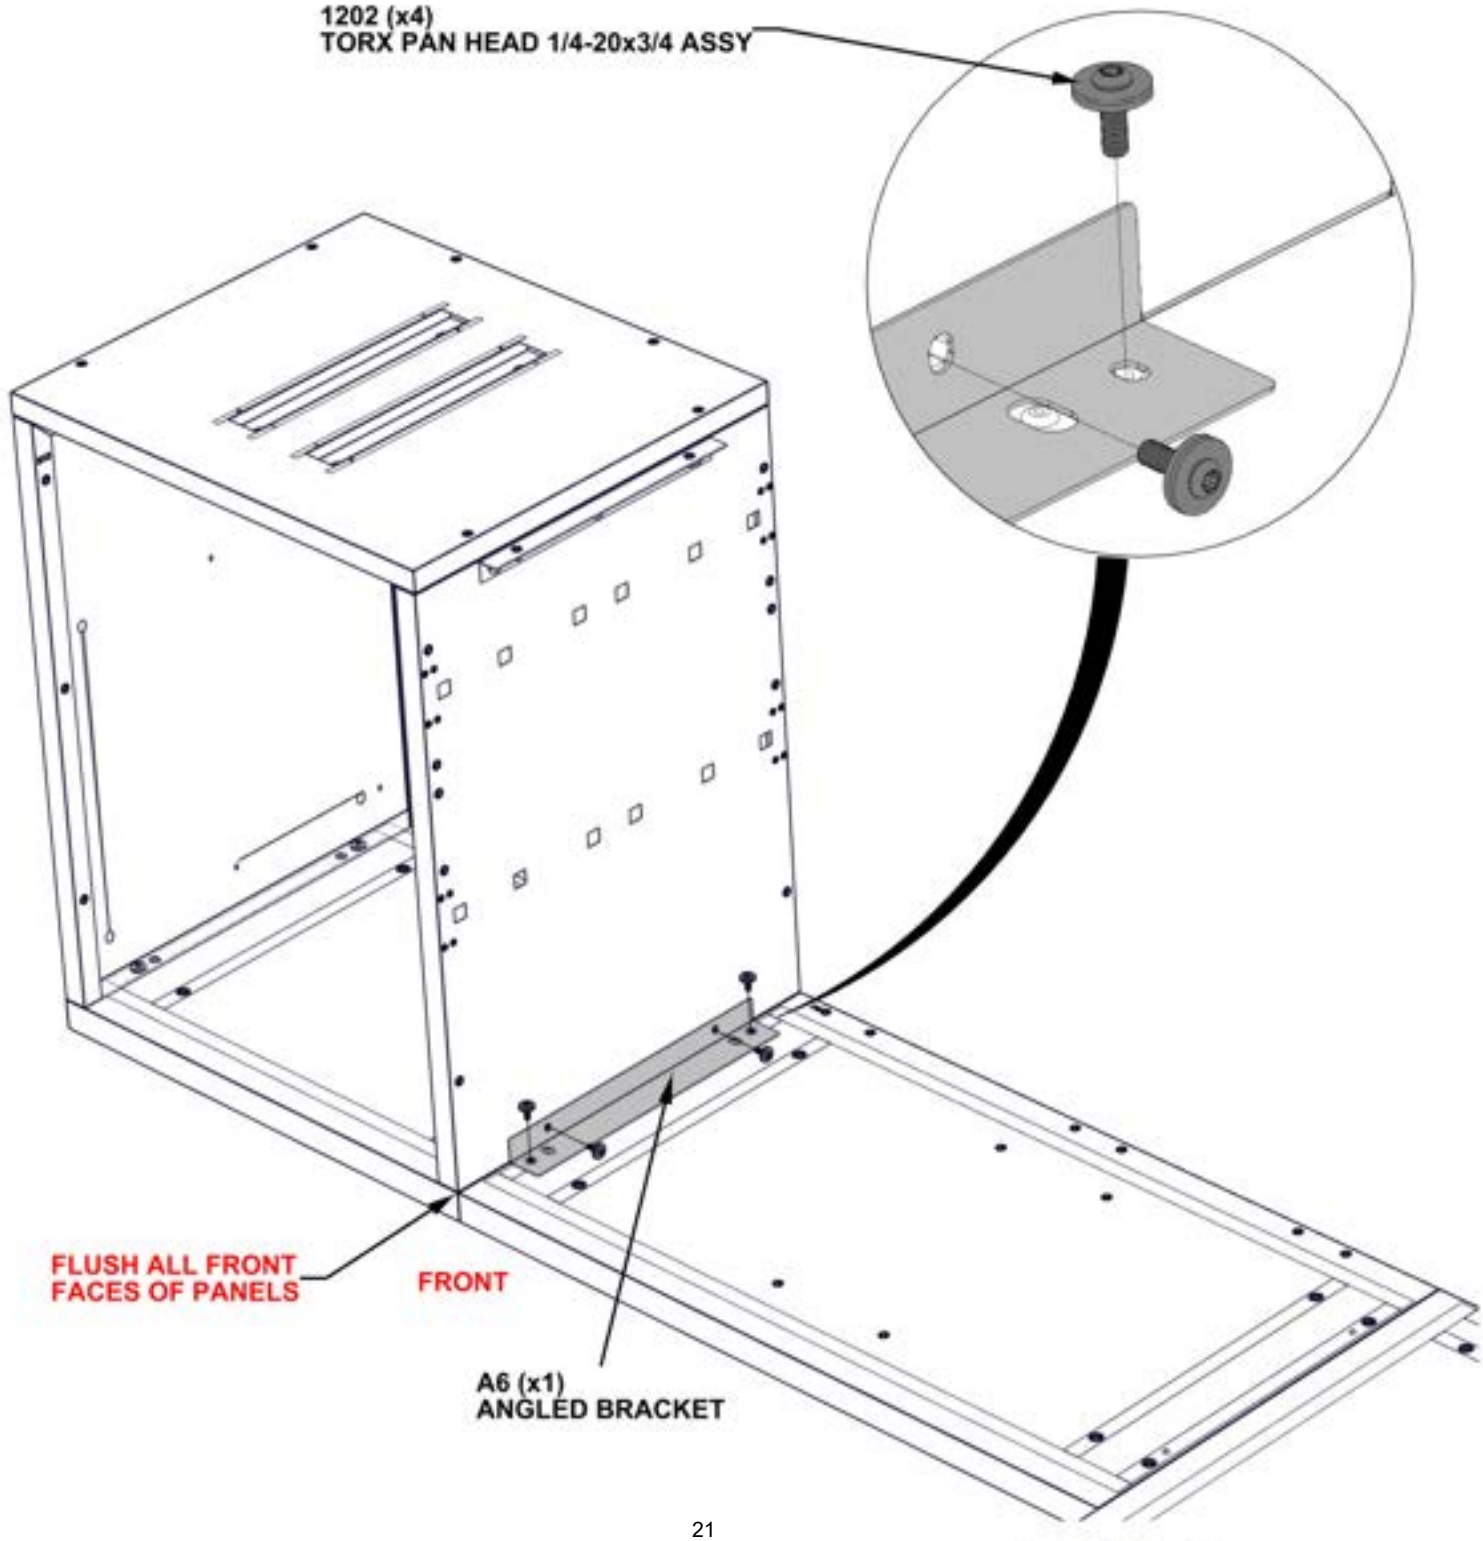


STEP 8 - CABINET ASSEMBLY



Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

S9 SIDE PANEL ASSEMBLY - A4M06721
(x1) 3 1/16"x24 3/16"x33 9/16" (78x614x852)

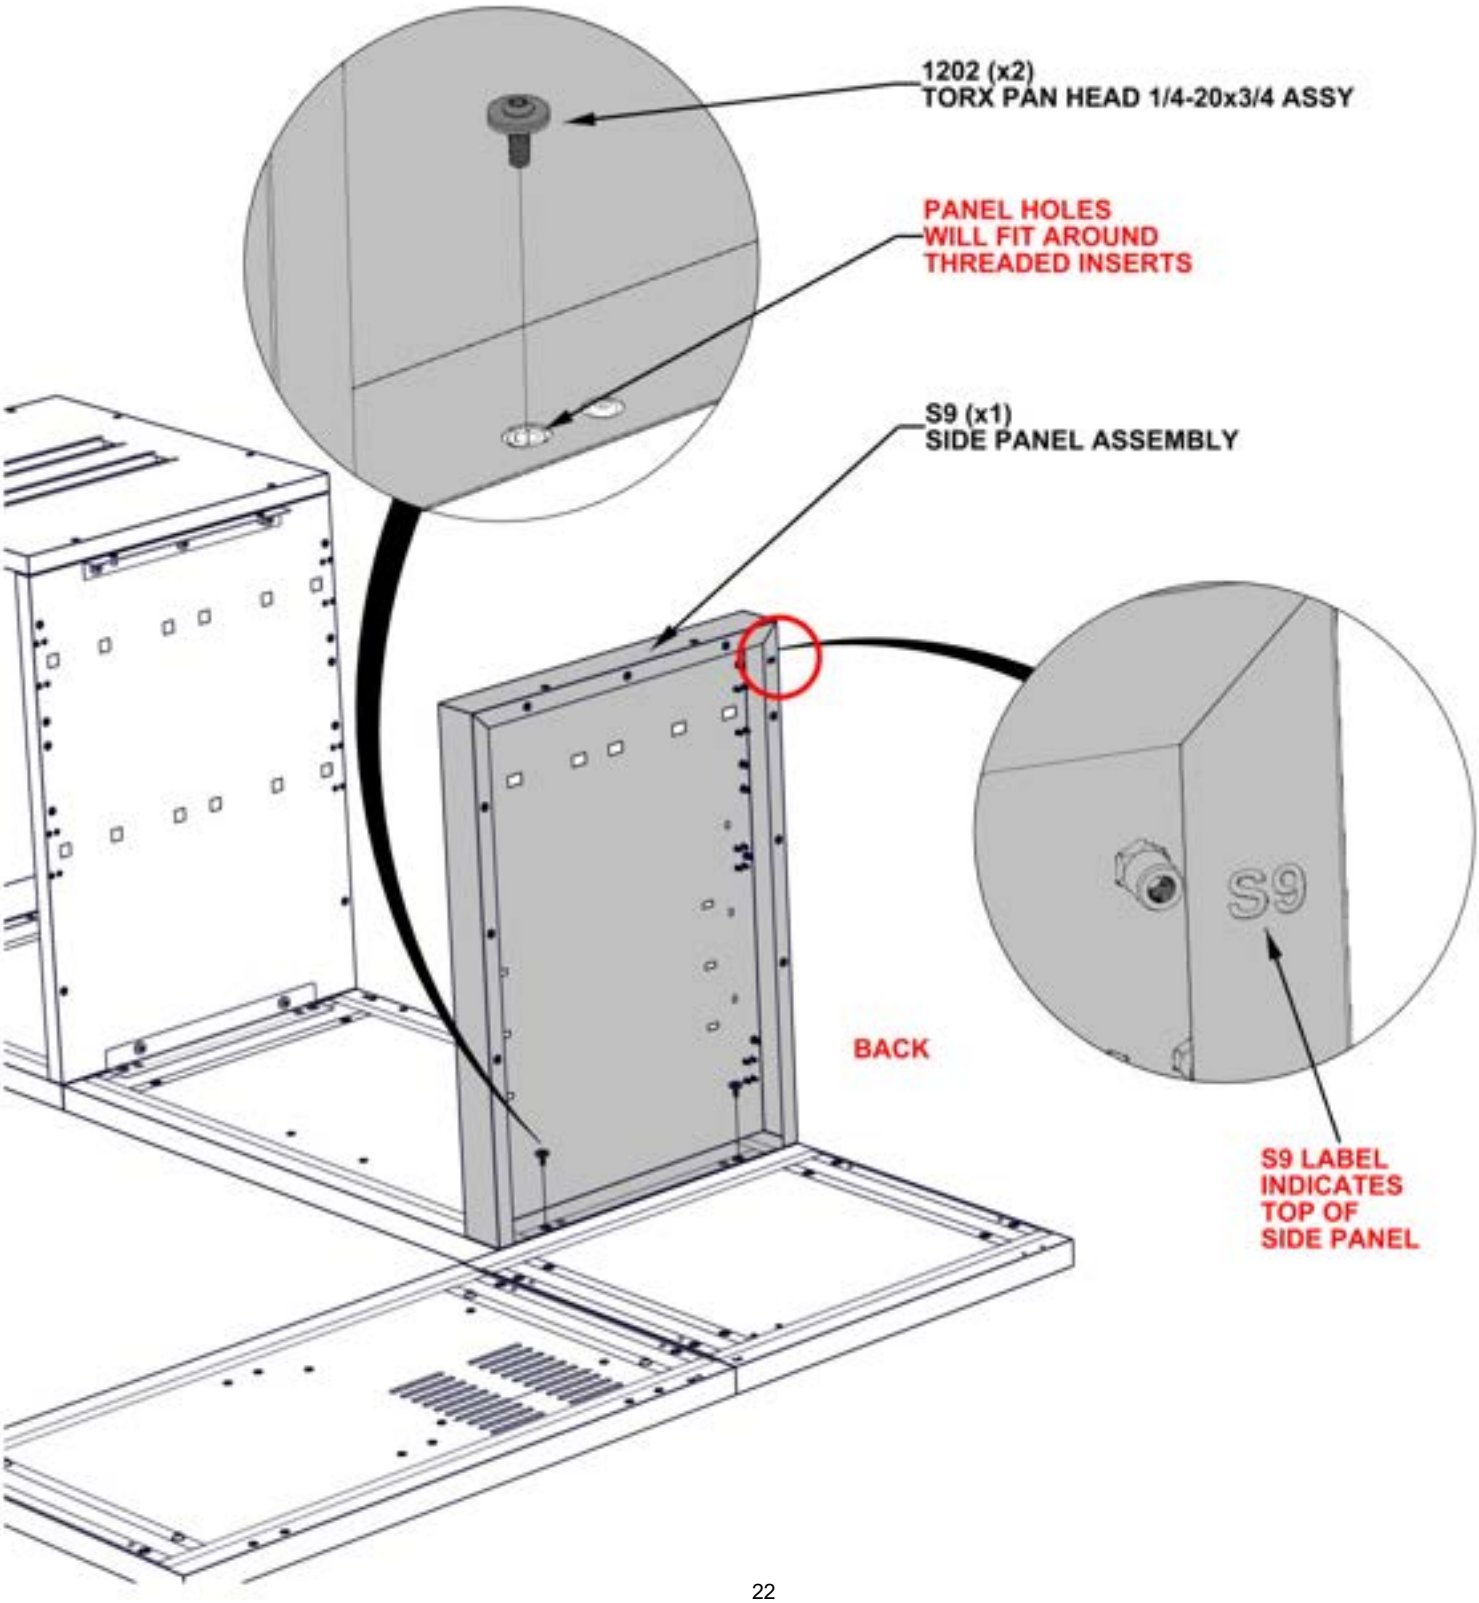


STEP 9 - CABINET ASSEMBLY



G4 BACK PANEL ASSEMBLY - A4M06732
(x1) 1 3/16"x33 1/2"x39 3/16" (30x851x995)

Qty	PartNo	Description
9	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- FLUSH ALL SIDES OF BACK PANELS.

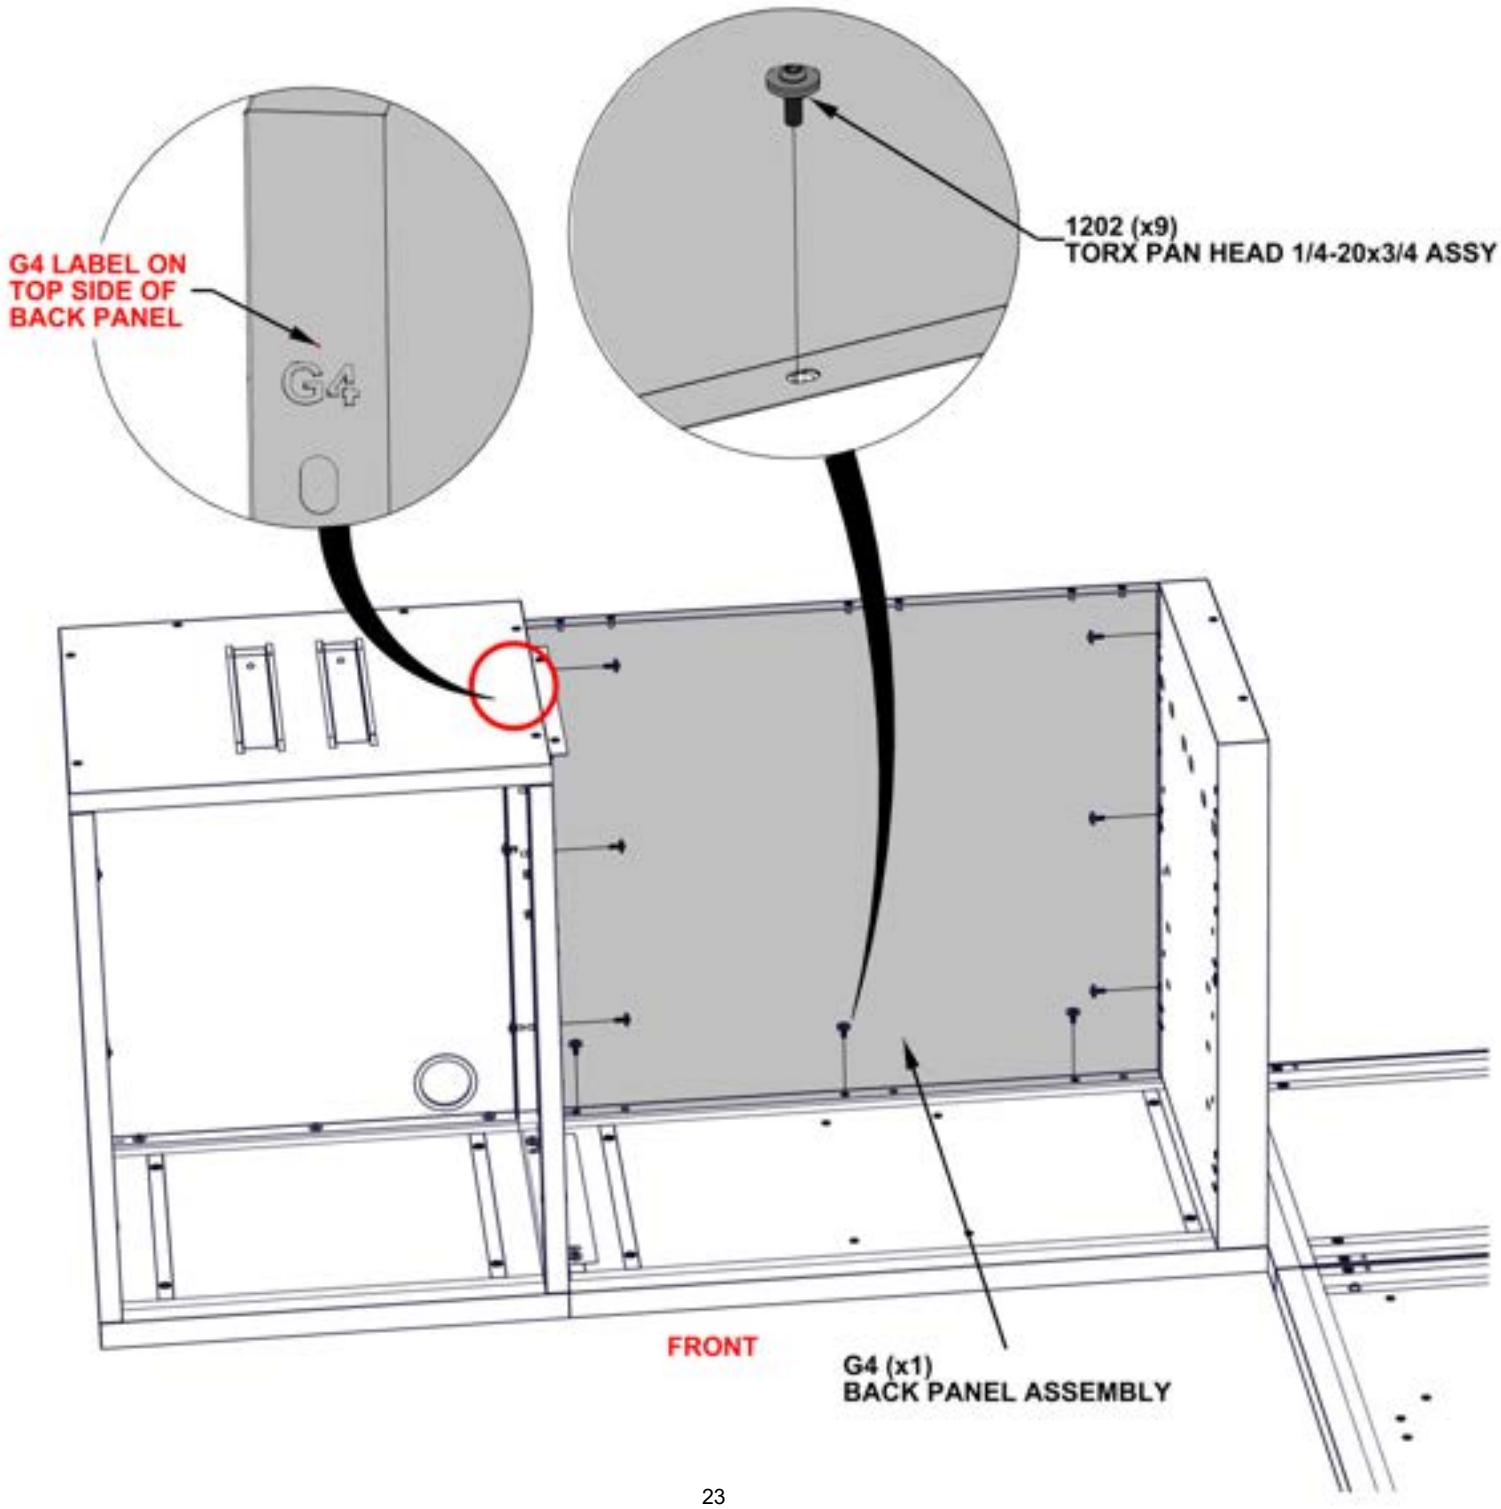


STEP 10 - CABINET ASSEMBLY



Qty	PartNo	Description
8	H101289	PAN HEAD SCREW 8-32x1/2" SS

A14 (x2) SLIDE BRACKET ASSEMBLY - A4M06462
15/16"x3 3/8"x23 7/16" (23x85x595)

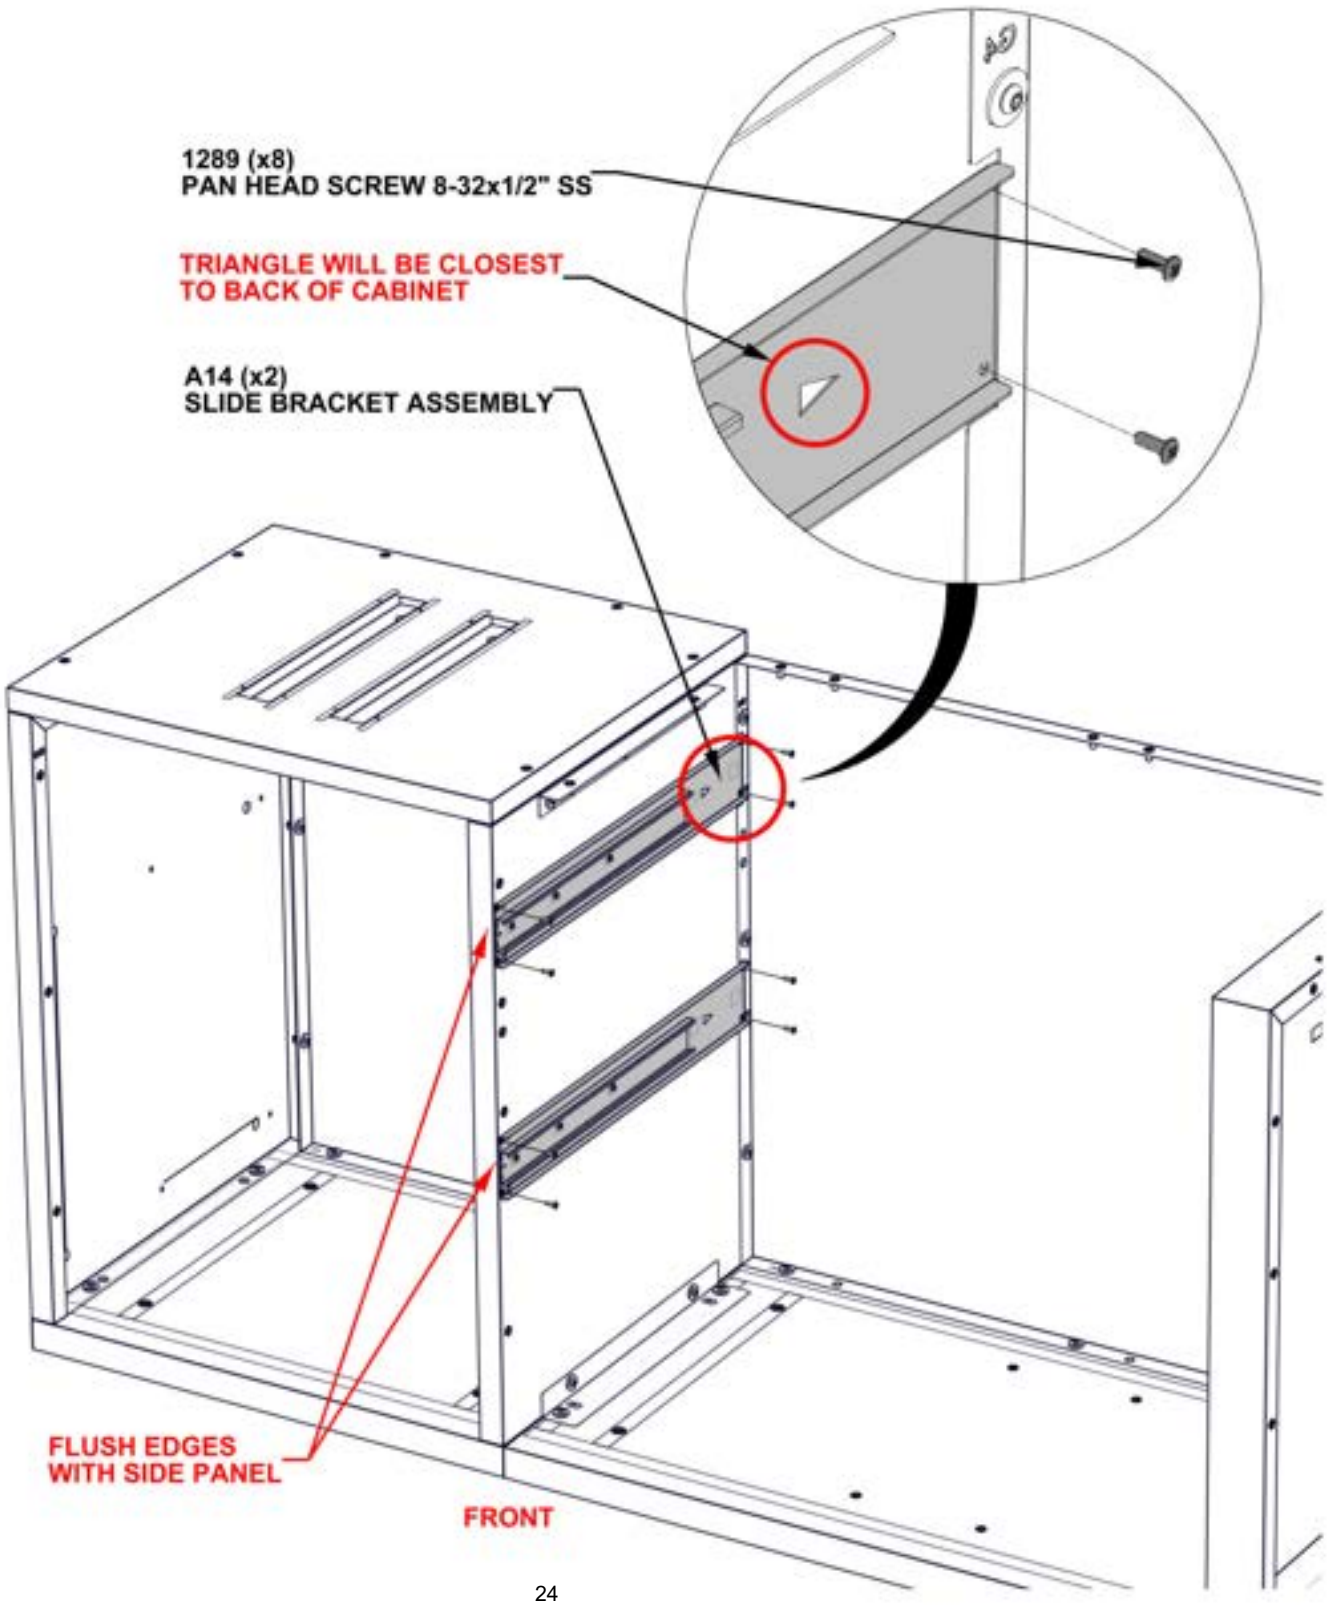


STEP 11 - CABINET ASSEMBLY



Qty	PartNo	Description
4	H101289	PAN HEAD SCREW 8-32x1/2" SS

A14 SLIDE BRACKET ASSEMBLY - A4M06462
(x1) 15/16"x3 3/8"x23 7/16" (23x85x595)

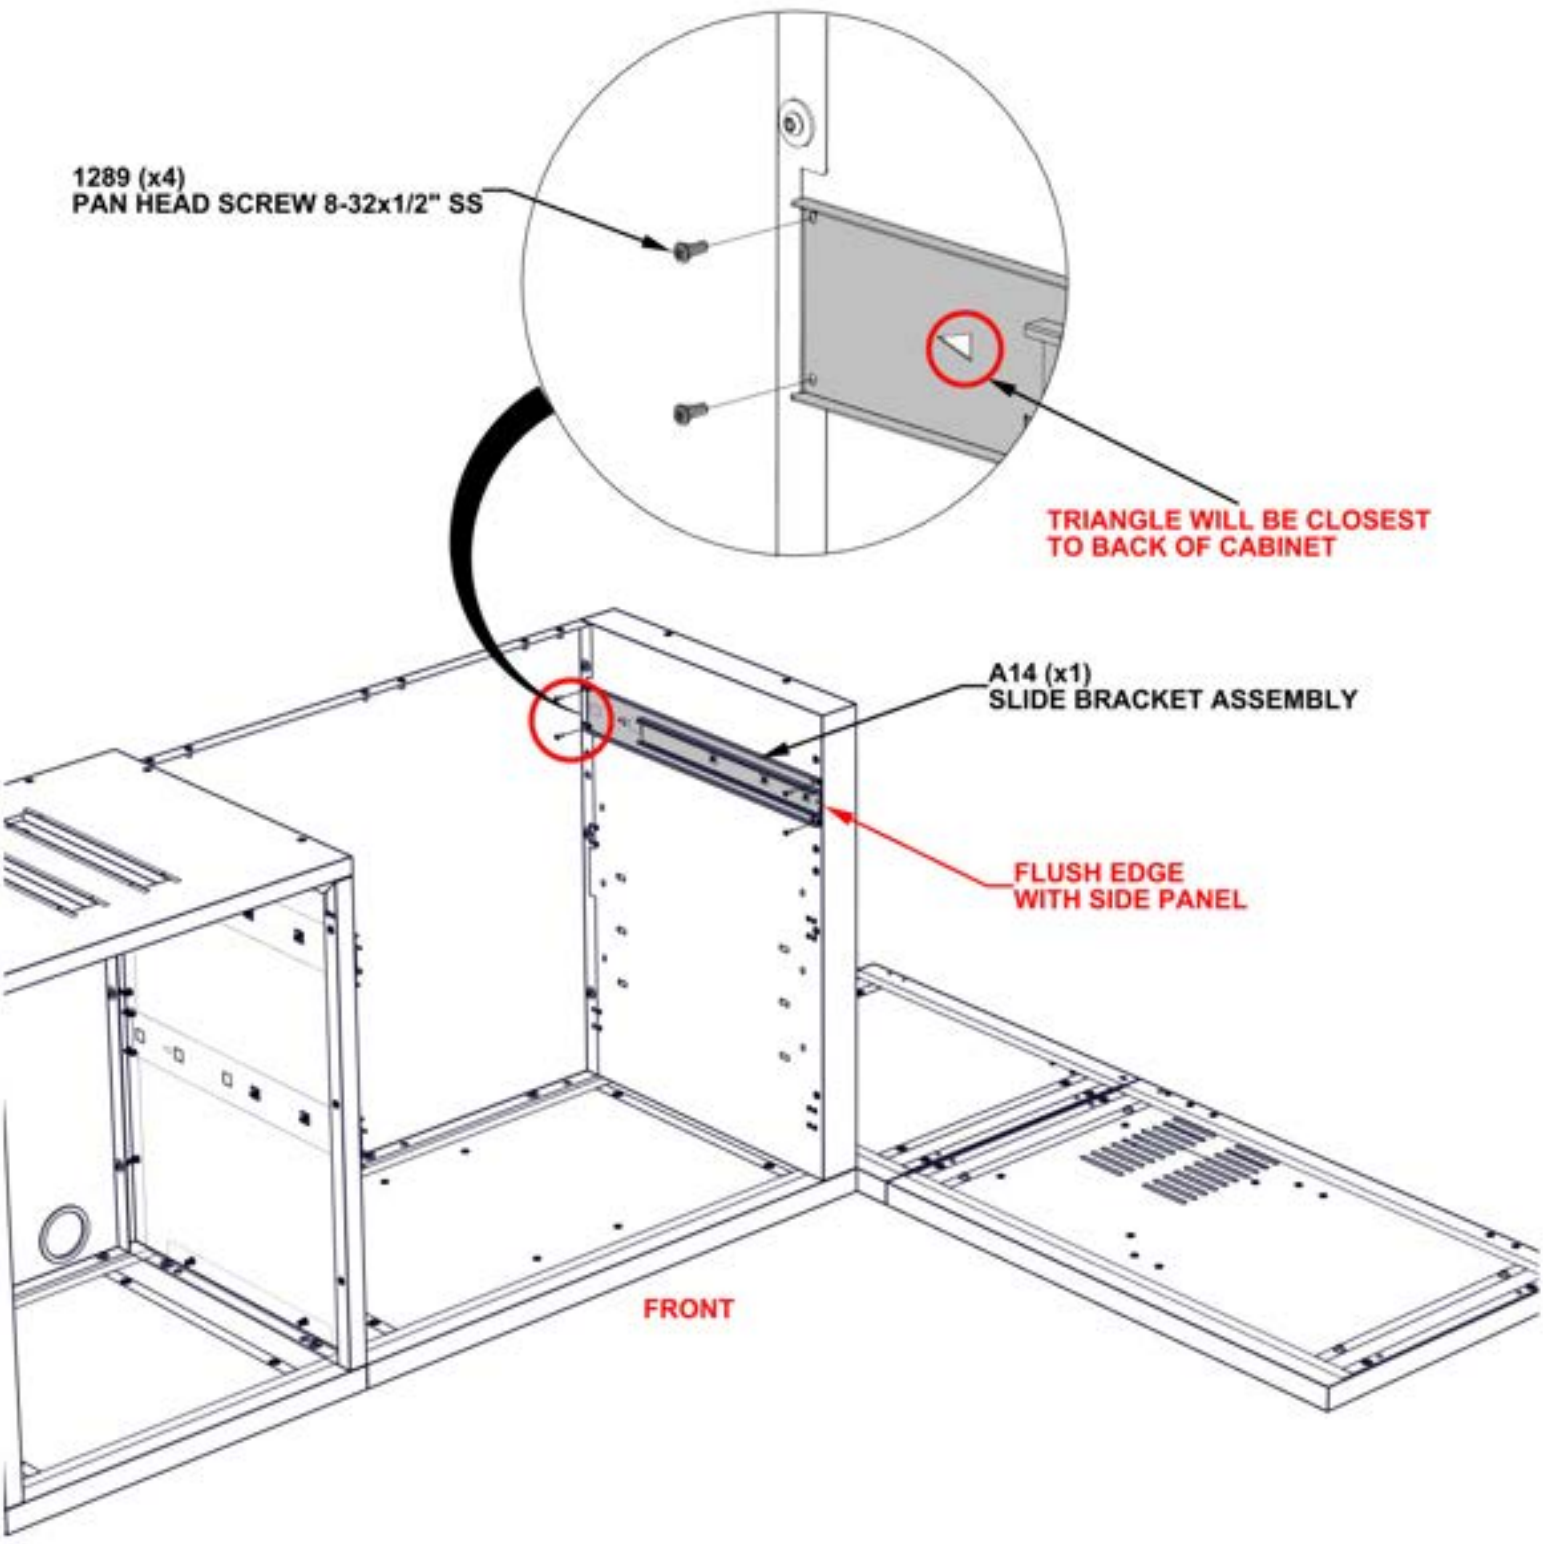

STEP 12A - CABINET ASSEMBLY






Qty	PartNo	Description
8	H101289	PAN HEAD SCREW 8-32x1/2" SS

S10 (x1) SIDE PANEL ASSEMBLY - A4M06736
1 5/8"x24 1/8"x33 1/2" (41x613x851)

A14 (x2) SLIDE BRACKET ASSEMBLY - A4M06462
15/16"x3 3/8"x23 7/16" (23x85x595)

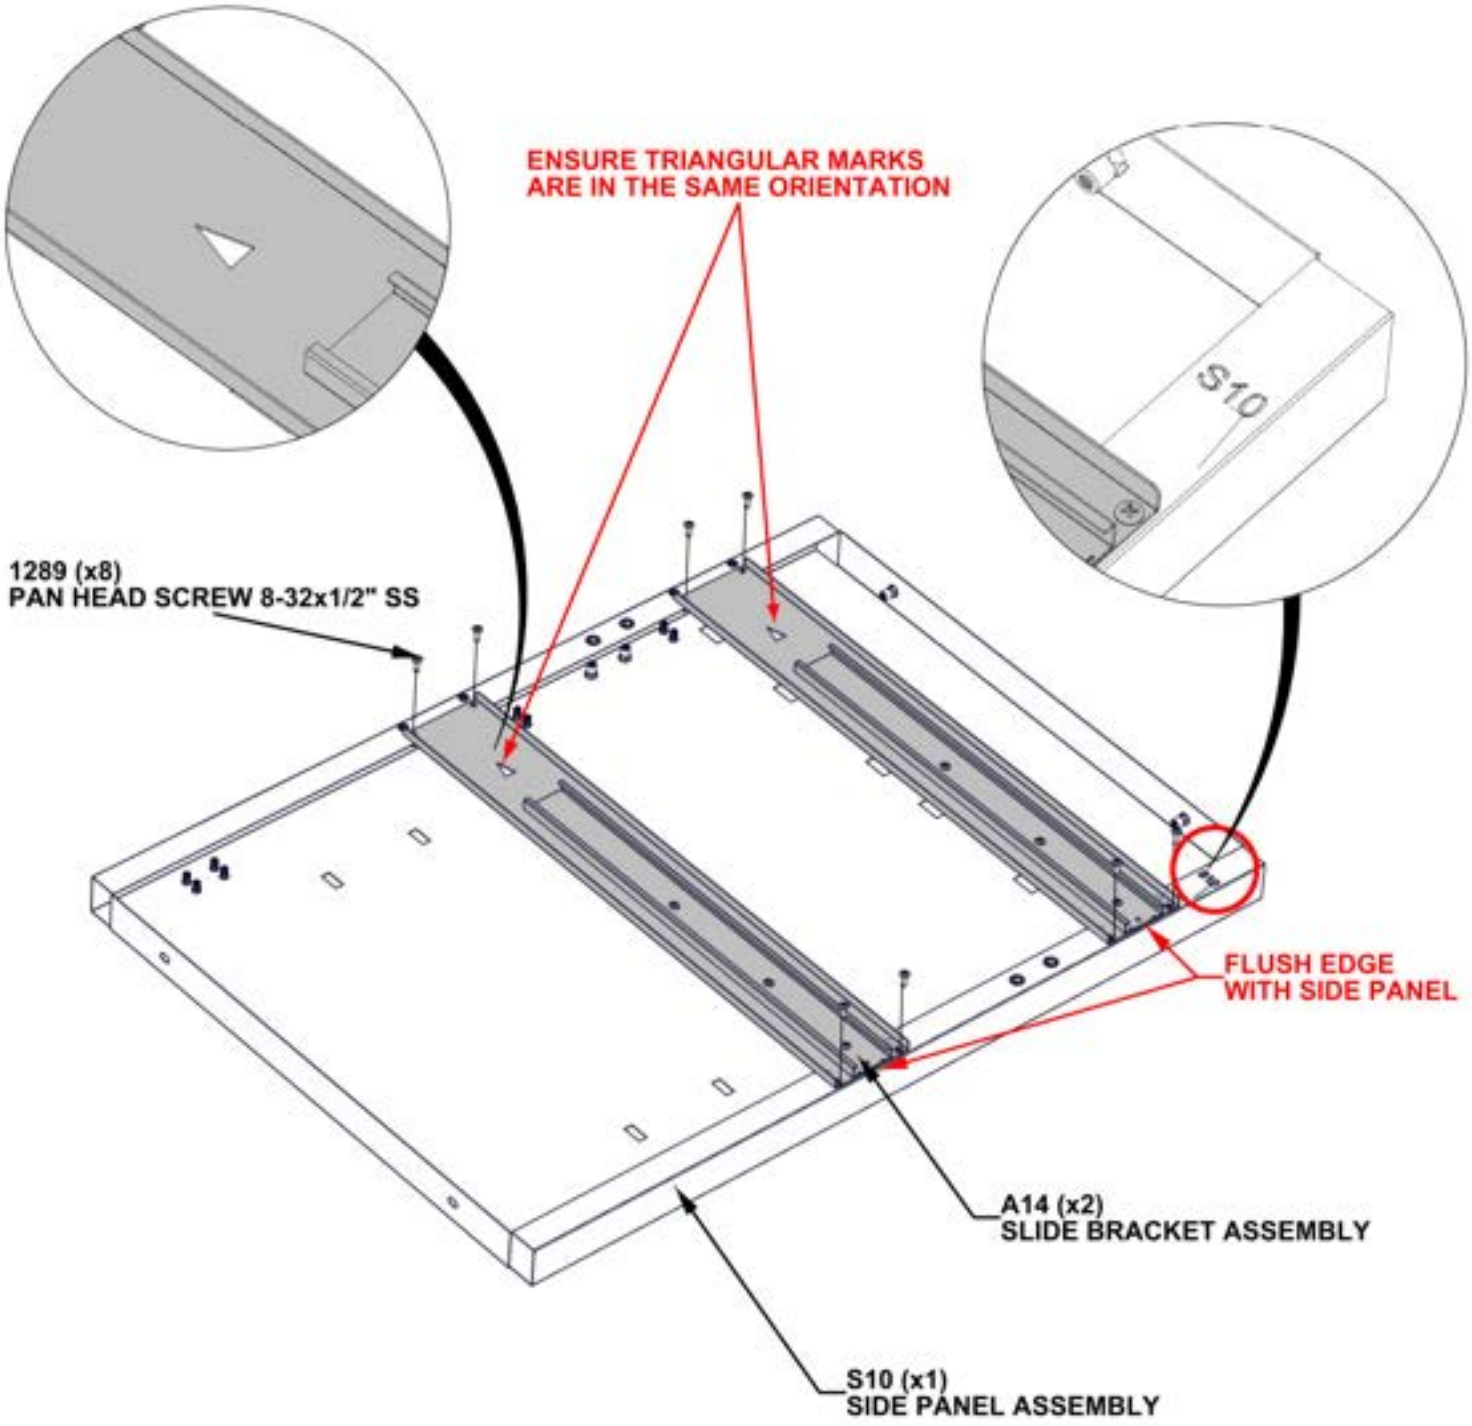

STEP 12B - CABINET ASSEMBLY




S10 SIDE PANEL ASSEMBLY
FROM STEP 12A



A14 (x1) SLIDE BRACKET ASSEMBLY - A4M06462
15/16"x3 3/8"x23 7/16" (23x85x595)

Qty	PartNo	Description
4	H101289	PAN HEAD SCREW 8-32x1/2" SS

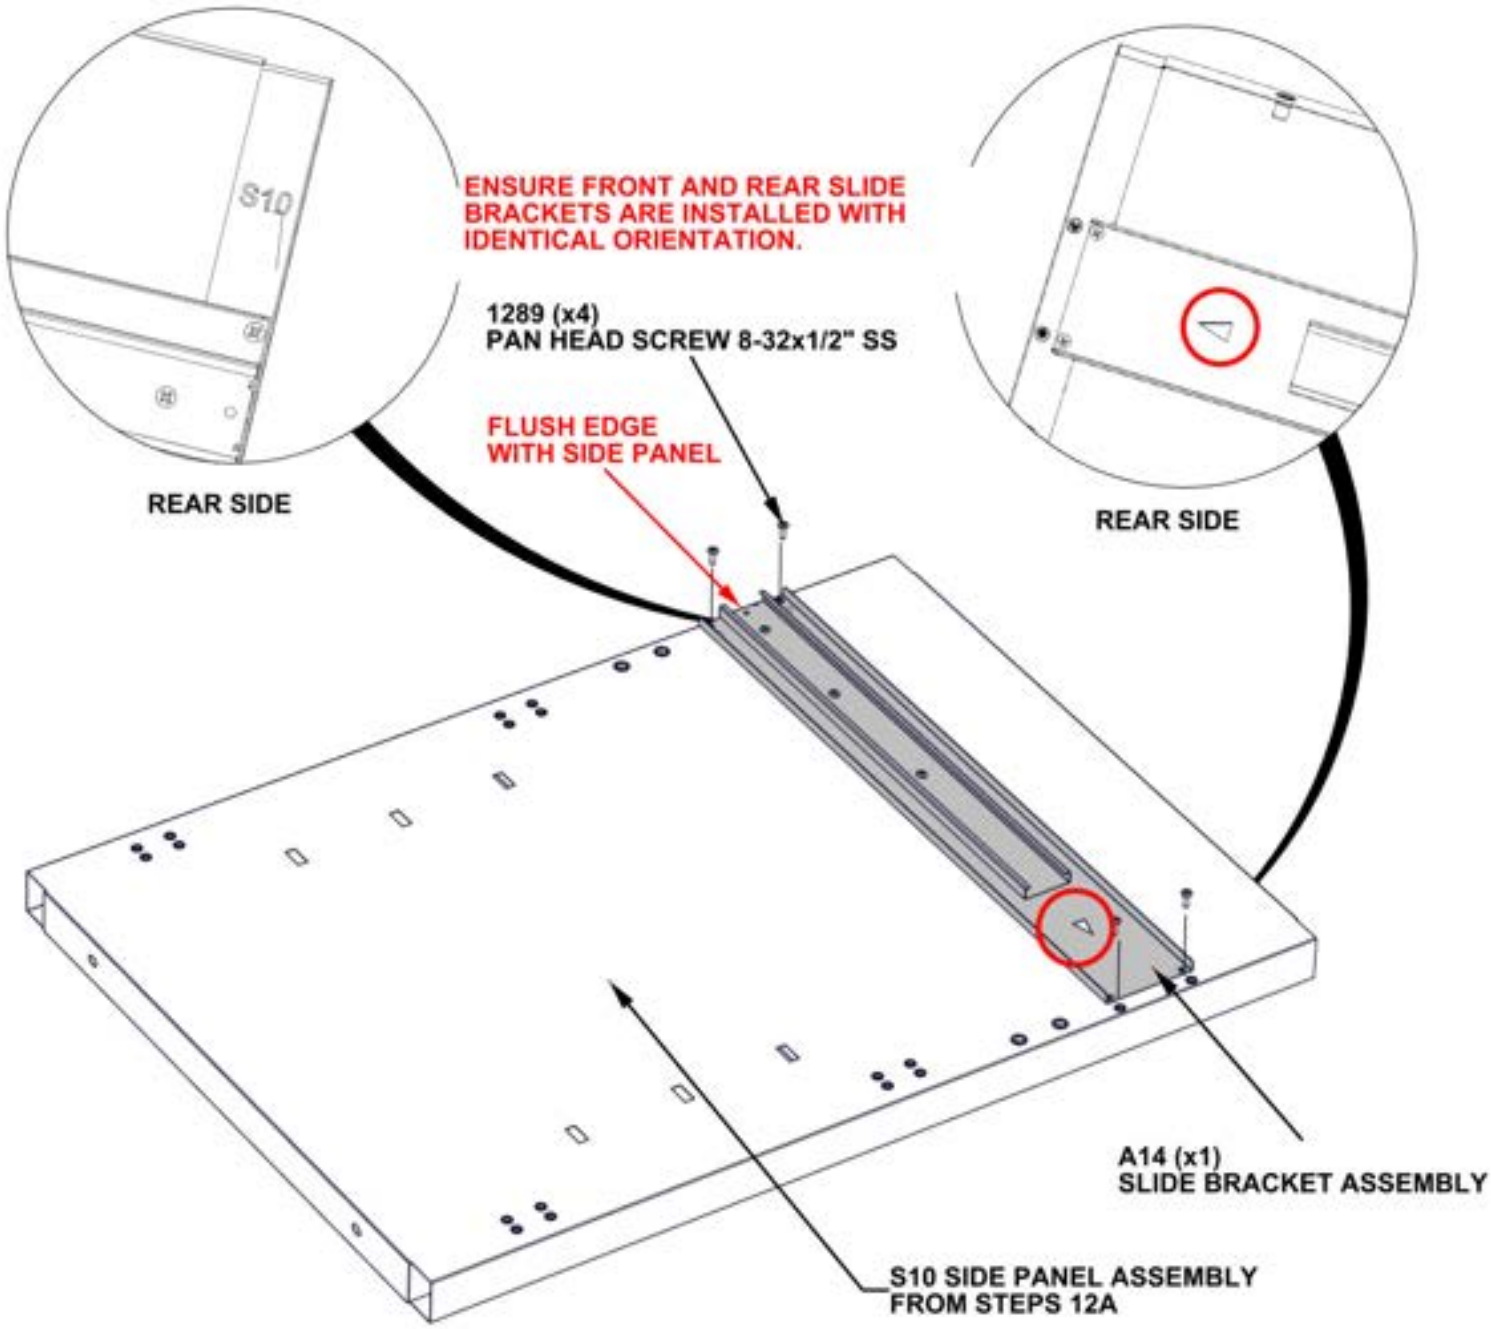


STEP 13 - CABINET ASSEMBLY



S10 SIDE PANEL ASSEMBLY FROM STEPS 12A-12B

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

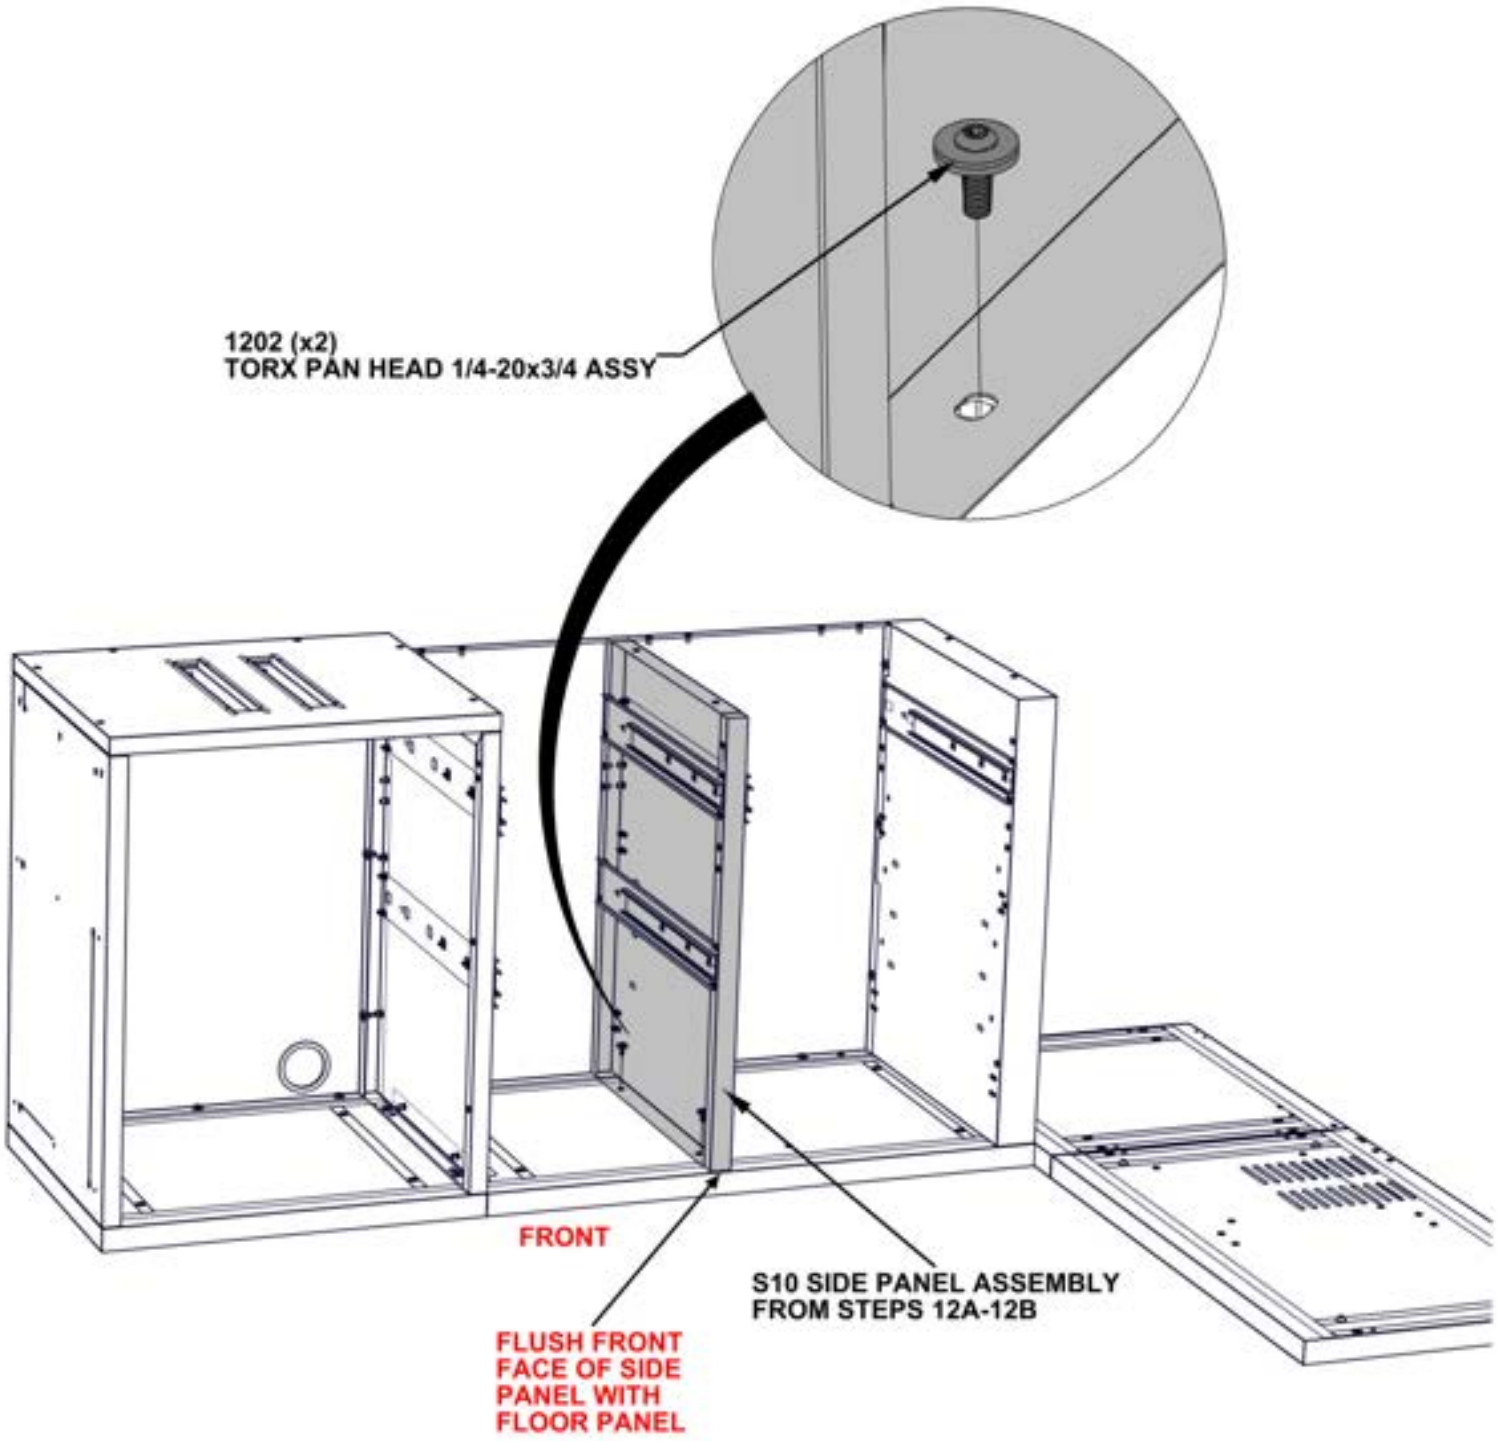


STEP 14 - CABINET ASSEMBLY



S8 BACK PANEL ASSEMBLY - A4M06735
(x1) 1 1/2"x24 3/16"x33 9/16" (38.3x614x852)

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- FLUSH ALL SIDES OF BACK PANEL.

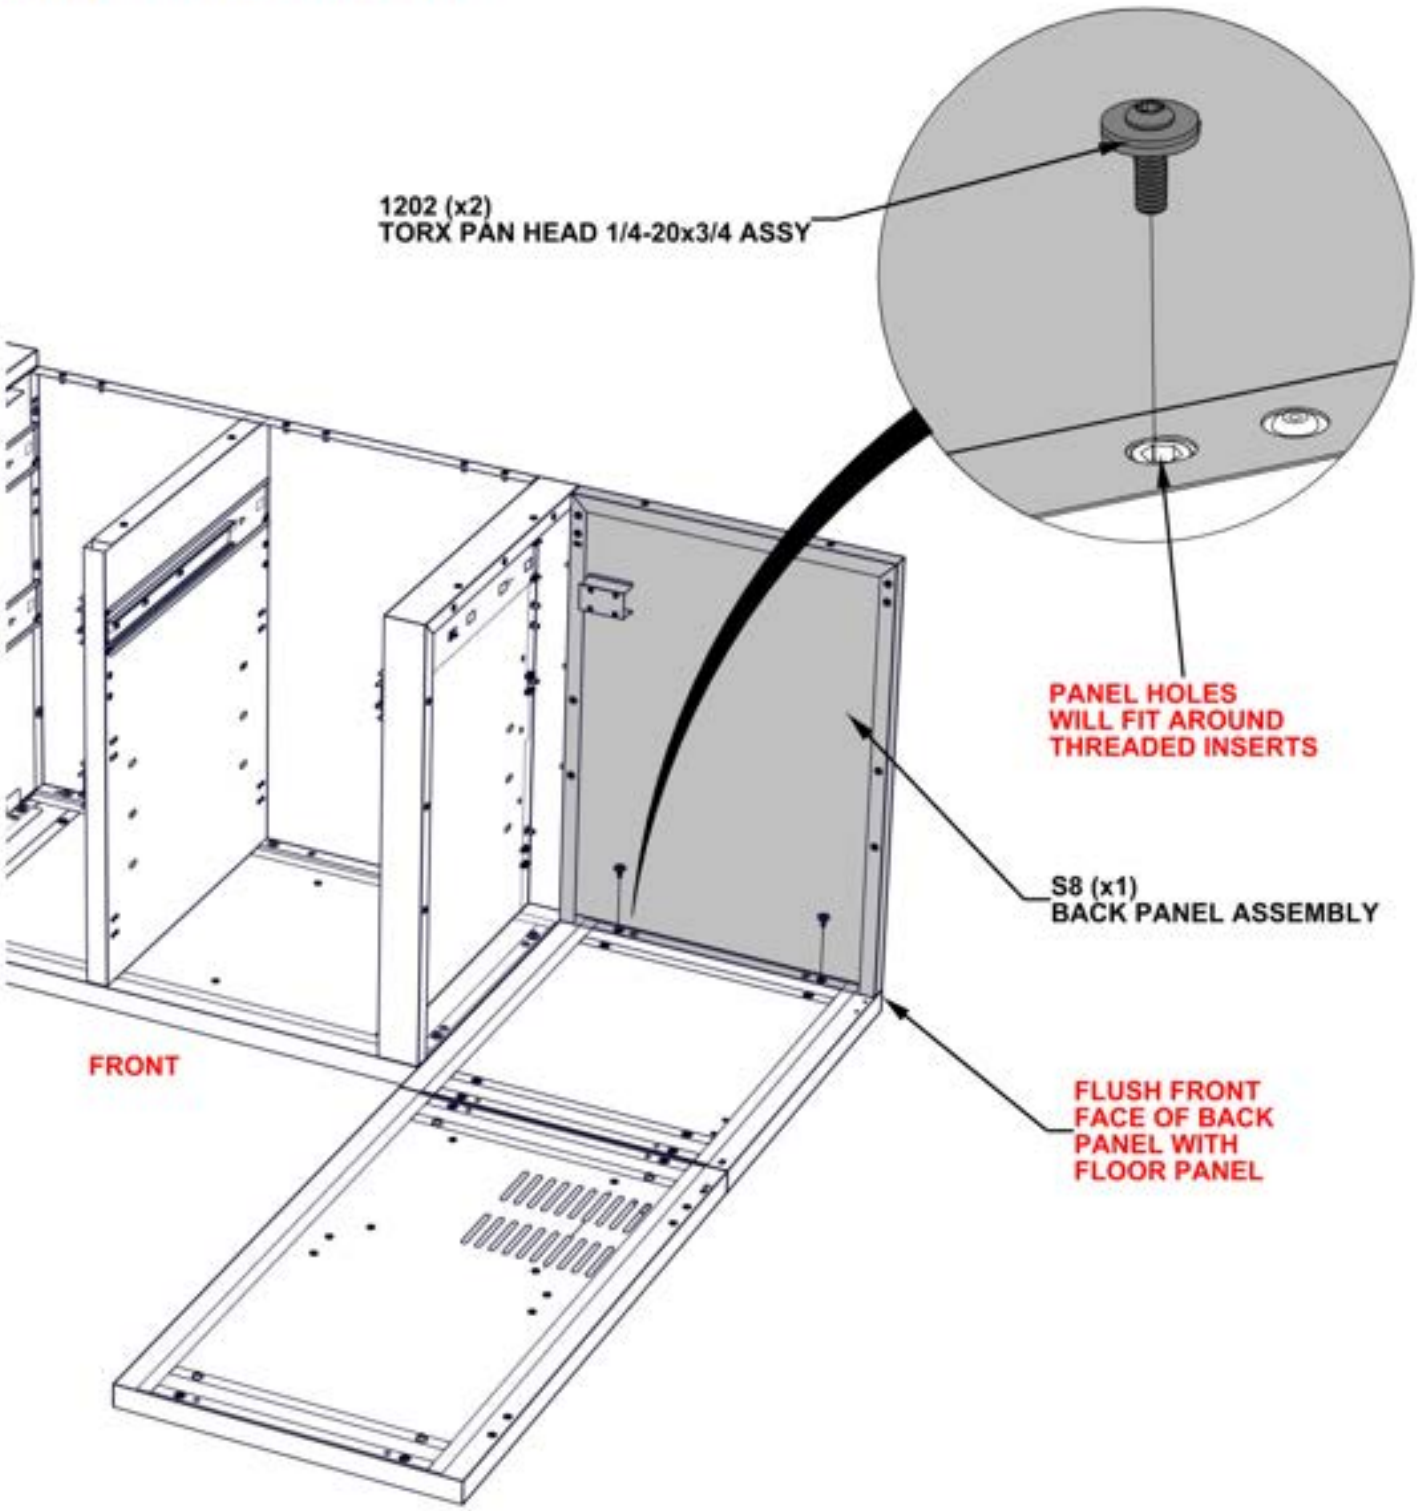


STEP 15 - CABINET ASSEMBLY



Qty	PartNo	Description
5	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

A3 SPLICE BRACKET ASSEMBLY - A4M06738
(x1) 1 3/16"x4 3/16"x13 3/16" (30x107x335)

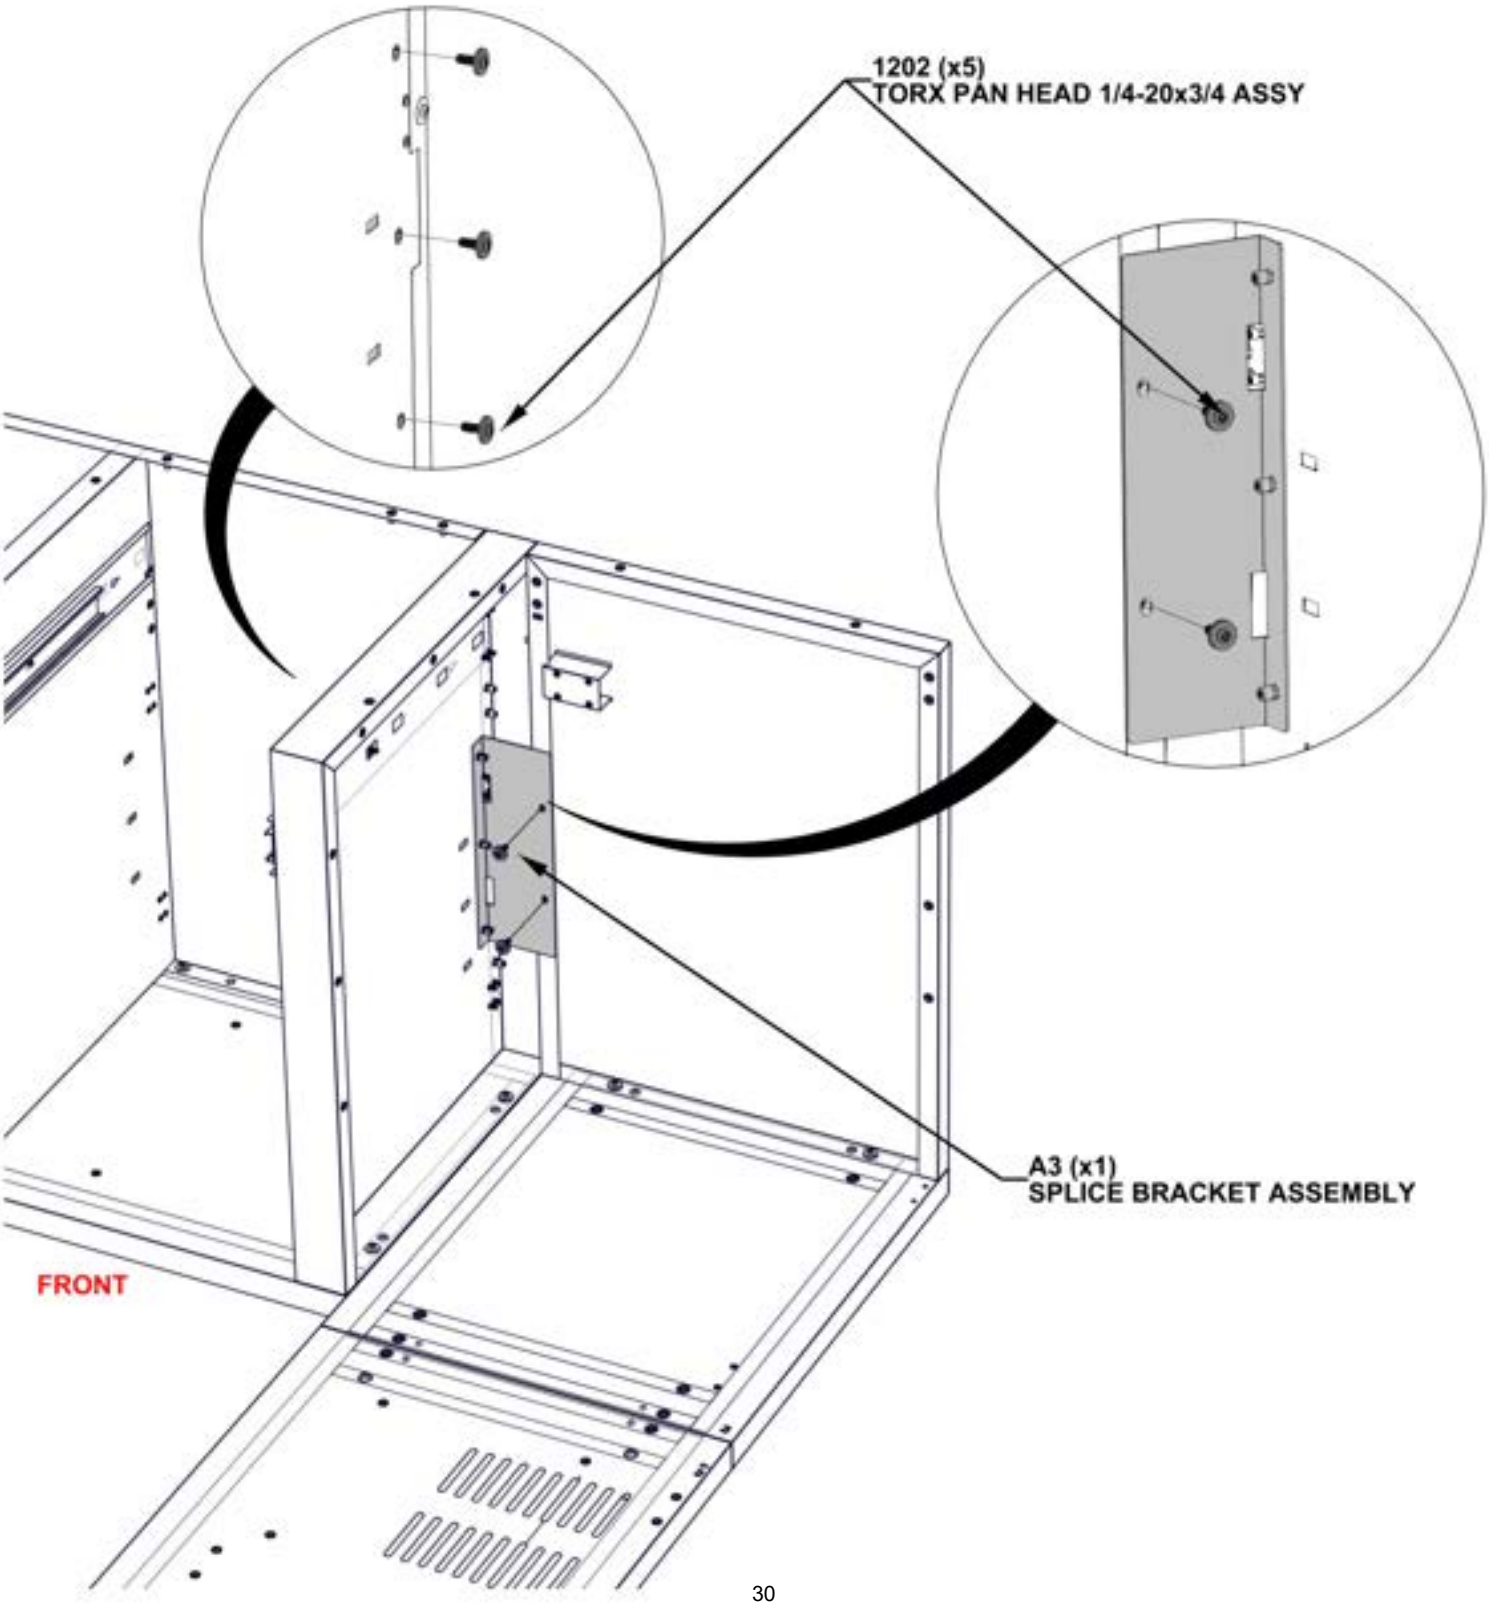


STEP 16 - CABINET ASSEMBLY



A5 SHELF BRACKET - A4M03141
(x4) 5/8"x7/8"x2 1/16" (16x22x53)

- ATTACH SHELF BRACKETS ON BOTH SIDES OF CENTER CABINET.

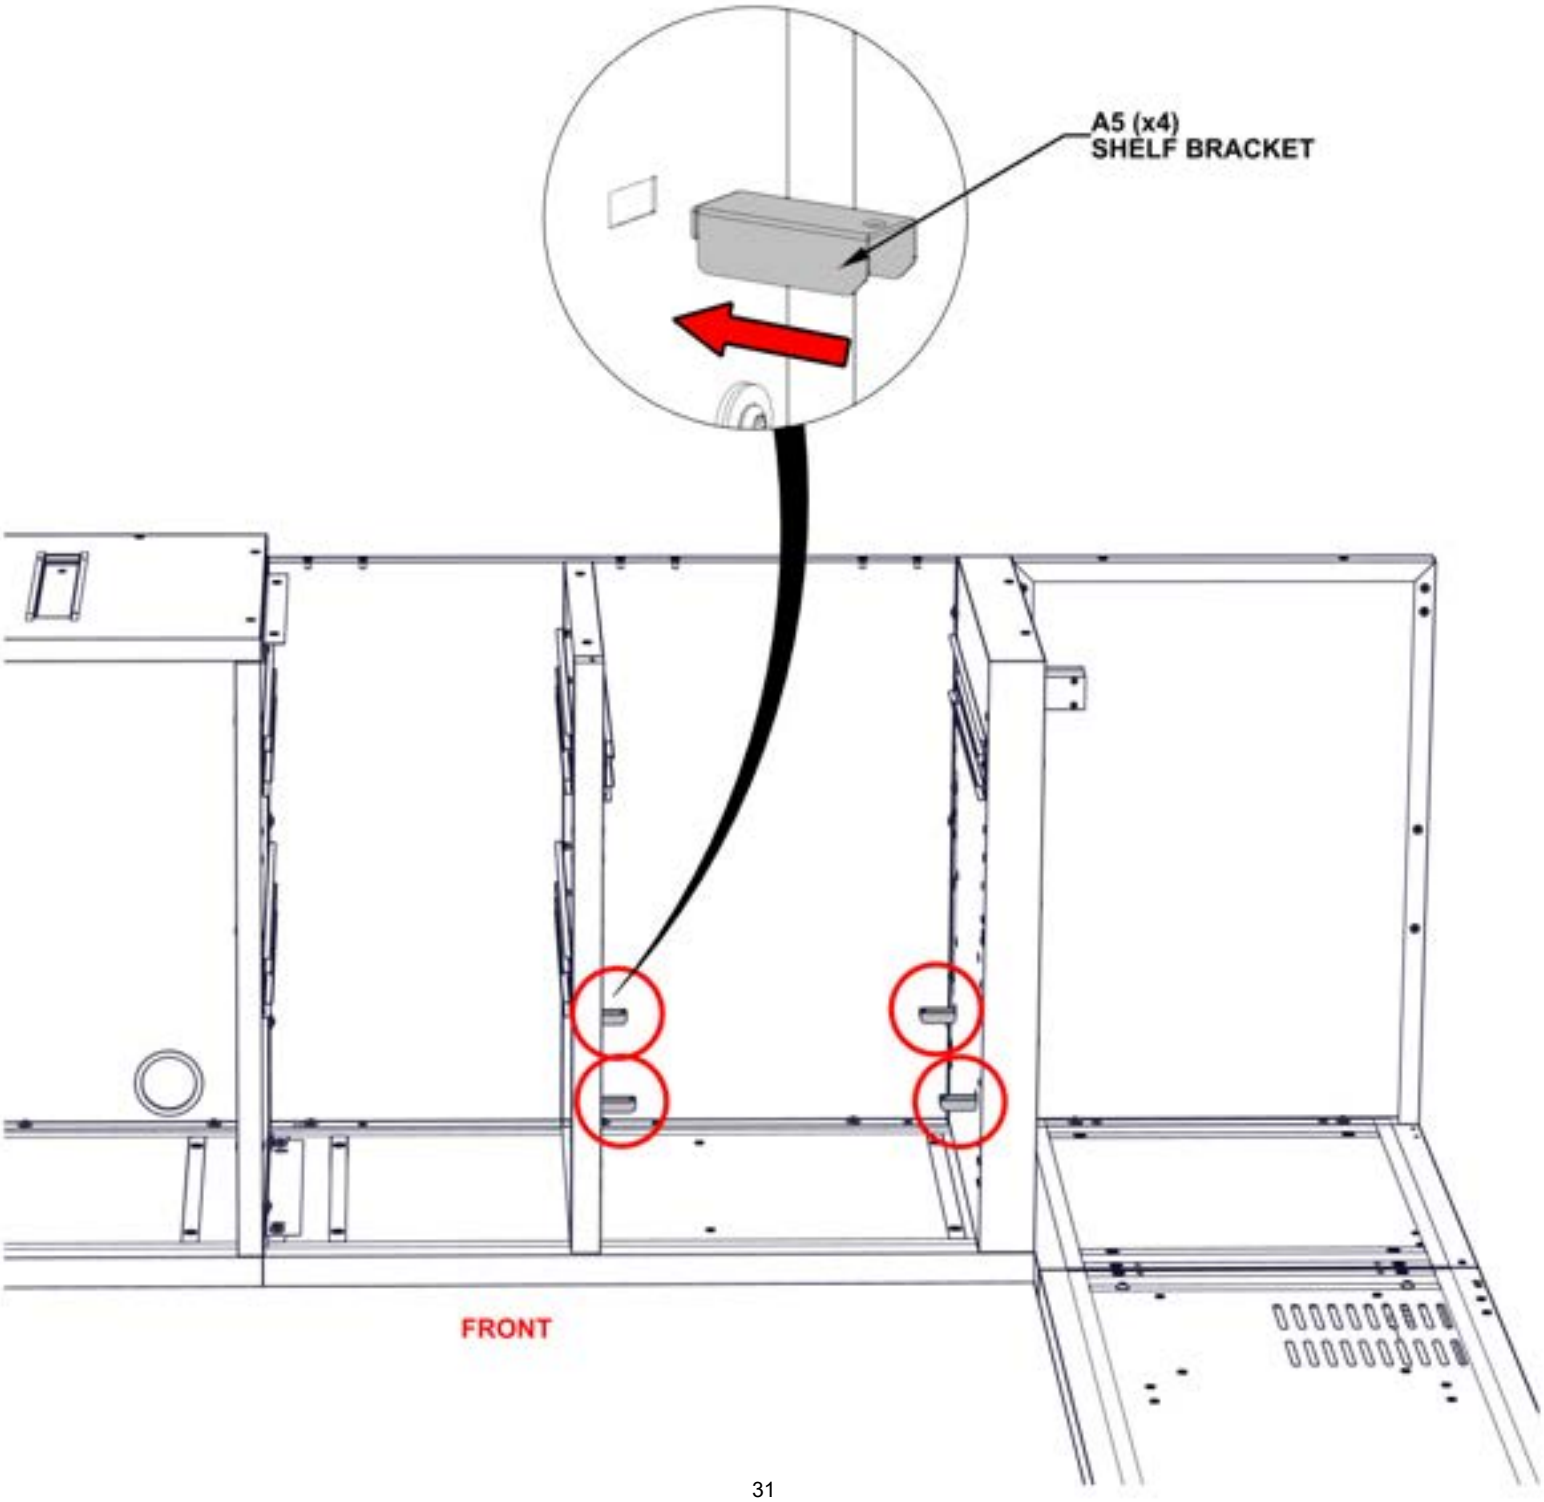


STEP 17 - CABINET ASSEMBLY



L1 SHELF - A4M06441
(x1) 1"x20 11/16"x24" (25x525x610)

- PUT SHELF ON THE SHELF BRACKETS.

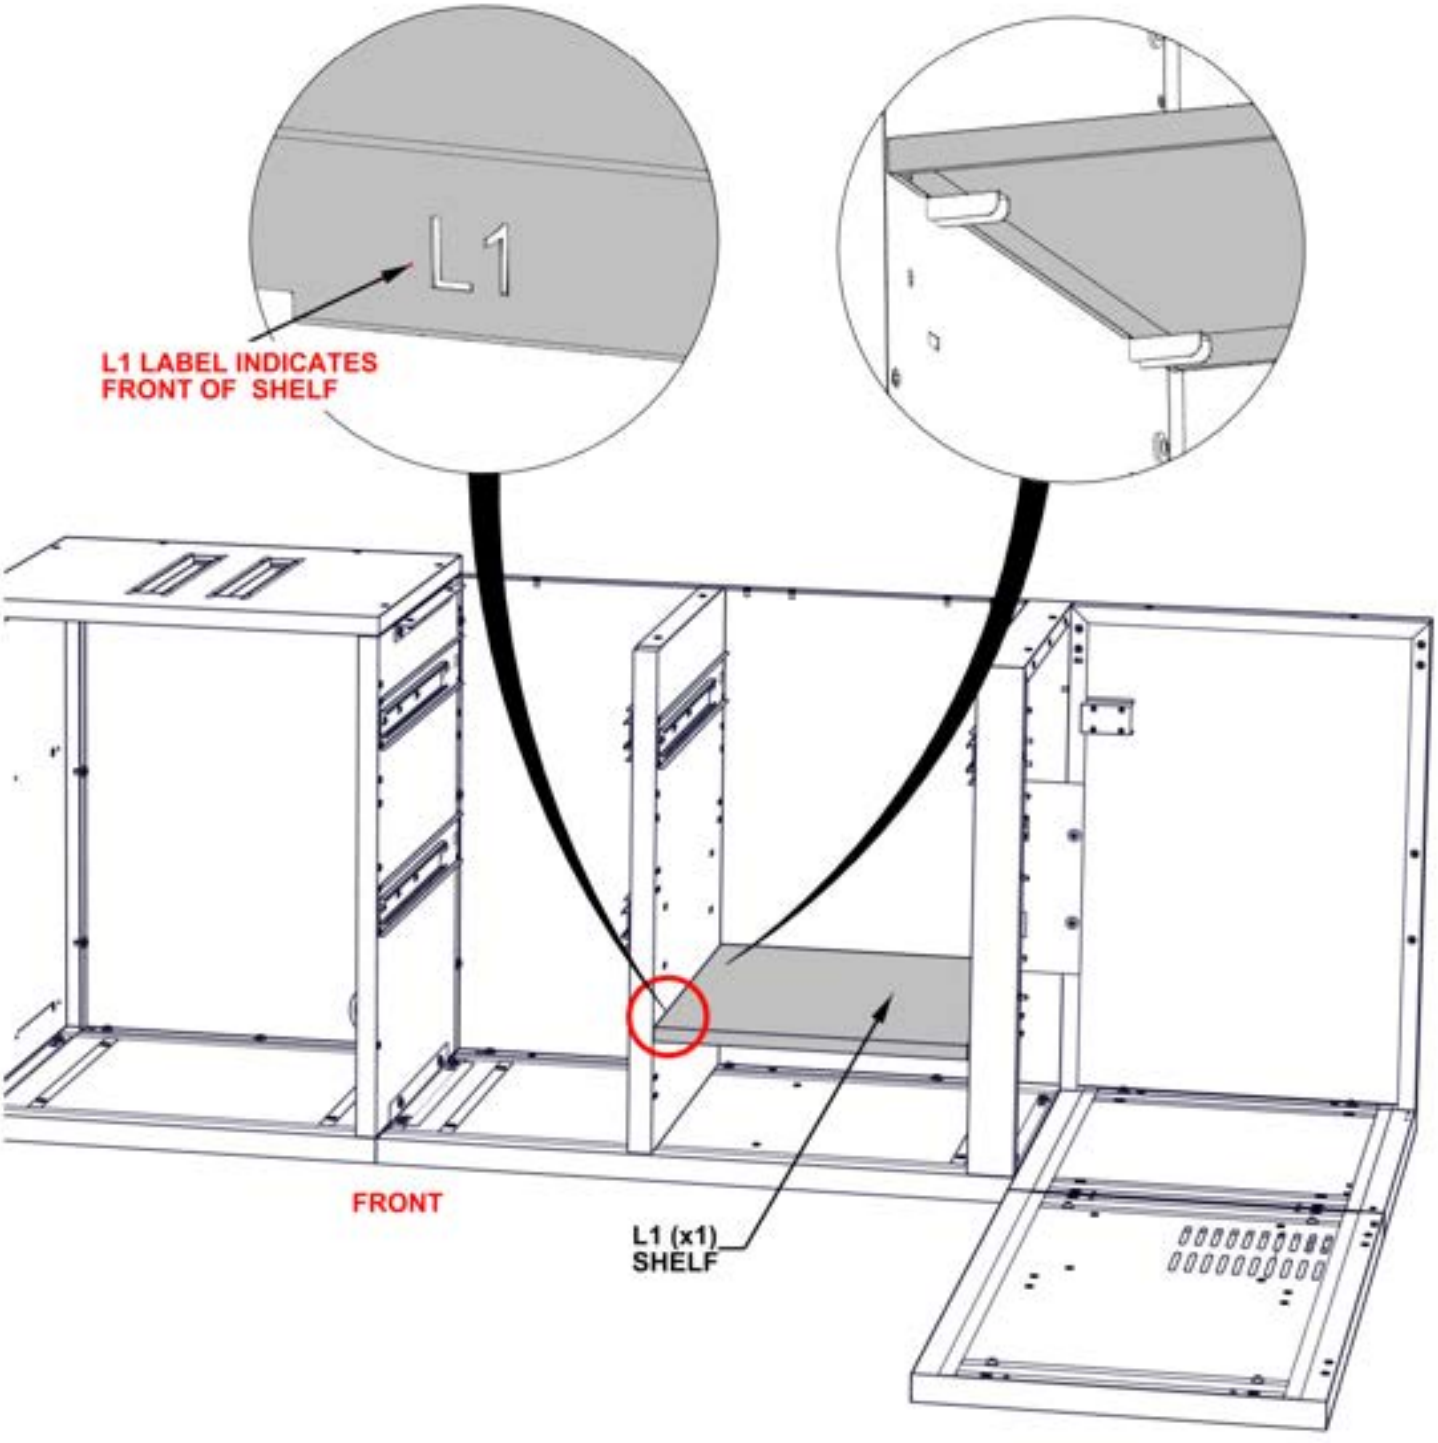


STEP 18 - CABINET ASSEMBLY



H11 BEAM ASSEMBLY - A4M06199
(x1) 1 3/16"x3 3/8"x16 3/4" (30x85x426)

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- HARDWARE ATTACHES ON INSIDE OF CABINET.

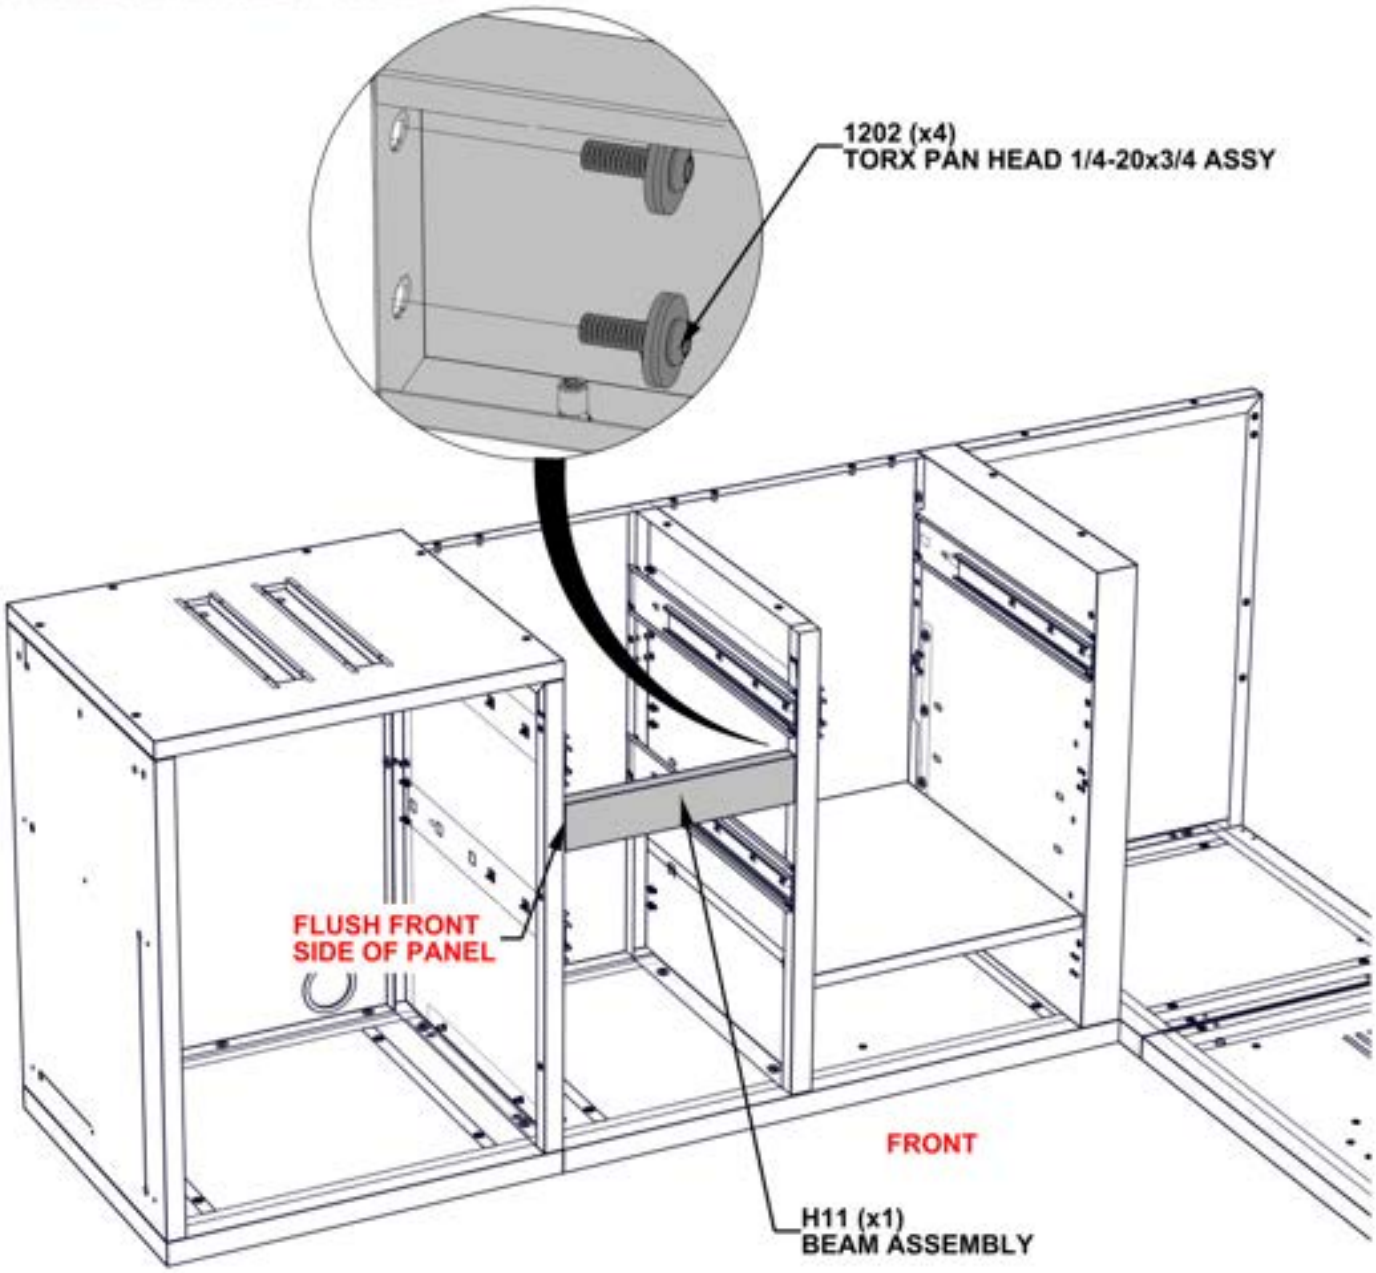

STEP 19A - CABINET ASSEMBLY






Qty	PartNo	Description
4	H101289	PAN HEAD SCREW 8-32x1/2" SS

H6 BEAM ASSEMBLY - A4M06196
(x1) 1 3/16"x3 3/8"x20 11/16" (30x85x526)

A2 MAGNET BRACKET - A4M03026
(x2) 1"x1 1/4"x3 1/8" (25x31x80)

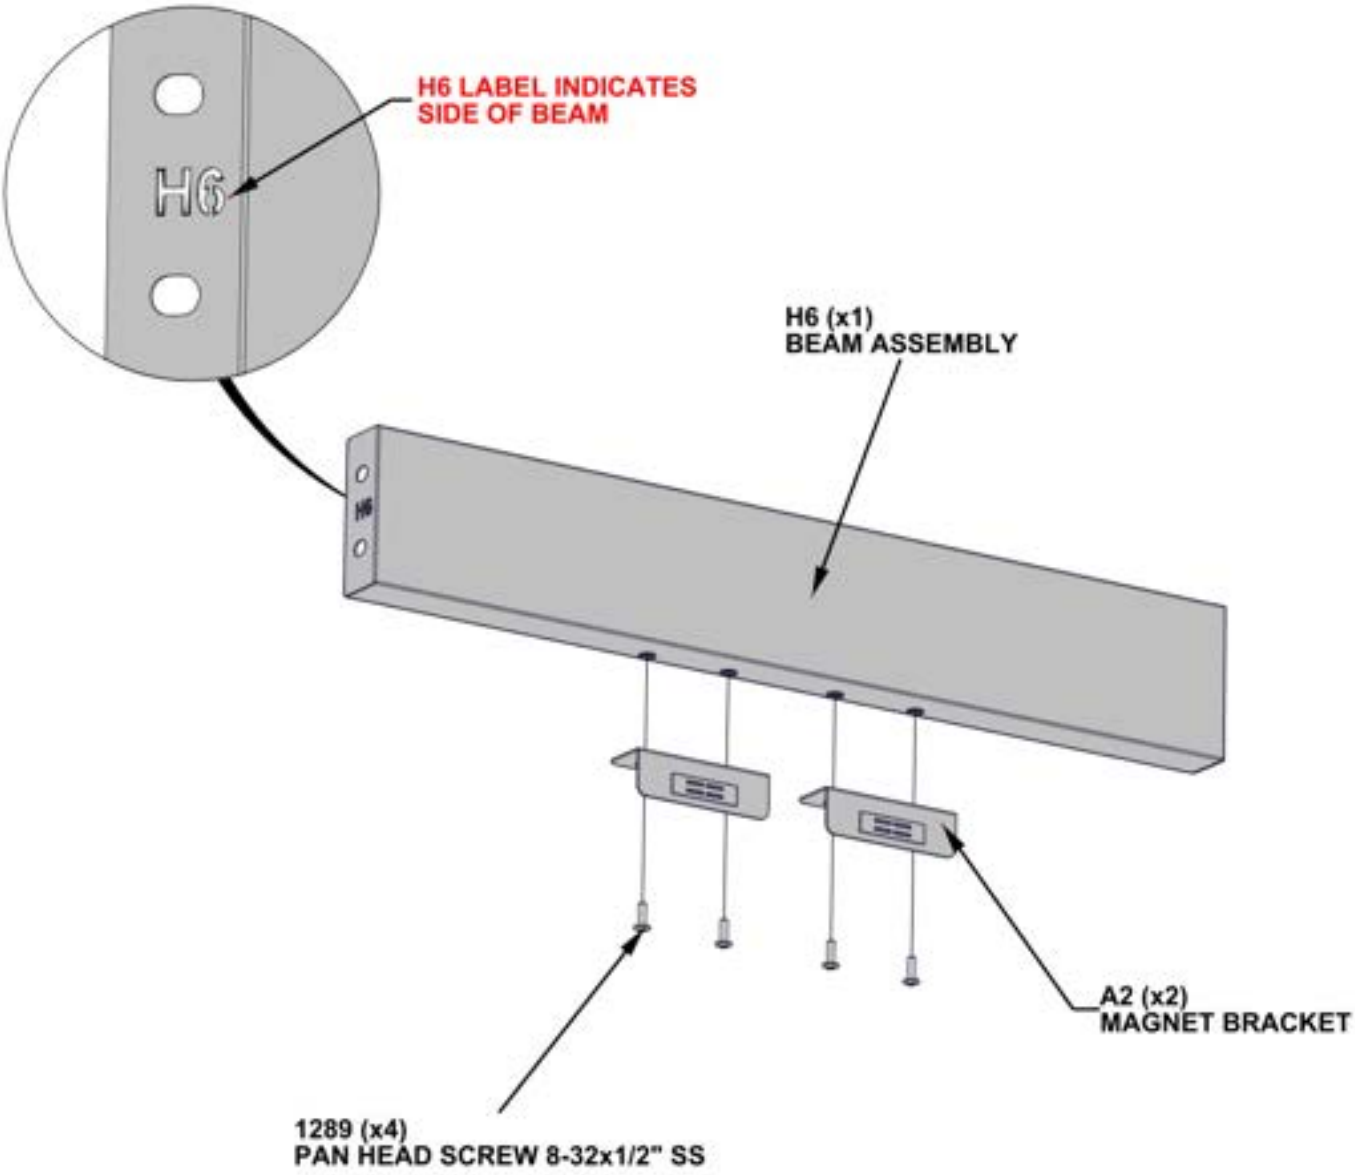


STEP 19B - CABINET ASSEMBLY



Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

H6 BEAM ASSEMBLY FROM STEP 19A

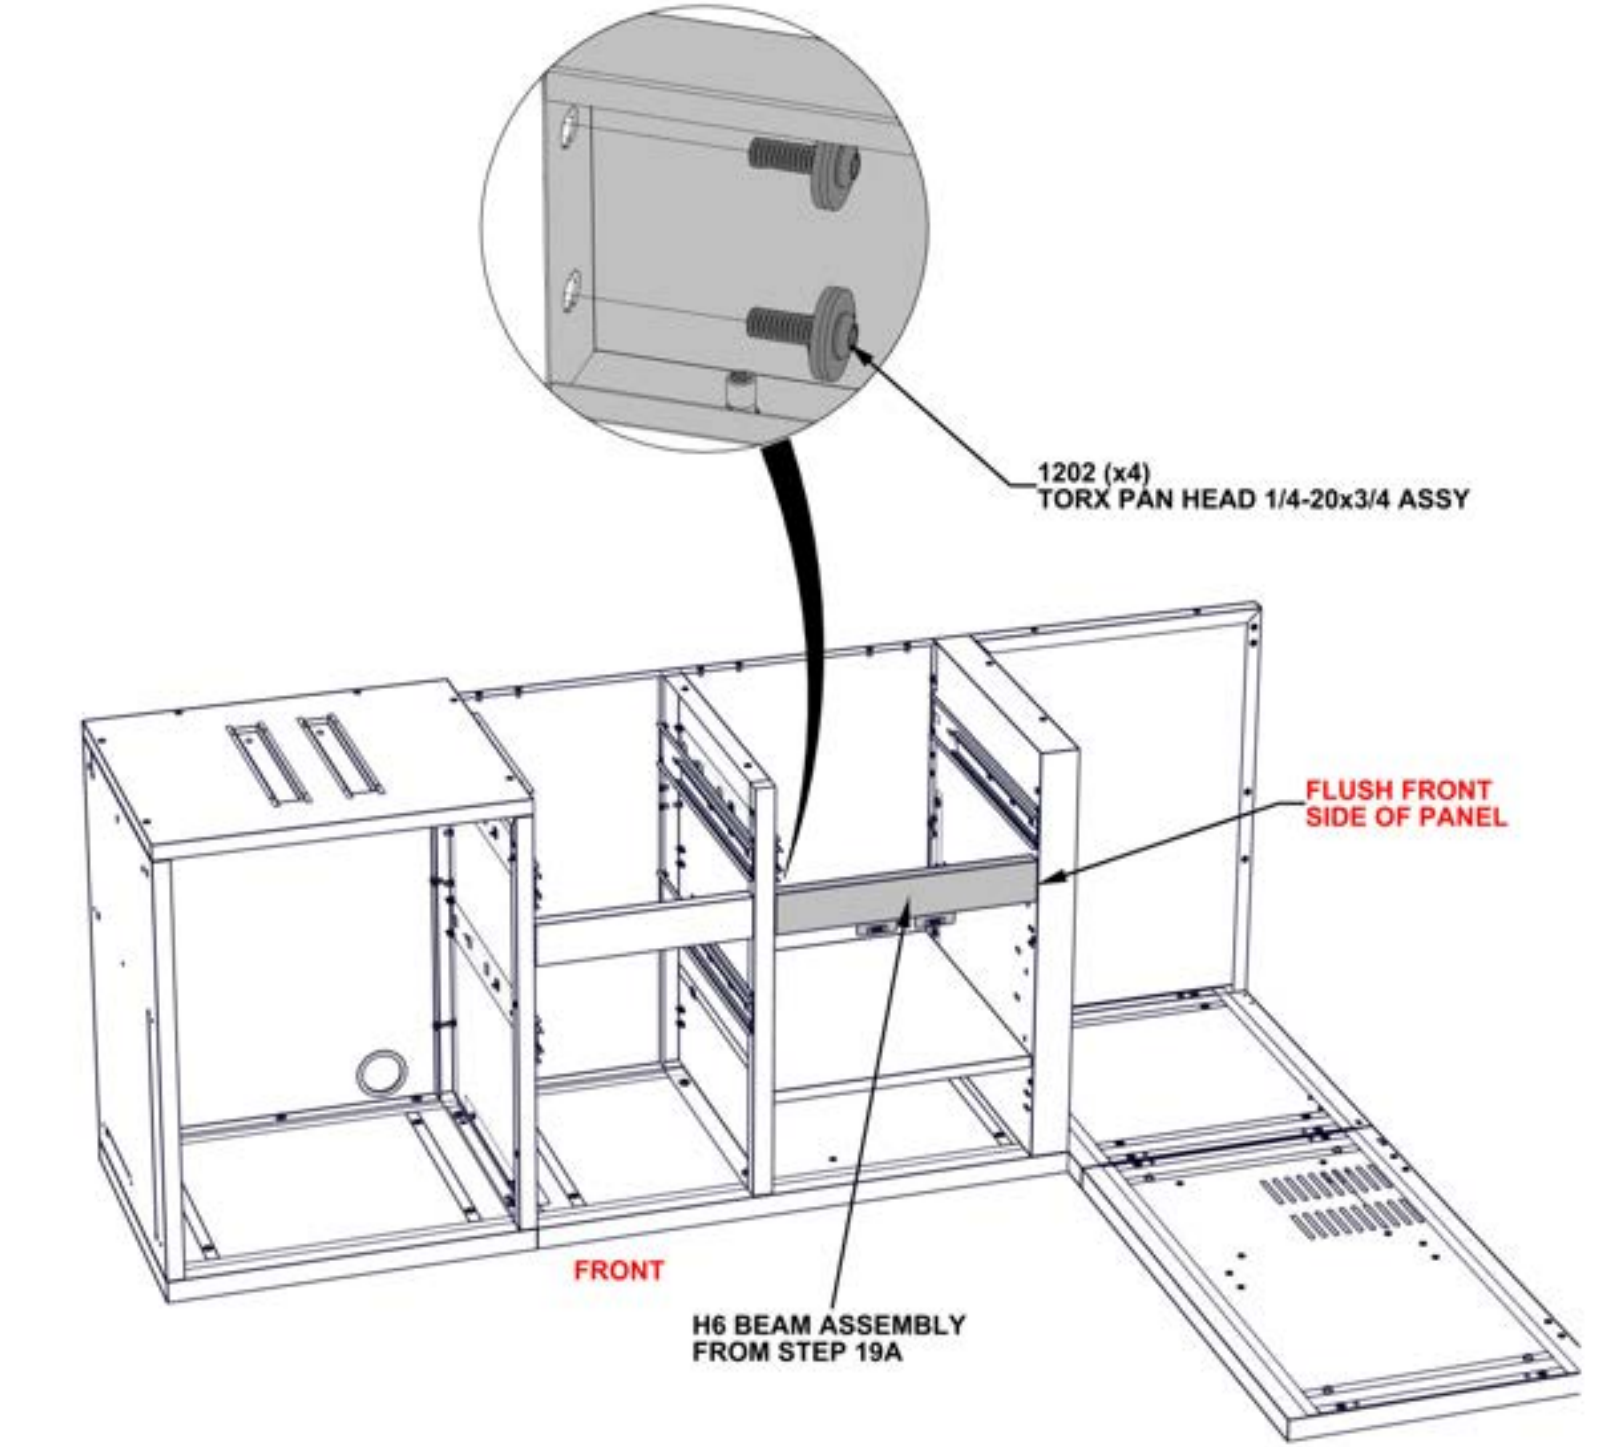


STEP 20 - CABINET ASSEMBLY




Qty	PartNo	Description
3	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

A8 SPLICE BRACKET ASSEMBLY - A4M07152
(x1) 1 3/16"x1 3/16"x17 11/16" (30x30x450)

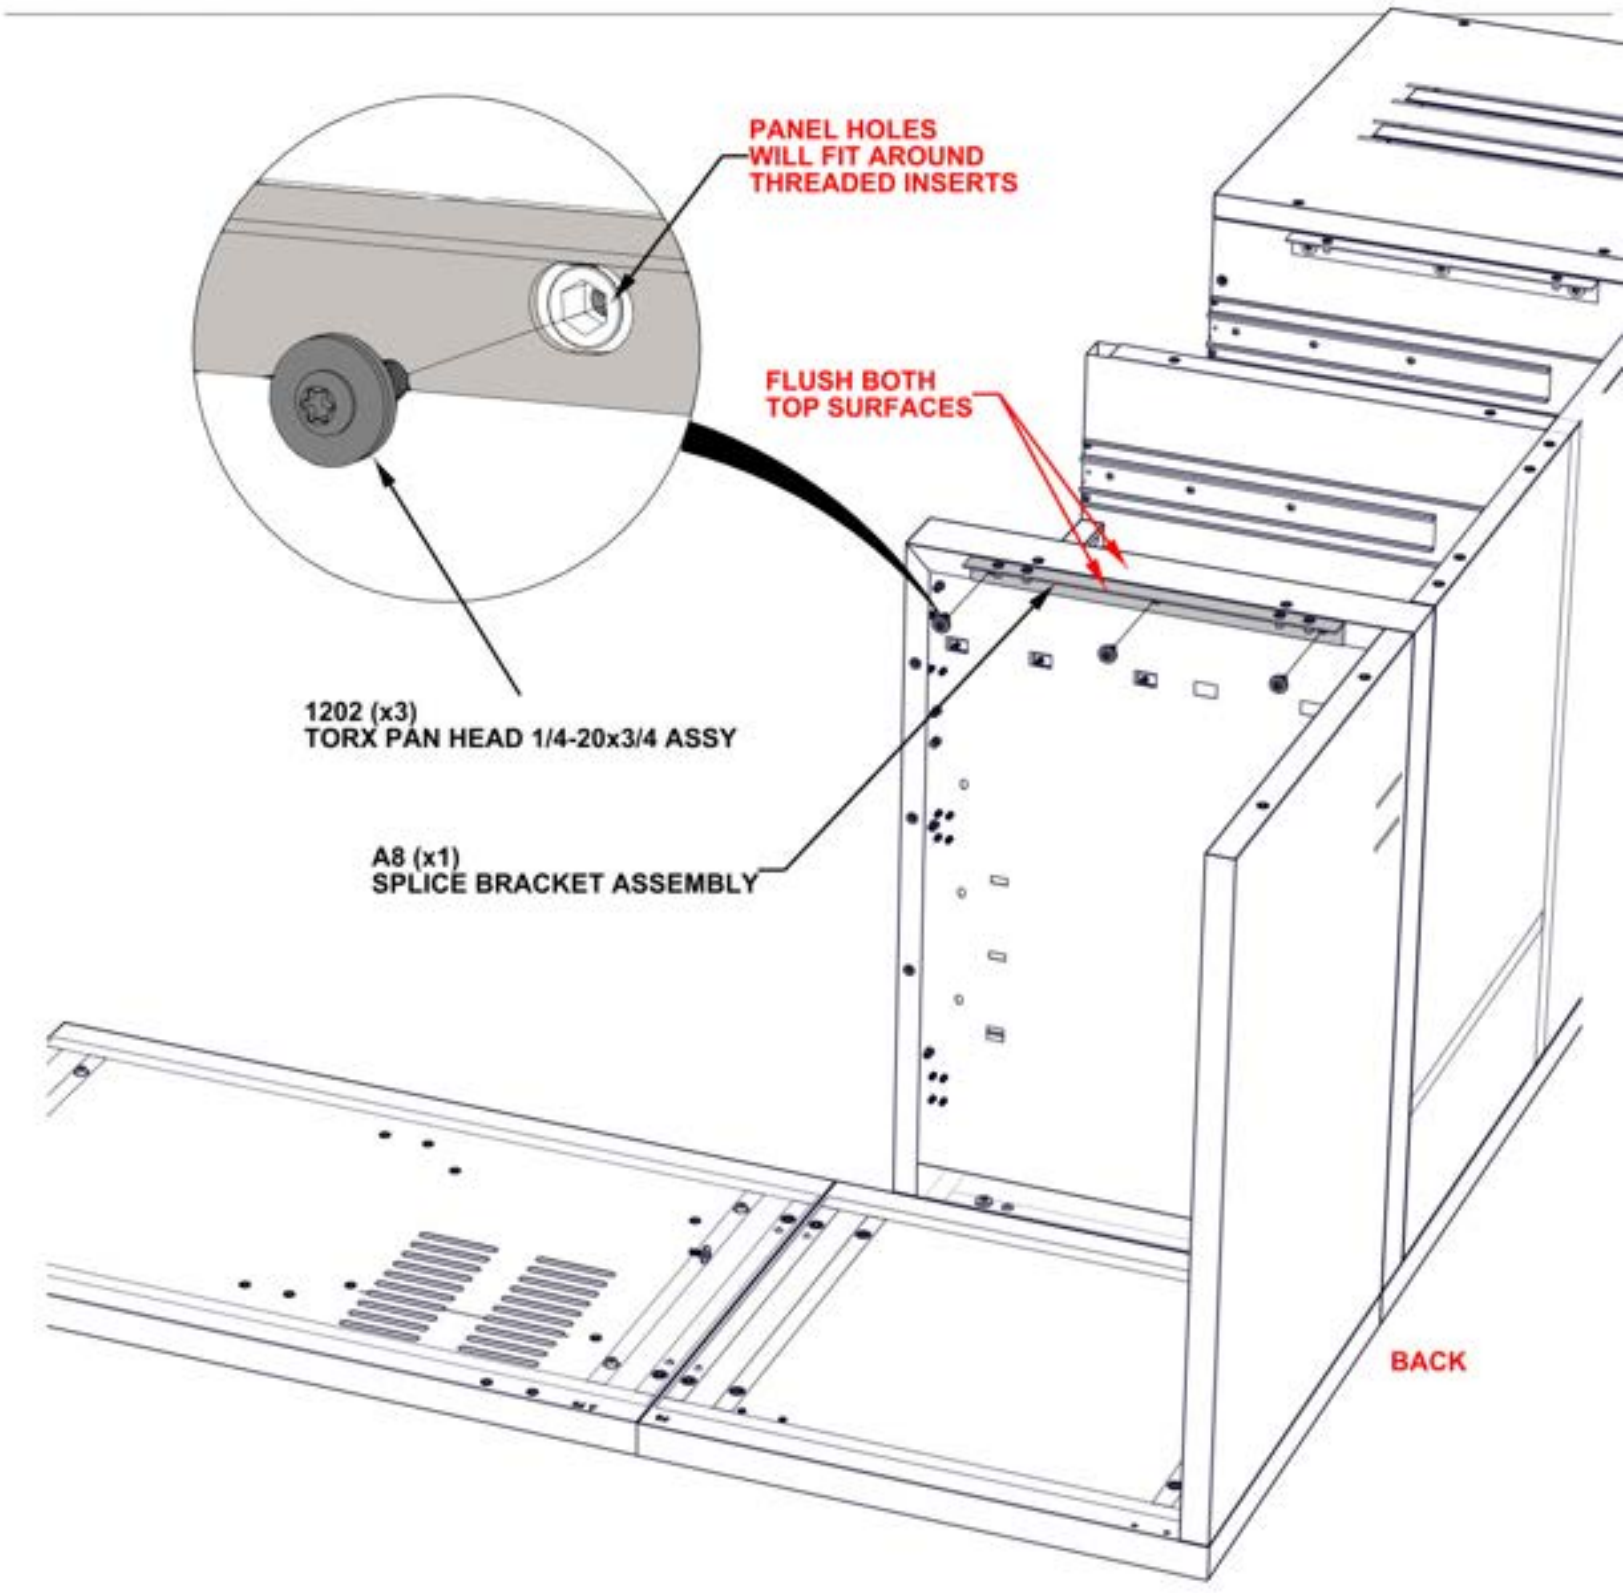


STEP 21 - CABINET ASSEMBLY

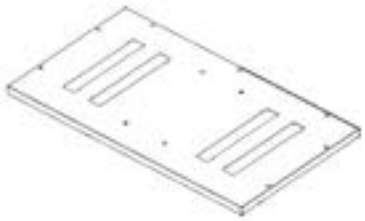


Qty	PartNo	Description
9	H101103	TORX SOCKET SCREW 1/4-20

T5 TABLETOP PANEL ASSEMBLY - A4M06722
(x1) 1 1/4"x24 3/16"x42 5/16" (32x614x1074)

- FLUSH BACK AND SIDES OF PANEL ASSEMBLY.
- SQUARE ALL SIDES OF CABINET BEFORE TIGHTENING HARDWARE.

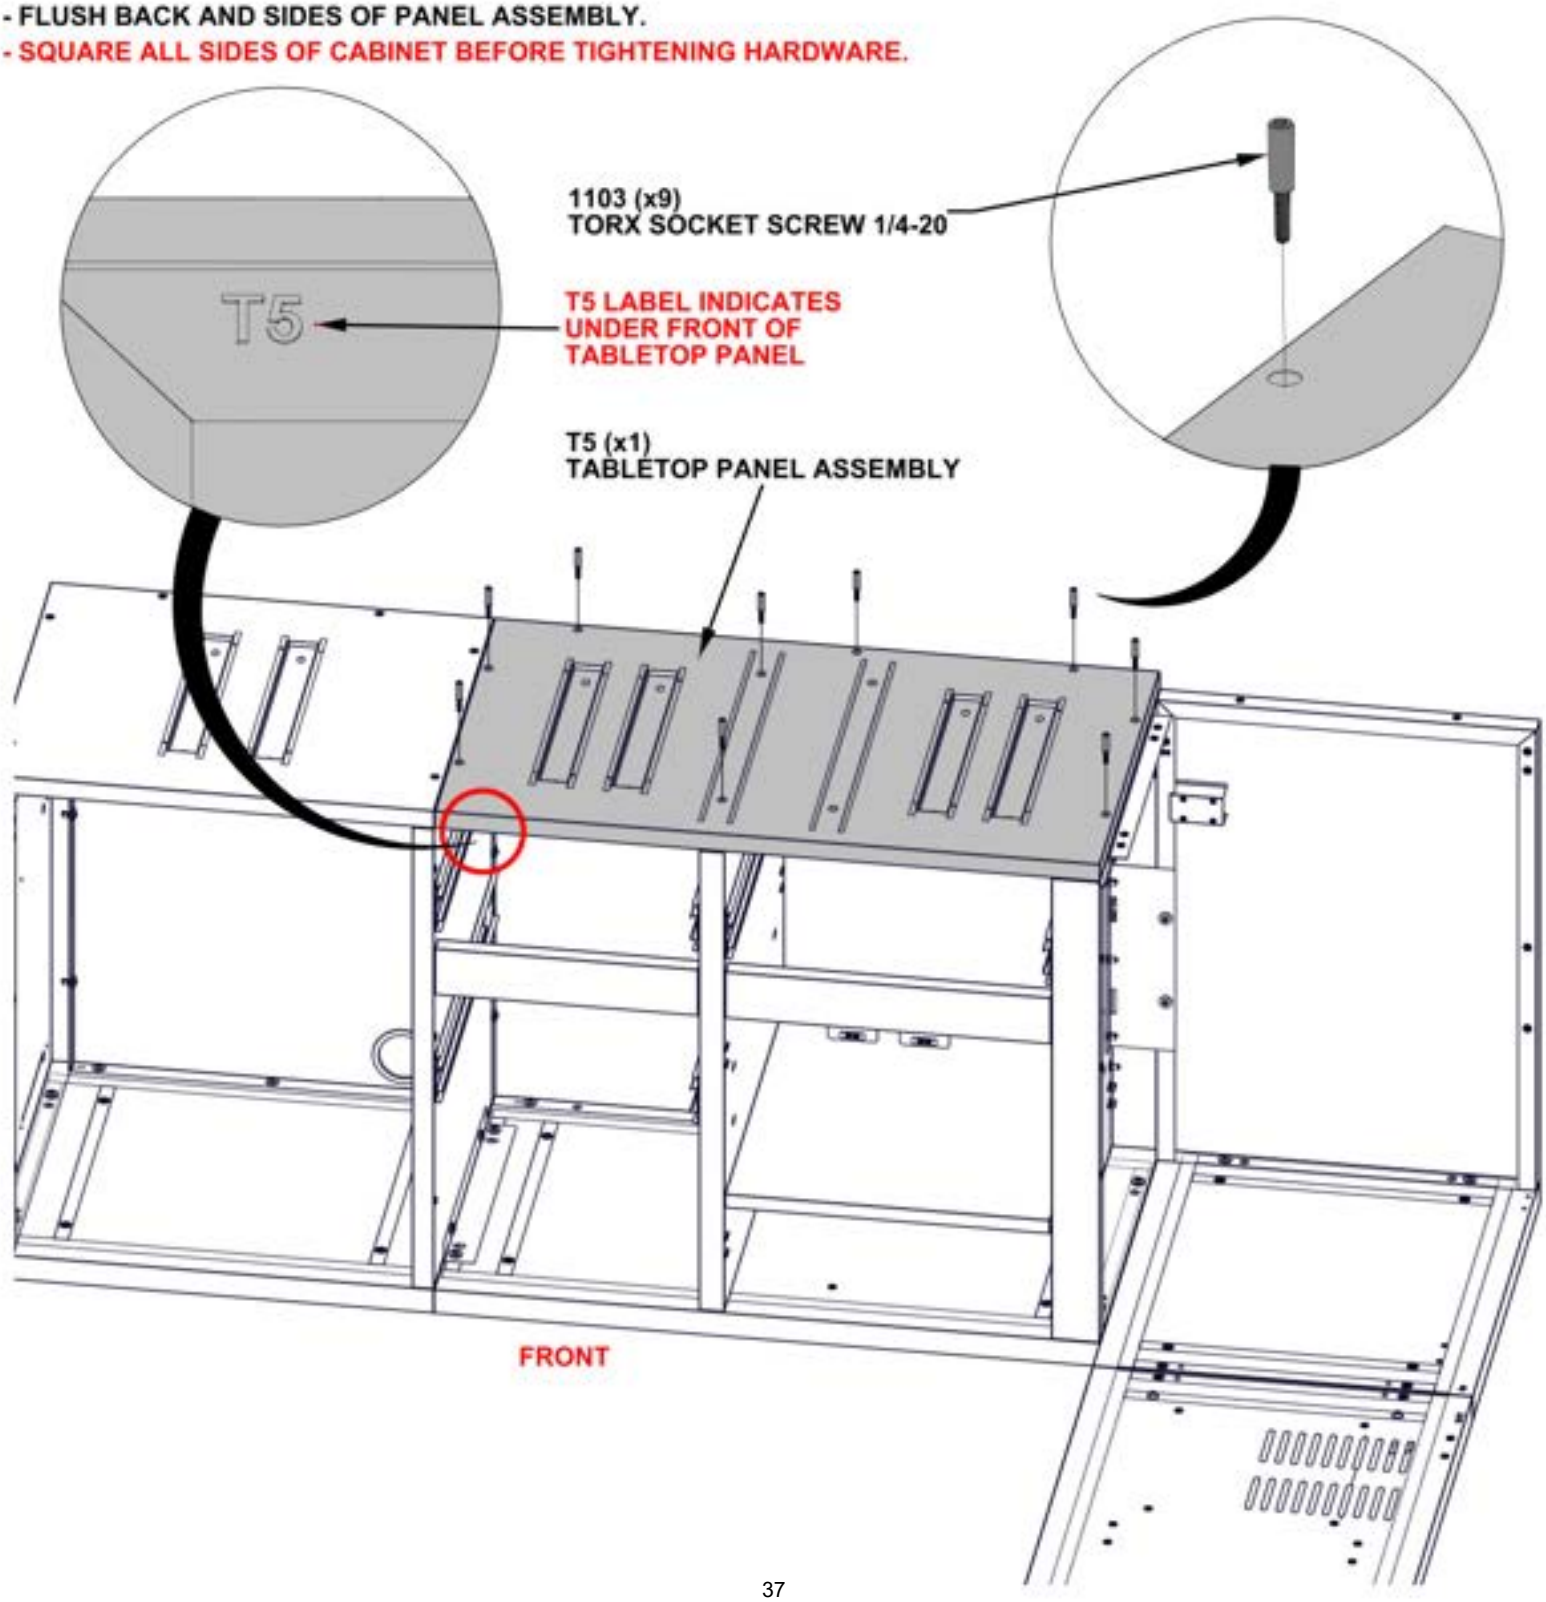


STEP 22 - CABINET ASSEMBLY

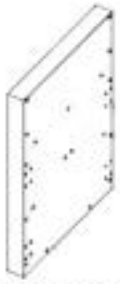

S7 SIDE PANEL ASSEMBLY - A4M06725
(x1) 2 7/8"x24 3/16"x33 9/16" (73x614x852)

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

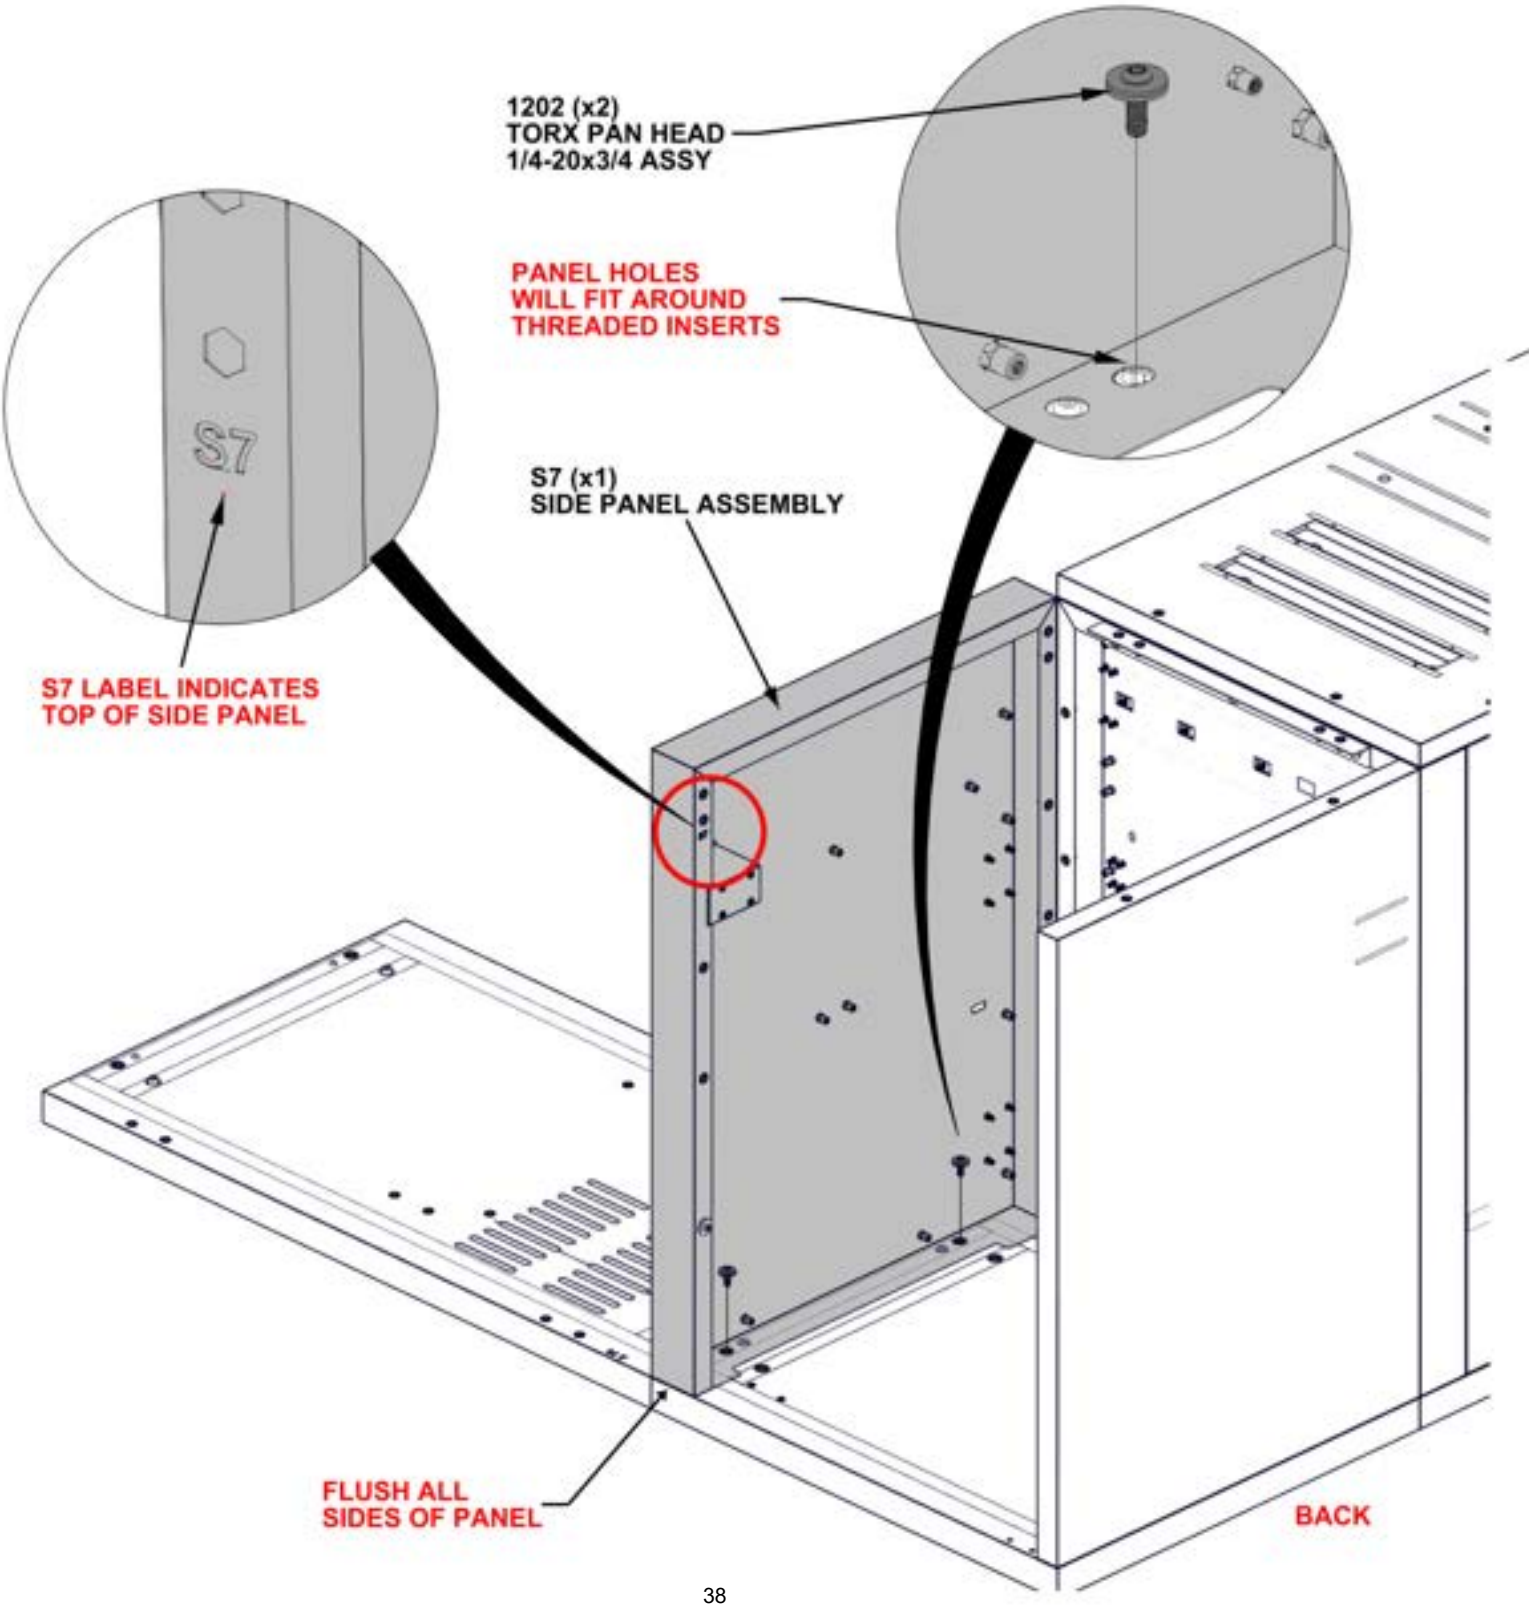


STEP 23 - CABINET ASSEMBLY



Qty	PartNo	Description
7	H101202	TORX PAN HEAD

A4 SPLICE BRACKET - A4M06739
(x1) 1 3/16"x1 3/16"x23 5/8" (30x30x600)

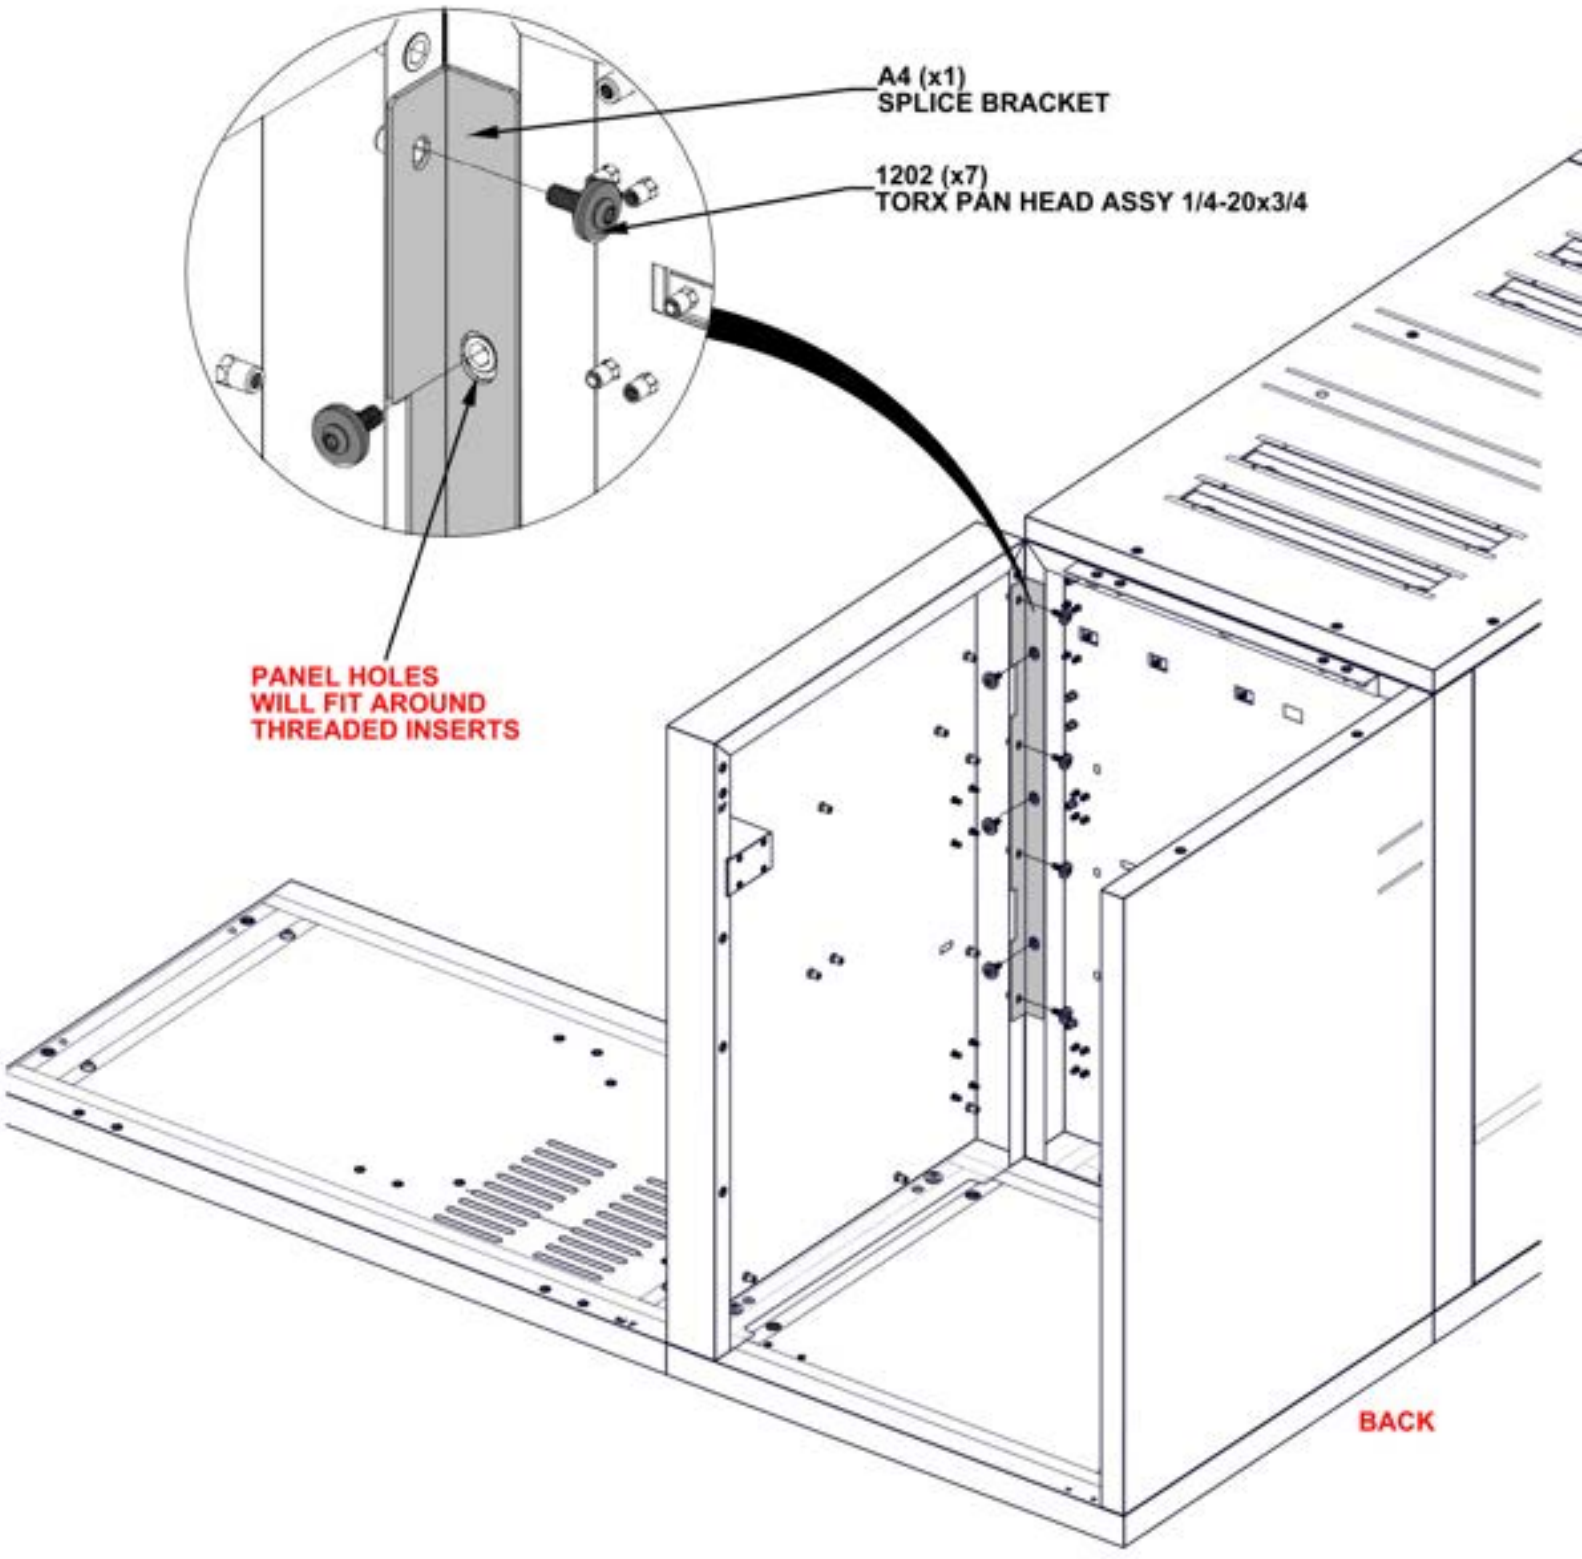


STEP 24 - CABINET ASSEMBLY



Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

A6 ANGLED BRACKET - A4M03053
(x1) 1 3/8"x1 15/16"x17 1/8" (35x50x435)

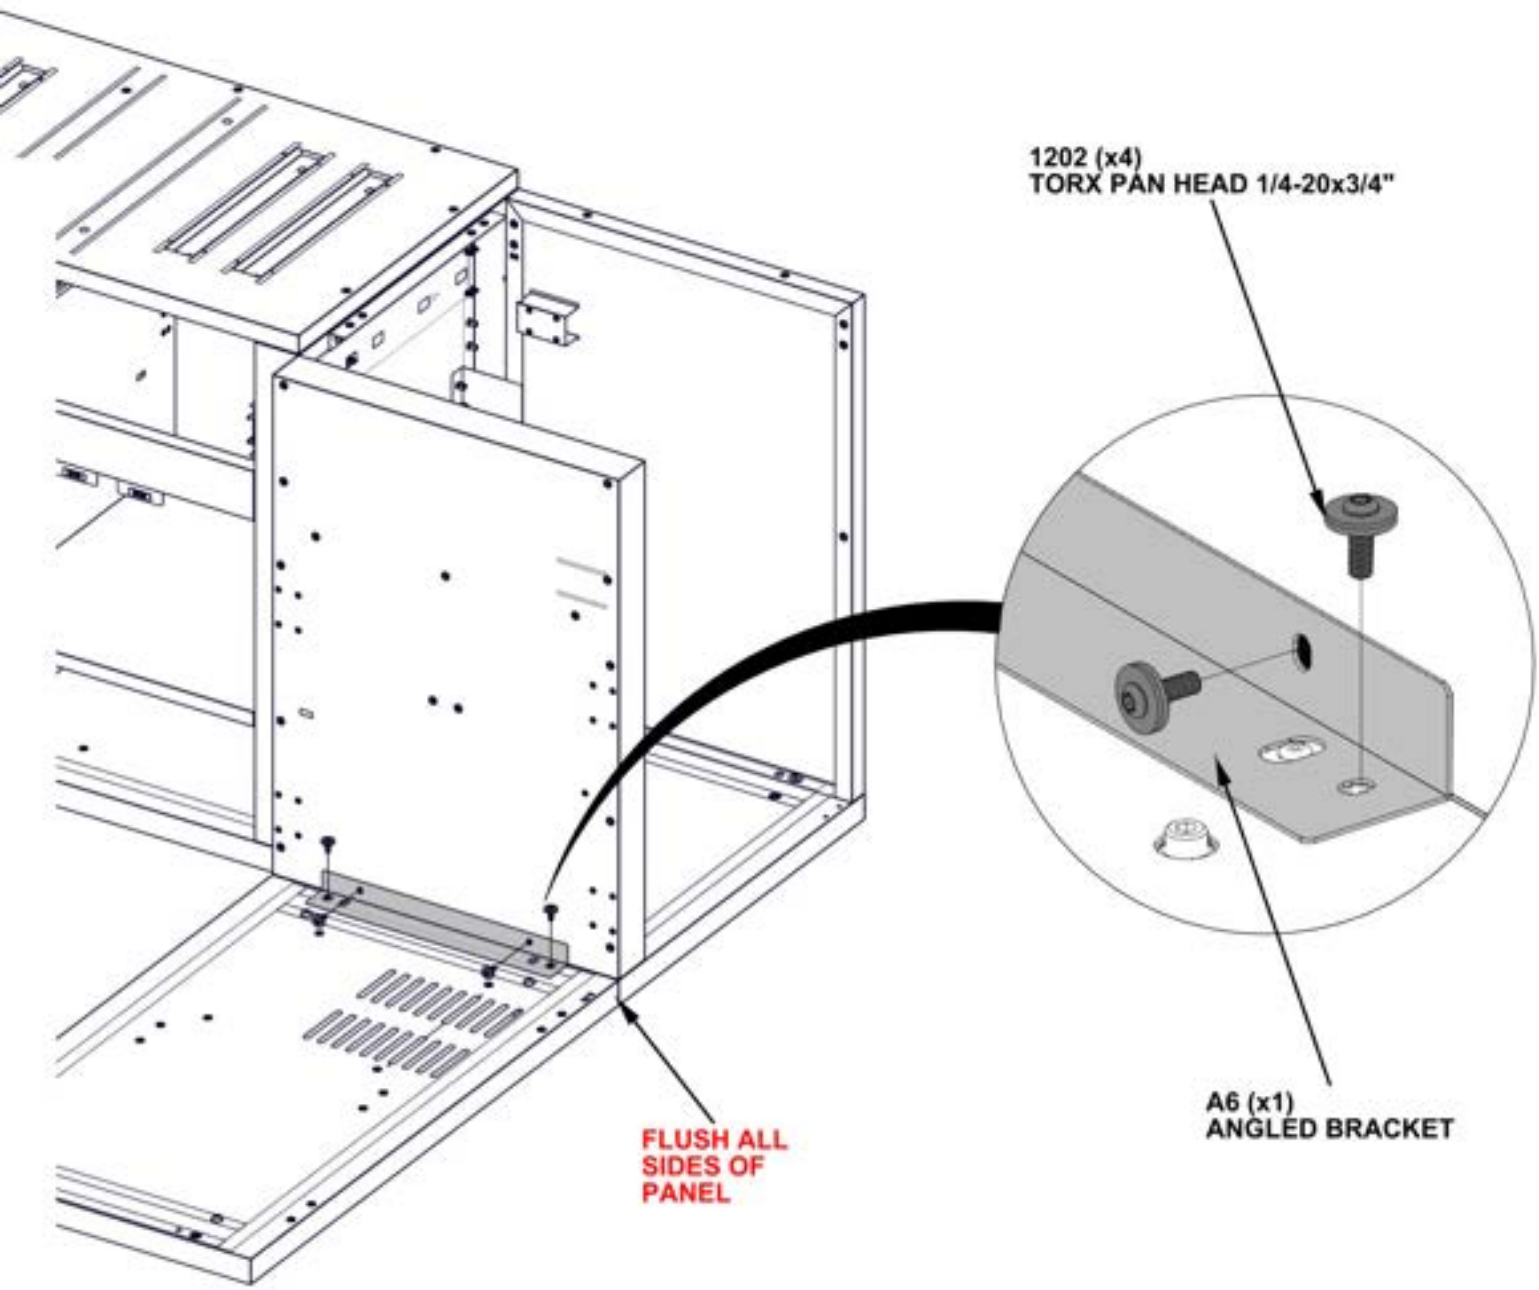


STEP 25 - CABINET ASSEMBLY



H2 BEAM ASSEMBLY - A4M06734
(x1) 1 3/16"x4 5/16"x22 11/16"(30x110x577)

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

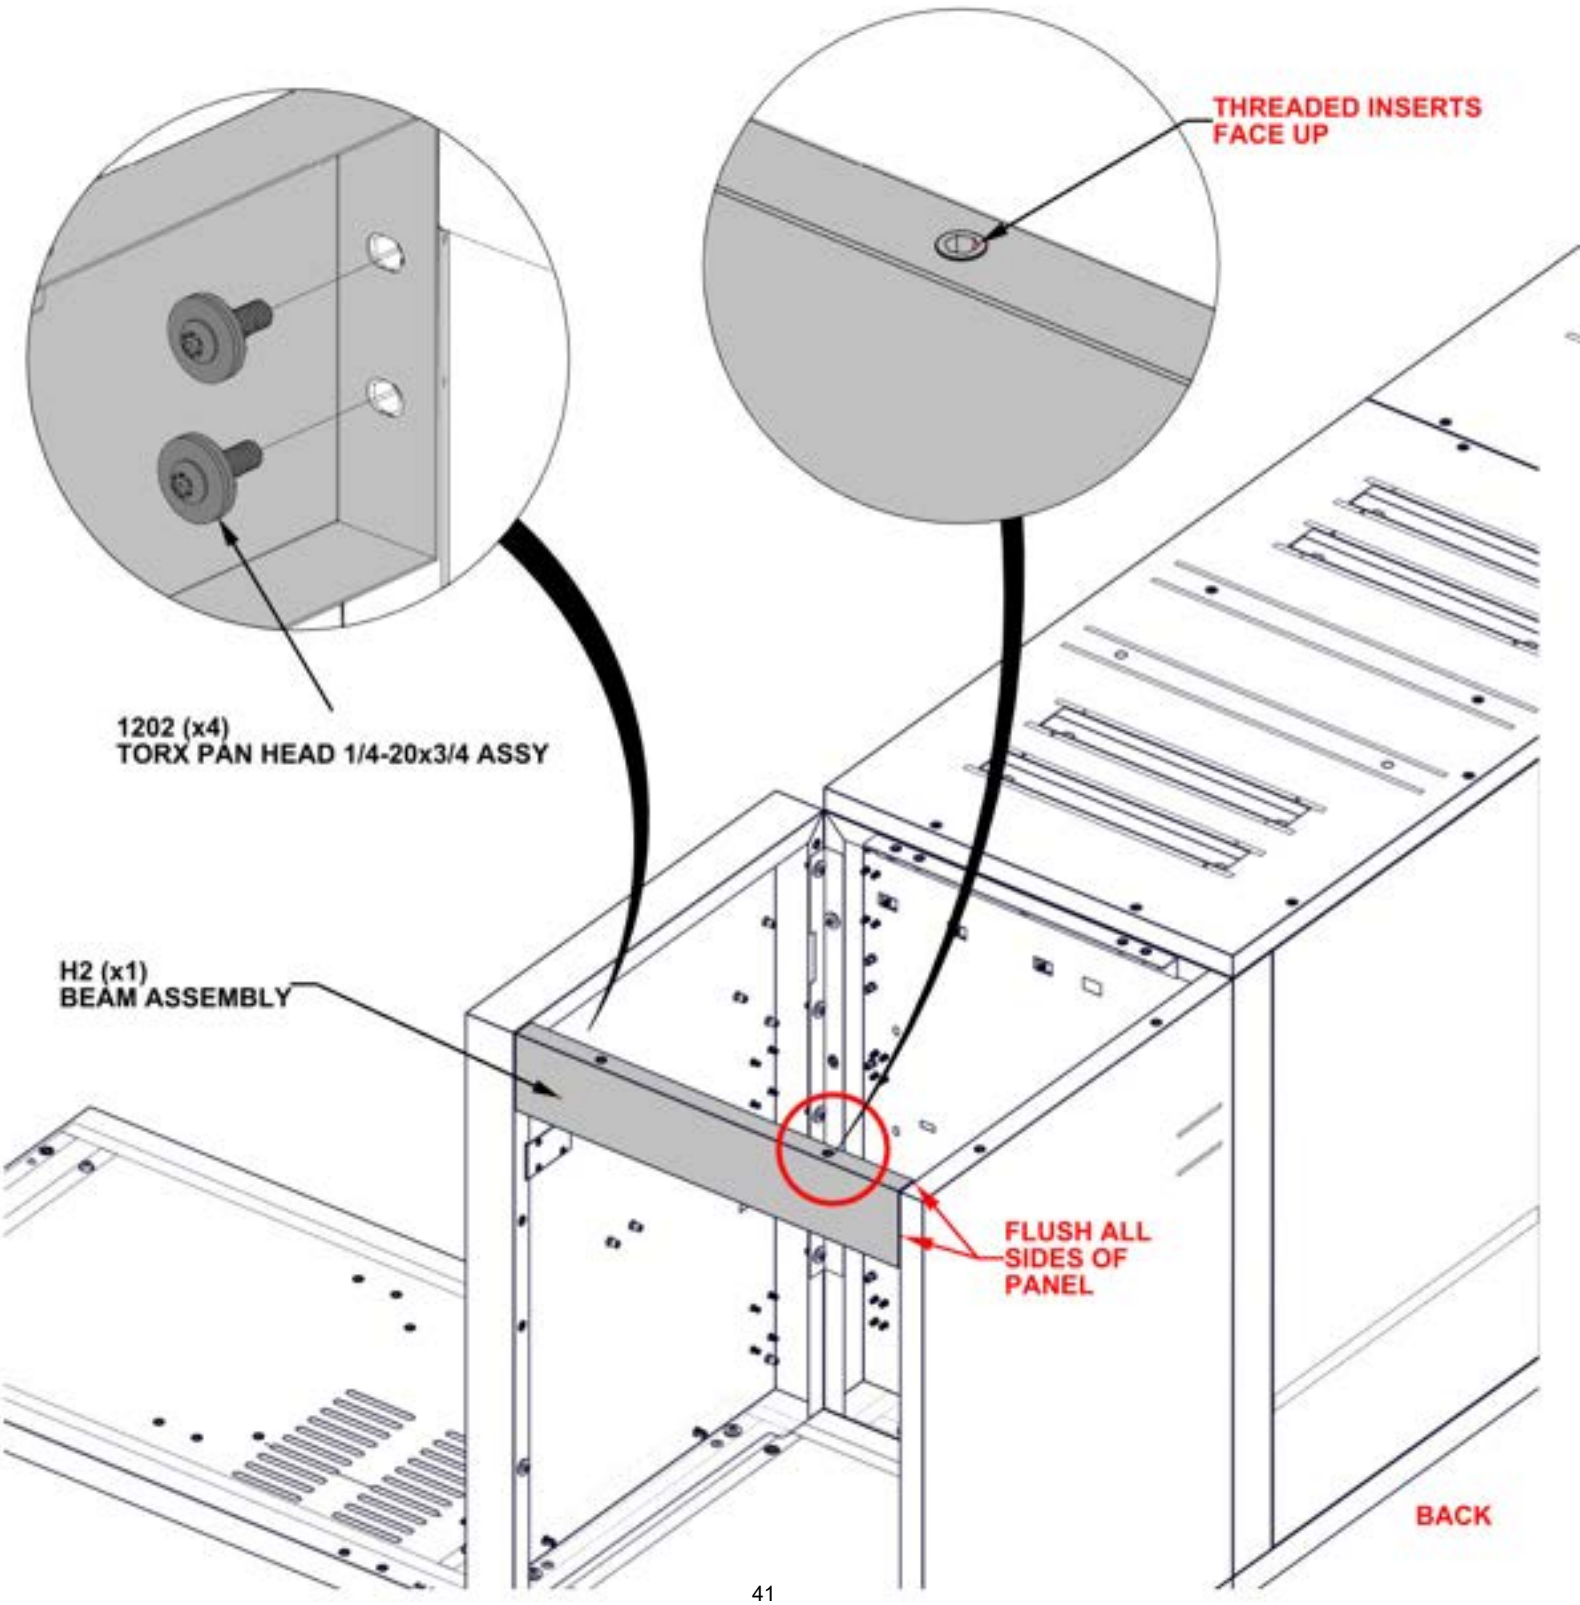


STEP 26 - CABINET ASSEMBLY



Qty	PartNo	Description
2	H101289	PAN HEAD SCREW 8-32x1/2" SS

A15 MAGNET BRACKET ASSEMBLY - A4M06756
(x1) 1"x2 5/16"x3 1/8" (25x59x80)

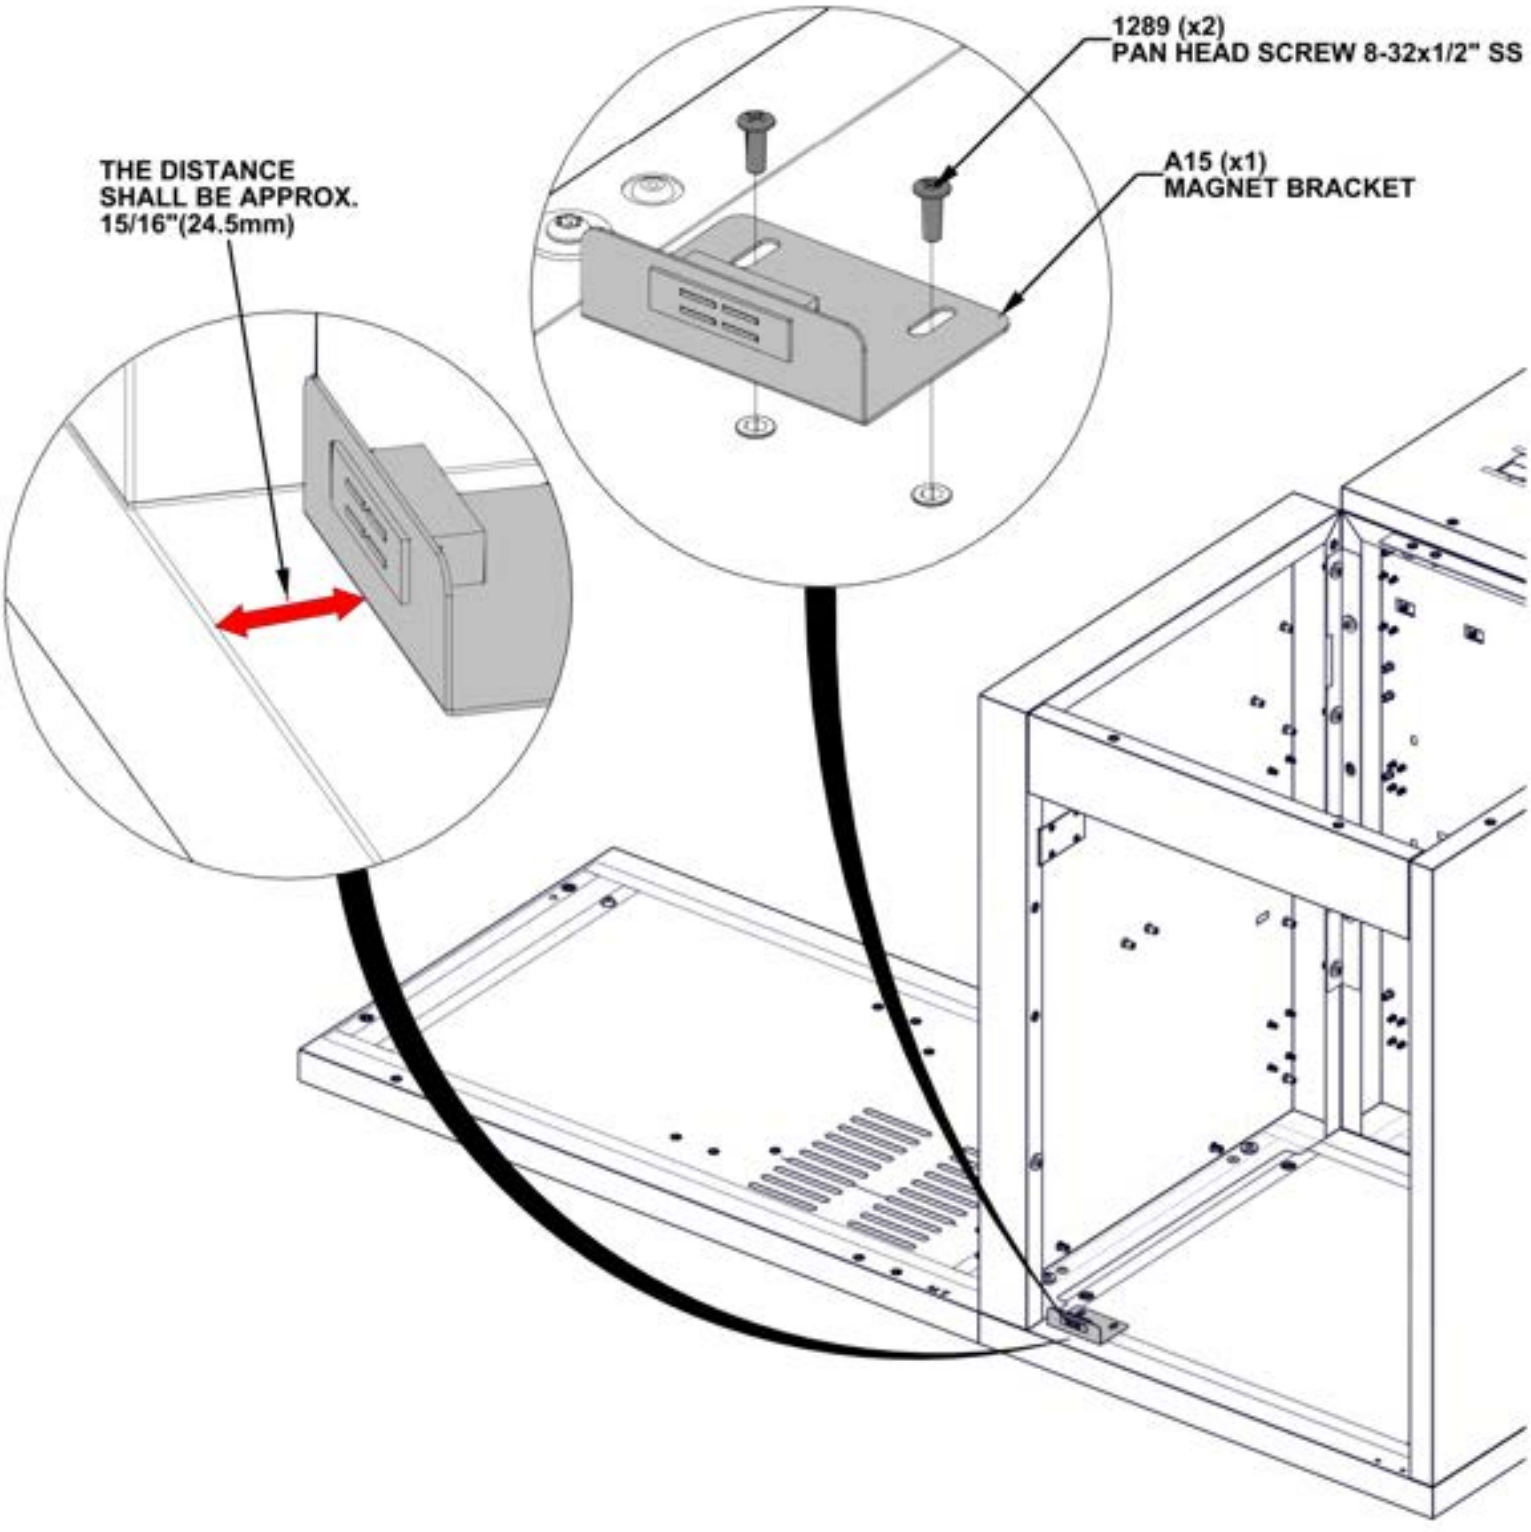


STEP 27 - CABINET ASSEMBLY



A12 (x1) DOOR STOPPER - A4M04128
1/2" x1 3/4"x3 11/16"(13.3x45x94)

Qty	PartNo	Description
4	H101289	PAN HEAD SCREW 8-32x1/2" SS

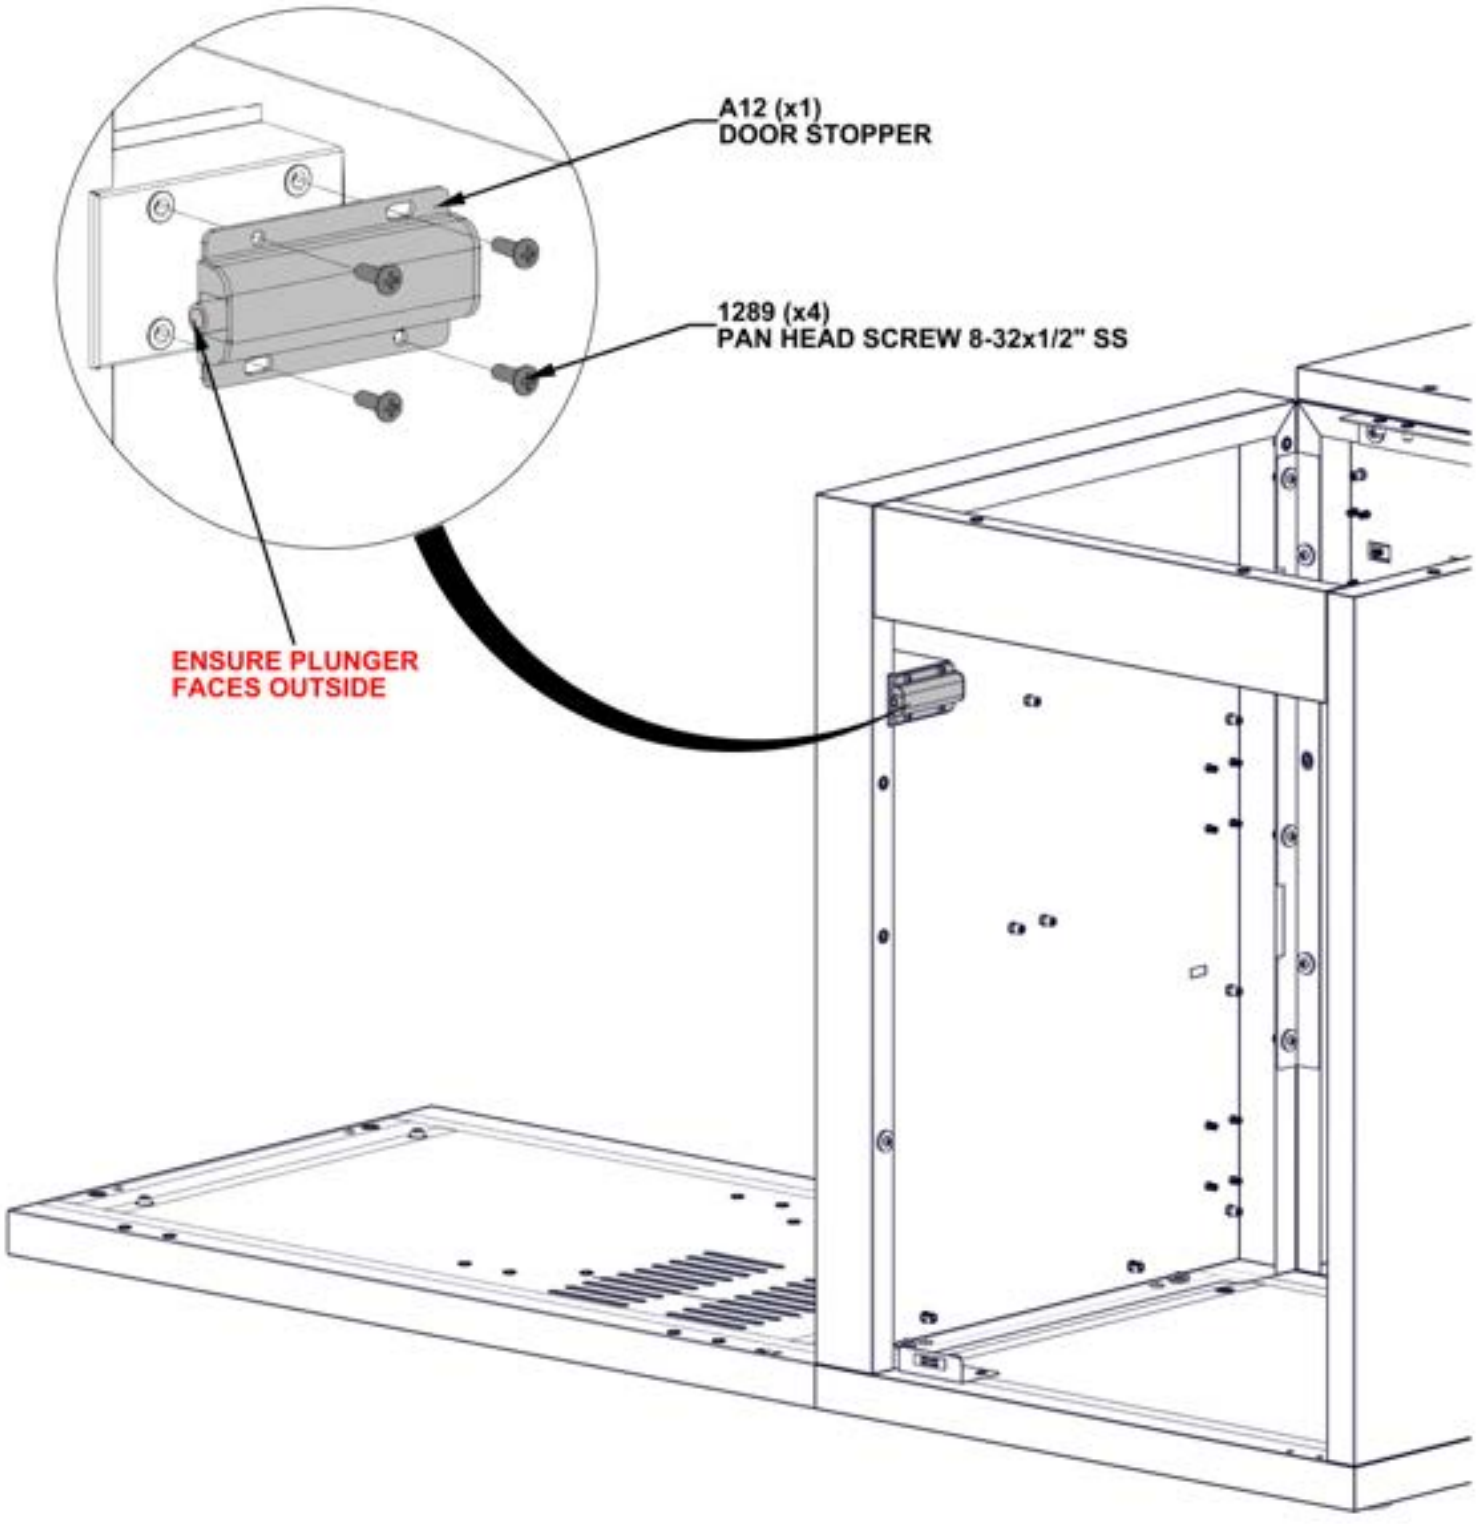

STEP 28 - TABLETOP PANEL ASSEMBLY






Qty	PartNo	Description
2	H101054	SEALANT WASHER
2	H101053	STEEL WASHER 6x20
2	H101292	TORX PAN HEAD 1/4-20x13/32"

T4 TABLETOP PANEL ASSEMBLY - A4M06733
(x1) 1 1/4"x24 3/16"x27 1/16" (32x614x687)

M2 COUNTERTOP - A4M06741
(x1) 1 5/16"x1 15/16"x25 1/8" (33x49x638)

- FLUSH SIDE AND BACK OF COUNTERTOP WITH PANEL

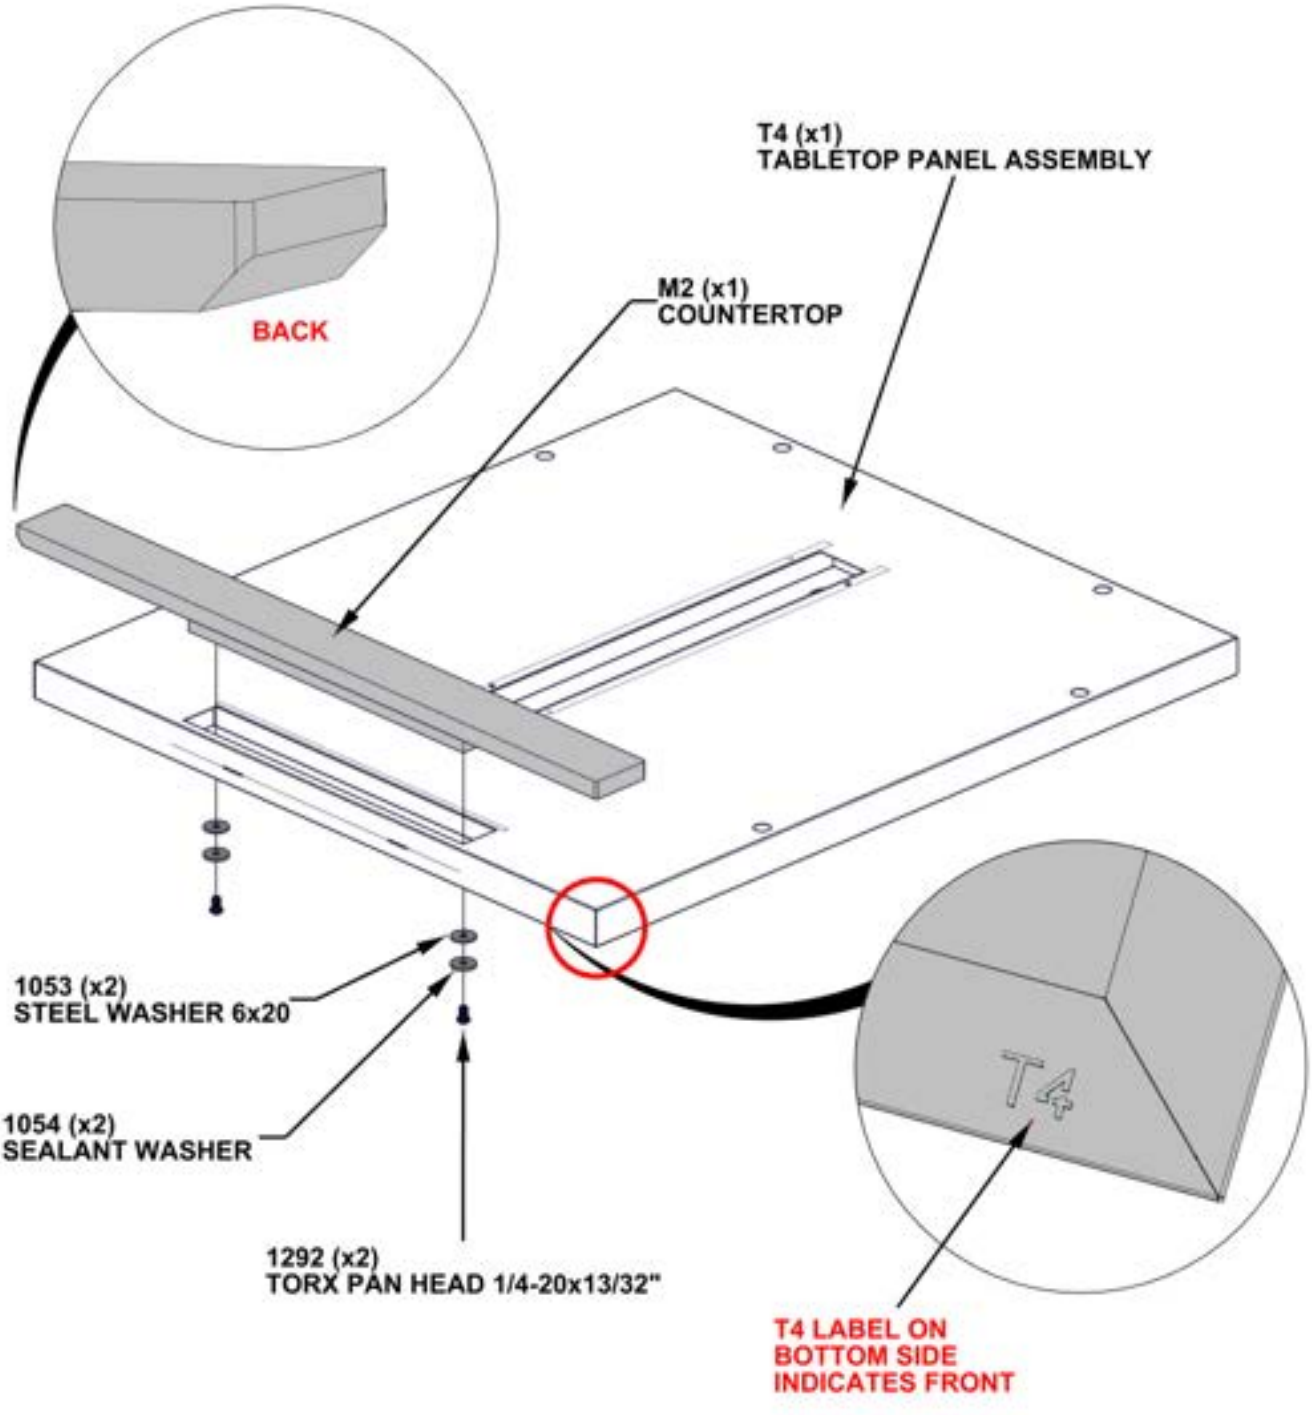

STEP 29 - CABINET ASSEMBLY




Qty	PartNo	Description
6	H101103	TORX SOCKET SCREW 1/4-20


TABLETOP PANEL ASSEMBLY STEP 28

- FLUSH BACK AND SIDES OF PANEL ASSEMBLY.

- SQUARE ALL SIDES OF CABINET BEFORE TIGHTENING HARDWARE.

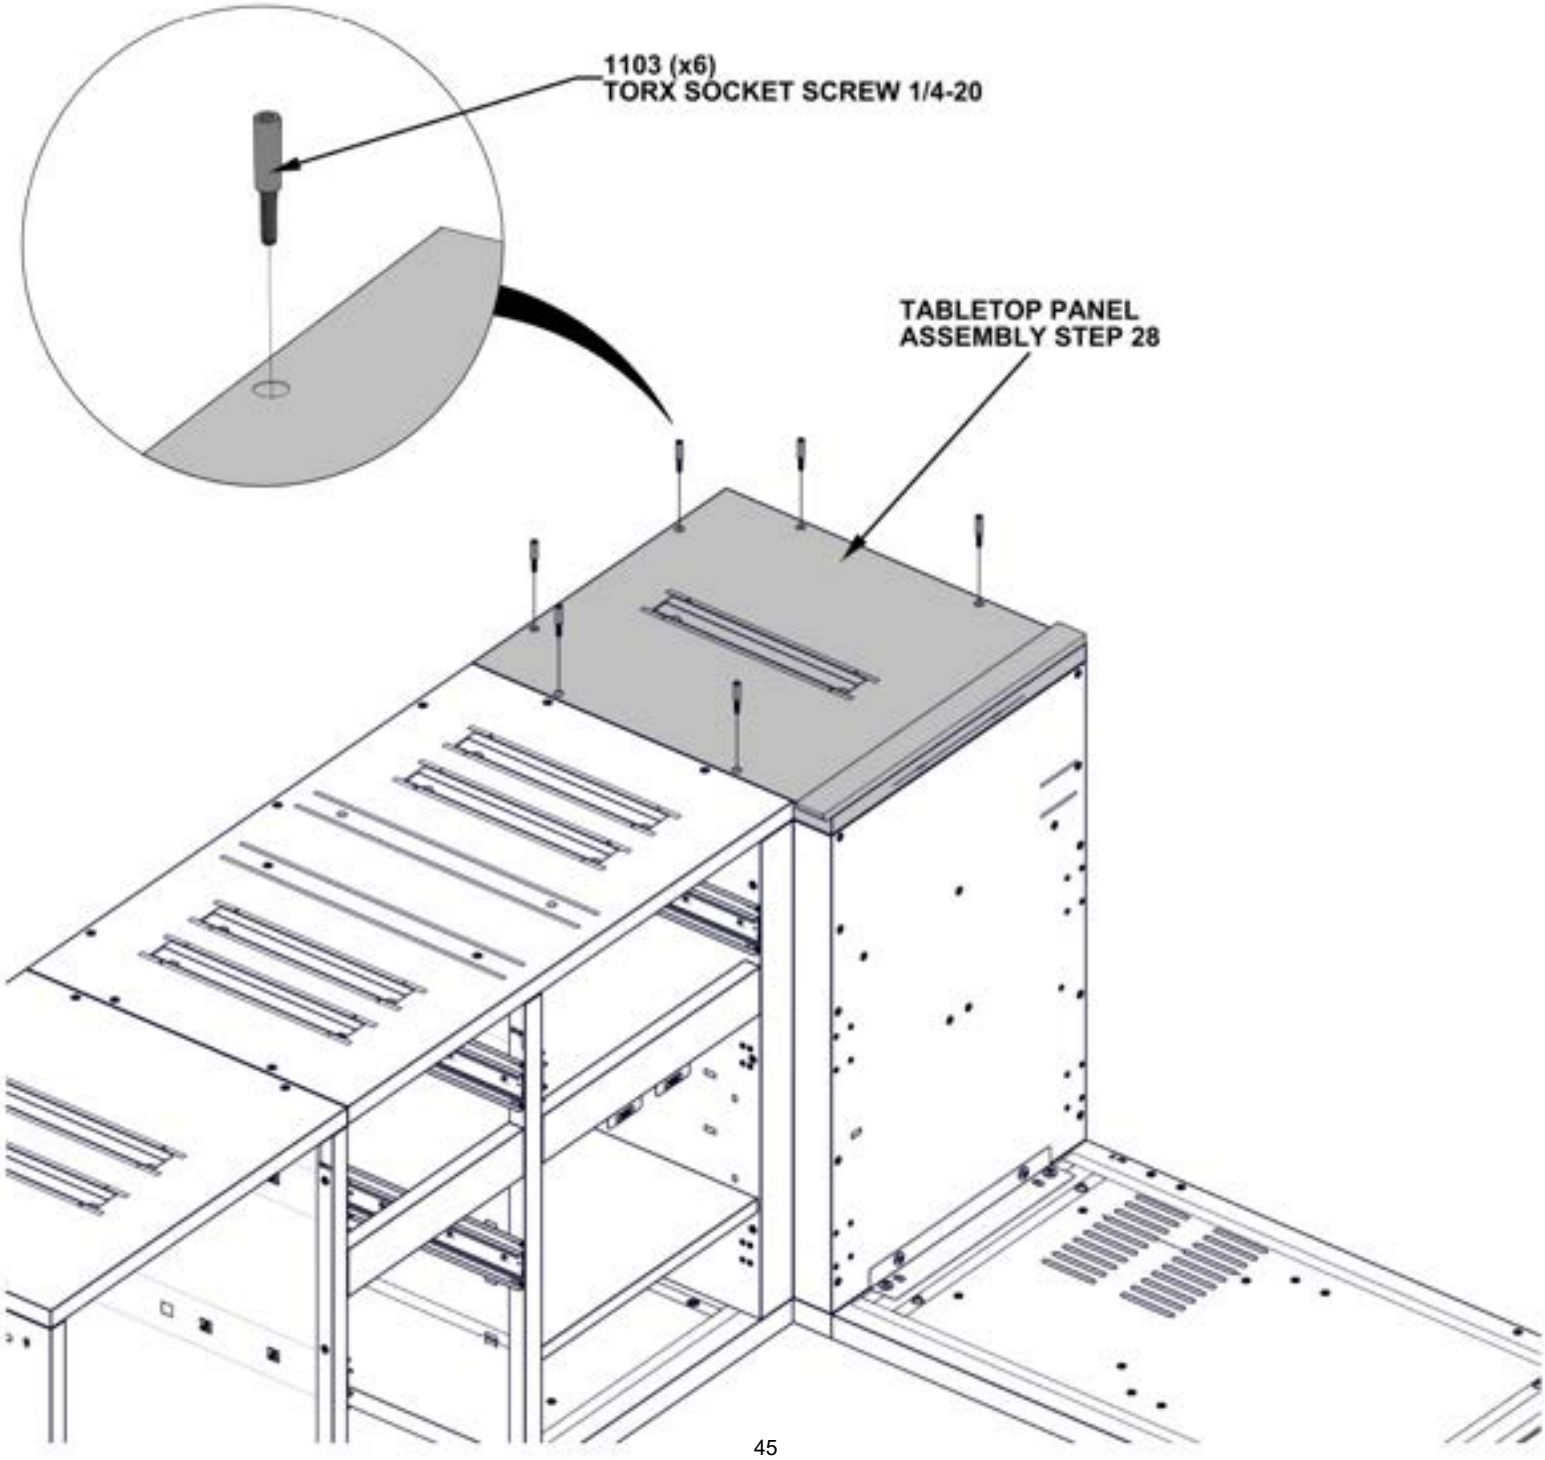


STEP 30 - CABINET ASSEMBLY



Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

S2 SIDE PANEL ASSEMBLY - A4M06723
(x1) 2 3/4"x24 3/16"x34 13/16" (70x614x885)

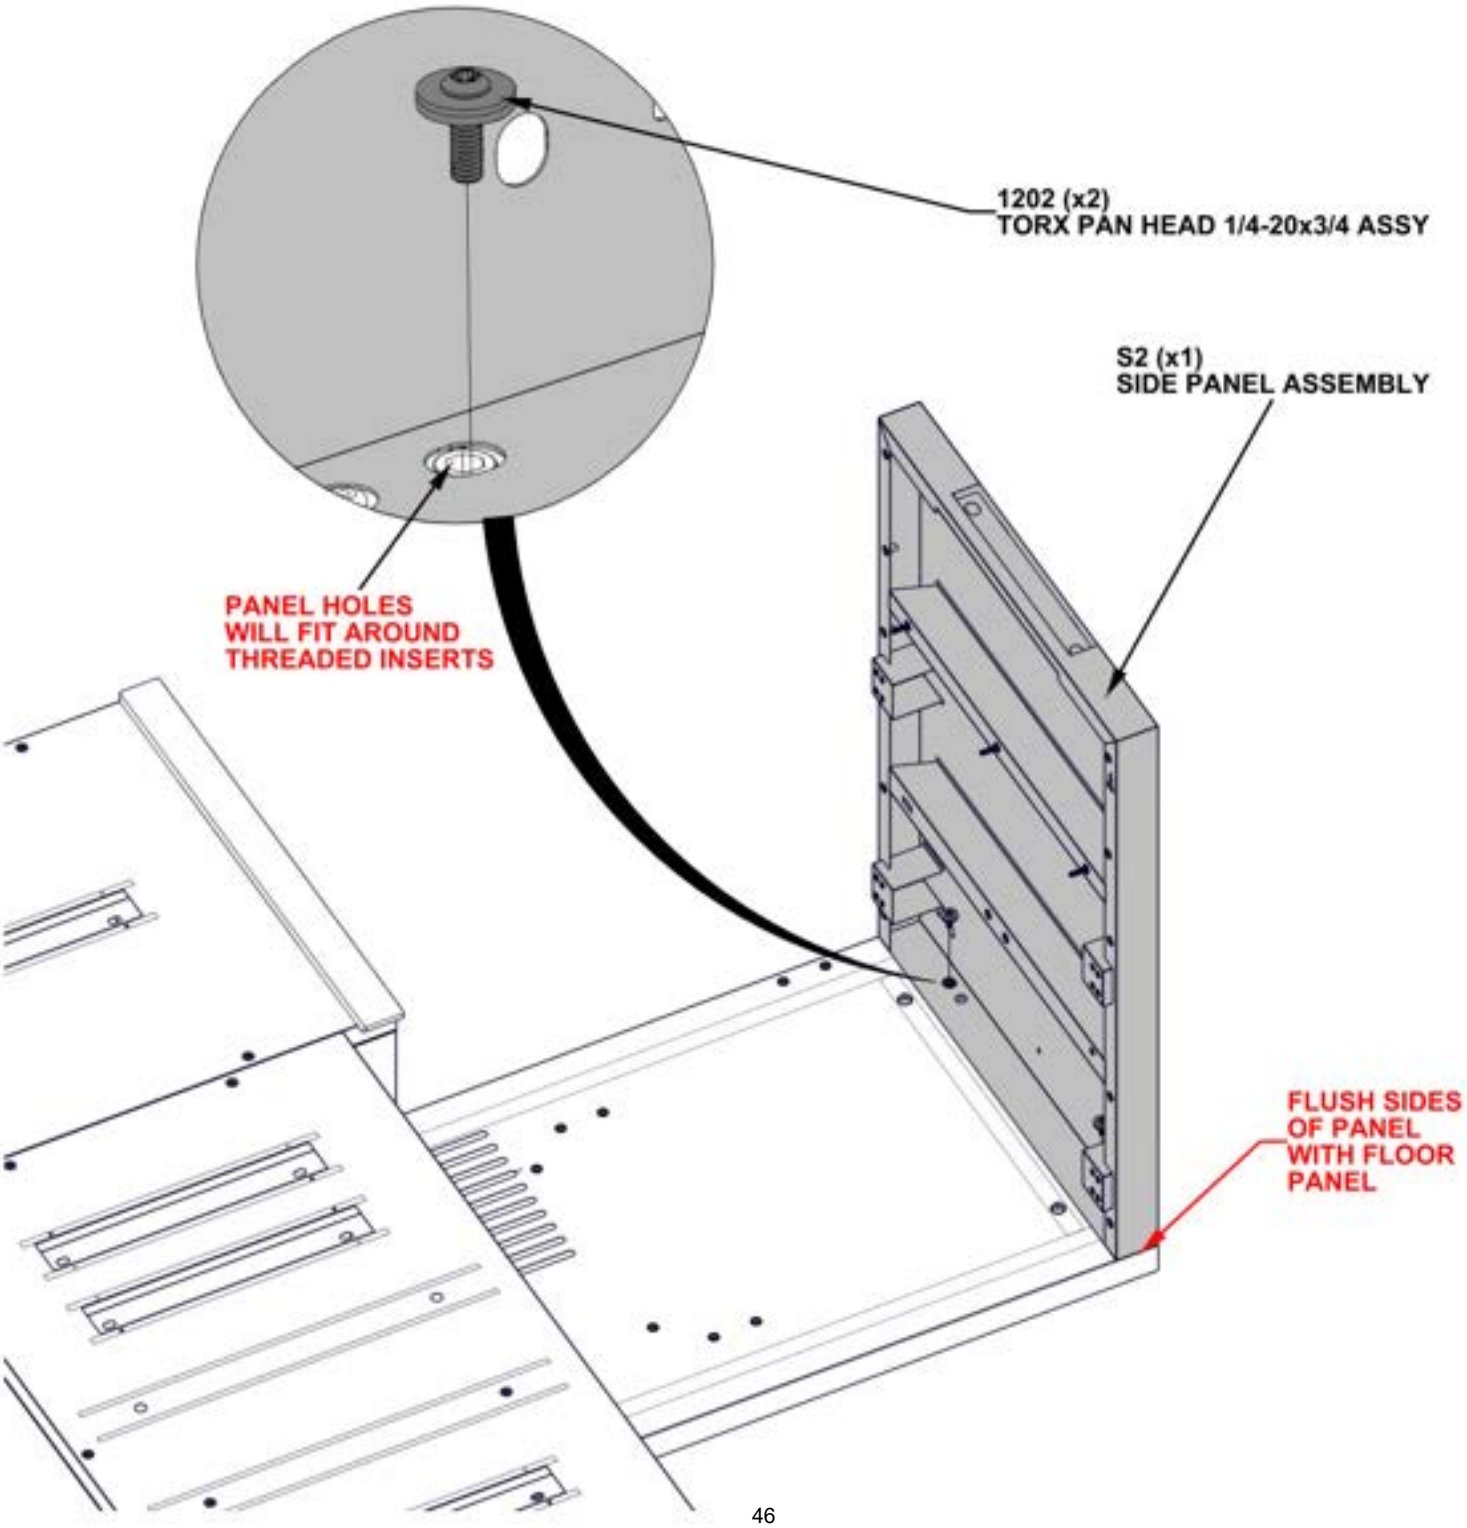


STEP 31 - CABINET ASSEMBLY



Qty	PartNo	Description
8	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

G3 BACK PANEL ASSEMBLY - A4M06719
(x1) 1 3/16"x22 7/8"x38 3/16" (30x581x970)

- FLUSH ALL SIDES OF BACK PANEL.

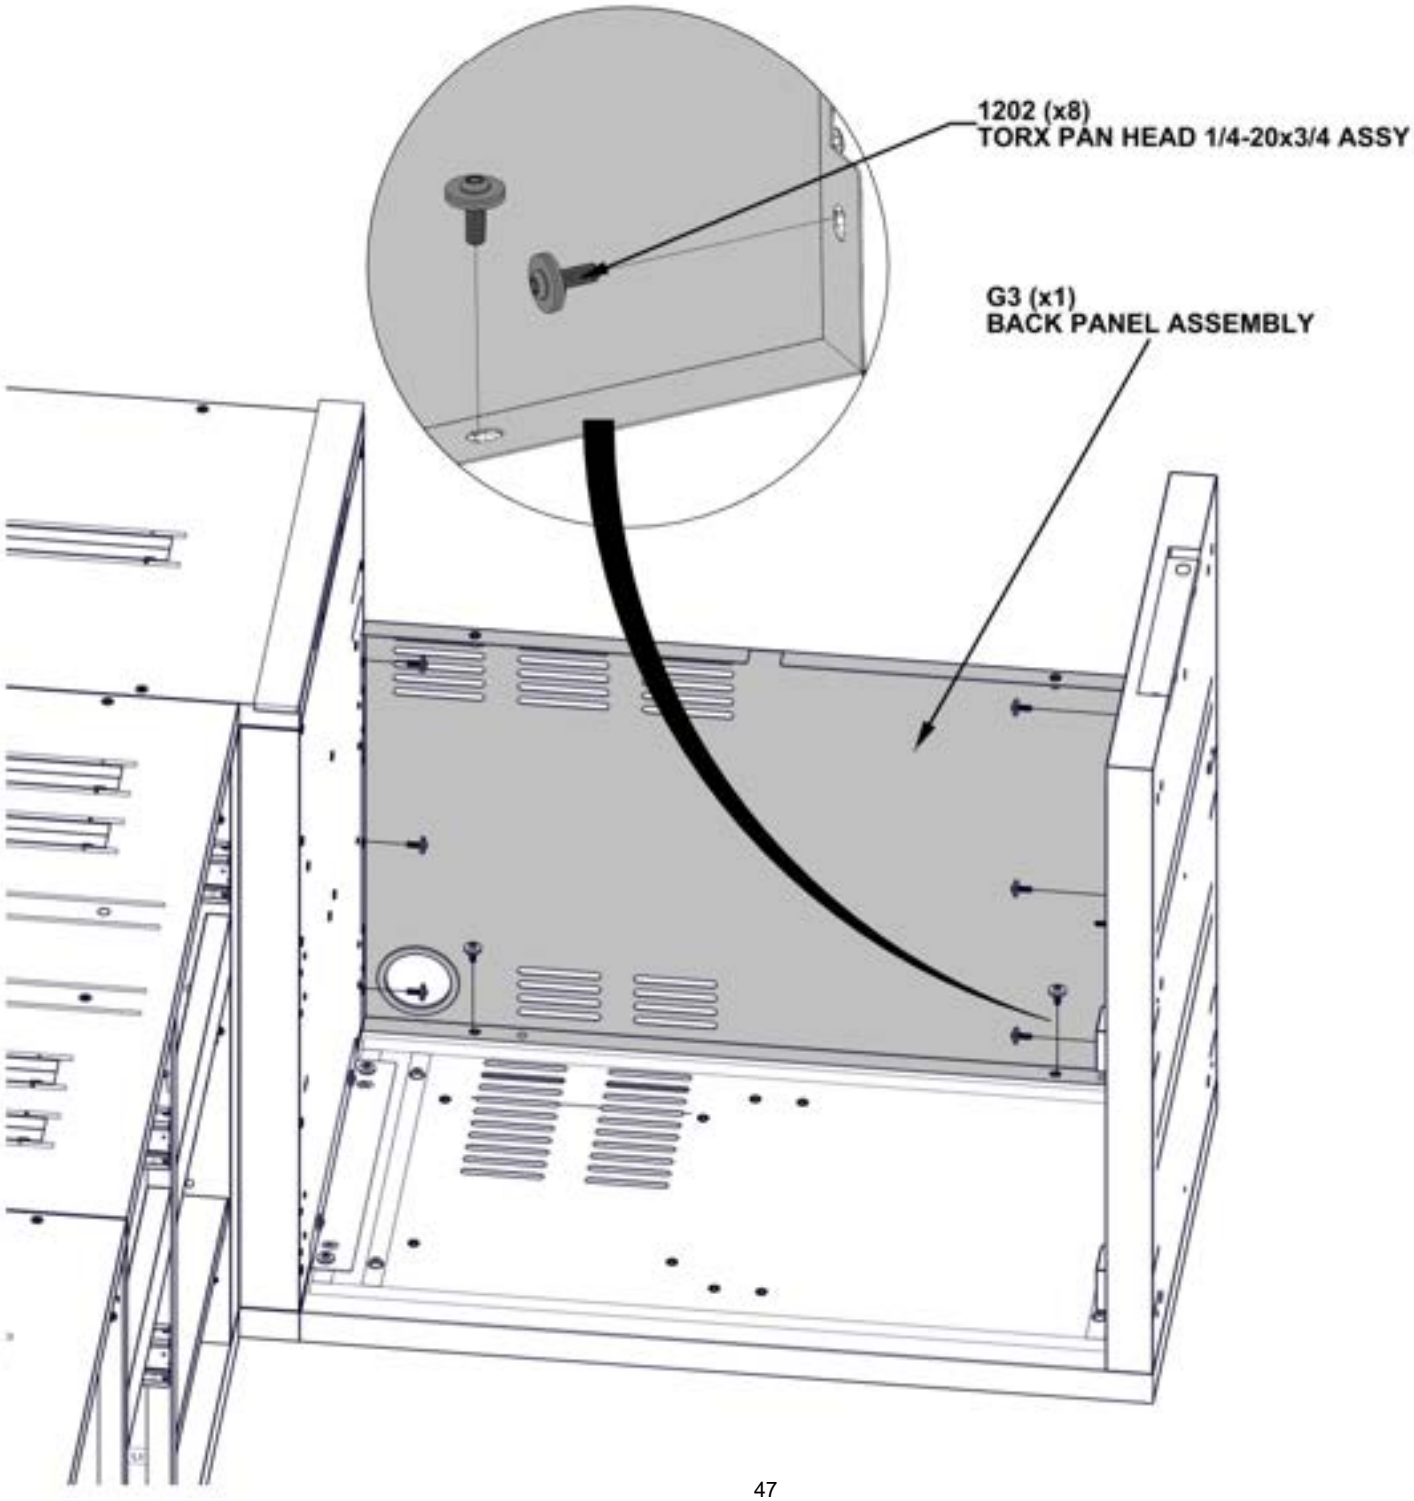


STEP 32 - CABINET ASSEMBLY



S3 SIDE PANEL ASSEMBLY - A4M06457
(x1) 1 3/8"x22 7/8"x24 1/8" (35x581x613)

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

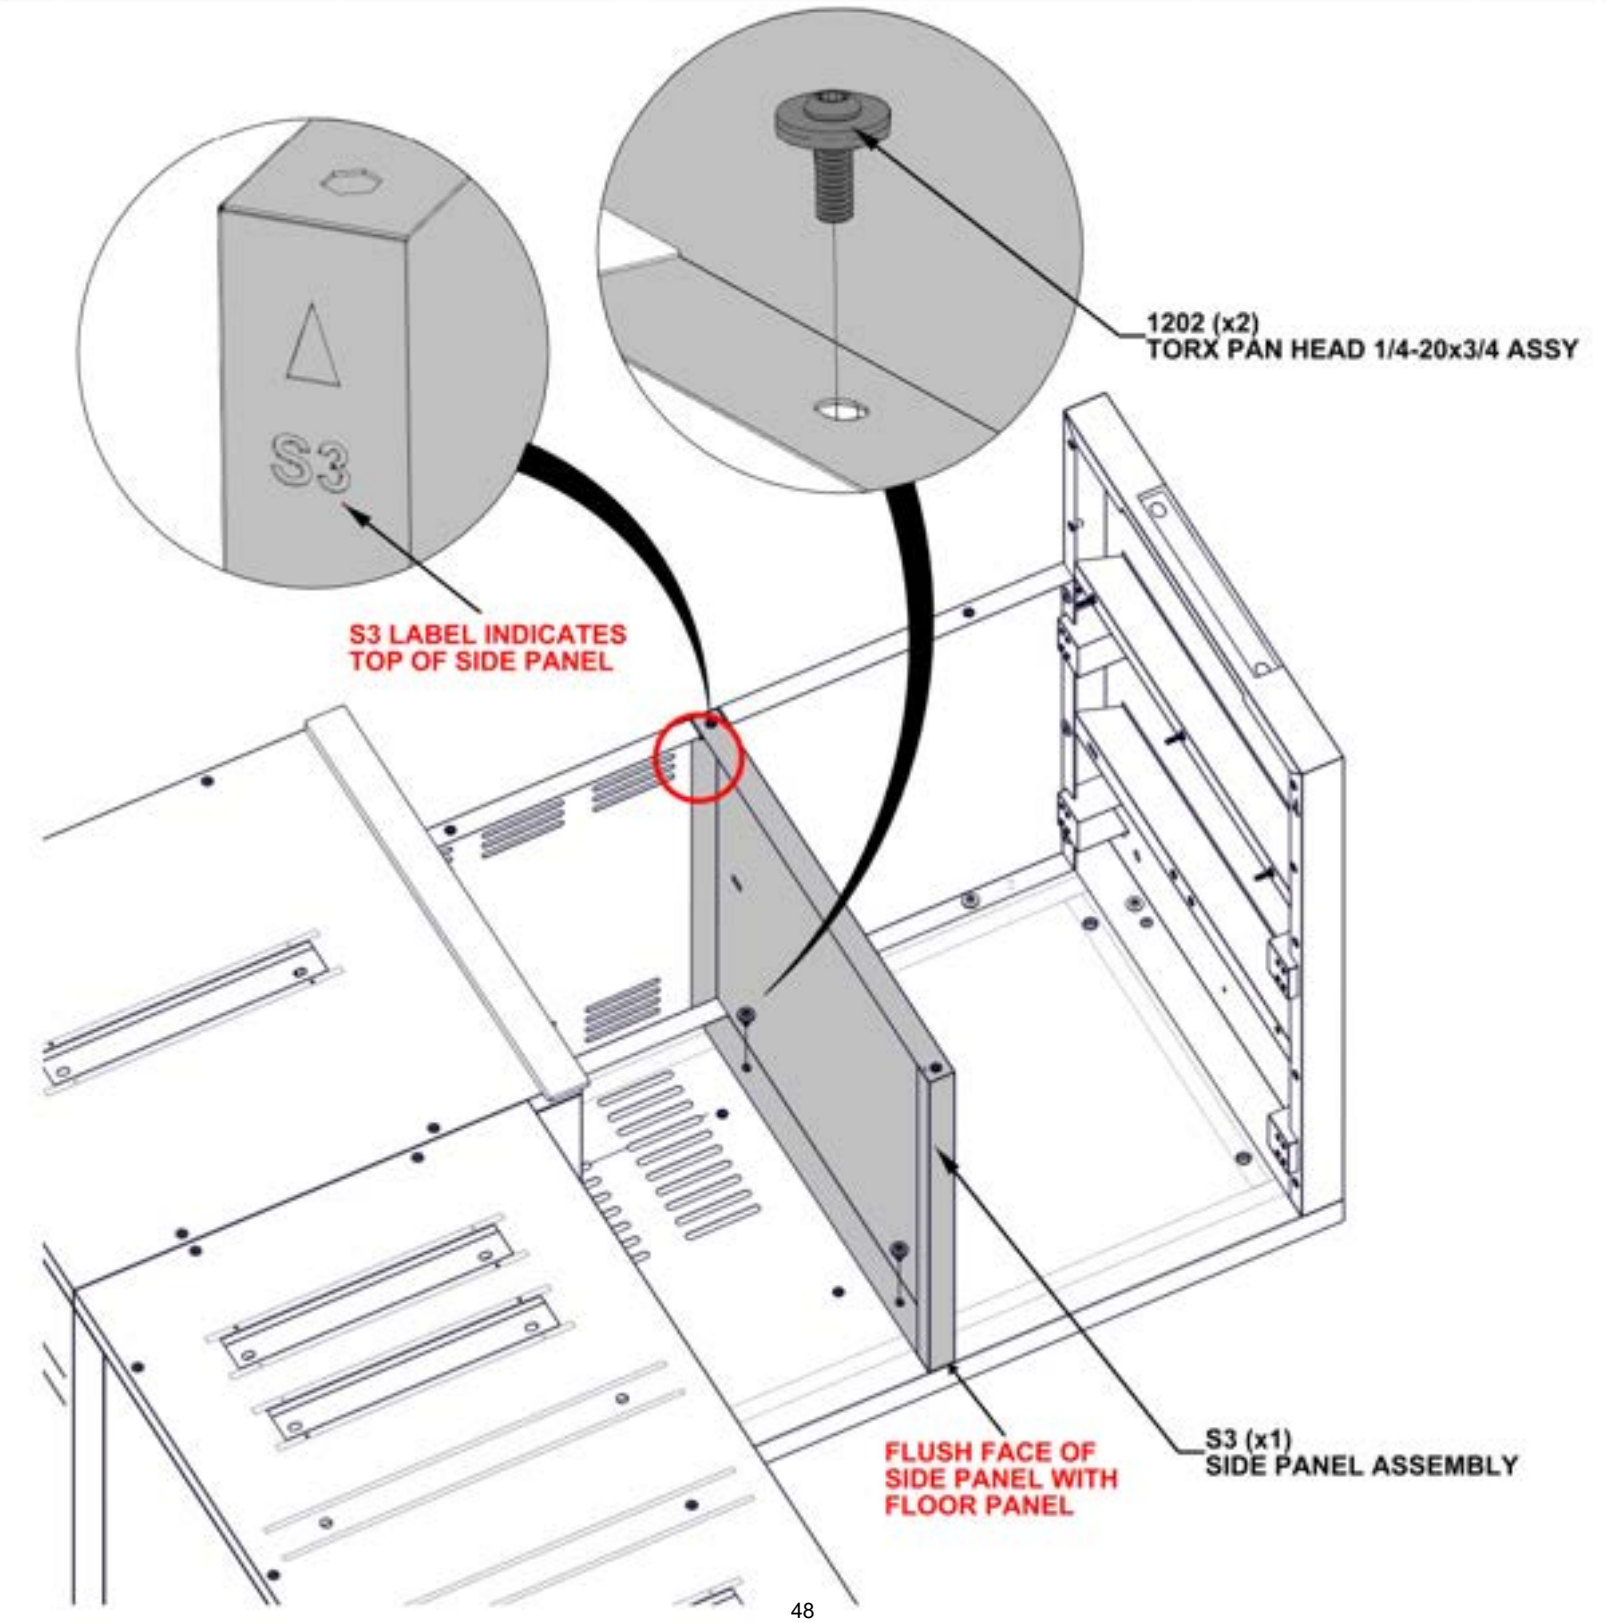


STEP 33 - CABINET ASSEMBLY



Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

A9 HOSE BRACKET ASSEMBLY - A4M03060
(x1) 1 1/4"x1 7/16"x2 9/16" (31.5x36.5x65)

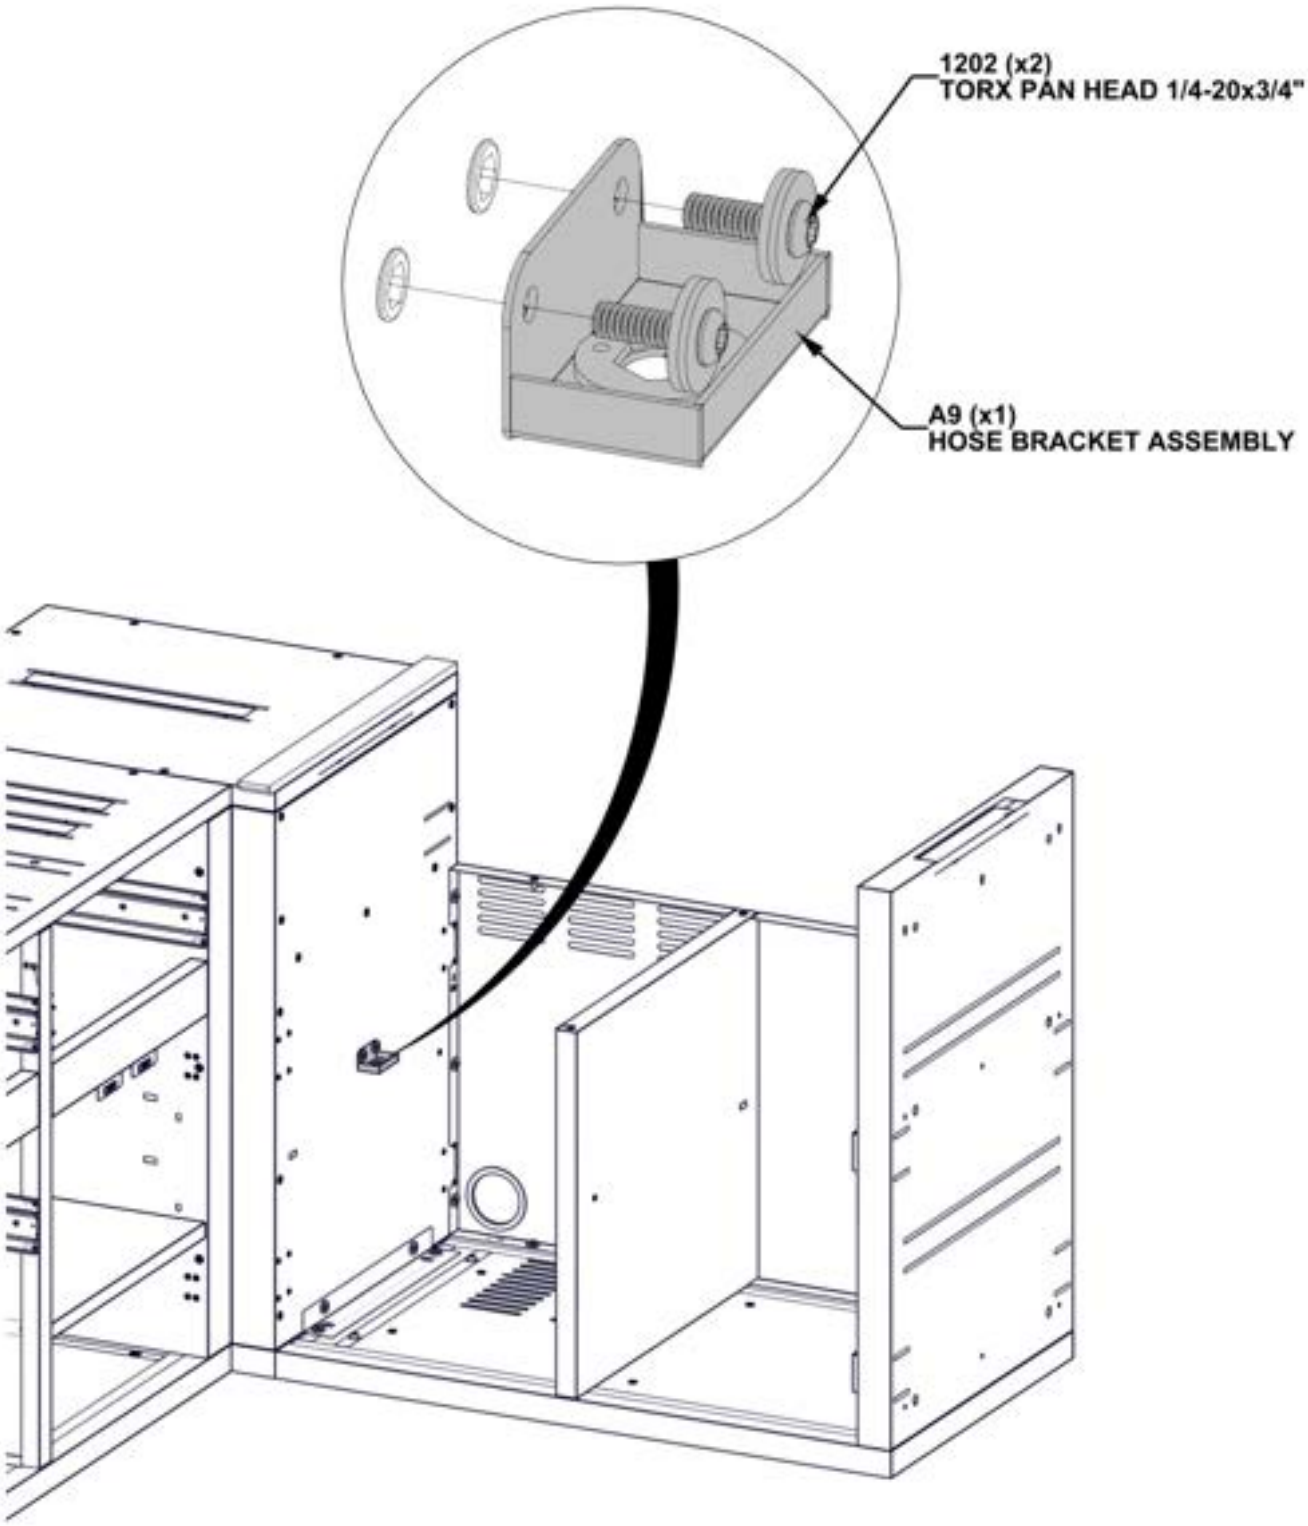


STEP 34 - CABINET ASSEMBLY



Qty	PartNo	Description
4	H101292	TORX PAN HEAD 1/4-20x13/32"

A13 GAS TANK HOLDER ASSEMBLY - A4M03047
(x1) 1 15/16"x12 7/8"x14 3/4" (49x327x374)

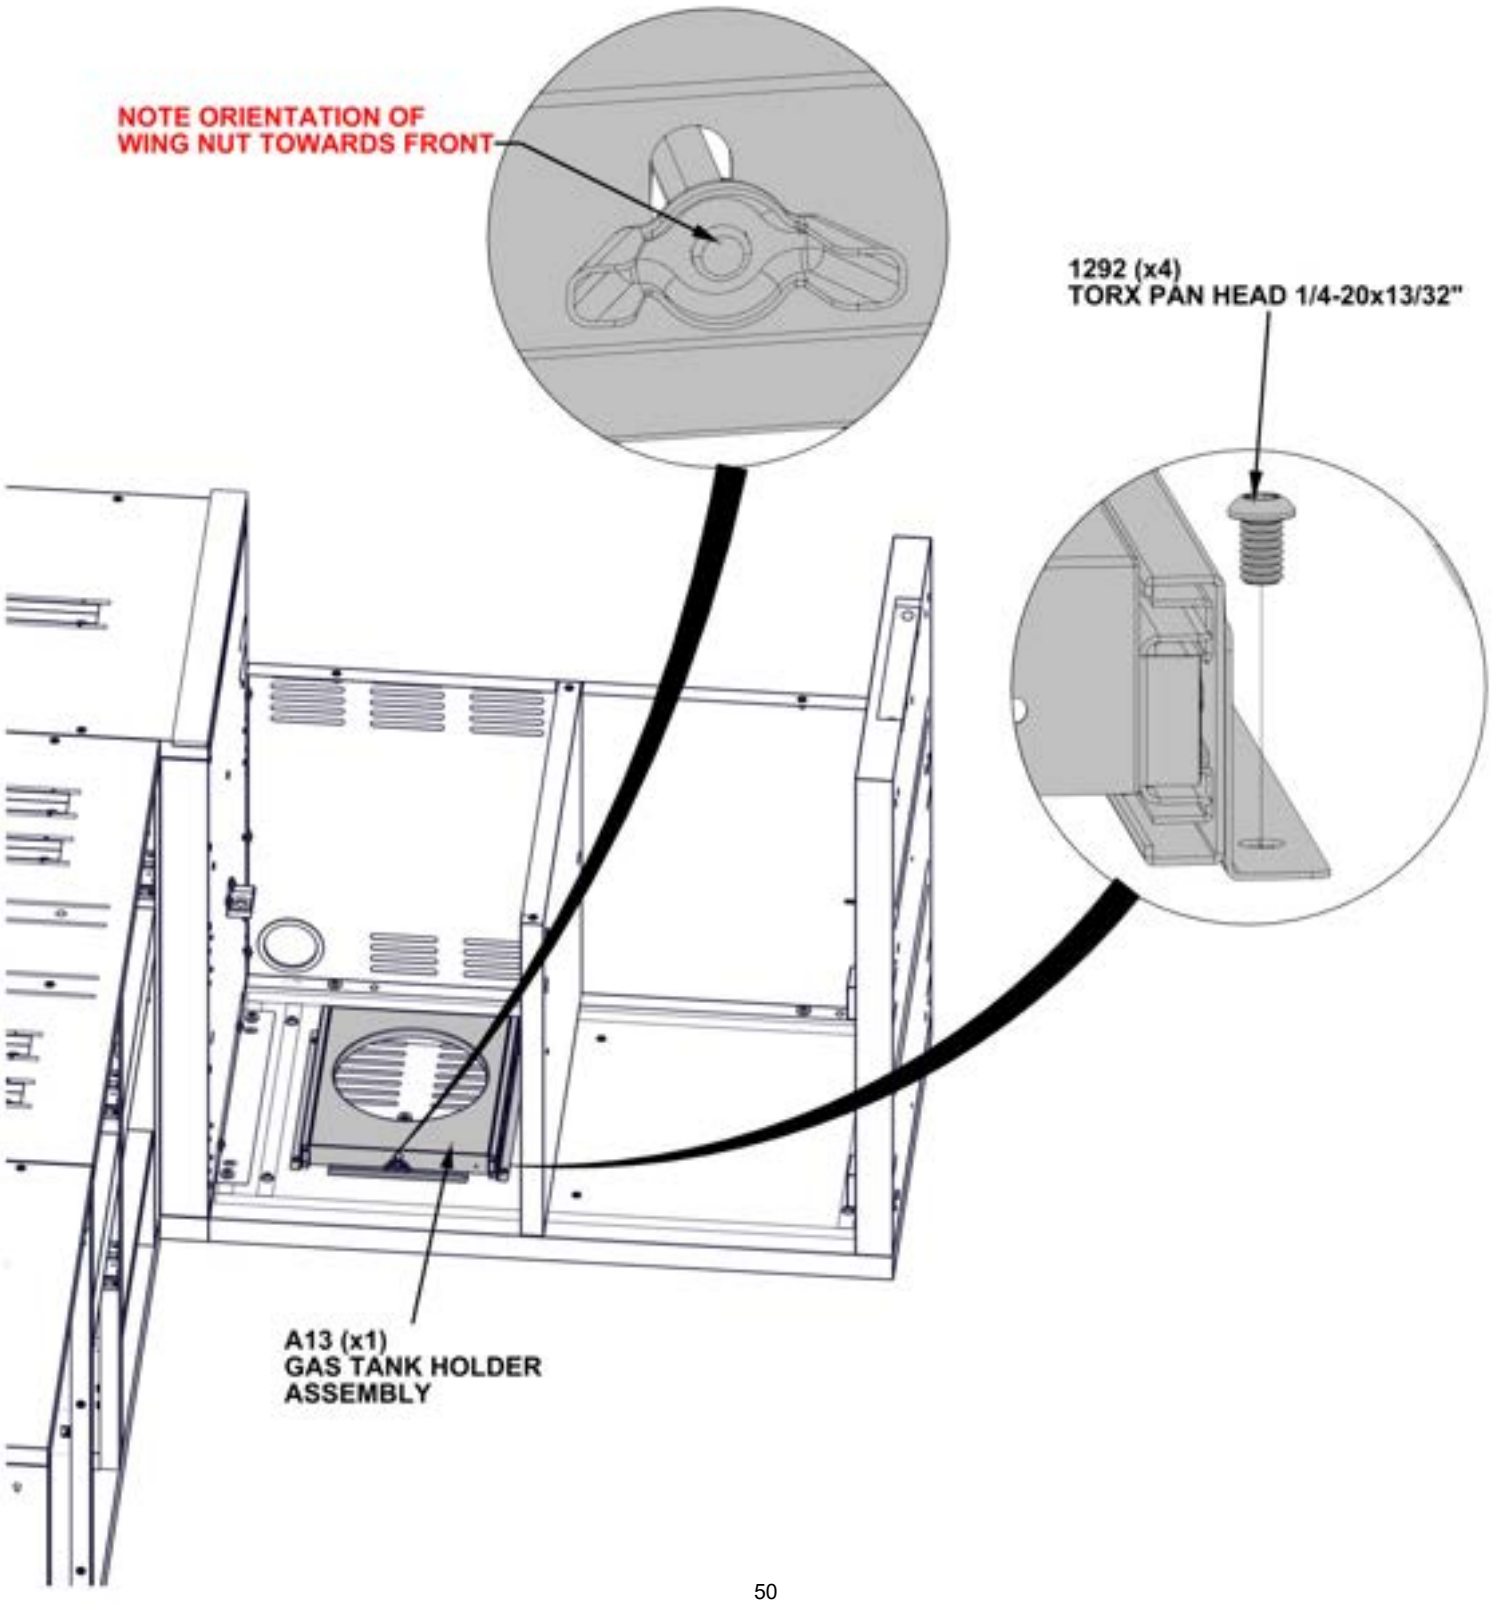


STEP 35 - CABINET ASSEMBLY



A5 SHELF BRACKET - A4M03141
(x2) 5/8"x7/8"x2 1/16" (16x22x53)

- ATTACH SHELF BRACKETS ON BOTH SIDES OF CENTER CABINET.

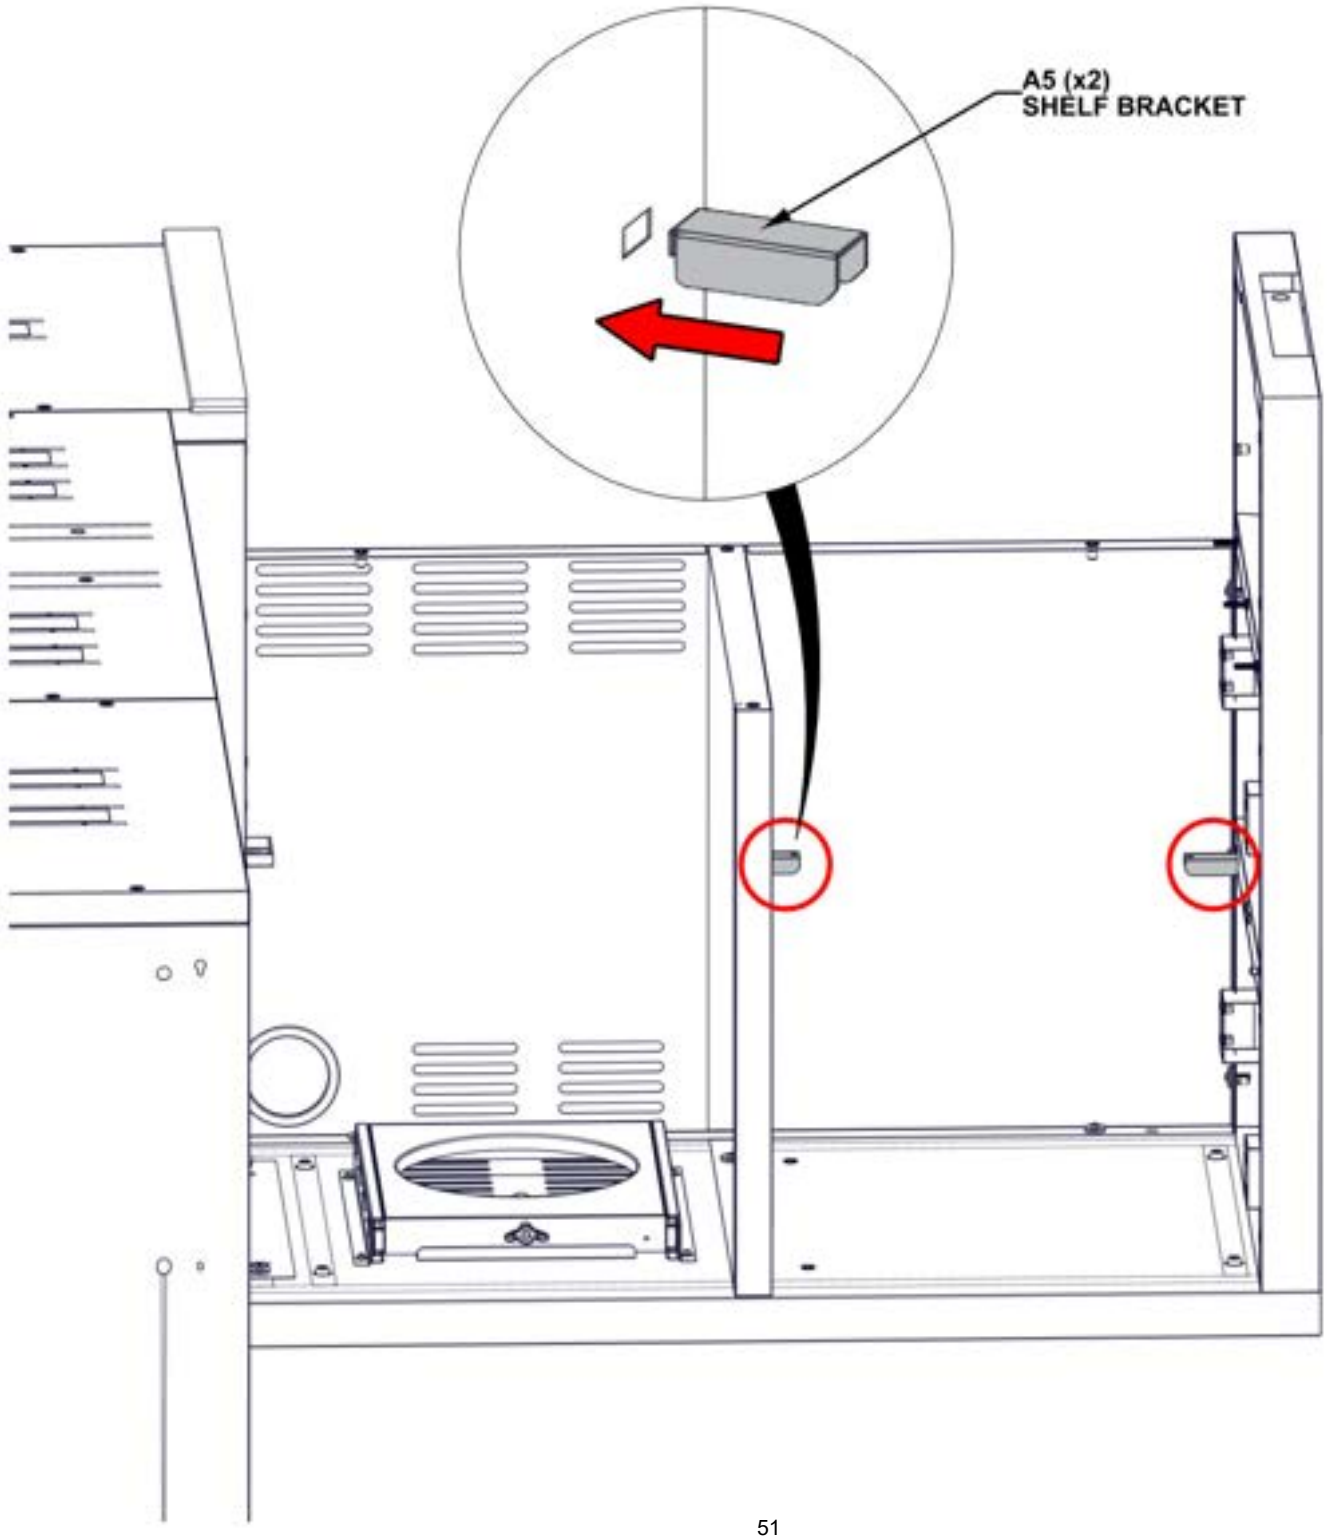


STEP 36 - CABINET ASSEMBLY



L3 SHELF - A4M06740
(x1) 1"x18 1/4"x24" (25x463x610)

Qty	PartNo	Description
2	H101289	PAN HEAD SCREW 8-32x1/2" SS

- SET SHELF ONTO SCREWS AND THEN TIGHTEN HARDWARE TO FASTEN IN PLACE.

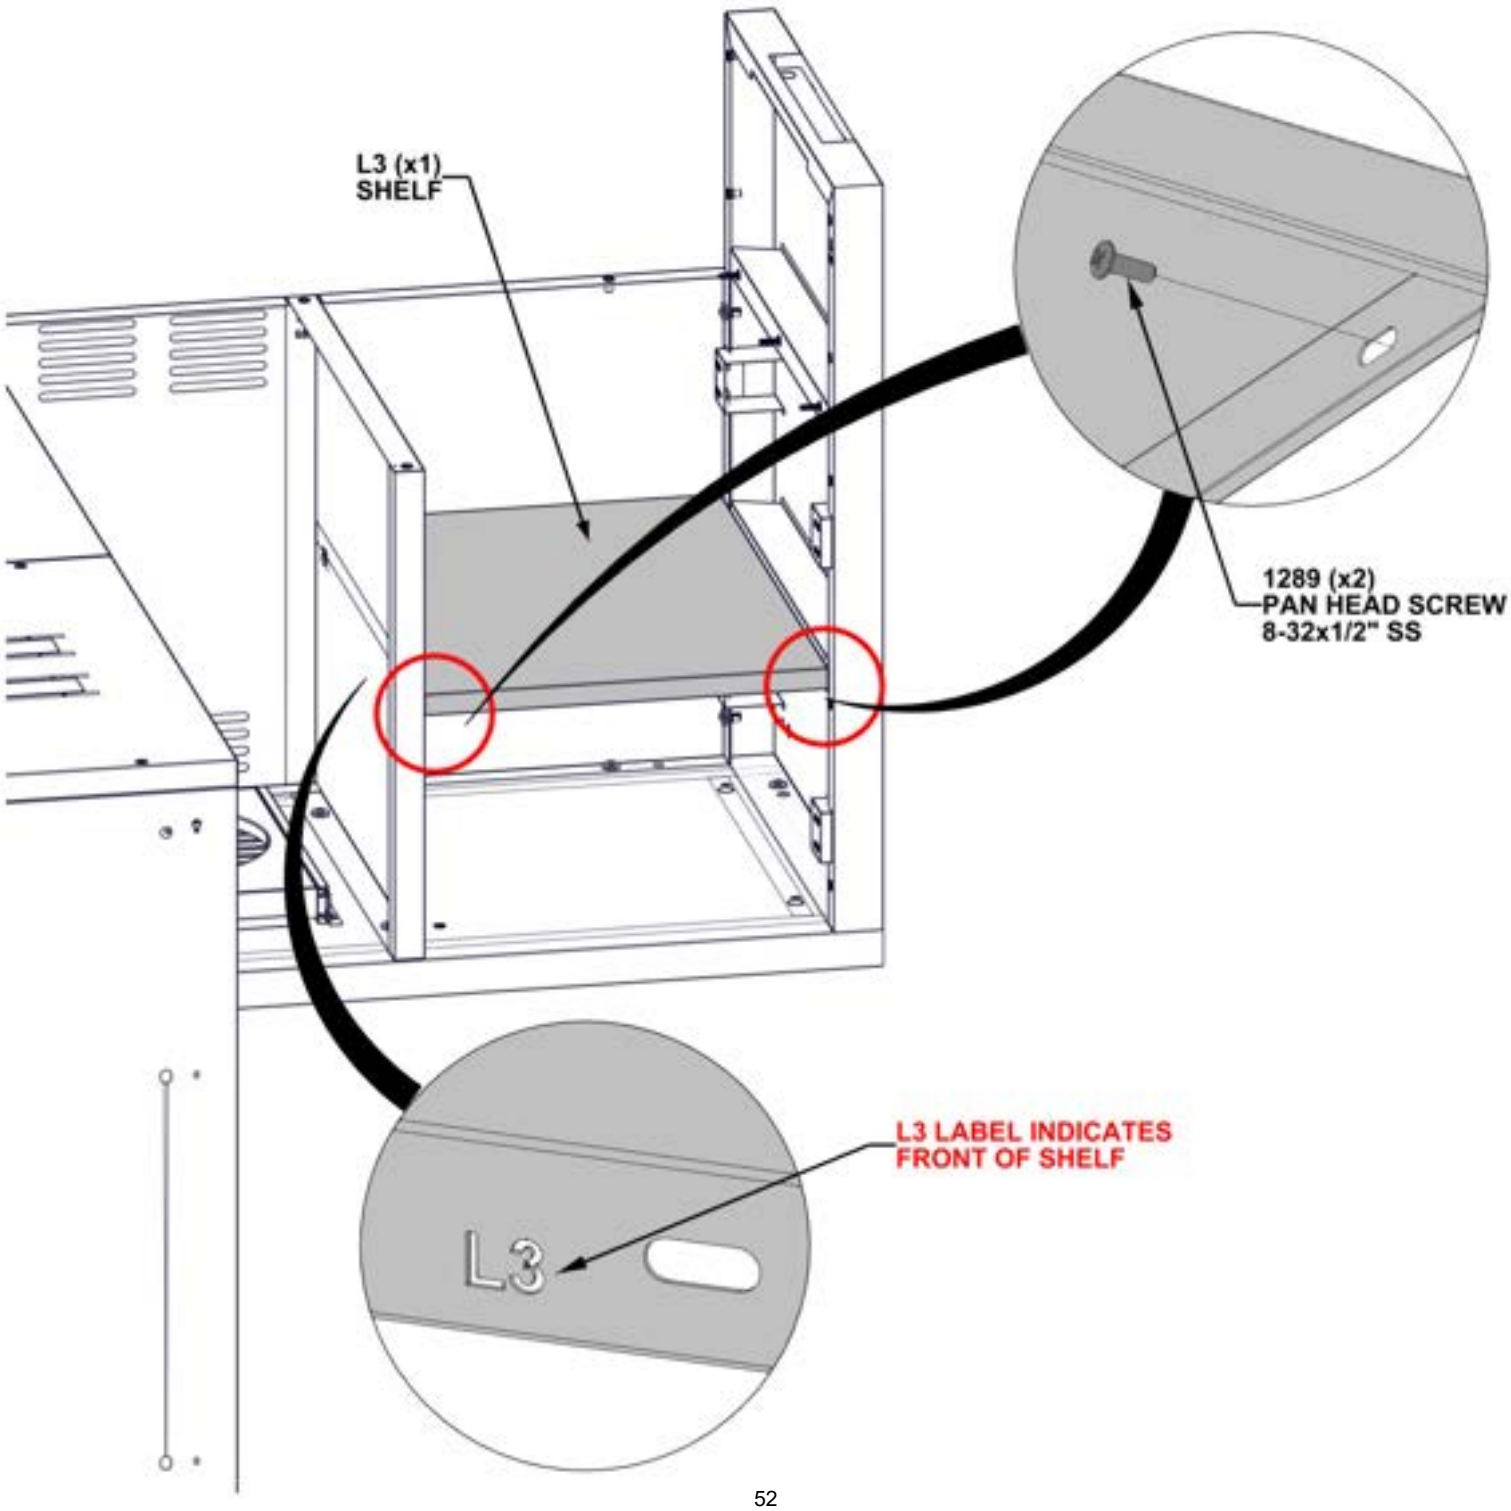

STEP 37A - TABLETOP PANEL ASSEMBLY






Qty	PartNo	Description
4	H101289	PAN HEAD SCREW 8-32x1/2" SS

T2 TABLETOP PANEL ASSEMBLY - A4M07045
(x1) 1 1/4"x24 3/16"x38 1/4" (32x614x971)

A2 MAGNET BRACKET - A4M03026
(x2) 1"x1 1/4"x3 1/8" (25x31x80)

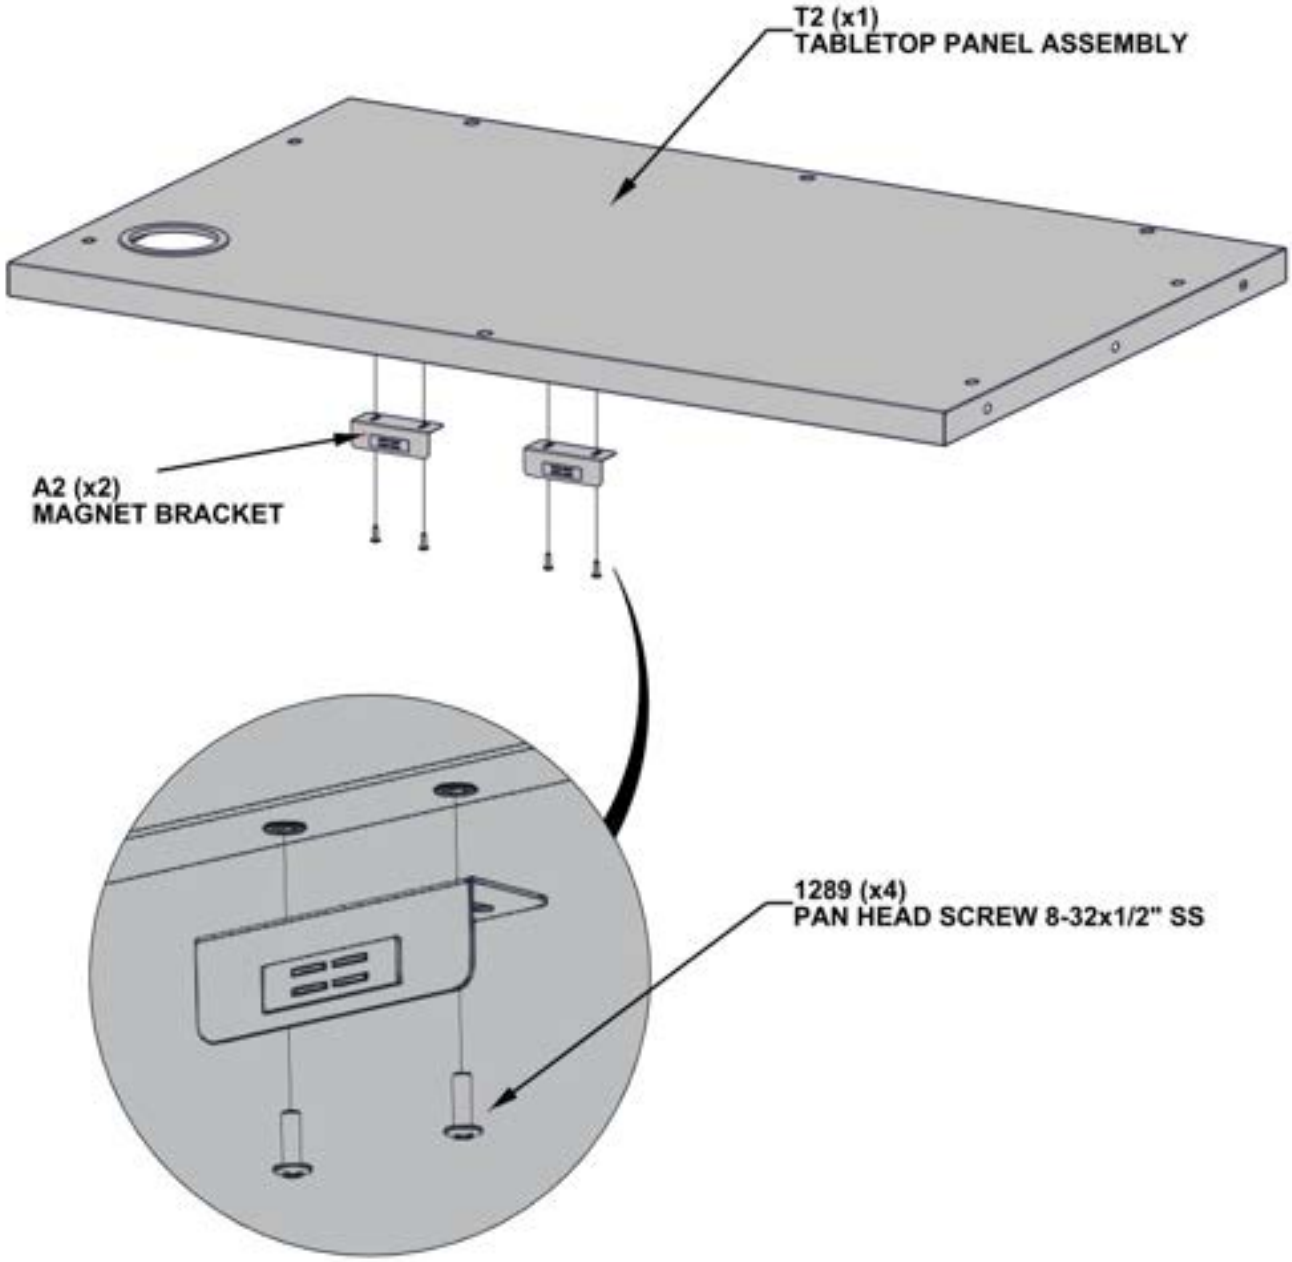


STEP 37B - TABLETOP PANEL ASSEMBLY



TABLETOP ASSEMBLY FROM STEP 37A


Qty	PartNo	Description
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- HARDWARE ATTACHES ON INSIDE OF CABINET.

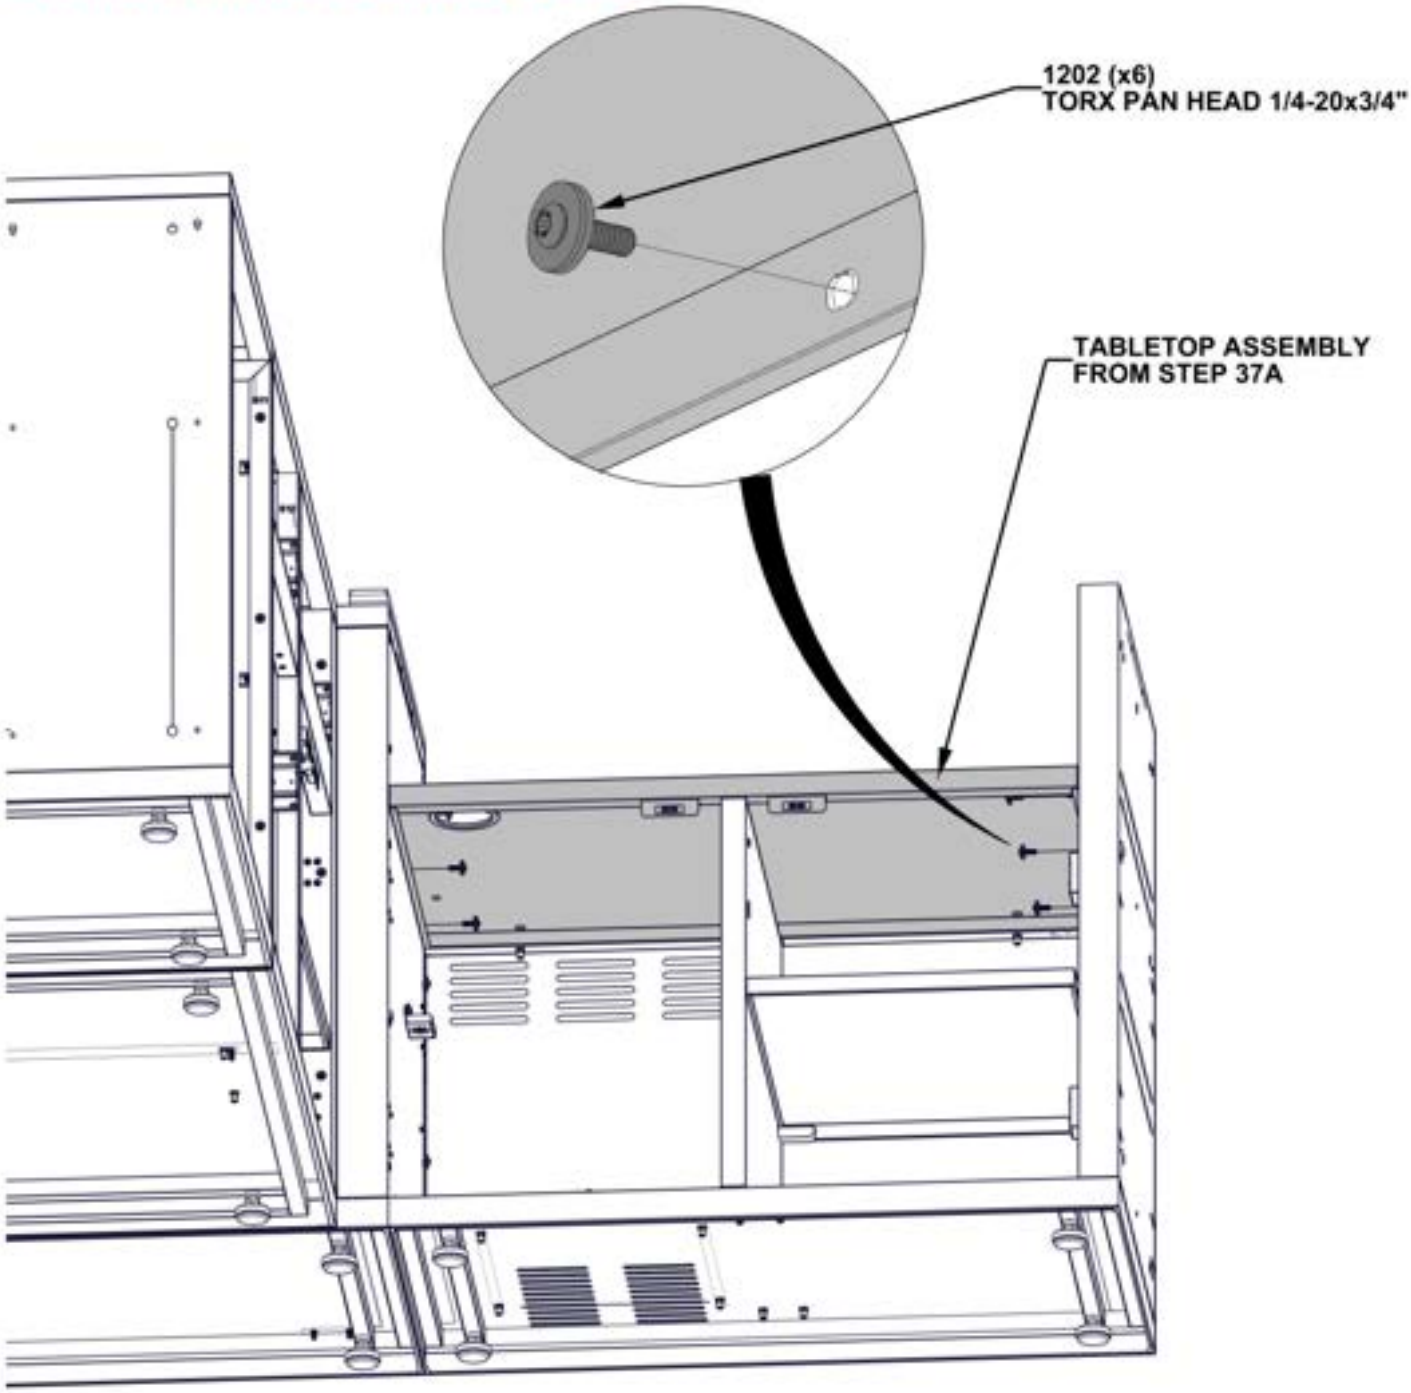

STEP 37C - TABLETOP PANEL ASSEMBLY

Qty	PartNo	Description
4	H101103	TORX SOCKET SCREW 1/4-20

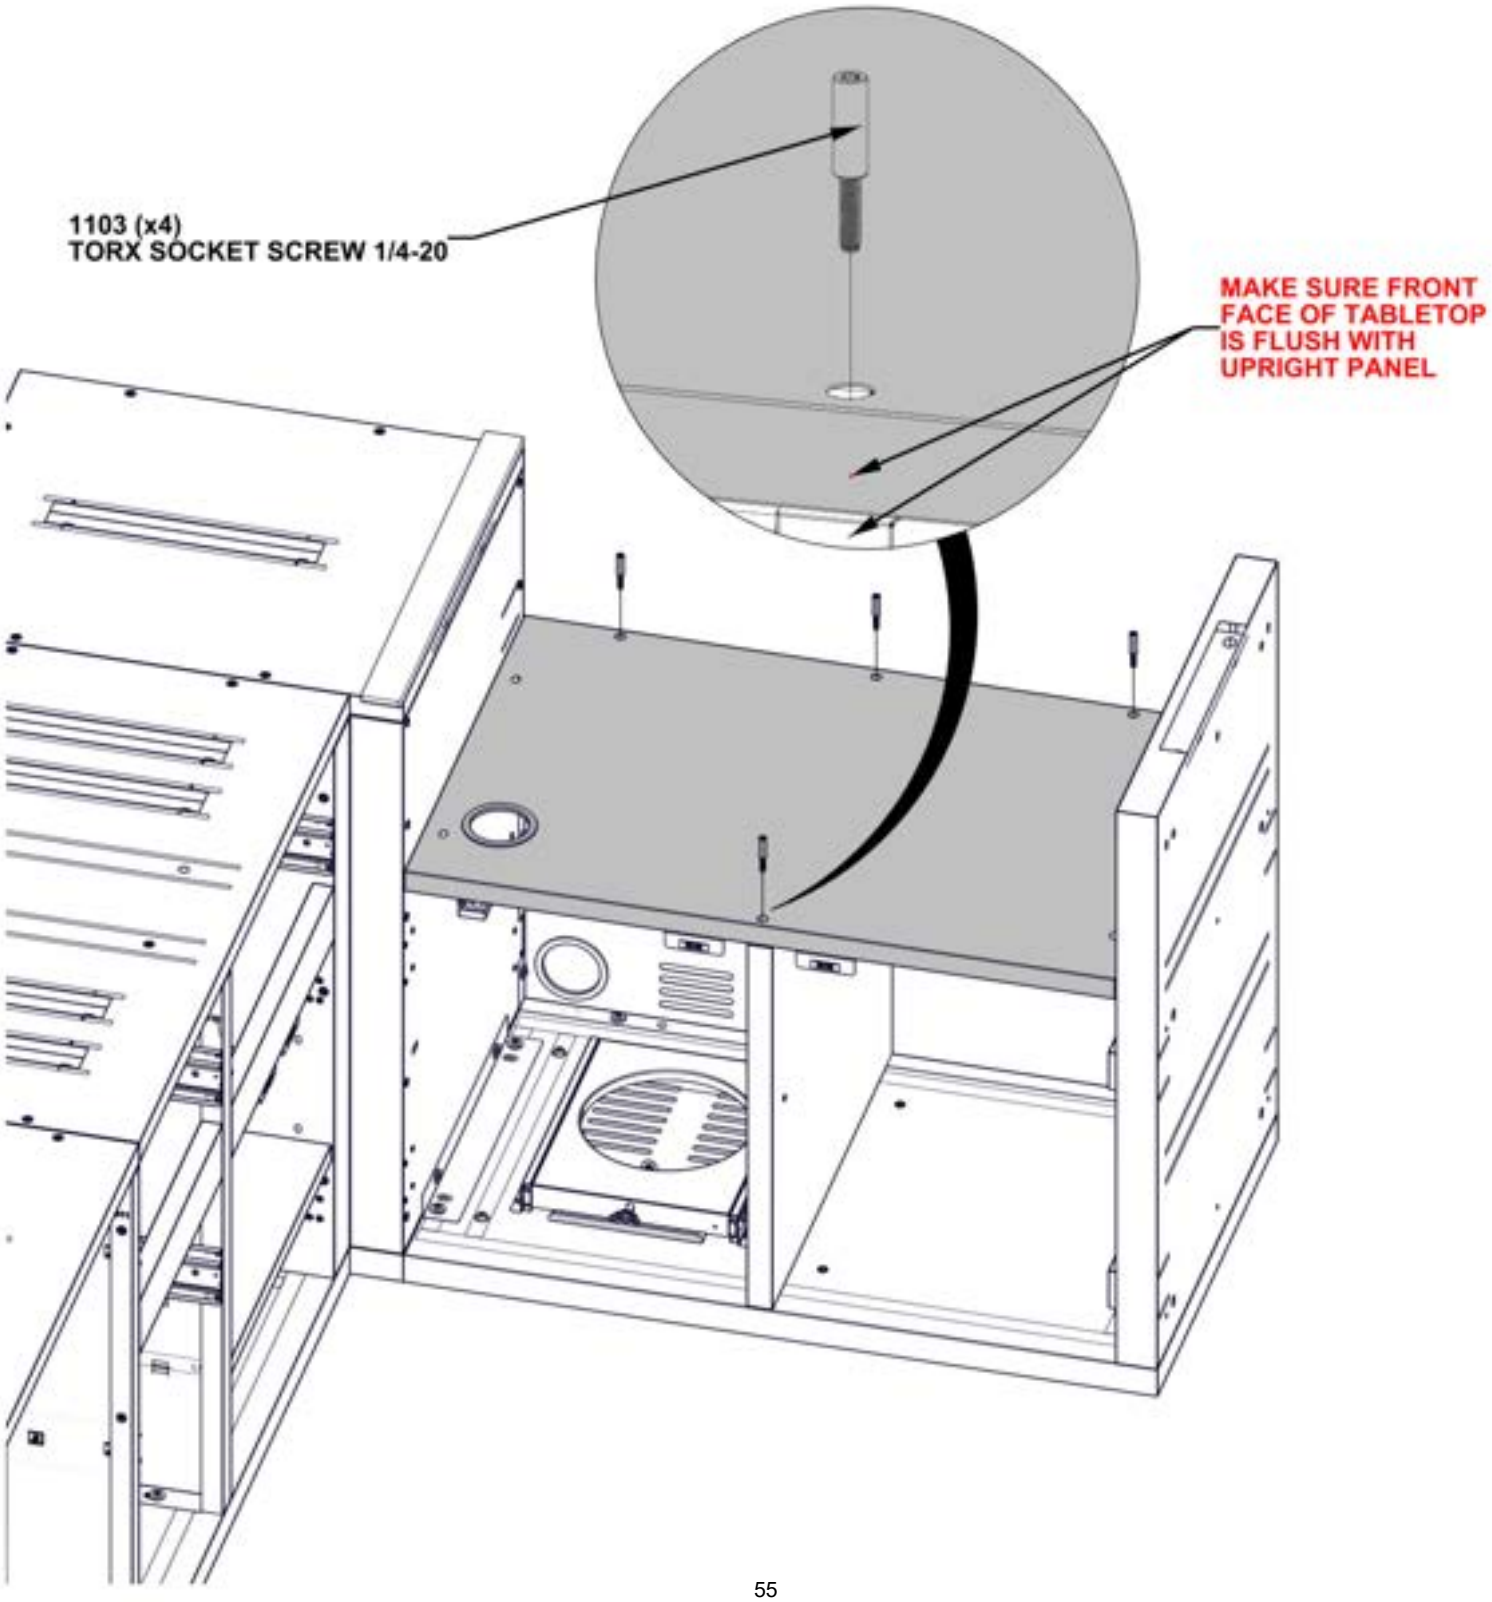


STEP 38 - VENTILATION PANEL ASSEMBLY



G11 VENTILATION PANEL - A4M03056
(x1) 1 3/16"x11 3/16"x38 3/16" (30x284x970)

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- FLUSH BACK SIDE OF VENTILATION PANEL.

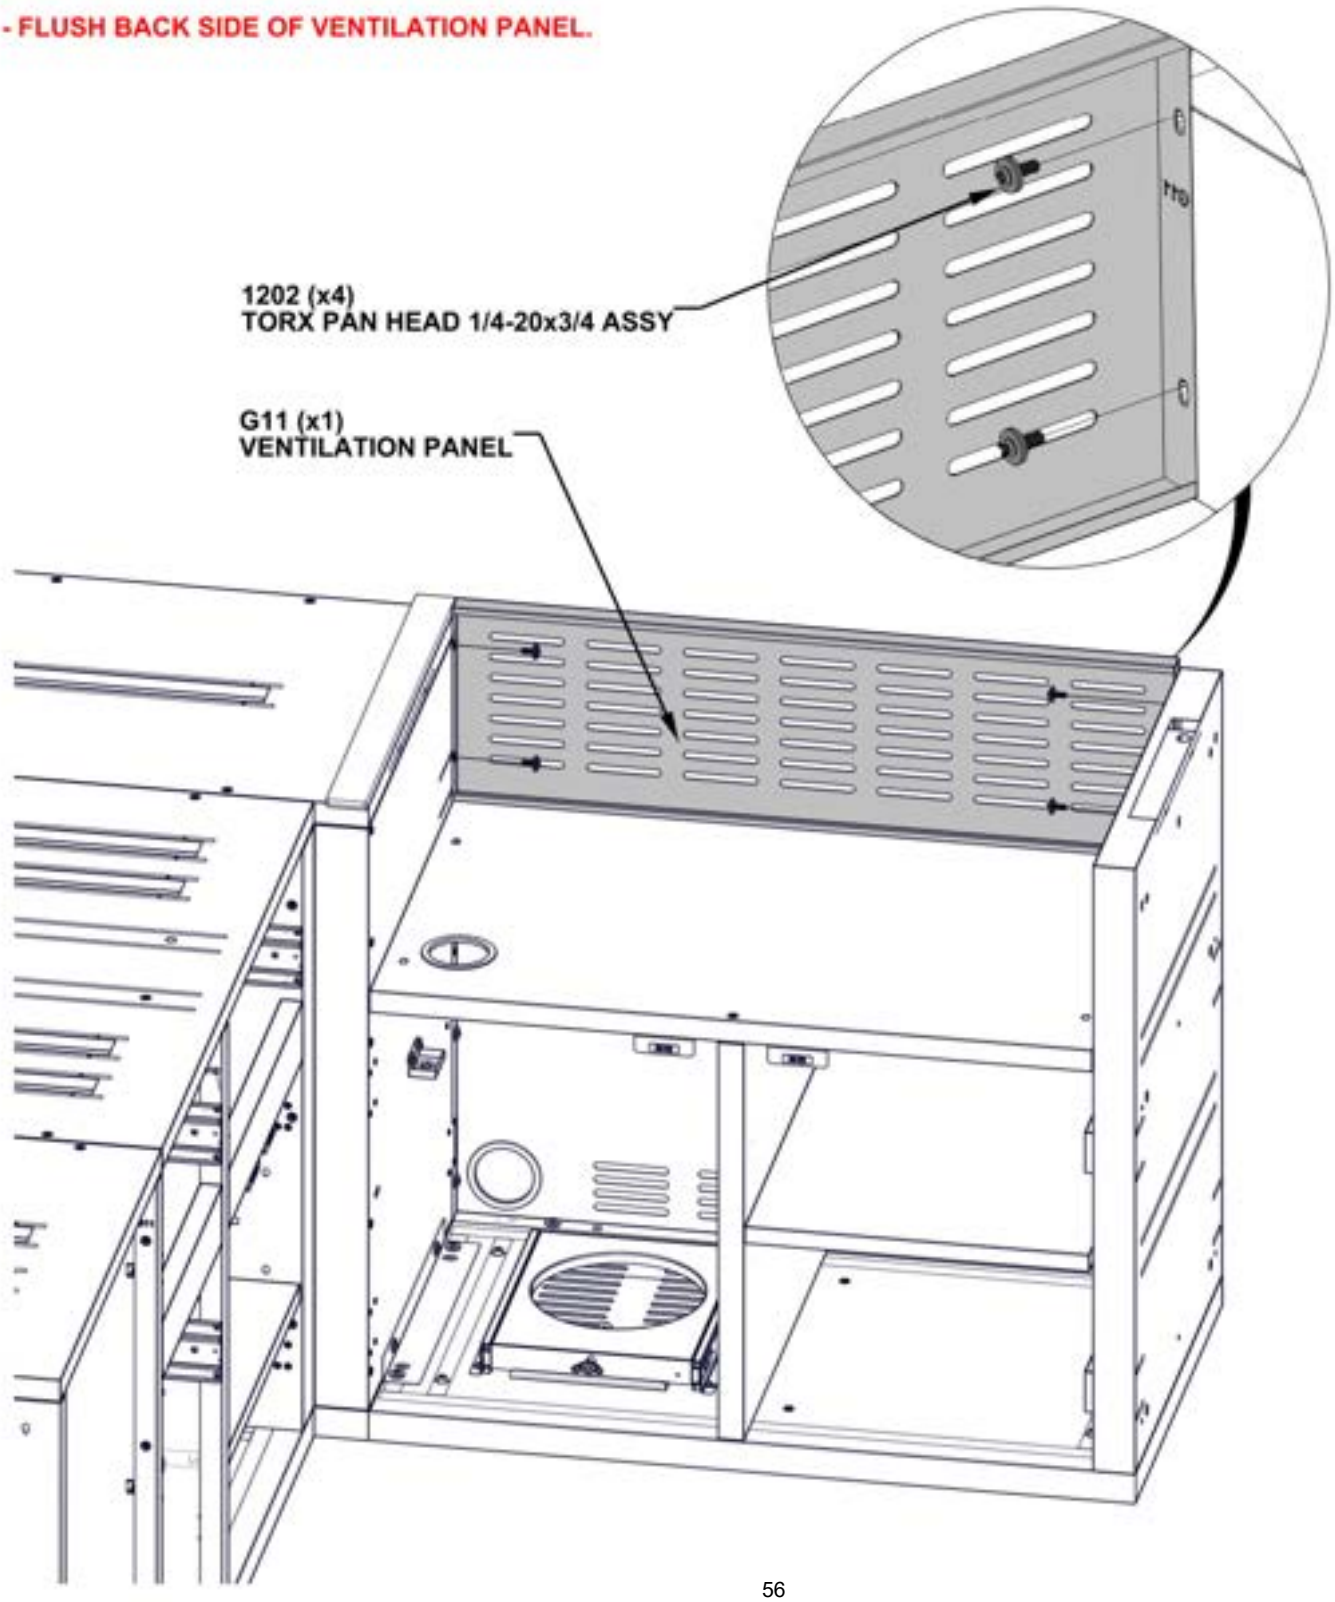


STEP 39A - SIDE TRIM PANEL ASSEMBLY



Qty	PartNo	Description
6	H101289	PAN HEAD SCREW 8-32x1/2" SS

S13 SIDE TRIM PANEL ASSEMBLY - A4M07143
(x2) 11/16"x24 3/16"x35 13/16" (18x614x909)


- PARTIAL THREAD SCREWS INTO THREADED INSERTS LEAVING APPROXIMATELY 1/2" (12mm) OF SCREW STICKING OUT.
- REPEAT THIS STEP TWICE.

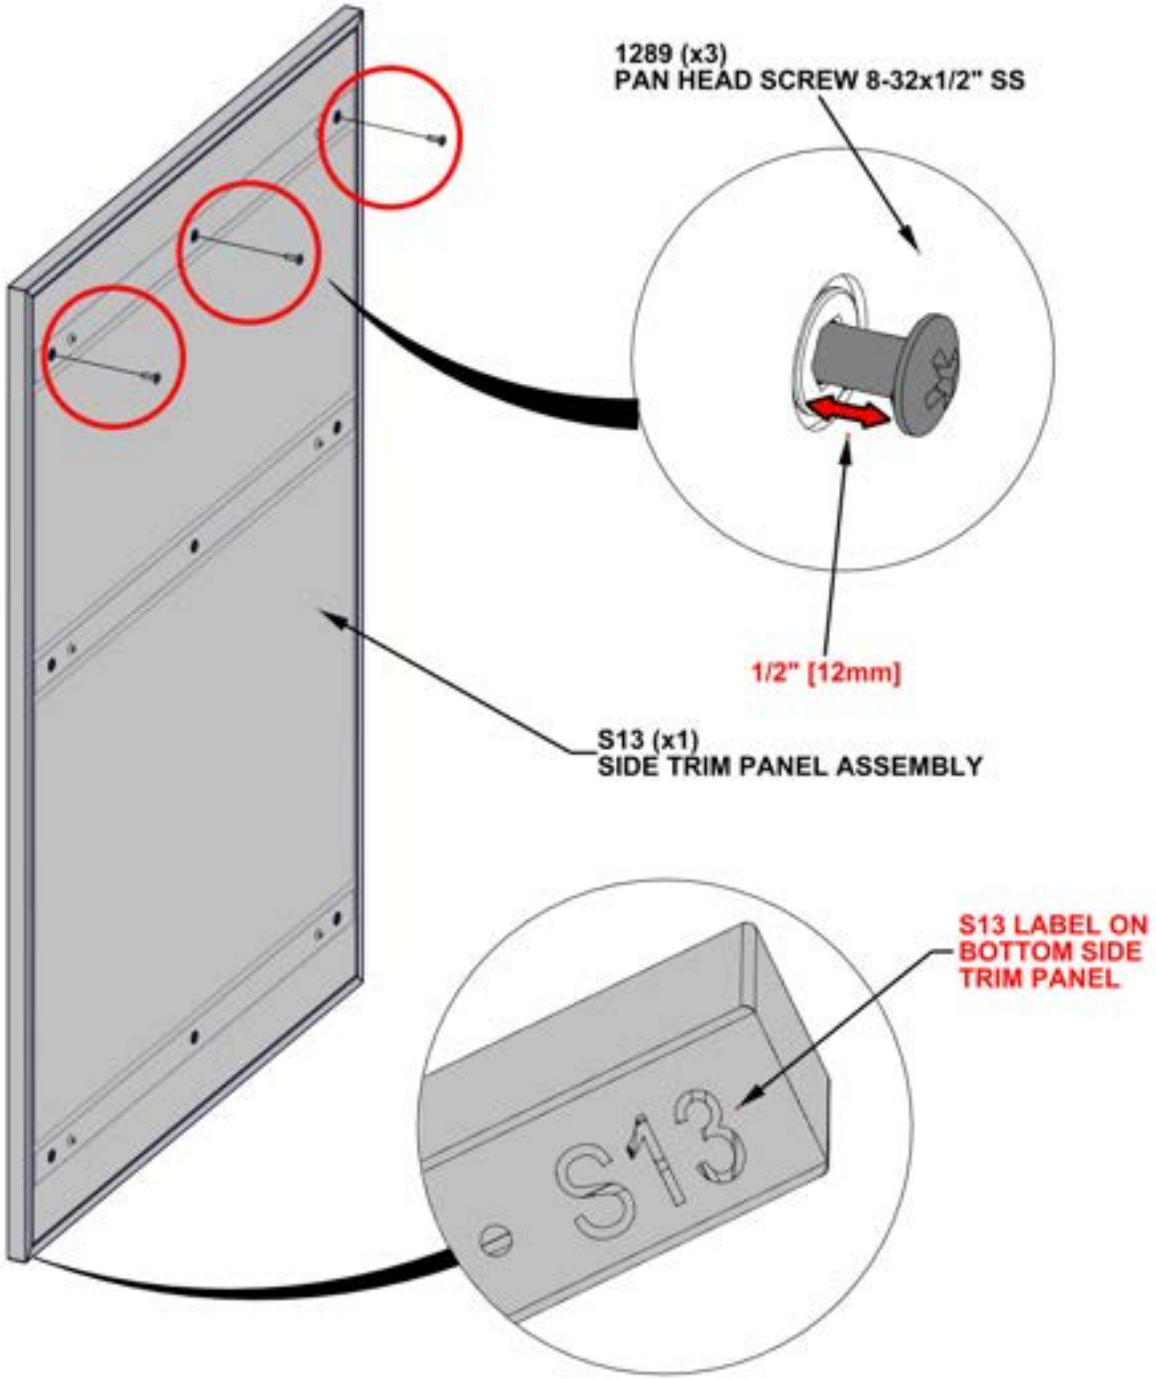

STEP 39B - SIDE TRIM PANEL ASSEMBLY




S13 SIDE TRIM PANEL ASSEMBLY FROM STEP 39A

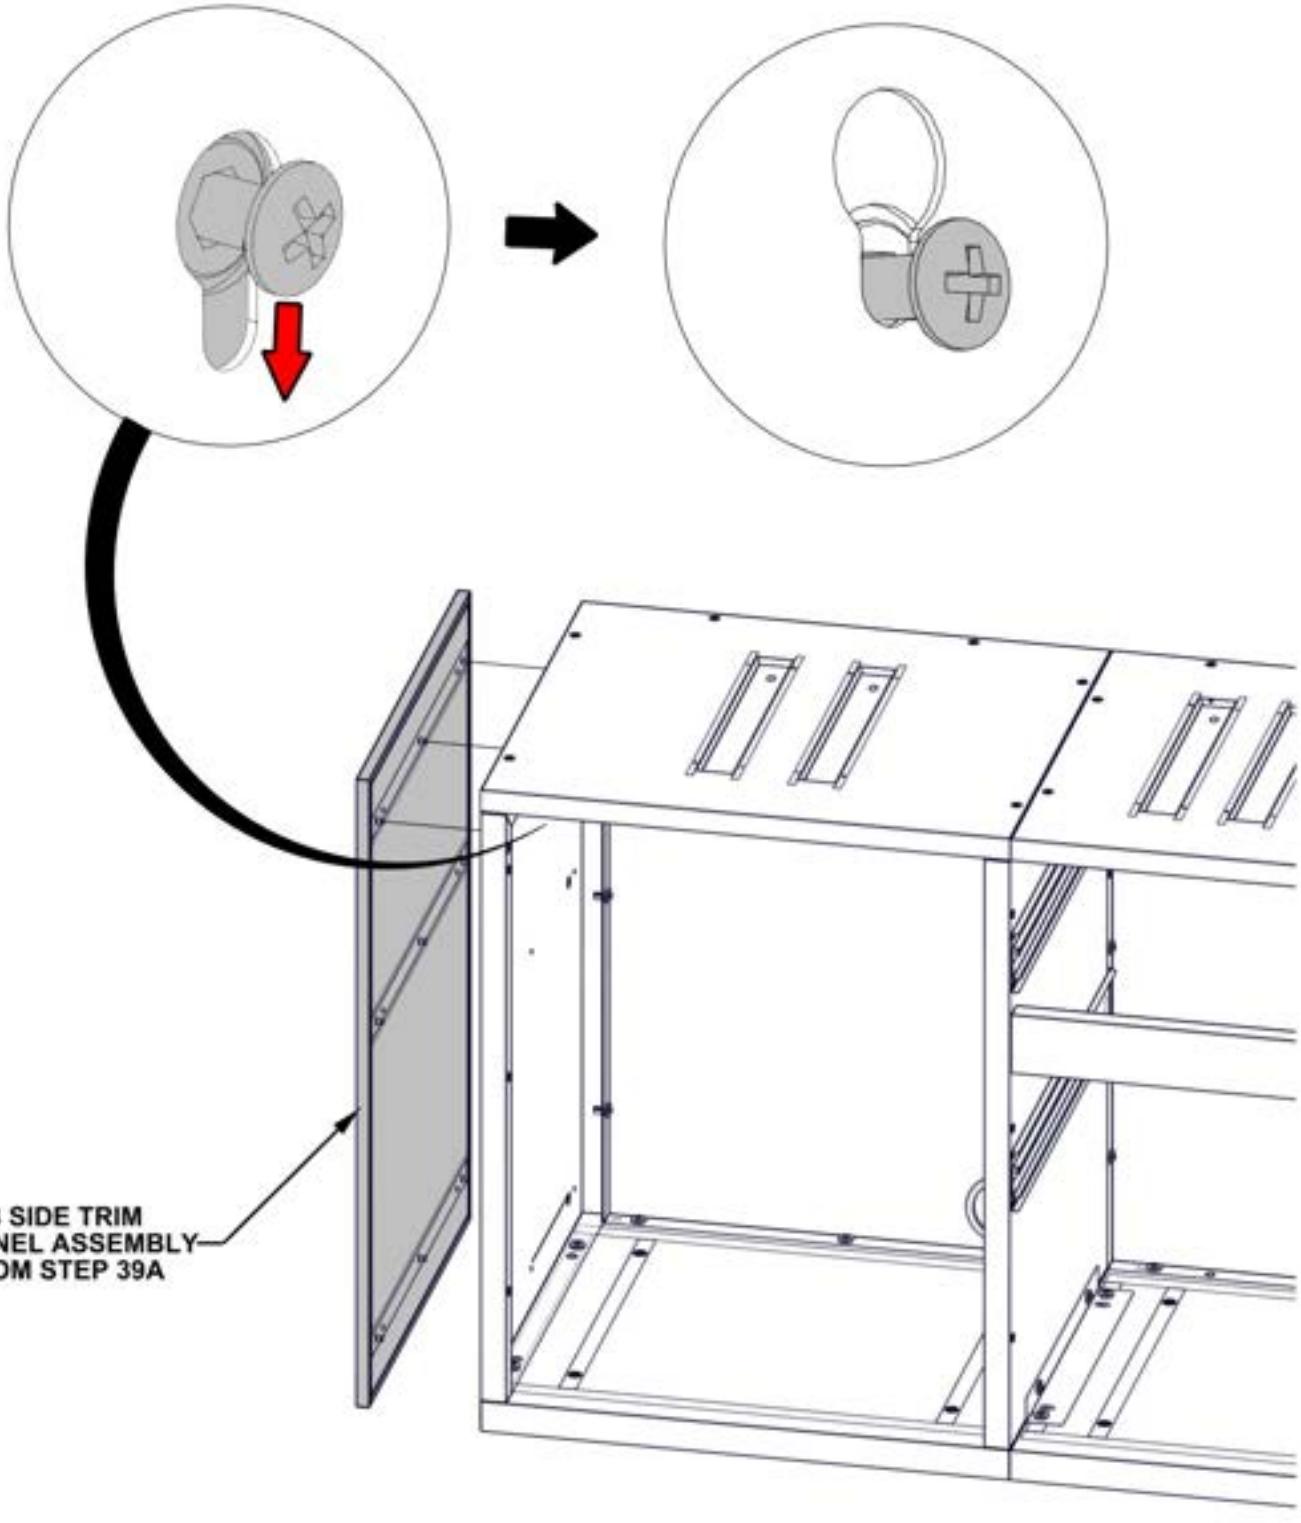

STEP 39C - SIDE TRIM PANEL ASSEMBLY

Qty	PartNo	Description
6	H101289	PAN HEAD SCREW 8-32x1/2" SS


- ATTACH SIDE TRIM PANEL AND TIGHTEN ALL HARDWARE.

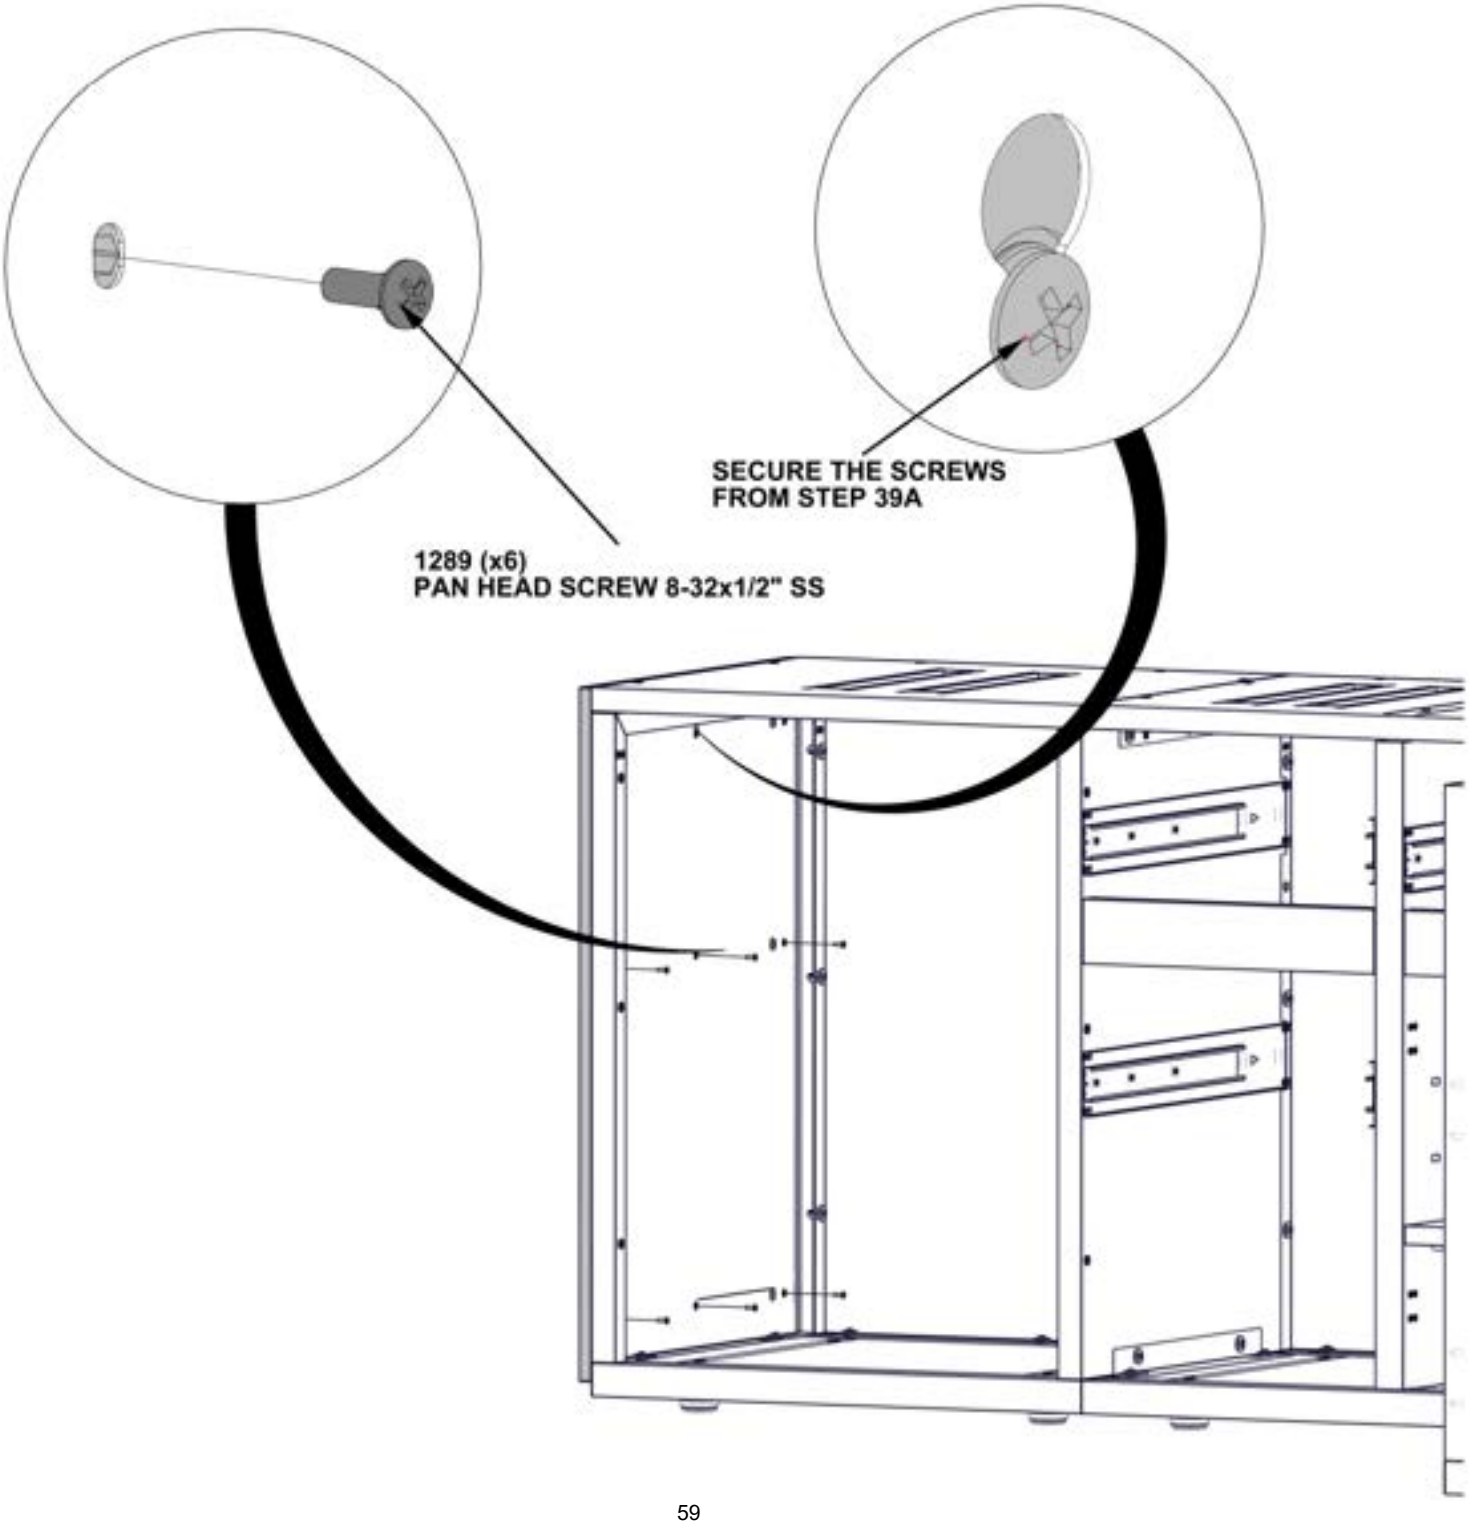

STEP 39D - SIDE TRIM PANEL ASSEMBLY




S13 SIDE TRIM PANEL ASSEMBLY FROM STEP 39A

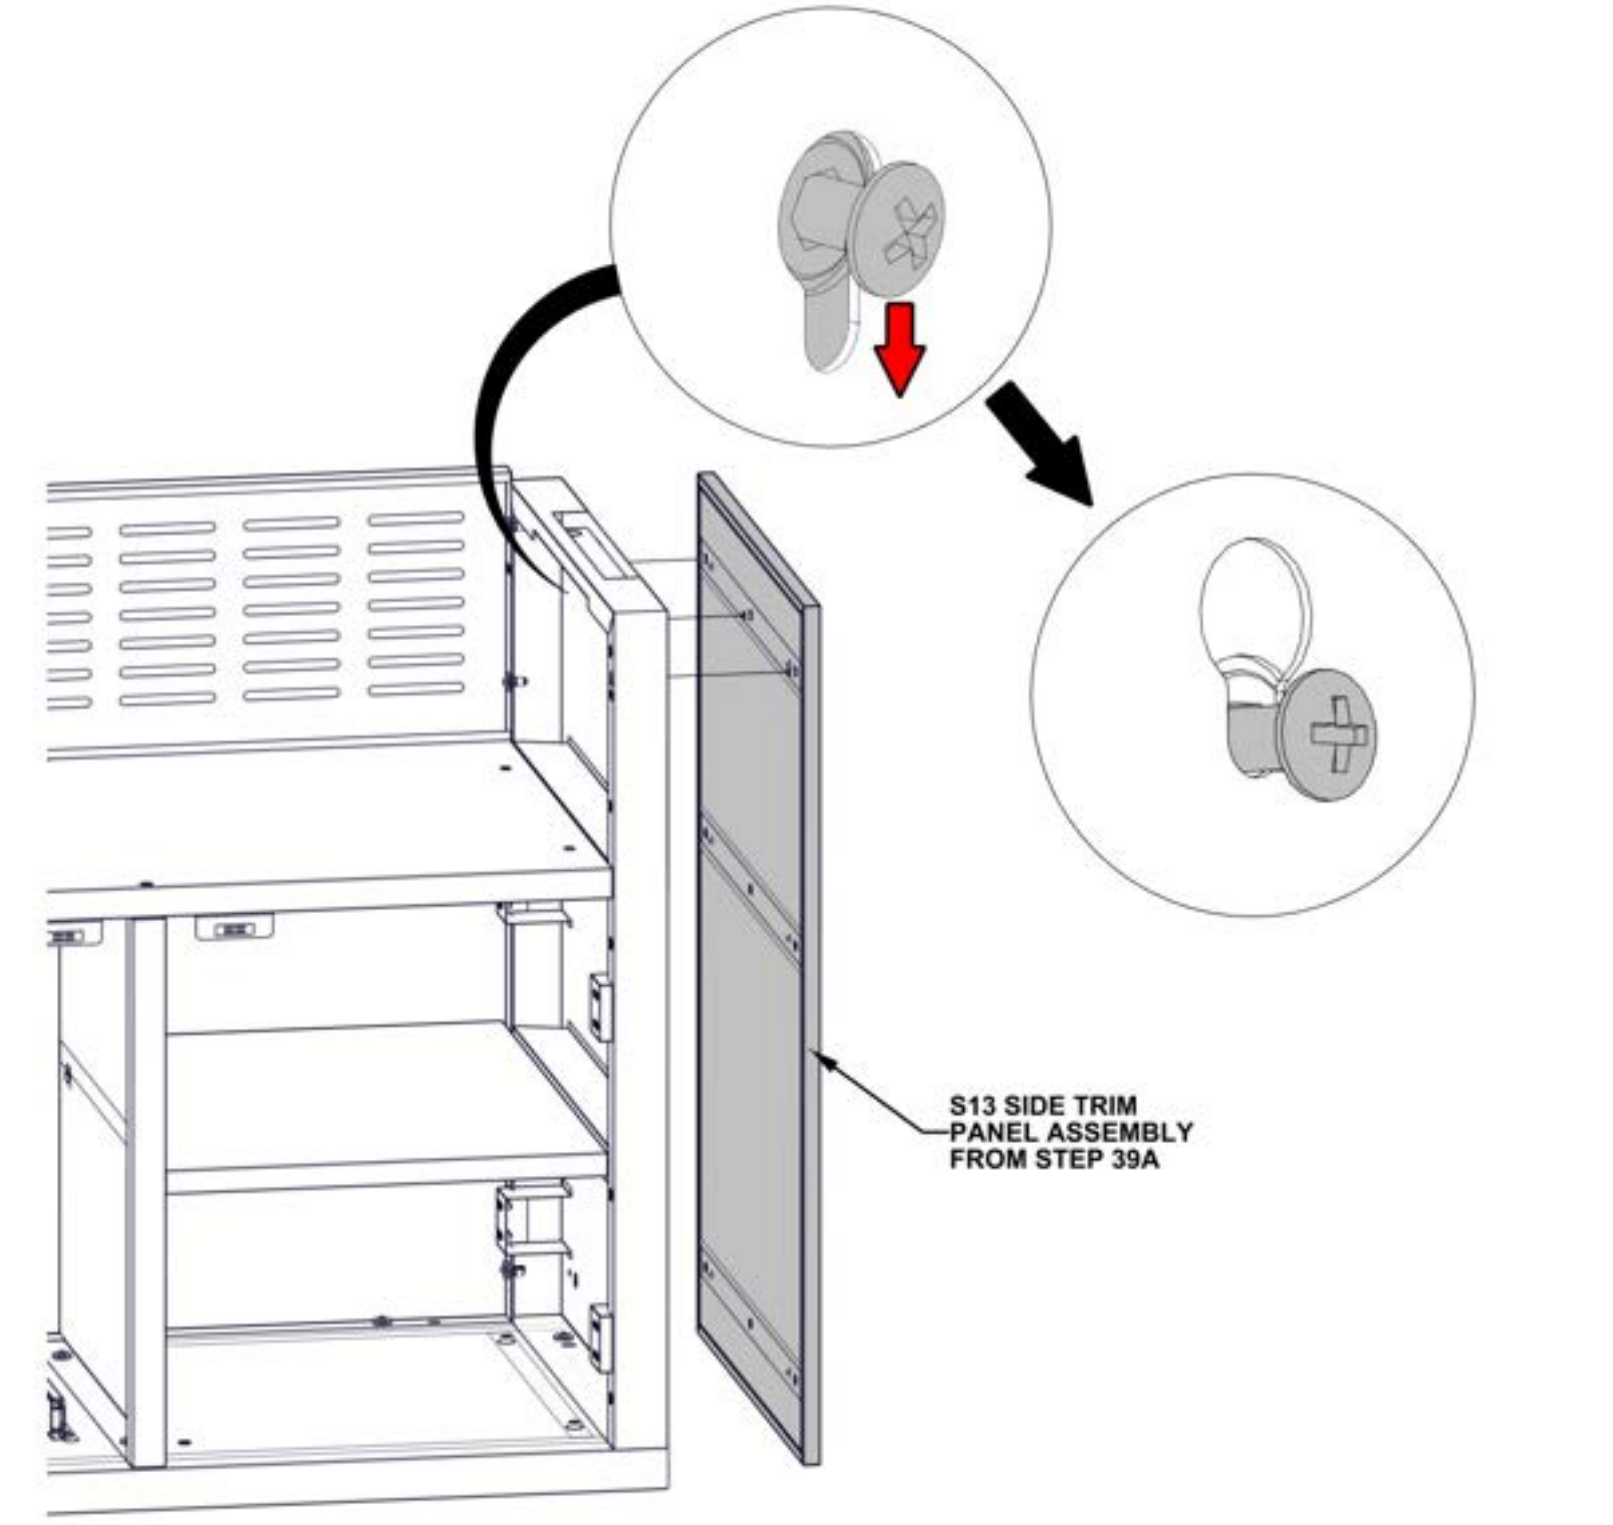

STEP 39E - SIDE TRIM PANEL ASSEMBLY

Qty	PartNo	Description
6	H101289	PAN HEAD SCREW 8-32x1/2" SS

- ATTACH SIDE TRIM PANEL AND TIGHTEN ALL HARDWARE.

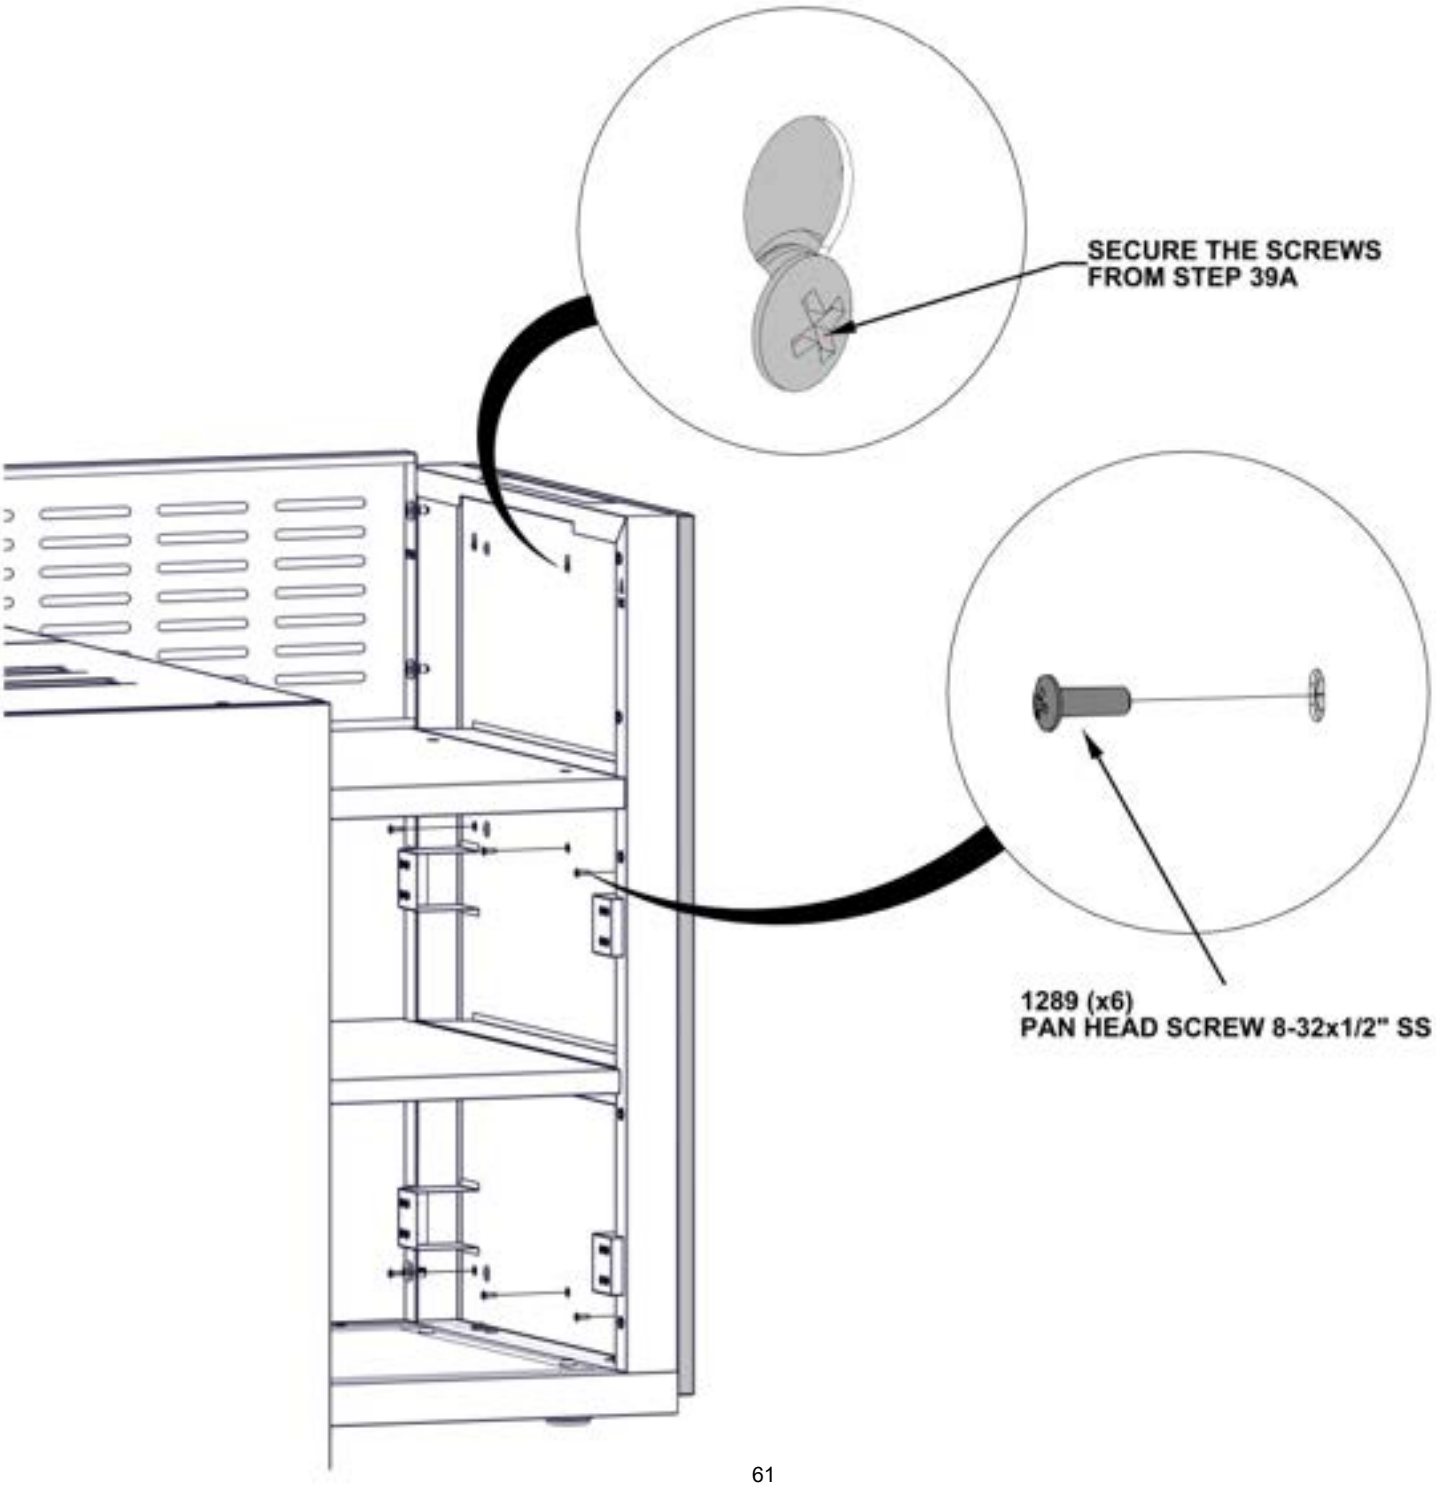


STEP 40 - COUNTERTOP ASSEMBLY



Qty	PartNo	Description
2	H101054	SEALANT WASHER
2	H101053	STEEL WASHER 6x20
2	H101292	TORX PAN HEAD 1/4-20x13/32"

M1 COUNTERTOP - A4M07154
(x1) 1 5/16"x2 15/16"x25 1/8" (33x75x638)

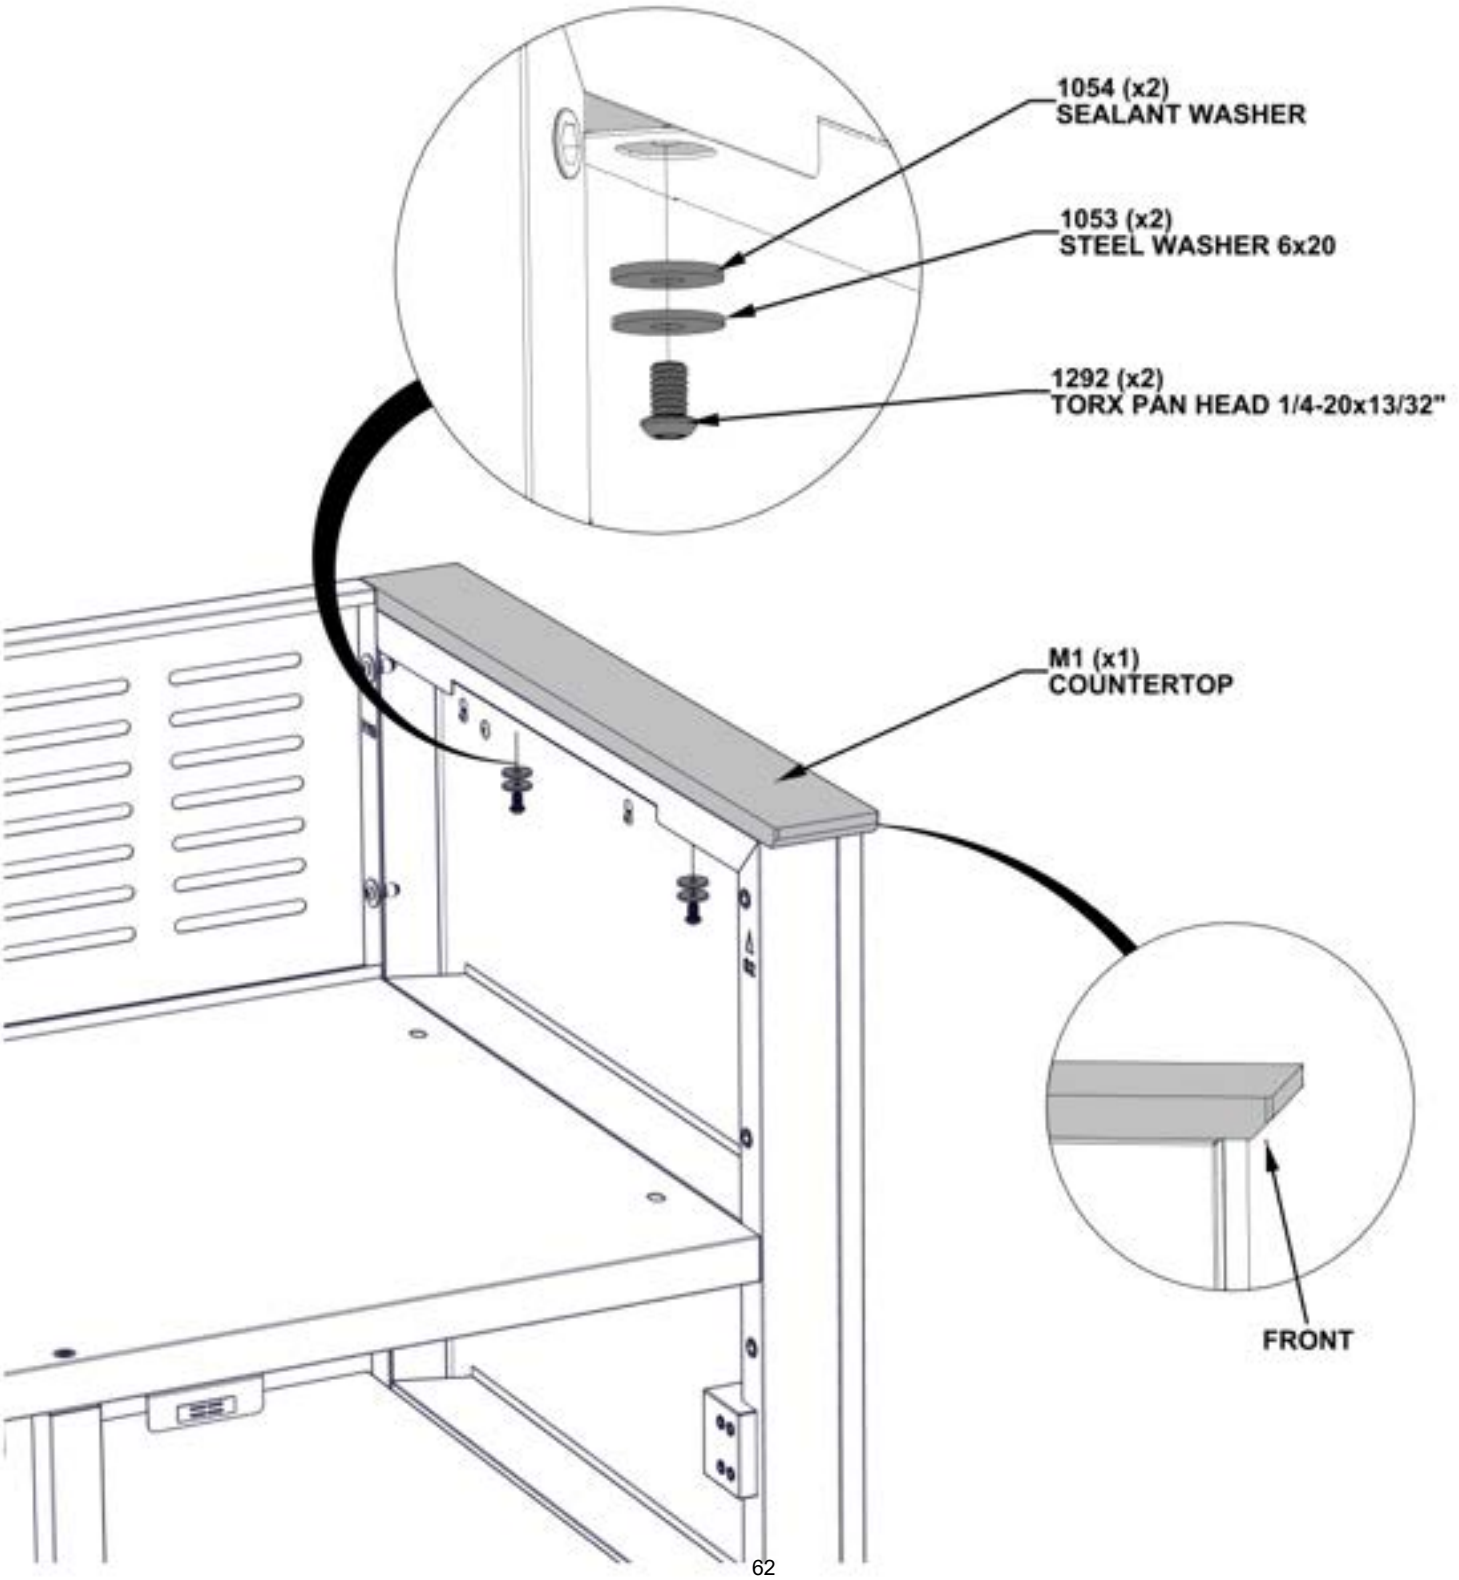

STEP 41 - COUNTERTOP ASSEMBLY




M3 COUNTERTOP - A4M06742
(x1) 1 5/16"x25 1/8"x47 11/16" (33x638x1211)

Qty	PartNo	Description
4	H101054	SEALANT WASHER
4	H101053	STEEL WASHER 6x20
4	H101292	TORX PAN HEAD 1/4-20x13/32"

- IT IS RECOMMENDED TO HAVE AT LEAST TWO PEOPLE SET COUNTERTOP IN PLACE.
- SLIDE IN PLACE UNTIL HOLES IN COUNTERTOP ALIGN WITH THE HOLES IN SUPPORT FRAME.

- WHEN SETTING COUNTERTOP IN PLACE, MAKE SURE YOUR FINGERS ARE CLEAR AND NOT UNDERNEATH COUNTERTOP.

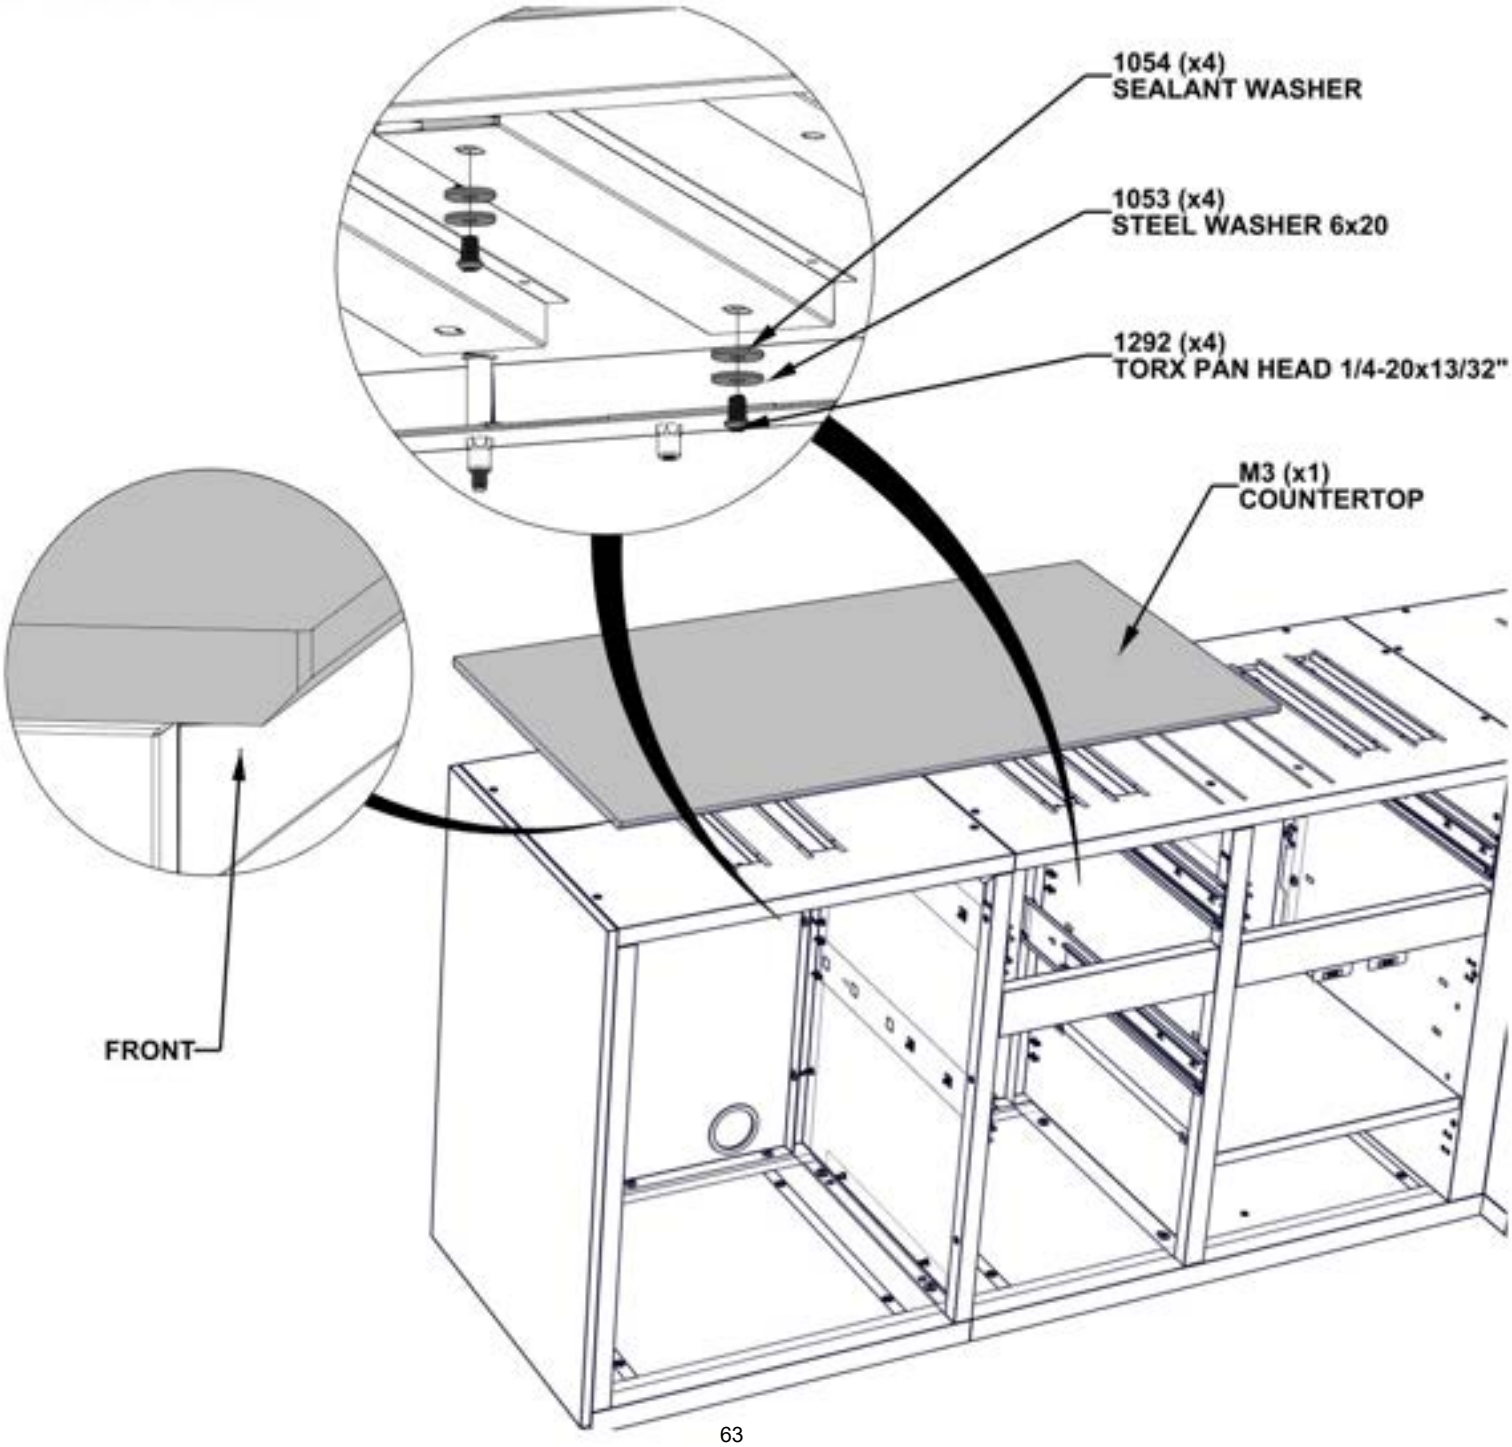

STEP 42 - COUNTERTOP ASSEMBLY




M3 COUNTERTOP - A4M06742
(x1) 1 5/16"x25 1/8"x47 11/16" (33x638x1211)

Qty	PartNo	Description
4	H101054	SEALANT WASHER
4	H101053	STEEL WASHER 6x20
4	H101292	TORX PAN HEAD 1/4-20x13/32"

- IT IS RECOMMENDED TO HAVE AT LEAST TWO PEOPLE SET COUNTERTOP IN PLACE.
- SLIDE IN PLACE UNTIL HOLES IN COUNTERTOP ALIGN WITH THE HOLES IN SUPPORT FRAME.

- WHEN SETTING COUNTERTOP IN PLACE, MAKE SURE YOUR FINGERS ARE CLEAR AND NOT UNDERNEATH COUNTERTOP.

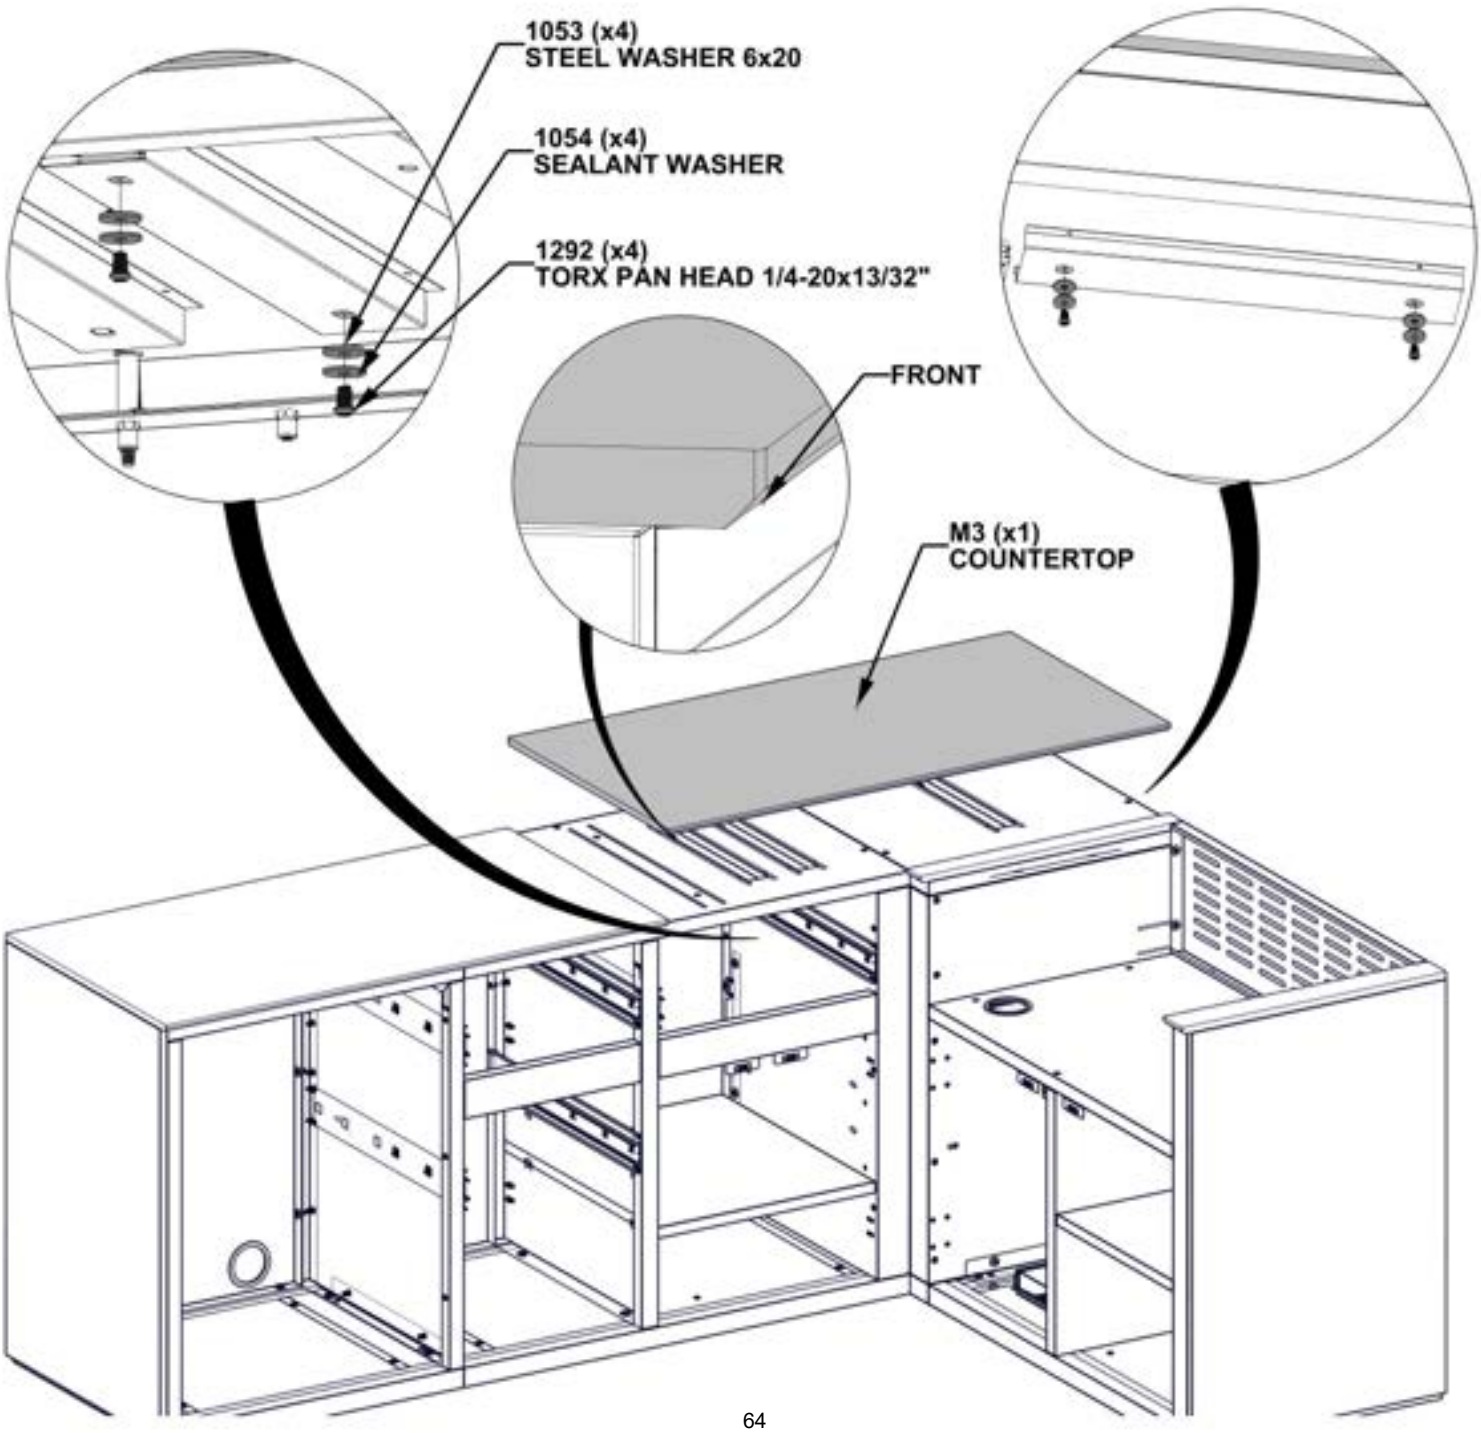


STEP 43 - DOOR PANEL ASSEMBLY




D9 DOOR ASSEMBLY - A4M06720
(x1) 15/16"x22 5/16"x29 5/8" (23.2x567x753.2)

1 - INSERT THE PIN ON BOTTOM SIDE OF DOOR INTO HOLE IN FLOOR PANEL.
2 - PRESS DOWN ON THE SPRING LOADED PIN LOCATED ON TOP OF DOOR. SLIDE IN PLACE UNTIL PIN RELEASES INTO HOLE IN CABINET PANEL.
3 - ADJUST DOOR STOPPER TO KEEP D9 LEVEL WITH BACK PANELS.

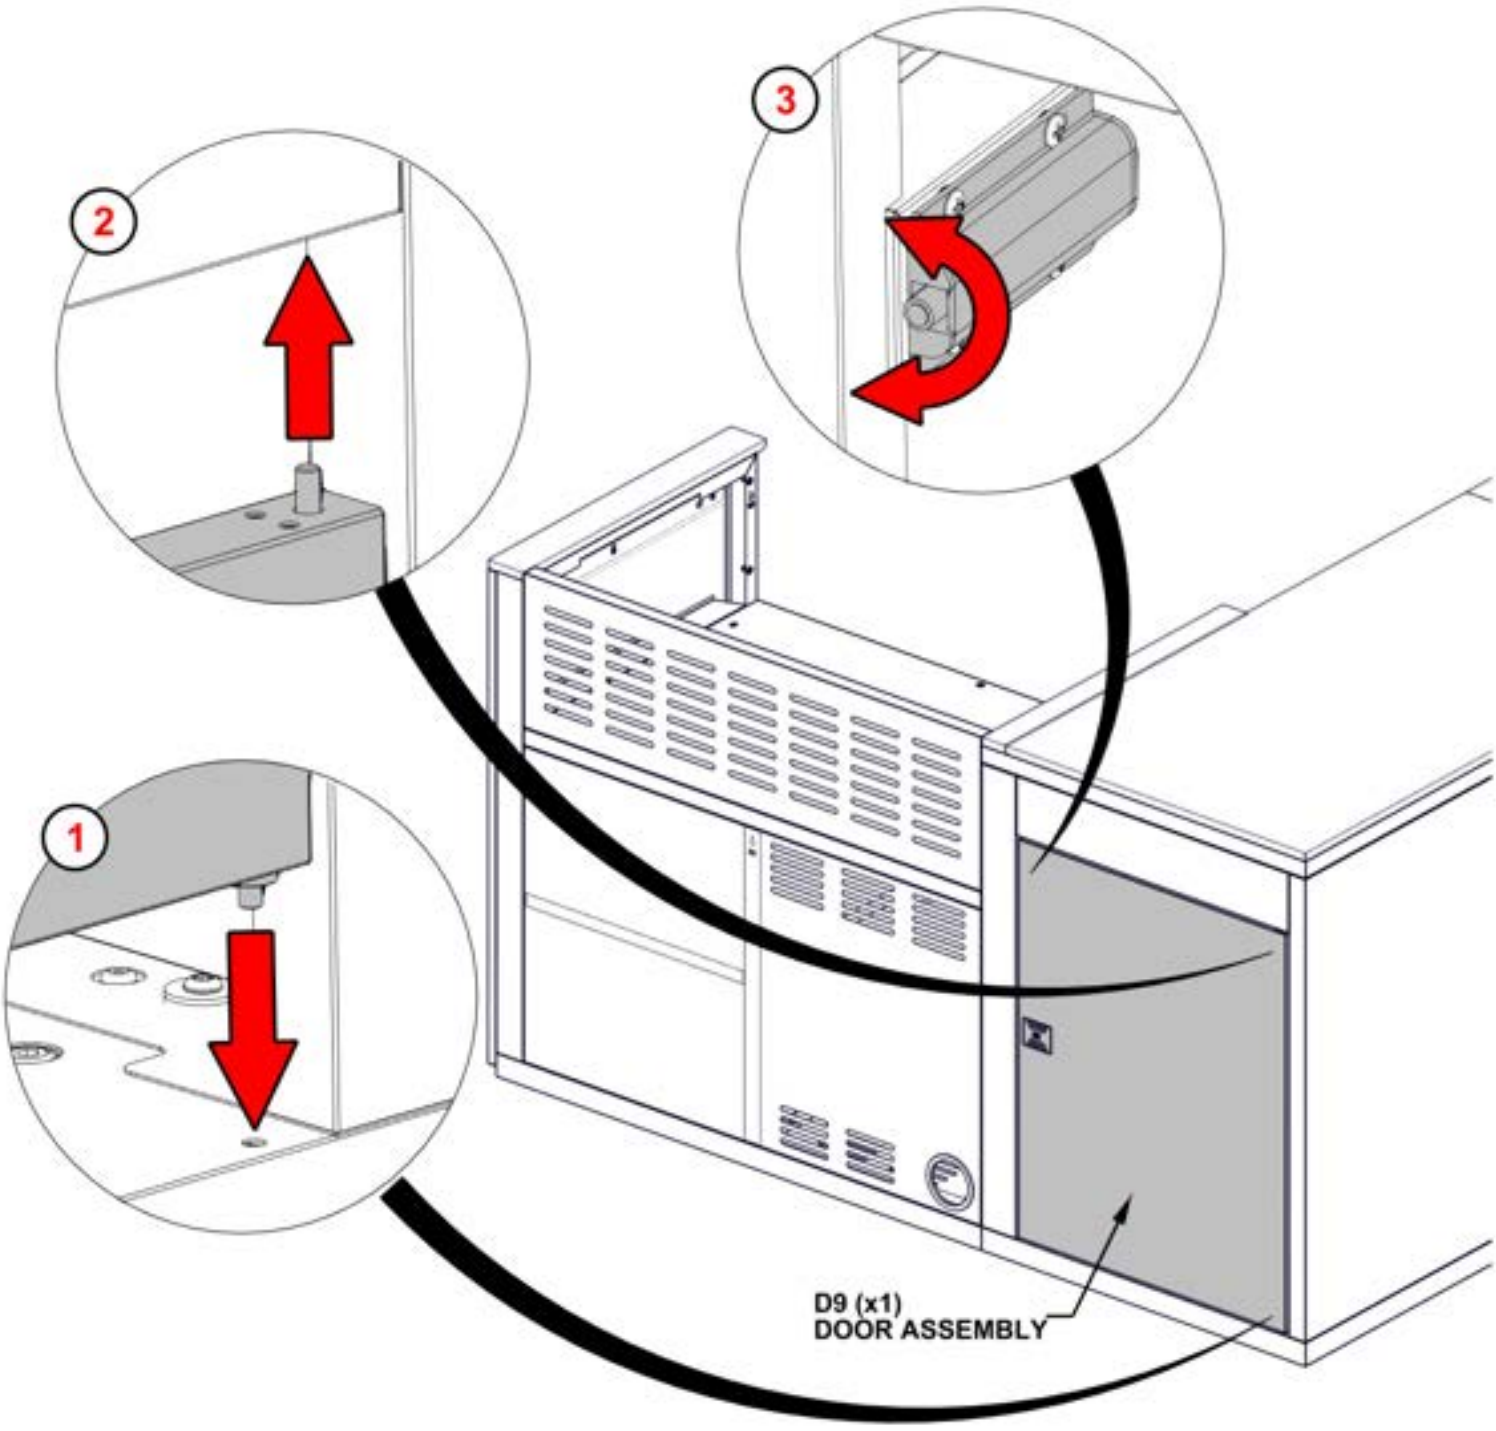


STEP 44 - CABINET ASSEMBLY

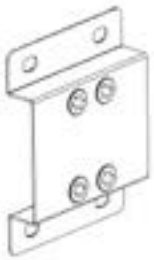

Qty	PartNo	Description
8	H101289	PAN HEAD SCREW 8-32x1/2" SS

A1 HINGE BRACKET ASSEMBLY - A4M06757
(x2) 1/2"x2 1/4"2 7/8" (12x56.8x73.4)

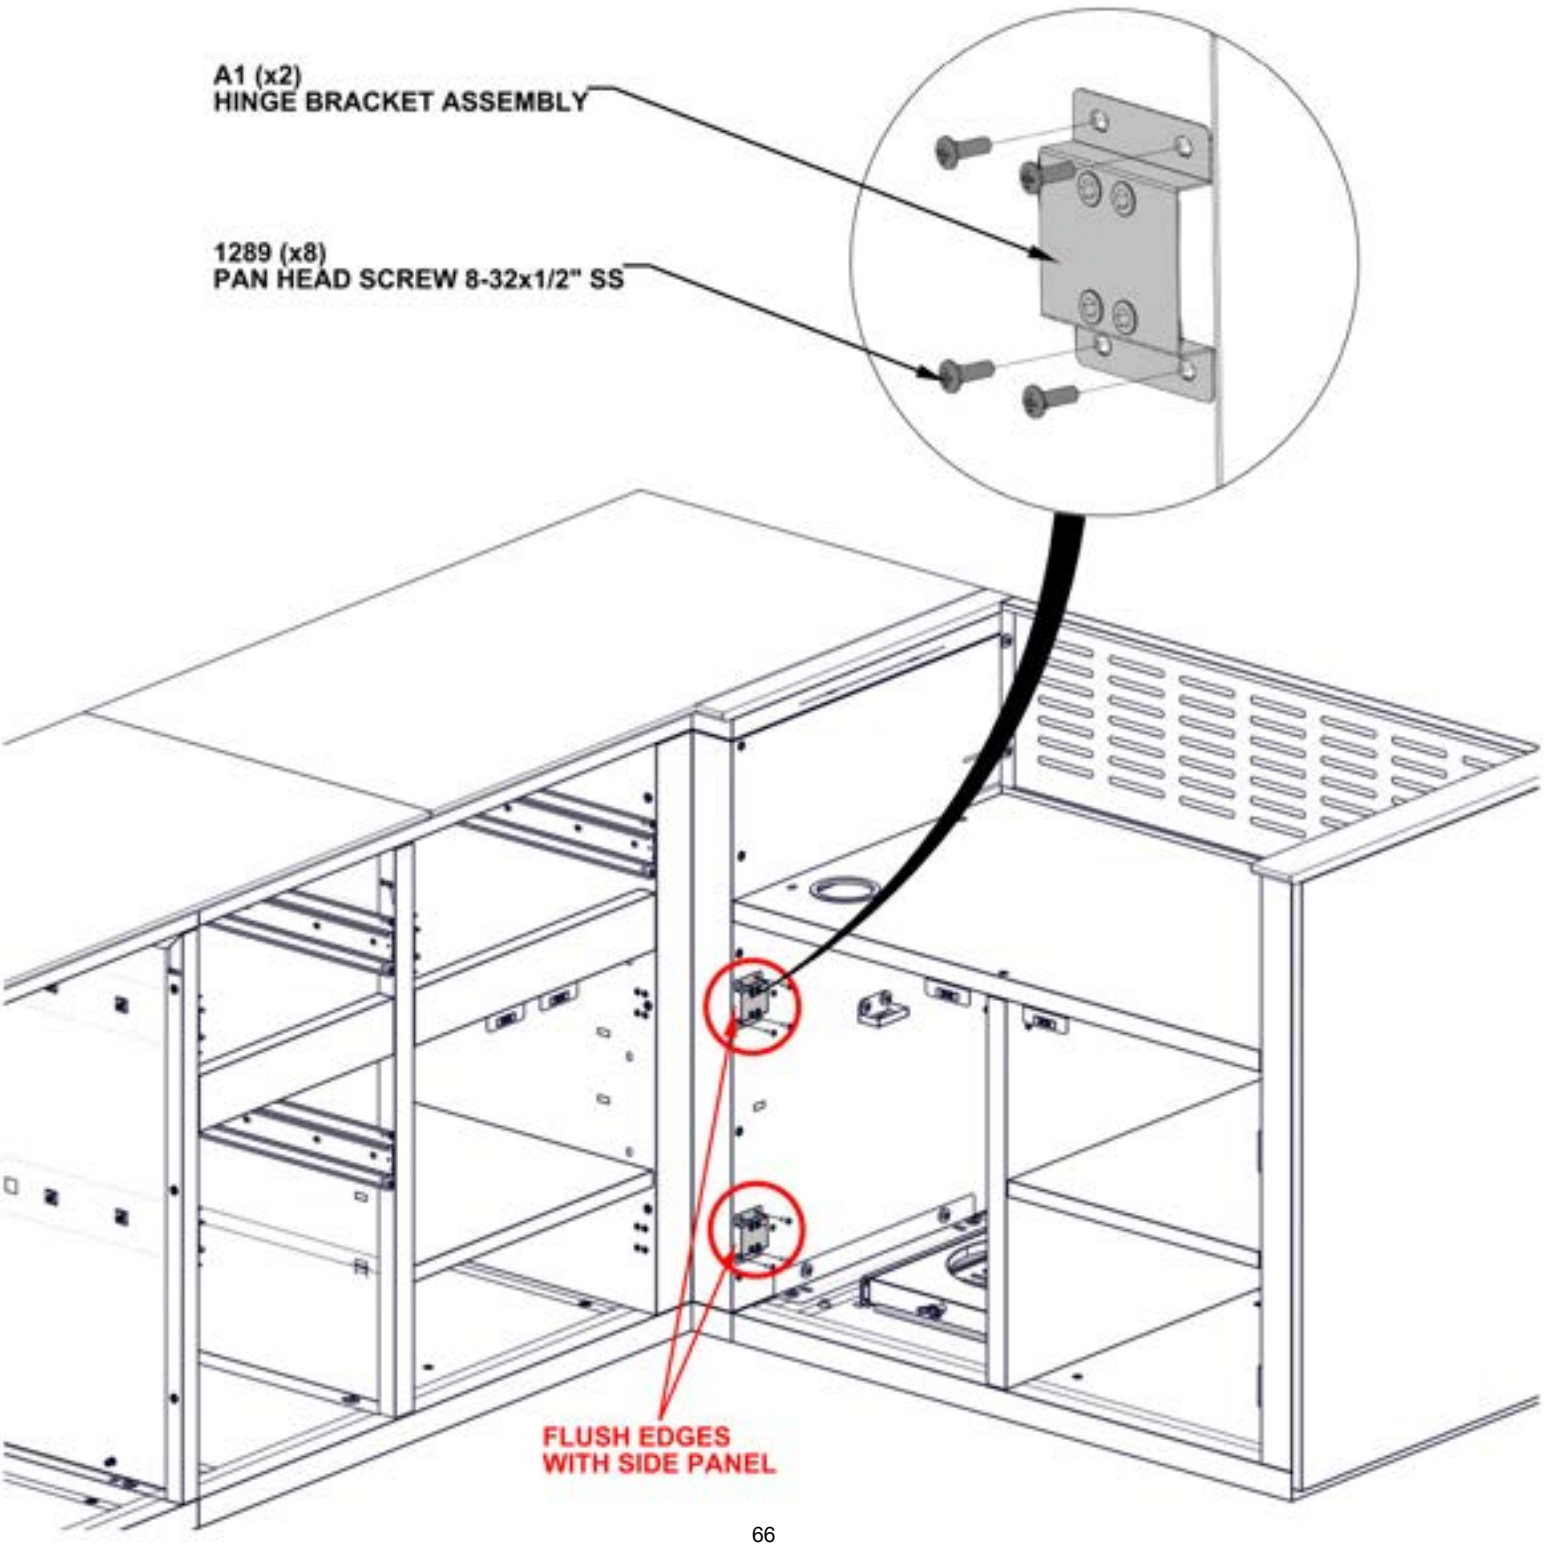

STEP 45A - TRASH CAN ASSEMBLY






Qty	PartNo	Description
6	H101289	PAN HEAD SCREW 8-32x1/2" SS

H12 TRASH CAN BRACKET ASSEMBLY - A4M06454
(x1) 1 3/8"x16 1/4"x18 1/16" (35x412x458)

A11 TRIANGLE PANEL - A4M03086
(x2) 13/16"x13 3/4"x13 3/4" (20x350x350)

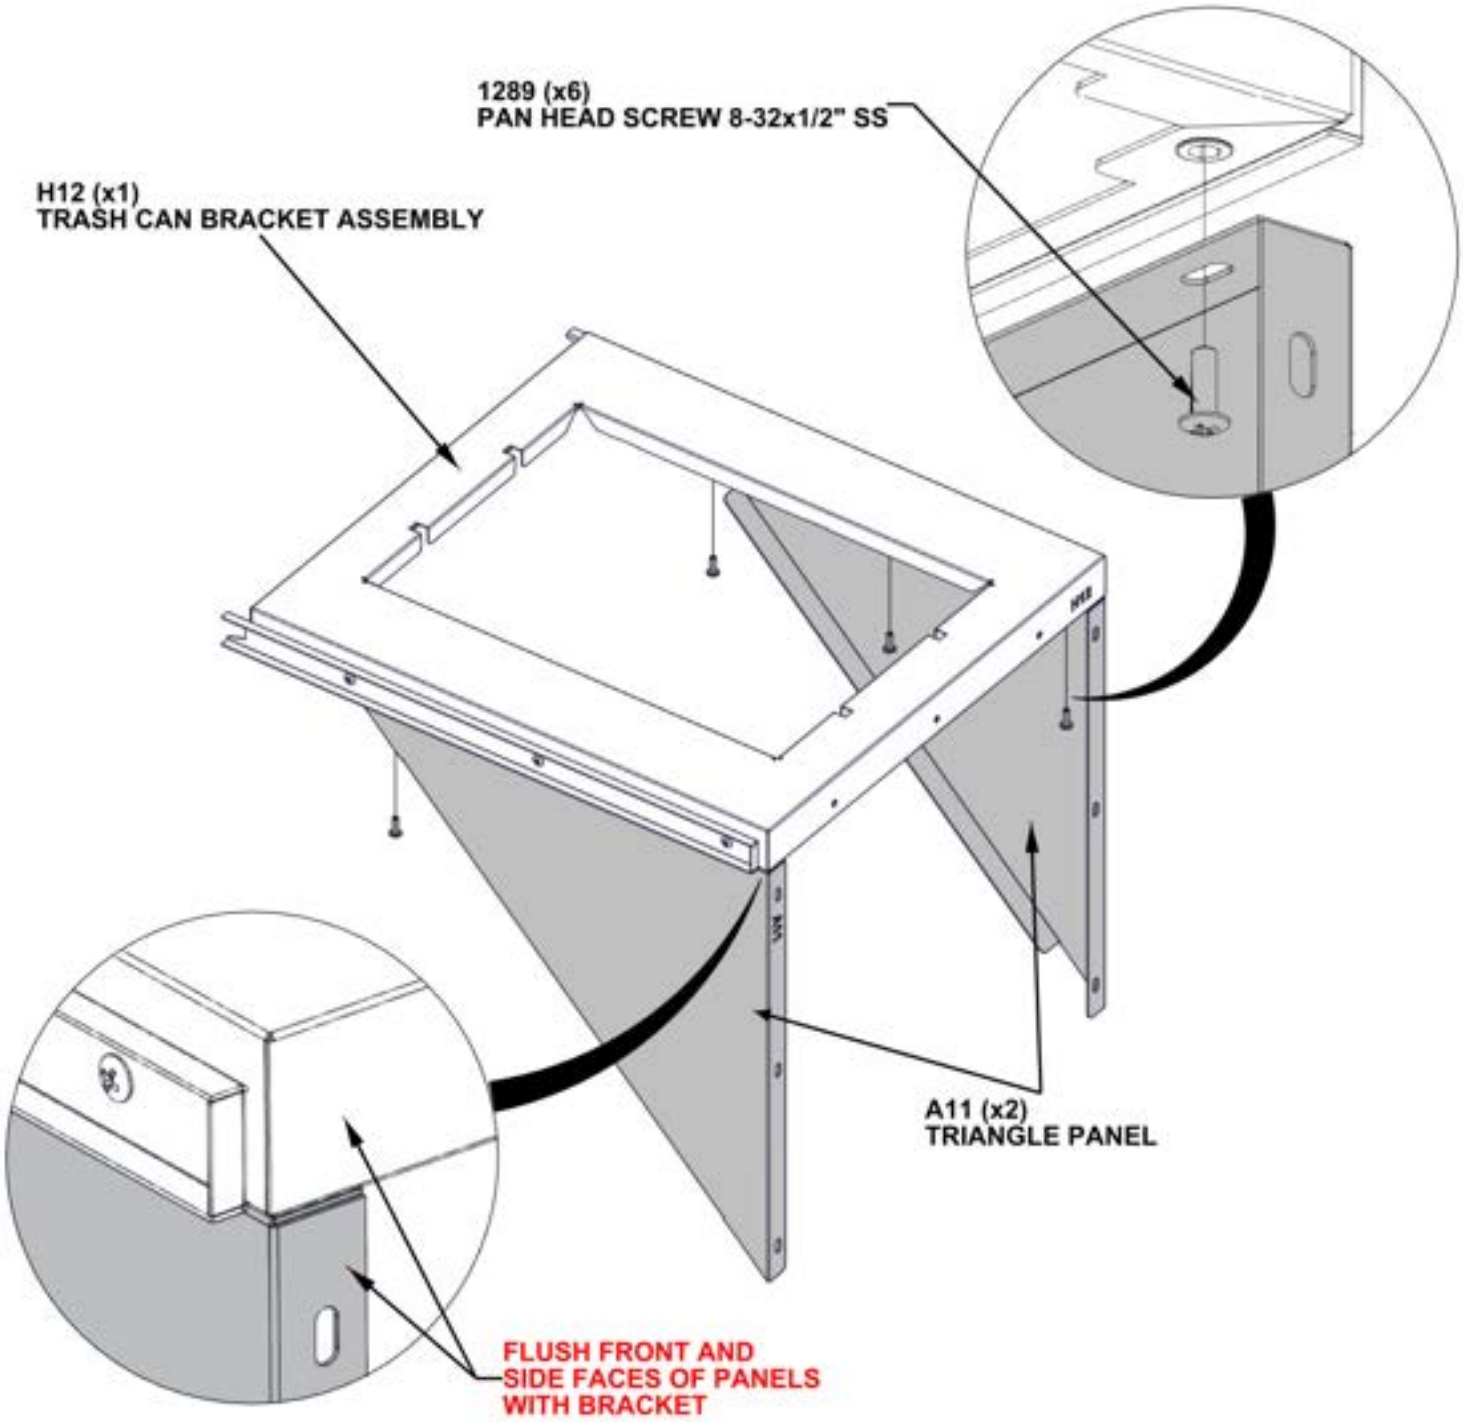


STEP 45B - KITCHEN TRASH CAN ASSEMBLY



D2 DRAWER PANEL ASSEMBLY - A4M07145
(x1) 15/16"x18 1/4"x24 13/16" (24x463x630)

Qty	PartNo	Description
9	H101289	PAN HEAD SCREW 8-32x1/2" SS

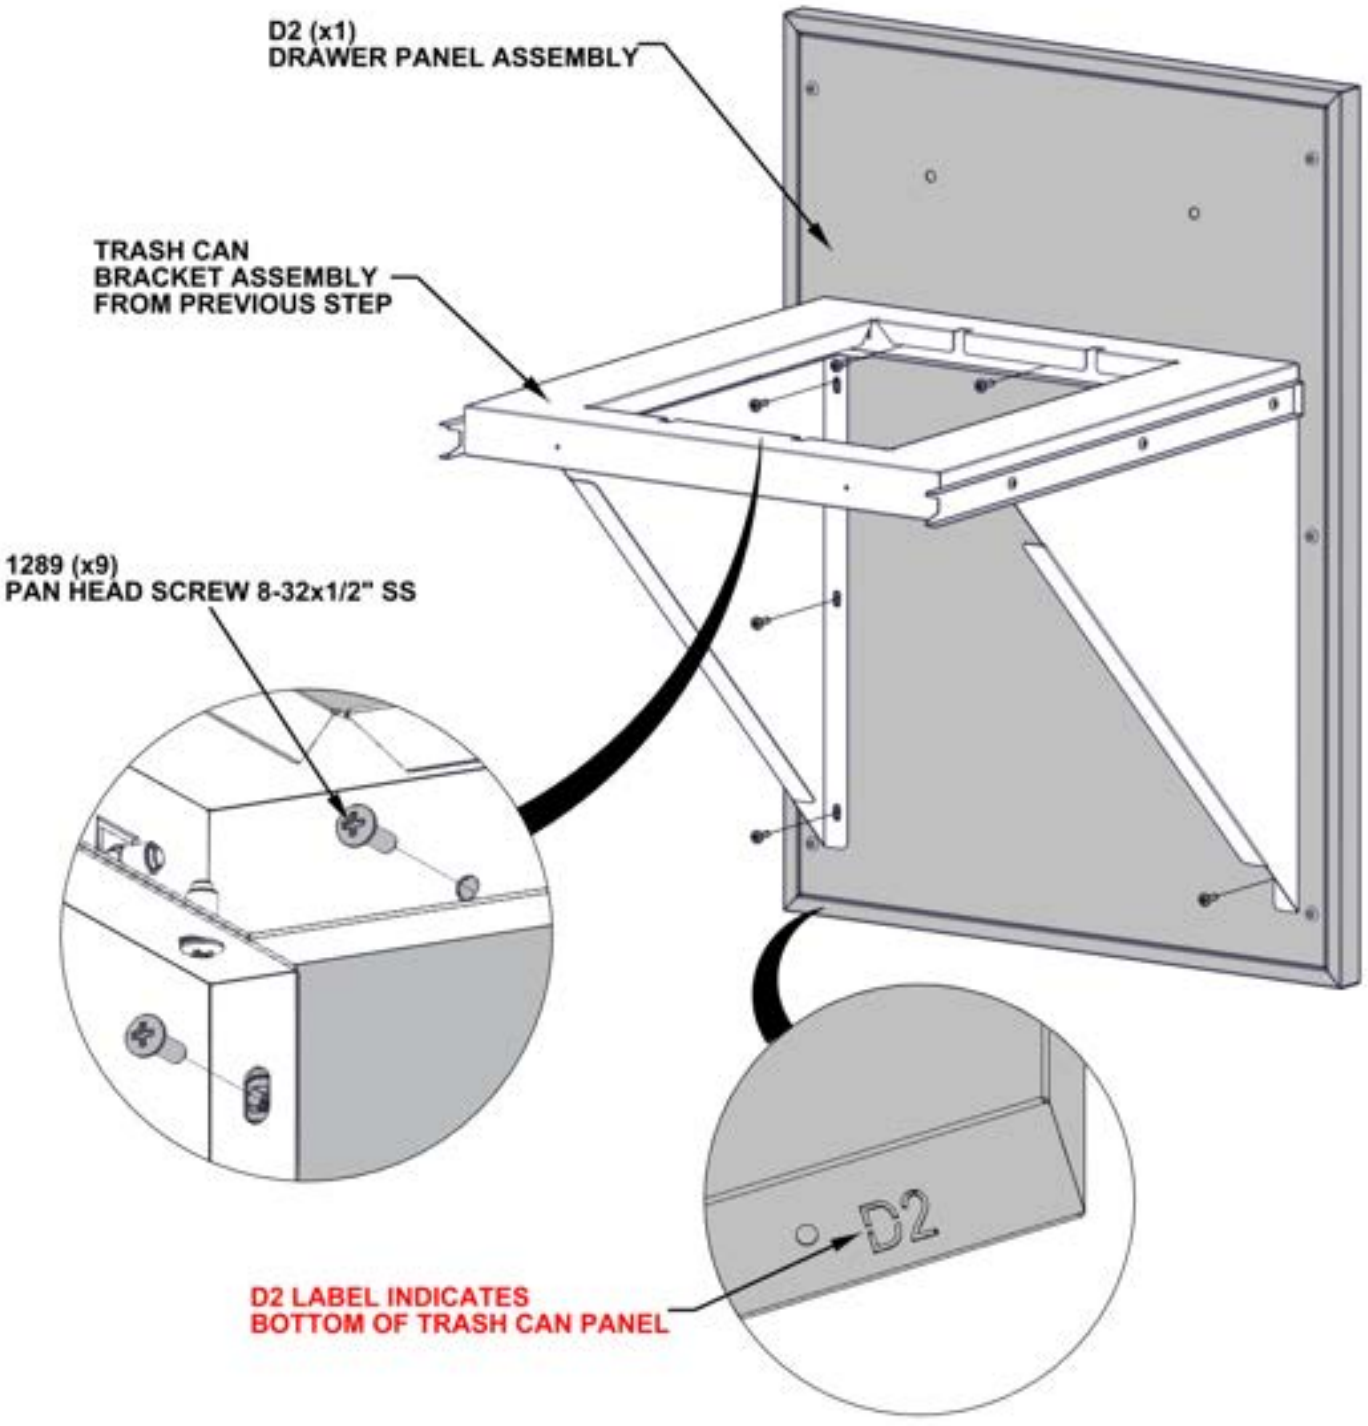


STEP 45C - KITCHEN TRASH CAN ASSEMBLY



Qty	PartNo	Description
2	H101307	SHOULDER BOLT 8-32x30mm SS

H18 ALUMINUM HANDLE - A4M06591
(x1) 3/4"x1 1/2"x8 7/8" (19x38.5x226)

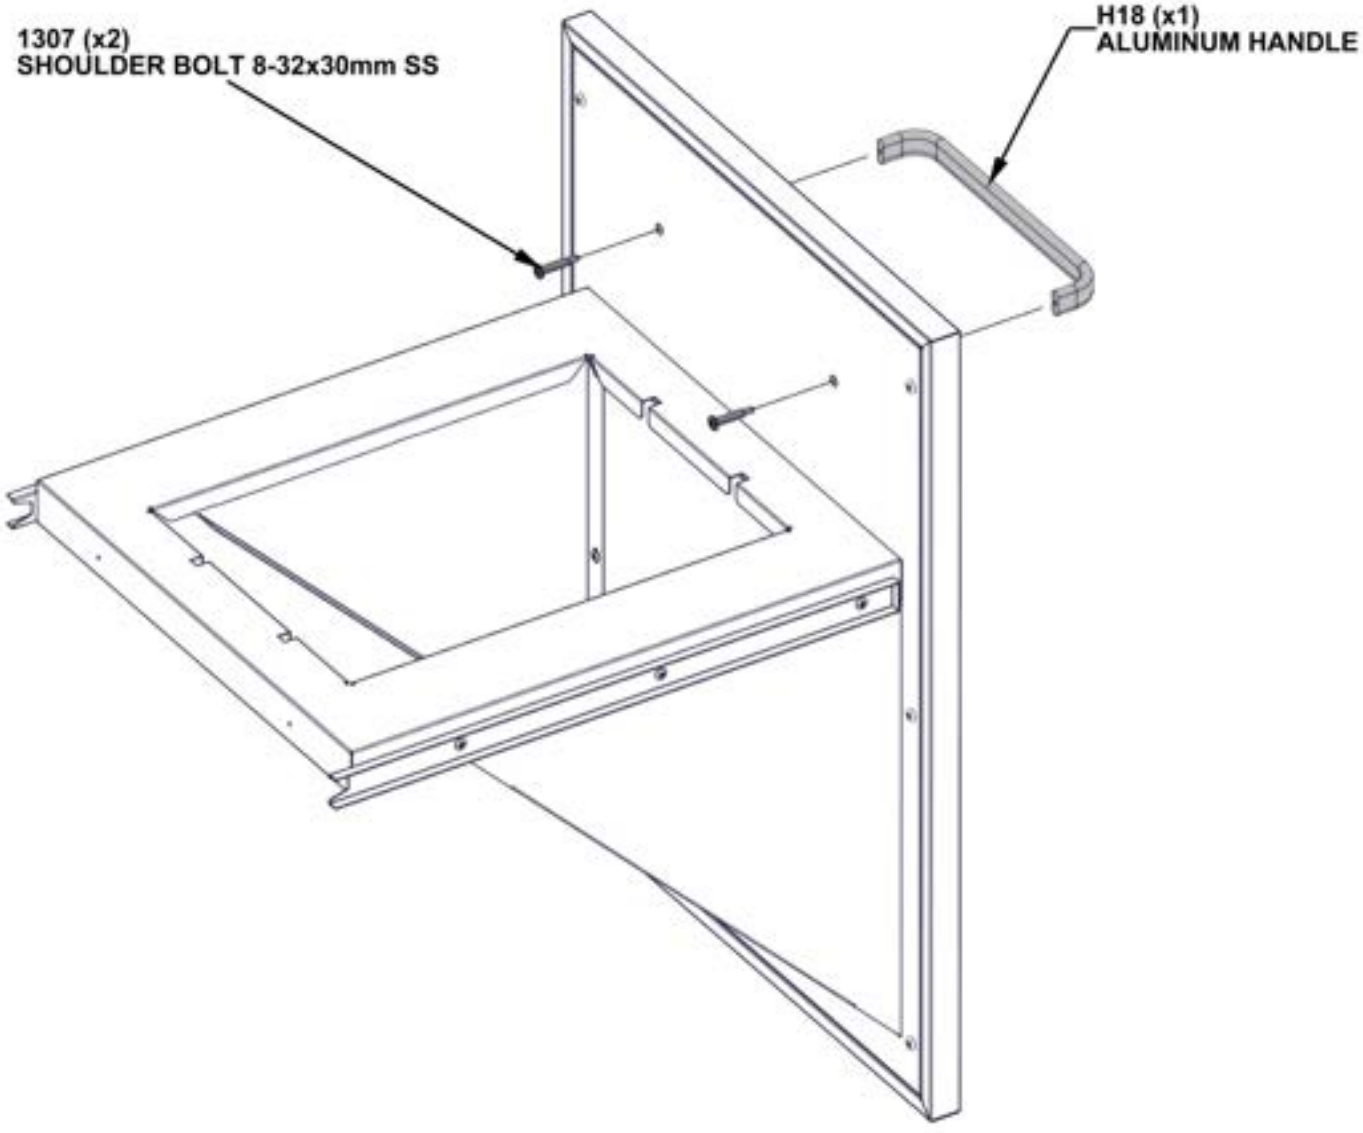


STEP 46 - KITCHEN TRASH CAN ASSEMBLY



TRASH CAN ASSEMBLY FROM STEPS 45A-45C

- ATTACH TRASH CAN ASSEMBLY BY ALIGNING BOTH ENDS OF FACTORY ASSEMBLED DRAWER SLIDES WITH ONE ANOTHER.
- PRESS TOGETHER UNTIL DRAWER SLIDES CONNECT.

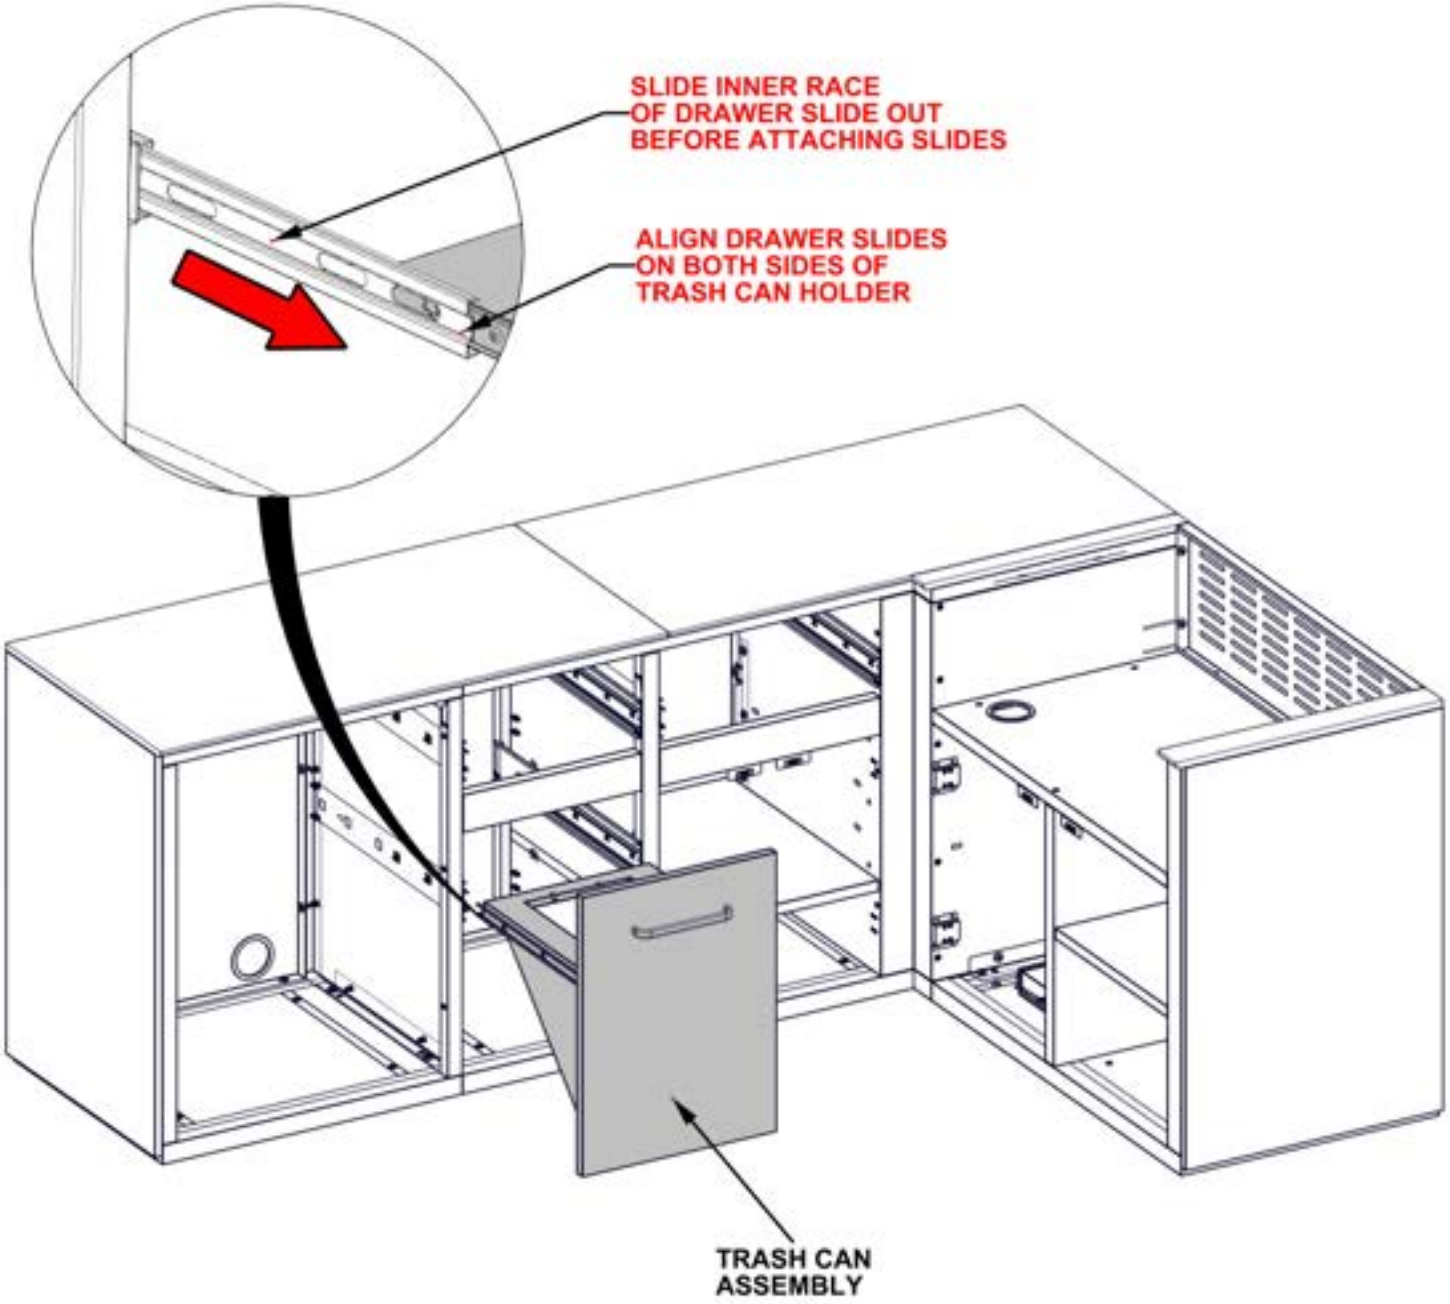

STEP 47A - KITCHEN DRAWER ASSEMBLY

Qty	PartNo	Description
18	H101289	PAN HEAD SCREW 8-32x1/2" SS



D10 DRAWER BODY ASSEMBLY - A4M06458
(x1) 5 1/8"x20 1/8"x22 1/4" (130x511.2x565.4)



D8 DRAWER PANEL ASSEMBLY - A4M07161
(x1) 15/16"x9 5/8"x22 3/16" (24x245x564)




D5 DRAWER BODY ASSEMBLY - A4M06434
(x1) 5 1/8"x16 3/16"x21 3/4" (130x410.7x552)



D1 DRAWER PANEL ASSEMBLY - A4M07144
(x1) 15/16"x9 5/8"x18 1/4" (24x245x463)

- ALIGN SCREWS WITH PILOT HOLES.
- REPEAT 2 TIMES.

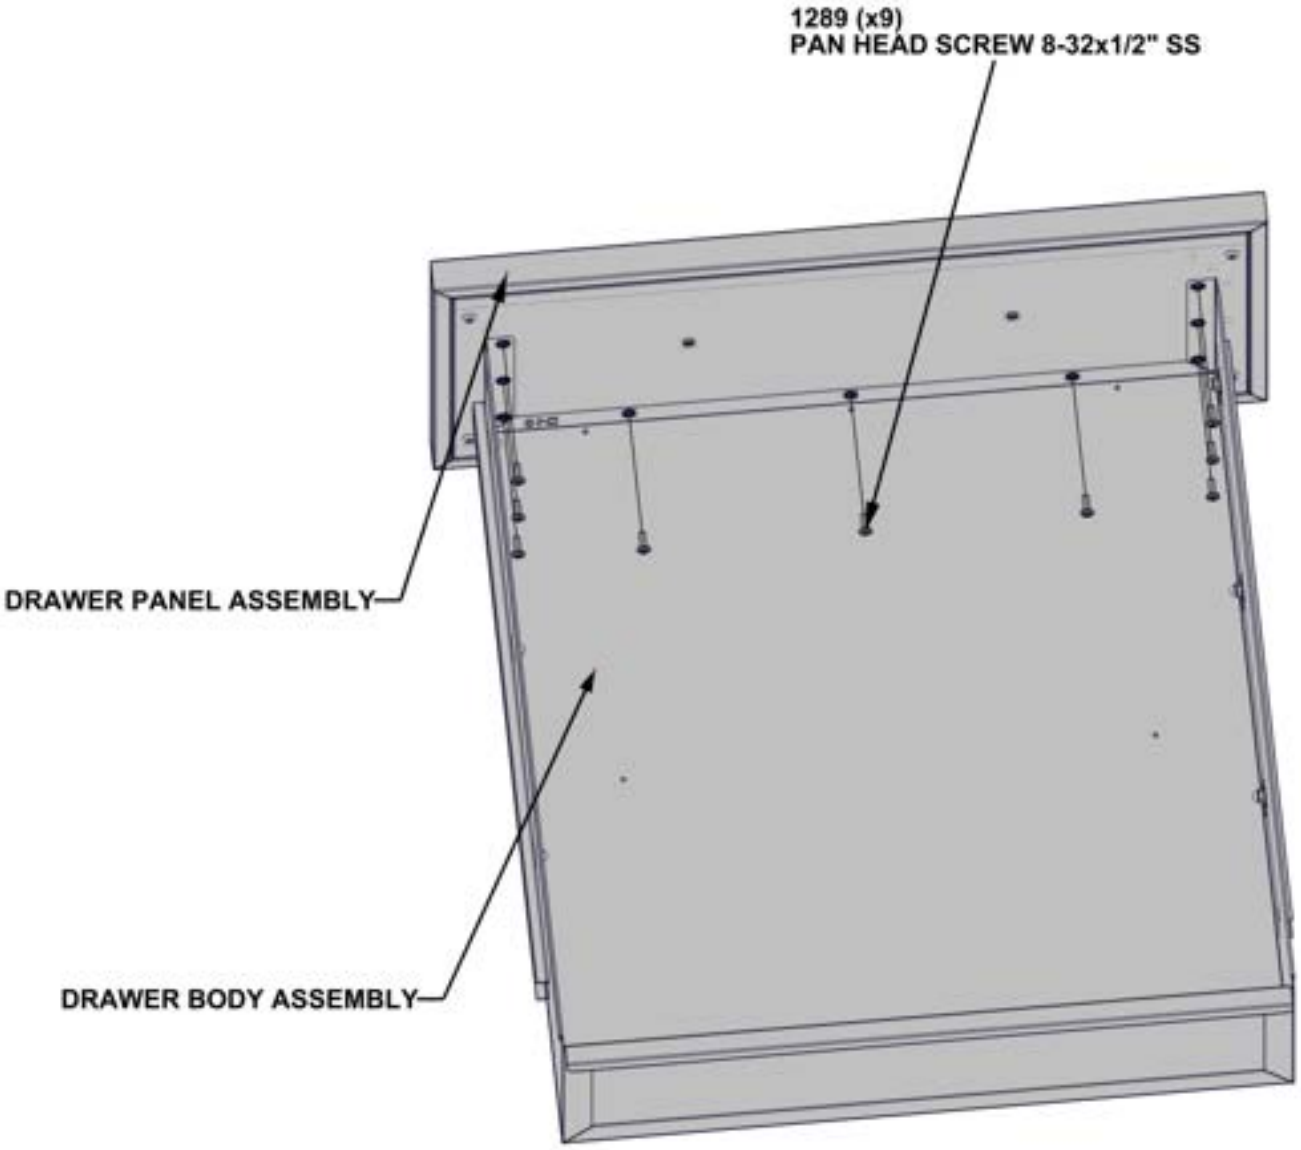

STEP 47B - KITCHEN DRAWER ASSEMBLY




Qty	PartNo	Description
4	H101307	SHOULDER BOLT 8-32x30mm SS

H18 ALUMINUM HANDLE - A4M06591
(x2) 3/4"x1 1/2"x8 7/8" (19x38.5x226)

- INSTALL DRAWER HANDLE TO DRAWER.

- REPEAT 2 TIMES.

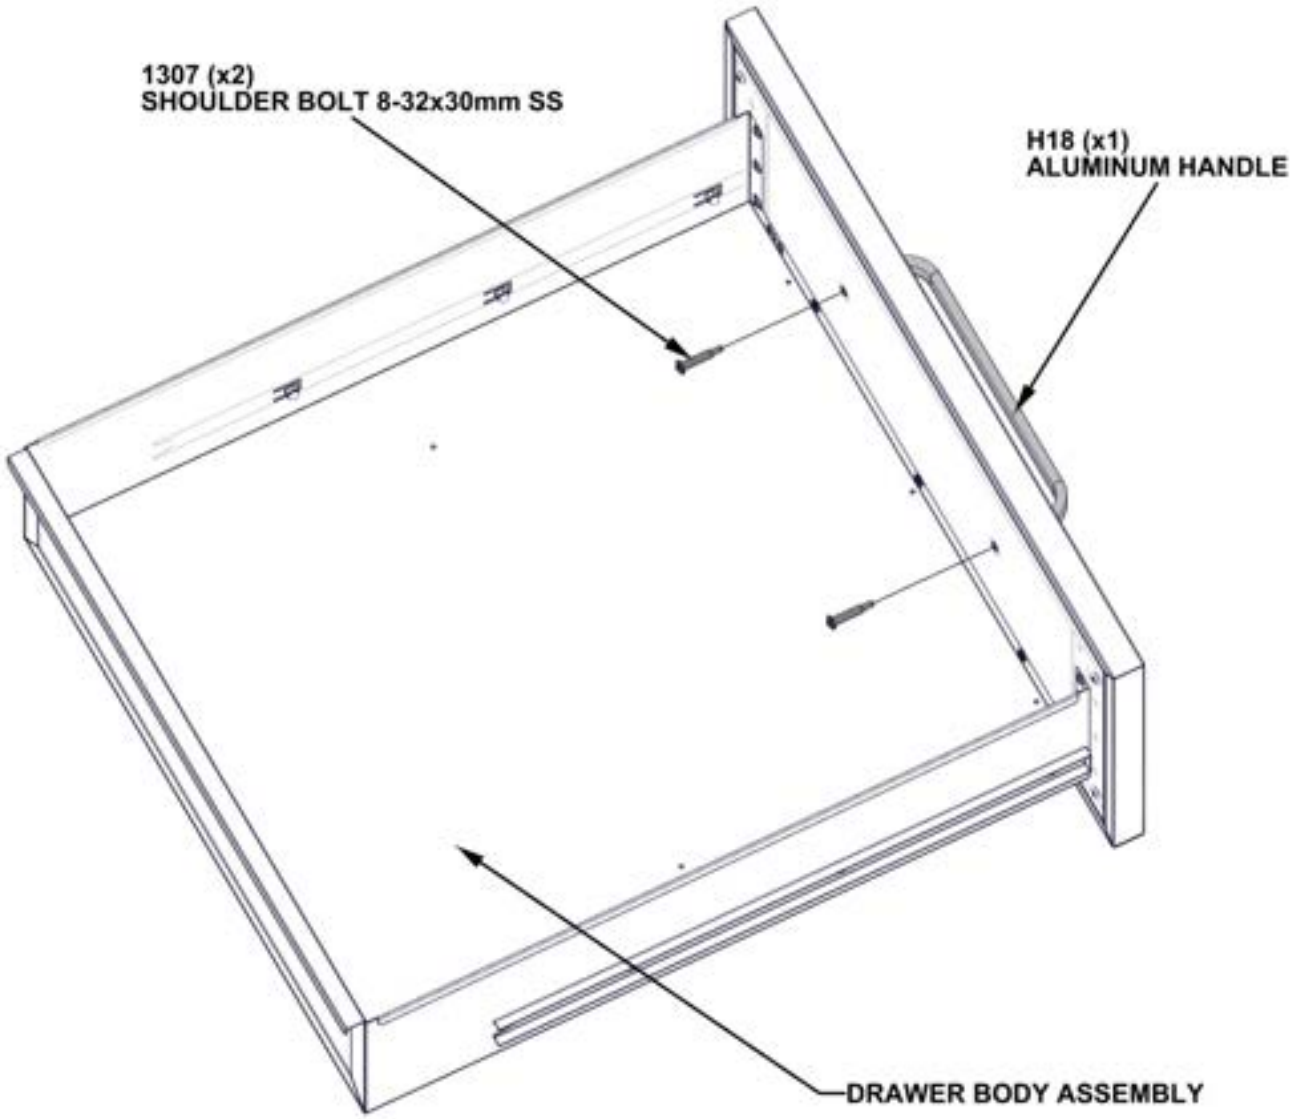


STEP 48 - KITCHEN DRAWER ASSEMBLY



DRAWER ASSEMBLIES FROM STEPS 47A-47B

- ATTACH DRAWER ASSEMBLIES BY ALIGNING BOTH ENDS OF FACTORY ASSEMBLED DRAWER SLIDES WITH ONE ANOTHER.
- PRESS TOGETHER UNTIL DRAWER SLIDES CONNECT.

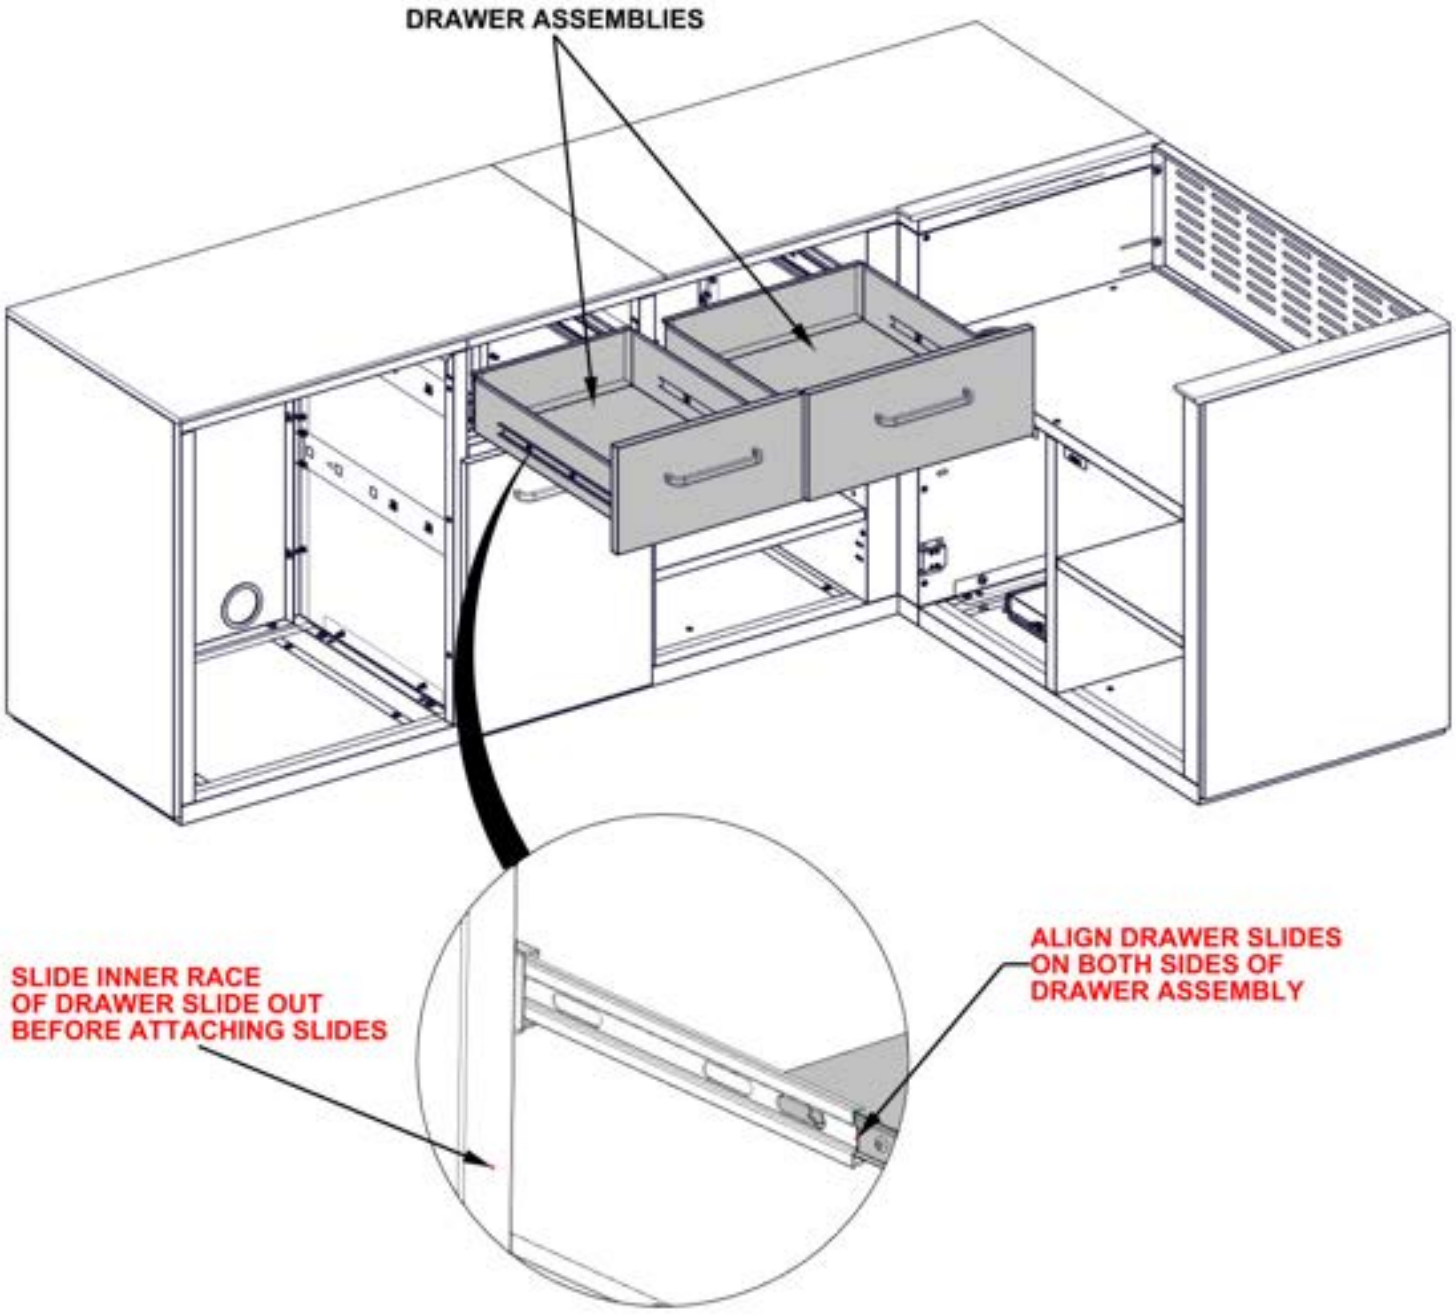

STEP 49A - DOOR PANEL ASSEMBLY



D12 DOOR PANEL ASSEMBLY R - A4M07614
(x1) 15/16"x19 3/16"x24 13/16" (24x488x630)

Qty	PartNo	Description
16	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW



D11 DOOR PANEL ASSEMBLY L - A4M07613
(x1) 15/16"x19 3/16"x24 13/16" (24x488x630)



3025 FULL OVERLAY HINGE - A4M03025
(x8)




D7 RIGHT DOOR ASSEMBLY - A4M07164
(x1) 15/16"x11"x24 13/16" (24x279.5x630)



D6 LEFT DOOR ASSEMBLY - A4M07162
(x1) 15/16"x11"x24 13/16" (24x279.5x630)

- INSTALL CABINET HINGES TO ALL DOORS.
- DO NOT OVERTIGHTEN HARDWARE.
- REPEAT 4 TIMES.

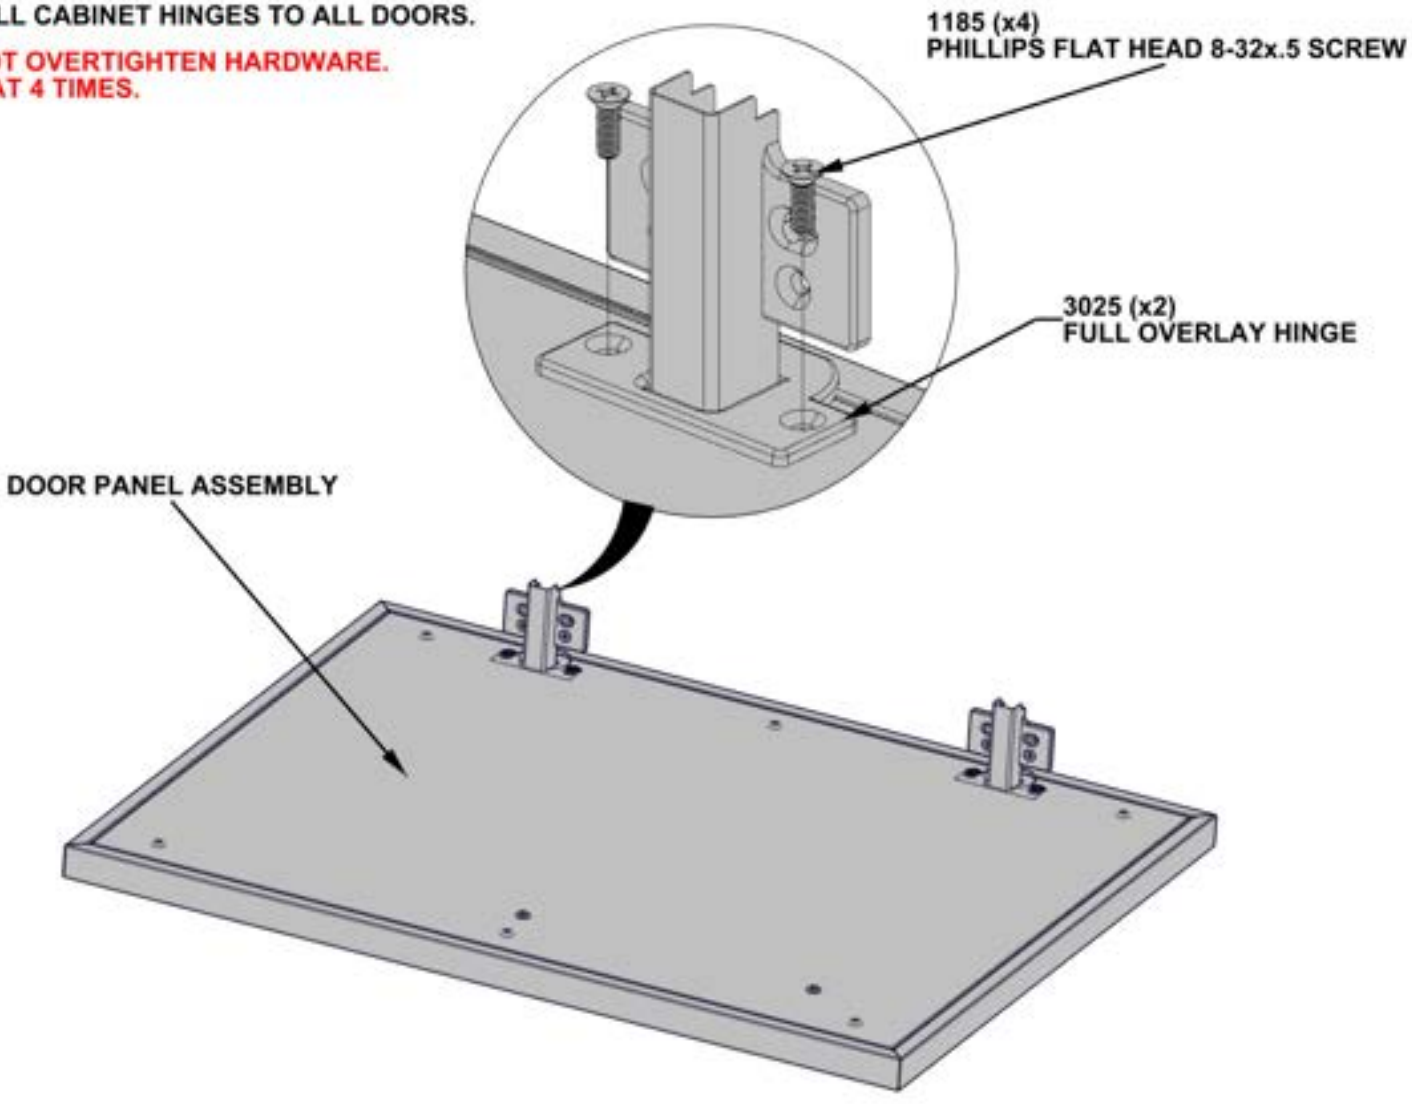


STEP 49B - DOOR PANEL ASSEMBLY



H18 ALUMINUM HANDLE - A4M06591
(x4) 3/4"x1 1/2"x8 7/8" (19x38.5x226)

Qty	PartNo	Description
8	H101307	SHOULDER BOLT 8-32x30mm SS

- INSTALL CABINET HANDLES TO ALL DOORS.
- REPEAT THIS STEP 4 TIMES.

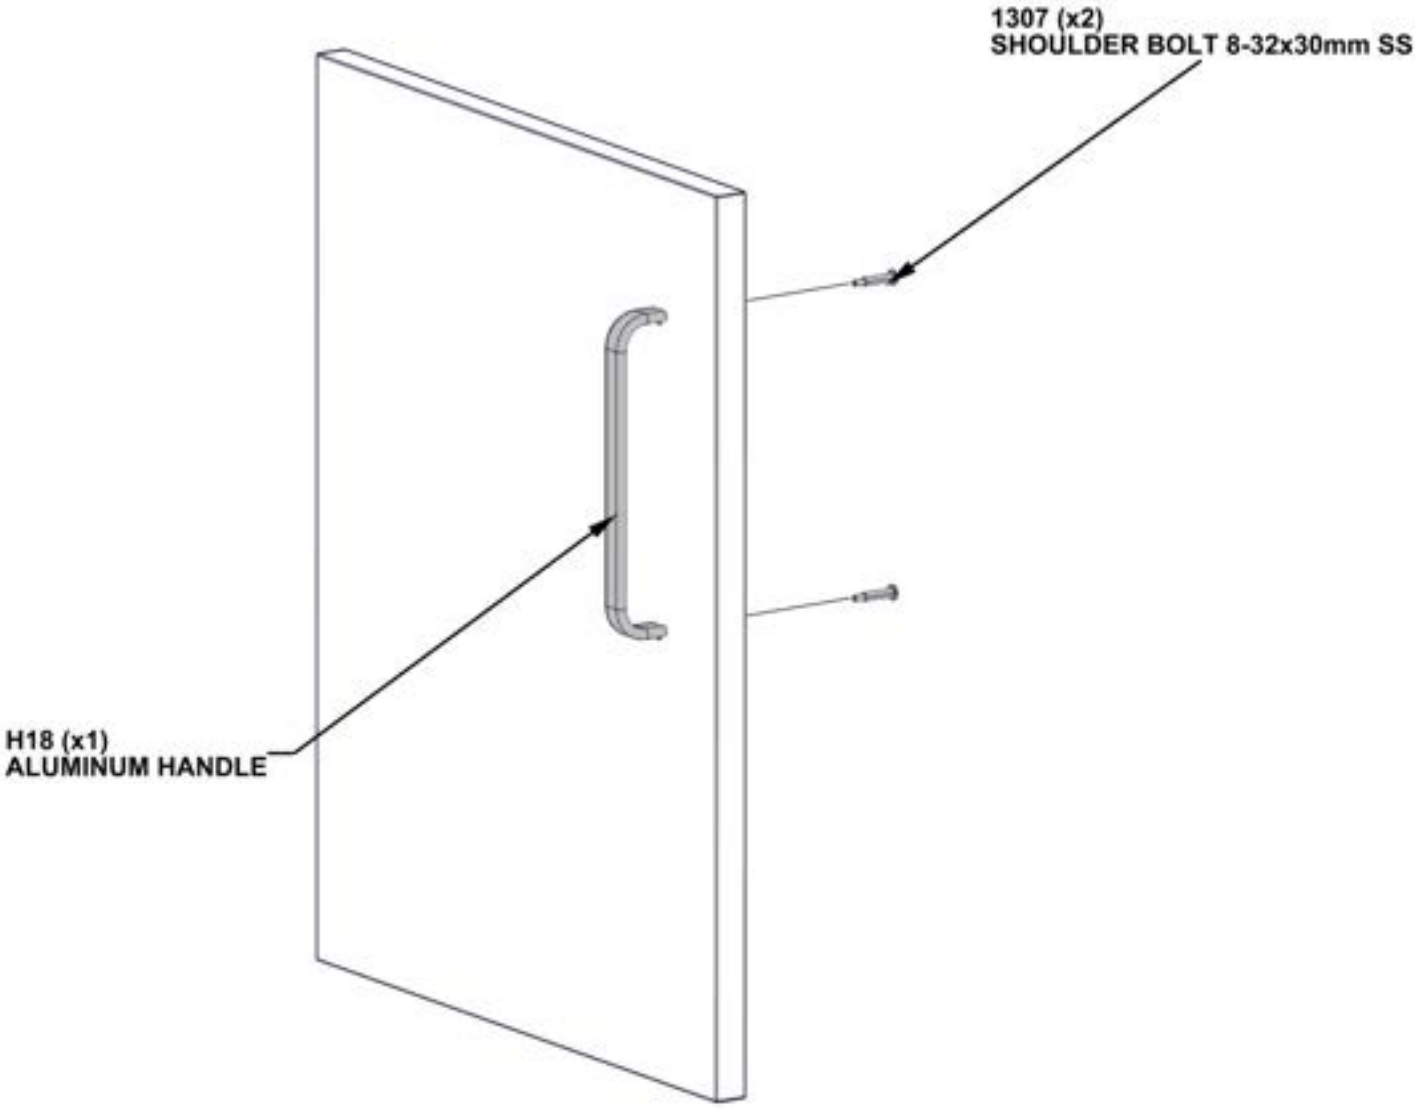

STEP 50 - DOOR PANEL ASSEMBLY



D6 DOOR ASSEMBLY FROM STEPS 49A-49B

Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.


STEP 51 - DOOR PANEL ASSEMBLY



Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

D7 DOOR ASSEMBLY FROM STEPS 49A-49B

- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.

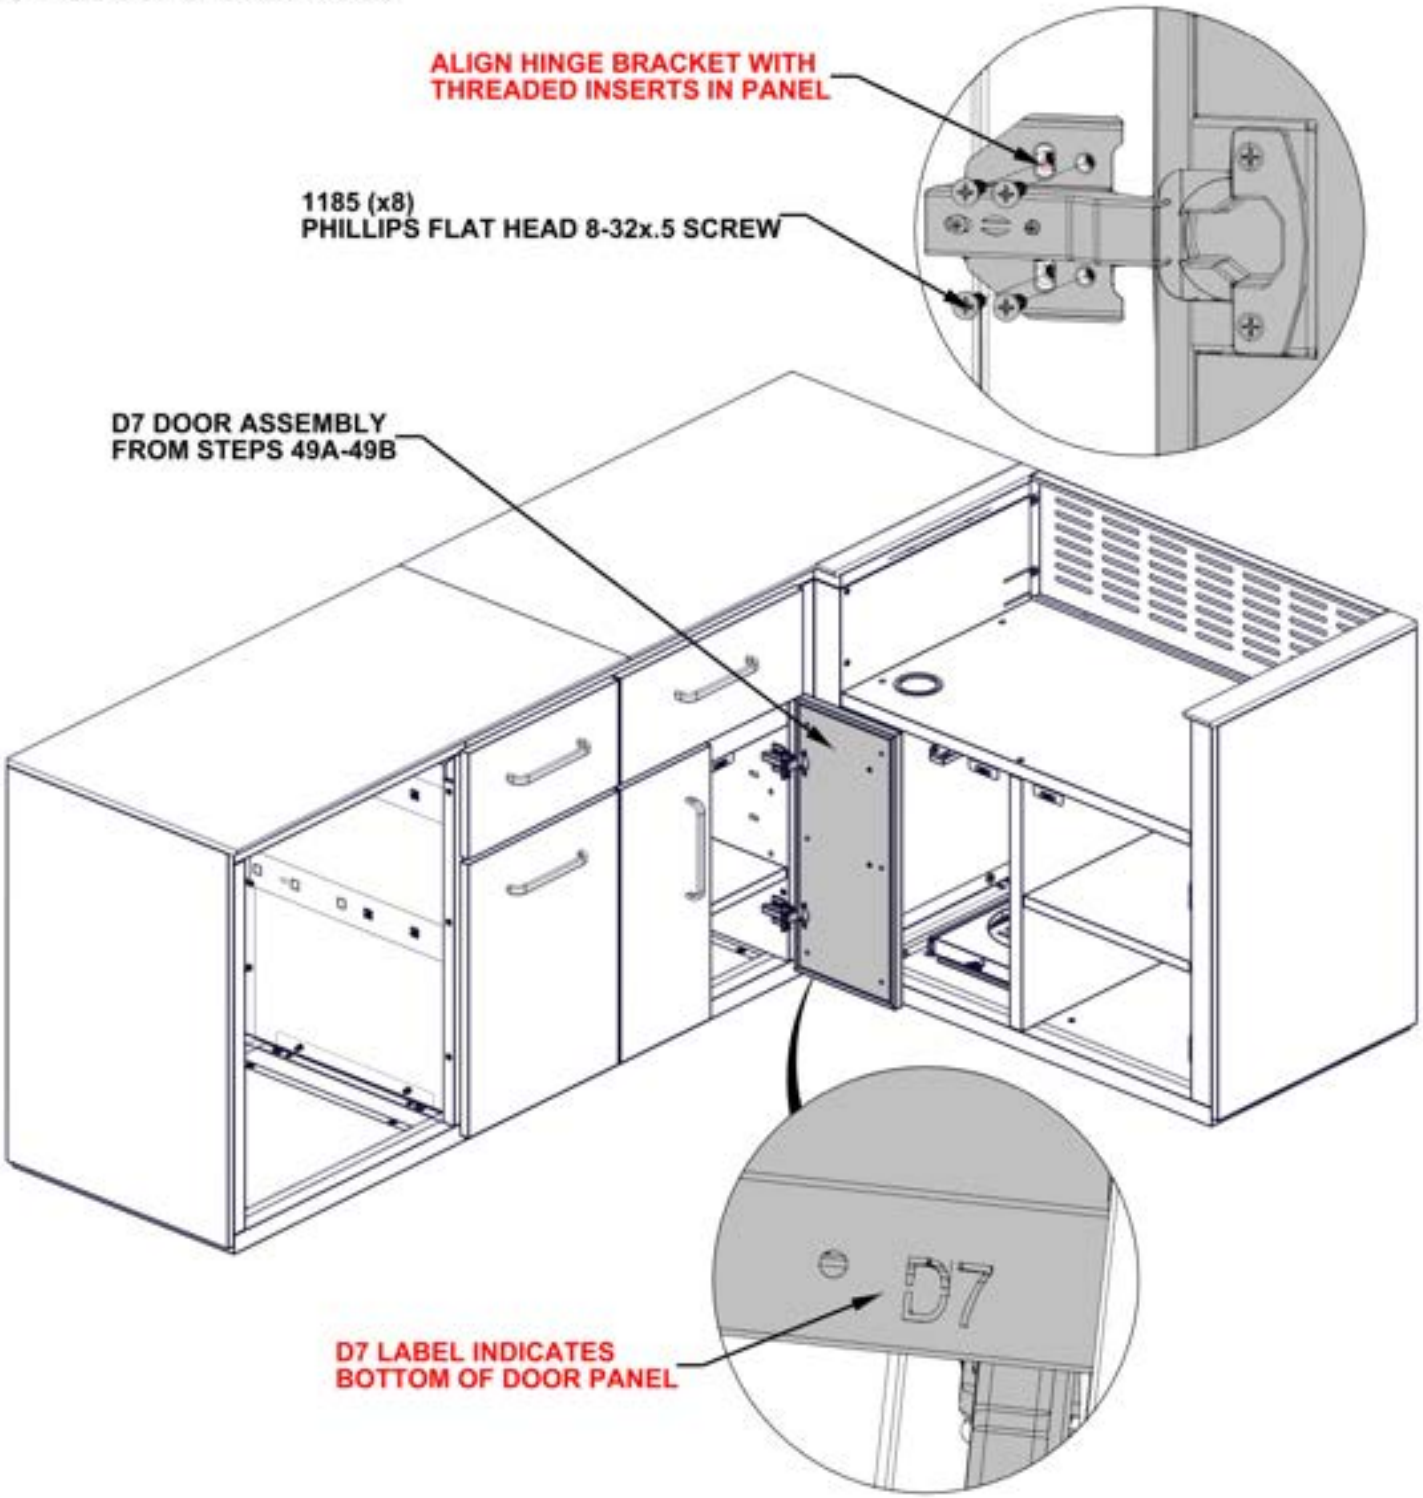


STEP 52 - DOOR PANEL ASSEMBLY



D11 DOOR ASSEMBLY FROM STEPS 49A-49B

Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.

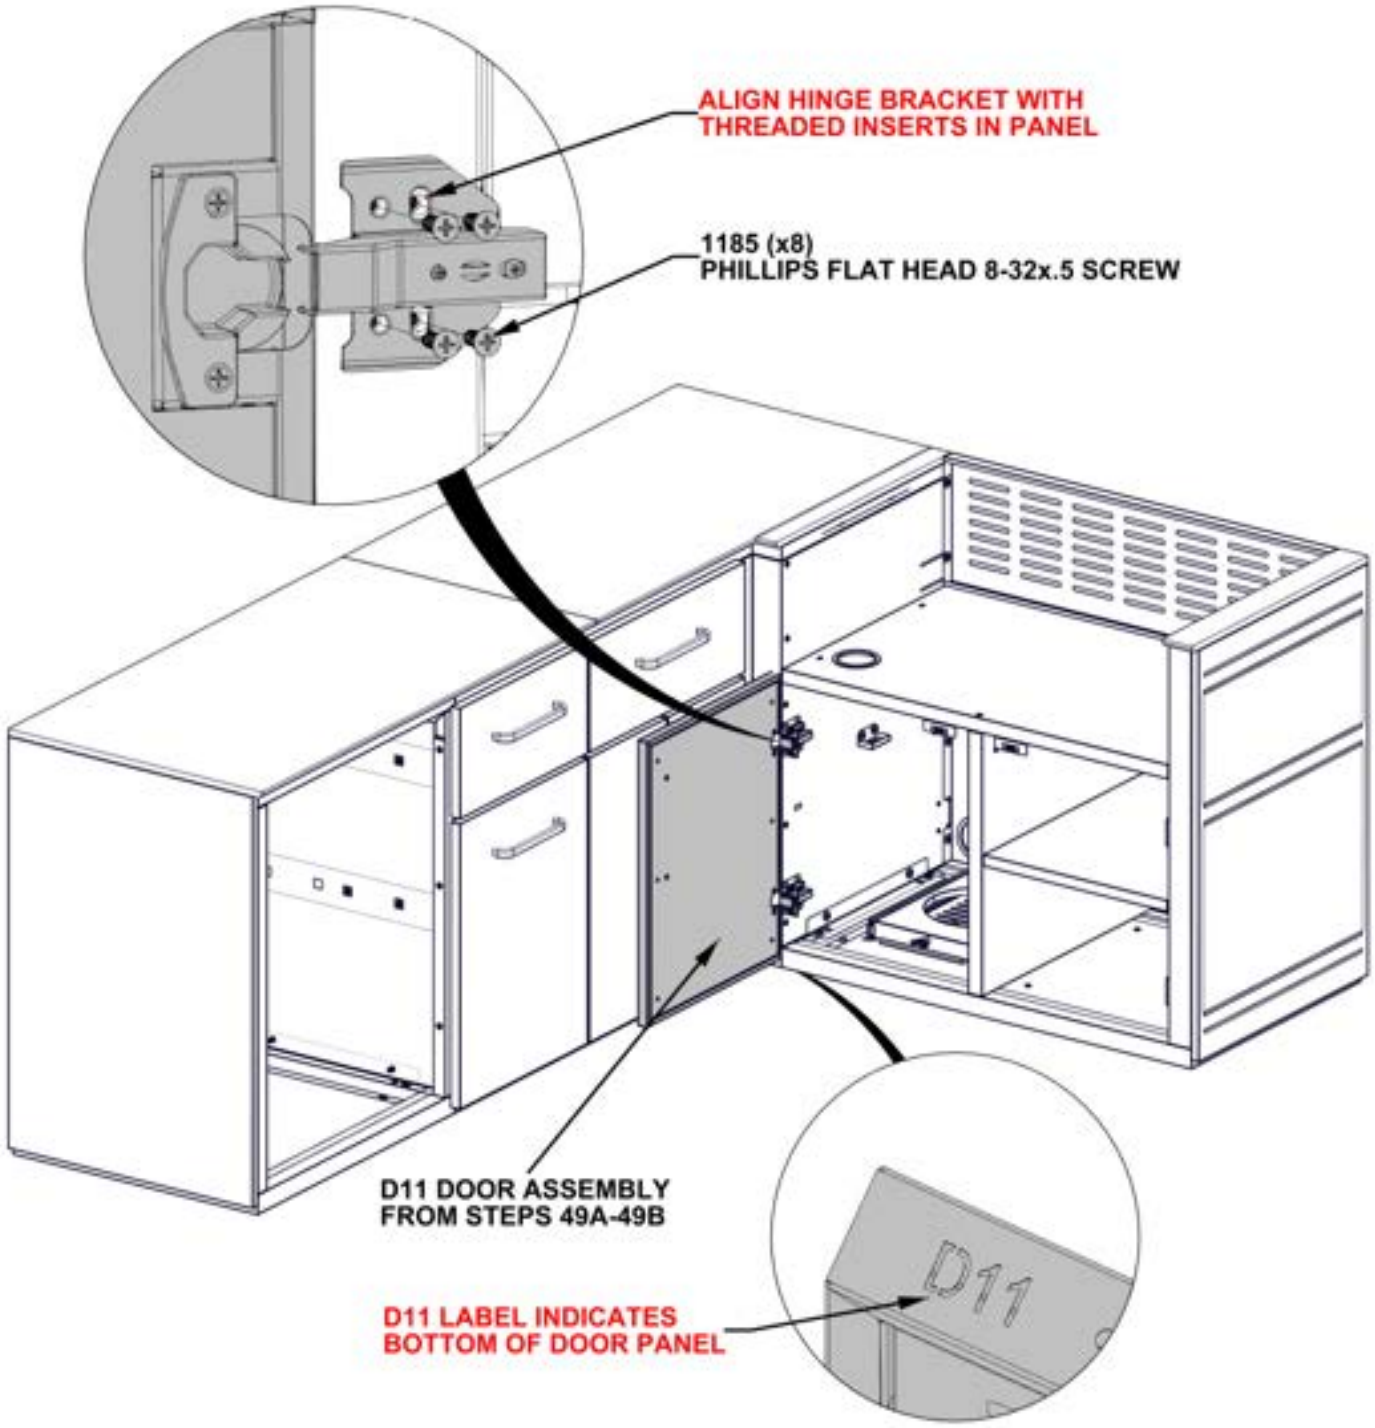


STEP 53 - DOOR PANEL ASSEMBLY



D12 DOOR ASSEMBLY FROM STEPS 49A-49B


Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.

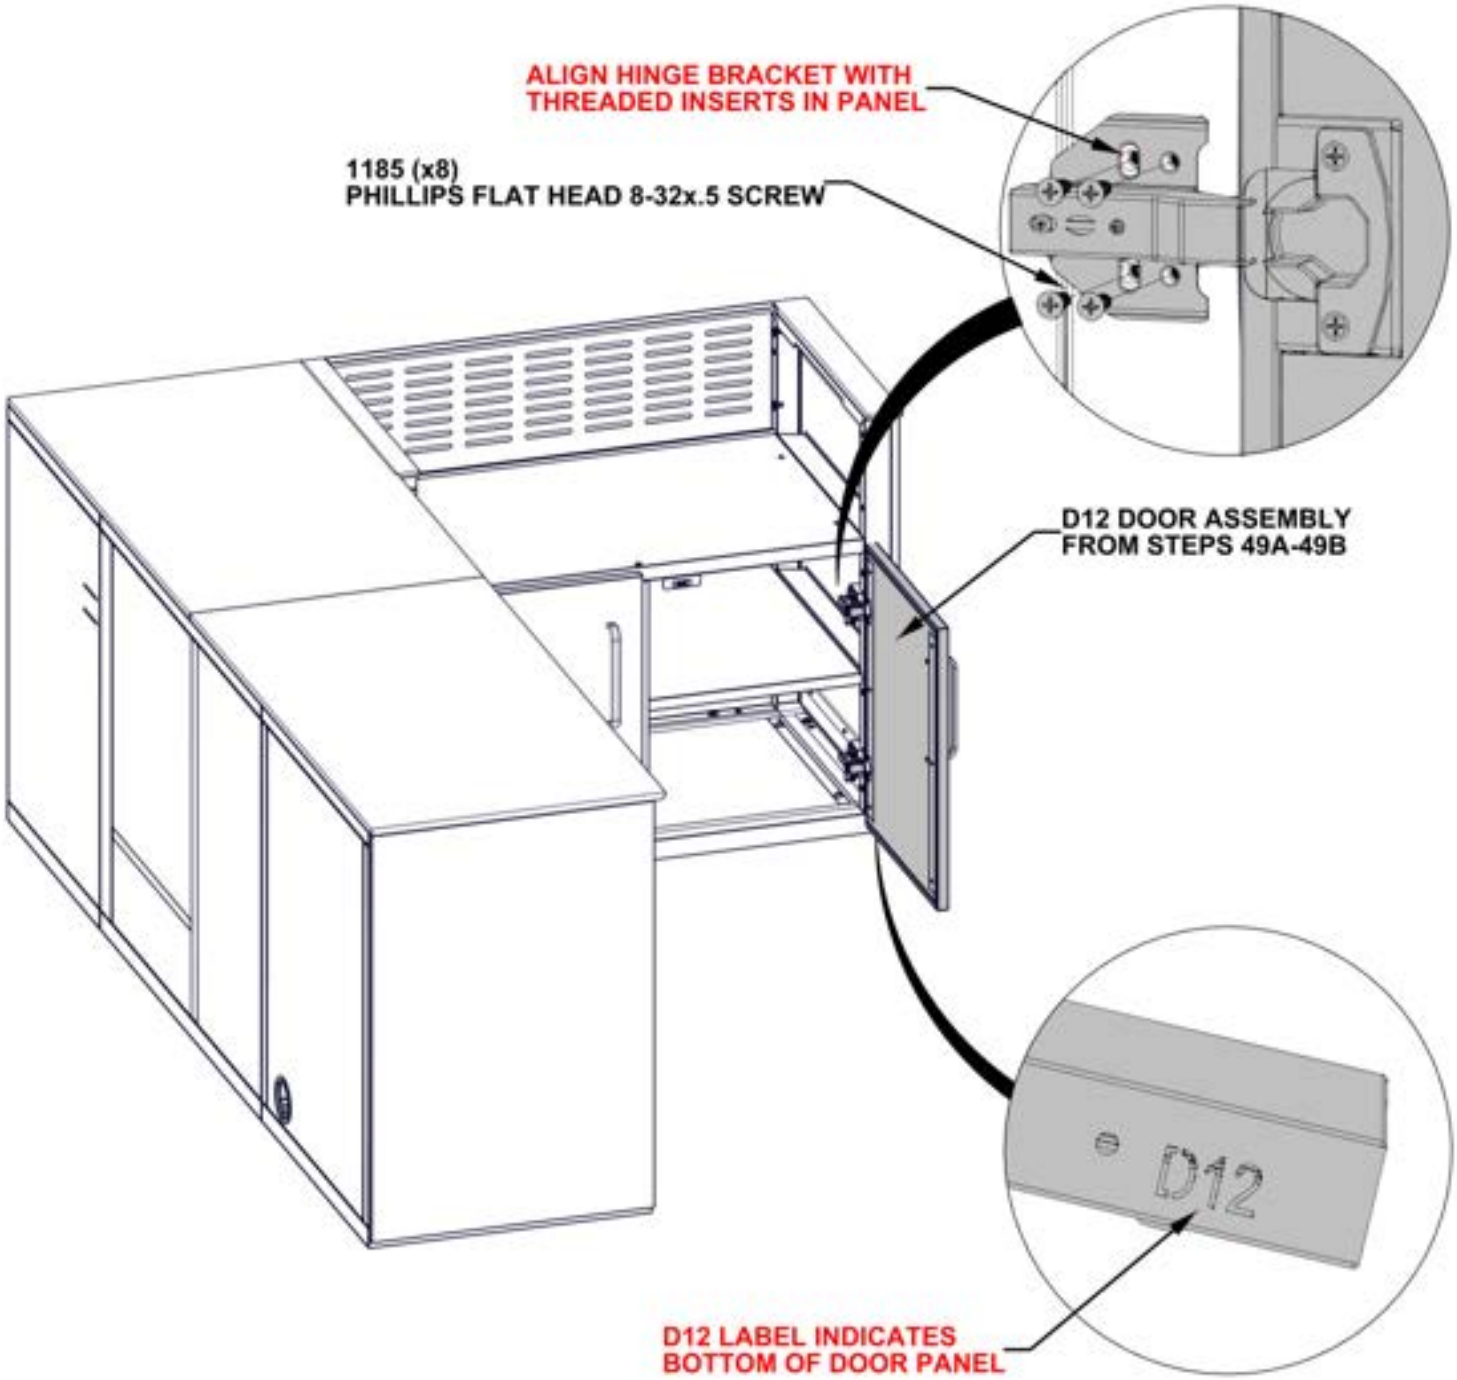

CABINET DOOR ADJUSTMENT (AS NEEDED)

- ADJUST HINGES (AS NEEDED) SO THAT THE GAP AROUND ALL DOORS IS THE SAME AND THERE IS NO INTERFERENCE BETWEEN DOORS AND CABINETS.
- ADJUST MAGNET CATCH BRACKETS AS NEEDED.

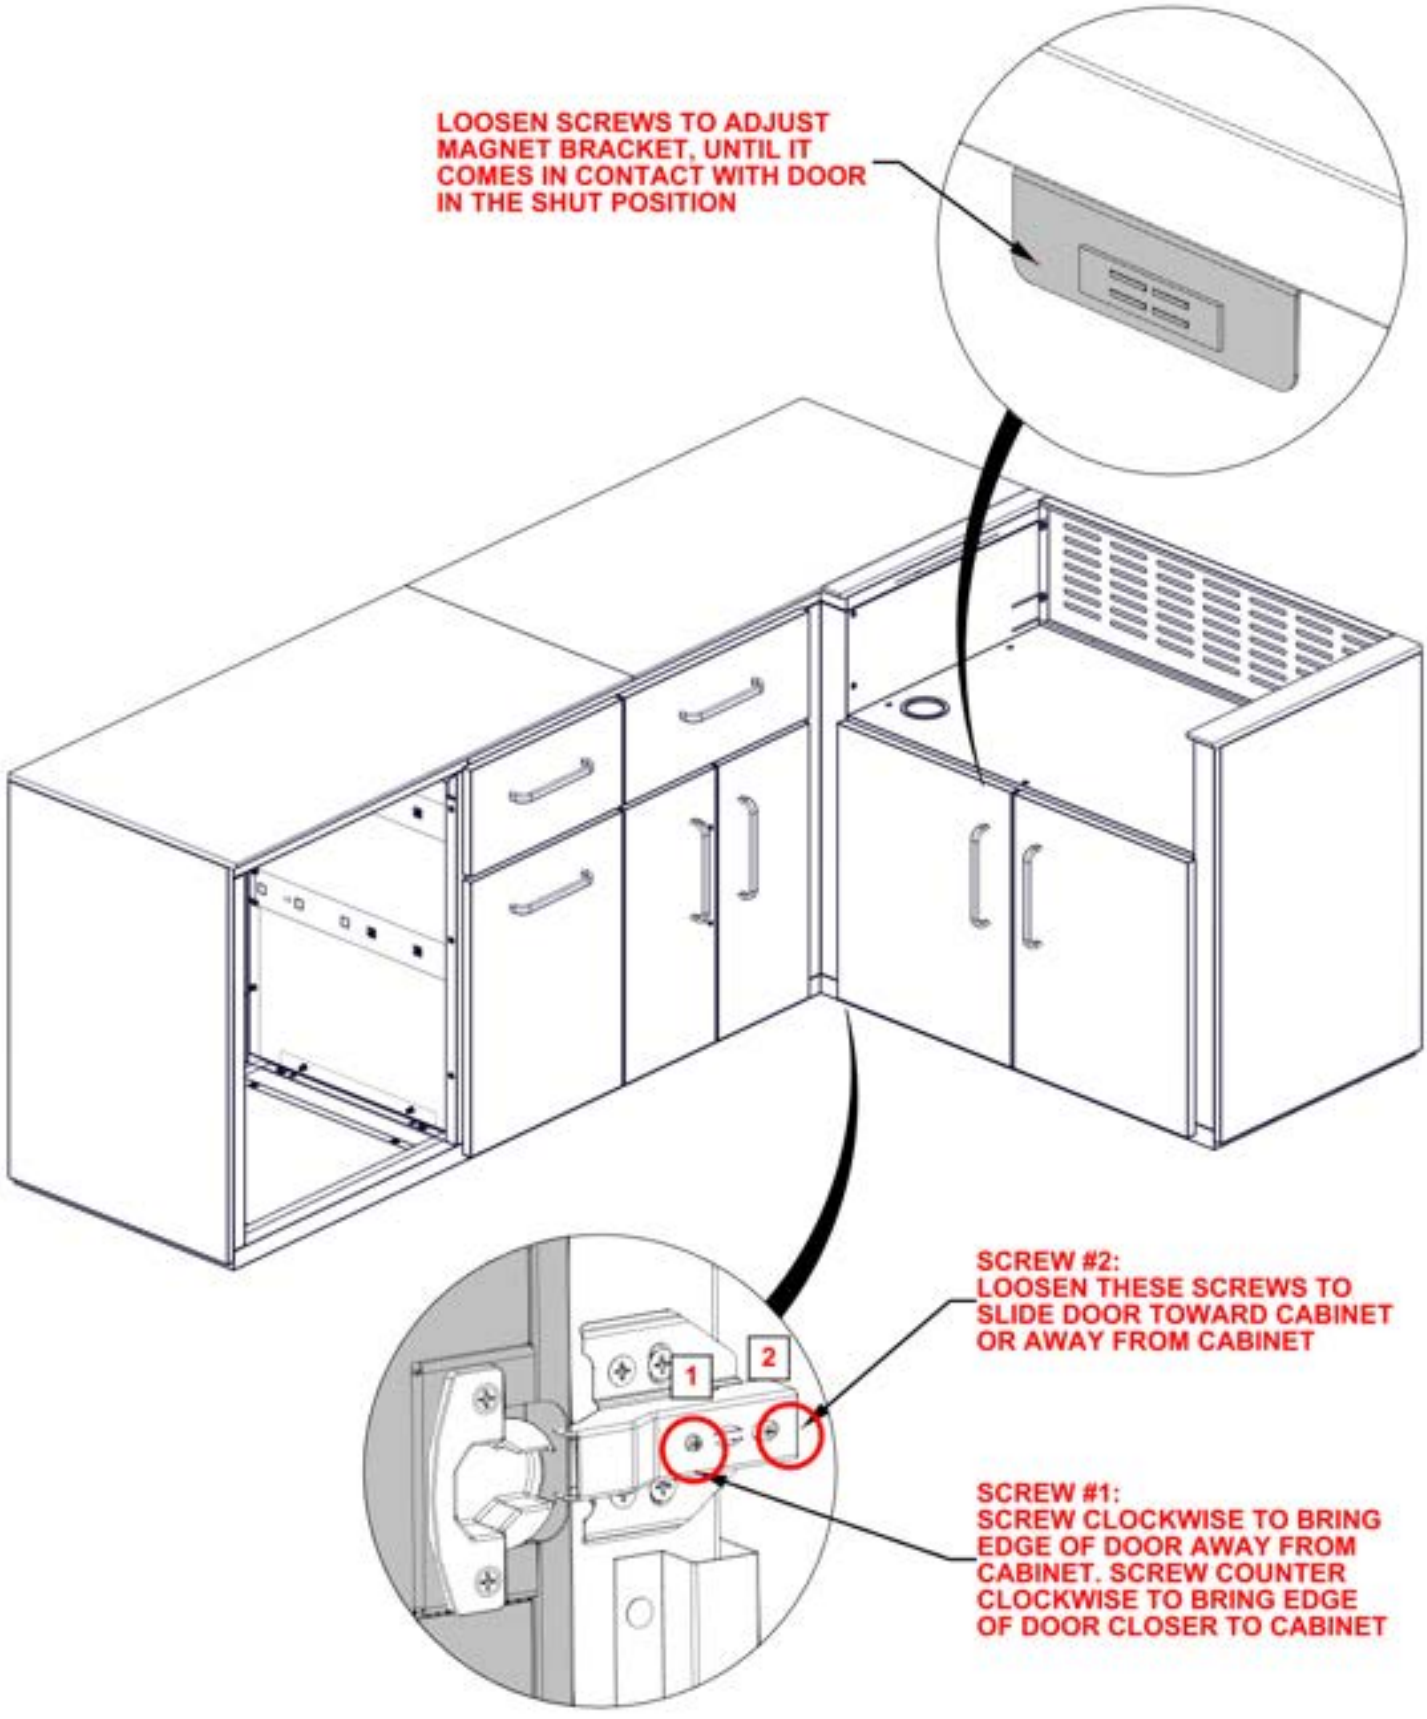


OUTDOOR KITCHEN FRIDGE INSTALLATION



9240162 OUTDOOR KITCHEN FRIDGE - RIGHT OPEN (x1)


- FOR INSTALLATION OF OUTDOOR KITCHEN FRIDGE, REFER TO PAGES IN THIS INSTRUCTION MANUAL.
- FOR DETAILED INFORMATION OF OUTDOOR KITCHEN FRIDGE, REFER TO ASSEMBLY INSTRUCTIONS THAT COME PACKAGED WITH THE OUTDOOR KITCHEN FRIDGE.
- FOLLOW DIRECTIONS FOR PROPER CARE AND USE.

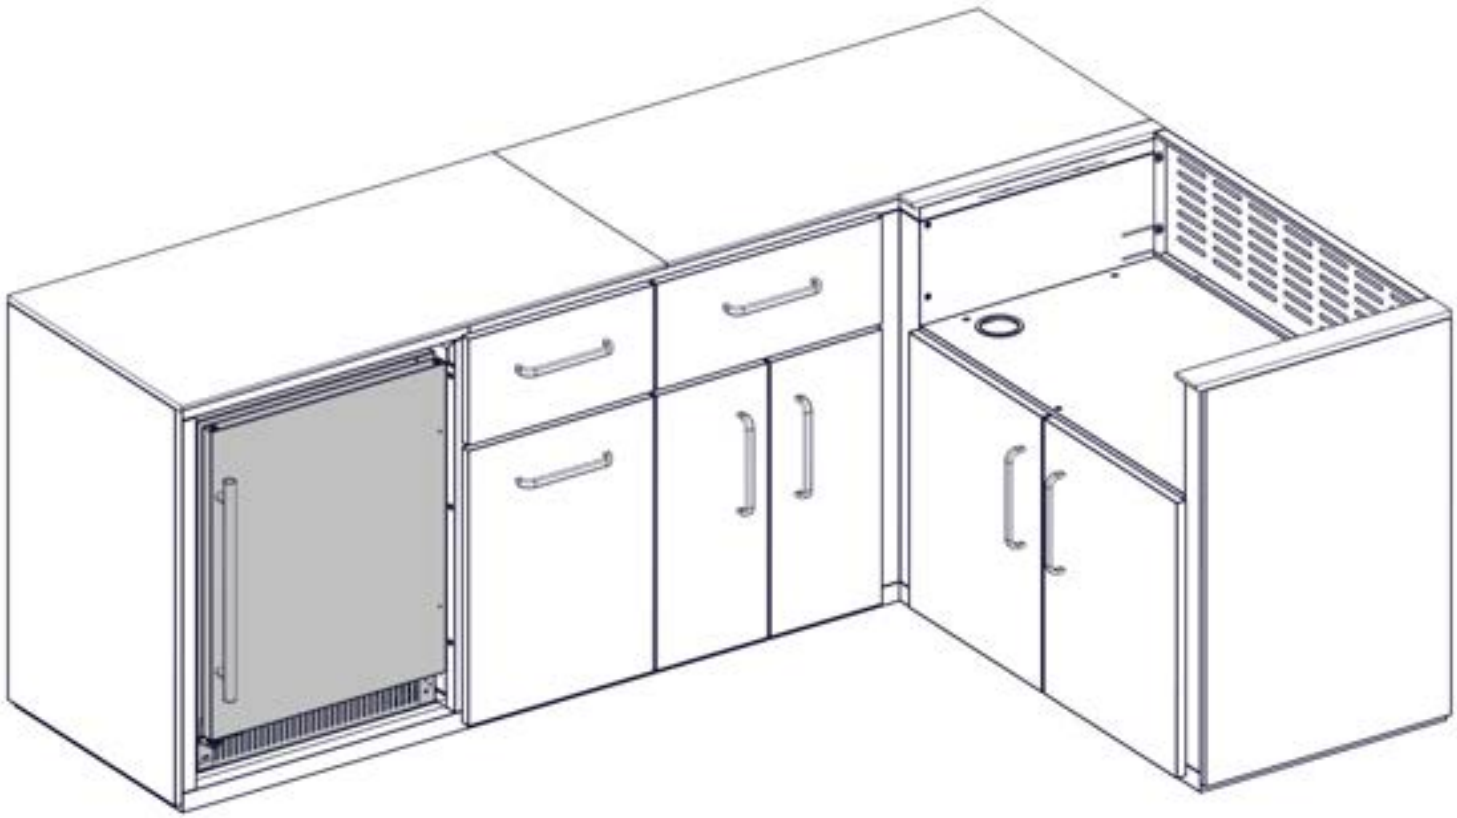

OUTDOOR KITCHEN FRIDGE


- CAREFULLY SLIDE FRIDGE INTO CABINET OPENING MAKING SURE THAT THE ELECTRICAL CORD IS ROUTED THROUGH THE HOLES IN THE SIDE PANELS OF THE CABINET.

- IF FRIDGE IS NOT IN UPRIGHT POSITION, PLEASE LET SIT FOR 24 HRS BEFORE PLUGGING INTO RECEPTACLE.
- FRIDGE CANNOT BE CONNECTED TO ELECTRICAL ENCLOSURE ATTACHED TO OUTDOOR STRUCTURE.

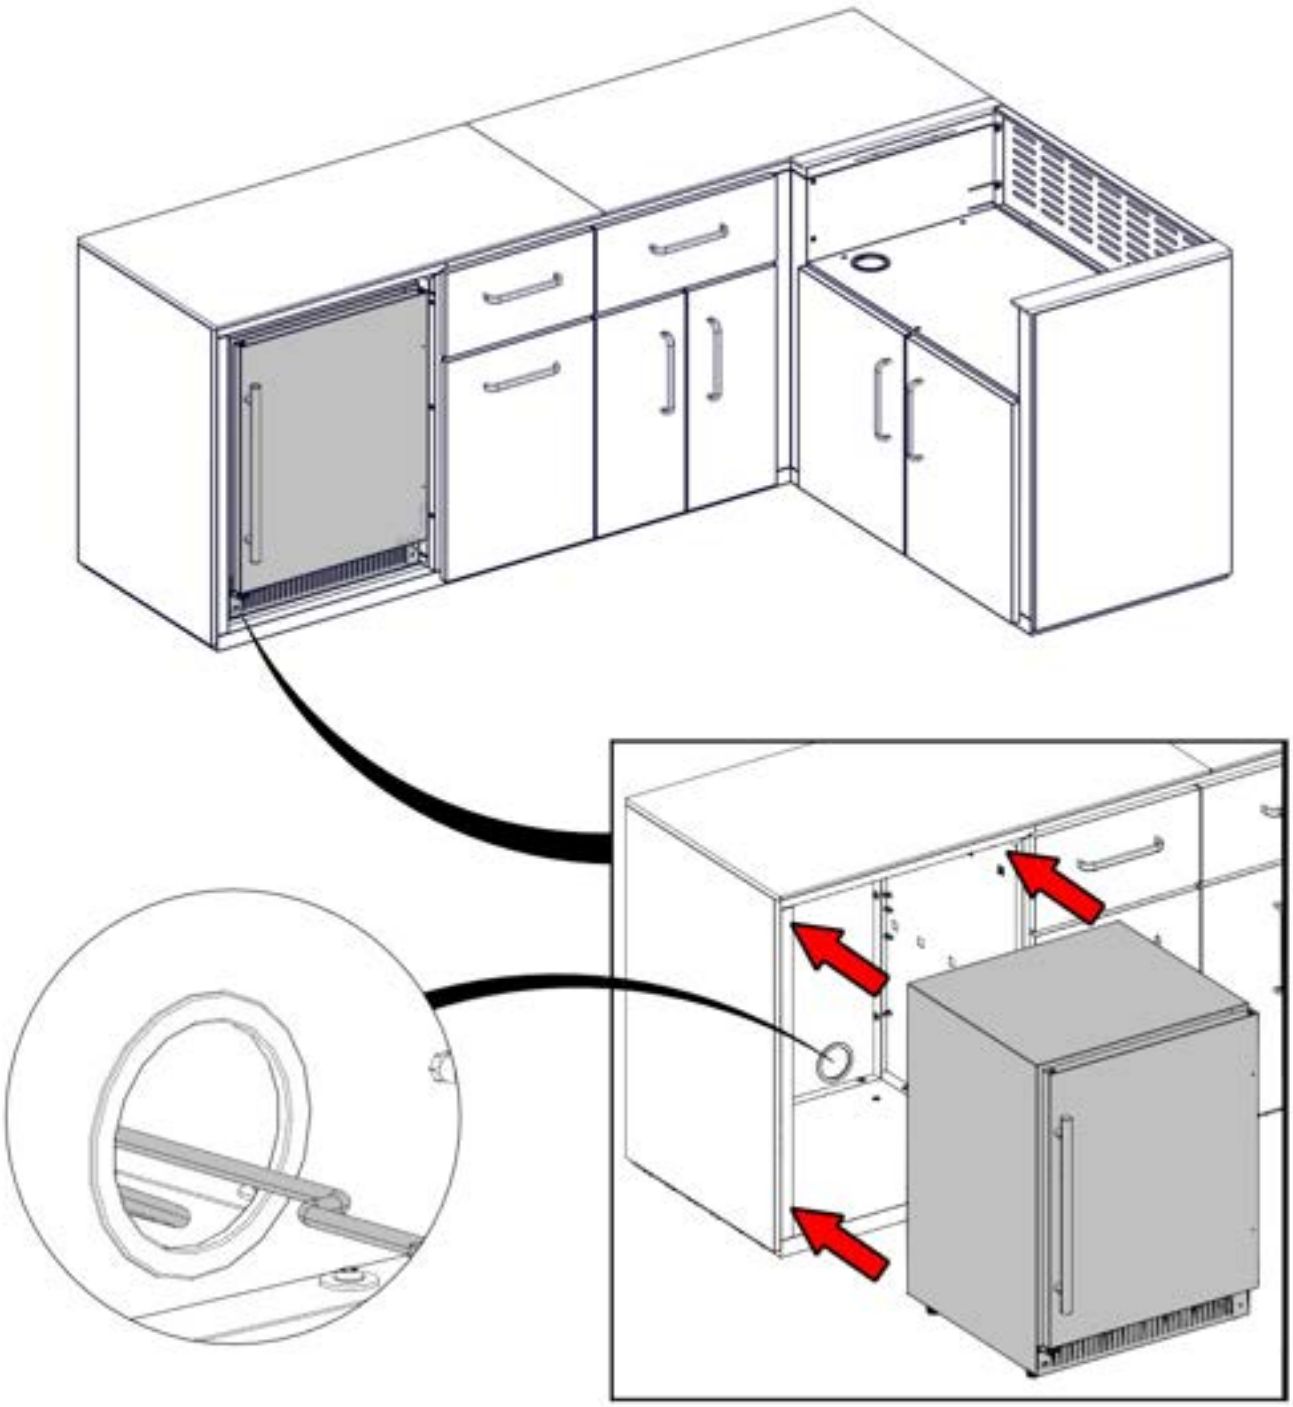

OUTDOOR KITCHEN FRIDGE


- ALIGN FEET ON FRIDGE UNIT SO THAT IT IS LEVEL AND DOES NOT TILT.
- TURN FEET CLOCKWISE TO EXTEND THEM AND COUNTERCLOCKWISE TO SHORTEN. REPEAT THIS FOR ALL FOUR FRIDGE FEET AS NEEDED TO LEVEL.

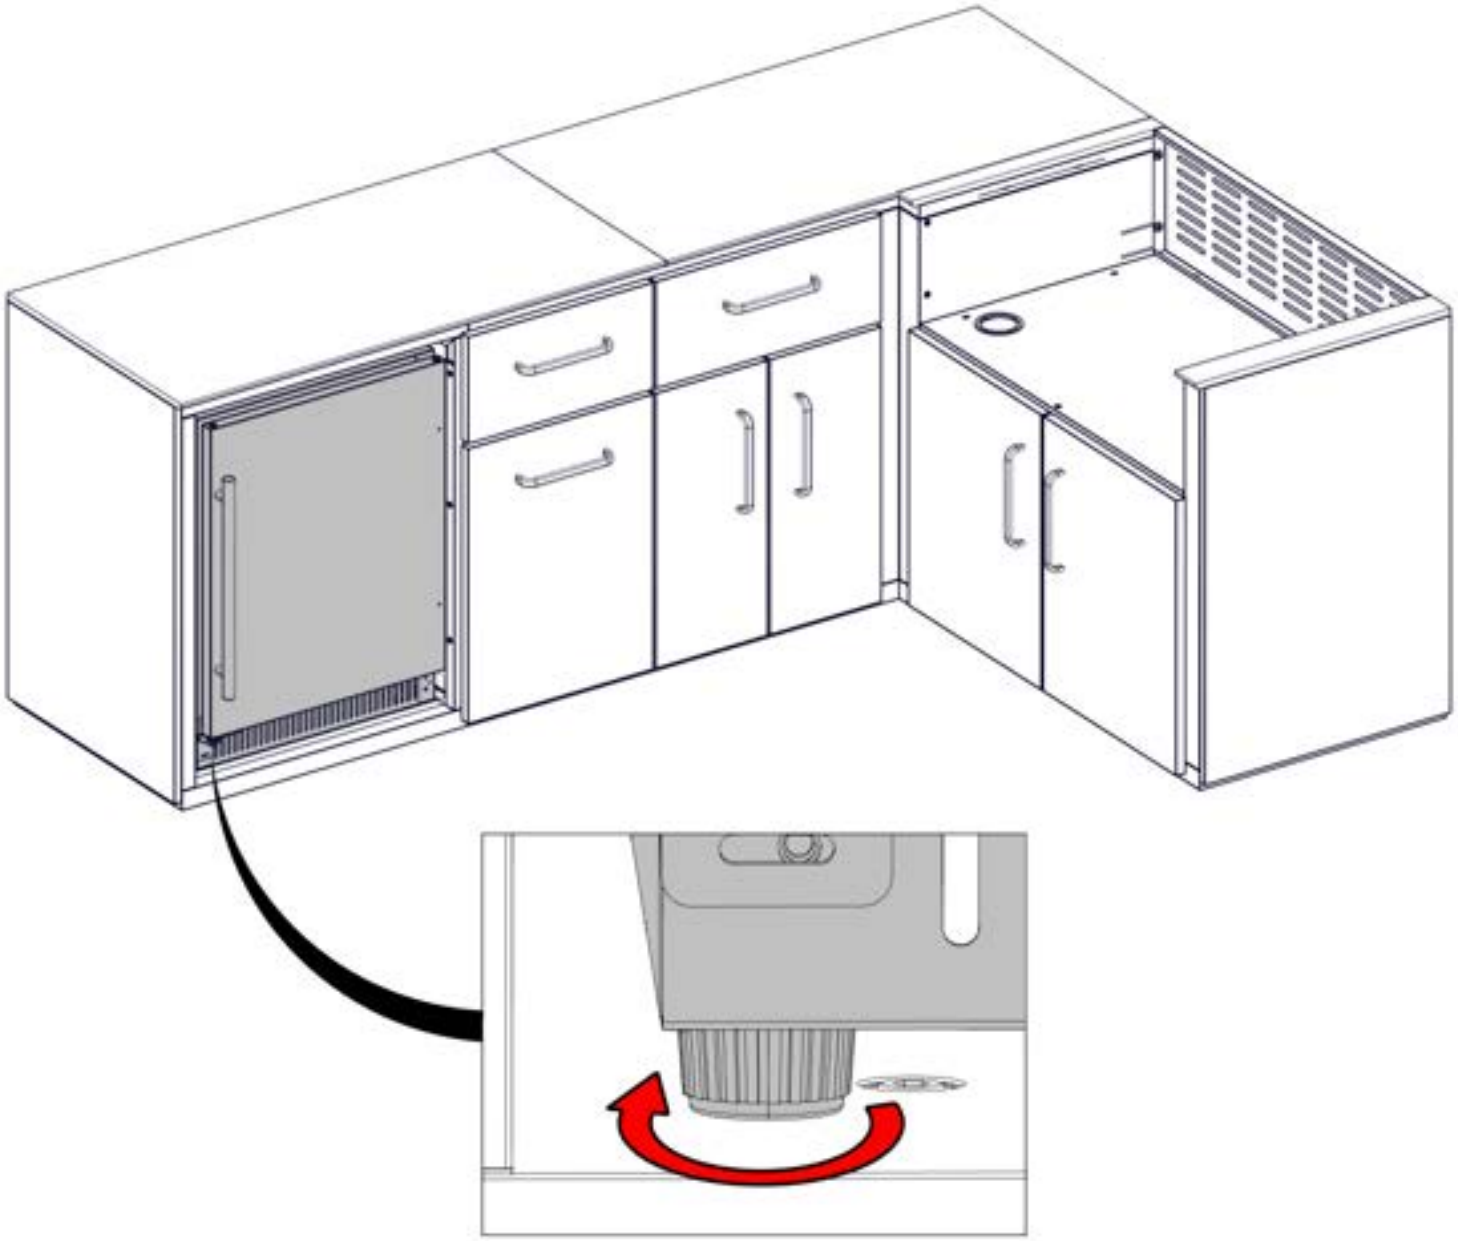

OUTDOOR KITCHEN APPLIANCE COVER INSTALLATION

- APPLIANCE COVERS WILL COME PACKAGED WITH EACH RESPECTIVE APPLIANCE.
- CABINET COVER WILL HAVE CUTOUTS FOR EACH APPLIANCE LOCATION.

- INSTALL CABINET COVER OVER FULLY ASSEMBLED KITCHEN PACKAGE.
  NOTE: COVER SHOULD GO ON AFTER APPLIANCES ARE INSTALLED.
- INSTALL INDIVIDUAL APPLIANCE COVERS OVER EACH APPLIANCE, MAKING SURE FLAPS ARE ON THE OUTSIDE OF THE CABINET COVER, AND VELCRO STRIPS ARE FIRMLY CONNECTED.

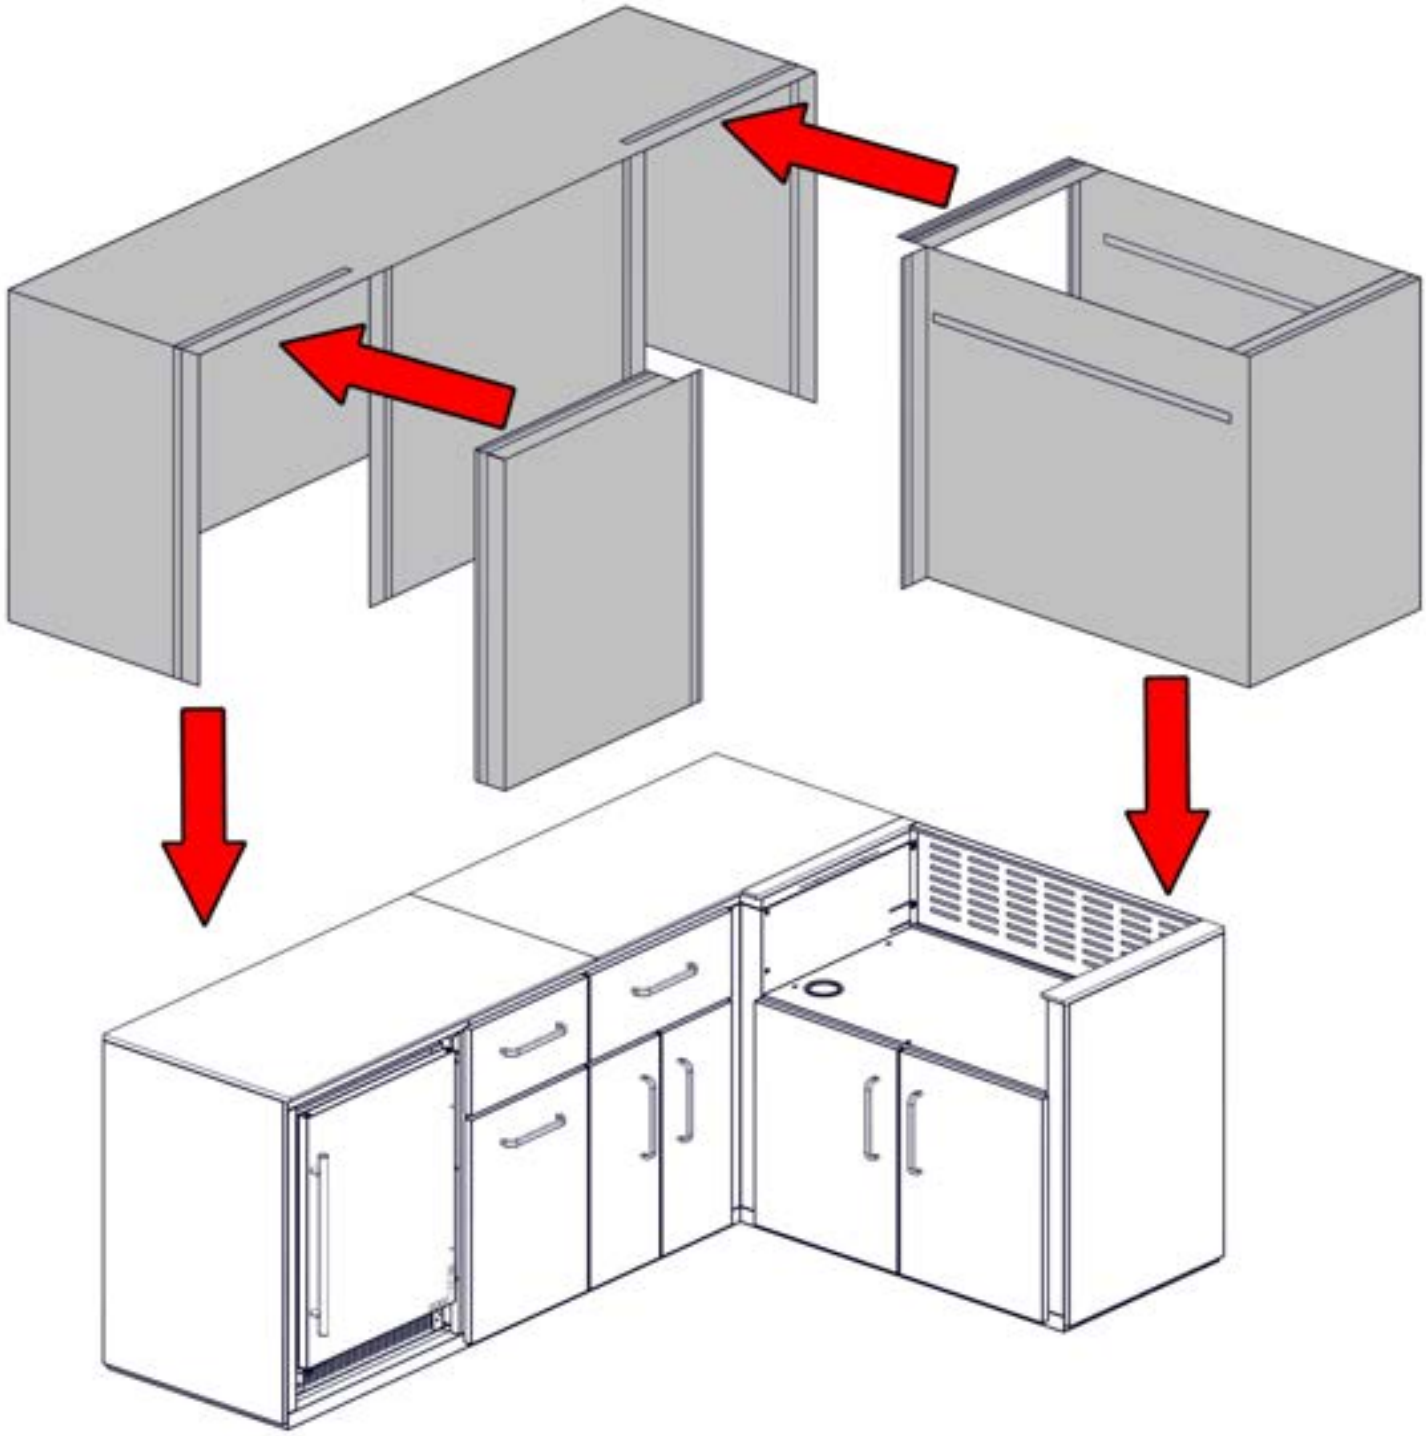

FOR APPLIANCE INSTALLATION REFER TO ASSEMBLY INSTRUCTIONS THAT COME PACKAGED WITH EACH INDIVIDUAL APPLIANCE. FOLLOW DIRECTIONS FOR PROPER INSTALLATION.