


CH, ELJ, AND NEMA 1 STYLE INSTALLATION

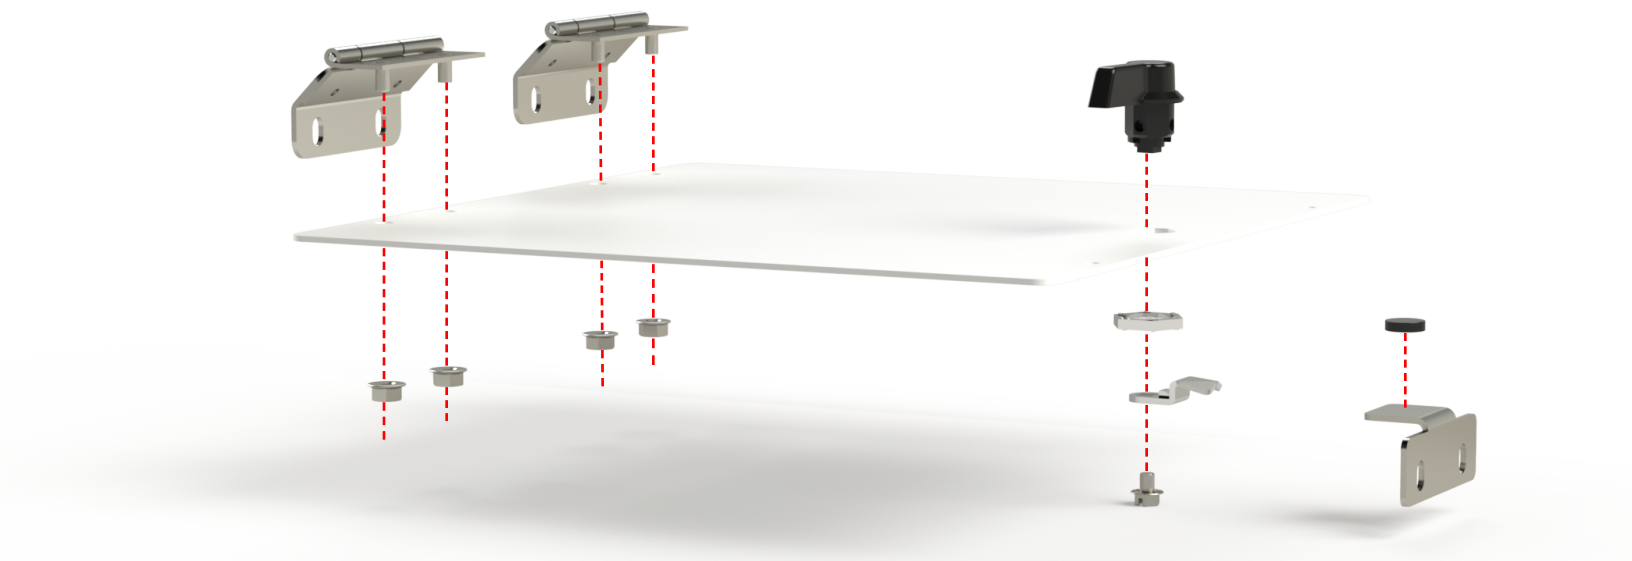

Dead Front Exploded View

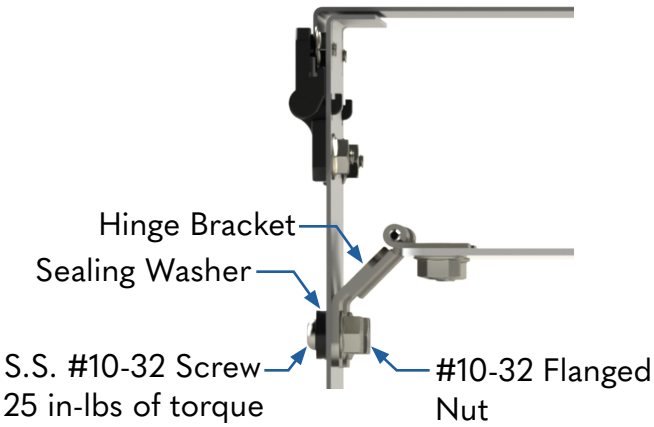


Hinge side installation detail
Typical for all enclosures
Do not scale

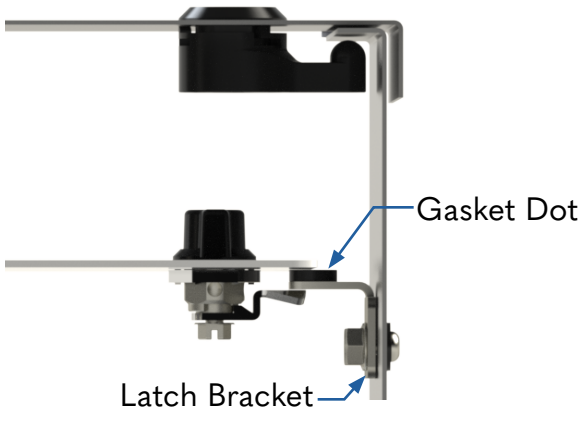


Latch side installation detail
Typical for all enclosures
Do not scale


SAGINAW CONTROL & ENGINEERING
Your Enclosure Source ®

NEMA I STYLE INSTALLATION

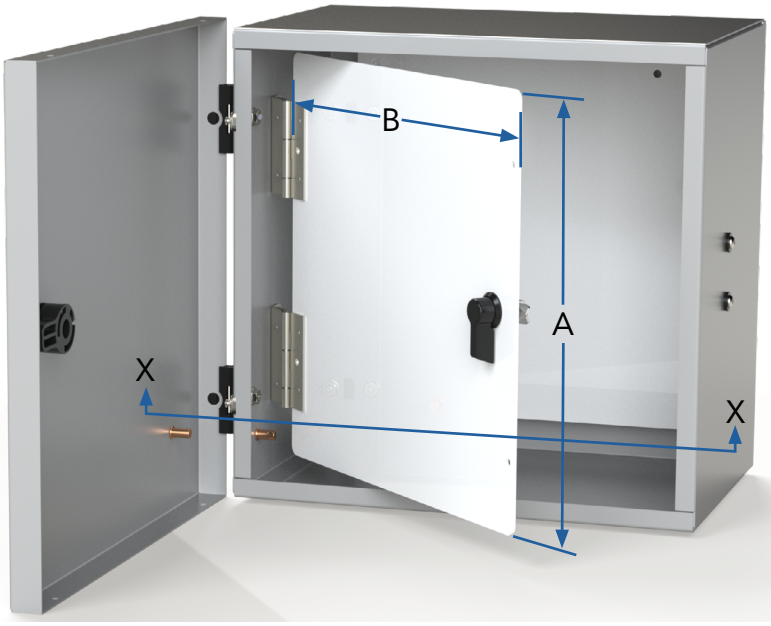

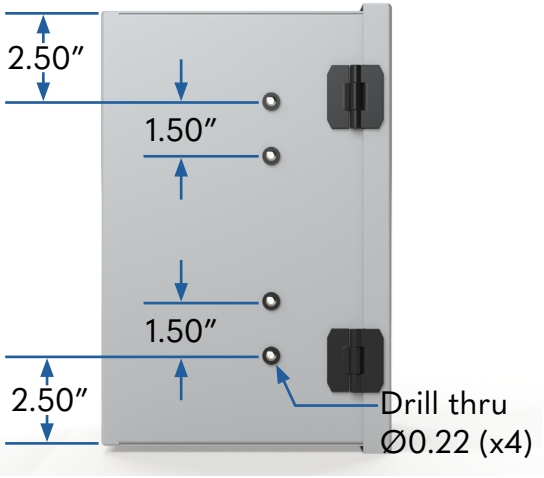

Left Side View

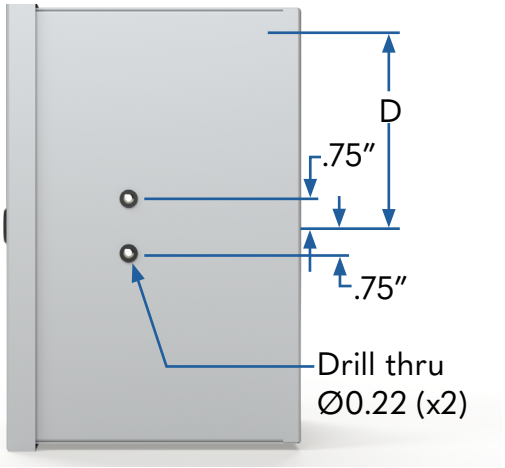


Right Side View

A = Enclosure Height - 1.50″

B = Enclosure Width - 1.50″

C ≤ Enclosure Depth - Interior Space - 0.75″

D = Enclosure Height / 2

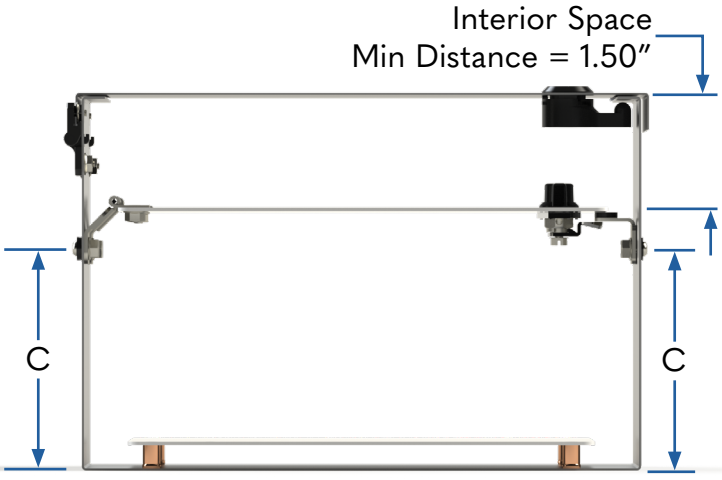


Section X-X

SAGINAW CONTROL & ENGINEERING


Your Enclosure Source ®

ELJ INSTALLATION



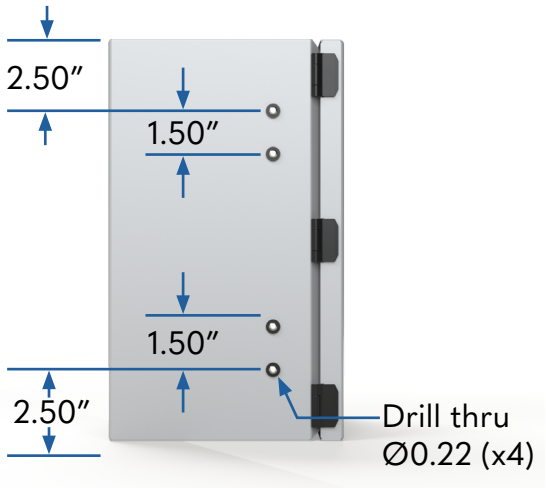

Left Side View

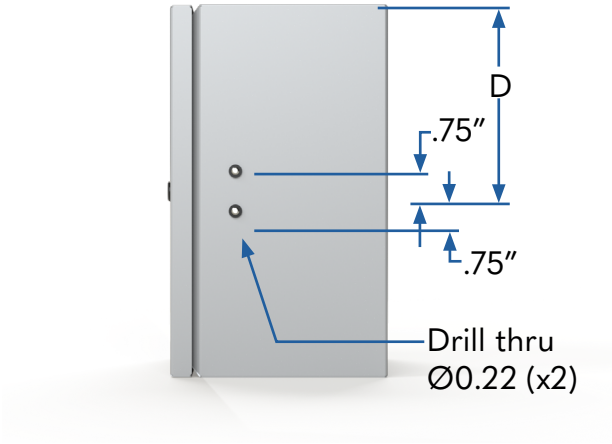


Right Side View

A = Enclosure Height - 1.50″

B = Enclosure Width - 1.50″

C ≤ Enclosure Depth - Interior Space - 0.75″

D = Enclosure Height / 2

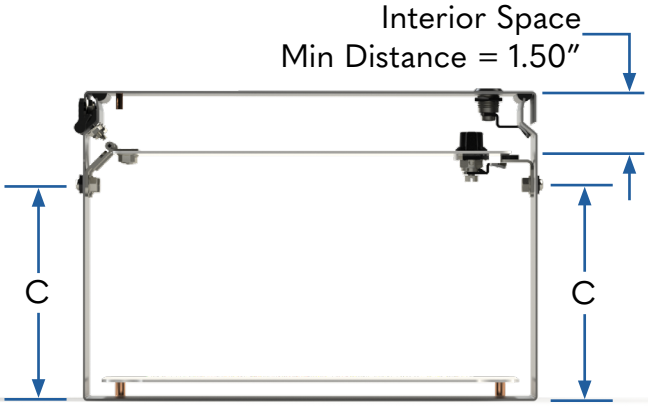



Section X-X

SAGINAW CONTROL & ENGINEERING


Your Enclosure Source ®

CH INSTALLATION

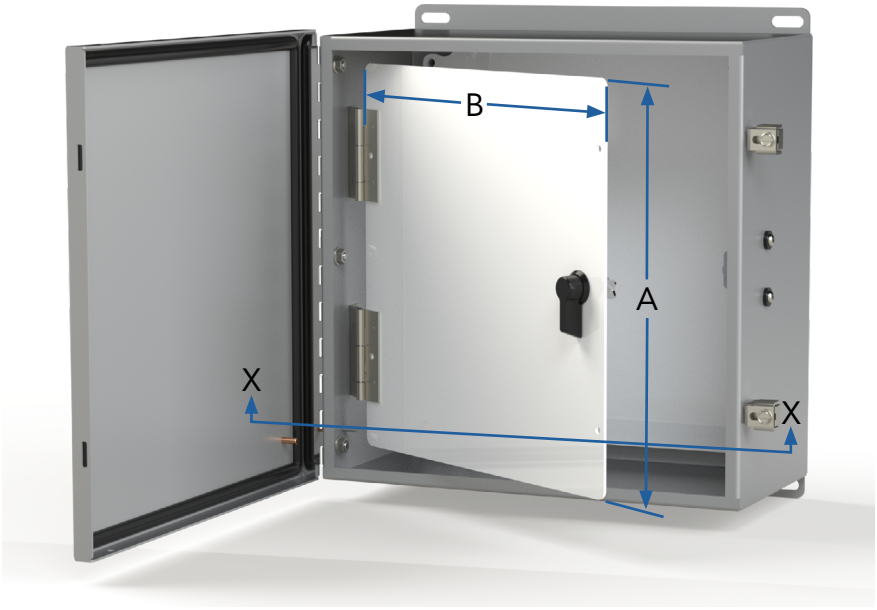

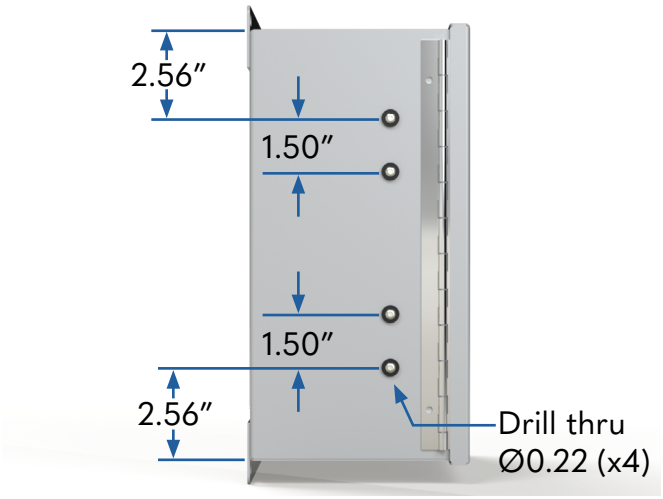

Left Side View

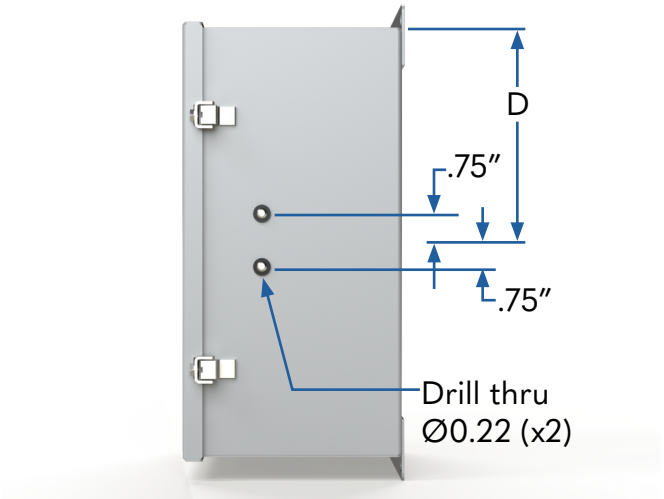


Right Side View

A = Enclosure Height - 1.63″

B = Enclosure Width - 1.50″

C ≤ Enclosure Depth - Interior Space - 0.75″

D = Enclosure Height / 2

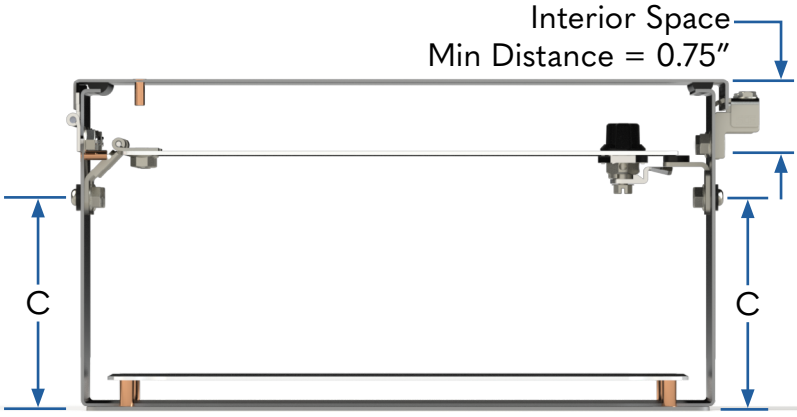

Section X-X

SAGINAW CONTROL & ENGINEERING

Your Enclosure Source ®