




# ALLURE SHOWERHEAD

## *INSTALLATION INSTRUCTIONS*

### **IMPORTANT!**

DreamLine reserves the right to alter, modify, or redesign products at any time without prior notice for the purpose of product improvement and customer experience. Please refer to DreamLine's website for the latest technical drawings, installation manuals, warranty information, or additional product details.

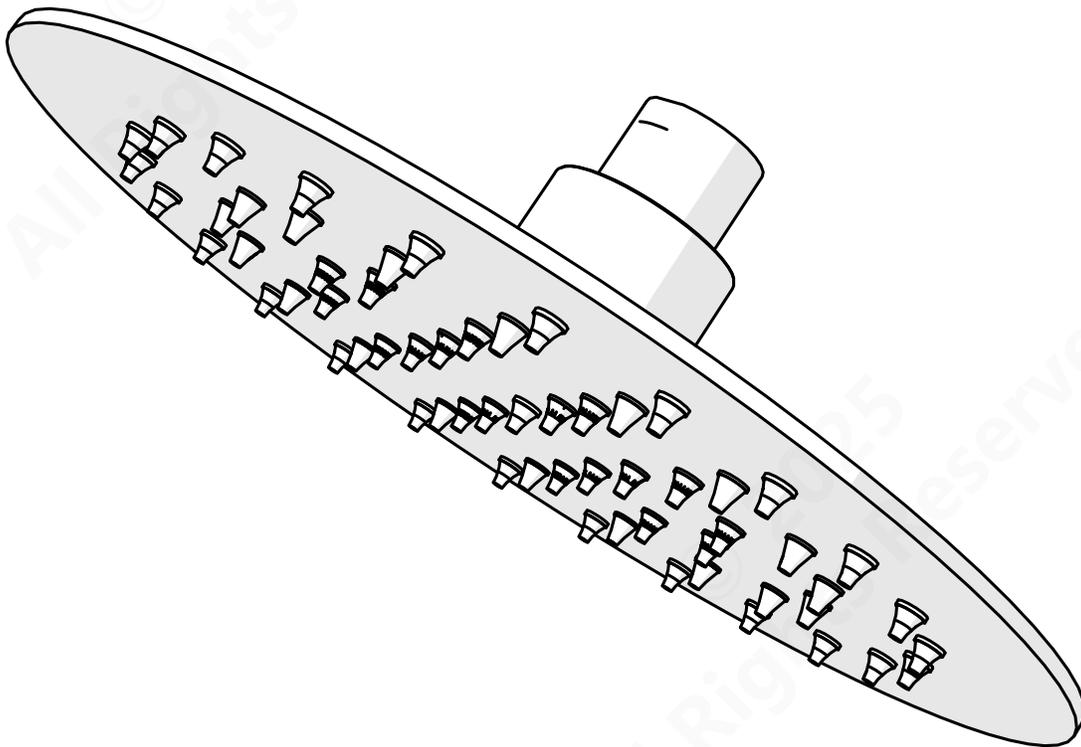

This bathroom fixture has been carefully engineered to provide a long, trouble-free service life under normal usage. It has been factory-tested and is ready for installation. We are providing guidelines for a standard installation, and we cannot account for the individuality of the site or items you may be working with.



### **Questions?**

Please contact DreamLine Customer Support  
See [DreamLine.com](http://DreamLine.com) for hours of operation

[Support@DreamLine.com](mailto:Support@DreamLine.com)


1-866-731-2244



# Installation Steps

**1**

Use Teflon tape on the threaded end of the exposed upper riser tubing or the in-wall shower arm (not included with showerhead).

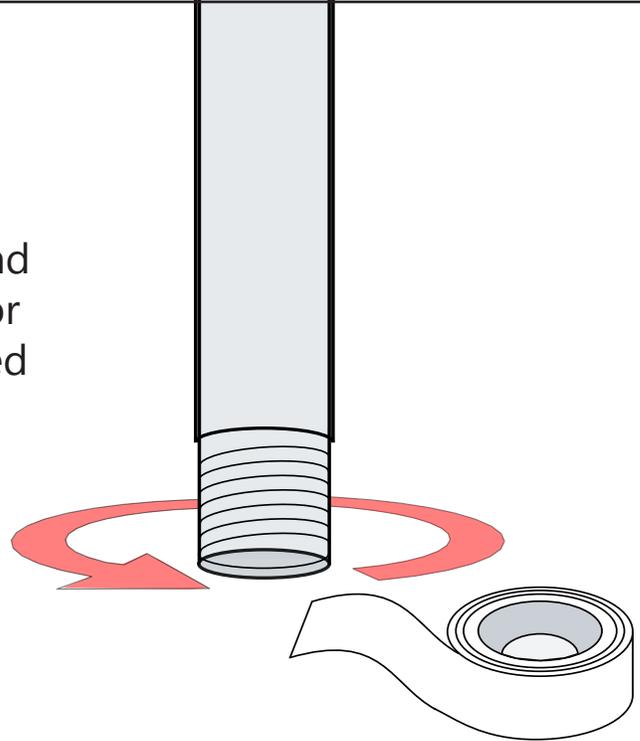

**2**

Screw on the showerhead and hand-tighten.

**NOTE:** Hand-tighten only. **Do Not** use tools to tighten the showerhead as this may damage the finish.

