



**BUTTERFLY-S**

### Specification Features

- FOLDING DESIGN ALLOWS FOR AMPLE ENTRY, USING MINIMAL SPACE
- UNIQUE OPERATION BI-FOLD SHOWER DOOR
- DOOR ADJUSTS UP TO 1 1/2 IN. FOR WIDTH OR OUT-OF-PLUMB
- 1/4 IN. (6MM) THICK CERTIFIED TEMPERED GLASS
- REVERSIBLE FOR RIGHT OR LEFT DOOR INSTALLATION

### Technical Information

- Model: Butterfly-S
- Door Type: Bi-Fold Shower Door
- Dimensions: 35 1/2"W x 73 7/8"H
- Product Width Max: 35 1/2"
- Product Width Min: 34"
- Access Width Max: 26"
- Access Width Min: -
- Access Height Max: 72 3/8"
- Threshold Width Min: 1 1/2"
- Glass Thickness: 1/4" [6 mm]
- Glass Type: Clear

### Codes/Standards Applicable


- ANSI Z97.1 (Tempered Glass)
- 16 CFR Part 1201

### Hardware Finish Options:

- 01 - Chrome
- 04 - Brushed Nickel
- 06 - Oil Rubbed Bronze
- 09 - Matte Black

### Model SKU#s:

- SHDR-4536741-01 SHDR-4536741-06
- SHDR-4536741-04 SHDR-4536741-09

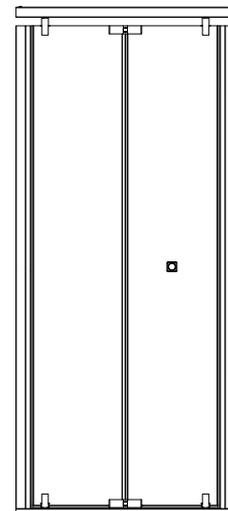

## Unique Product Design Details:



Shower Door Top Bar



Modern design Door Handle offers sophistication and style to the stunning Butterfly-S shower door



Glass to Glass Shower Door Hinge

## Important Notes:

**IMPORTANT!** Before making your shower door selection, make sure walls are finished with tile or other materials, for proper measurements.

Install this product according to the installation manual. Professional installation is recommended.

This door is reversible for a right or left door opening installation.

Minimum threshold depth of 1 1/2 in. is required for proper installation.

Wall profiles allow up to 3/4 in. adjustment per side for width or out-of-plumb (uneven walls).

Door adjusts up to 1 1/2 in. for overall width or out-of-plumb.

DO NOT attach the handle to the door glass until instructed in the installation manual. DO NOT use the Handle to lift the glass during installation. This may result in damage to the glass and/or serious injury.

## Important Disclaimers:

- Prior to installation, please ensure that the installation surface is finished, level and solid and will be able to support the total weight of the unit. Also, make sure that the walls are plumb. Irregular installation, surface level or out of square conditions can result in serious problems for your installation.
- Please read Installation Manual thoroughly prior to installing this product.
- Please note that you should consult your local building codes with questions on installation compliance standards. Building and plumbing codes may vary by location, and DreamLine® is not responsible for code compliance standards for your project and will not accept any returns.

The Butterfly-S shower door is intended for residential use only. Not suitable for commercial use.