

# STANDARD MULTI-PIECE SHOWER

## INSTALLATION GUIDE

Standard Multi-Piece Showers



### Tools and Materials for Proper Installation


- 6D Galvanized Screws
- Long Level
- Caulking Gun
- Bathroom Caulk (see page 3, step 8)
- 100% Silicone Caulk
- Tape Measure
- 1/8" Drill Bit
- Philips Screw Driver

For best results, please read and follow all directions carefully.

### Pre-Installation Planning

READ INSTRUCTIONS COMPLETELY BEFORE BEGINNING INSTALLATION.

1. Do NOT store units out of doors. Keep out of sunlight and exposure to weather.
2. Do not remove the Medallion Identification number, doing so may affect the warranty. This number may be found above the drain, left or right corner of the unit.
3. Review Figure 1 to make sure alcove is of proper size. If a fire rated alcove is required, approved finish material must be installed prior to unit installation. Access to drain and supply connections should be provided so that these connections may be made after the unit has been installed. Framing alcove must reflect dimensions on diagrams to permit unit installation. Note in diagrams the required opening in the floor to provide clearance for the drain fitting and connection.

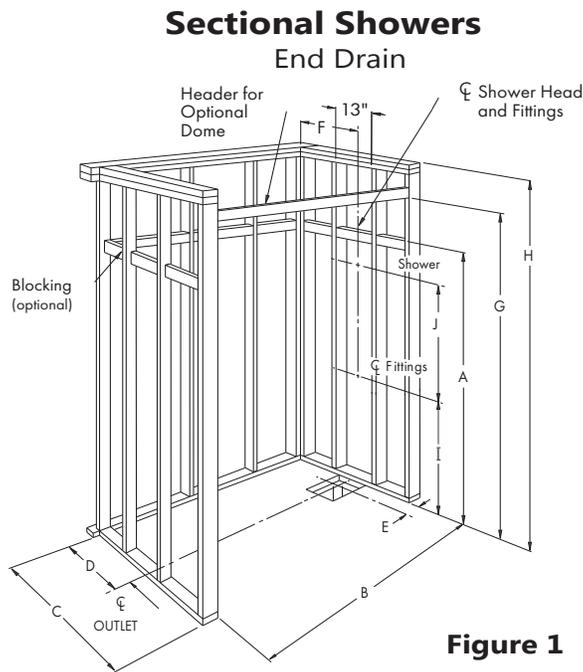

**Figure 1**

### Framing Dimensions

Model No.	A	B	C	D	E	F	G	H	I	J
6032 LH/RH	77 1/2"	60 1/4"	32"	16"	8 7/16"	16"	N/A	N/A	42"	33"

- These units are trimmed to be self-leveling at the factory. If the subfloor at the installation site is not perfectly level, it will be **MANDATORY** to provide shims under the back edge of the unit to level the unit. See Figure 2 if shimming is required.

## Installation Procedure

### One Piece Installation

- Remove wall section(s) from the base unit. Carefully move all parts into the installation area. Apply a bead of 100% Silicone Caulk to all joints. Re-install the wall sections. Align all parts by making sure the wall sections using the factory provided alignment pins and slots. Units have one or more alignment pins with corresponding slots that help to assure the parts line up correctly. Once the 100% Silicone Caulk is applied and the parts re-assembled, wipe away any excess caulk that squeezes out. The unit will be installed into the framing alcove as a one piece unit. The unit must be installed completely level.

**Alternate Connection:** If installing piece-by-piece into the alcove, make sure the pins and slots are aligned correctly. When the 100% silicone Caulking is cured the parts are solidly held similar to a one piece unit when secured to the framing. See Figure 3.

**The valve wall should be the last wall to be installed.**



Figure 3

- The drain and/or overflow assembly should be installed on the unit according to the manufacturers instructions. Apply a bead of 100% Silicone Caulk around the drain hole opening in the unit before installing the fitting.
- Locate supply lines for control valves and shower head. Measure and mark locations of fittings on the finished side of the unit. Re-check locations and drill 1/4" pilot holes. Cut holes to final size using the appropriate size hole saw.
- Carefully carry the unit to the installation location and trial fit into the framing alcove. Check for level along the front of the side walls and on top of the apron/dam. If unit is not level, shims will need to be located on the sub-floor to support the back edge of the unit. Remove the unit and secure the shims as required to make the unit level when installed. Remove and adjust shims if required to assure level and proper support. Secure shims so they will not move. Note: If using shims it is **MANDATORY** these shims are in place and in proper contact to assure structural integrity of the bathing unit.

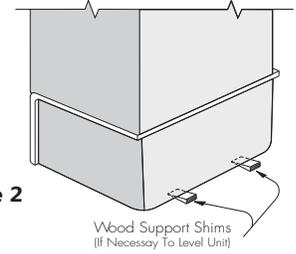


Figure 2

- Plumb and level the unit in two directions: Place a level on top of the apron and along the finished flat area of the top of all walls. Once the unit is leveled, if any gap appears between the apron and sub-floor, fill this gap with solid material. When satisfied with the fit, pre-drill 1/4" holes through all mounting flanges 8" O.C. vertical and at each stud horizontally. Attach the unit to the framing with 6D galvanized screws.
- Make connections to supply and drain lines. Strap all lines to the framing. Install finished trim. Caulk along all fittings as necessary.
- Check for leaks before installing wall-board and closing off access to the plumbing.
- Finish wall board as detailed in Figure 4.

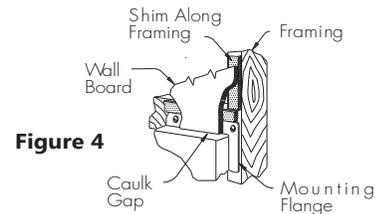



Figure 4

### Sectional Installation

Sectional bathing units are shipped from the factory with screws or nuts and bolts connecting the parts together.


The alignment pins should allow you to more easily install the unit in the framing alcove. Read and understand the instructions on this page since the alignment pins must be inserted in a specific direction.

- Install drain and/or overflow assembly on the unit following drain manufactures instructions. If required, place shims under the back edge and secure. Place the base unit in the alcove location. Level the base. Check for level and plumb in two directions. When level, secure to framing using galvanized screws.
- Place a continuous bead of 100% silicone caulk along the top flat surface of the base where the wall sections will sit. Make sure caulk surrounds all guide pins. For three and four piece units, apply silicone up the vertical seams where the parts will meet.

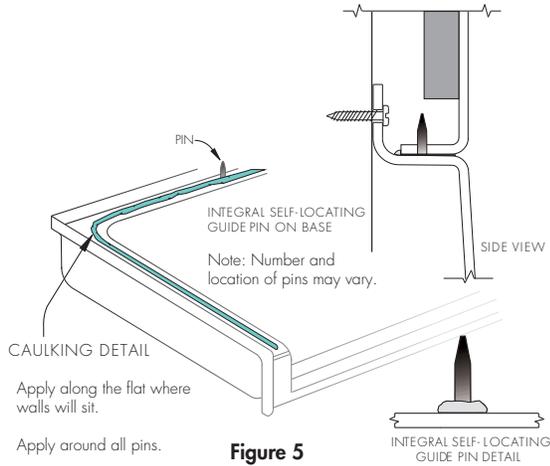


**Figure 5**

- Place the walls on top of the base, aligning the slots with the pins. For three piece units, install the valve wall last. Repeat the same for the opposite wall. Make sure the parts are seated in the silicone, and that all seams are even and in alignment. Press all seams together to assure a tight fit. Wipe away any excess caulk before it cures. See Figure 6

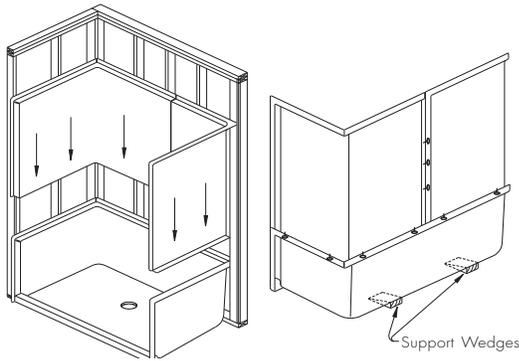

- For four piece units, install the back wall first. install the left and right walls (valve wall last). Press the seams together to assure a tight fit. Make sure all seams are in alignment. Wipe away any excess caulk before it cures.
- Re-check to make sure all seams are even and in alignment with the base section. Fasten the walls to the framing using 6D galvanized screws through the mounting flanges. Fasten every 8" O.C. along the vertical flanges and into each framing stud along the top horizontally.
- Make connections to supply and drain lines. Strap all lines to the framing. Install finished trim. Caulk if necessary.
- Check for leaks before installing wall board and closing off plumbing access. NOTE: The manufacturer is not responsible for leaking connections.
- Apply bathroom caulk to all seams. Wet your finger and run along the caulk to produce a consistent, smooth bead in the seam.
- Finish wall board as detailed in Figure 7.

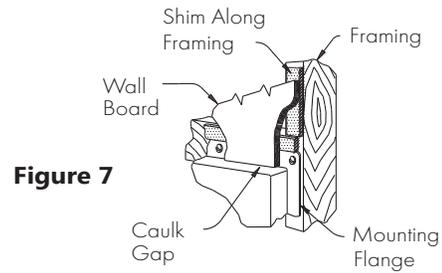

**Figure 7**

## **Grab Bar Installation**

The grab bars are fastened to the shower wall using the provided screws. Review these instructions before you begin installation.

1. Determine the location you want to install the grab bar. Place the grab bar in the desired location and mark the location of each mounting hole for both ends of the grab bar.
2. Using a 1/8" drill bit, drill each mounting hole at a 1" depth.
3. Apply the silicone caulking around and in each mounting hole before installing a grab bar.
4. Start by mounting by hand, one screw in each end of the bar.
5. Use a power drill with a Phillips head bit to fully install the mounting screws.
6. Install the remaining mounting screws into the mounting holes. Tighten screws snugly without over-tightening.



## **Care & Cleaning Instructions**

**CAUTION:** If you use a RUBBER FLOOR MAT in the tub or shower unit it must be removed after each usage. If left in the unit, it may cause blisters or damage to the surface finish.

### **Do Not Use Abrasive Cleaners**

The most important caution is to avoid the use of harsh abrasive cleaners or gritty scouring powders. To clean the unit, simply use a household liquid detergent with a soft sponge or cloth with warm water.

More persistent stains, tar or paint can be removed with naphtha or mineral spirits. Remove dried plaster by scraping with a soft sharp-ened wooden stick. Avoid wire brushes, metal scrapers or tools. Restore dull areas by rubbing with automotive type body cleaning compound.

## **Limited Warranty**

The manufacturer warrants to the original purchaser to be free from defects in material and workmanship for the following periods. The bathing unit shell carries a limited lifetime warranty. The grab bars, drain and curtain rod have a limited 10 year warranty. All other parts have a limited 5 year warranty. Proof of purchase is required. This warranty is issued to the original purchaser and shall be effective from the date of purchase as shown on purchasers receipt.

The manufacturer will repair or replace (at their choice) any unit which proves to be defective in material or workmanship under normal use and service, having been properly installed. This warranty is the only express warranty made by the manufacturer and is limited to the duration of this warranty. Any labor charges and/or damage incurred in installation, repair or replacement as well as incidental and consequential damages connected there with are excluded and will not be paid by the manufacturer. Some states do not allow the exclusion or limitation of incidental or consequential damage, so the above limitation or exclusion may not apply to you. This warranty is void for any damages to the unit due to abuse, misuse, neglect, accident, improper installation, any use violating instructions furnished by us, or repair not authorized in writing by the manufacturer.

To validate your warranty, record your order date and PO # and store in a safe place.

The order date & (8-digit) PO # can be found on your Lowes receipt.

Order Date: \_\_\_\_\_

PO #: \_\_\_\_\_

# STANDARD MULTI-PIECE SHOWER

## INSTALLATION GUIDE

Standard Multi-Piece Showers



# 6030/6032 4-PIECE SHOWER

## INSTALLATION GUIDE

### Shower Door



## PLEASE REVIEW THIS ENTIRE MANUAL PRIOR TO INSTALLATION

### Shower Door Compatible With:


- 6030 4-PIECE SHOWER (RH & LH)
- 6032 4-PIECE SHOWER (RH & LH)

**Note:** Right side shower head installation shown as example.

### IMPORTANT!

The manufacturer reserves the right to alter, modify or redesign products at any time without prior notice for the purpose of product improvement and customer experience. Please refer to the manufacturer's web page for the latest manuals, warranty information, or additional product details.

Do Not Return Product to the Store. Contact the manufacturer with any questions.

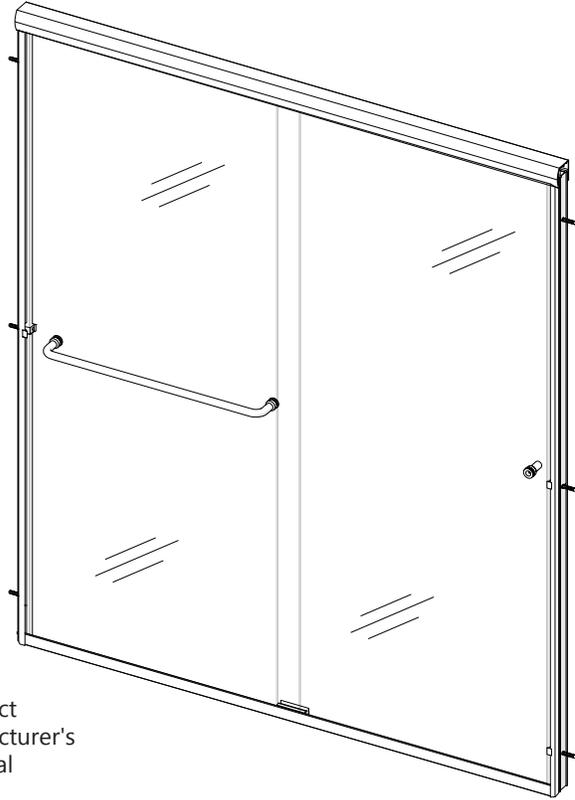

---

Record the following purchase information for your records or in the event you need to contact the manufacturer:

Purchase Order  
Number \_\_\_\_\_

Store/Vendor  
Purchased From \_\_\_\_\_

Installation Date \_\_\_\_\_

OD Number \_\_\_\_\_  
(optional) \*found on the shipping box or label if available.

Installed By: \_\_\_\_\_

SKU Number \_\_\_\_\_

## Contents

Important Information .....	4
Tempered Glass Warning .....	4
General Preparation.....	5
<b>WARNING:</b> To Avoid The Risk Of Damage Or Injury.....	5
Pre-Installation Planning .....	6
Shower Door Components.....	7
<b>(SUPPLEMENT PAGE - Installation for Acrylic Shower Stalls)</b>	
Installation Instructions .....	8
Tools and Materials for Proper Installation .....	8
Installation Procedure.....	8
Product Maintenance.....	16
Bases and Backwalls .....	16
Glass.....	16
Hardware.....	16
Maintenance Checklist.....	16
Troubleshooting.....	17

## Important Information

The manufacturer reserves the right to alter, modify or redesign products any time without prior notice for product improvement and customer experience. Please refer to the manufacturer's web page on for the latest technical drawings, installation manuals, warranty information, or additional product details.

- ▲ This product should be installed by someone familiar with the construction requirements for this type of project and the care necessary for the safe installation and operation of the product.
- ▲ The safety of any installation is the responsibility of the installer.
- ▲ Professional installation recommended. (All Models)
- ▲ To prevent damage or serious injury, Do Not lean against the installed panel/door/glass.
- ▲ To prevent damage or serious injury: Do Not attempt to lift or move a heavy lite of glass alone. Use an assistant and/or a professional grade glass suction cup.
- ▲ The installation of some models may require drilling down into the threshold. Contact the manufacturer of the base, tub, or threshold material with any questions regarding the drilling of holes into their product.
- ▲ All drawings in this installation manual are for illustrative purposes only and are not drawn to scale.

### Tempered Glass Warning

#### **YOUR SHOWER DOOR GLASS COULD SHATTER WITHOUT WARNING IF IMPROPERLY INSTALLED OR MISHANDLED.**

Do Not install or operate a shower door if the glass has chipped corners, slivered edges or is otherwise damaged and/or has been dropped or banged into a hard surface such as tile, marble or glass.

#### **The main causes of tempered glass breakage are:**

- ▲ **Improper handling, storage, unpacking or installation**
  - Corners and edges are the most susceptible area to damage on a lite of tempered glass and should be protected and handled with care during storage, unpacking, installation and operation. A concentrated point of pressure or impact with a surface harder than itself may cause the tempered glass to shatter. The tempered glass may release immediately, within several hours or even days later.
- ▲ **Misuse/abuse**
  - Aggressively opening or closing the door may cause trauma to the glass, which can lead to breakage. This may occur immediately or hours or even days later.
  - Additional considerations should be given to the installation of frameless tempered glass products in households with young children or an elderly person due to an increased chance of improper handling. In such cases, alternatives such as shower curtains or grab bars should be considered.
- ▲ **Lack of maintenance/failure to replace damaged glass**
  - The shower door hardware and glass should be inspected periodically: Instruct the homeowner how to perform a periodic inspection of the shower hardware and glass - some minor adjustments may be necessary based upon the use (or misuse) of the shower door. Ensure that the hardware remains tight and that the door alignment and operation are correct. Any adjustments should be made upon discovery to prevent damage to the product.
- ▲ **Incorrect installation of door hardware, rollers, hinges, channels, stopper or glass:**
  - Improper installation may include: loose hardware and/or lack of proper gaskets between the hardware and glass. Additionally, improper alignment of guide rails, wall profiles or other hardware during installation or operation may place stress on the glass edges and cause it to break.
  - This product must be installed by a professional and experienced installer familiar with the safe handling of tempered glass.

## General Preparation

- ▲ After opening all boxes and packages, read this introduction carefully. Check that all the items are included in the package by marking off the components on the Shower Door Components page. Examine all boxes and packages for shipping damage. If the unit has been damaged, has a finishing defect, or is missing parts; please contact our Customer Support department within 3 business days of the delivery date.  
**Please note that the manufacturer will not replace any damaged products or missing parts free of charge after 3 business days or if the product has been installed.** Please contact the manufacturer if you have any questions.
- ▲ Please note that you should refer to your local building codes with questions on installation compliance standards.  
**Building and plumbing codes may vary by location, and the manufacturer is not responsible for code compliance standards for your project and will not accept any returns.**
- ▲ If this unit is going to be installed in a new construction, install all the required plumbing and drainage before installing the shower. Use a competent and licensed (if required by local code) plumber for all plumbing installation.
- ▲ Make sure that prior to beginning the installation, the surfaces are leveled and solid and will be able to support the total weight of the unit. Also make sure the walls are at right angles. Irregular installation surface level, radius corners or improper angle of side walls will result in serious problems for your installation. Please note that some adjustments and drilling will be necessary during the installation process.
- ▲ Protect all primary surfaces of the product during installation. Never set your glass down directly onto a tile floor. Always use a piece of wood or cardboard to protect the bottom edge and corners of the glass prior to and during installation.
- ▲ This unit must be installed upon a finished threshold and against finished walls.
- ▲ This shower door model is not designed to be installed into a fiberglass surround due to the radius corners and lack of a solid surface to mount the hardware.


### WARNING: To Avoid The Risk Of Damage Or Injury

- ▲ Follow all recommendations and requirements as shown in the installation instructions.
- ▲ Perform a thorough inspection of the glass and all parts for any damage prior to installation. Any damage to tempered glass can cause breakage. **DO NOT** install damaged glass!
- ▲ Do Not install or operate a shower or tub door if the glass has chipped corners, slivered edges or is otherwise damaged. Do Not install or operate a shower or tub door that has been dropped or banged into a hard surface such as tile, marble or glass.
- ▲ **CAUTION:** Contact with any hard surface can damage tempered glass and cause it to shatter.
- ▲ This product uses tempered glass. Glass cannot be cut after it has been tempered. **DO NOT** attempt to cut tempered glass.
- ▲ Glass Shower doors, Tub doors, Inline panels, and Return panels can shatter due to improper handling or lack of maintenance. Conduct periodic inspections of glass and all parts for possible damage, missing or loose parts.
- ▲ Always wear proper safety equipment such as: safety goggles, work gloves and appropriate footwear during the installation process.
- ▲ **WARNING!** Risk of leakage and/or damage. Follow all instructions regarding the application of silicone sealant or caulk. Allow 24 hours for the sealant to cure before the initial use of the shower or tub product. Follow the silicone manufacturer's recommendations regarding their product.
- ▲ Thoroughly read these instructions before installing or using this product.
- ▲ Leave this manual for the end-user of the product.

## Pre-Installation Planning


Unpack your unit carefully and inspect it. Lay it out and identify all parts using the Detailed Diagram on page 7; and packing list in this manual as a reference. Before discarding the carton, check for small hardware bags that may have fallen to the bottom of the box. If any parts are damaged or missing, please contact the manufacturer for replacement. The shipping boxes may contain extra parts not used in your model configuration. Retain these installation instructions for future reference.















- ▲ Verify that the correct model size has been ordered; measure the finished opening before proceeding with the installation.
- ▲ Confirm that the finished walls are plumb and the threshold is level and pitched into the shower area.
- ▲ Use a good quality waterproof, mildew-resistant 100% silicone caulk.
- ▲ Cover the shower/tub drain with tape prior to installation to prevent the loss of screws or small parts.
- ▲ DO NOT attach the handle to the door glass until instructed.
- ▲ DO NOT attempt to use the handle to lift the door glass during installation. This may result in damage to the glass and/or serious injury. Always use a professional grade glass suction cup and an assistant.

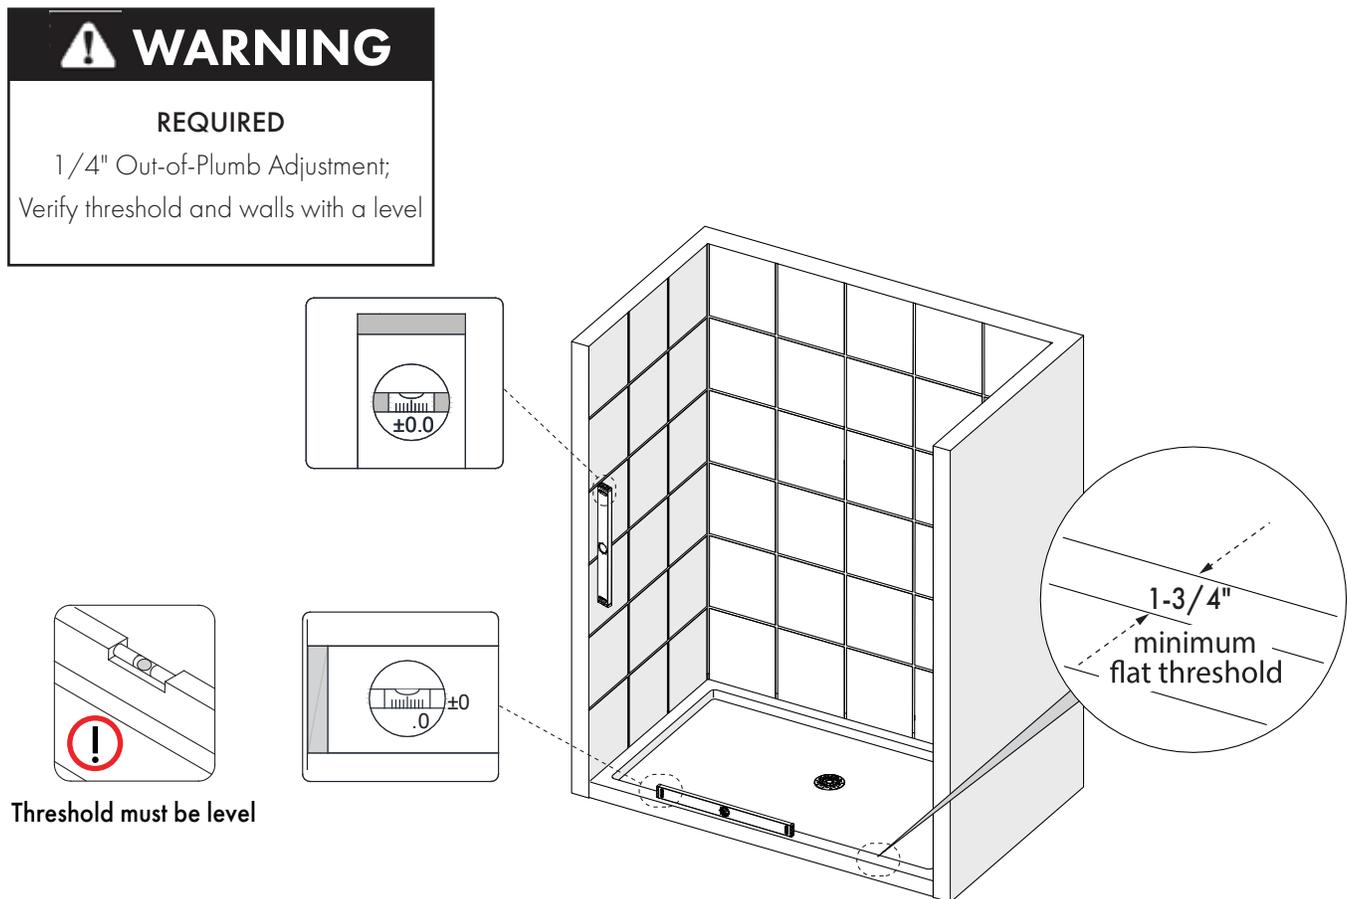

**TIP:** This door is reversible. The inside door glass can be installed on either side of the shower, and should always be installed on the shower head side of the shower to avoid leaking between the doors.


## Shower Door Components

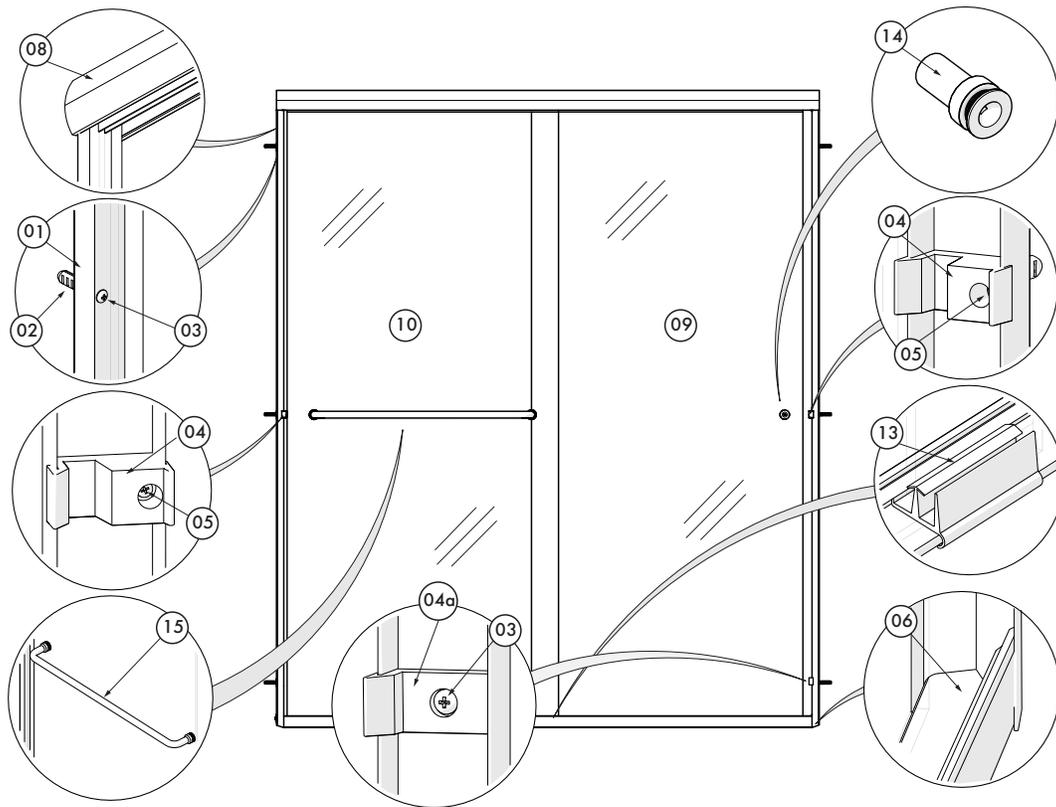

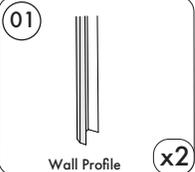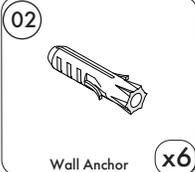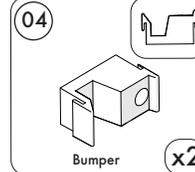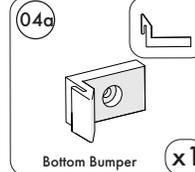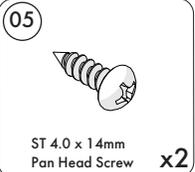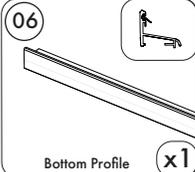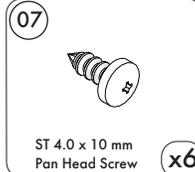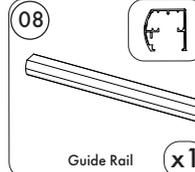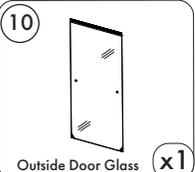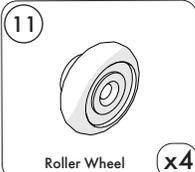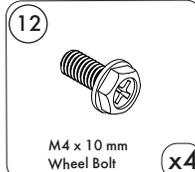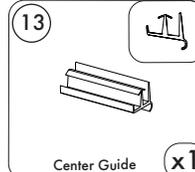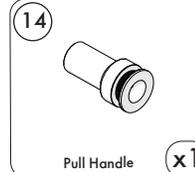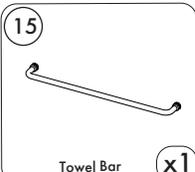 <p>01 Wall Profile x2</p>	 <p>02 Wall Anchor x6</p>	 <p>03 ST 4.2 x 35 mm Truss Head Screw x6</p>	 <p>04 Bumper x2</p>	 <p>04a Bottom Bumper x1</p>
 <p>05 ST 4.0 x 14mm Pan Head Screw x2</p>	 <p>06 Bottom Profile x1</p>	 <p>07 ST 4.0 x 10 mm Pan Head Screw x6</p>	 <p>08 Guide Rail x1</p>	 <p>09 Inside Door Glass x1</p>
 <p>10 Outside Door Glass x1</p>	 <p>11 Roller Wheel x4</p>	 <p>12 M4 x 10 mm Wheel Bolt x4</p>	 <p>13 Center Guide x1</p>	 <p>14 Pull Handle x1</p>
 <p>15 Towel Bar x1</p>	 <p>16 ST4.0 x 6mm Pan Head Screw (S-Curved Glass Only) x2</p>			

# WALL PROFILE INSTALLATION SUPPLEMENT


## INSTALLATION GUIDE FOR SHOWER STALLS WITH ROUNDED CORNERS

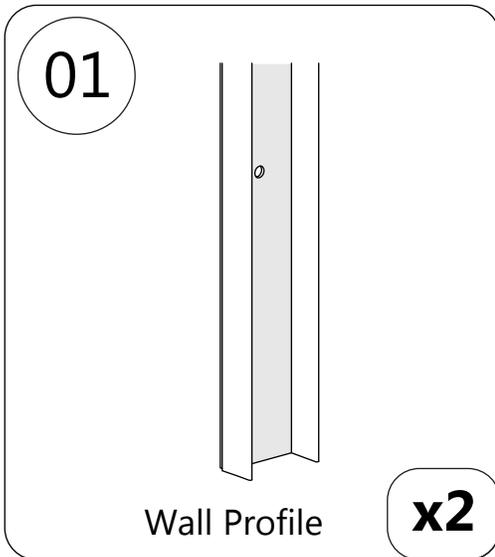

When installing the **Wall Profiles (#01)** into an acrylic shower stall with rounded corners, you will need to file the bottom corners of the **Profiles** at a 45-degree angle to accommodate the curved corners of the acrylic shower stall.

**NOTE:** When filing the corners of the **Profiles**, file a little at a time and check the fit of the **Profiles** to your acrylic shower stall. You may need to do this multiple times to ensure a proper fit. **File enough so that the Profile will sit flush on the threshold.** For most surrounds, this will be **no more than approximately 1/4"**.

**WARNING:** Filing too much could result in a gap too large to fill with silicone which could cause the unit to leak.

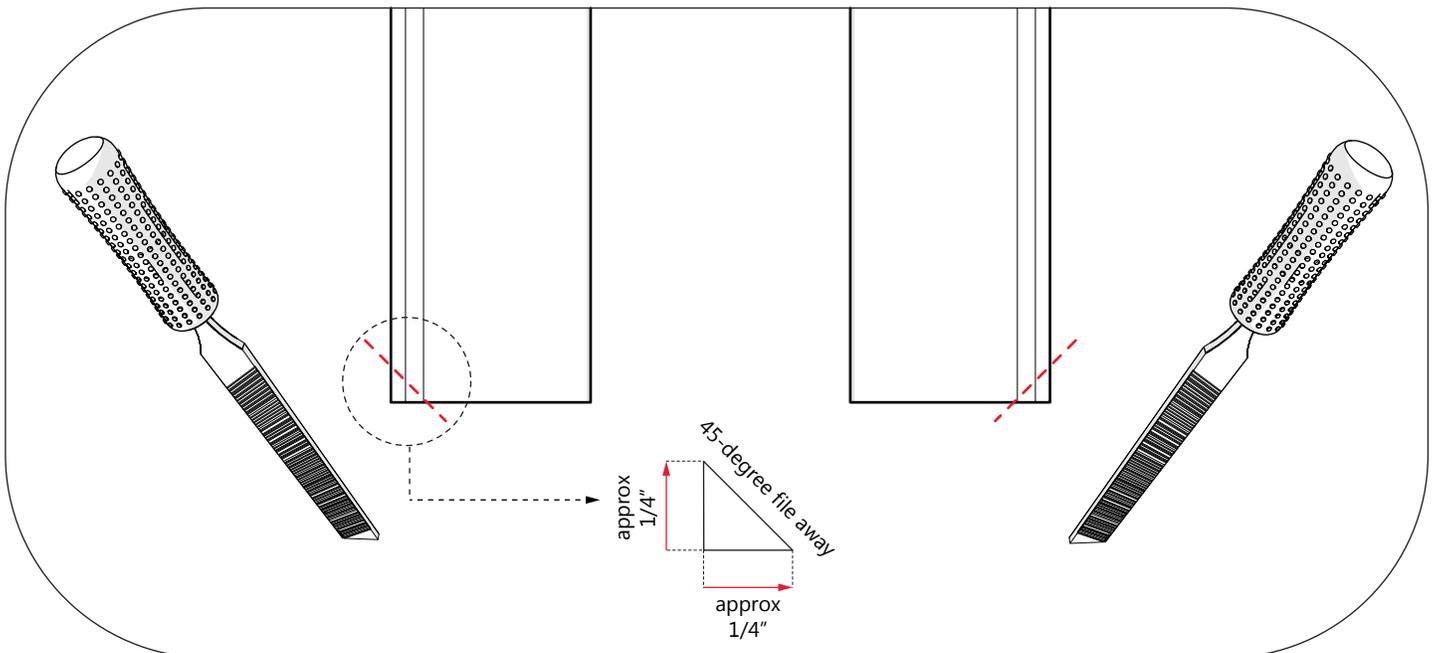

## Installation Instructions



### Tools and Materials for Proper Installation



**Average Installation Time: 45 minutes**

### Installation Procedure

1. A. Locate and mark a line on the threshold or tub deck  $7/8''$  from the outside edge of the base. Extend the mark across to both walls.
- B. Install both wall profiles on the inside of the line..

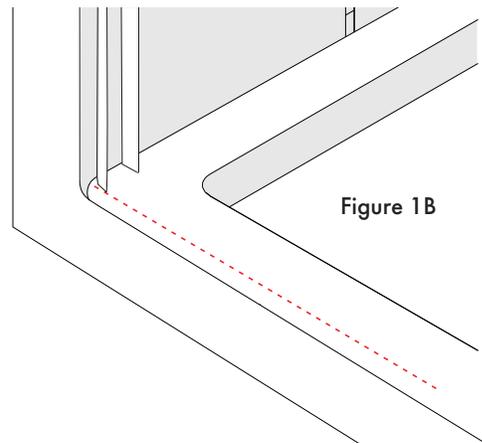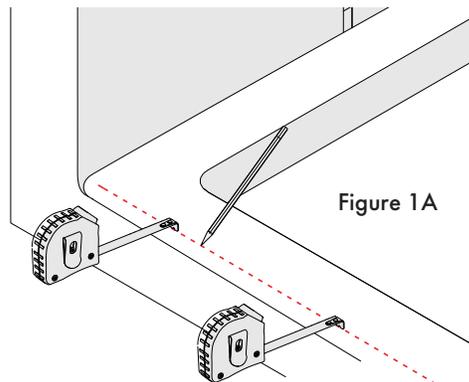

2. A. Level (plumb) both Wall Profiles- #01)
- B. Mark the holes for drilling.
- C. Drill three  $\text{\O} 1/8"$  (3mm) holes on each side wall.

If a stud is present behind the wall: Drill a  $\text{\O} 9/64"$  (4mm) hole up to the stud, then drill a  $\text{\O} 1/8"$  (3mm) pilot hole in the wood.

**TIP:** Be sure all pilot holes are the correct size. Always use low torque and steady pressure when securing stainless steel screws to avoid stripping or breaking off the screw heads.

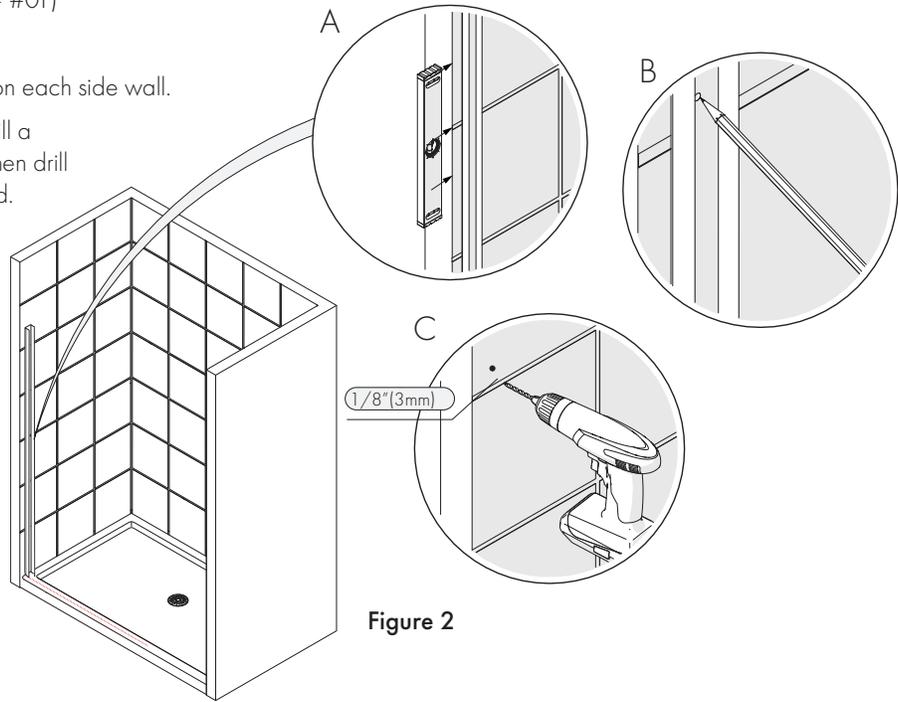


Figure 2

3. A. Apply silicone to the backs of the Wall Profiles- #01.
- B. Install the Wall Profiles using the ST4.2 x 35mm x6 Truss Head Screws- #03.
- C. The Bottom Bumper- #04a is also installed using the ST4.2 x 35mm 04 Truss Head Screws- #03, while installing the Wall Profile- #01 on the shower head side of the shower.
- D. Install it in the lowest screw hole on the Wall Profile- #01.
- E. The remaining Bumpers- #04 are installed after both Wall Profiles- #01 are installed.
- F. The two upper Bumpers- #04 are installed using the ST4.0 x 14mm x2 Pan Head Screw- #05.


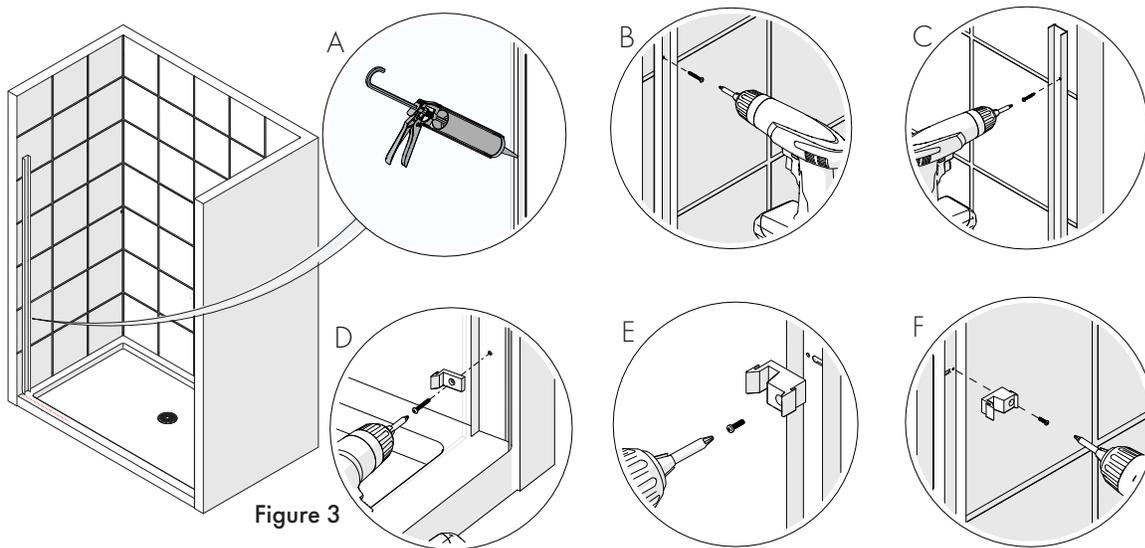


Figure 3

**TIP:** Note the opposite orientation of the two upper *Bumpers*– #04. The bumper slot for the *Inside Door Glass*– #09 faces the inside of the shower on the shower head side. (See Figure 3D) The bumper slot for the *Outside Door Glass*– #10 faces the outside of the shower on the opposite wall. See Figure 3E.

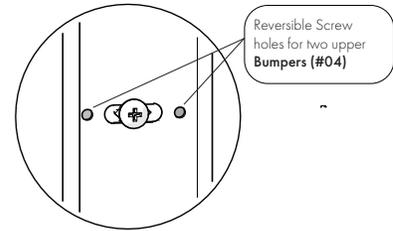


**NOTE:** Apply dish soap to the screw threads and use a Phillips screwdriver to install screws to avoid stripping the screws

4. A. Measure Distance between inner wall profiles at bottom.
- B. Cut *Bottom Profile*– #06 1/16" (1.5 mm) shorter than this measurement.

**TIP:** Use a metal file to remove any burrs from the *Guide Rail*– #08 or *Bottom Profile*– #06 after cutting.

C-D. Apply a bead of silicone.

E-F. Place bottom profile in place.

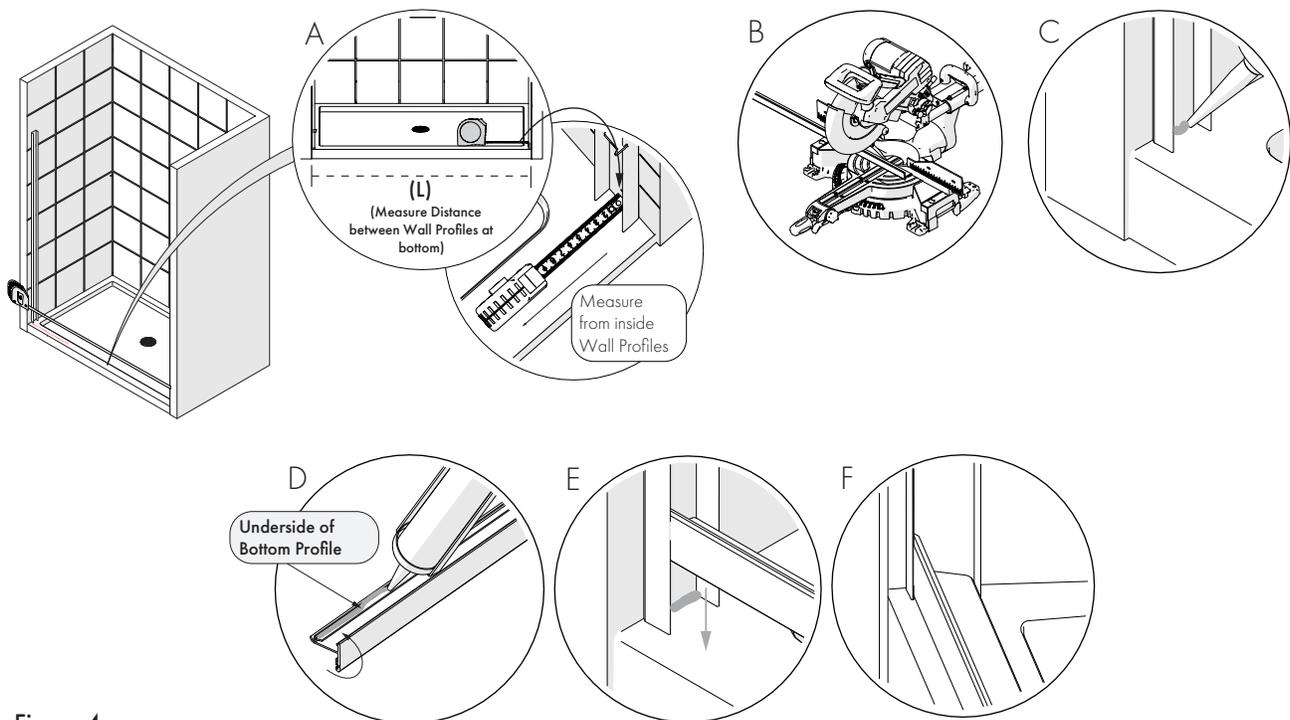

**Figure 4**

5. A. Measure Distance between both walls, above the profiles.
- B-C. Cut *Guide Rail*– #08 1/16" (1.5 mm) shorter than this measurement.
- D. Place top profile in place.
- E-F. Secure both sides with ST4.0 x10mm Screws.

**TIP:** Use a metal file to remove any burrs from the *Guide Rail*– #08 or *Bottom Profile*– #06 after cutting.

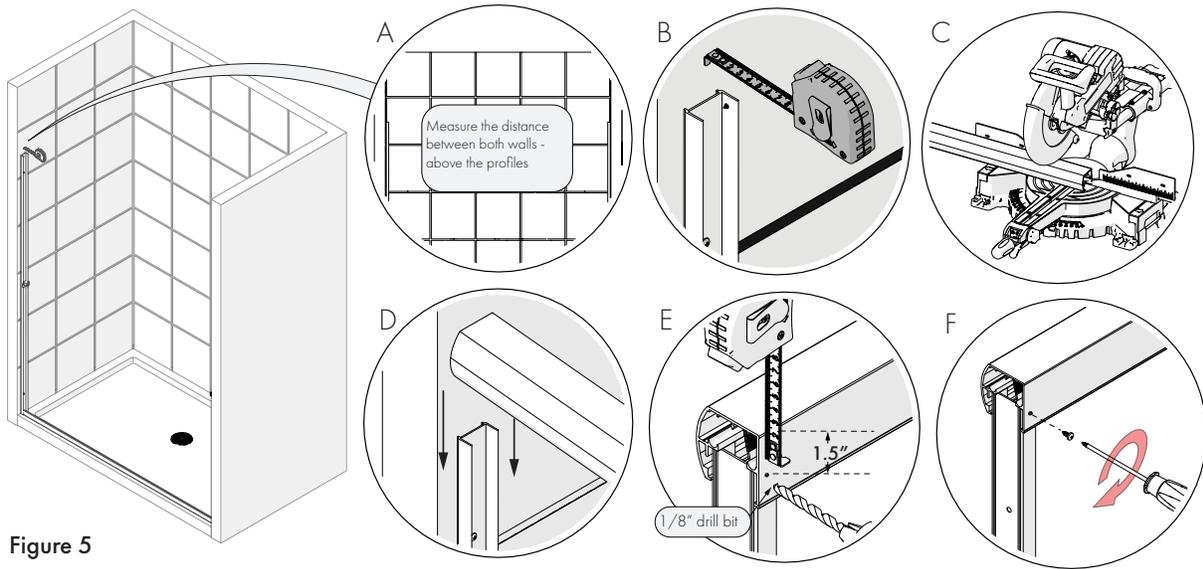


Figure 5

6. Install all four *Roller Wheels*– #11 at the center of the angled slots on top of both lites of *Door Glass*– #09 and #10 to enable adjustment (if needed). Use the *M4 10mm Wheel Bolts*– #12 to x1 secure the *Roller Wheels*– #11. See Figure 6A. Note the reverse direction of the *Roller Wheels*– #11 on the *Inside* and *Outside Door Glass*. See Figure 6B.

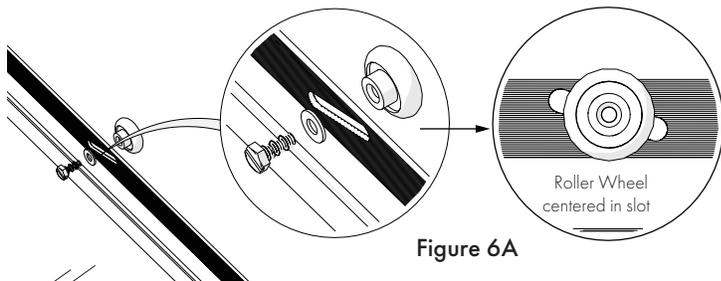


Figure 6A


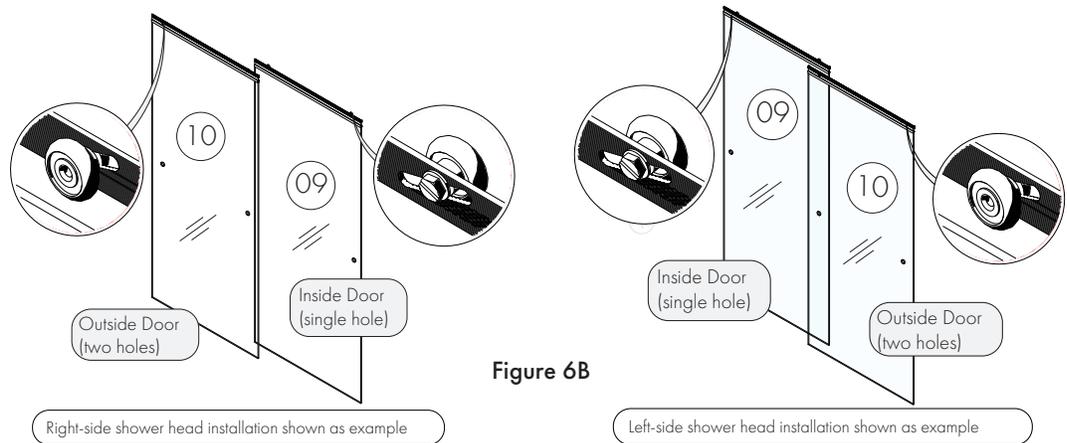


Figure 6B


7. **Be extremely careful of the glass edges when handling or moving the door glass.**  
Do not set the glass down on any hard surfaces. Use a glass suction cup when moving glass.

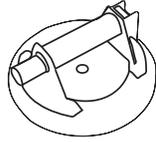

**IMPORTANT:** Place both glass doors in the rear of the shower opening, *Inside Door Glass*– #09 first, followed by the *Outside Door Glass*– #10.

Be careful to protect the edges of the glass. Cushion the underside of the glass and between the two glass doors. Be sure that both glass doors and *Roller Wheels*– #11 are oriented in the correct position for installation. See Figure 7. (Right-side shower head installation shown as example.)

Figure 7

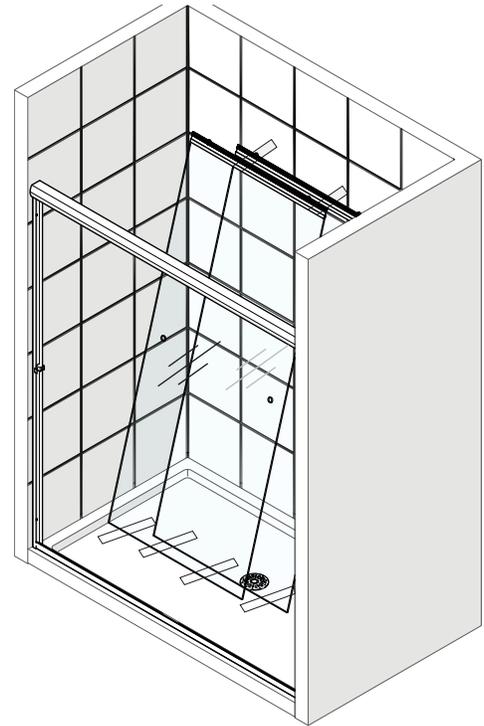

8. A. Install the *Outside Door Glass*– #10 first, from outside the shower. Face the *Roller Wheels*– #11 toward the outside of the shower and lift the Door Glass into the track in the *Guide Rail*– #08.
- B. Once the Roller Wheels are securely in the track, allow the Door Glass to hang plumb.
- Be extremely careful of the glass edges when handling or moving door glass.**  
Do not set the glass down on any hard surfaces. Use a glass suction cup when moving glass.


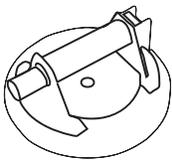


Figure 8

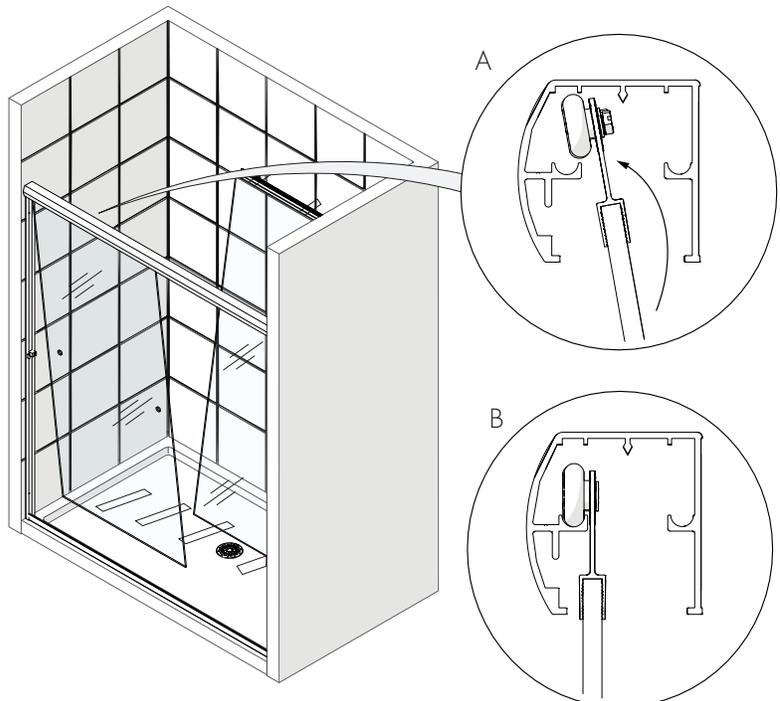

9. A. From inside the shower, lift the Inside Door Glass- #09 (with the Roller Wheels facing the rear of the shower) up into the Guide Rail- #08 at an inward angle and place the Roller Wheels- #11 into the inside track in the Guide Rail- #08.
- B. Allow both doors to hang freely.
- C. Slide them both to one side of the shower.

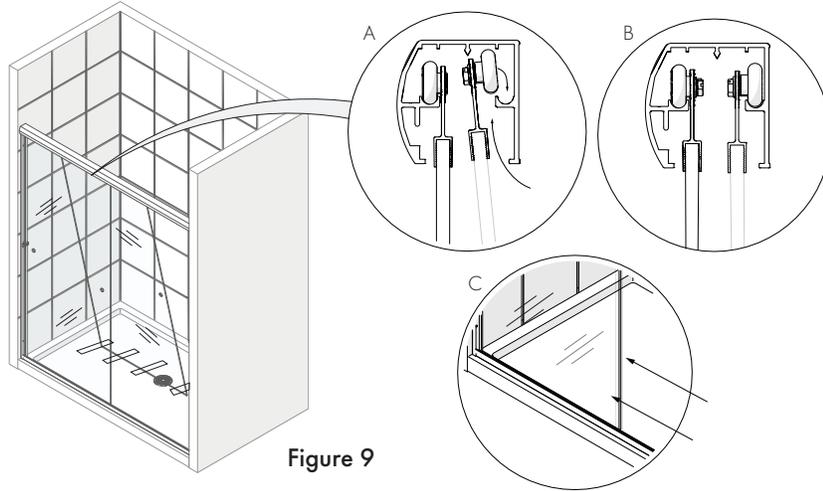


Figure 9

10. The Roller Wheels can be adjusted to better align the vertical edges of the Door Glass with the Wall Profiles if needed, to prevent leaks. In order to adjust either side of either door up or down, remove that door from the Guide Rail- #08. Use a helper and be careful to protect the glass edges. Adjusting a Roller Wheel up (higher in the slot) will lower the door glass, and adjusting a Roller Wheel down (lower in the slot) will raise the door glass.

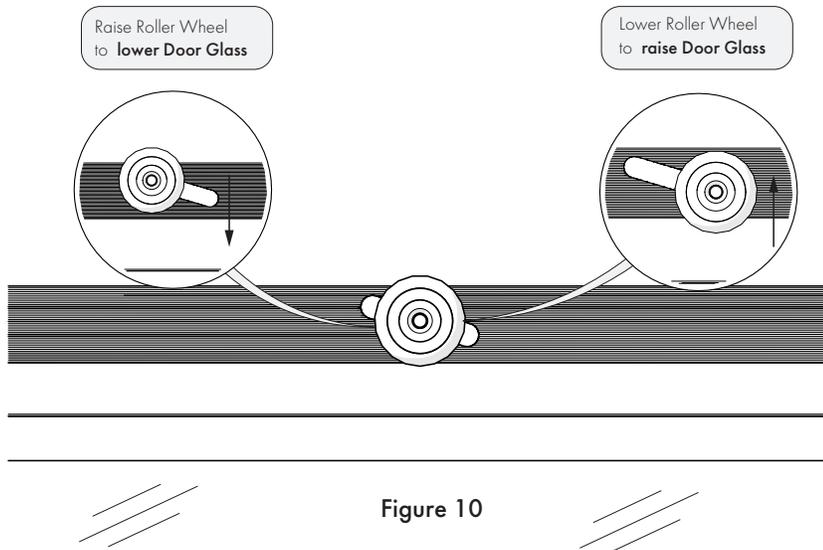


Figure 10

11. A. Place the *Center Guide*– #13 on the *Bottom Profile*– #08 as shown, to one side of both doors. Using a silicone gun, squirt a small drop of silicone in the middle of the bottom profile using a silicone gun.
- B. (1) Insert the front lip of the *Center Guide* into the slot on the inside of the *Bottom Profile* and snap the *Center Guide* down over the inside of the *Bottom Profile*. (2) Move the installed *Center Guide* to the center of the *Bottom Profile*, halfway beneath the door glass. As an option, drill a  $\text{Ø } 1/8''$  hole through the *Center Guide* and into the *Bottom Profile*. Install a #6 x 3/8" *Pan Head Screw*– #07. Fig 11
- C. Insert front lip in *Bottom Profile*, slide to center (over silicone).
- D. Snap down. (Right-side shower head installation shown as example.)

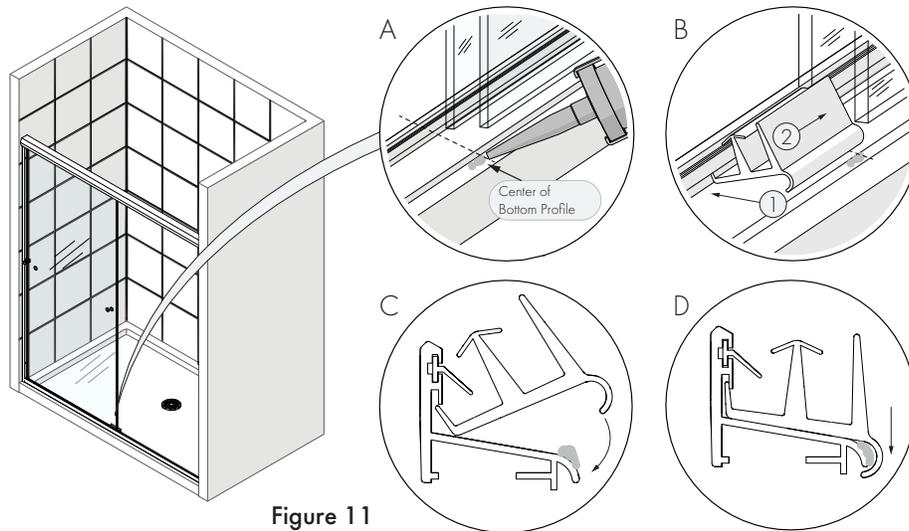


Figure 11

12. A. Install the *Towel Bar*– #15 through the two holes in the *Outside Door Glass*– #10, using gaskets on both sides of the glass. The provided Allen wrench can be inserted into the holes in the bolt heads for tightening. If the model being installed contains two *Towel Bars*– #15, install both of them now.
- B. If the model being installed contains one *Towel Bar*– #15 and one *Pull Handle*– #14 install the *Pull Handle* in the single hole in the *Inside Door Glass*– #09 with the knob facing the inside of the shower. The gaskets install on both sides of the glass. The provided Allen wrench can be inserted into the hole in the bolt head to help tighten the knob. (Right-side shower head installation shown as example.)

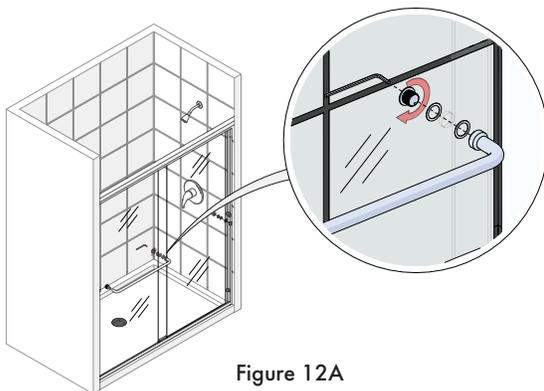


Figure 12A

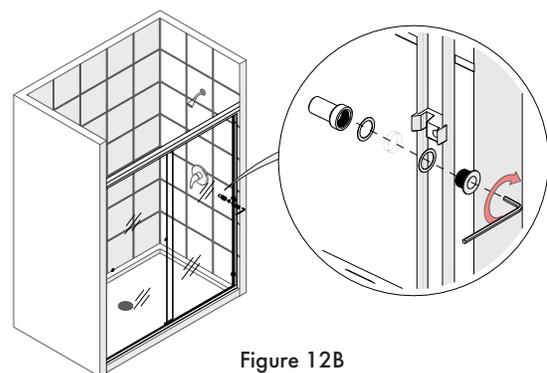


Figure 12B

- 13. Apply a quality, mold-resistant clear silicone to the entire interior perimeter of the shower door. Allow 24 hours for the silicone to set before using the shower.

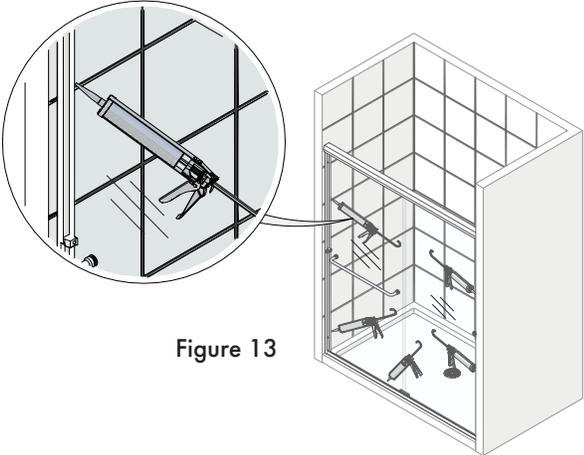


Figure 13

## Product Maintenance

### **Bases and Backwalls**

To ensure long-lasting life for your acrylic back walls: wipe them off after each use with a soft cloth. To clean the acrylic back walls use non-abrasive sprays or cream based cleaners. Avoid the use of aerosol spray cleaners. Never use abrasive cleansers, metal brushes or scrapers that could permanently scratch or dull the surface.

### **Glass**

To ensure long-lasting life for your glass shower products: wipe them off after each use with a soft cloth. Rinse and wipe off the glass using either a soft cloth or a squeegee to prevent soap buildup and water spots (Hard water can etch the surface of the glass over time if left to dry). To prevent scratching the surface: never use abrasive cleaners or cleaning products that contain scouring agents. Never use bristle brushes or abrasive sponges that may scratch the surface of the glass.

### **Hardware**

To ensure a long-lasting finish: wipe off all metal parts after each use with a soft cloth. Do not use abrasive cleaners or cleaning products containing ammonia, bleach or acid. If accidentally used, rinse the surface as soon as possible to prevent damage to the finish (peeling or corrosion). After cleaning the polished finishes, rinse thoroughly and wipe dry with a soft, clean cloth. Clean stainless steel surfaces at least once a week. When applying stainless steel cleaner or polish to stainless steel hardware, work with the grain (not across the grain). Never use an abrasive sponge or cloth, steel wool or wired brush as these may permanently scratch the surfaces.

To maximize the life of your door, it is important to regularly inspect the glass and other hardware for misalignment, proper attachment, and/or damage. Contact the manufacturer with any questions or concerns.

### **Maintenance Checklist**

- ▲ Check that the unit is stable, operates smoothly and that the installation is secure.
- ▲ Confirm that all screws/bolts are tight.
- ▲ Check door glass for smooth operation. Adjust height of door glass if needed (See Step 11).
- ▲ Inspect exposed and concealed glass edges for damage (damaged glass must be replaced!)
- ▲ Inspect silicone caulk for gaps. Replace silicone as necessary to prevent water leakage.

## Troubleshooting

Problem/Symptom	Suggested Solution	Page(s)
Missing Parts	<ul style="list-style-type: none"> <li>• Check all shipping/packaging material for missing parts/components.</li> <li>• If not found, contact the manufacturer to order factory part replacement.</li> </ul>	7
Water Leakage	<ul style="list-style-type: none"> <li>• Check that the Inside Door Glass closes against the shower head side of the shower.</li> <li>• Check that the vinyl insert in the bottom rail isn't warped or bunched</li> <li>• Check that a good quality, mold-resistant silicone has been used around the entire interior perimeter of the shower door.</li> </ul>	13, 15
Door Glass rubbing on threshold	<ul style="list-style-type: none"> <li>• Check that threshold is level.</li> <li>• Check that roller wheels are tight and secure. Carefully remove Door Glass with a helper and adjust Roller Wheels if necessary.</li> </ul>	6, 13
Door Glass not closing evenly with wall profiles	<ul style="list-style-type: none"> <li>• Carefully remove the Door Glass with a helper and adjust one or both Roller Wheels to align the edge of the Door Glass with the Wall Profile.</li> </ul>	12, 13
Door Glass not tracking smoothly through Center Guide	<ul style="list-style-type: none"> <li>• Check that the Center Guide is installed correctly. If the Center Guide is moving, see instructions to secure the Center Guide to the Bottom Rail with a screw.</li> </ul>	14
Door Glass not meeting bumpers correctly	<ul style="list-style-type: none"> <li>• Check that all three Bumpers are installed correctly and are installed on the correct sides of the shower opening.</li> </ul>	9
Outside door difficult to move	<ul style="list-style-type: none"> <li>• Check to make sure the seal is not pinched. Push the seal downward to create an even seal with the glass.</li> </ul>	14
Door Glass binds against Vinyl Insert in the Bottom Rail	<ul style="list-style-type: none"> <li>• Check the distance between front of either Door Glass and the bottom rail, then move the Door Glass to the other side of the shower and check the same measurement. If different, the Wall Profiles may need to be adjusted or reinstalled.</li> </ul>	8, 13

**TIP:** Prior to contacting the manufacturer, please have the following information readily available:

- Purchase Order Information
- Name, PO Number, Dealer/Vendor Name, etc.
- SKU/Model Number (see Inside Cover Page)

# **6030 4-PIECE SHOWER**

## INSTALLATION GUIDE

Shower Door

