



Manufactured by:  
Backyard Discovery  
3305 Airport Drive, Pittsburg, KS 66762  
800-856-4445

Basepoint Business Centre: Rivermead Drive, Westlea, Swindon SN5 7EX Phone: 0800-118-2476  
J.P. Coenstraat 7, The Bridge, The Hague, 2595 WP, Netherlands Phone: 08005678990

# TIMBERLAKE

## PLAYHOUSE

MODEL: # 65314



### WARNING

#### Adult Assembly Required.

The assembly manual must be retained since it contains important information  
Not suitable for children under two years due to sharp points and small parts.  
**FOR DOMESTIC USE ONLY. INTENDED FOR OUTDOOR USE.**



Please visit [www.backyarddiscovery.com](http://www.backyarddiscovery.com)

For the most up to date assembly manual, to register your product, or to order replacement parts

*Para obtener instrucciones en español, visite [www.backyarddiscovery.com](http://www.backyarddiscovery.com)*



**EASY STEP-BY-STEP  
3D INTERACTIVE INSTRUCTIONS**  
DOWNLOAD THE FREE APP



# SAFETY AND ASSEMBLY INFORMATION

SELECTING THE CORRECT LOCATION FOR YOUR PLAY PRODUCT IS IMPORTANT FOR YOUR CHILDREN'S SAFETY AND THE PRODUCT'S LONGEVITY

## Dimensions:

- The Timberlake has one layout option.

Layout Ground Dimension  
3'-6" x 3'-10 11/16" x 56" Tall

Safe Play Area\*  
15'-6" x 15'-10 3/4"

\*Level Ground Surface - See below


## General Information:

Your set has been designed and engineered for children only and for residential use only. A maximum of 150 lbs. per child is recommended for play activities designed for individual use. A maximum of 120 lbs. per child is recommended for play activities designed for multiple child use. A maximum of 6 children is recommended for this unit.

## Safe Play Area:

- The safe play area refers to a zone extending 6' beyond the play product on all sides, including the space above the play product.
- The ground surface **must be level**. Installing your play product on sloping ground can cause it to lean or "rack". This leaning puts additional stress on all connections and joints and in time will cause those connections to loosen and fail.
- The safe play area must be free of all structures, landscaping, trees and branches, rocks, wires, and other obstacles to safe play. Children can be seriously injured running or swinging into these obstacles.
- Remove all tripping hazards from the safe play area. Tripping hazards include: roots, stumps, rocks, landscaping, sprinkler heads, railroad ties, plumbing and electrical connections.
- Play product needs to be installed on solid ground.


# SAFE PLAY AREA DIAGRAM

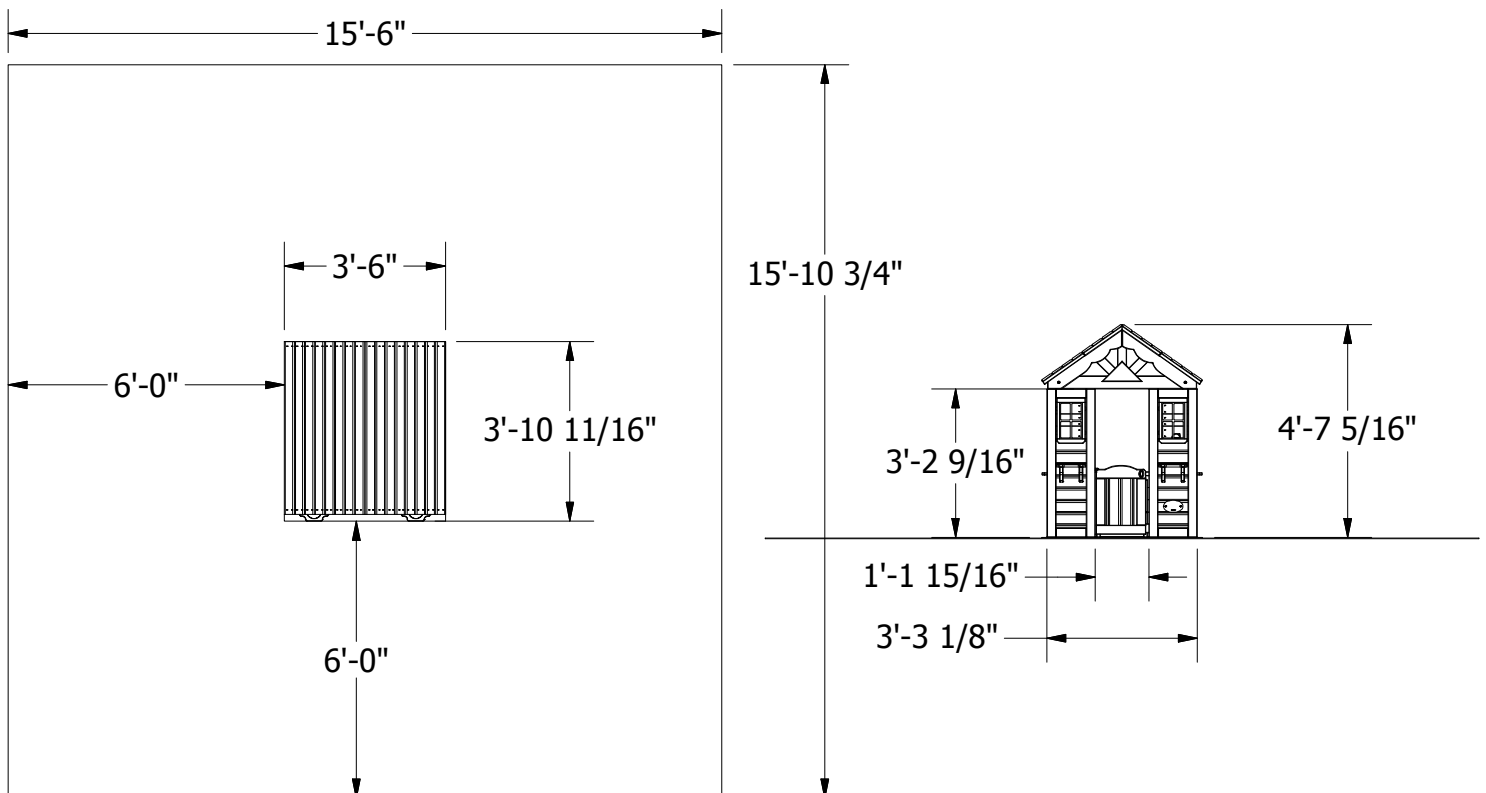


# Parts Identification

## Wood Components


(NOT TO SCALE)

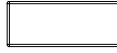

- (1) **J1 - COUNTER TOP SUPPORT - W4L04753**  
1"x2 3/8"x5 7/8" (24x60x150)

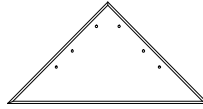


- (2) **K1 - TRIANGLE SUNBURST - W4L04871**  
5/8"x5 1/4"x10 3/8" (16x134x265)

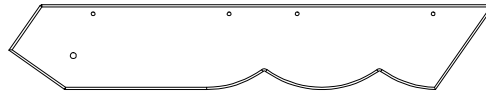

- (4) **L1 - GABLE BOARD - W4L04755**  
5/8"x4 3/8"x25 3/8" (16x112x643)



- (2) **M1 - COUNTER TOP - W4L04754**  
5/8"x3 3/8"x23 5/8" (16x86x600)

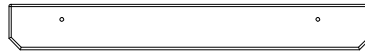

- (2) **N1 - SIDE WINDOW SHELF - W4L04751**  
5/8"x2 3/8"x18 7/8" (16x60x479)



- (1) **N2 - REAR WINDOW SHELF - W4L04760**  
5/8"x2 3/8"x19 1/8" (16x60x485)




- (1) **N3 - DOOR STOP - W4L04761**  
5/8"x2 3/8"x3 7/8" (16x60x100)




- (8) **N4 - TIE STRAP - W102424**  
5/8"x2"x3 1/8" (16x50x80)



- (2) **N5 - SUNBURST LEG - W4L04872**  
5/8"x2 3/8"x10 1/4" (16x60x260)

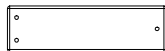

- (4) **N6 - SUNBURST LEG - W4L04873**  
5/8"x2 3/8"x8 1/4" (16x60x210)

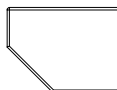


- (1) **Q1 - COUNTER TOP SUPPORT - W4L04752**  
1"x4 3/8"x5 7/8" (24x112x150)


# Parts Identification

## Wood Components


(NOT TO SCALE)

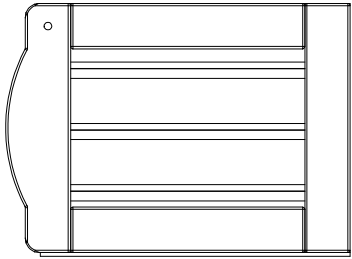

(1) DP1 - DOOR ASSEMBLY - W2A01511

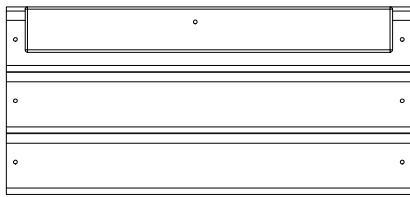


(1) WP7 - UPPER REAR CENTER WALL  
- W2A01522

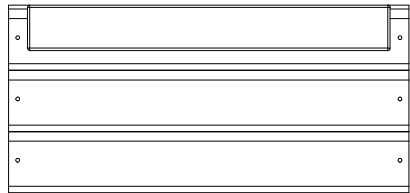


(2) WP6 - UPPER CENTER WALL  
- W2A01510




(2) WP5 - LOWER CENTER WALL  
- W2A01509

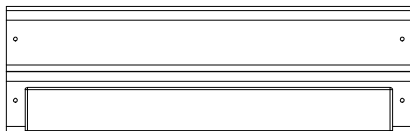


(1) WP8 - LOWER REAR CENTER WALL  
- W2A01523

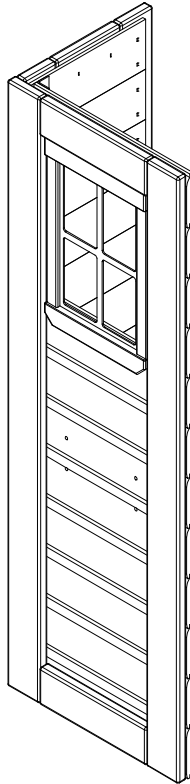


(1) WP1 - LEFT FRONT CORNER PANEL  
- W2A01524

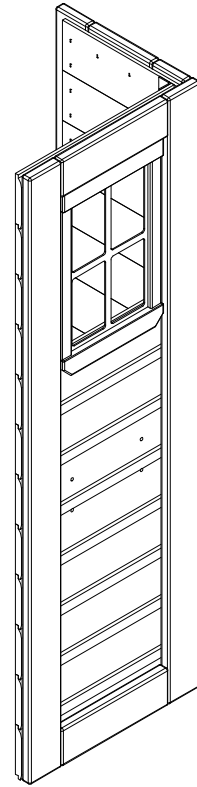

(1) WP2 - RIGHT FRONT CORNER PANEL  
- W2A01525

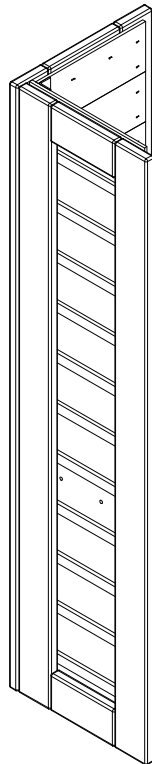


(1) WP3 - LEFT REAR CORNER PANEL  
- W2A01526

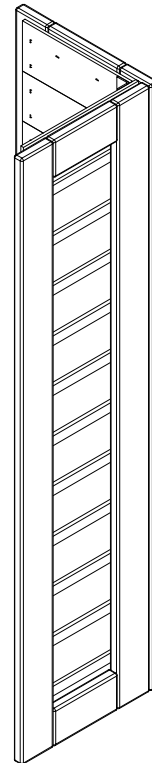


(1) WP4 - RIGHT REAR CORNER PANEL  
- W2A01527


**Parts Identification**  
**Wood Components**  
**(NOT TO SCALE)**

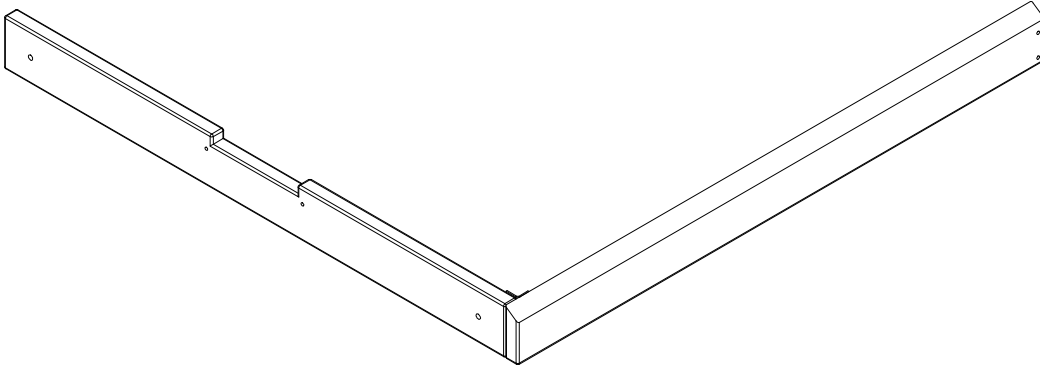

(2) WP9 - HEADER ASSEMBLY - W2A01539

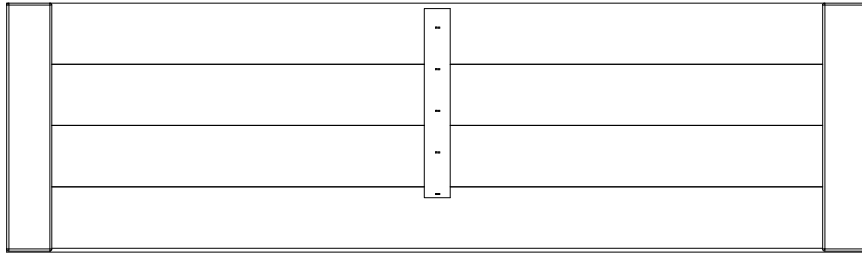

(2) RP1 - LOWER ROOF PANEL - W2A01513

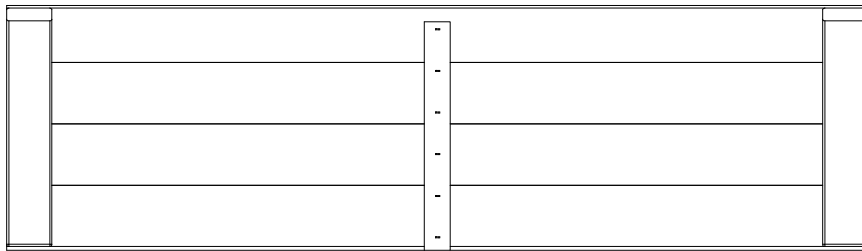

(2) RP2 - UPPER ROOF PANEL - W2A01514

# Parts Identification

## Hardware



(2) SCREW PFH 8x1/2 - H100124



(41) SCREW PFH 8x1 - H100085




(33) SCREW PFH 8x1 1/8 - H100088



(51) SCREW PFH 8x1 1/4 - H100087




(24) SCREW PFH 8x1 1/2 - H100086

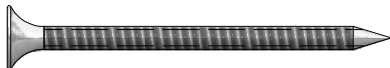

(1) SCREW PFH 8x2 - H100111



(4) SCREW PFH 8x2 1/2 - H100090

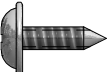


(2) SCREW PWH 8x7/16 - H100361




(4) SCREW PWH 8x5/8 - H100128




(9) SCREW PWH 8x3/4 - H100070

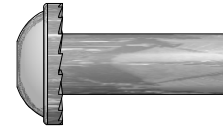


(4) NUT BARREL WH 1/4x7/8 - H100140

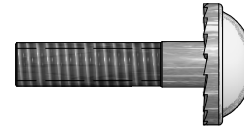

(4) BOLT WH 1/4x1 - H100137

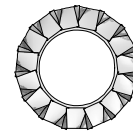


(4) WASHER LOCK EXT 8x15 - H100139

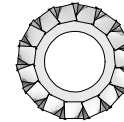

(4) WASHER LOCK EXT 6x15 - H100138

9220119  
(1) | TOOL KIT

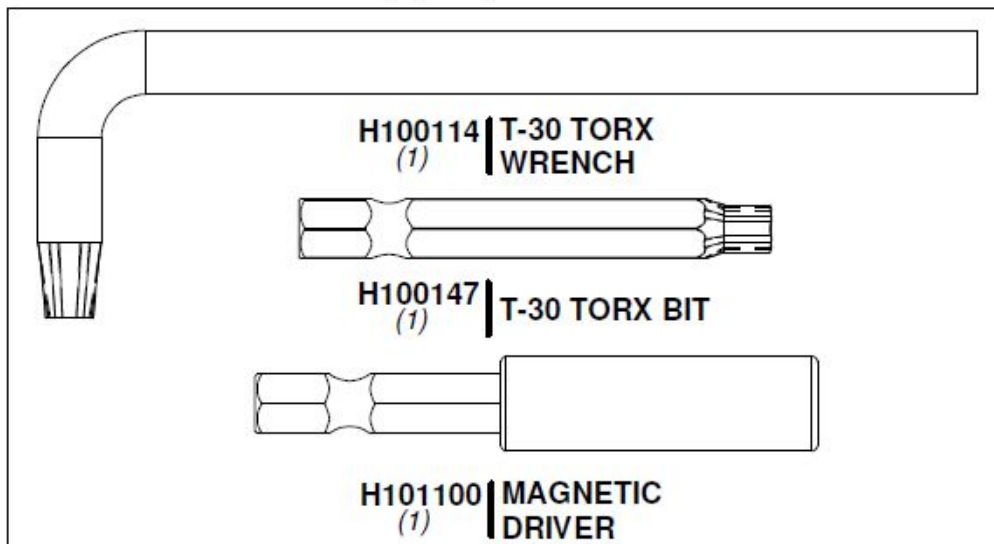


# Parts Identification

## Accessories


(NOT TO SCALE)




(1) PHONE KIT - A100132

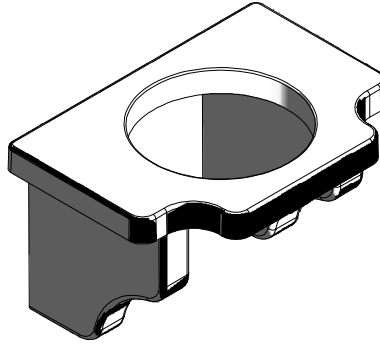


(2) FLOWER POT HOLDER - A6P00023

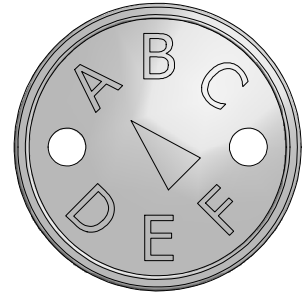


(1) "A" REVISION TAG - A100314

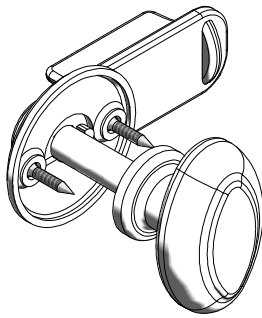

(1) KNOB KIT - A6P00020

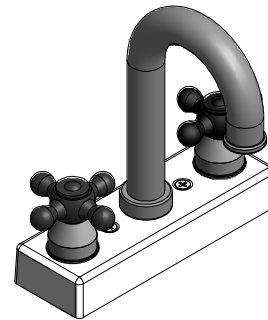


(1) FAUCET KIT - A6P00024

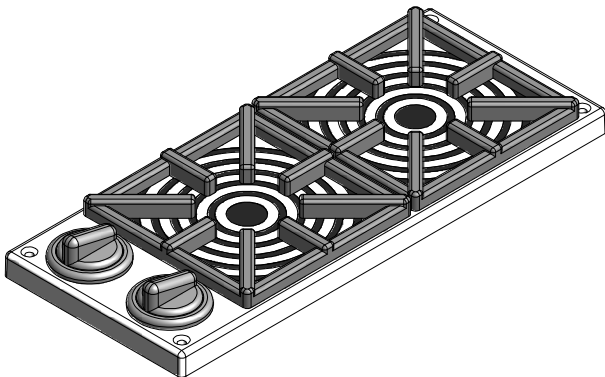


(1) STOVE KIT - A6P00025



(1) BYD ID TAG (MEDIUM) AGES 2 TO 10 - A4M00528

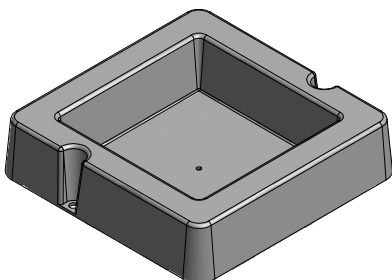

(1) SURFACE MOUNT BASIN - A6P00032

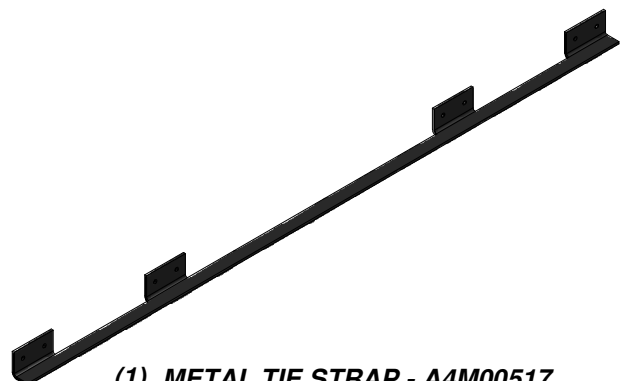

(1) METAL TIE STRAP - A4M00517

# PRE-ASSEMBLY STEP 1 - SORTING PARTS


It is critical for ease of assembly that you take the time to sort and organize the wood and hardware.

---

## WOOD PARTS:

- Organize wood parts by the three-digit, alpha-numeric number stamped on each board (ex. P01).
- If there are multiple boards with the same stamped number, stack those pieces together.
- Stamps can be found on the flat surface of the boards or on the end of the boards.
- Allow yourself plenty of room - the wood pieces can take up a significant amount of space.


**NOTE: CARTONS ARE NOT ORGANIZED BY BOARD NUMBER.**

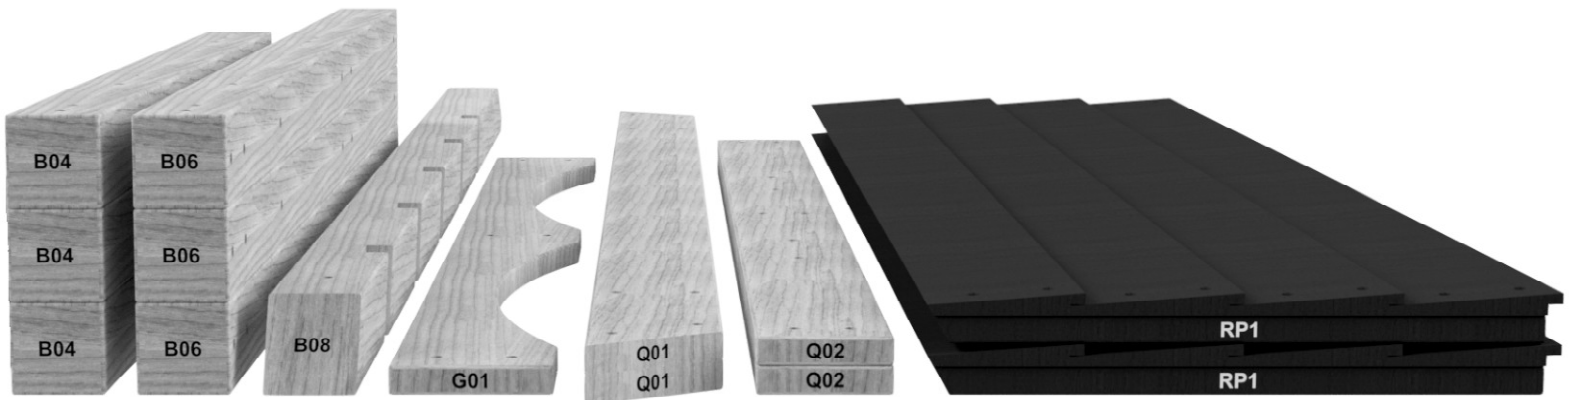

---

## HARDWARE PARTS:

- We recommend that you have a separate table to organize the hardware.
- Hardware bags are printed with a seven-digit, alpha-numeric part number.
- You can organize your hardware by part number or group by hardware type (i.e. bolts, nuts, etc.).
- During assembly you only need to reference the last four digits of the number.

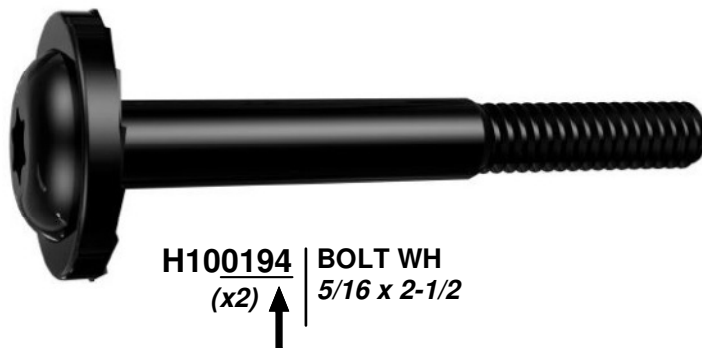

# PRE-ASSEMBLY STEP 2 - TOOLS REQUIRED



Cordless Drill or Electric Drill



Drill Attachments:  
Phillips Head



1/8", 3/16", 3/8" & 7/16"  
Drill Bits



Phillips Screw Driver



Open End Wrenches 1/2" & 9/16"



3/8" Drive Ratchet, 1/2" &  
9/16" STD Sockets 1/2" & 9/16" Deep  
Sockets




Claw Hammer



Rubber Mallet - Optional



Tape Measure

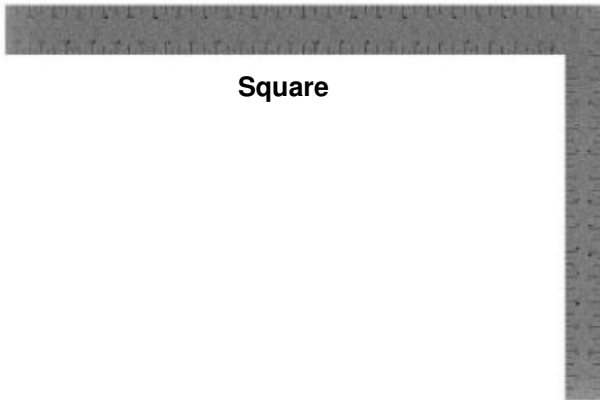

Square




Level 24"

# PRE-ASSEMBLY STEP 3 - CHOOSE YOUR ASSEMBLY METHOD

There are several types of assembly instructions available to you.

1. Printed Assembly Manual included with your set
2. BILT APP - 3D interactive instructions
3. Combination of the Printed Manual and BILT APP (Note: Step numbers can differ between the two methods)

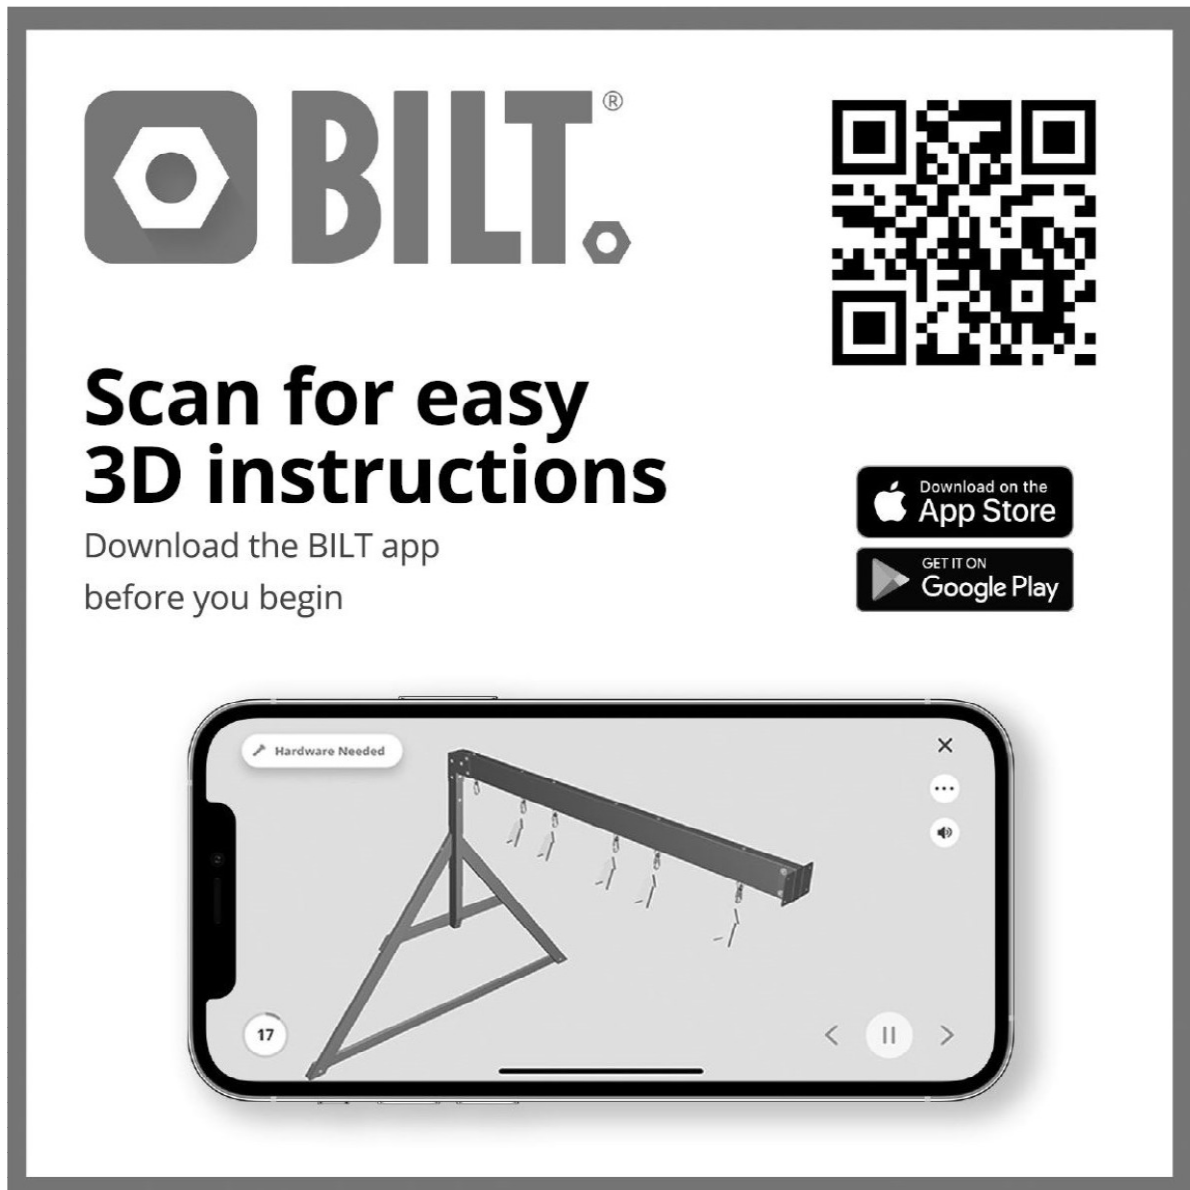

The advertisement features the BILT logo on the left, a QR code on the right, and a central text area. Below the text are two app store download buttons and a smartphone mockup showing the app's interface. The smartphone screen displays a 3D assembly diagram of a metal frame with a horizontal beam and hanging components. The interface includes a 'Hardware Needed' label, a page number '17', and navigation controls like back, play/pause, and forward buttons.

**BILT.**<sup>®</sup>

**Scan for easy  
3D instructions**

Download the BILT app  
before you begin

Download on the  
App Store


GET IT ON  
Google Play


Hardware Needed

17


# Playhouse Assembly

**STEP 1:**  
STAND THE (4) CORNER WALL ASSEMBLIES AS SHOWN BELOW.

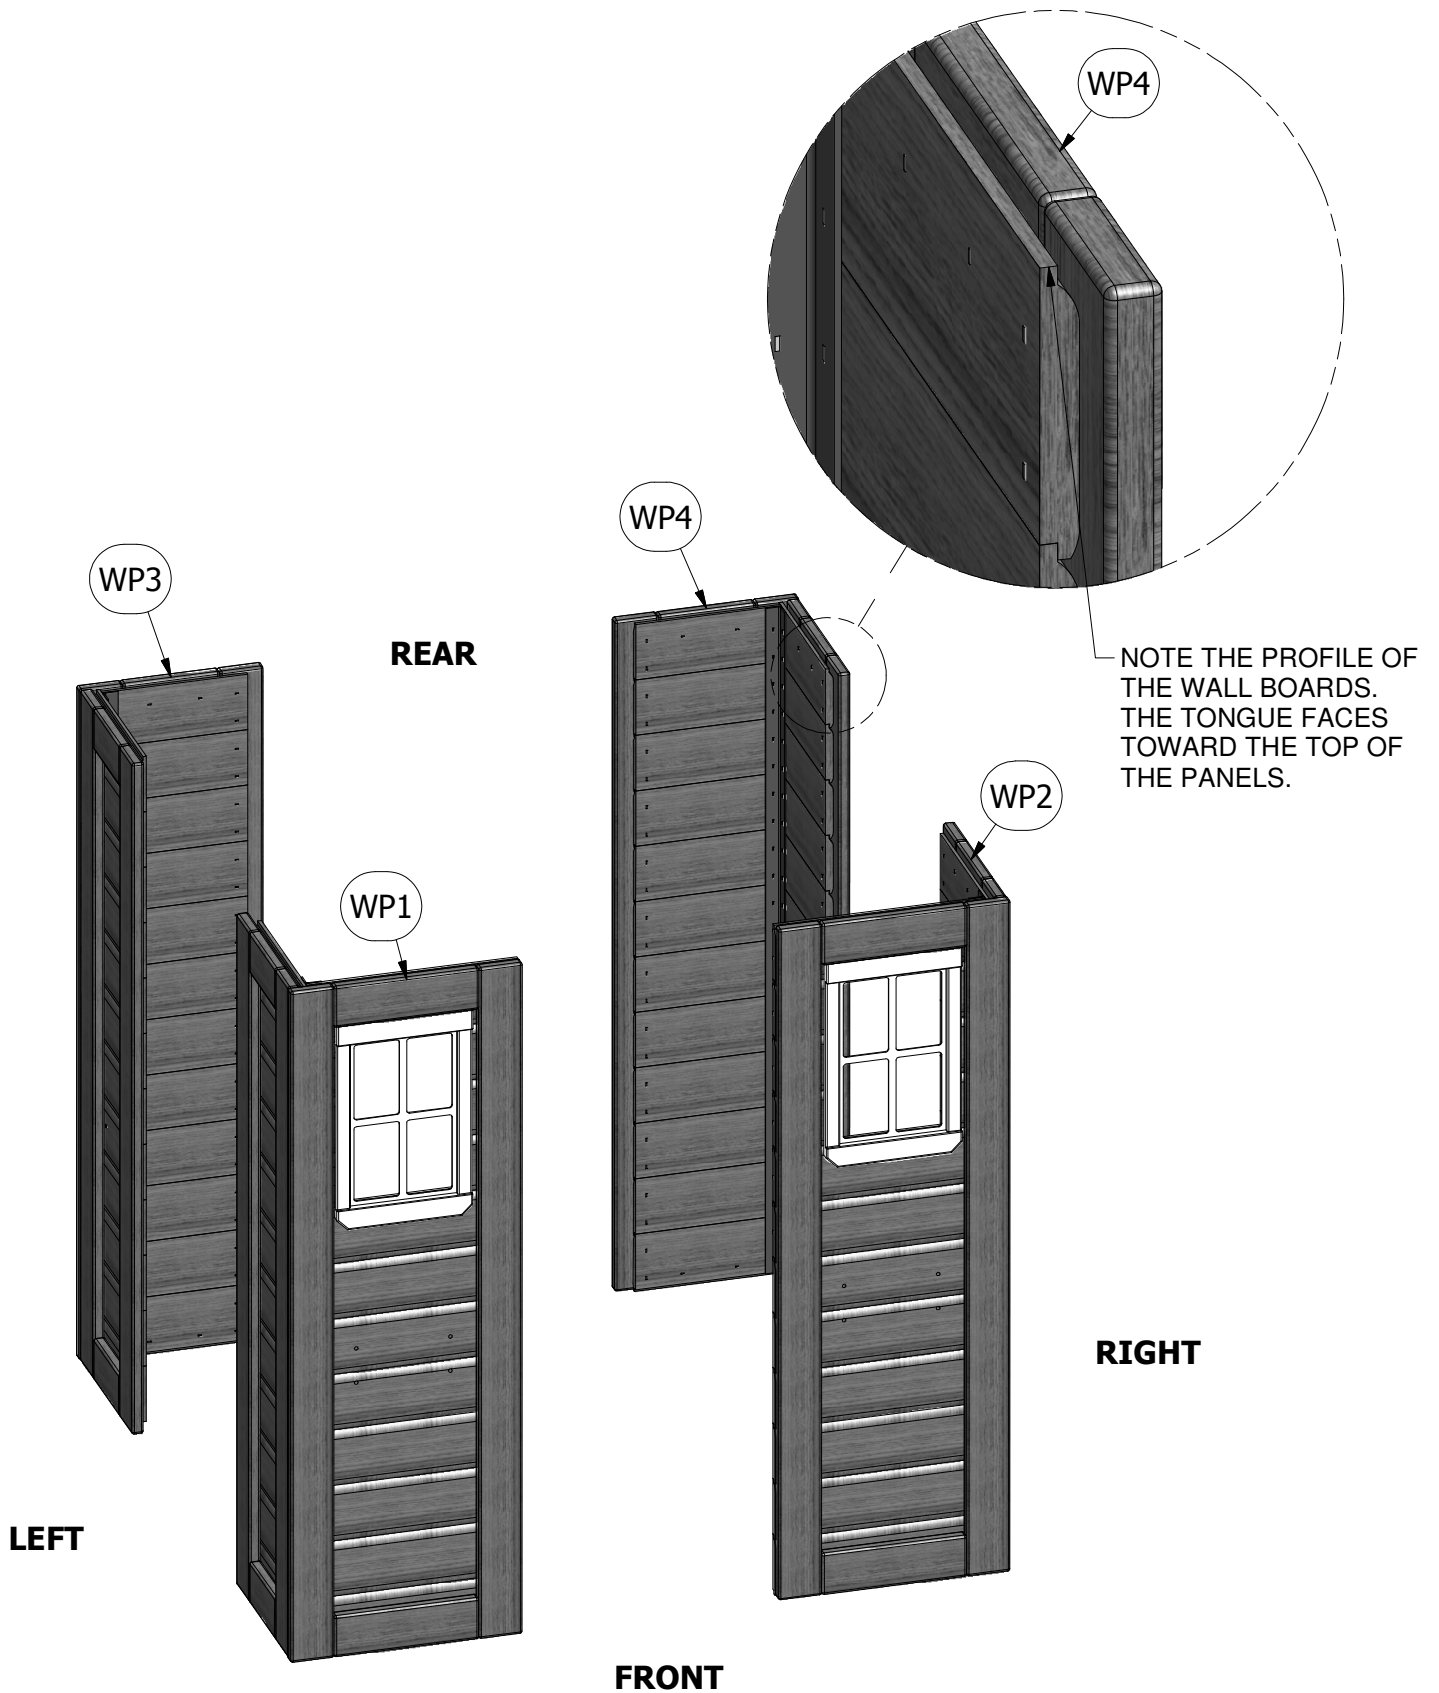


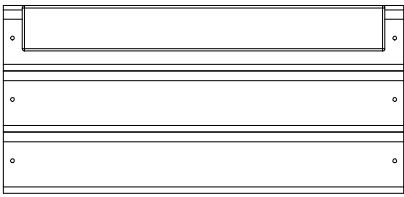



(1) WP6 - UPPER CENTER WALL  
- W2A01510

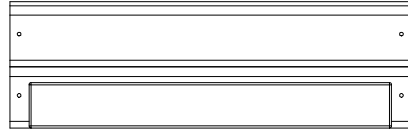


(1) WP5 - LOWER CENTER WALL  
- W2A01509

**STEP 2:**

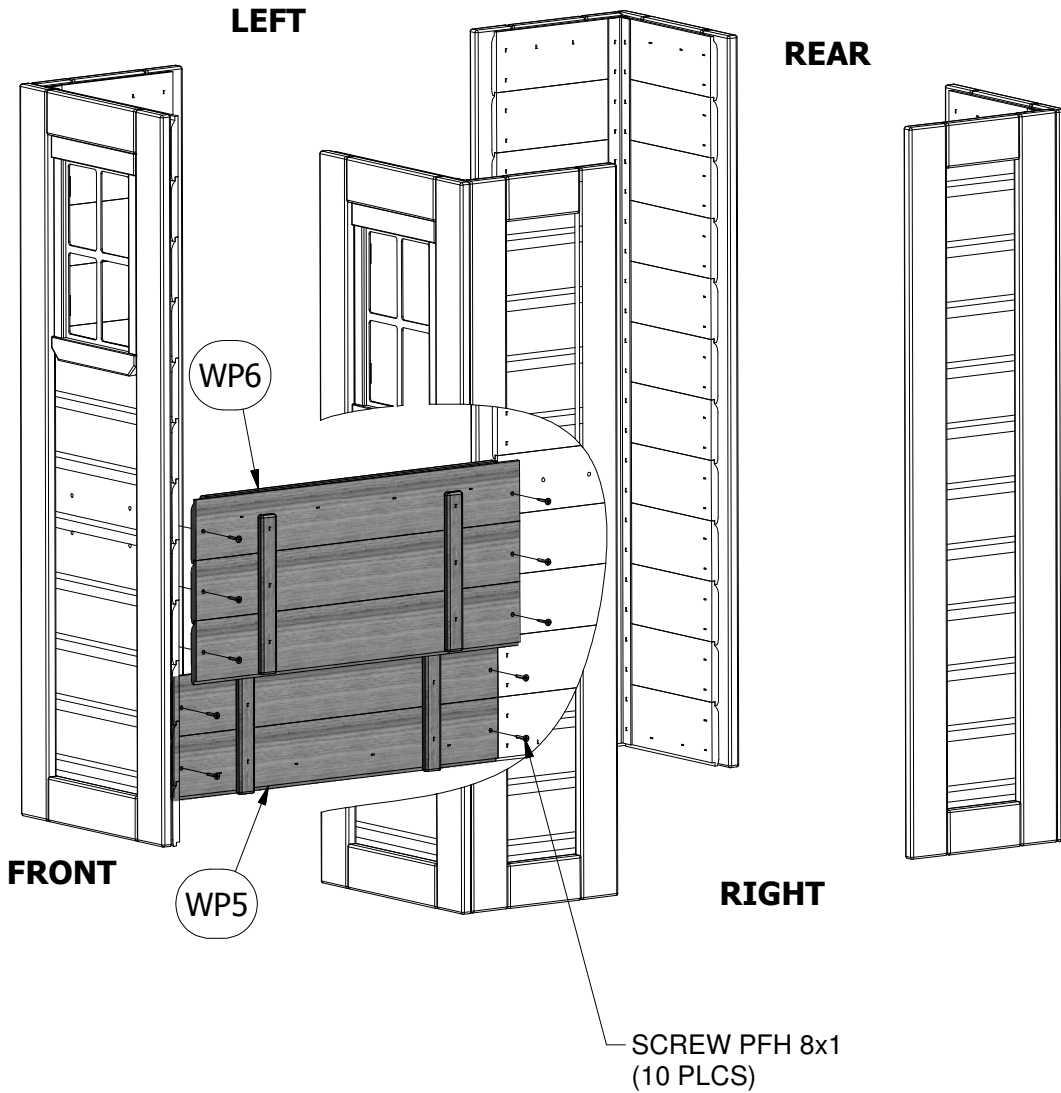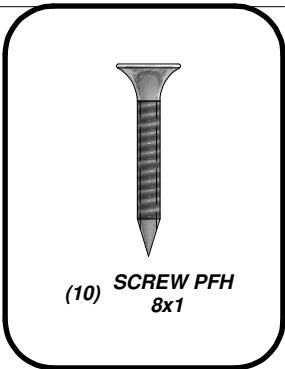


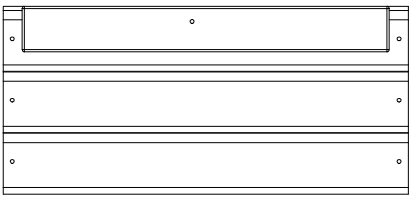



(1) WP7 - UPPER REAR CENTER WALL  
- W2A01522

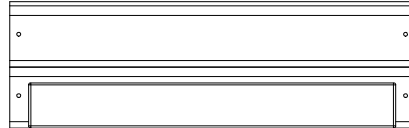


(1) WP8 - LOWER REAR CENTER WALL  
- W2A01523

**STEP 3:**

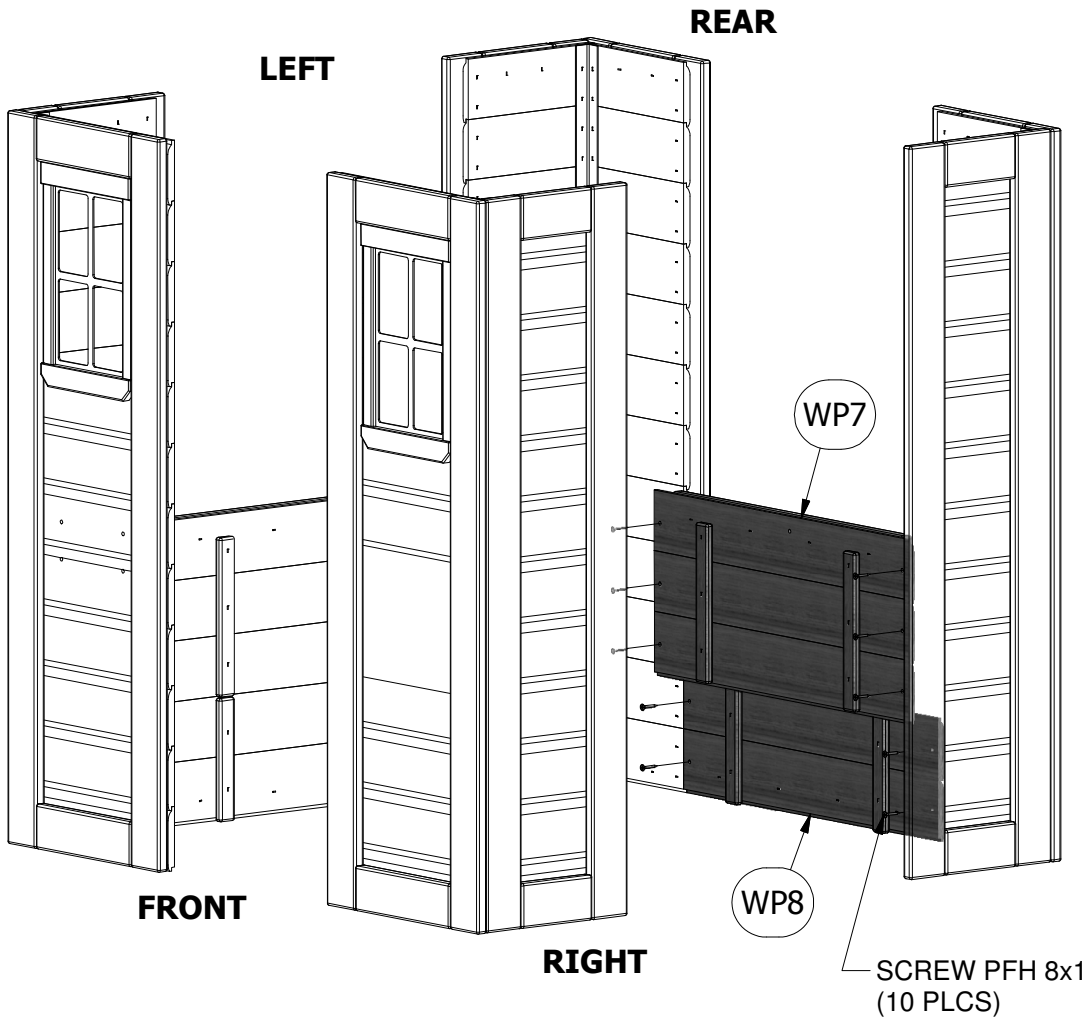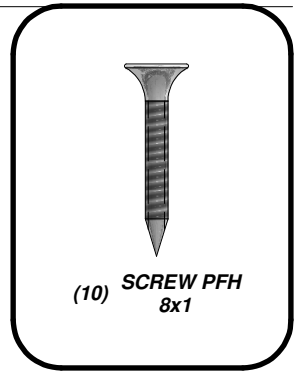


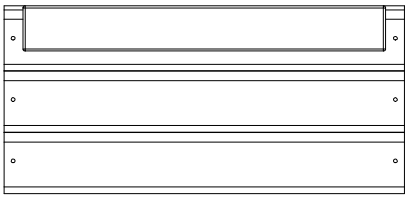



(1) WP6 - UPPER CENTER WALL  
- W2A01510

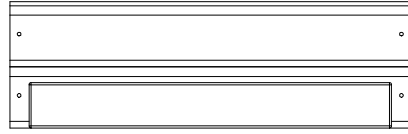

(1) WP5 - LOWER CENTER WALL  
- W2A01509



**STEP 4:**

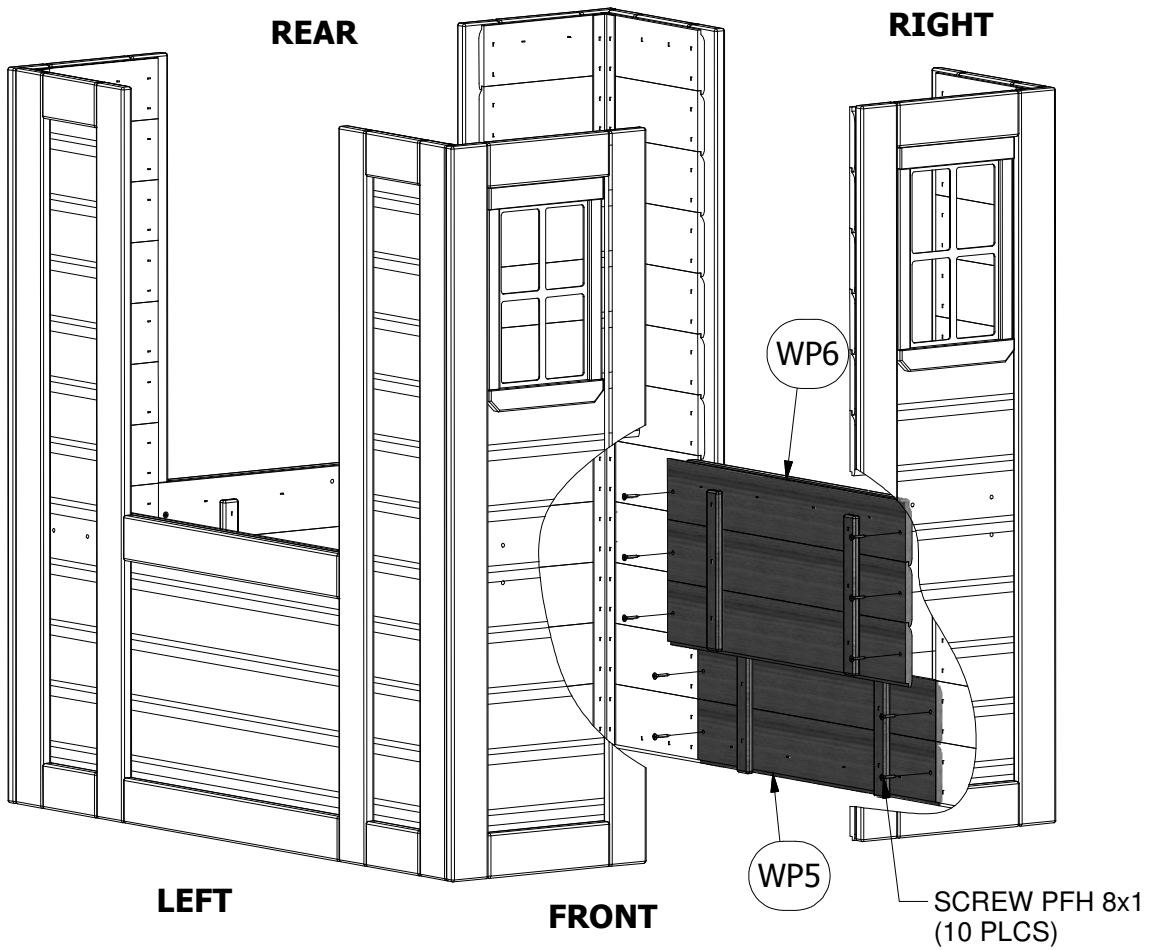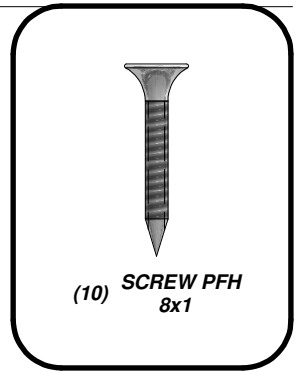

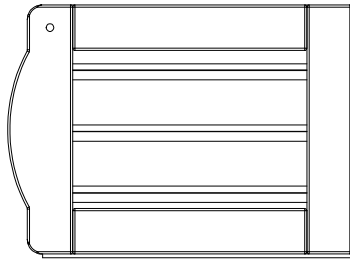

(1) DP1 - DOOR ASSEMBLY - W2A01511



**STEP 5:**

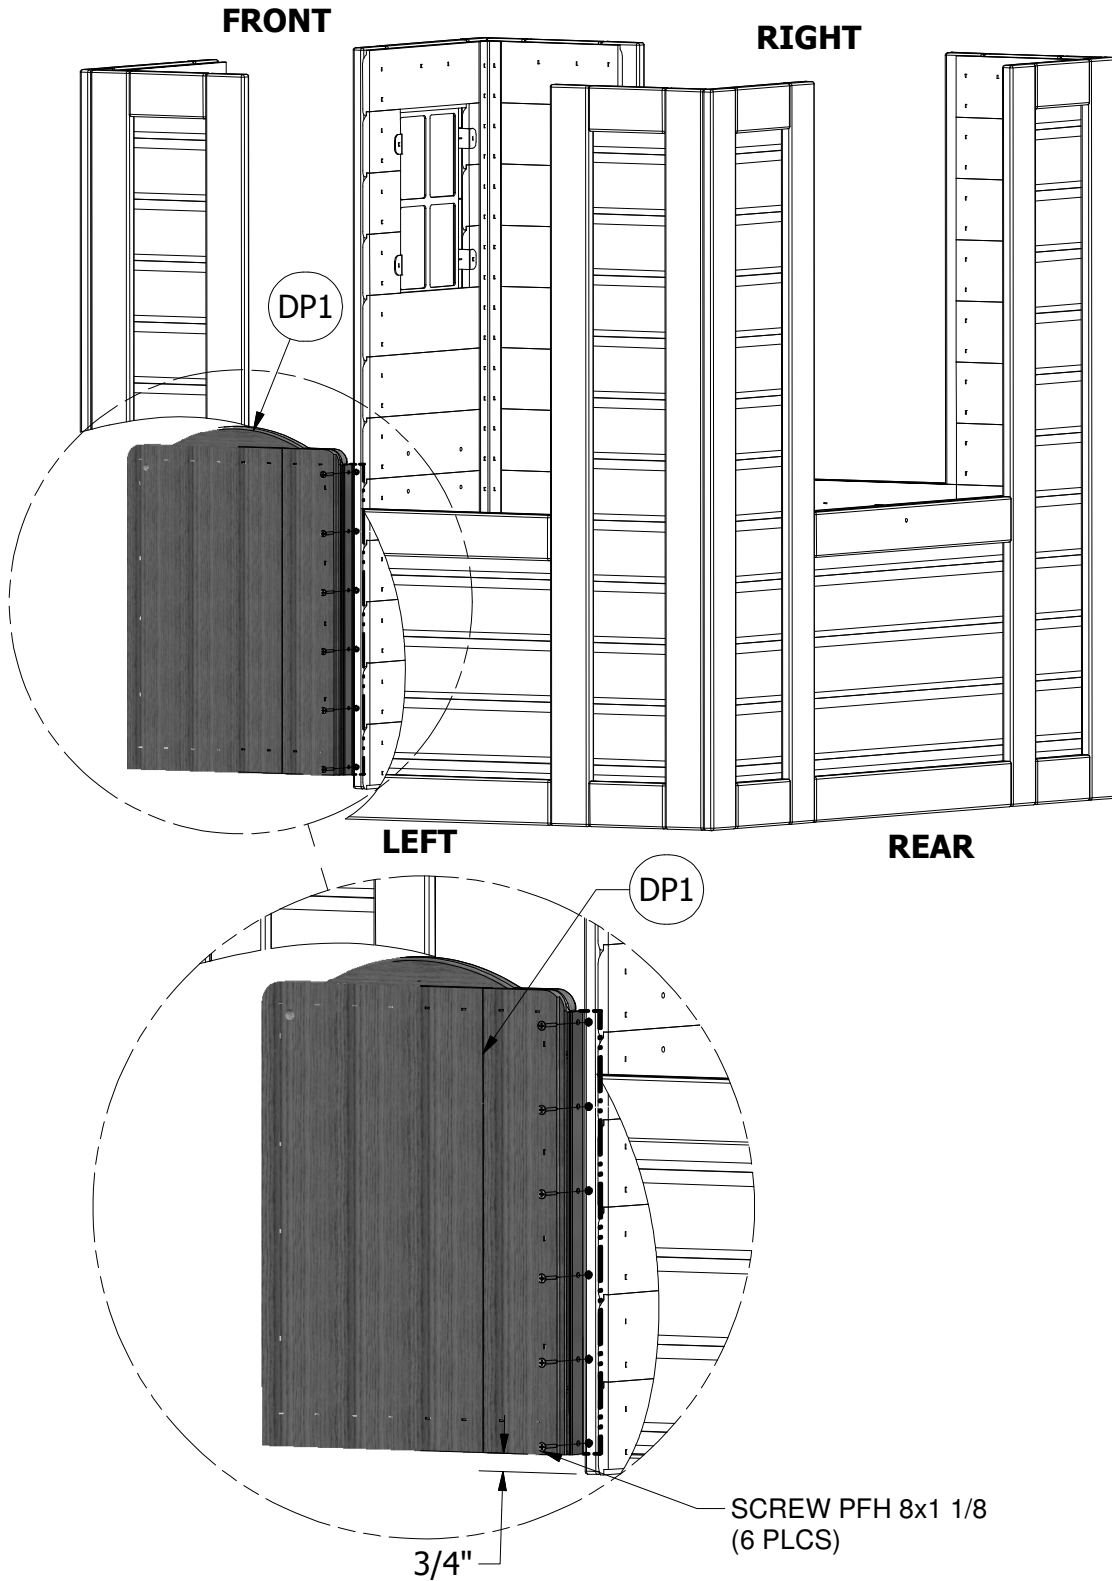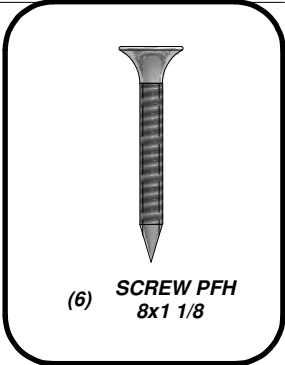




(1) METAL TIE STRAP - A4M00517



STEP 6:

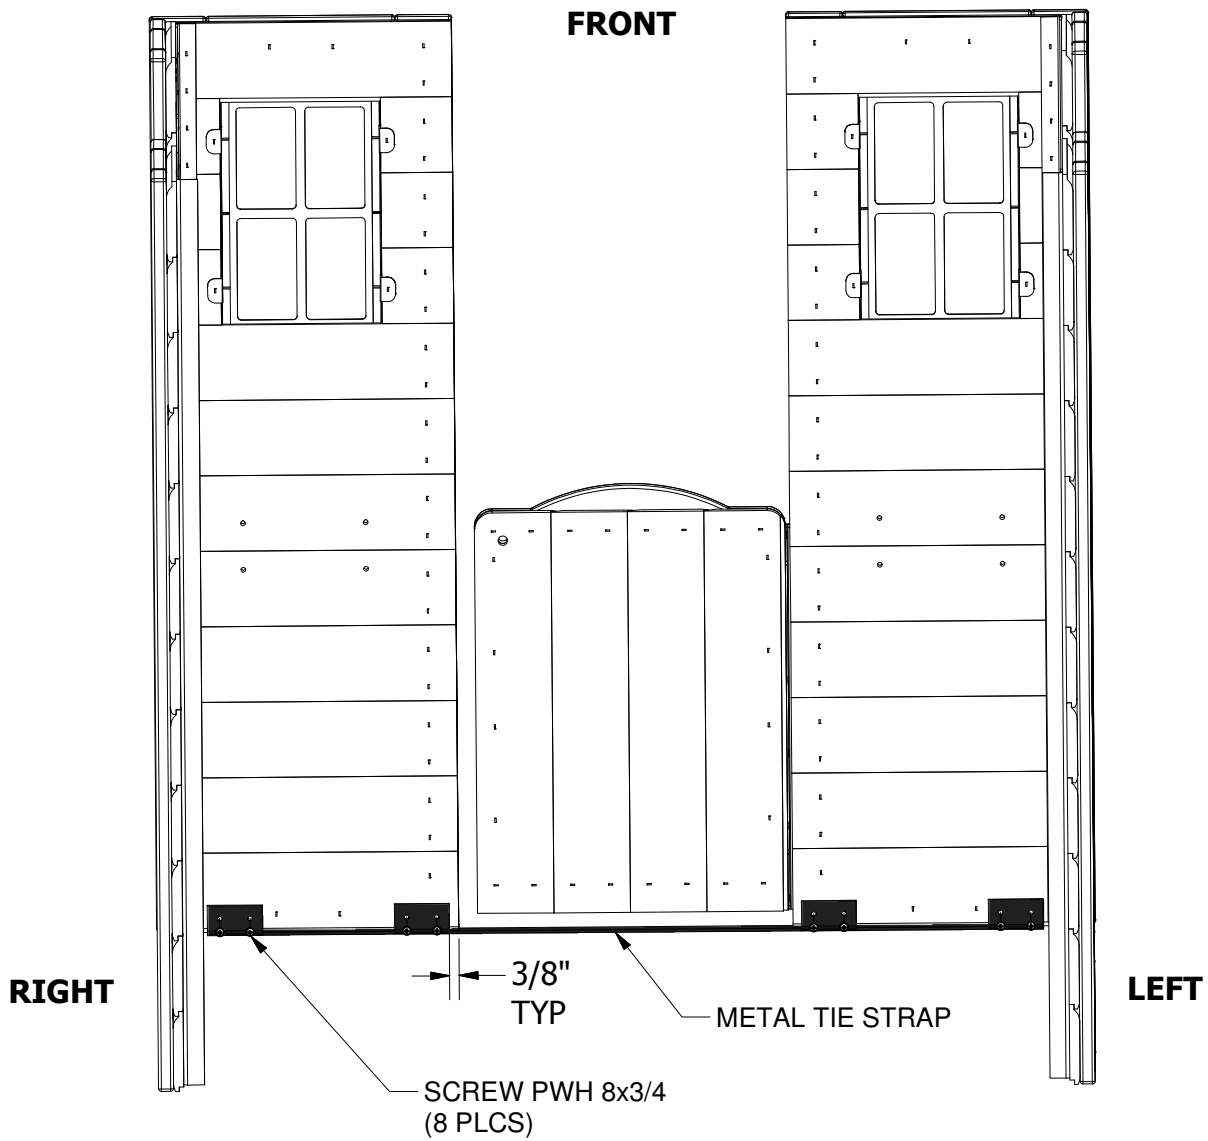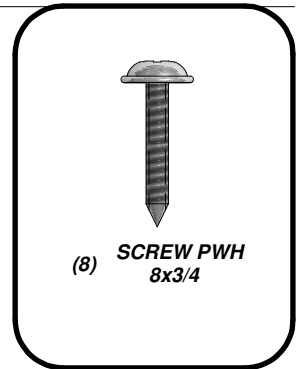


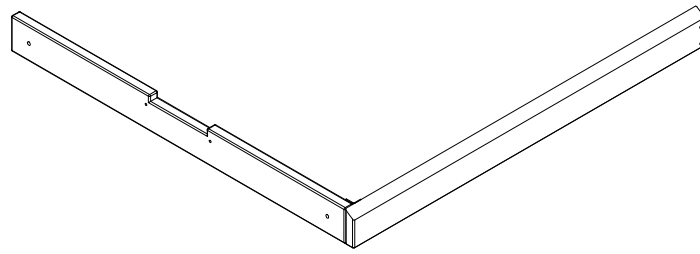

(2) WP9 - HEADER ASSEMBLY - W2A01512

**STEP 7:**


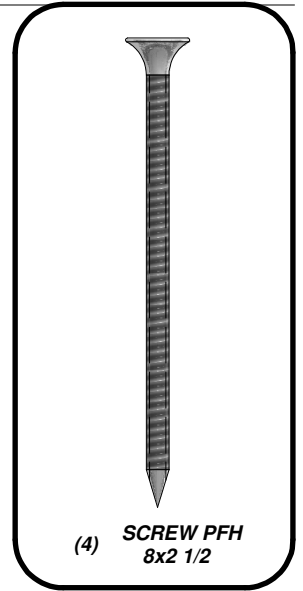
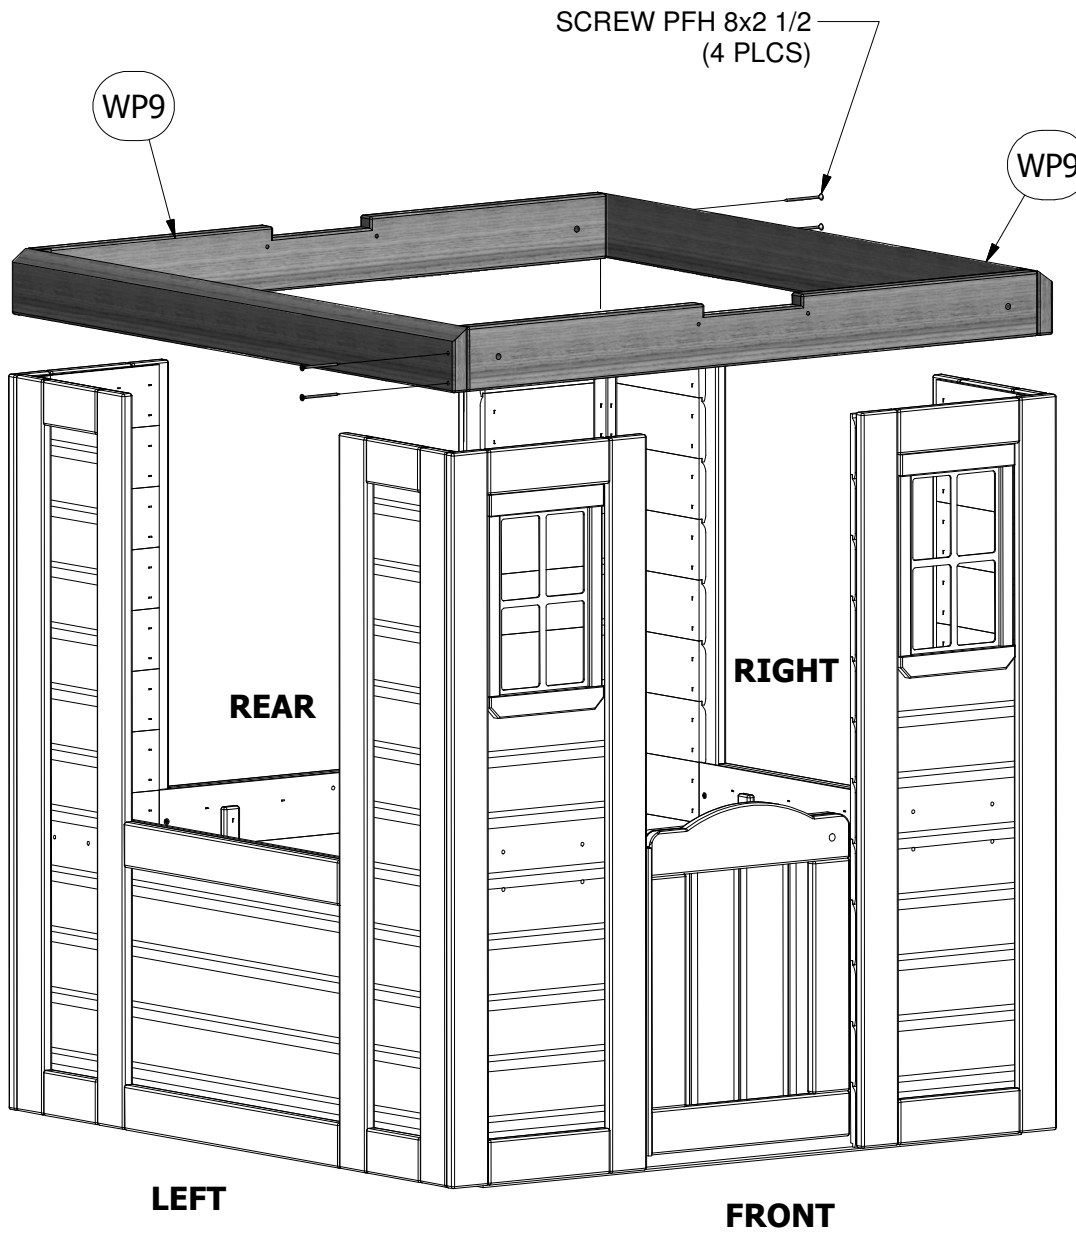


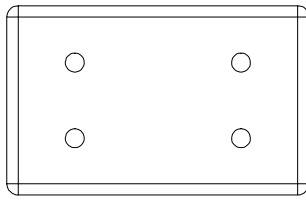


(8) **N4 - TIE STRAP - W102424**  
**5/8"x2"x3 1/8" (16x50x80)**

**STEP 8:**


SCREW PFH 8x1 1/4  
(32 PLCS)

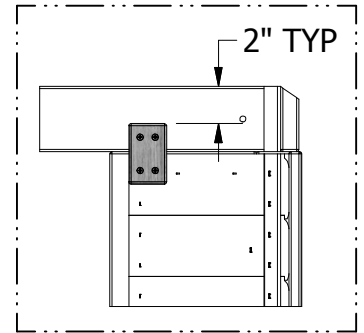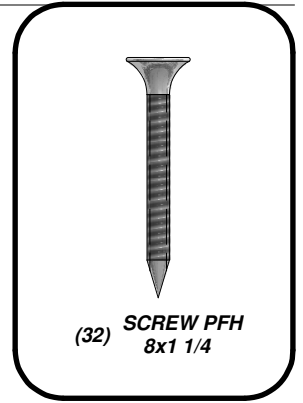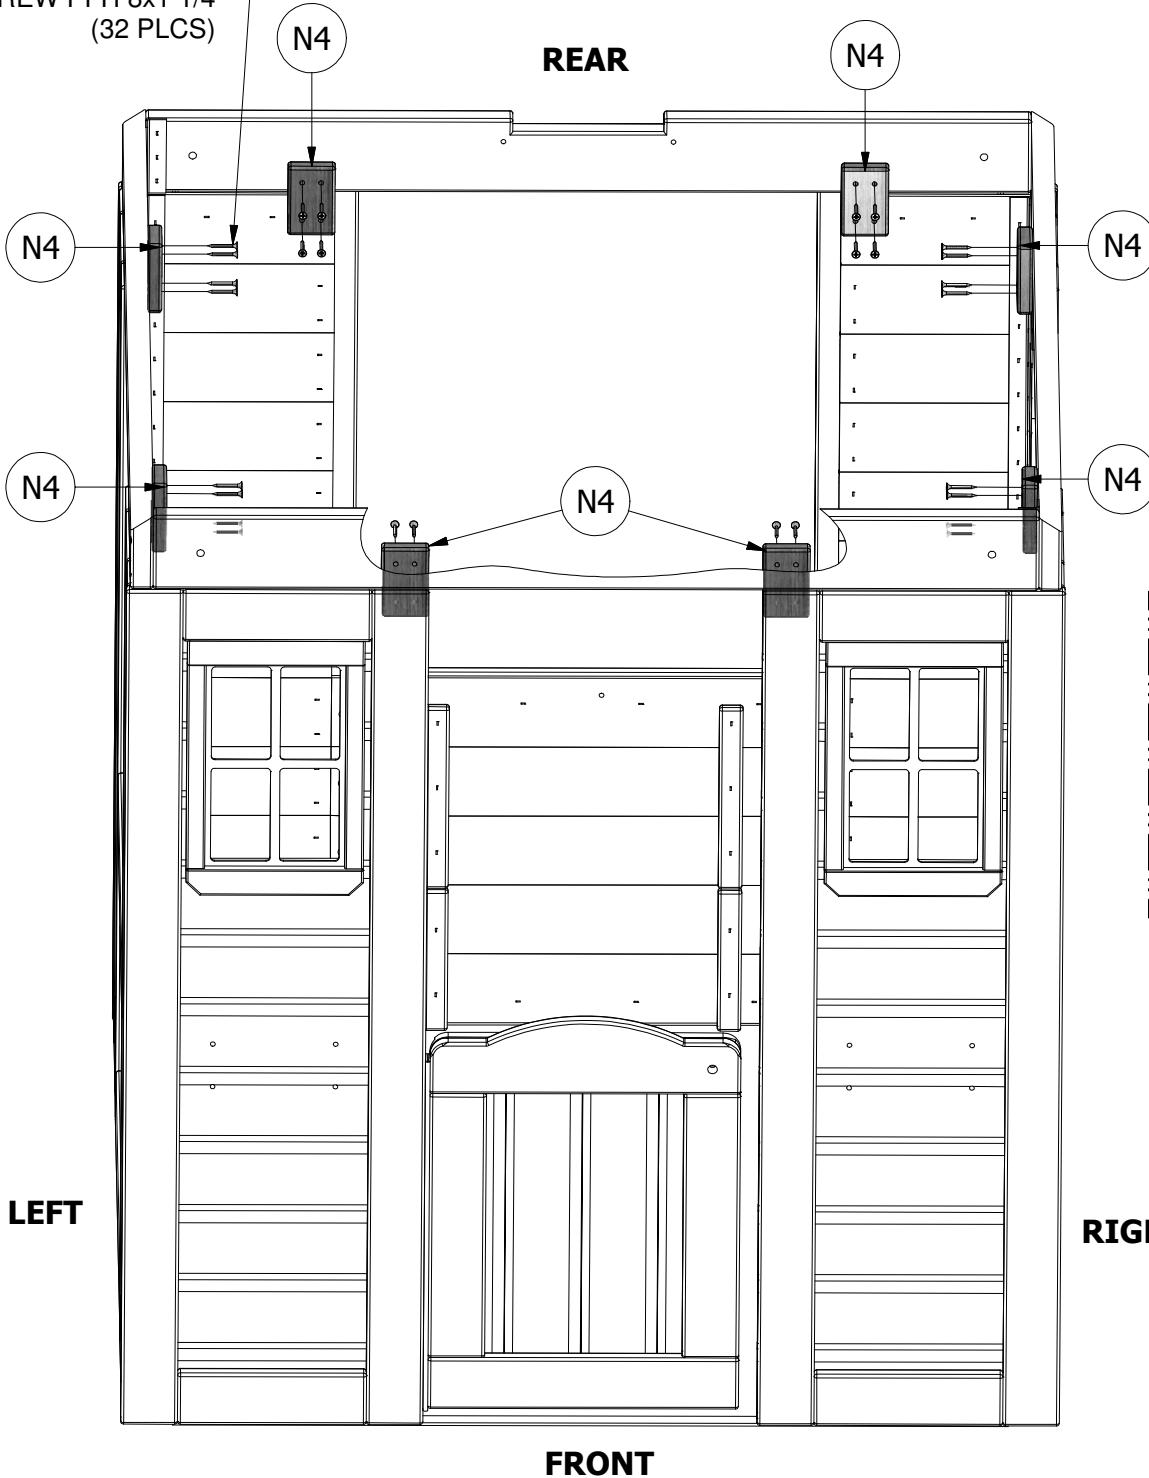

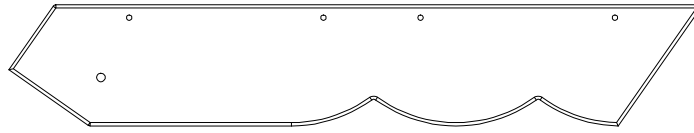

(4) **L1 - GABLE BOARD - W4L04755**  
 5/8"x4 3/8"x25 3/8" (16x112x643)

**STEP 9:**

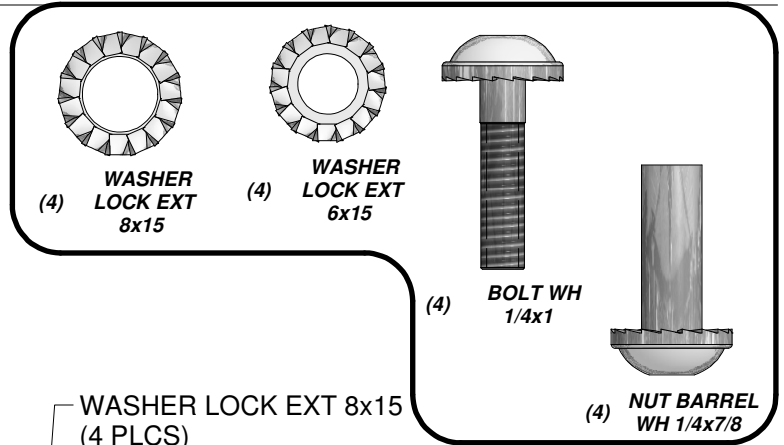



WASHER LOCK EXT 6x15  
(4 PLCS)

BOLT WH 1/4x1  
(4 PLCS)

WASHER LOCK EXT 8x15  
(4 PLCS)

NUT BARREL WH 1/4x7/8  
(4 PLCS)

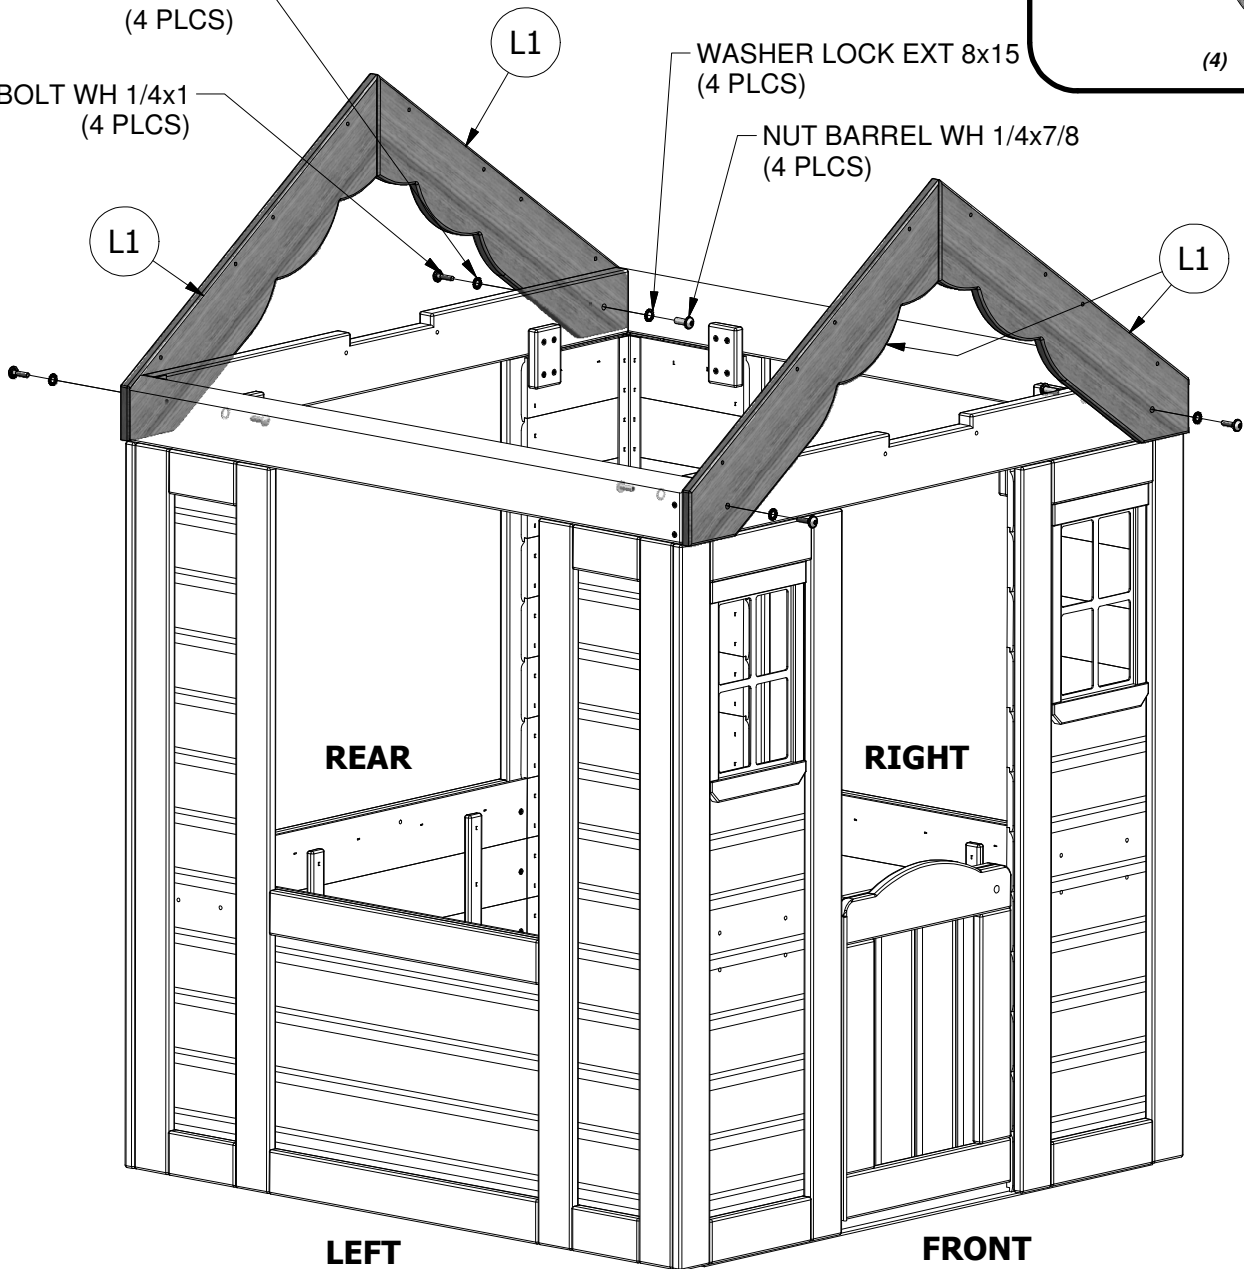

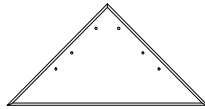

- (2) **K1 - TRIANGLE SUNBURST - W4L04871**  
 5/8"x5 1/4"x10 3/8" (16x134x265)







- (2) **N5 - SUNBURST LEG - W4L04872**  
 5/8"x2 3/8"x10 1/4" (16x60x260)



- (4) **N6 - SUNBURST LEG - W4L04873**  
 5/8"x2 3/8"x8 1/4" (16x60x210)




**STEP 10:**

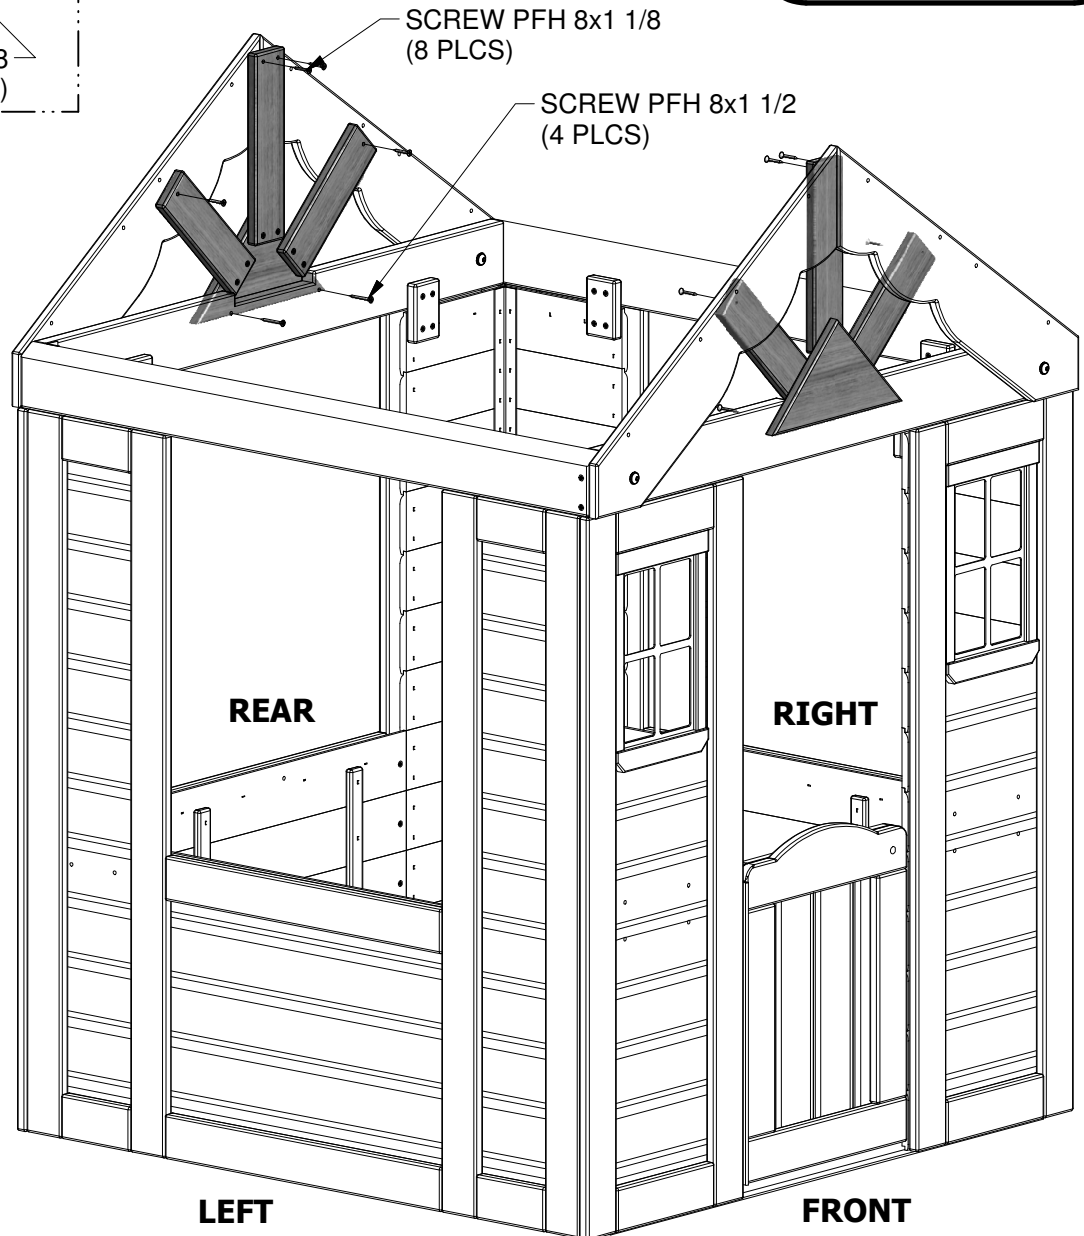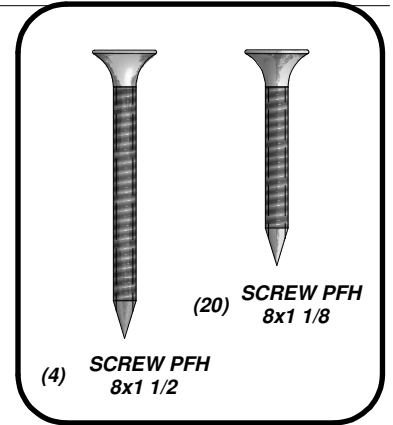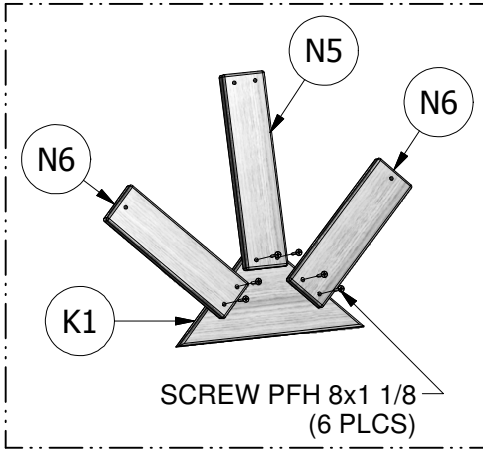


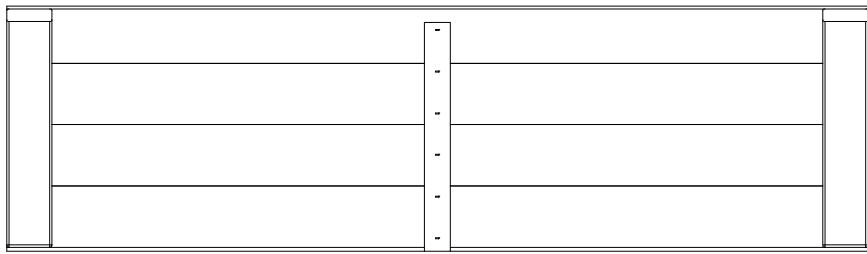

(2) RP2 - UPPER ROOF PANEL - W2A01514



**STEP 11:**

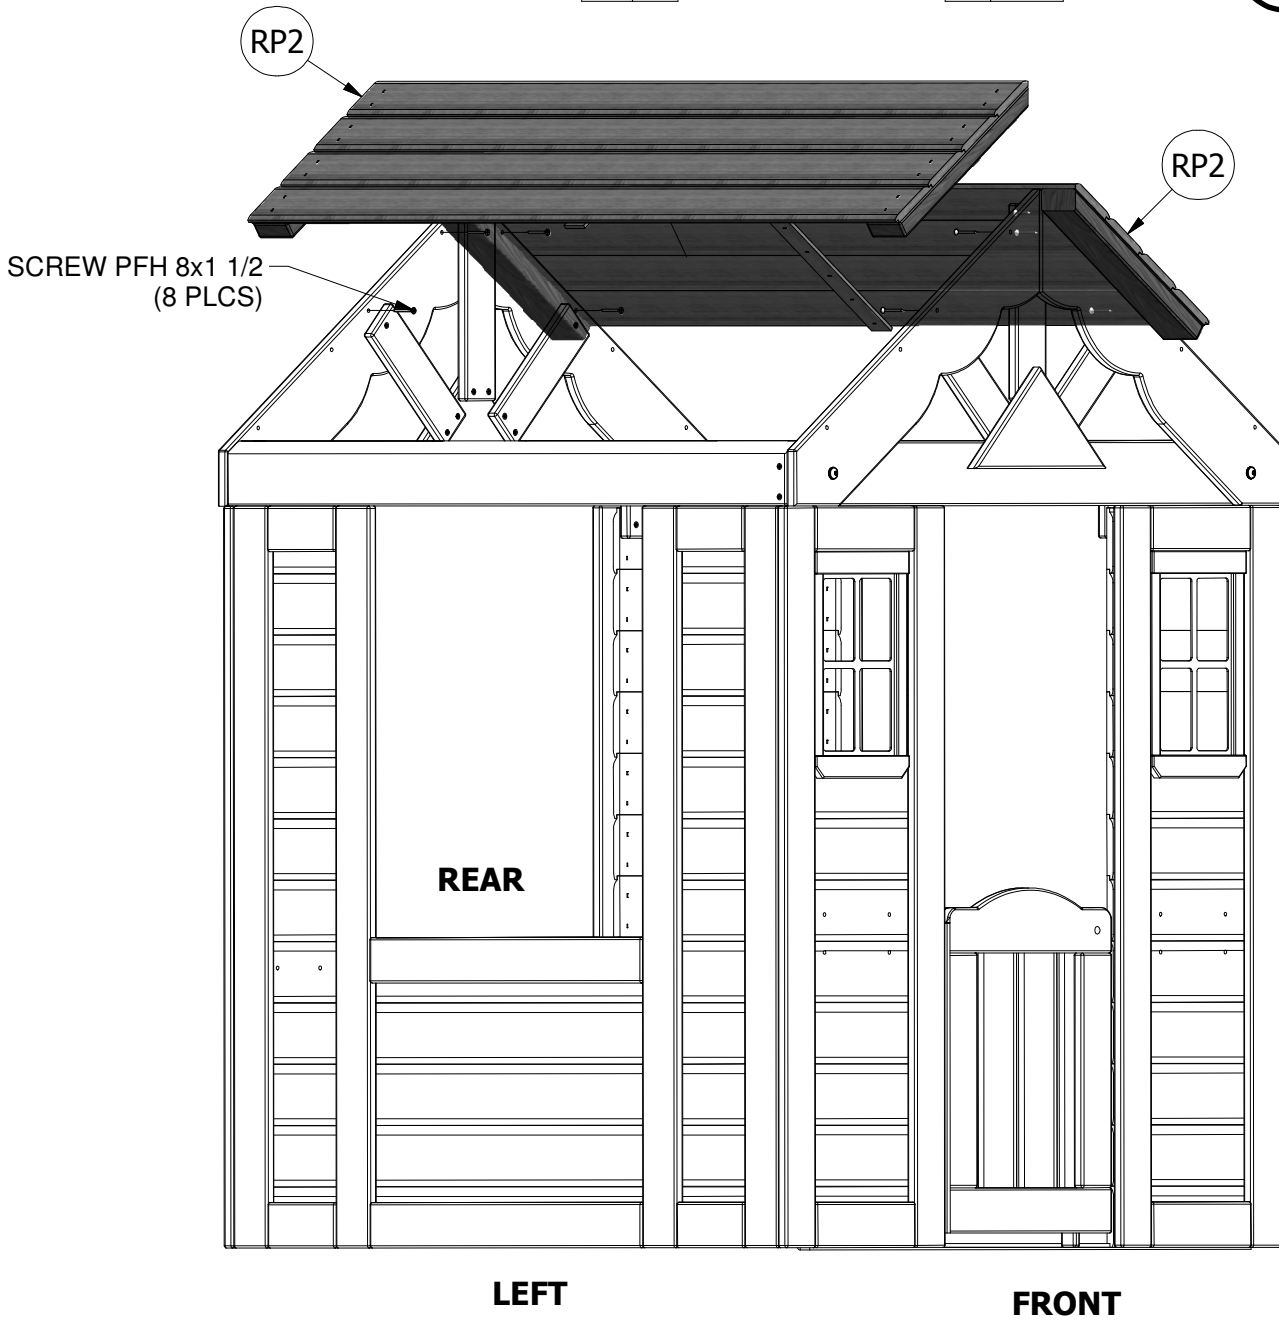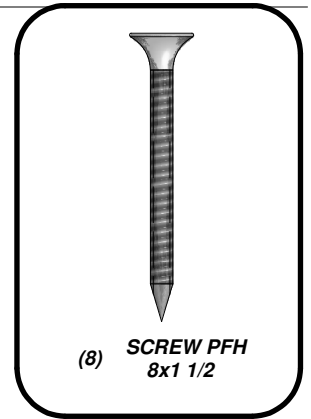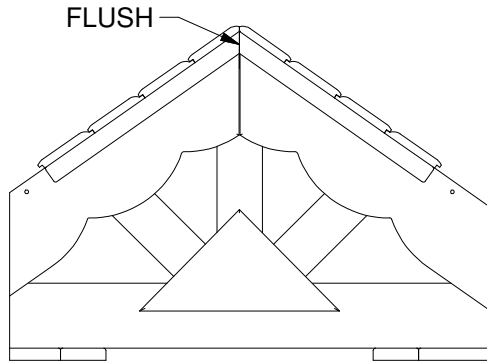


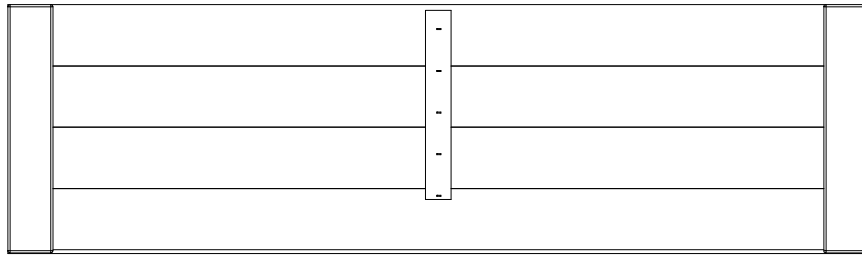

(2) RP1 - LOWER ROOF PANEL - W2A01513




**STEP 12:**

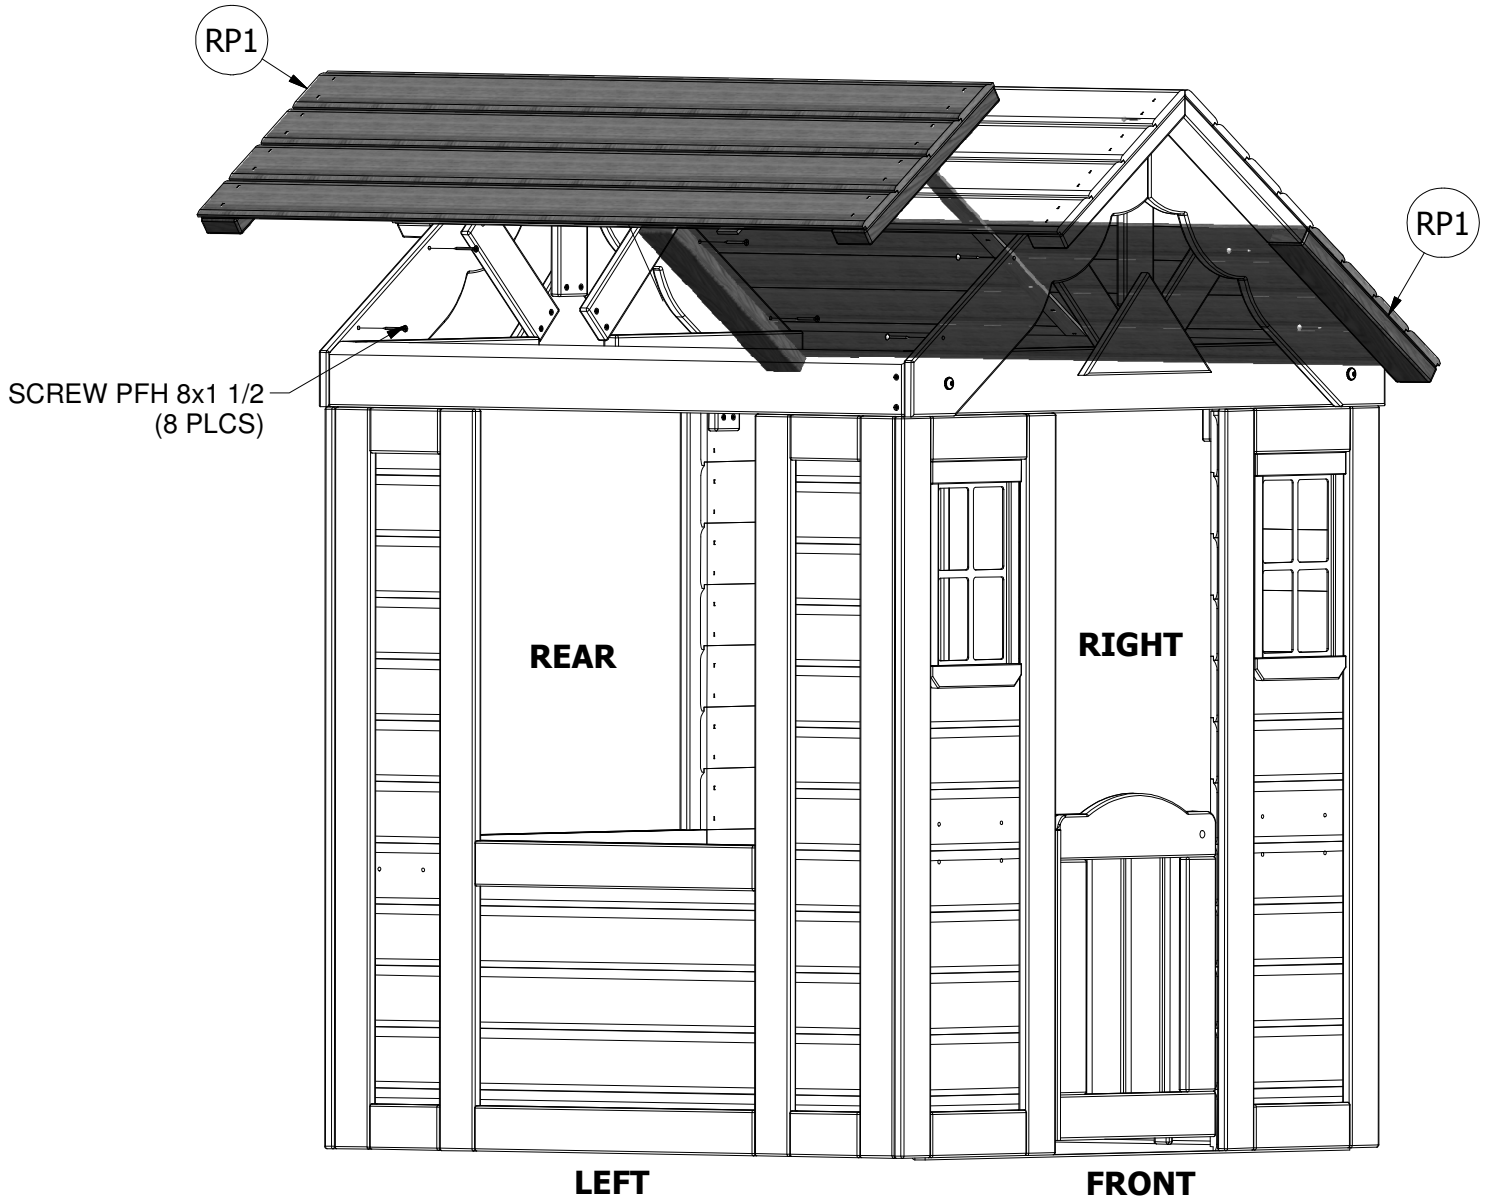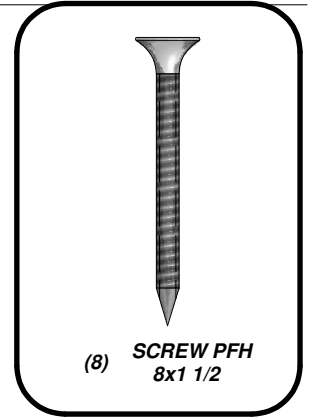


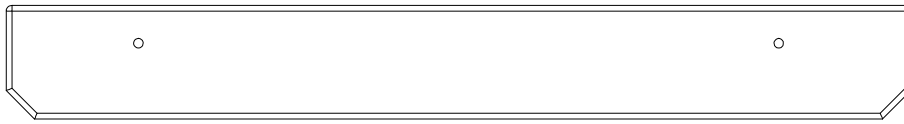

(1) **N1 - SIDE WINDOW SHELF - W4L04751**  
5/8"x2 3/8"x18 7/8" (16x60x479)


**STEP 13:**

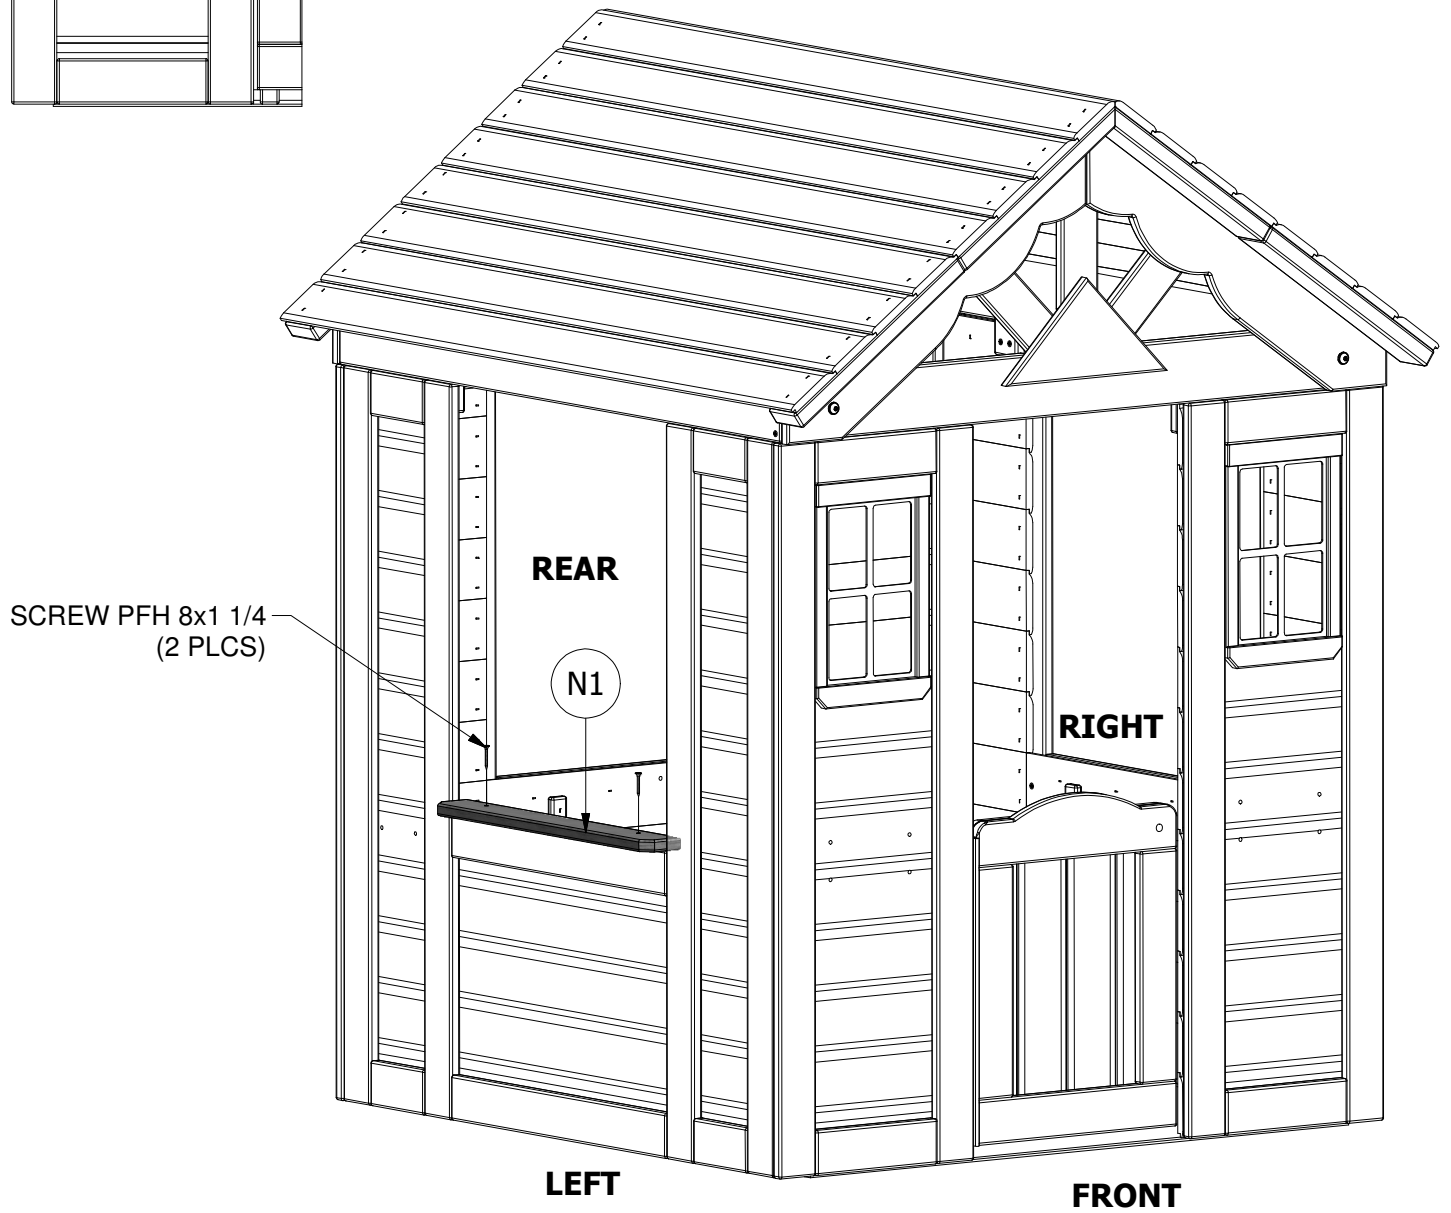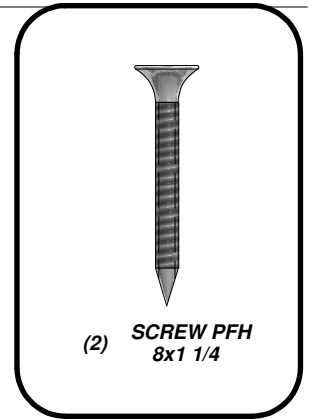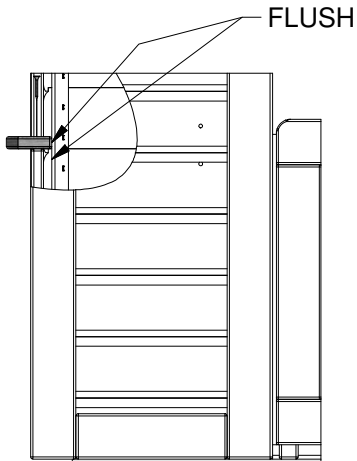

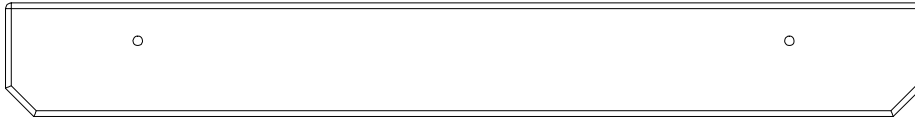


(1) **N2 - REAR WINDOW SHELF - W4L04760**  
5/8"x2 3/8"x19 1/8" (16x60x485)


**STEP 14:**

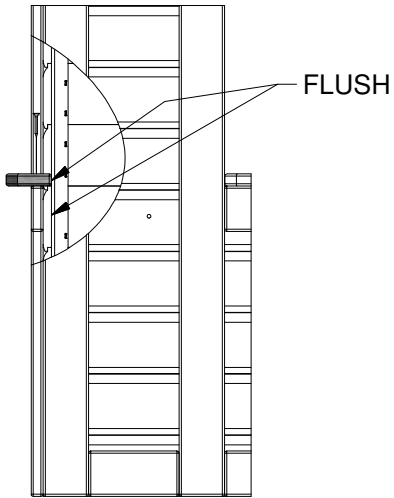

FLUSH

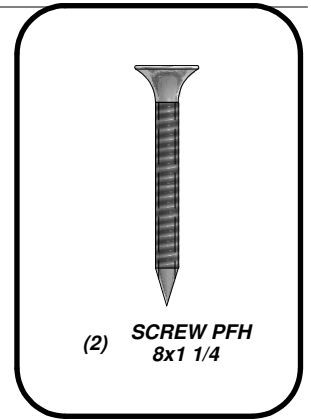

(2) **SCREW PFH**  
8x1 1/4

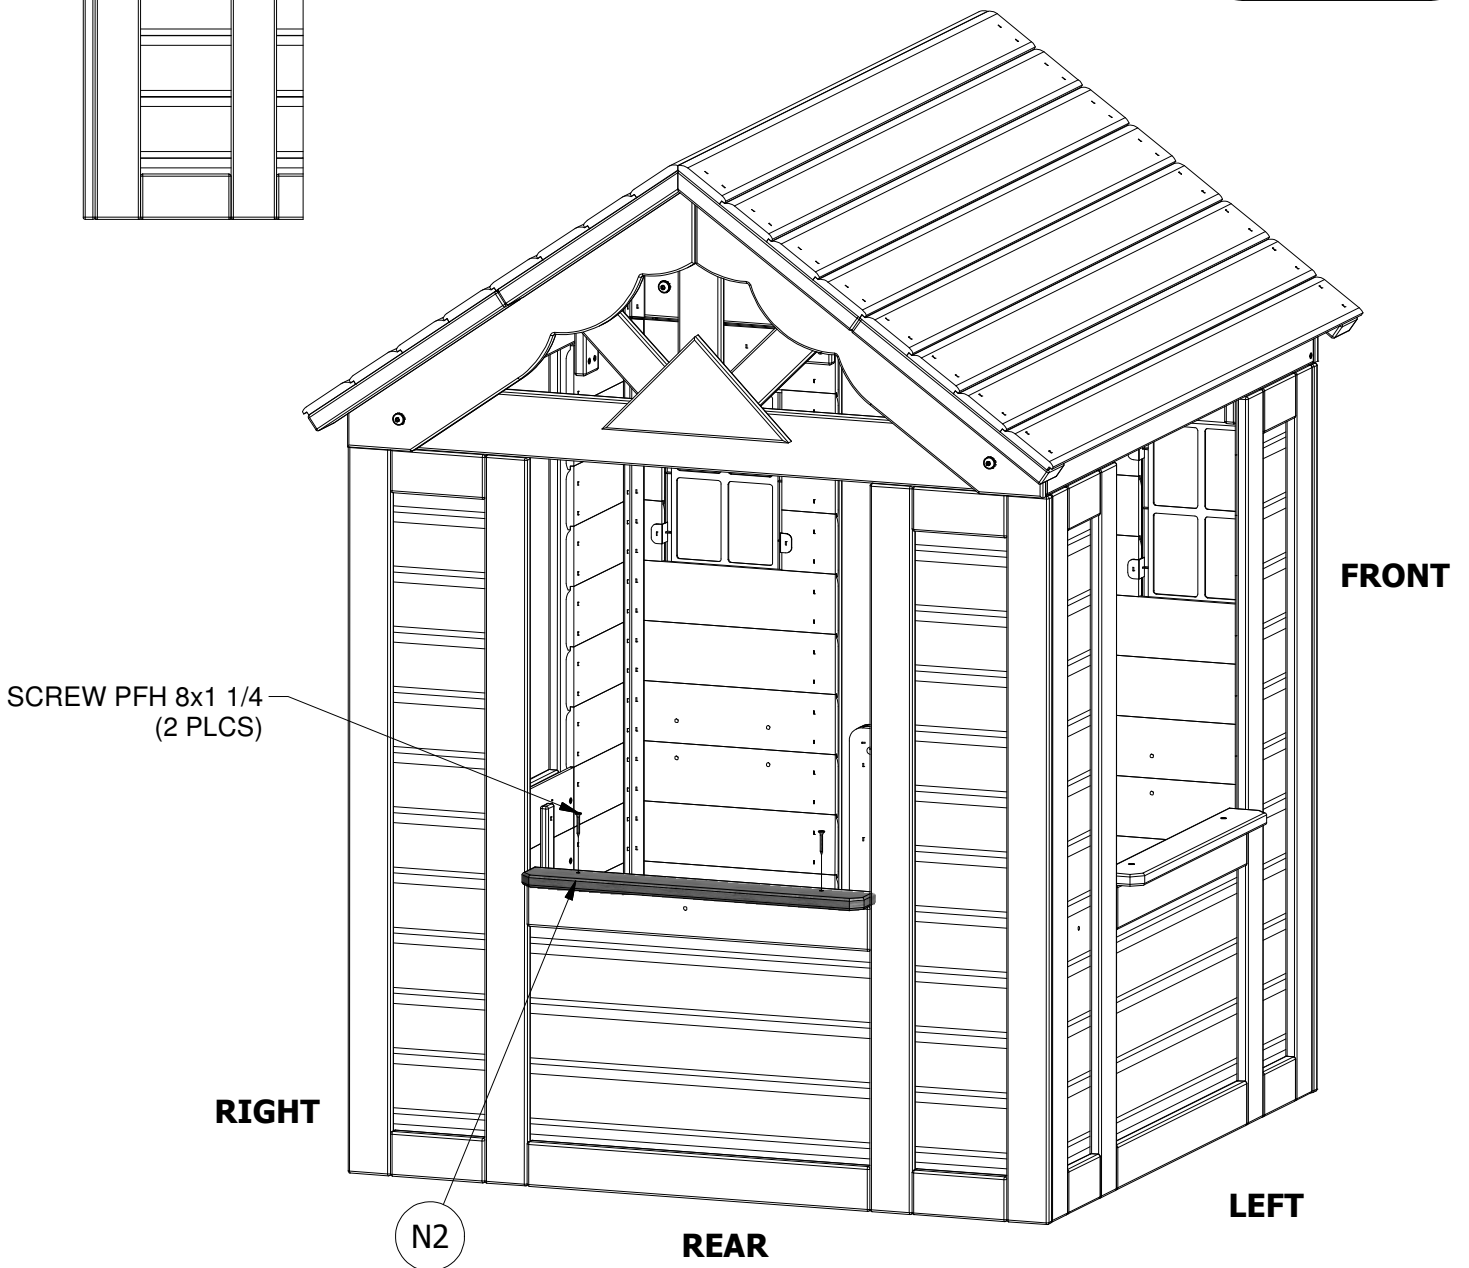

**FRONT**

**RIGHT**

**LEFT**




**REAR**


N2



(1) **N1 - SIDE WINDOW SHELF - W4L04751**  
5/8"x2 3/8"x18 7/8" (16x60x479)




**STEP 15:**

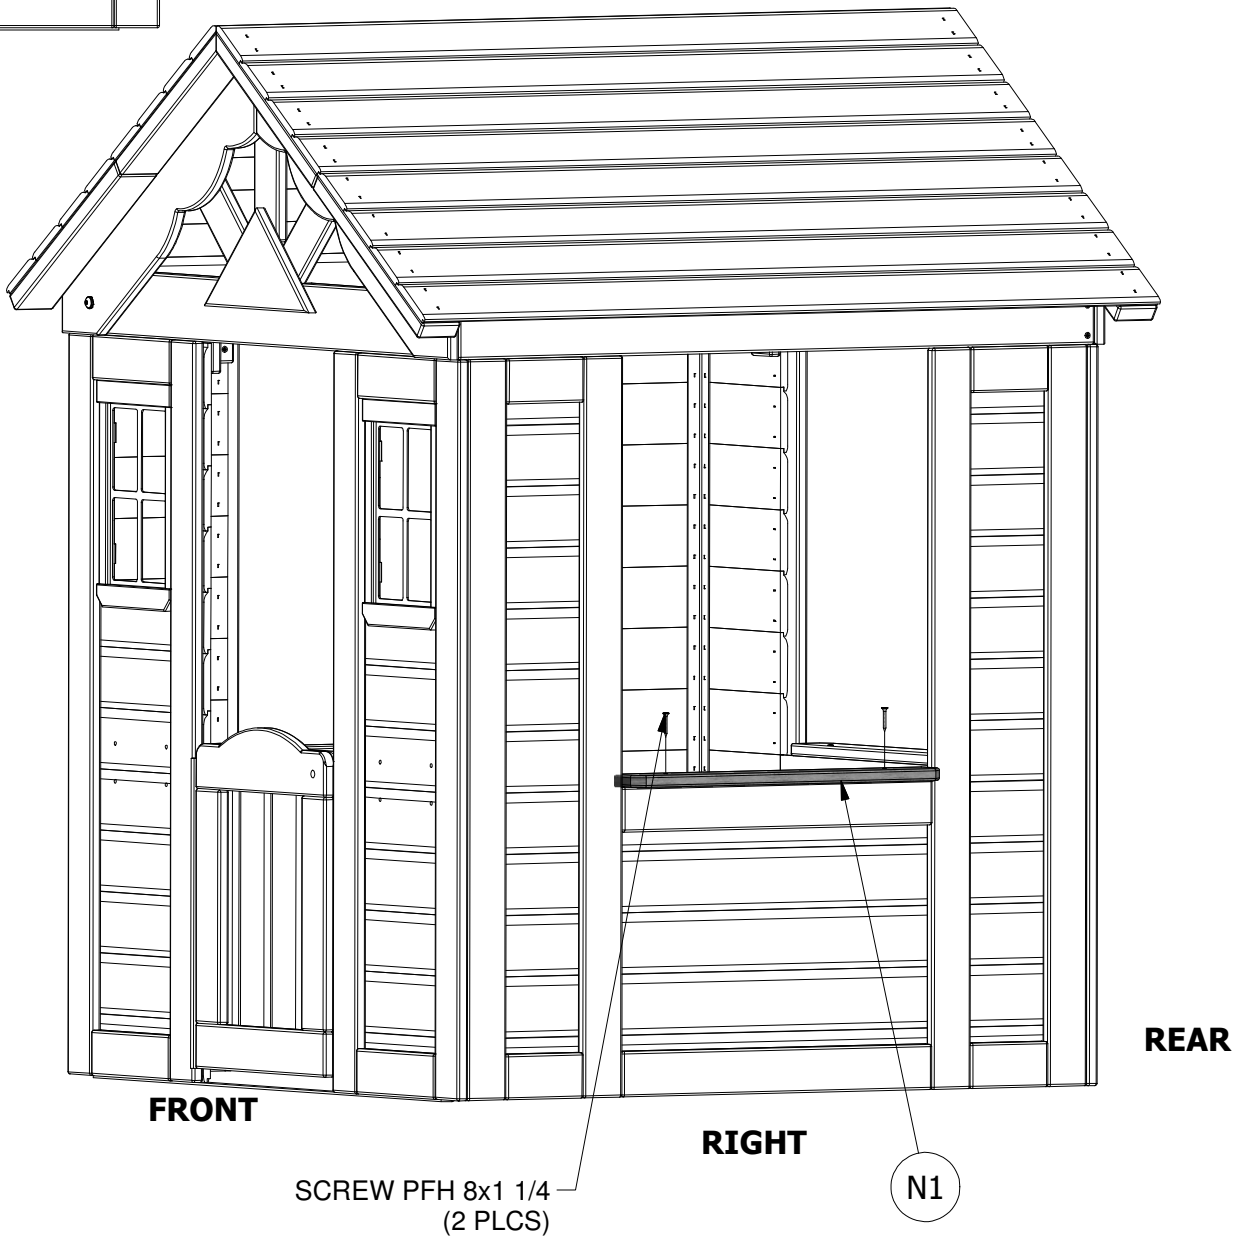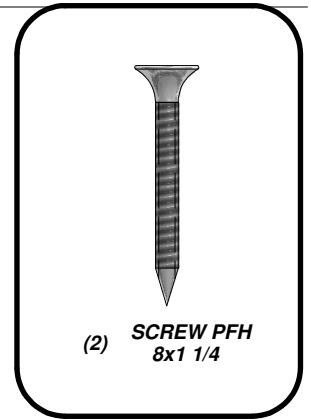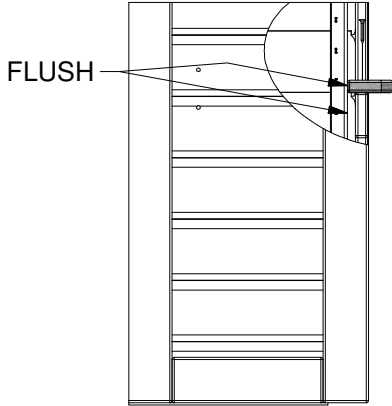


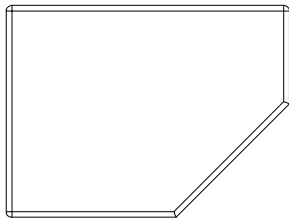

(1) **Q1 - COUNTER TOP SUPPORT - W4L04752**  
**1"x4 3/8"x5 7/8" (24x112x150)**


**STEP 16:**

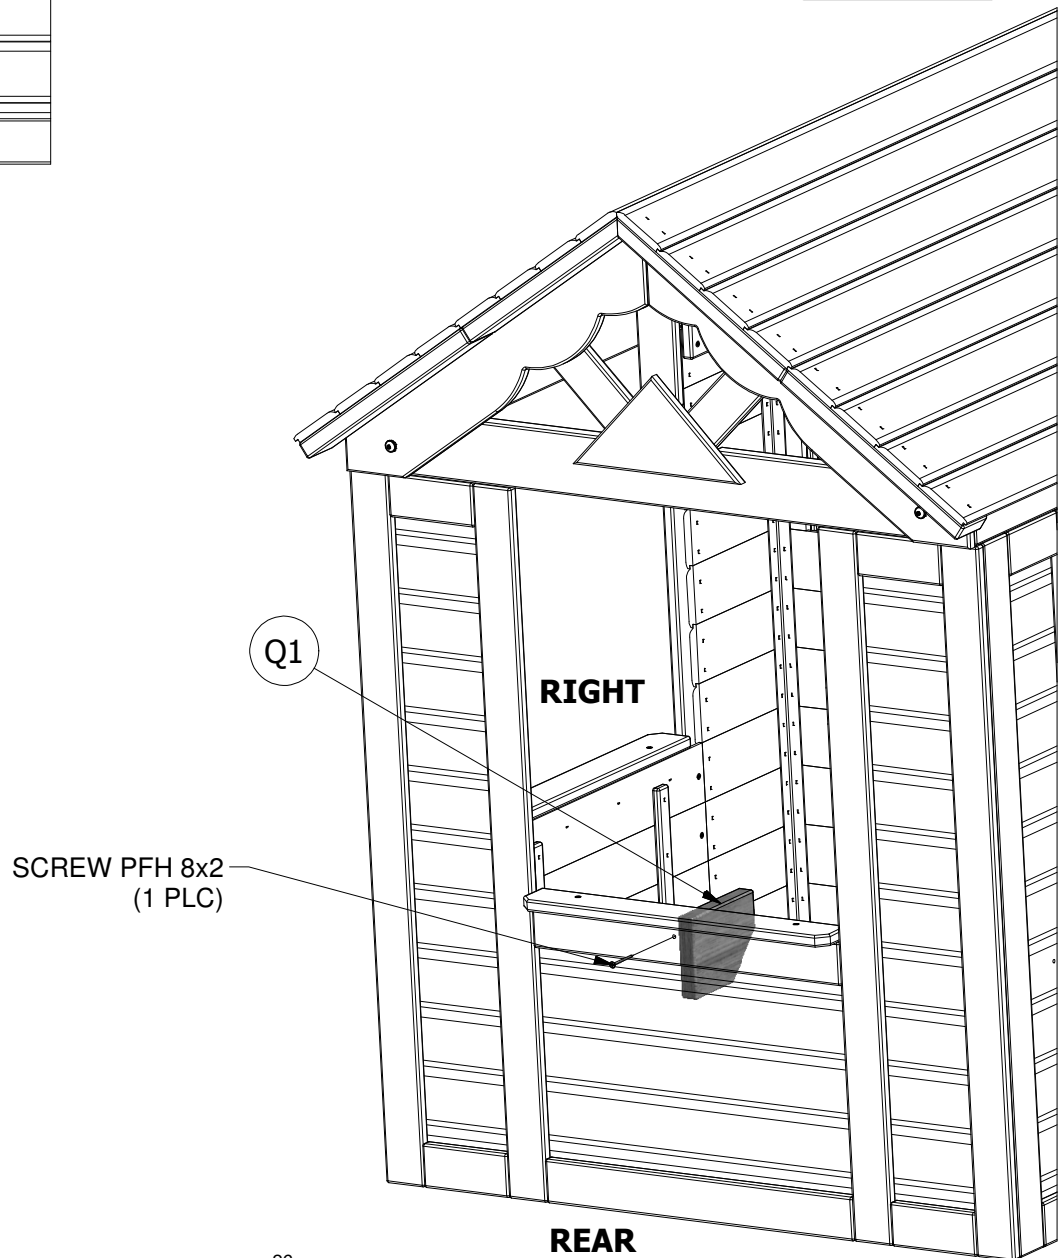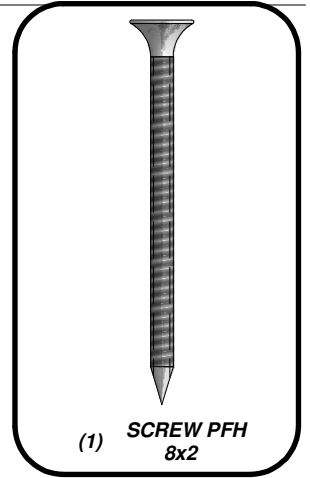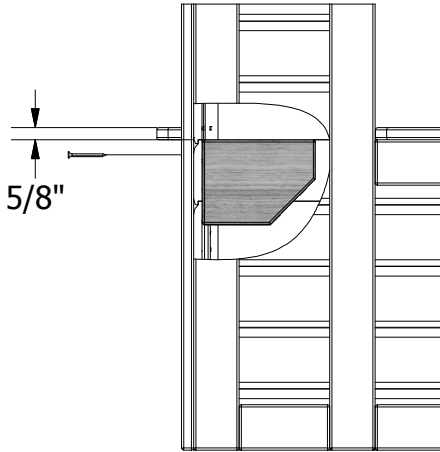



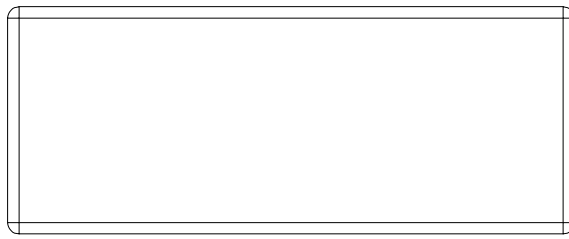


(1) **J1 - COUNTER TOP SUPPORT - W4L04753**  
1"x2 3/8"x5 7/8" (24x60x150)

**STEP 17:**

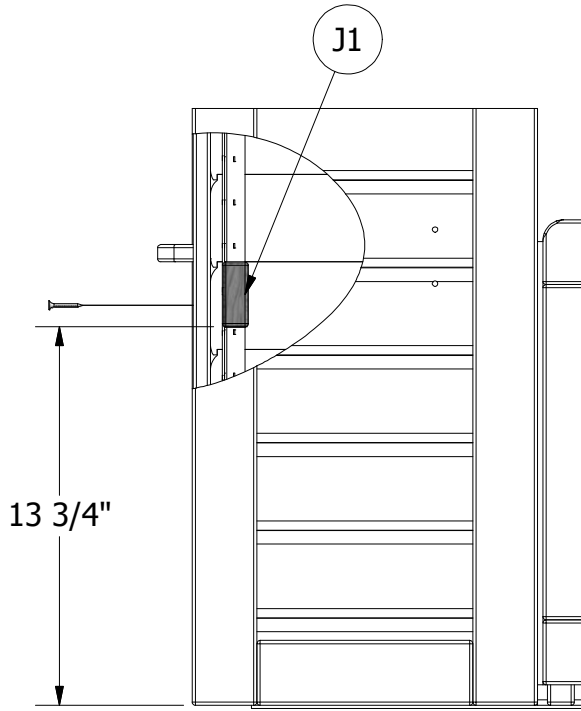




**FRONT**

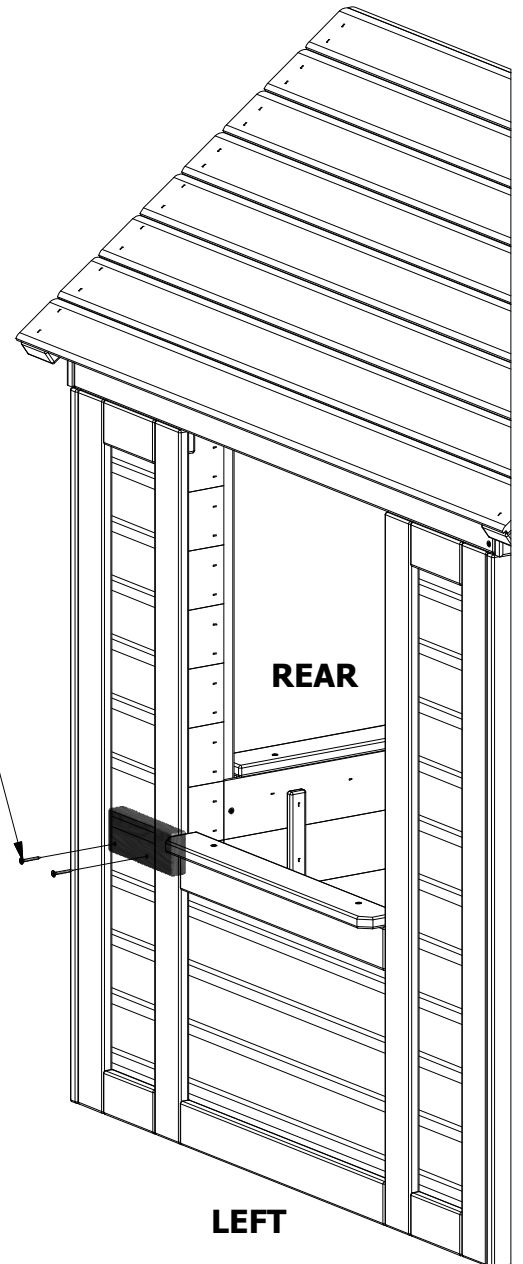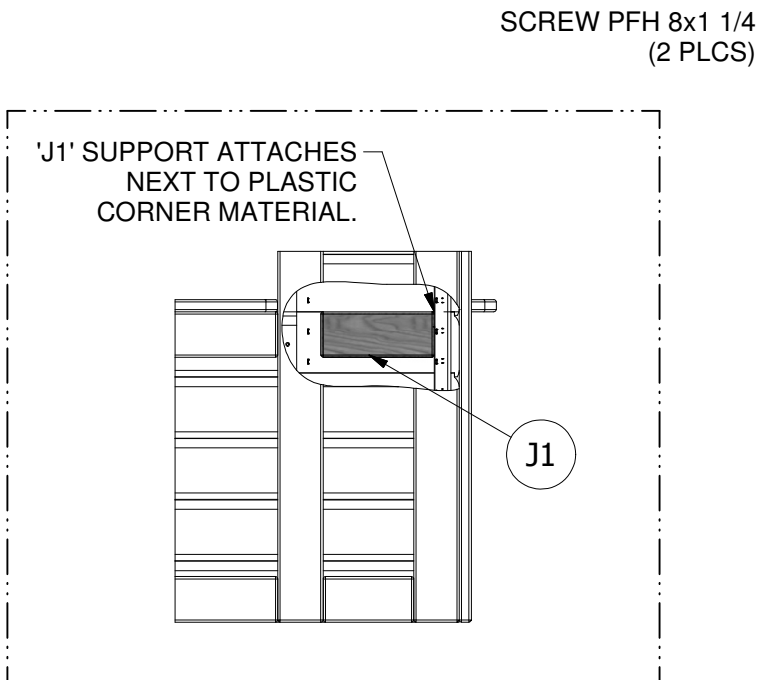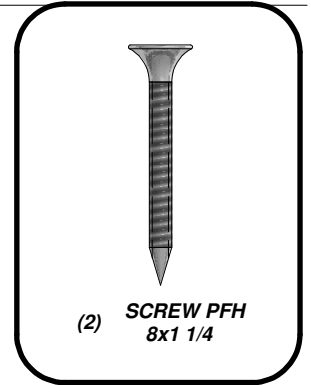




(2) **M1 - COUNTER TOP - W4L04754**  
**5/8"x3 3/8"x23 5/8" (16x86x600)**



**STEP 18:**

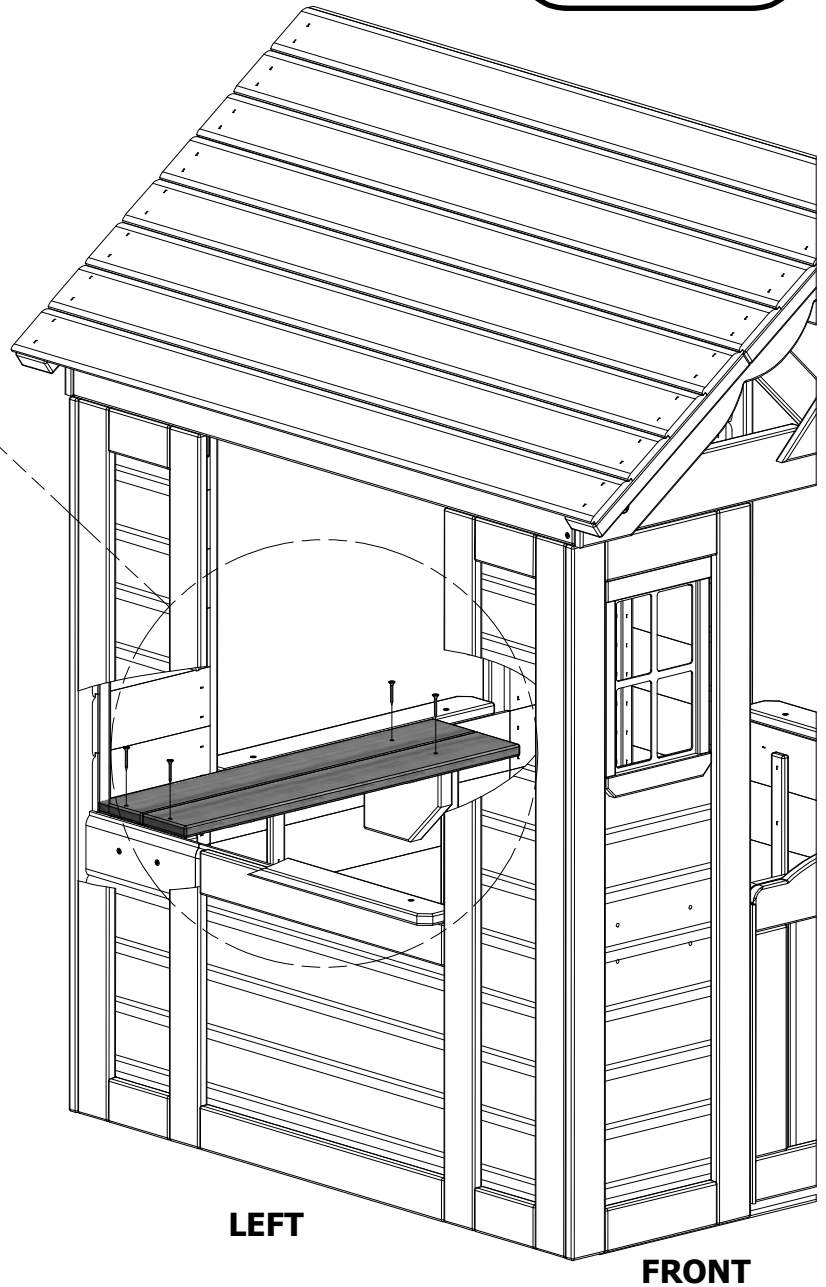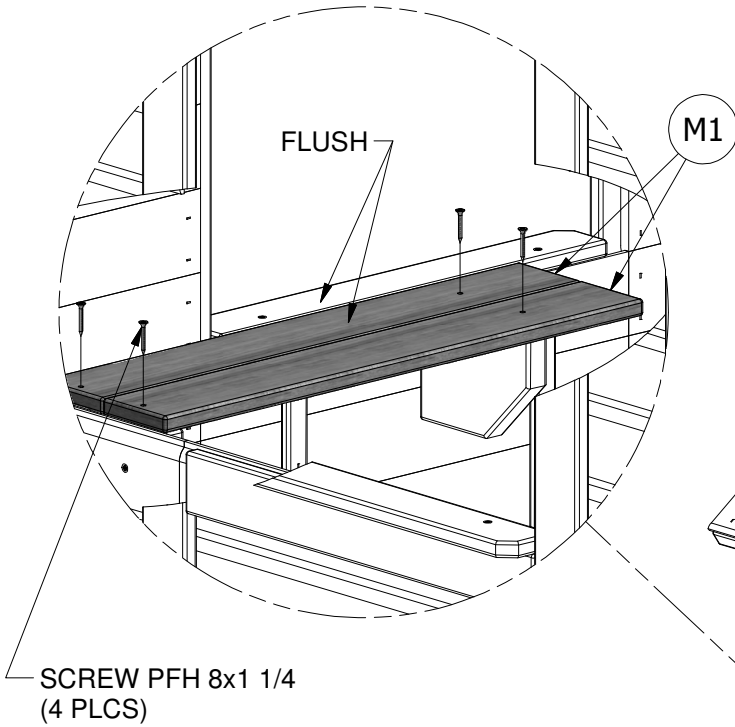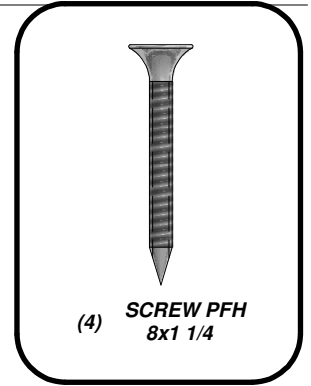

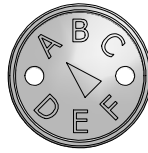


(1) "A" REVISION TAG - A100314

**STEP 19:**

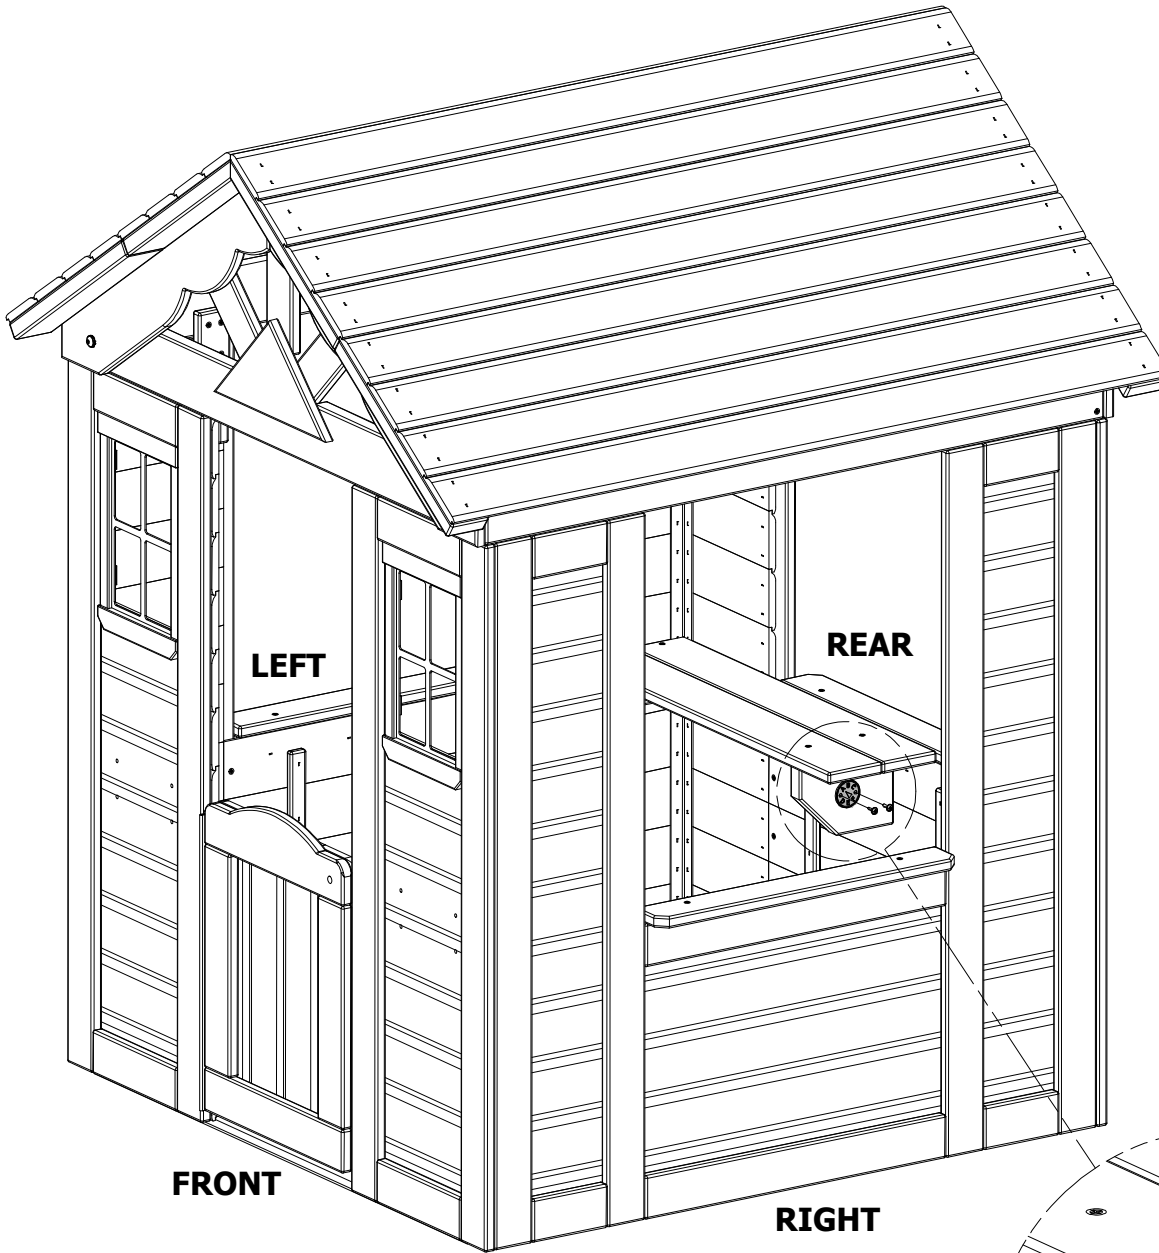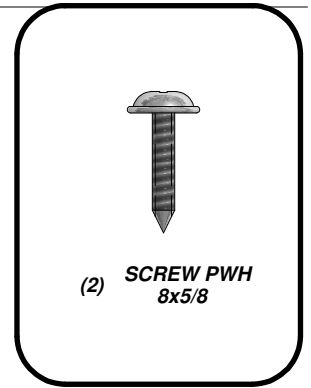



SCREW PWH 8x5/8  
(2 PLCS)

"A" REVISION TAG

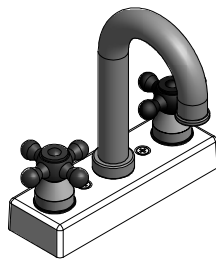

(1) FAUCET KIT - A6P00024

STEP 20:

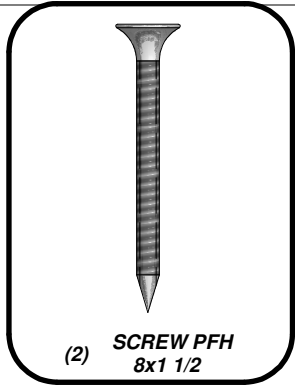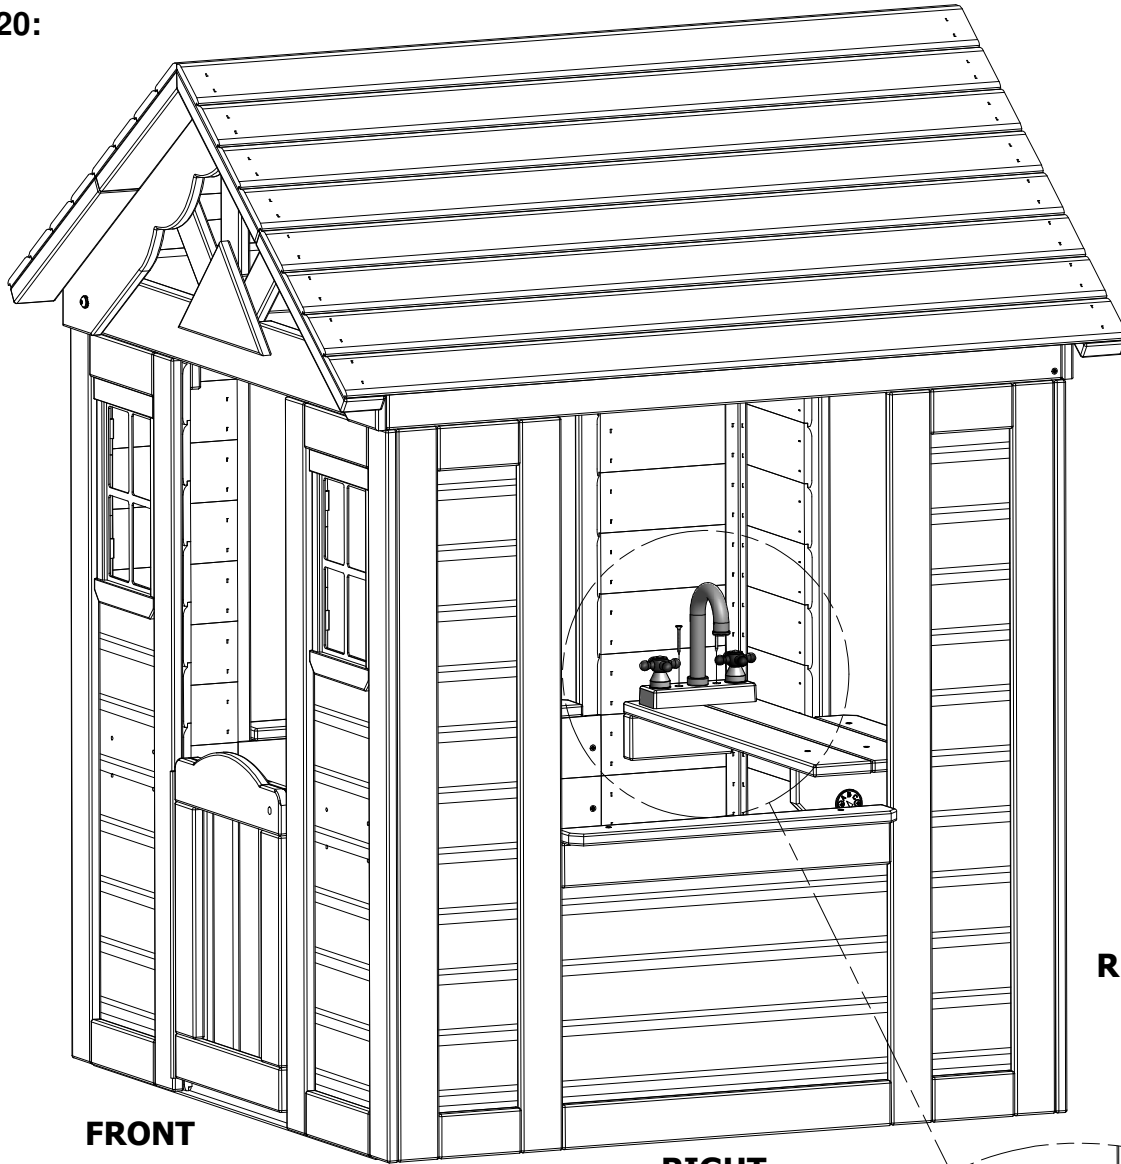


(2) SCREW PFH  
8x1 1/2

FRONT

RIGHT


REAR


SCREW PFH 8x1 1/2  
(2 PLCS)

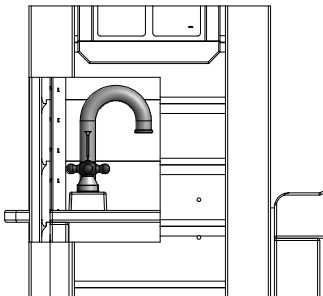

1"




FAUCET KIT

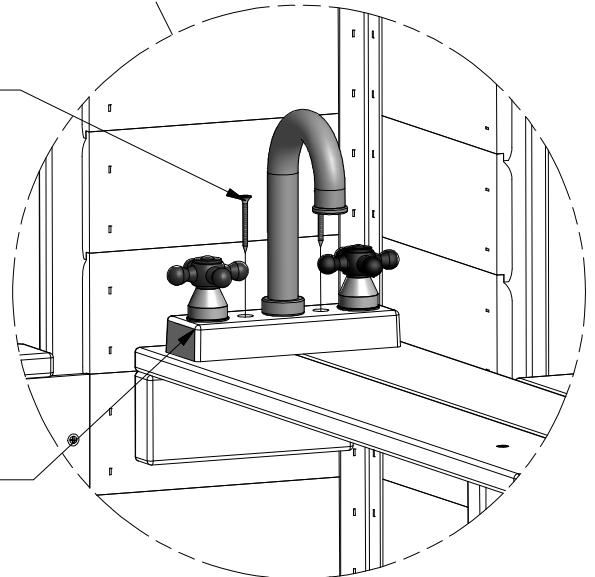

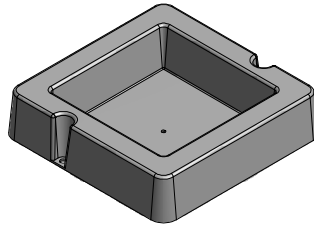


(1) SURFACE MOUNT BASIN - A6P00032

STEP 21:

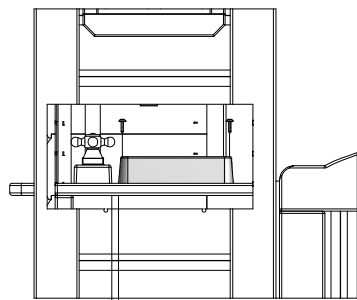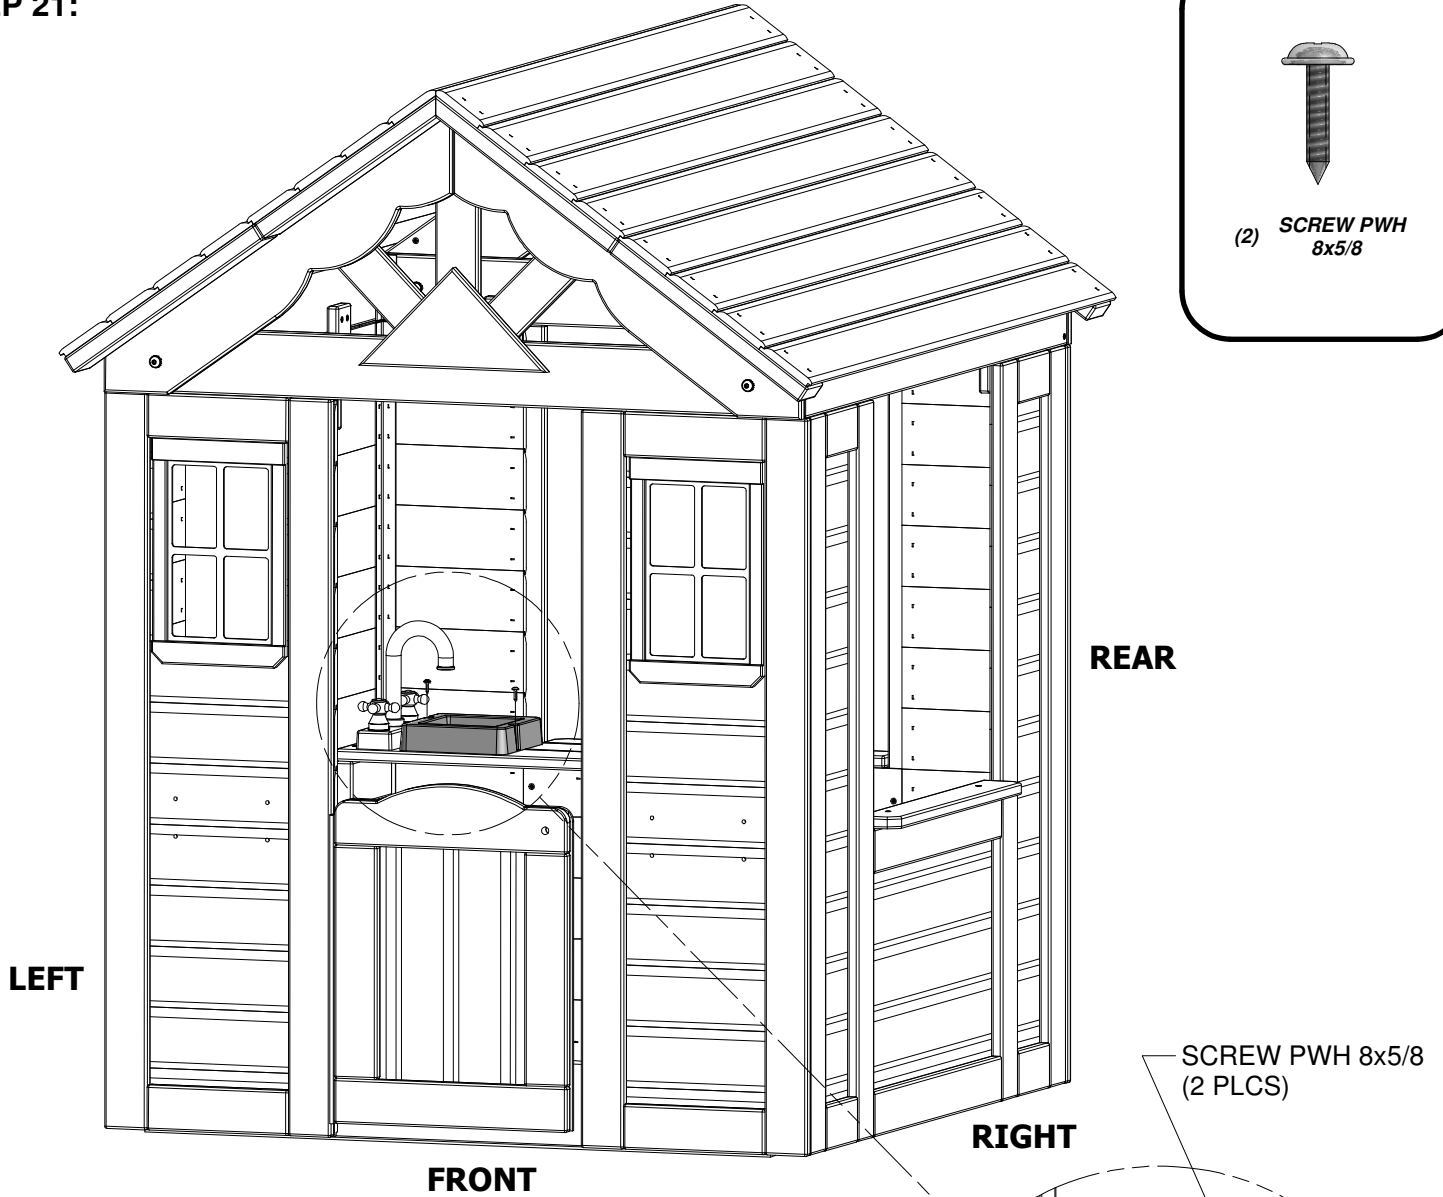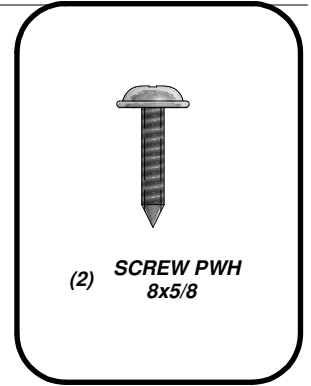



3/8" →

SURFACE MOUNT BASIN

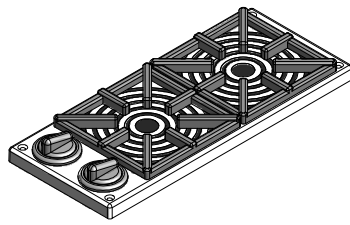


(1) STOVE KIT - A6P00025


**STEP 22:**

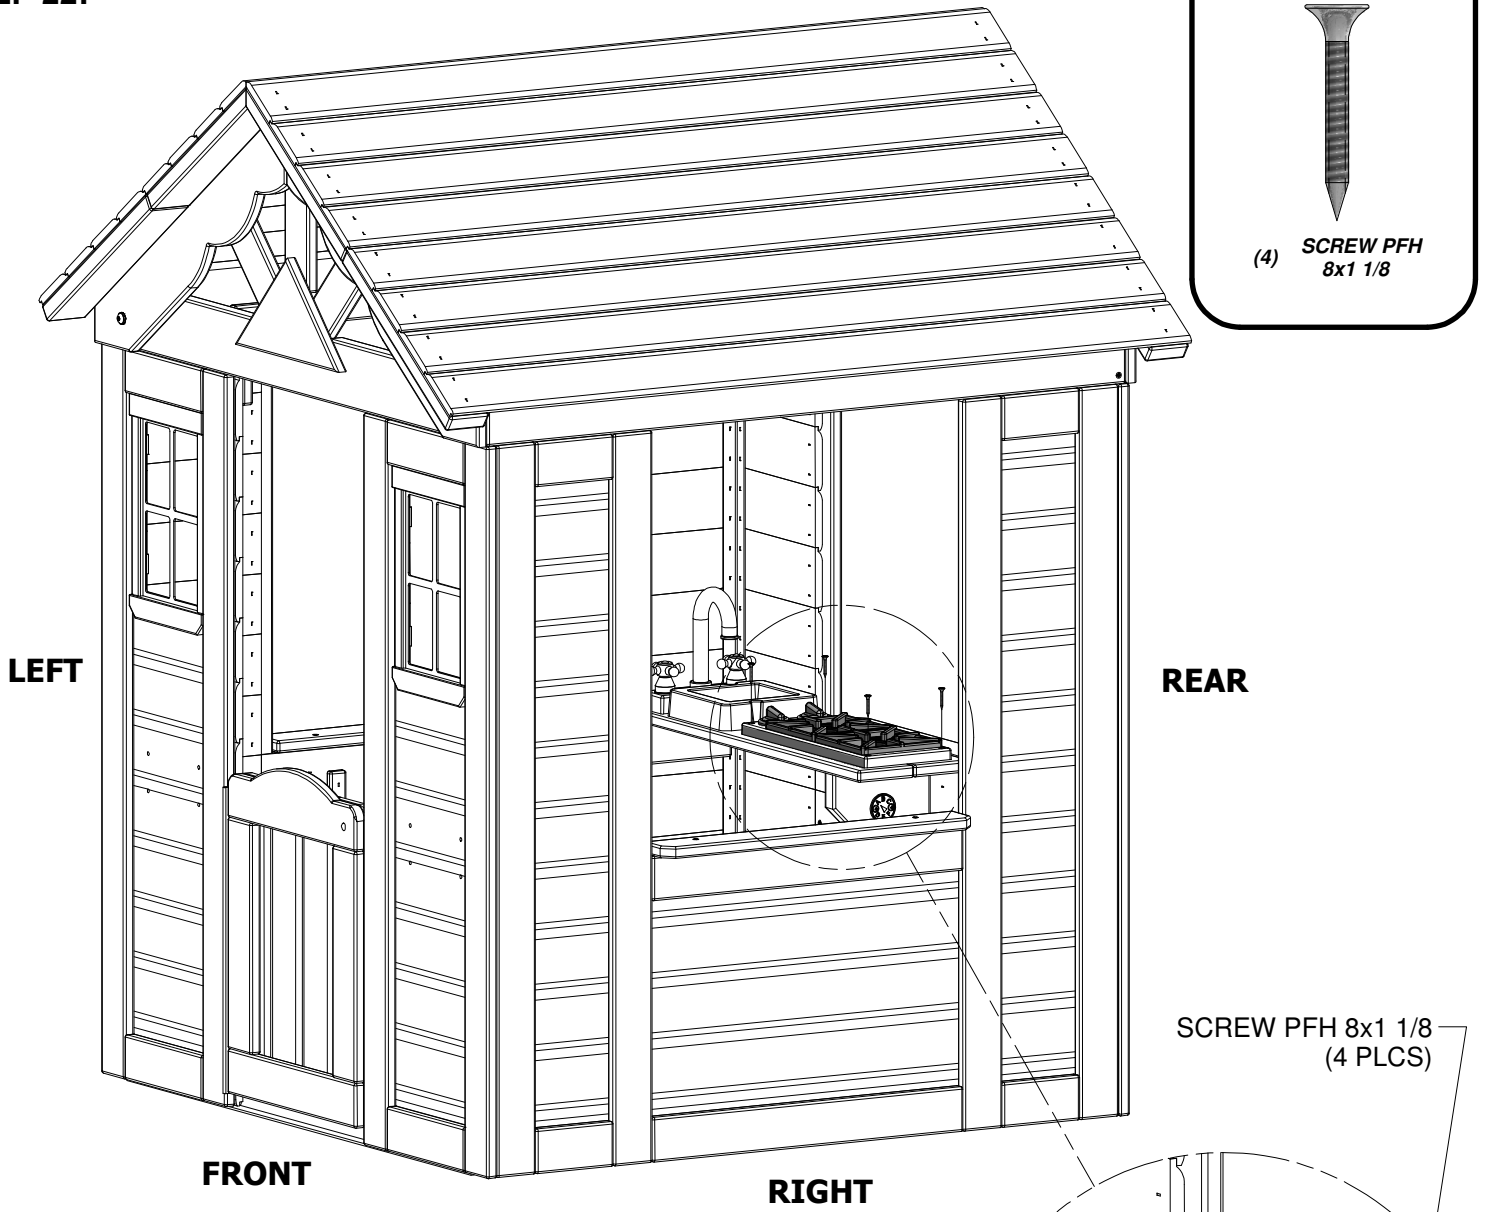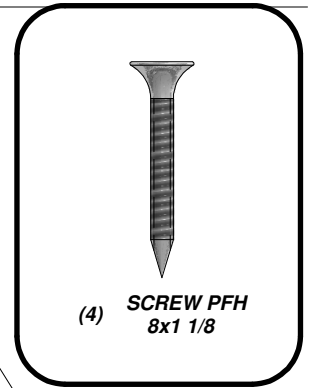


SCREW PFH 8x1 1/8  
(4 PLCS)

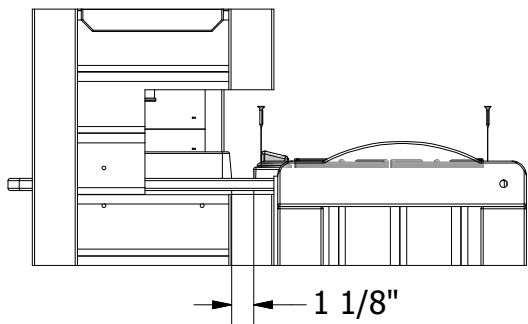




STOVE KIT

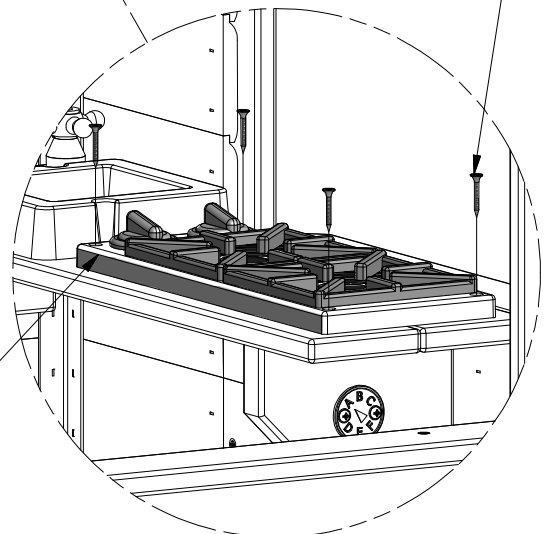

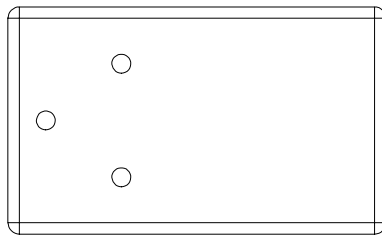


(1) **N3 - DOOR STOP - W4L04761**  
**5/8"x2 3/8"x3 7/8" (16x60x100)**

**STEP 23:**

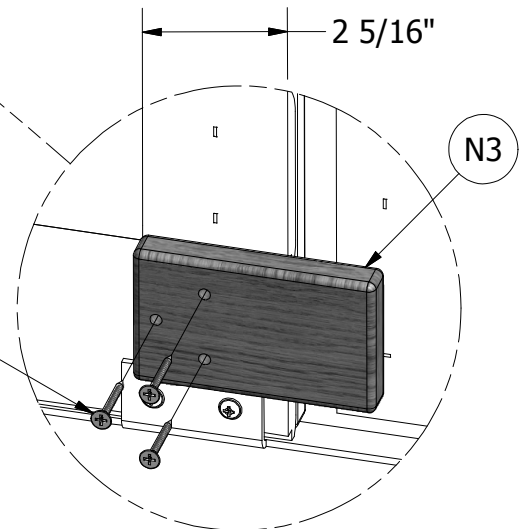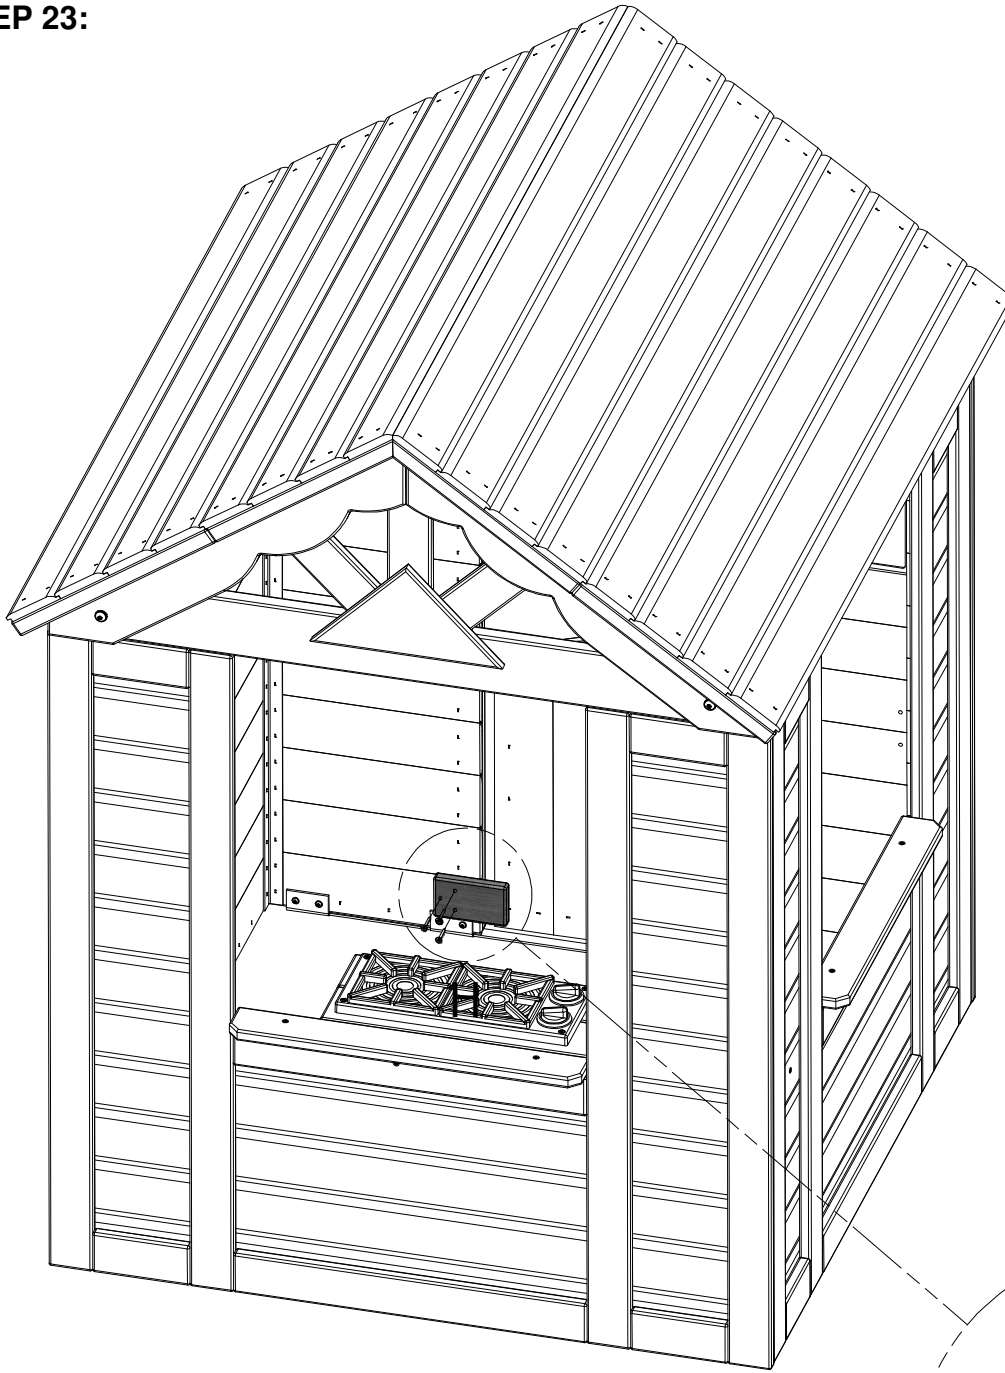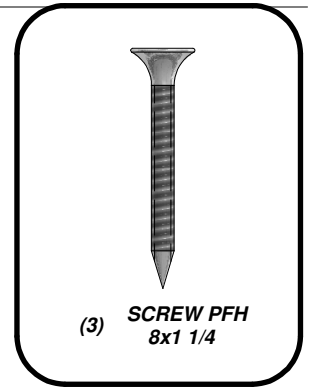


SCREW PFH 8x1 1/4  
(3 PLCS)

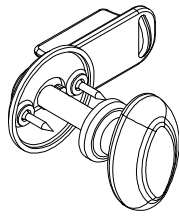

(1) KNOB KIT - A6P00020


**STEP 24:**

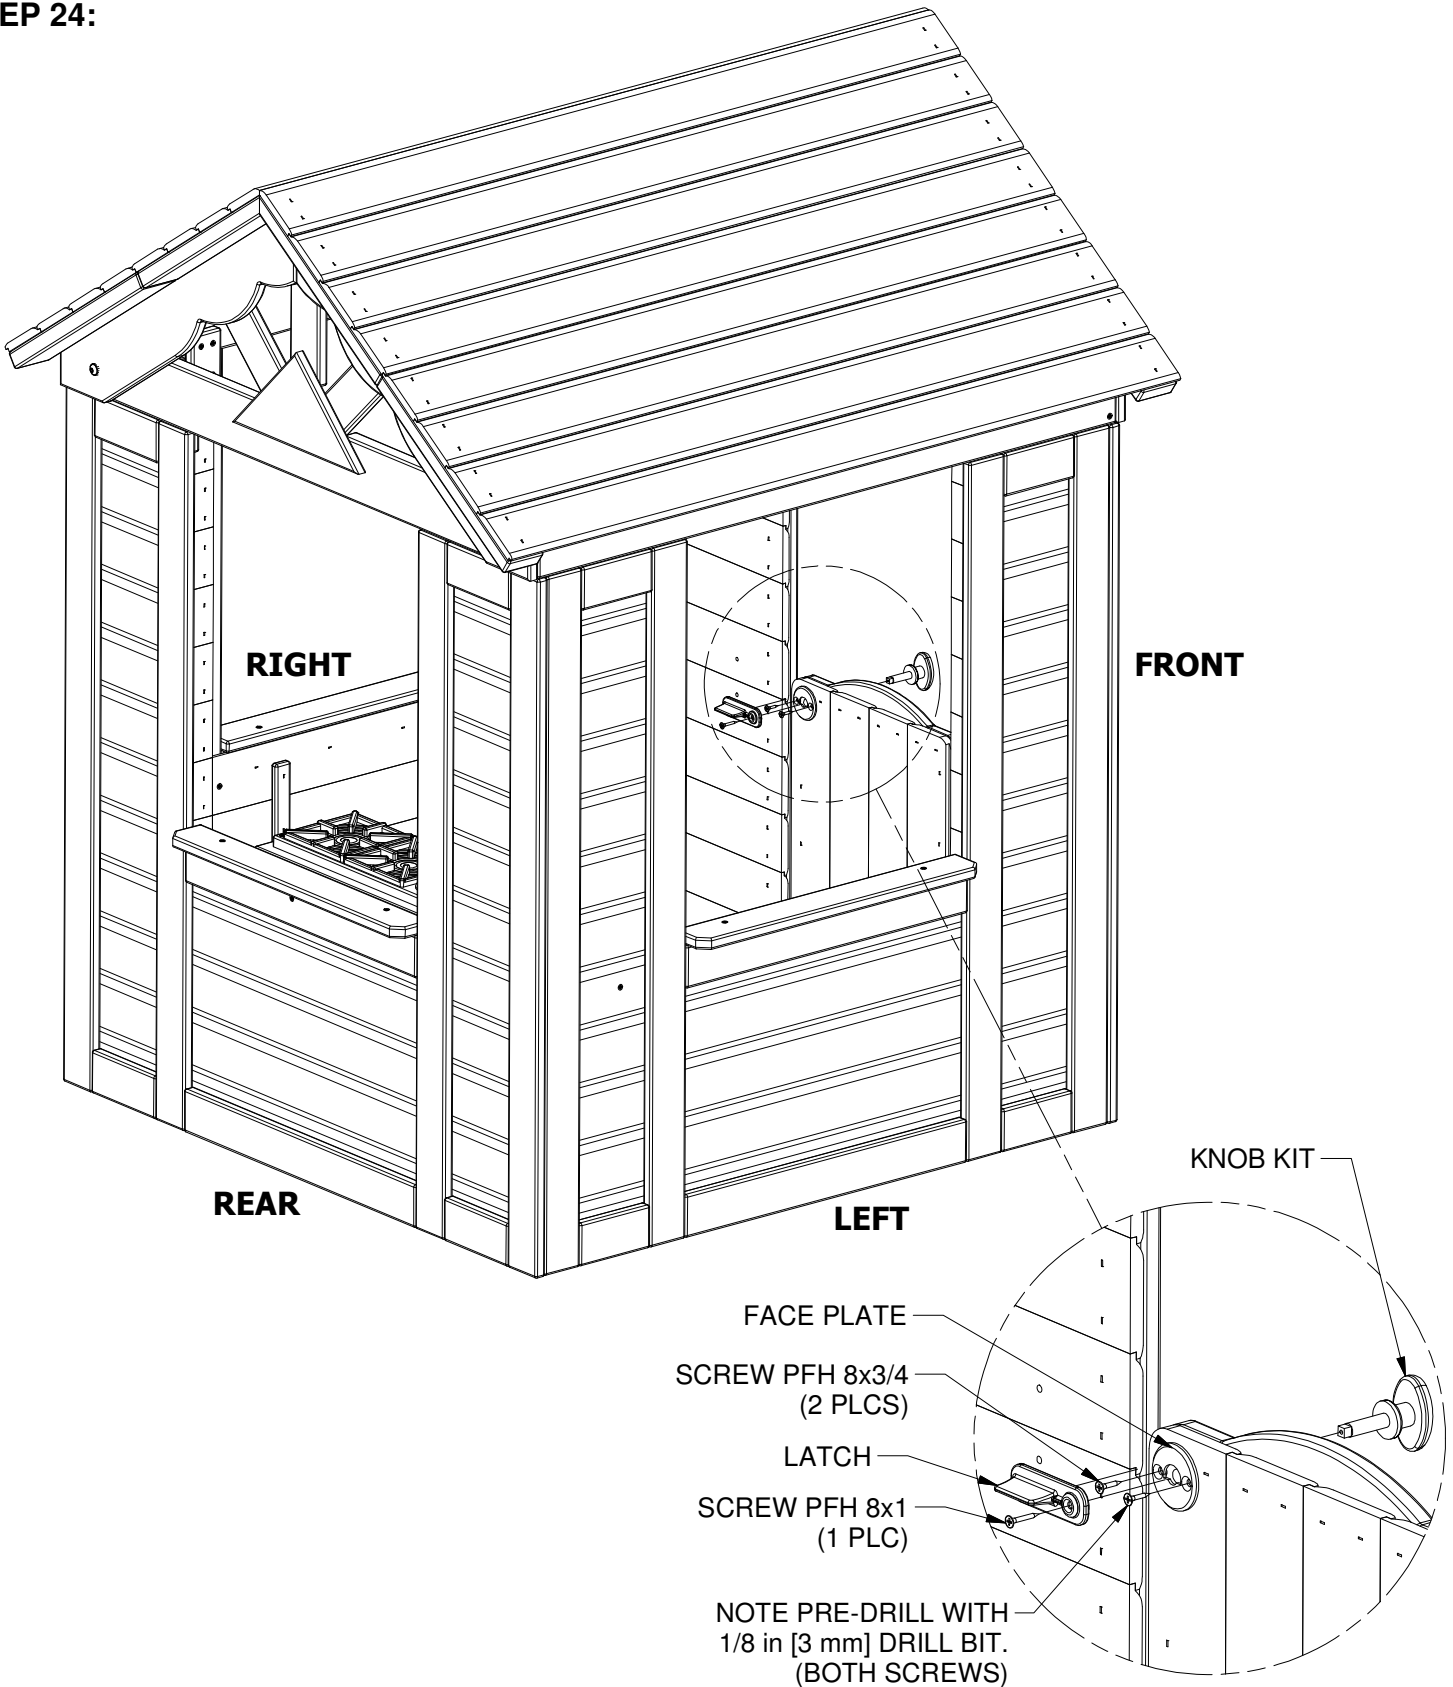





(1) PHONE KIT - A100132

STEP 25:

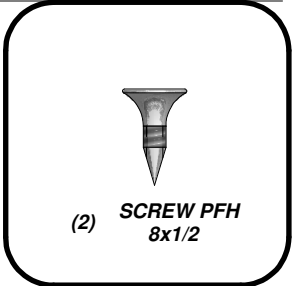



(2) SCREW PFH  
8x1/2

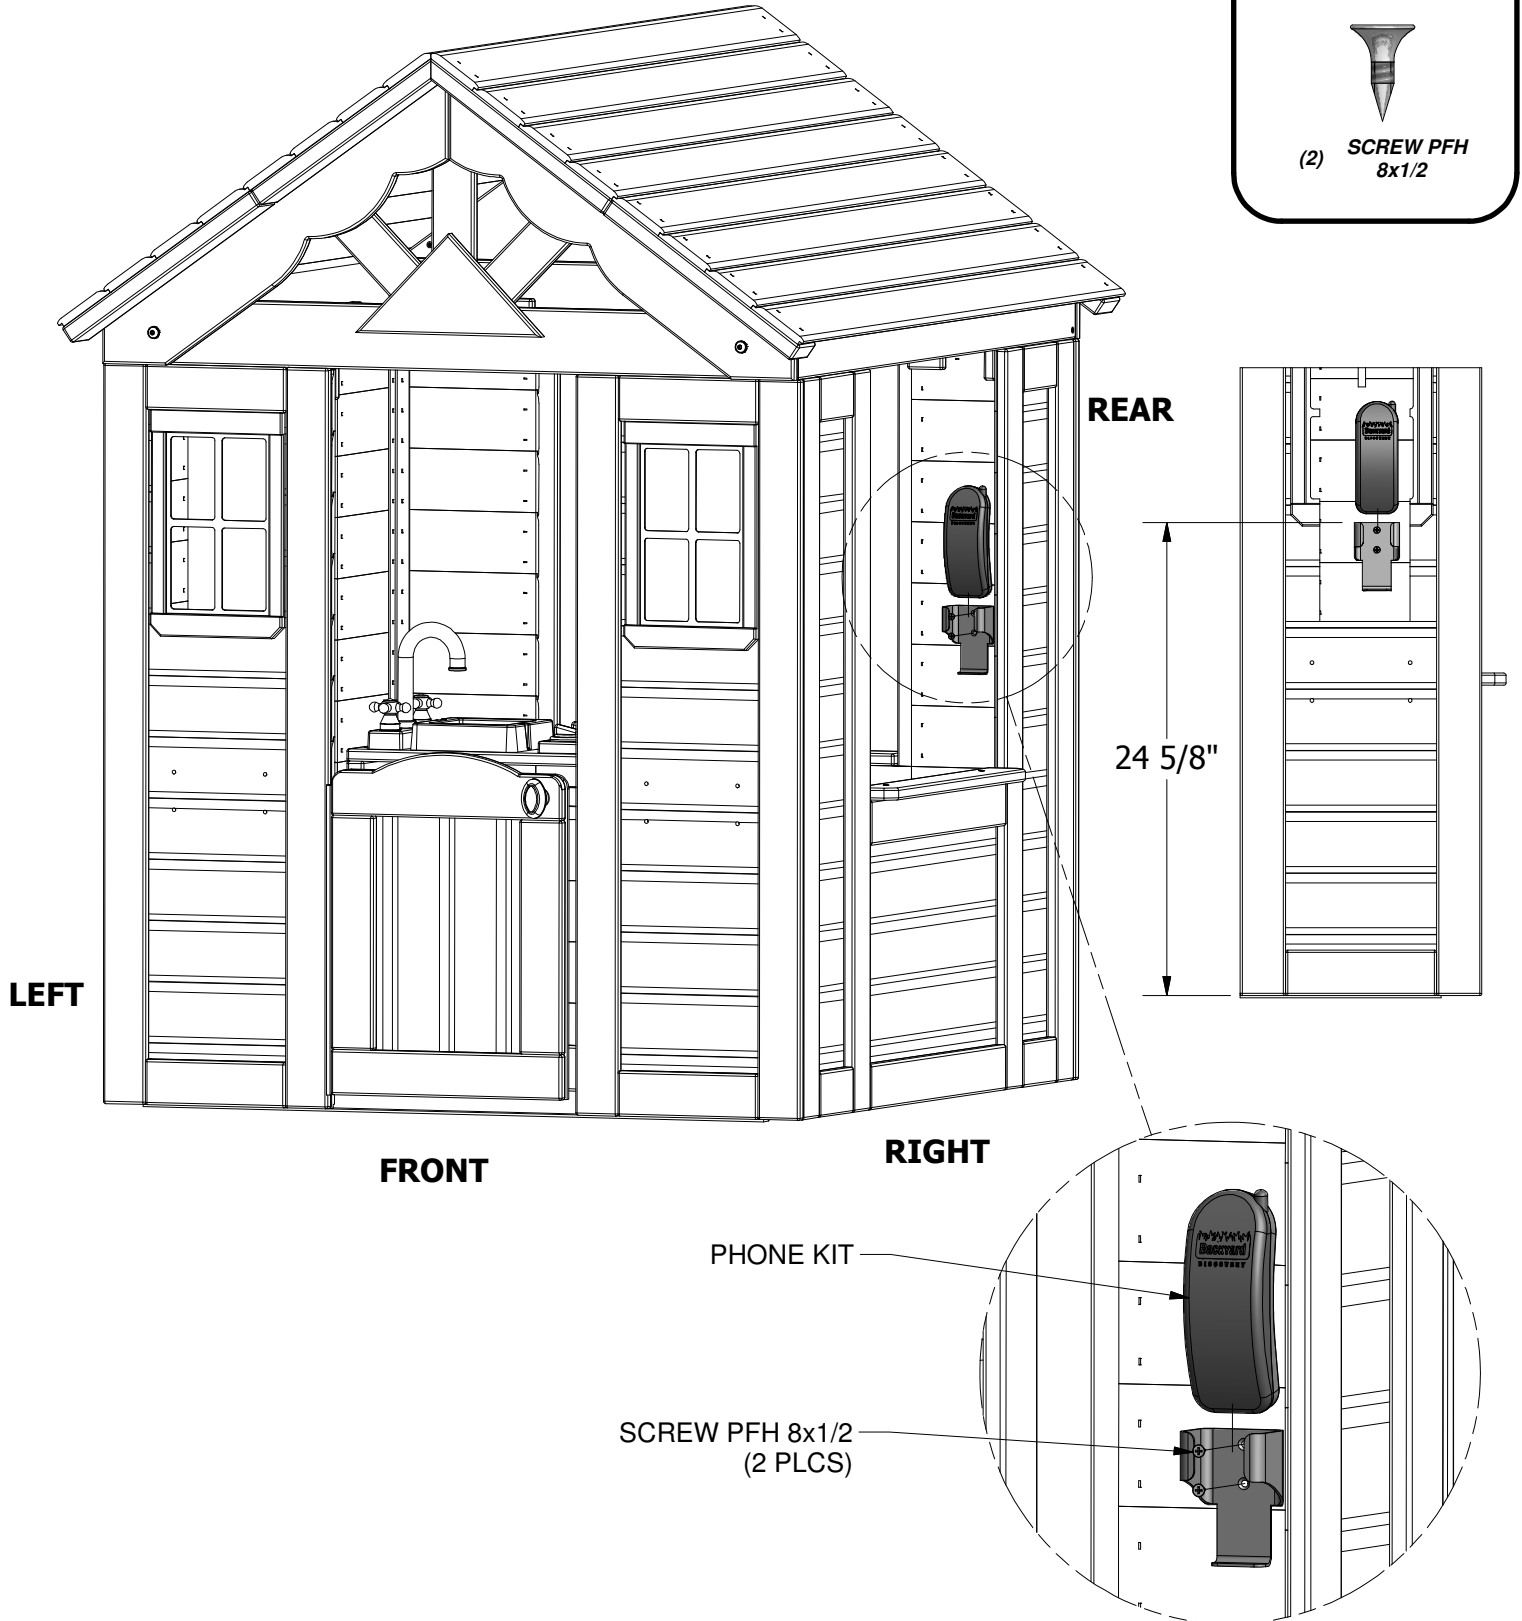

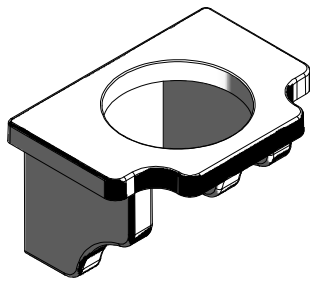

(2) FLOWER POT HOLDER - A6P00023


**STEP 26:**

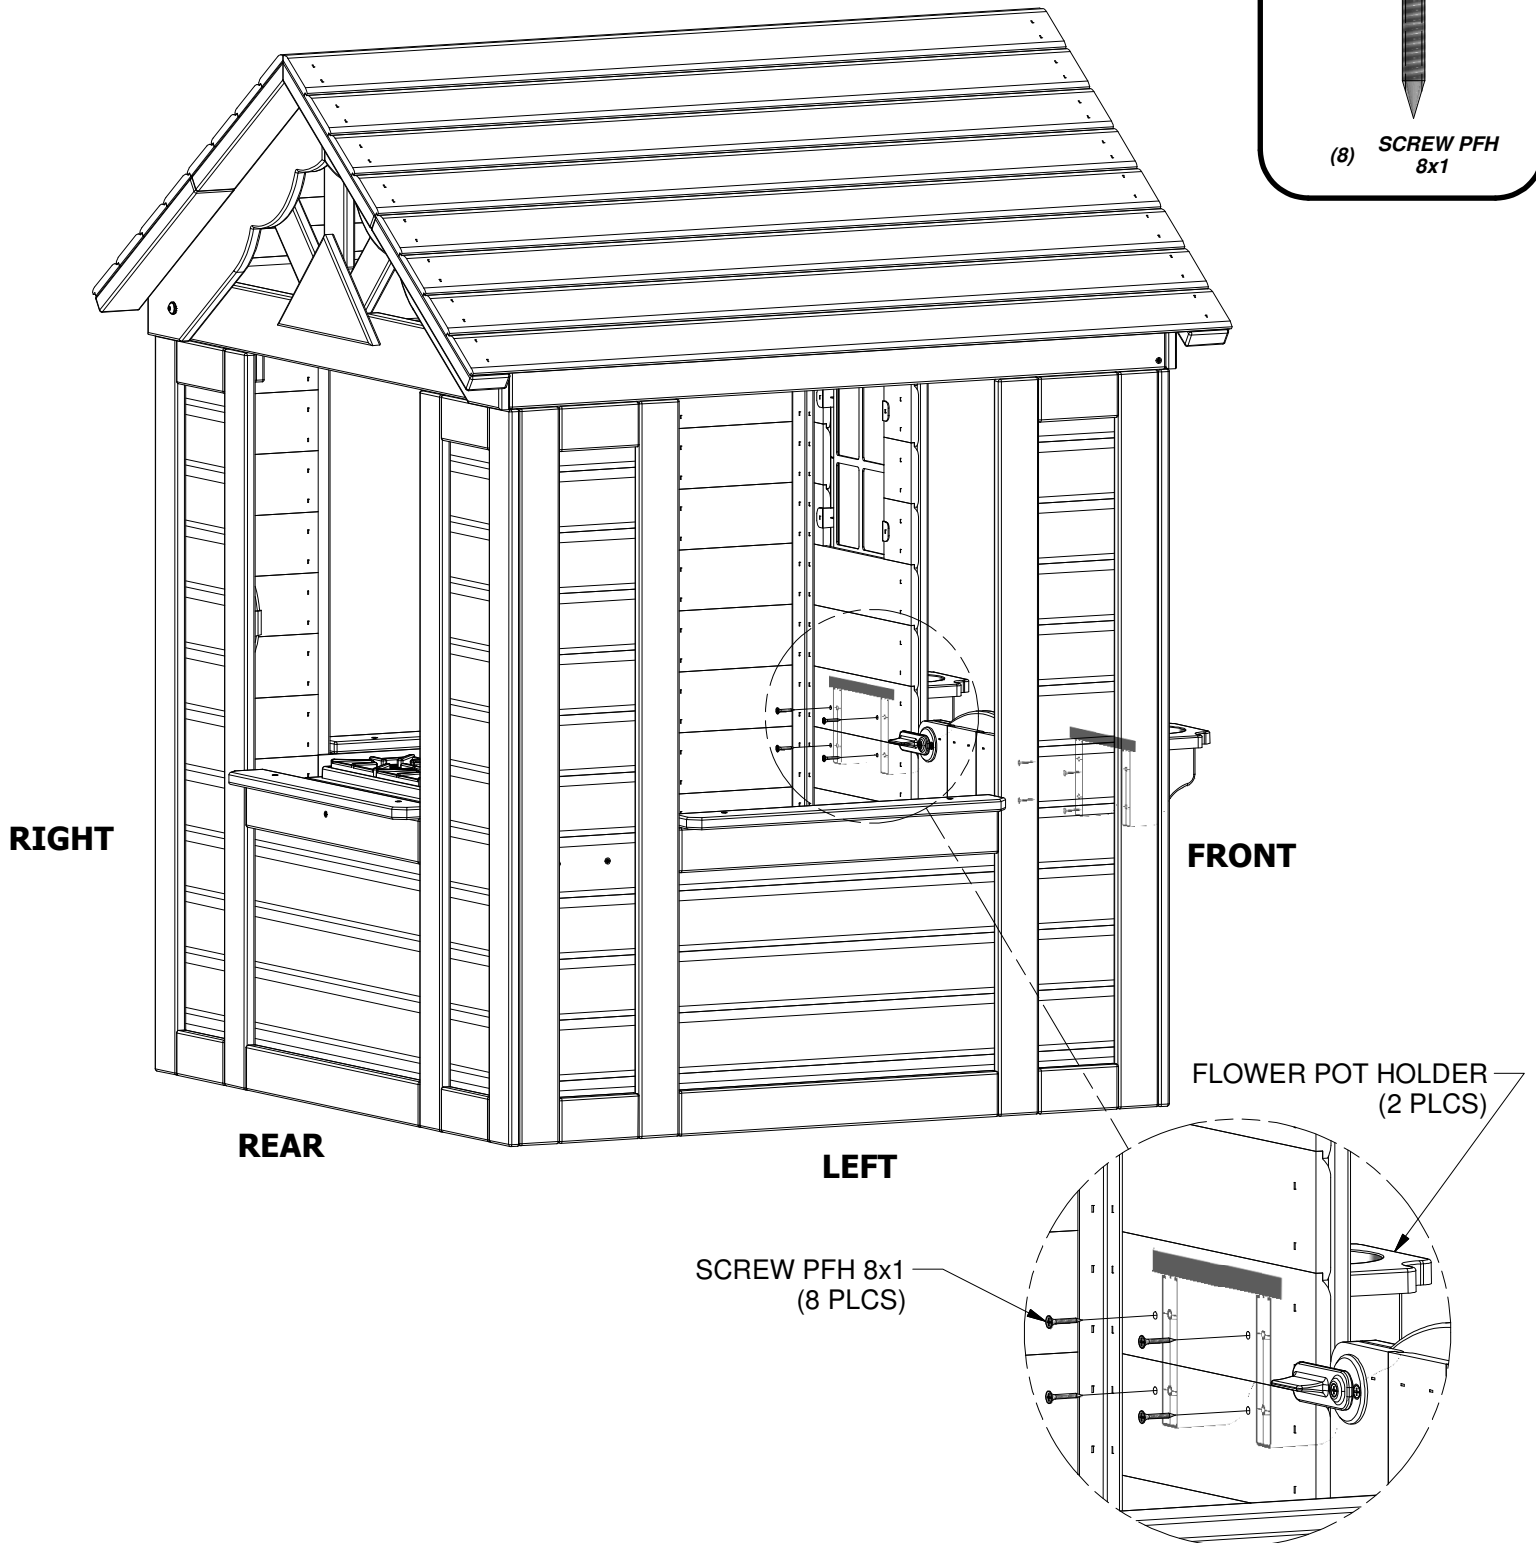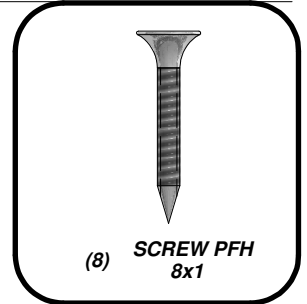



(1) **BYD ID TAG (MEDIUM) AGES 2 TO 10 - A4M00528**

**STEP 27:**

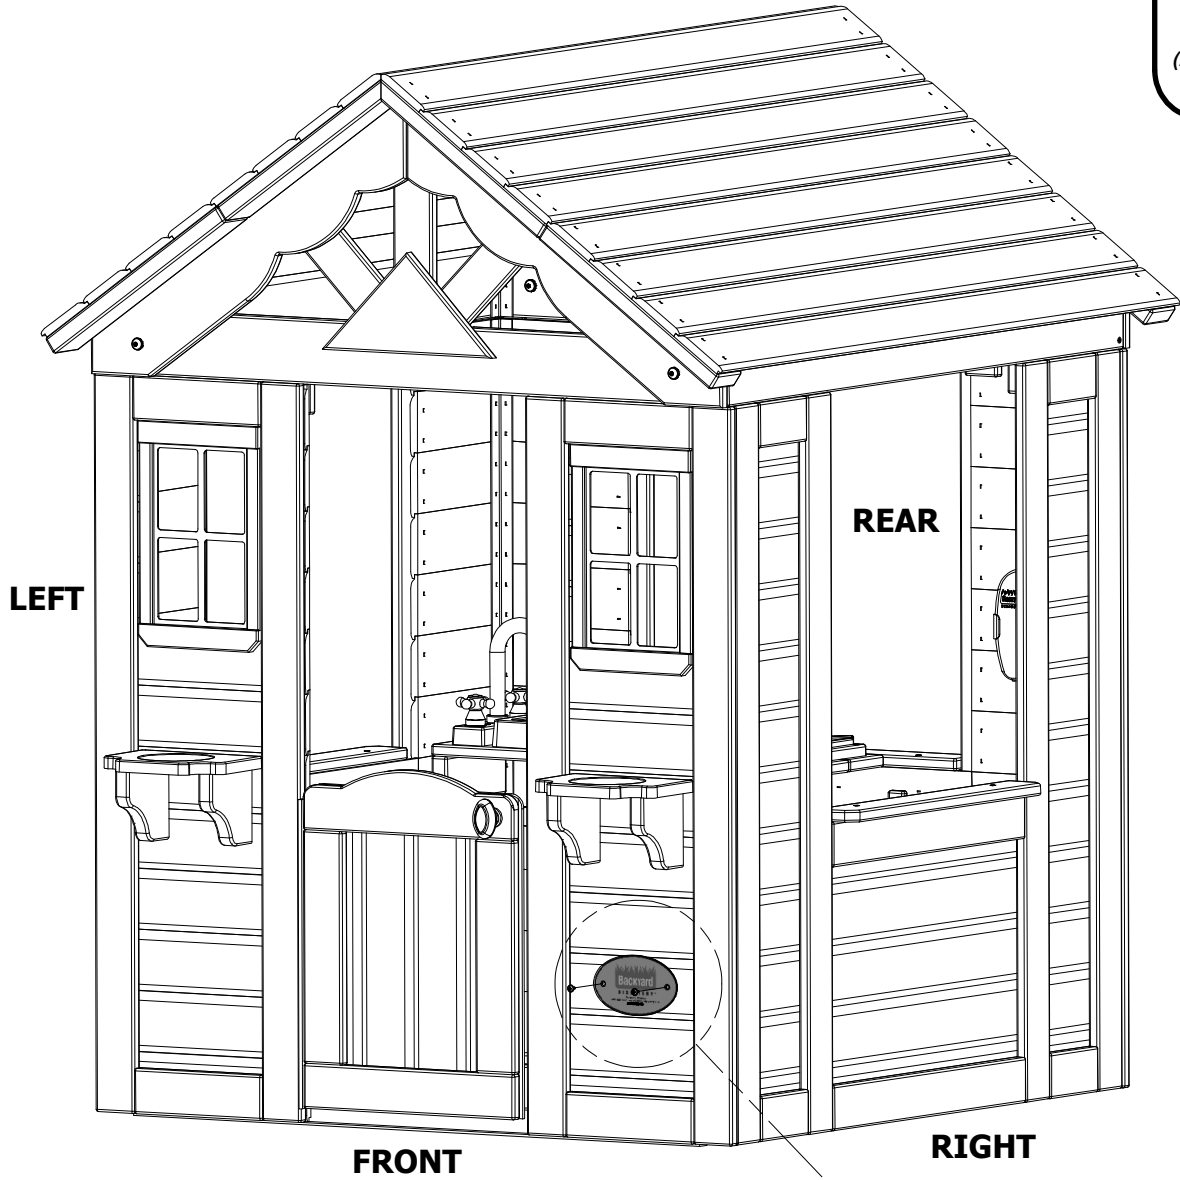

SCREW PWH 8x7/16  
(2 PLCS)

