

ADONA/MADELEINE/ROYAL UPHOLSTERED QUEEN BED


ASSEMBLY INSTRUCTIONS



BOX#1

A. HEADBOARD
B. LEG

1 PC
2 PCS

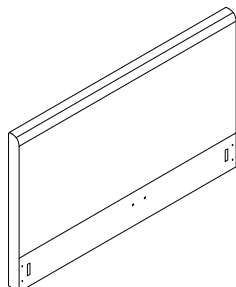

A



B


HARDWARE KIT PACKED IN BOX #1

No.	Description	Image	Quantity
1	ALLEN BOLT (5/16"x 3-1/2")		4 PCS
2	ALLEN BOLT (5/16"x 1-3/4")		4 PCS
3	FLAT WASHER (5/16")		12 PCS
4	LOCK WASHER (5/16")		12 PCS
5	ALLEN KEY (5/16")		1 PC
6	HEX NUT (5/16")		4 PCS
7	WRENCH		1 PC


BOX#2

C. FOOTBOARD
D. SLAT ROLL
E. LEG
F. CENTER SLAT SUPPORT CLEAT

1 PC
1 SET
2 PCS
2 PCS

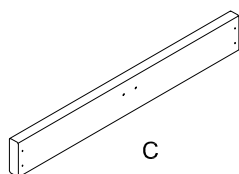

C

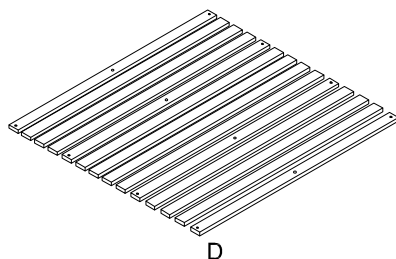

D




E



F


HARDWARE KIT PACKED IN BOX #2

8	THREADED BOLT (5/16"x 3-1/2")		8 PCS
9	ALLEN BOLT (5/16"x 3-1/2")		4 PCS
10	ALLEN BOLT (5/16"x 2-1/2")		4 PCS
11	ALLEN BOLT (1/4"x 1-1/4")		4 PCS
12	FLAT WASHER (5/16")		16 PCS
13	FLAT WASHER (1/4")		4 PCS
14	LOCK WASHER (5/16")		16 PCS
15	LOCK WASHER (1/4")		4 PCS
16	HEX NUT (5/16")		8 PCS
17	PHILLIPS SCREW (M4 x 32mm)		10 PCS
18	ALLEN KEY (5/16")		1 PC
19	WRENCH		1 PC
20	CONNECTING BRACKET		4 PCS


BOX#3

G. SIDE RAIL
H. CENTER SLAT SUPPORT
I. SUPPORT LEG

2 PCS
1 PC
4 PCS

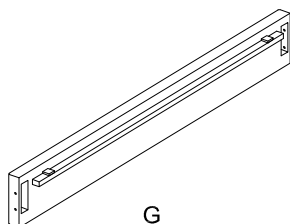

G




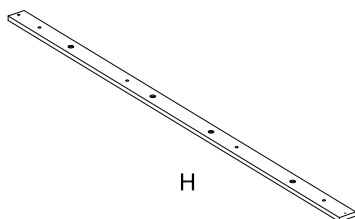


H



I

FULLY ASSEMBLED

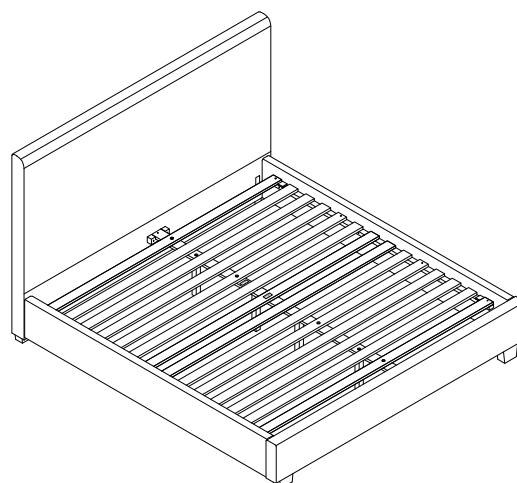


ADONA/MADELEINE/ROYAL UPHOLSTERED QUEEN BED


ASSEMBLY INSTRUCTIONS




STEP 1:

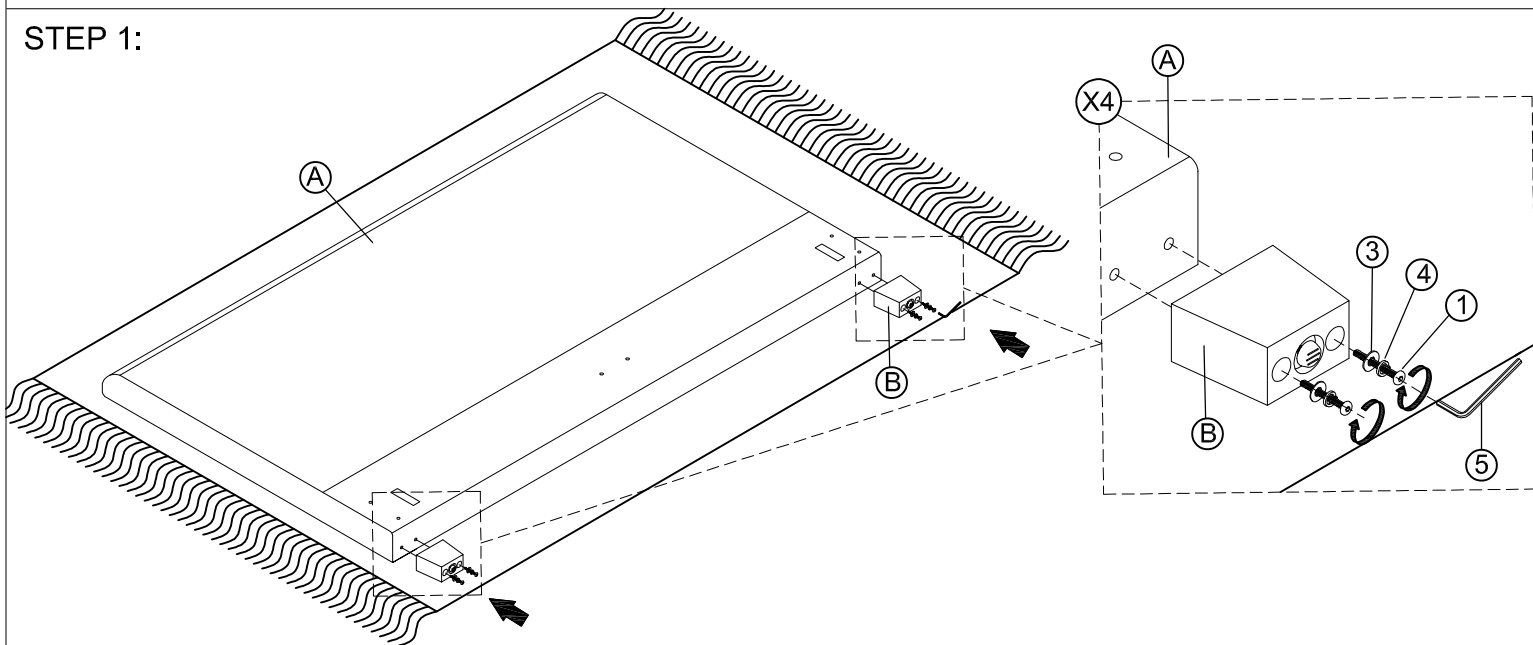

STEP 2:

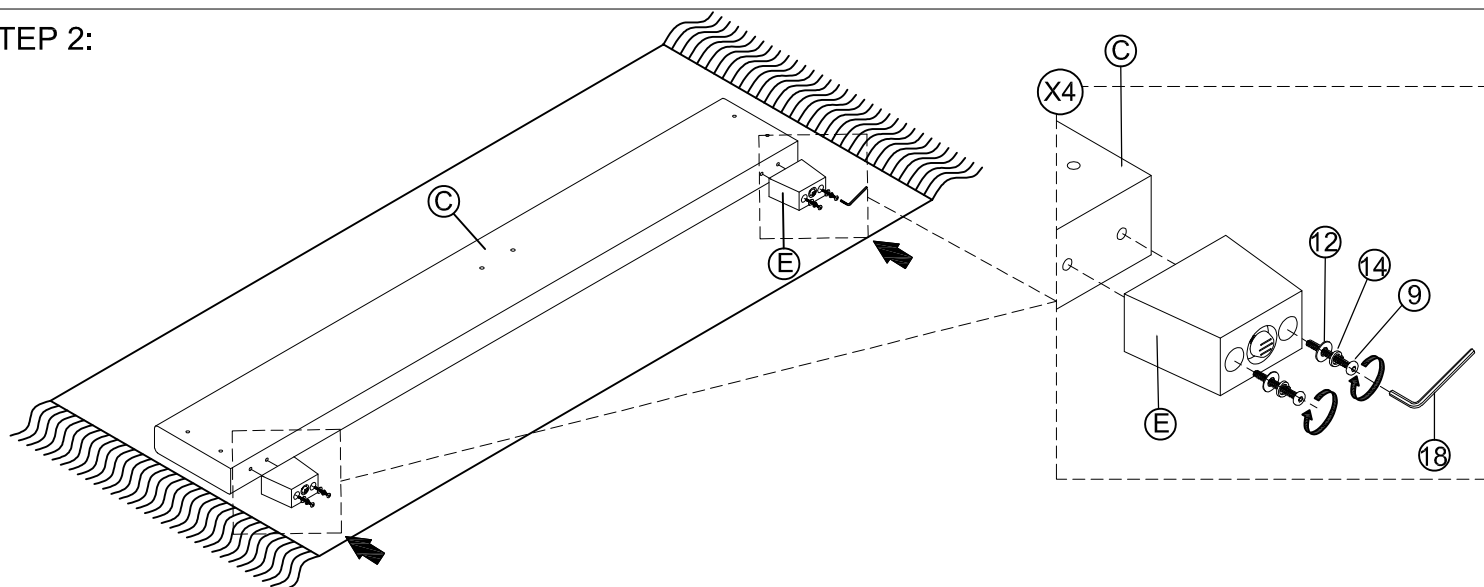


STEP 3:

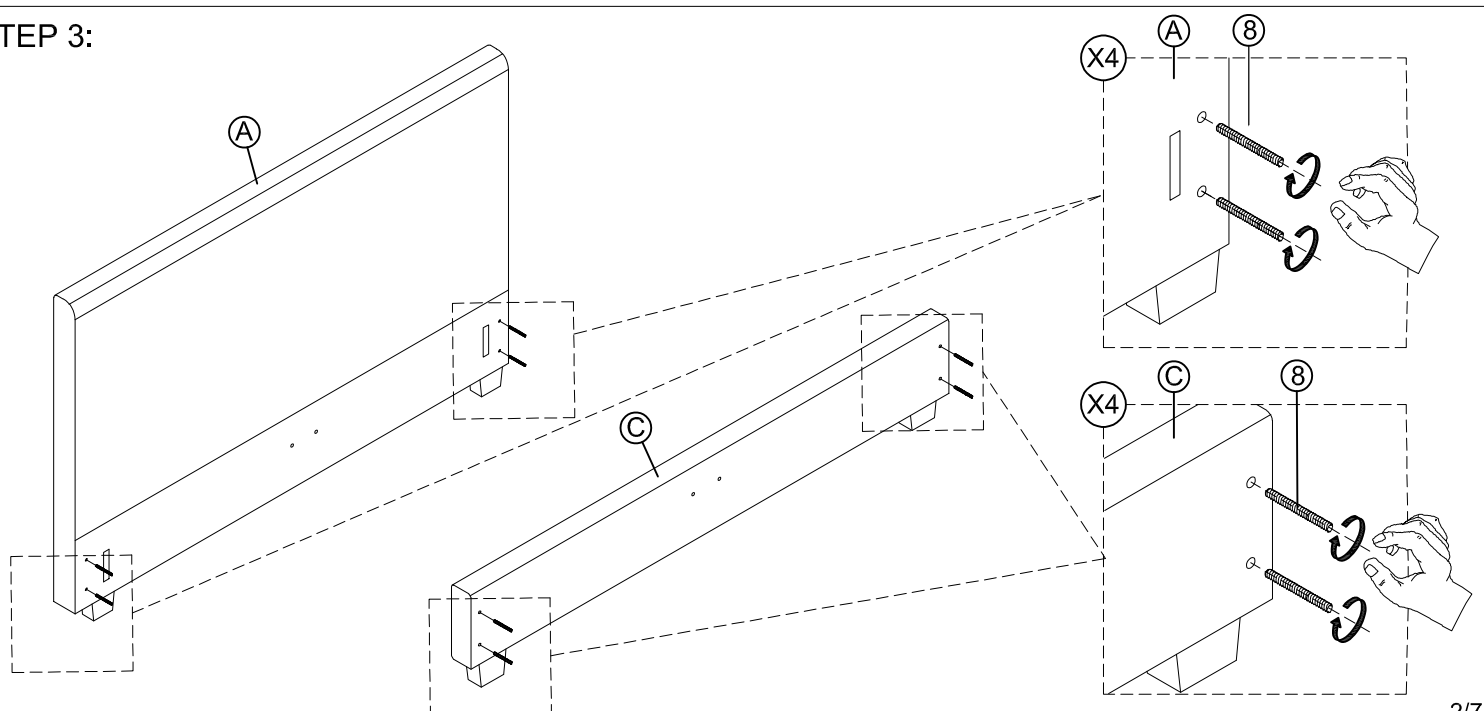


ADONA/MADELEINE/ROYAL UPHOLSTERED QUEEN BED

ASSEMBLY INSTRUCTIONS

STEP 4:

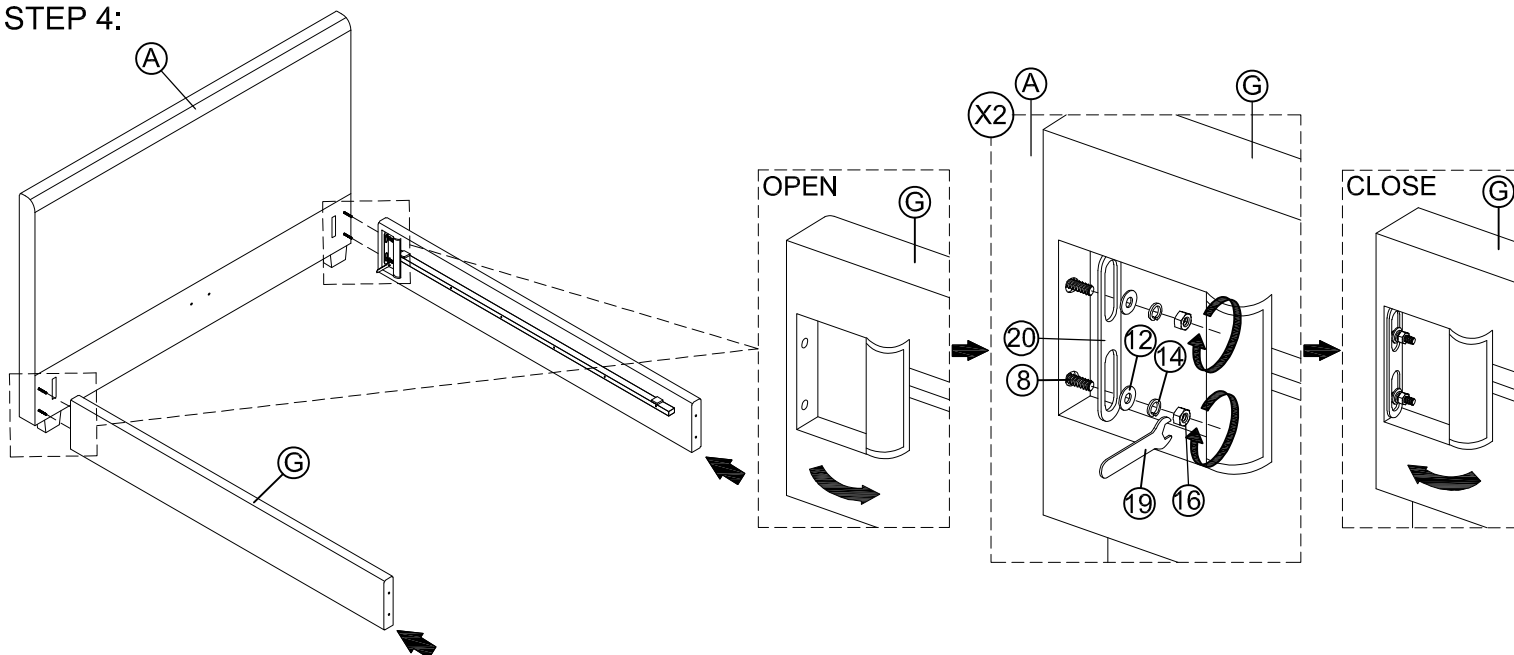

STEP 5:

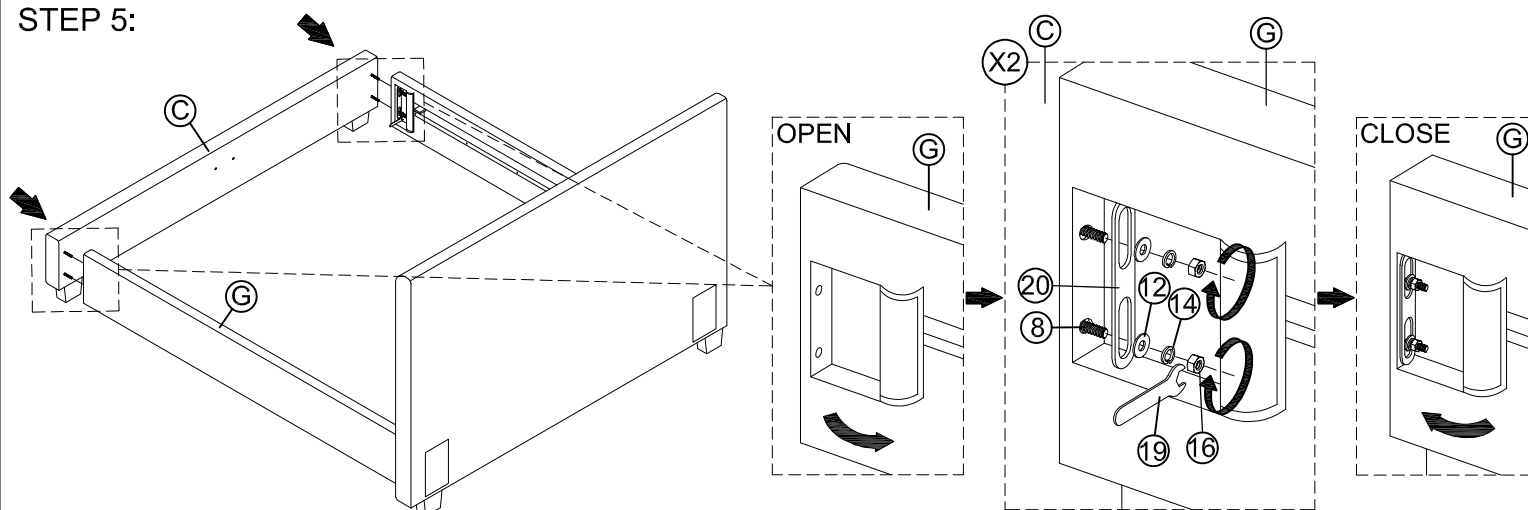


STOP



- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 6-10 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 6.

STEP 6:

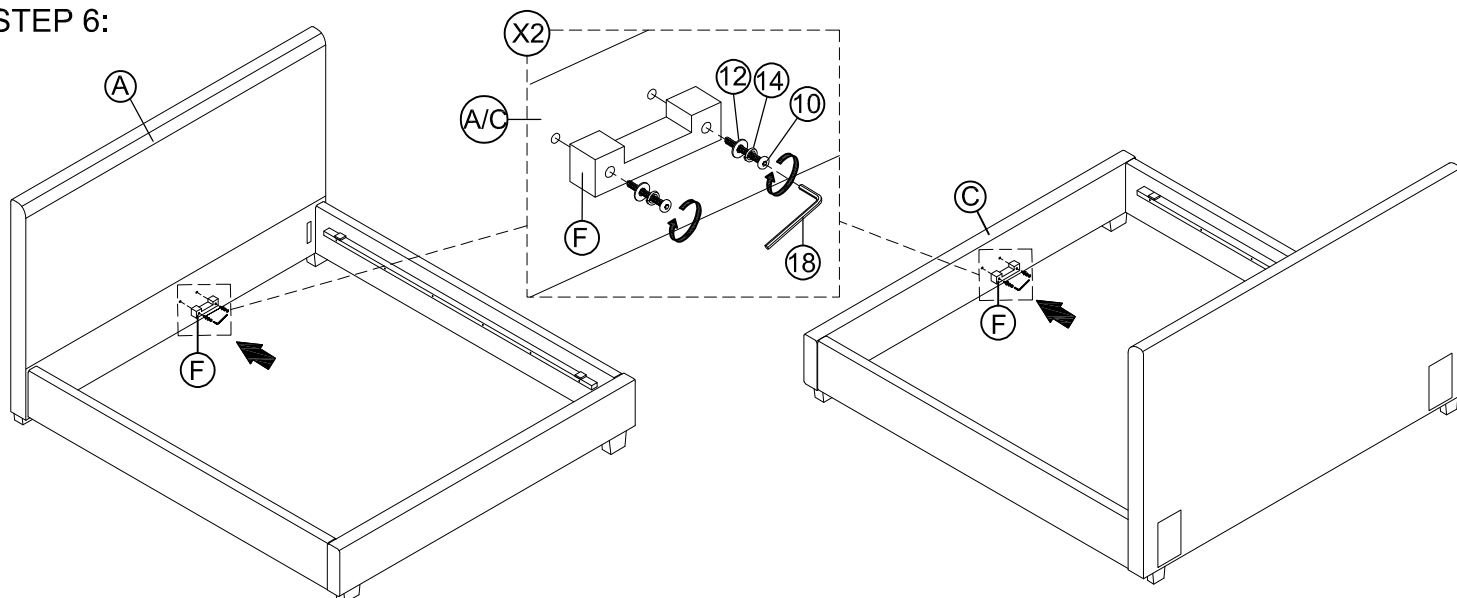


ADONA/MADELEINE/ROYAL UPHOLSTERED QUEEN BED


ASSEMBLY INSTRUCTIONS



STEP 7:

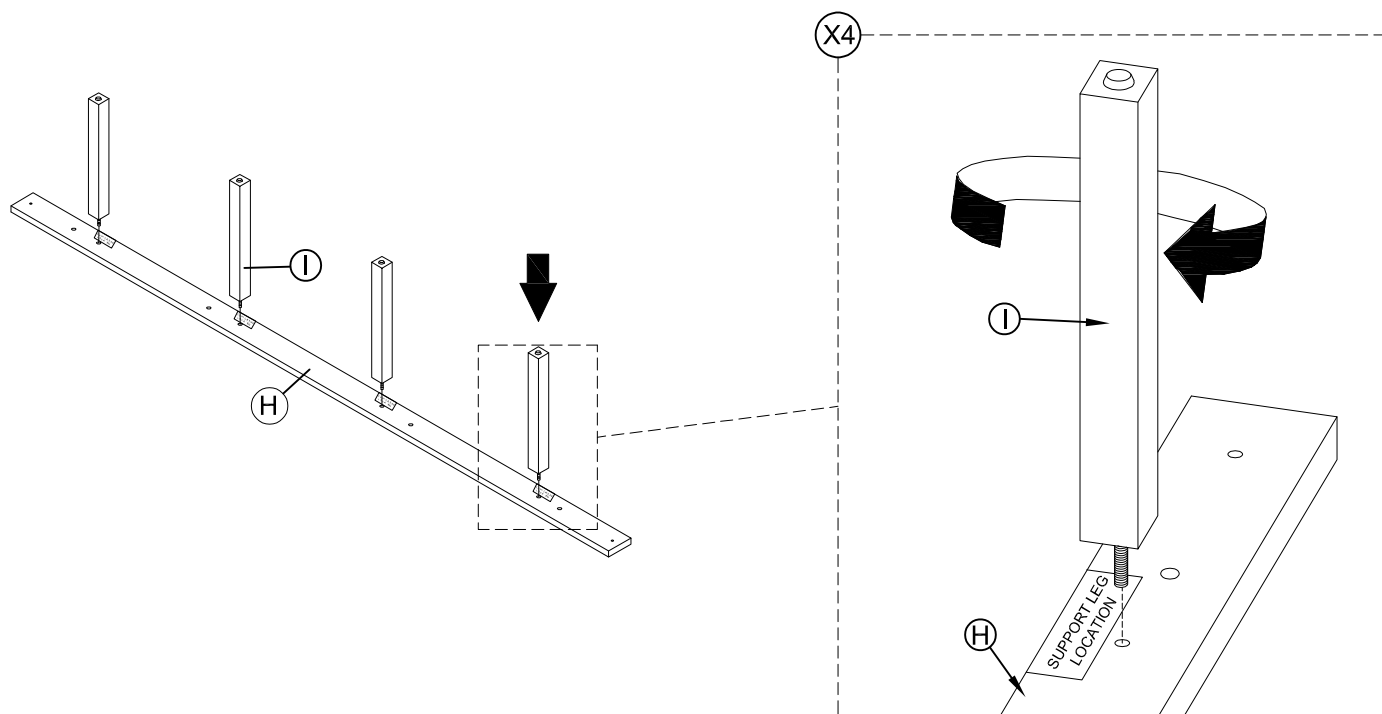

STEP 8:

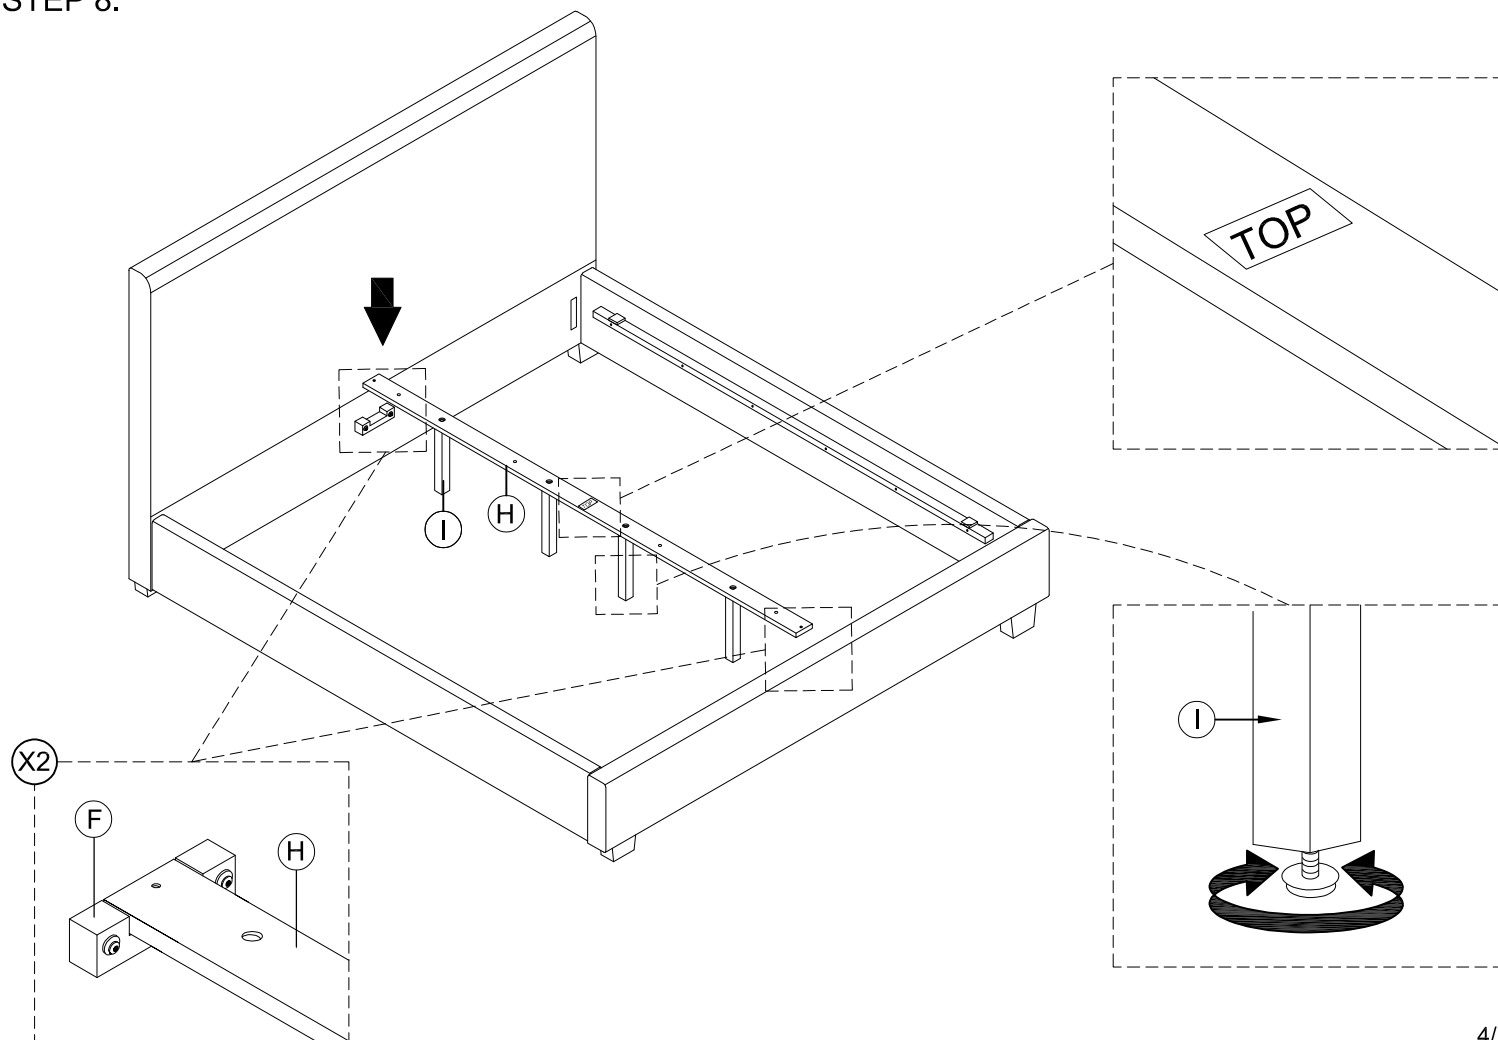


ADONA/MADELEINE/ROYAL UPHOLSTERED QUEEN BED


ASSEMBLY INSTRUCTIONS



STEP 9:

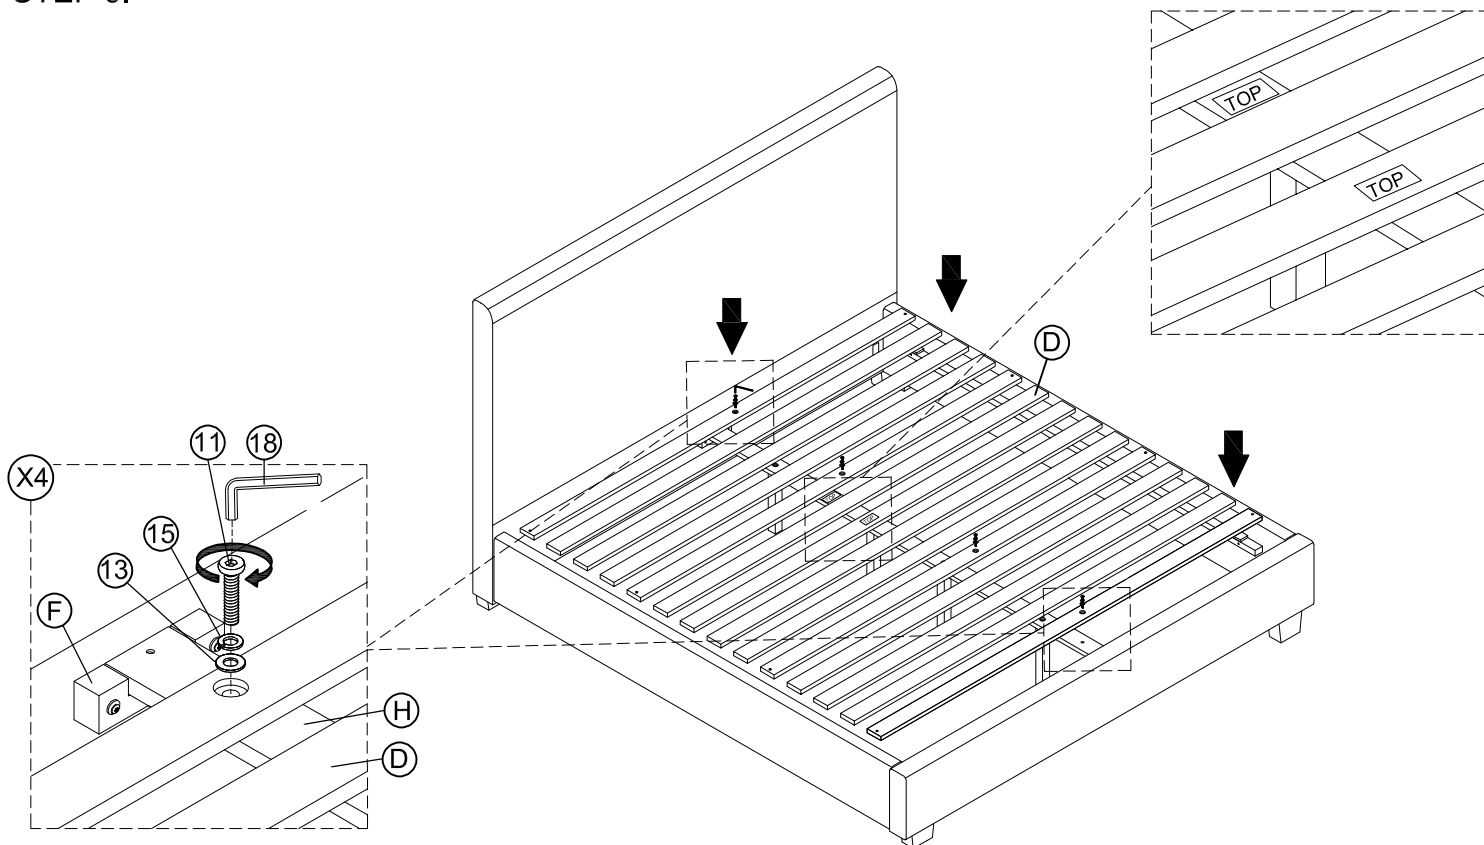


STEP 10:

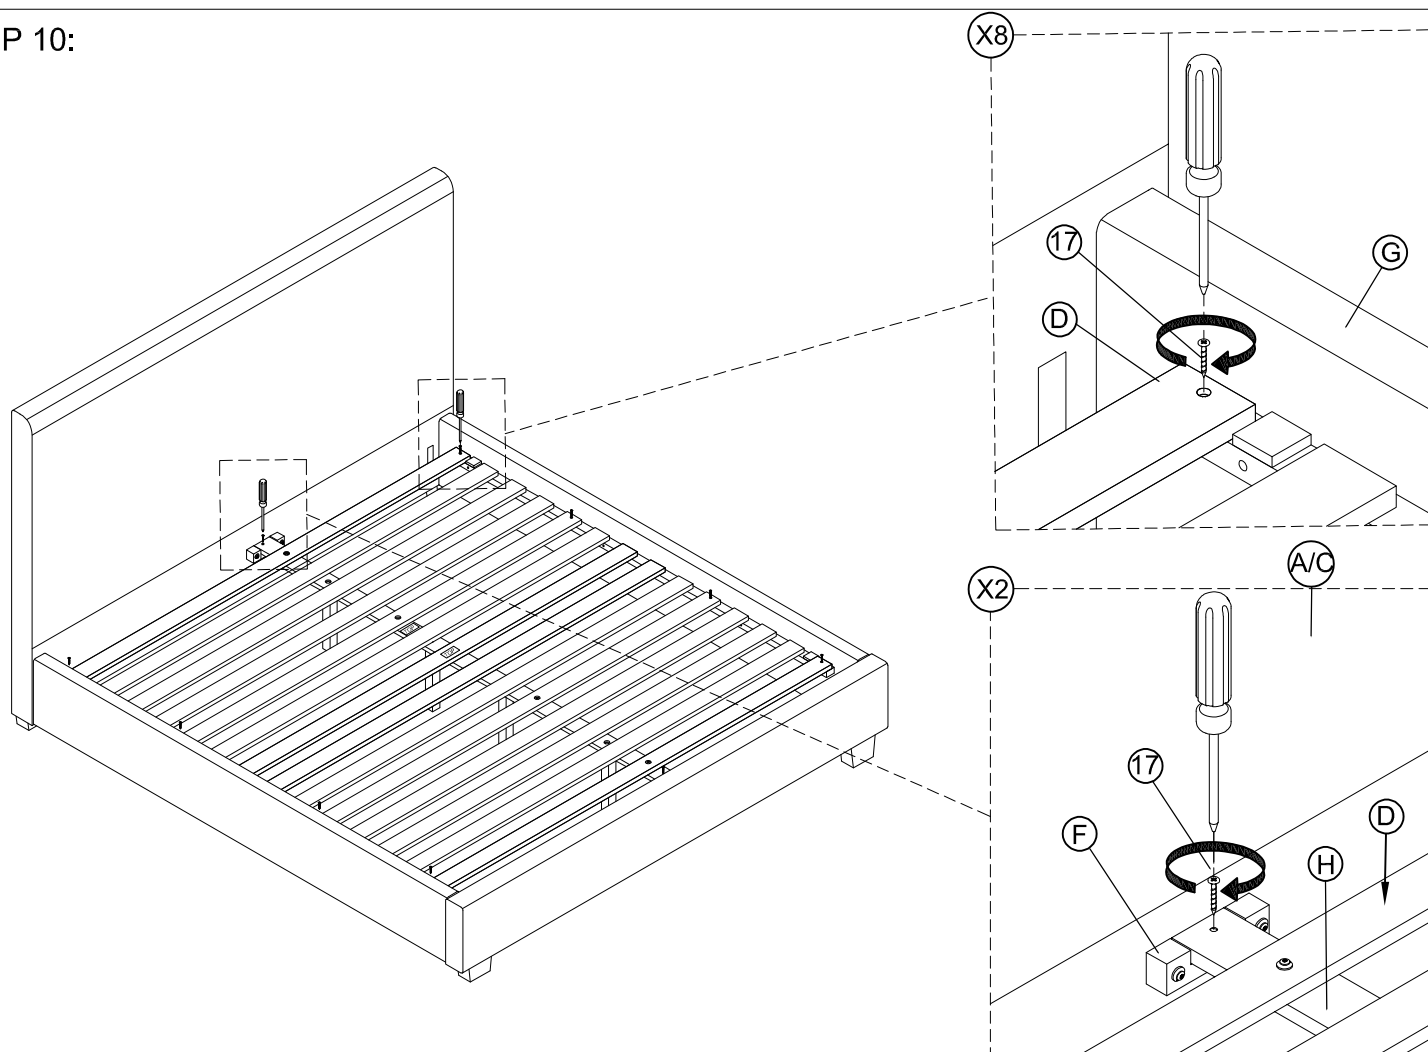

ADONA/MADELEINE/ROYAL UPHOLSTERED QUEEN BED

ASSEMBLY INSTRUCTIONS

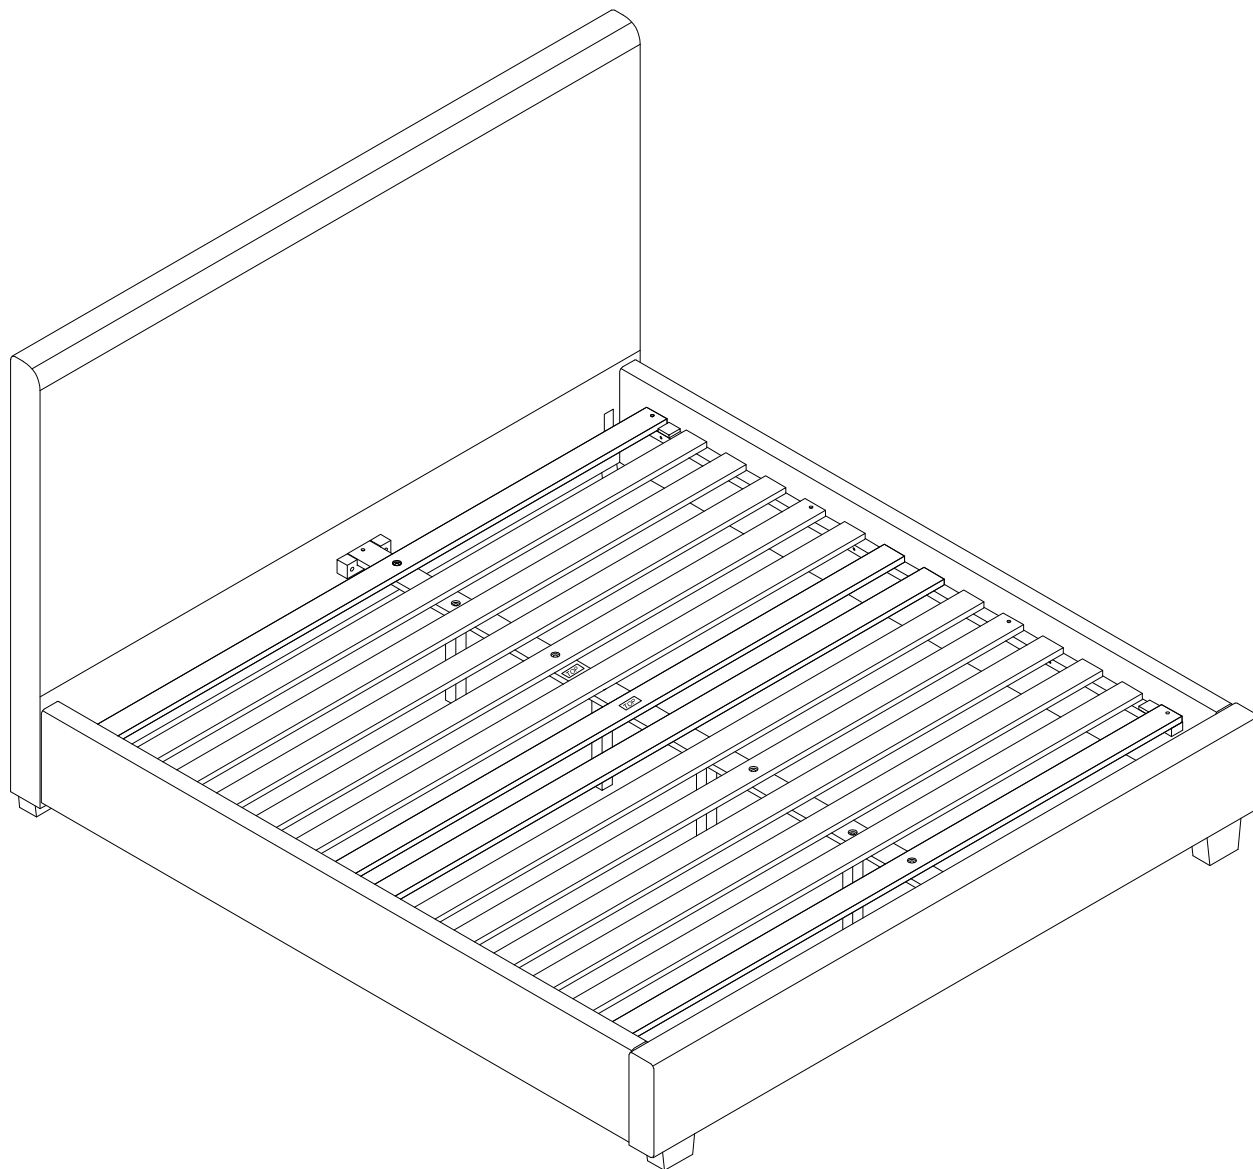


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.

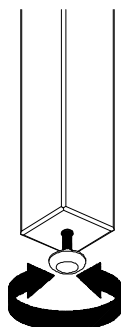

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

ADONA/MADELEINE/ROYAL UPHOLSTERED QUEEN BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

D. SLAT ROLL	1 SET
F. CENTER SLAT SUPPORT CLEAT	2 PCS
H. CENTER SLAT SUPPORT	1 PC
I. SUPPORT LEG	4 PCS

STEP 1:

USE ALLEN KEY (18) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

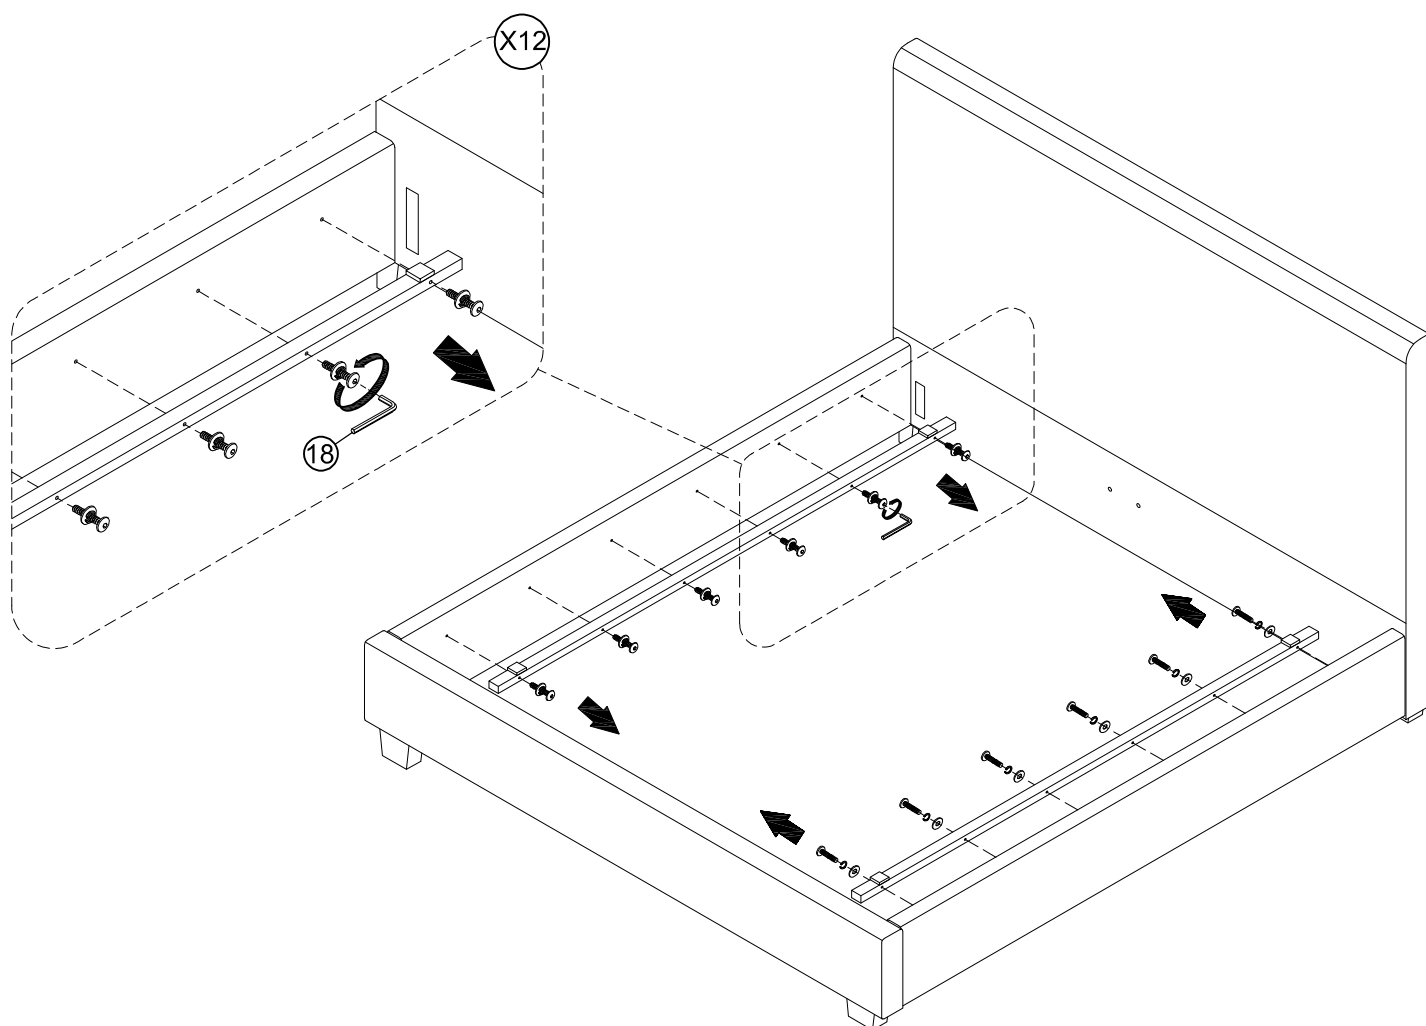

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION

ADONA/MADELEINE/ROYAL UPHOLSTERED KING BED


ASSEMBLY INSTRUCTIONS



BOX#1

A. HEADBOARD
B. LEG

1 PC
2 PCS

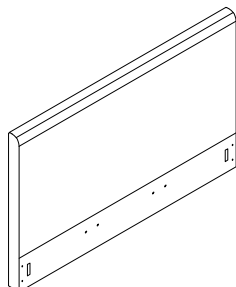

A



B


HARDWARE KIT PACKED IN BOX #1

No.	Description	Image	Quantity
1	ALLEN BOLT (5/16"x 3-1/2")		4 PCS
2	ALLEN BOLT (5/16"x 1-3/4")		4 PCS
3	FLAT WASHER (5/16")		12 PCS
4	LOCK WASHER (5/16")		12 PCS
5	ALLEN KEY (5/16")		1 PC
6	HEX NUT (5/16")		4 PCS
7	WRENCH		1 PC


BOX#2

C. FOOTBOARD
D. SLAT ROLL
E. LEG
F. CENTER SLAT SUPPORT CLEAT

1 PC
1 SET
2 PCS
4 PCS

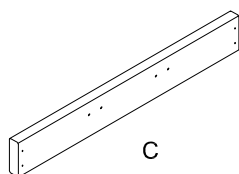

C

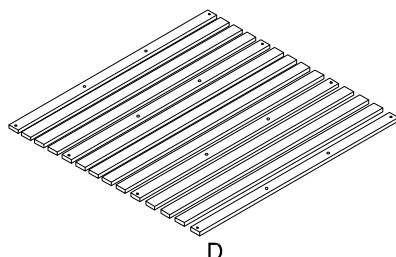

D



E



F


HARDWARE KIT PACKED IN BOX #2

8	THREADED BOLT (5/16"x 3-1/2")		8 PCS
9	ALLEN BOLT (5/16"x 3-1/2")		4 PCS
10	ALLEN BOLT (5/16"x 2-1/2")		8 PCS
11	ALLEN BOLT (1/4"x 1-1/4")		8 PCS
12	FLAT WASHER (5/16")		20 PCS
13	FLAT WASHER (1/4")		8 PCS
14	LOCK WASHER (5/16")		20 PCS
15	LOCK WASHER (1/4")		8 PCS
16	HEX NUT (5/16")		8 PCS
17	PHILLIPS SCREW (M4 x 32mm)		12 PCS
18	ALLEN KEY (5/16")		1 PC
19	WRENCH		1 PC
20	CONNECTING BRACKET		4 PCS


BOX#3

G. SIDE RAIL
H. CENTER SLAT SUPPORT
I. SUPPORT LEG

2 PCS
2 PCS
8 PCS

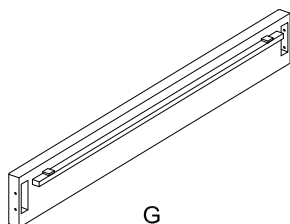

G




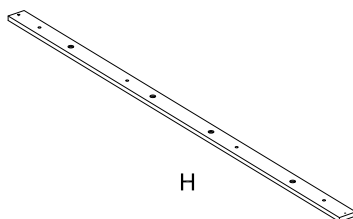


H



I

FULLY ASSEMBLED

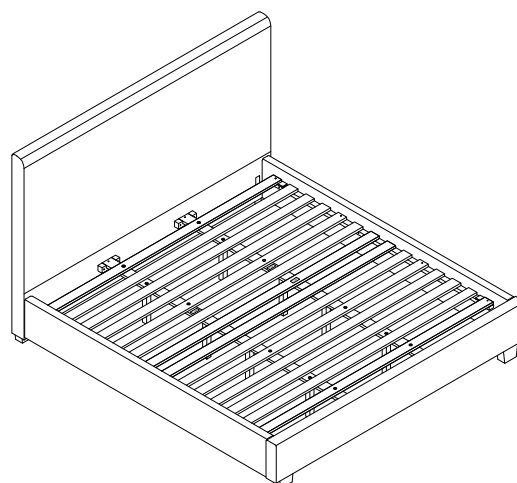


ADONA/MADELEINE/ROYAL UPHOLSTERED KING BED


ASSEMBLY INSTRUCTIONS




STEP 1:

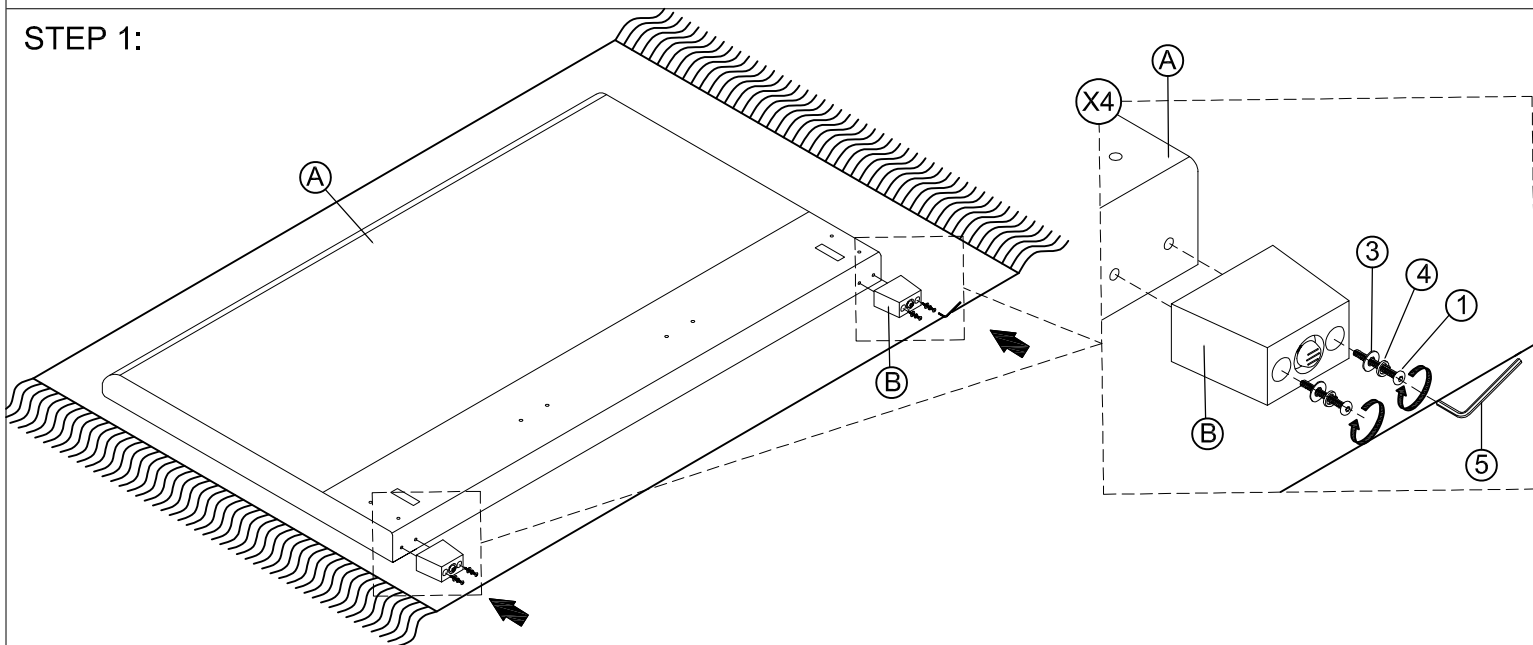

STEP 2:

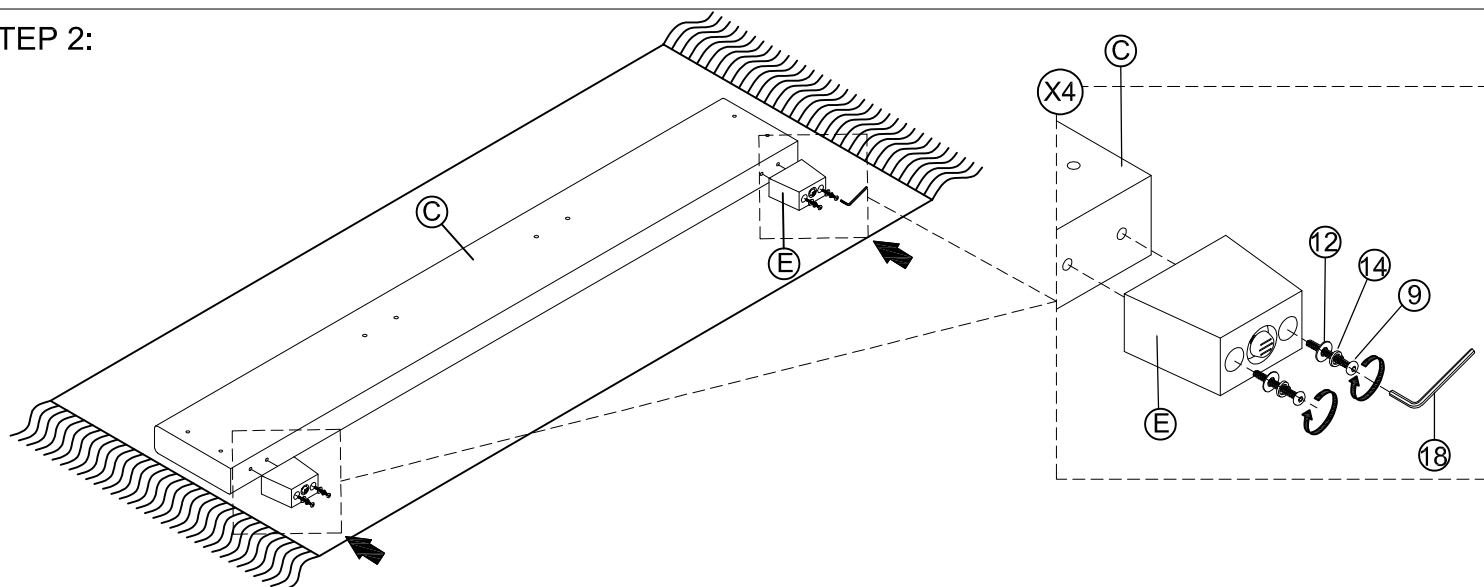


STEP 3:

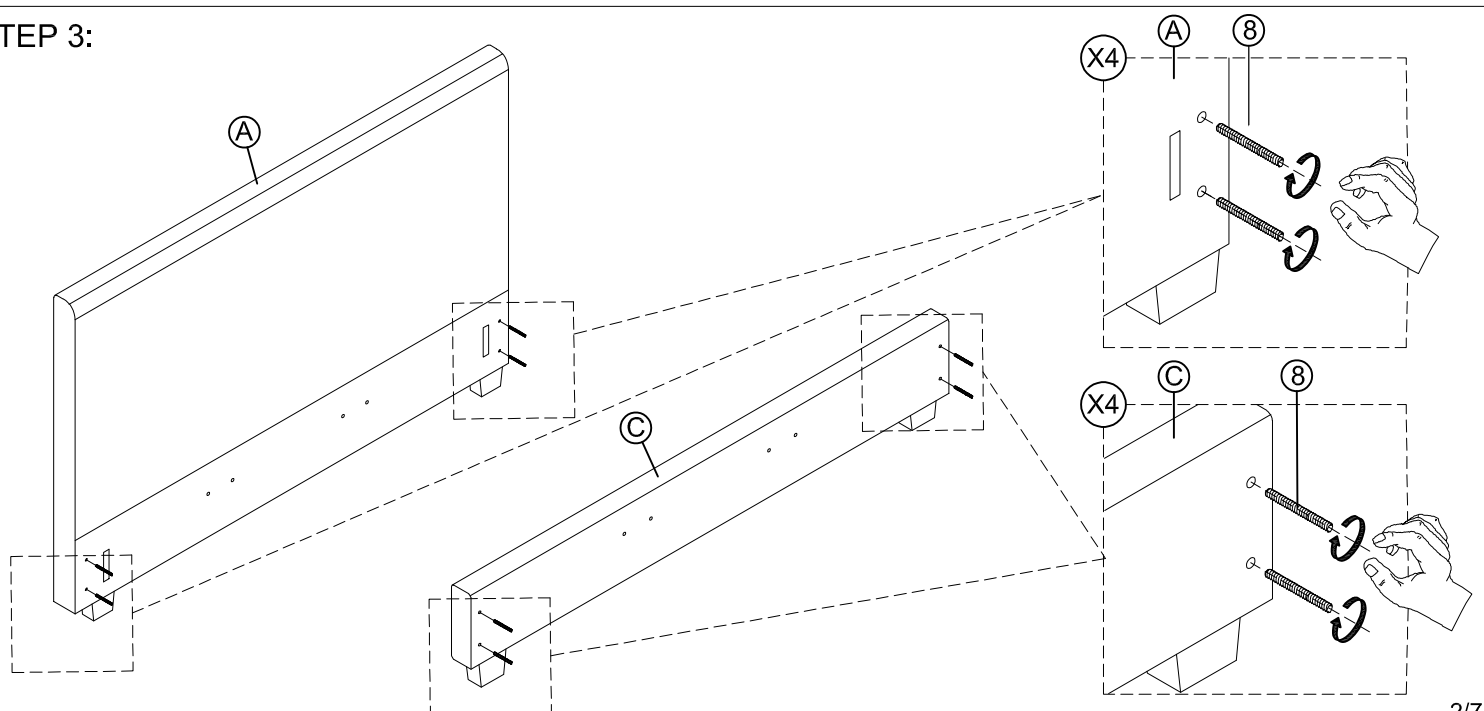


ADONA/MADELEINE/ROYAL UPHOLSTERED KING BED

ASSEMBLY INSTRUCTIONS

STEP 4:

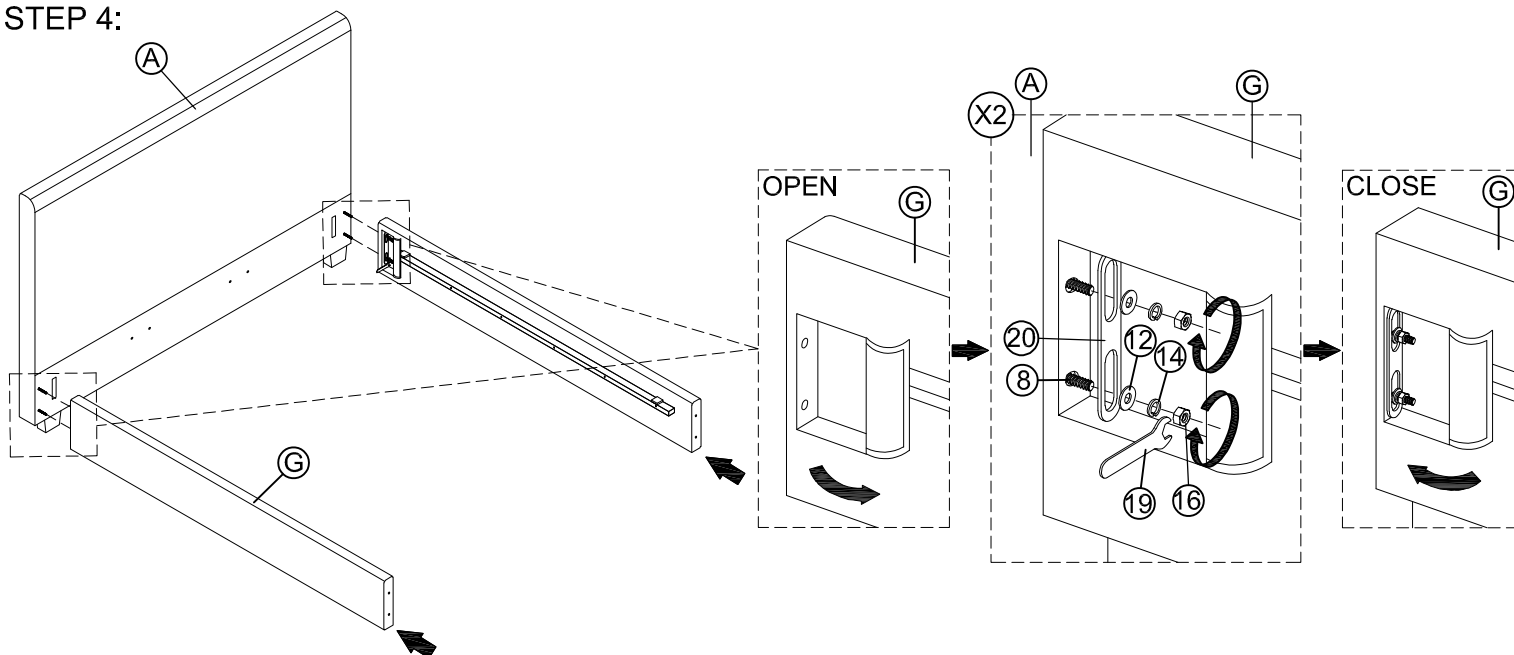

STEP 5:

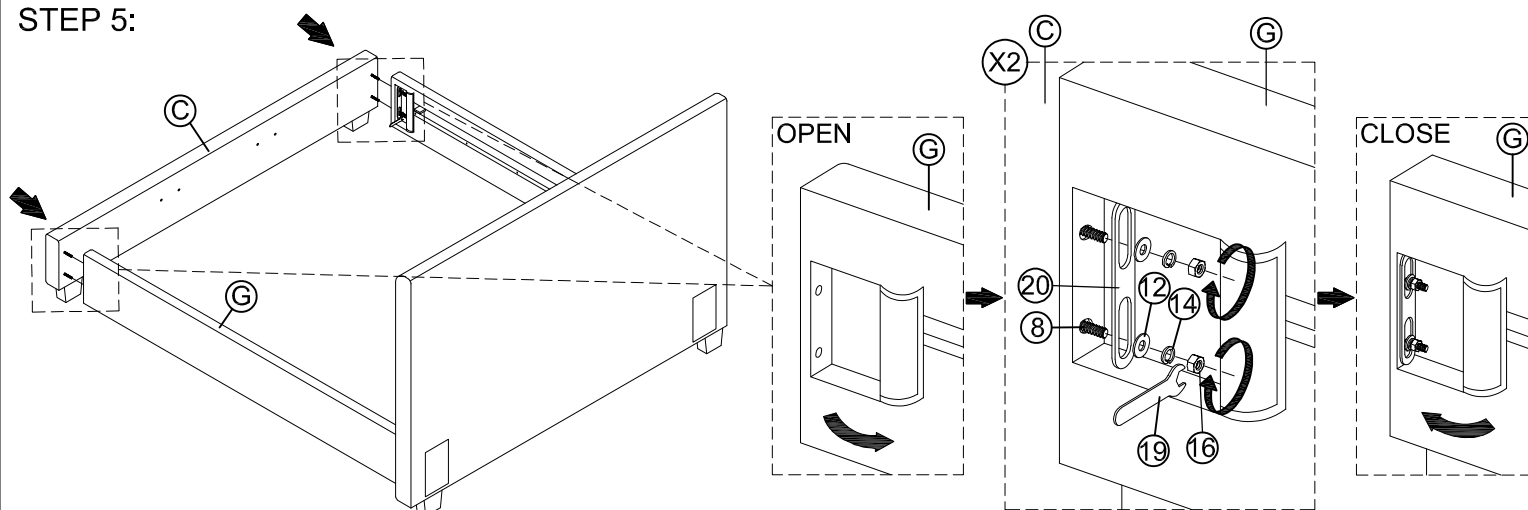


STOP



- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 6-10 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 6.

STEP 6:

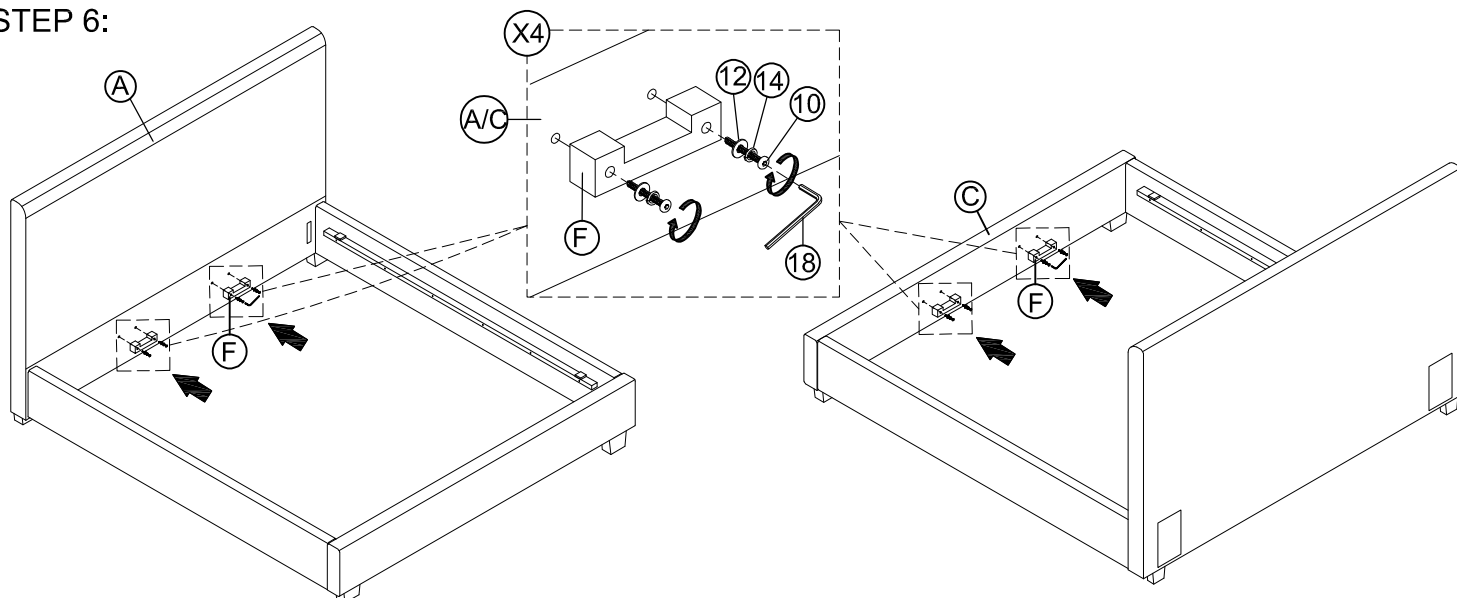


ADONA/MADELEINE/ROYAL UPHOLSTERED KING BED


ASSEMBLY INSTRUCTIONS



STEP 7:

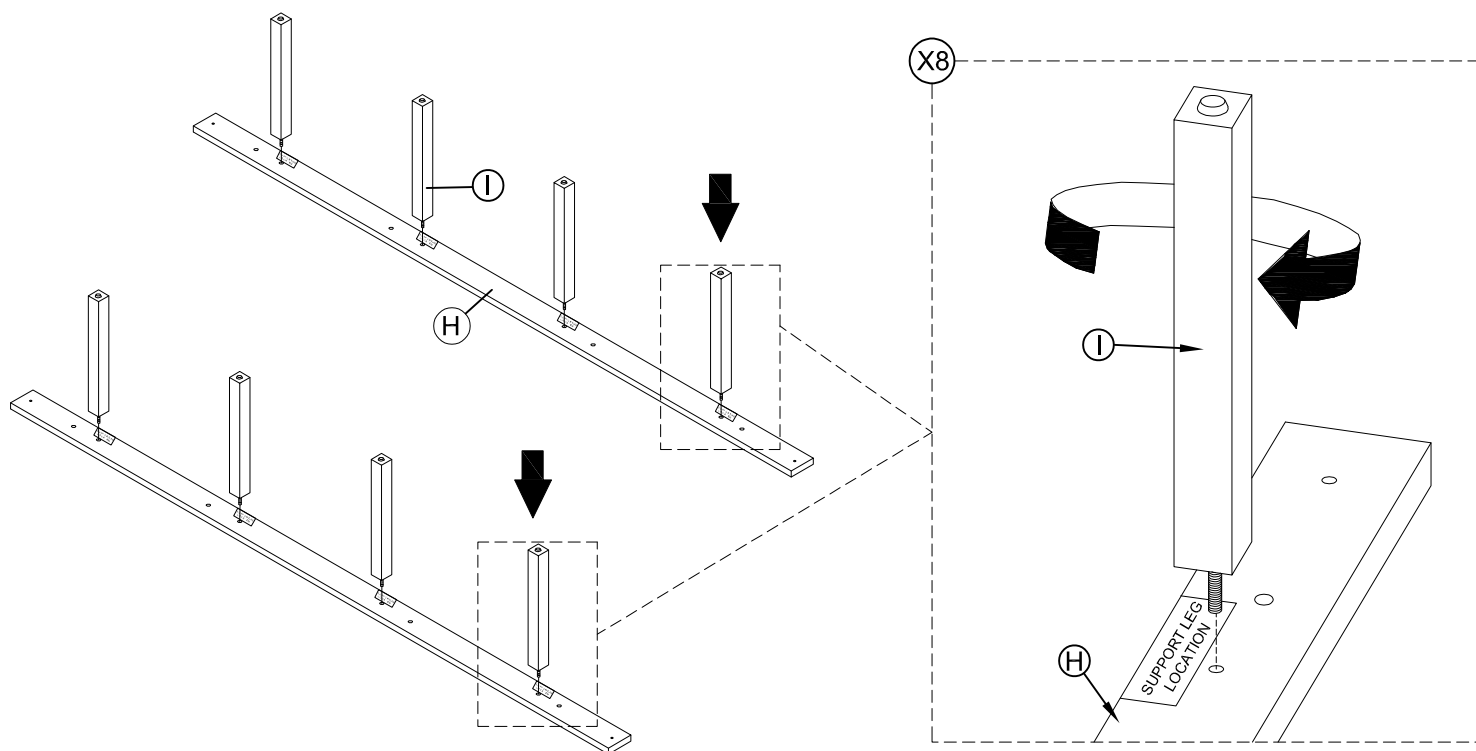


STEP 8:

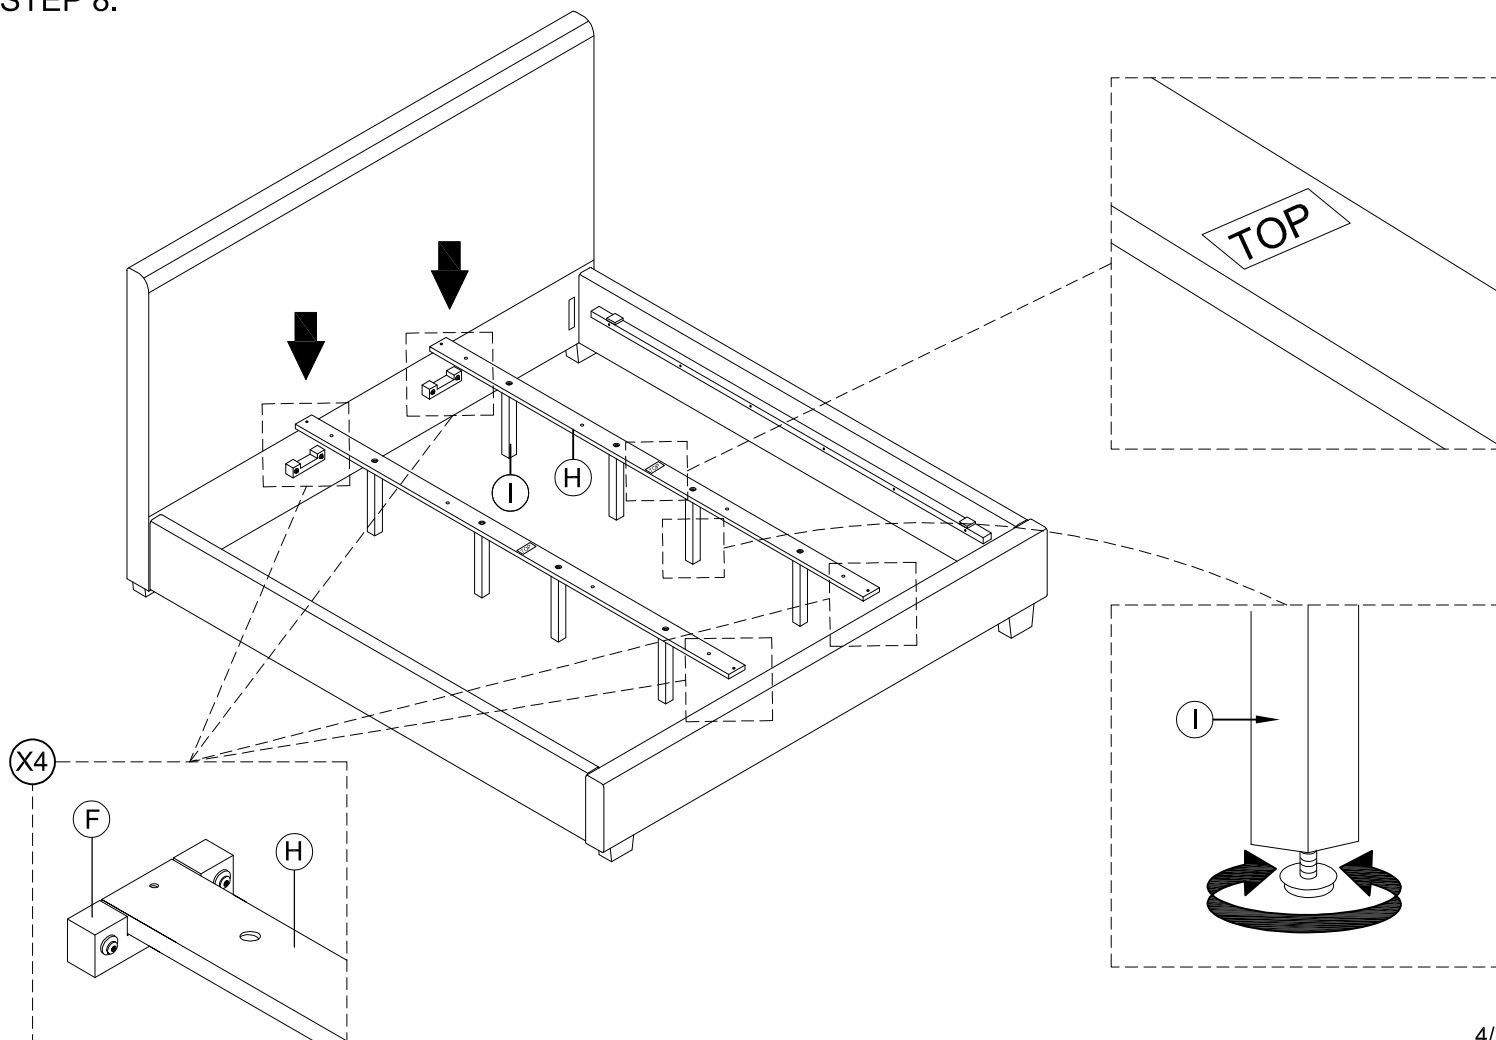


ADONA/MADELEINE/ROYAL UPHOLSTERED KING BED

ASSEMBLY INSTRUCTIONS

STEP 9:

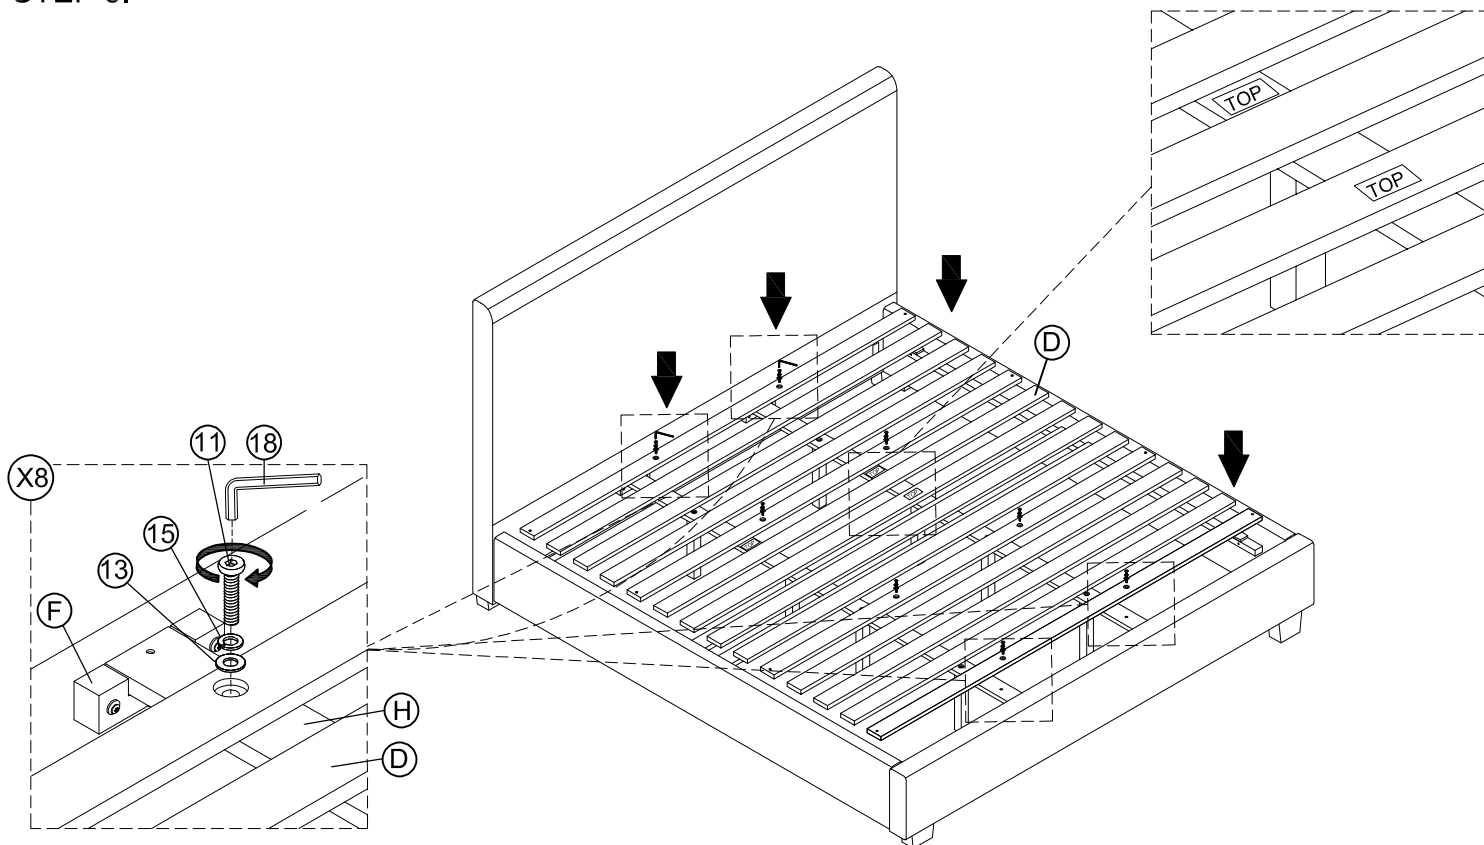


STEP 10:

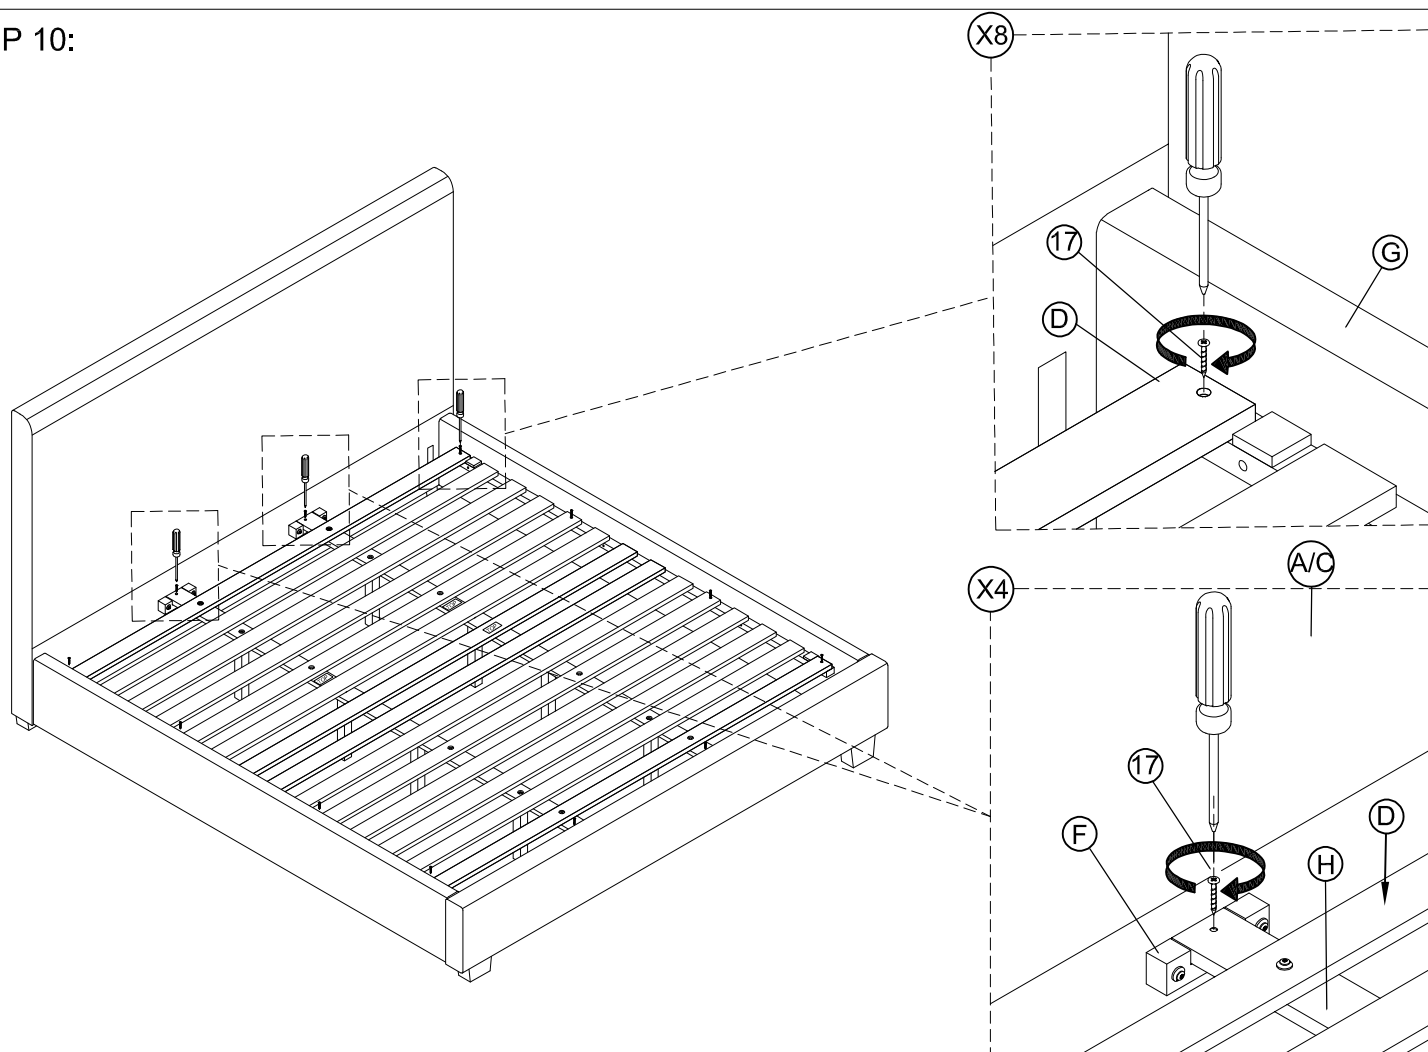

ADONA/MADELEINE/ROYAL UPHOLSTERED KING BED

ASSEMBLY INSTRUCTIONS

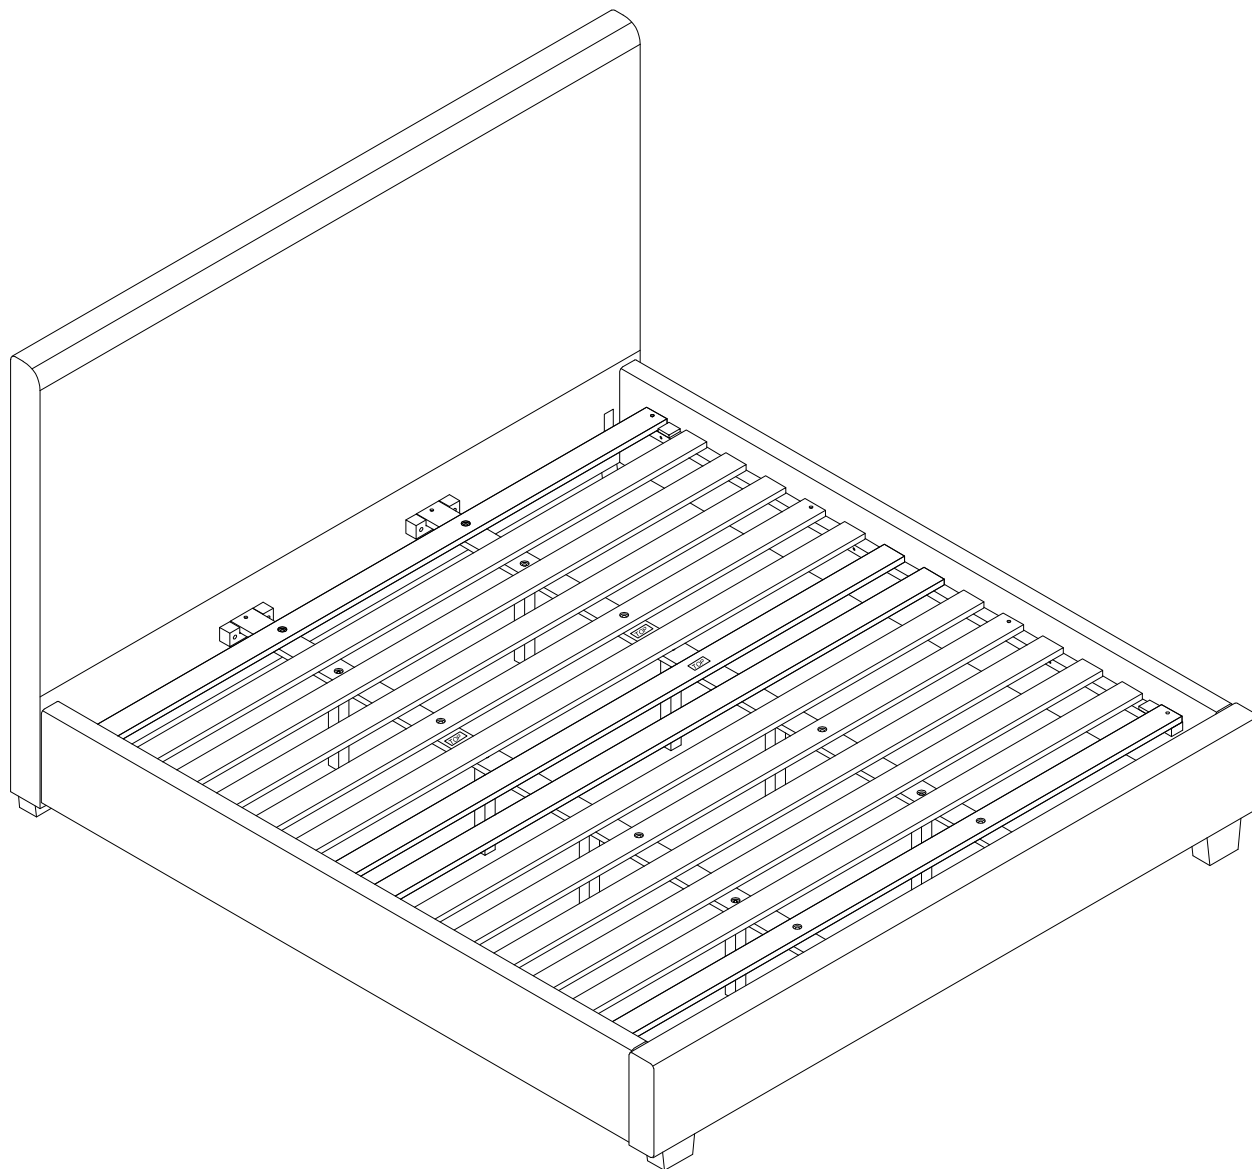


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.

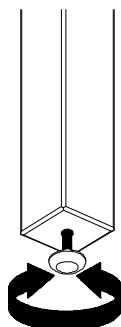

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

ADONA/MADELEINE/ROYAL UPHOLSTERED KING BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

D. SLAT ROLL	1 SET
F. CENTER SLAT SUPPORT CLEAT	4 PCS
H. CENTER SLAT SUPPORT	2 PCS
I. SUPPORT LEG	8 PCS

STEP 1:

USE ALLEN KEY (18) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

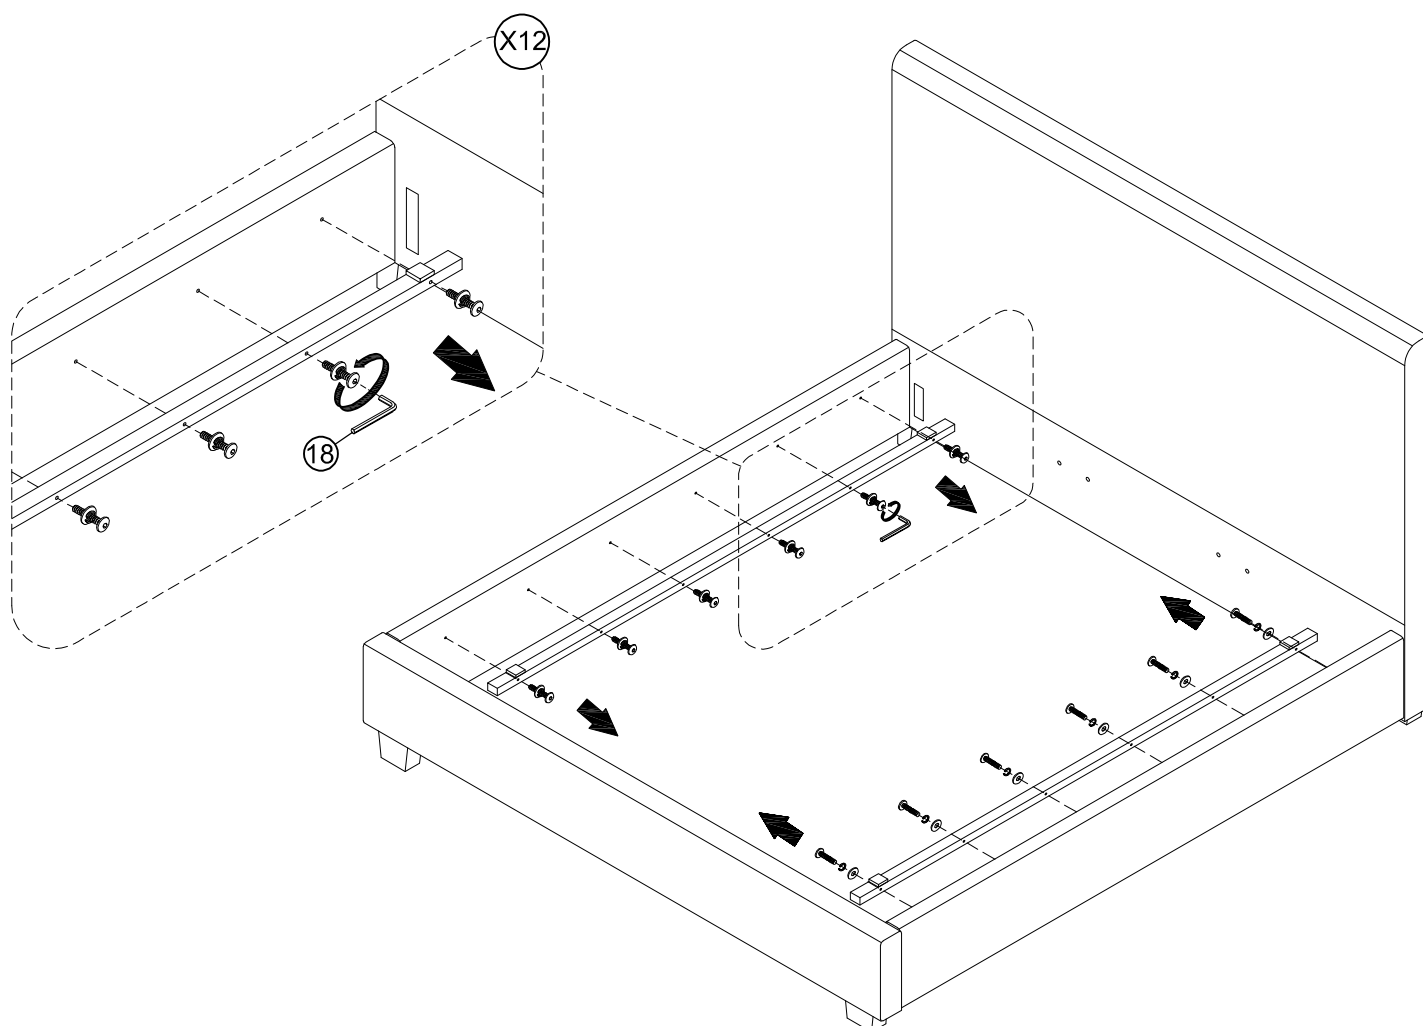

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION

ADONA/MADELEINE/ROYAL UPHOLSTERED C.KING BED


ASSEMBLY INSTRUCTIONS



BOX#1

A. HEADBOARD
B. LEG

1 PC
2 PCS

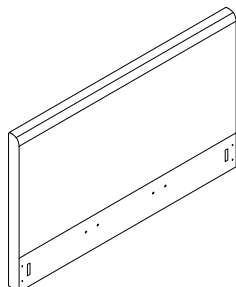

A



B


HARDWARE KIT PACKED IN BOX #1

No.	Description	Image	Quantity
1	ALLEN BOLT (5/16"x 3-1/2")		4 PCS
2	ALLEN BOLT (5/16"x 1-3/4")		4 PCS
3	FLAT WASHER (5/16")		12 PCS
4	LOCK WASHER (5/16")		12 PCS
5	ALLEN KEY (5/16")		1 PC
6	HEX NUT (5/16")		4 PCS
7	WRENCH		1 PC


BOX#2

C. FOOTBOARD
D. SLAT ROLL
E. LEG
F. CENTER SLAT SUPPORT CLEAT

1 PC
1 SET
2 PCS
4 PCS

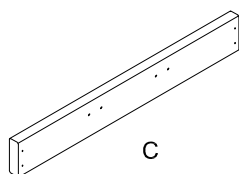

C

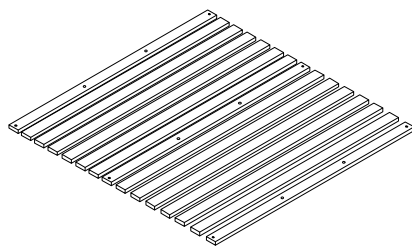

D




E



F


HARDWARE KIT PACKED IN BOX #2

8	THREADED BOLT (5/16"x 3-1/2")		8 PCS
9	ALLEN BOLT (5/16"x 3-1/2")		4 PCS
10	ALLEN BOLT (5/16"x 2-1/2")		8 PCS
11	ALLEN BOLT (1/4"x 1-1/4")		6 PCS
12	FLAT WASHER (5/16")		20 PCS
13	FLAT WASHER (1/4")		6 PCS
14	LOCK WASHER (5/16")		20 PCS
15	LOCK WASHER (1/4")		6 PCS
16	HEX NUT (5/16")		8 PCS
17	PHILLIPS SCREW (M4 x 32mm)		10 PCS
18	ALLEN KEY (5/16")		1 PC
19	WRENCH		1 PC
20	CONNECTING BRACKET		4 PCS


BOX#3

G. SIDE RAIL
H. CENTER SLAT SUPPORT
I. SUPPORT LEG

2 PCS
2 PCS
8 PCS

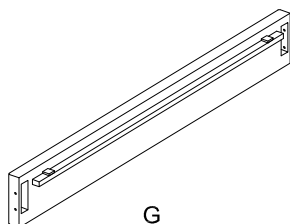

G



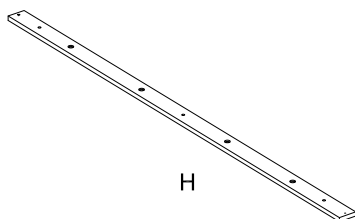


H



I

FULLY ASSEMBLED

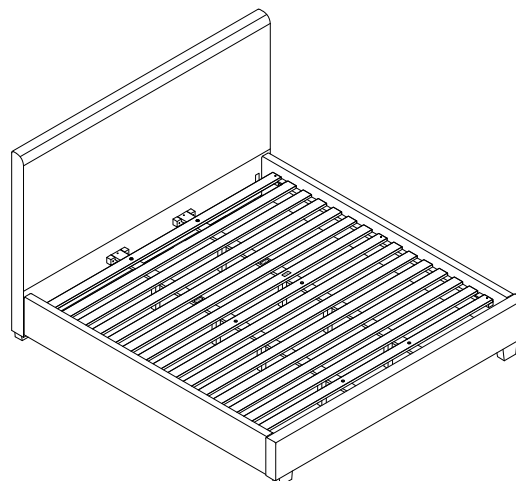


ADONA/MADELEINE/ROYAL UPHOLSTERED C.KING BED


ASSEMBLY INSTRUCTIONS




STEP 1:

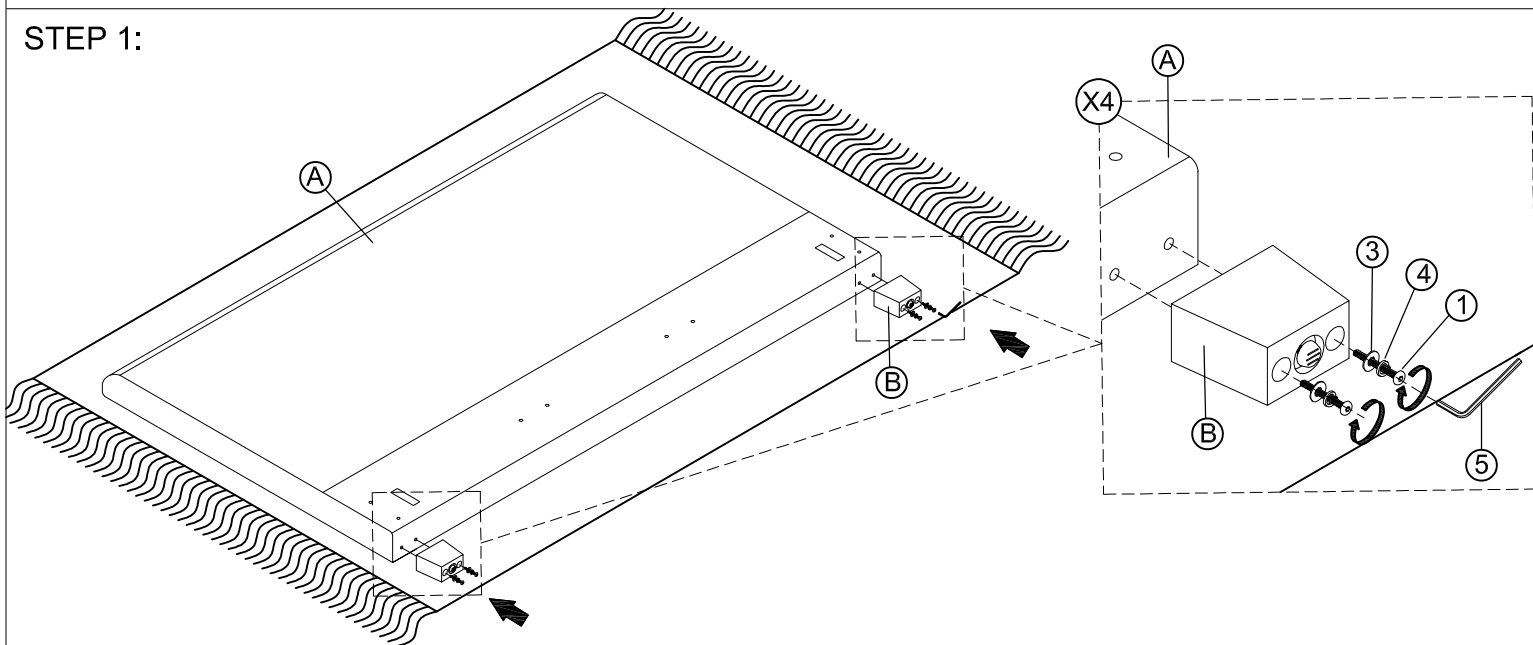

STEP 2:

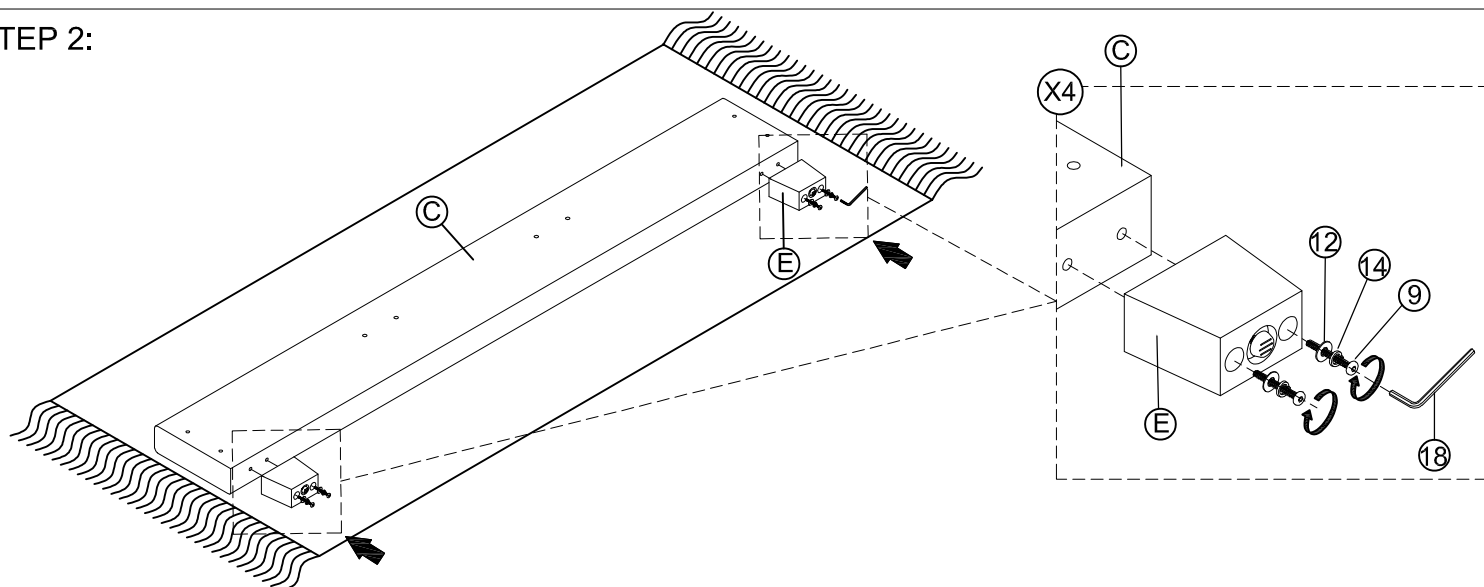

STEP 3:

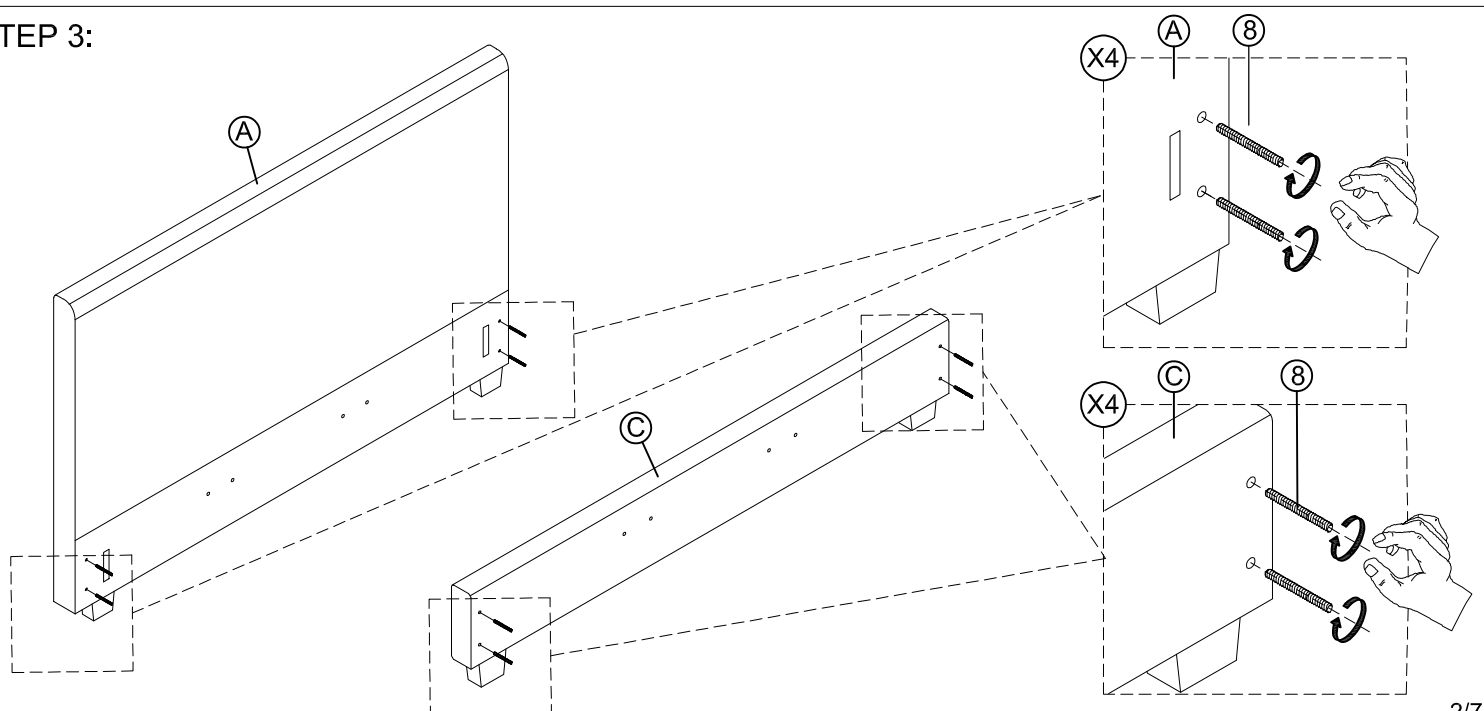


ADONA/MADELEINE/ROYAL UPHOLSTERED C.KING BED


ASSEMBLY INSTRUCTIONS



STEP 4:

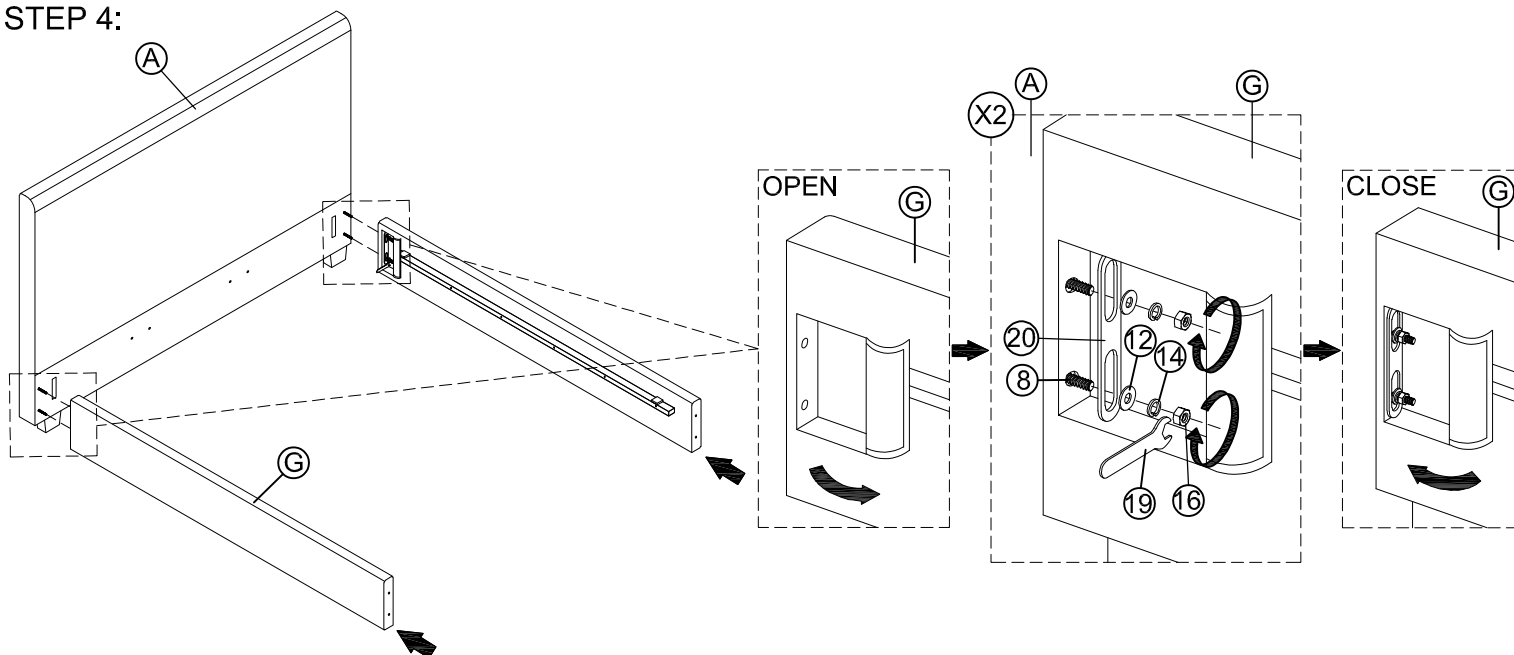


STEP 5:

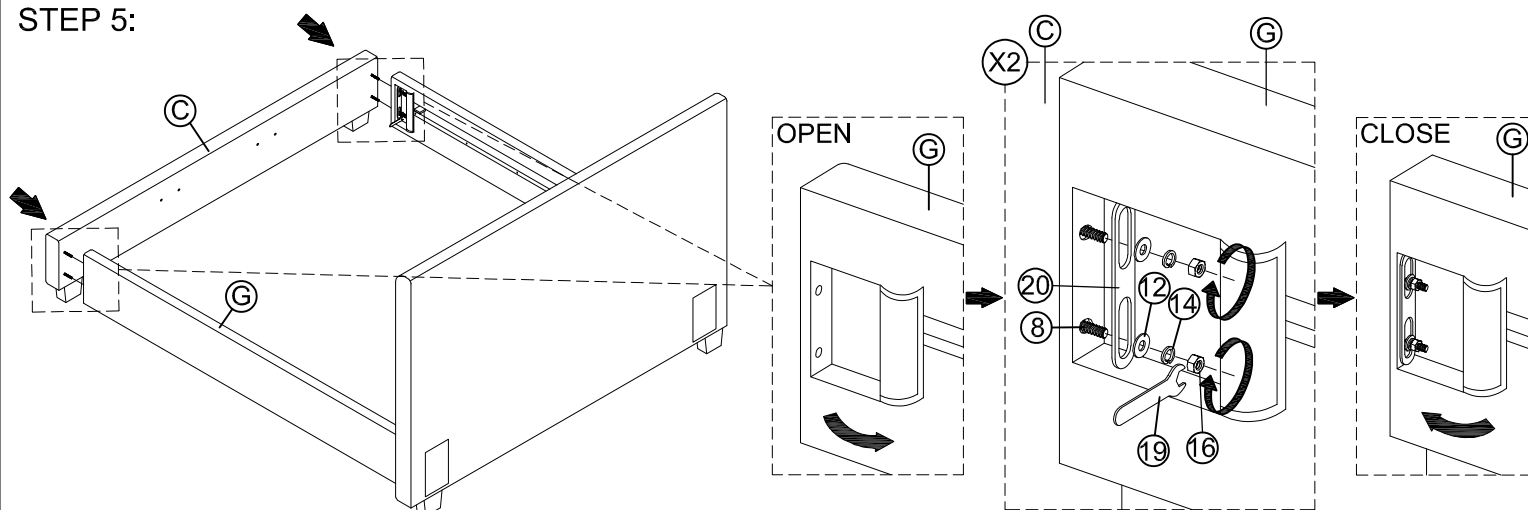

STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 6-10 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 6.

STEP 6:

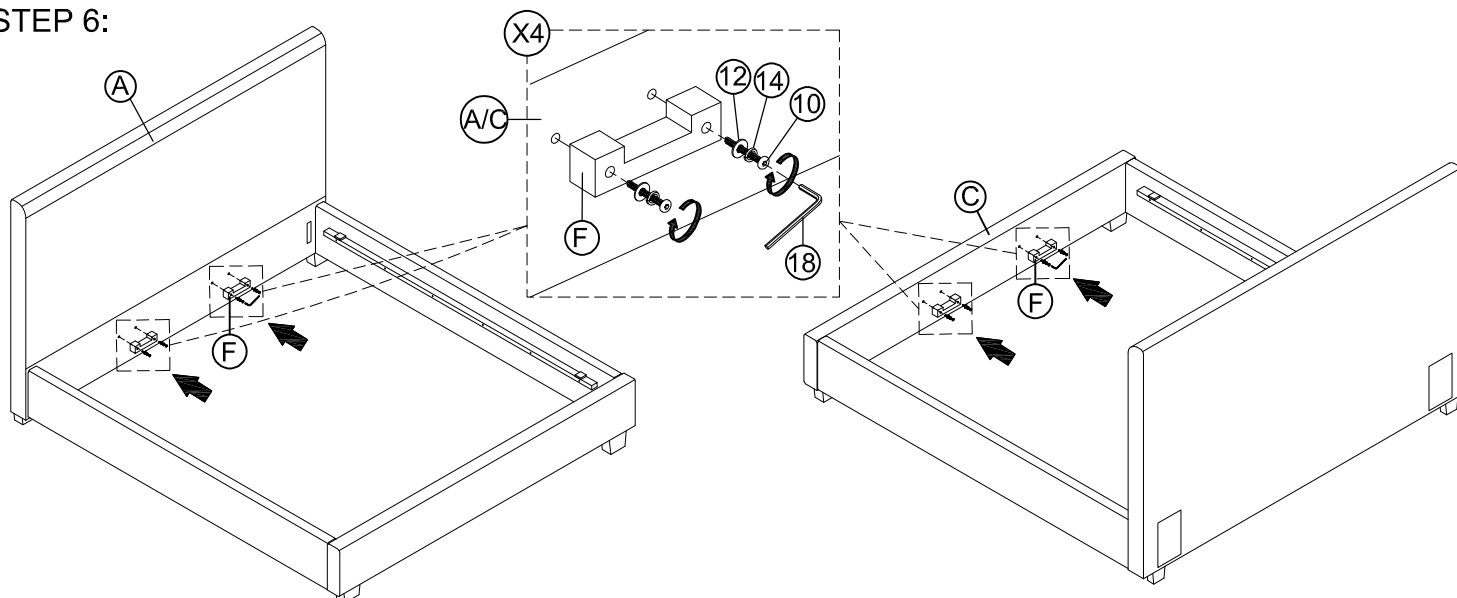


ADONA/MADELEINE/ROYAL UPHOLSTERED C.KING BED


ASSEMBLY INSTRUCTIONS



STEP 7:

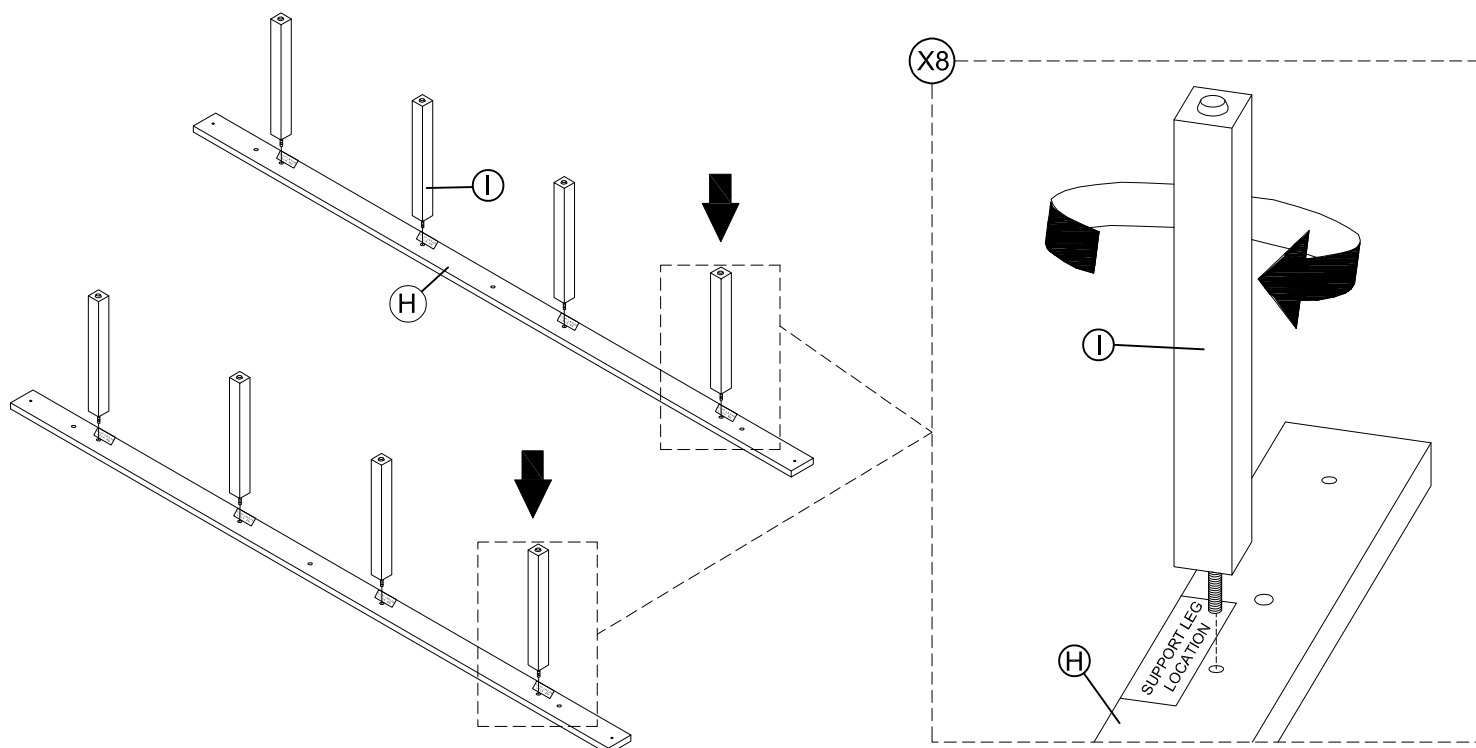

STEP 8:

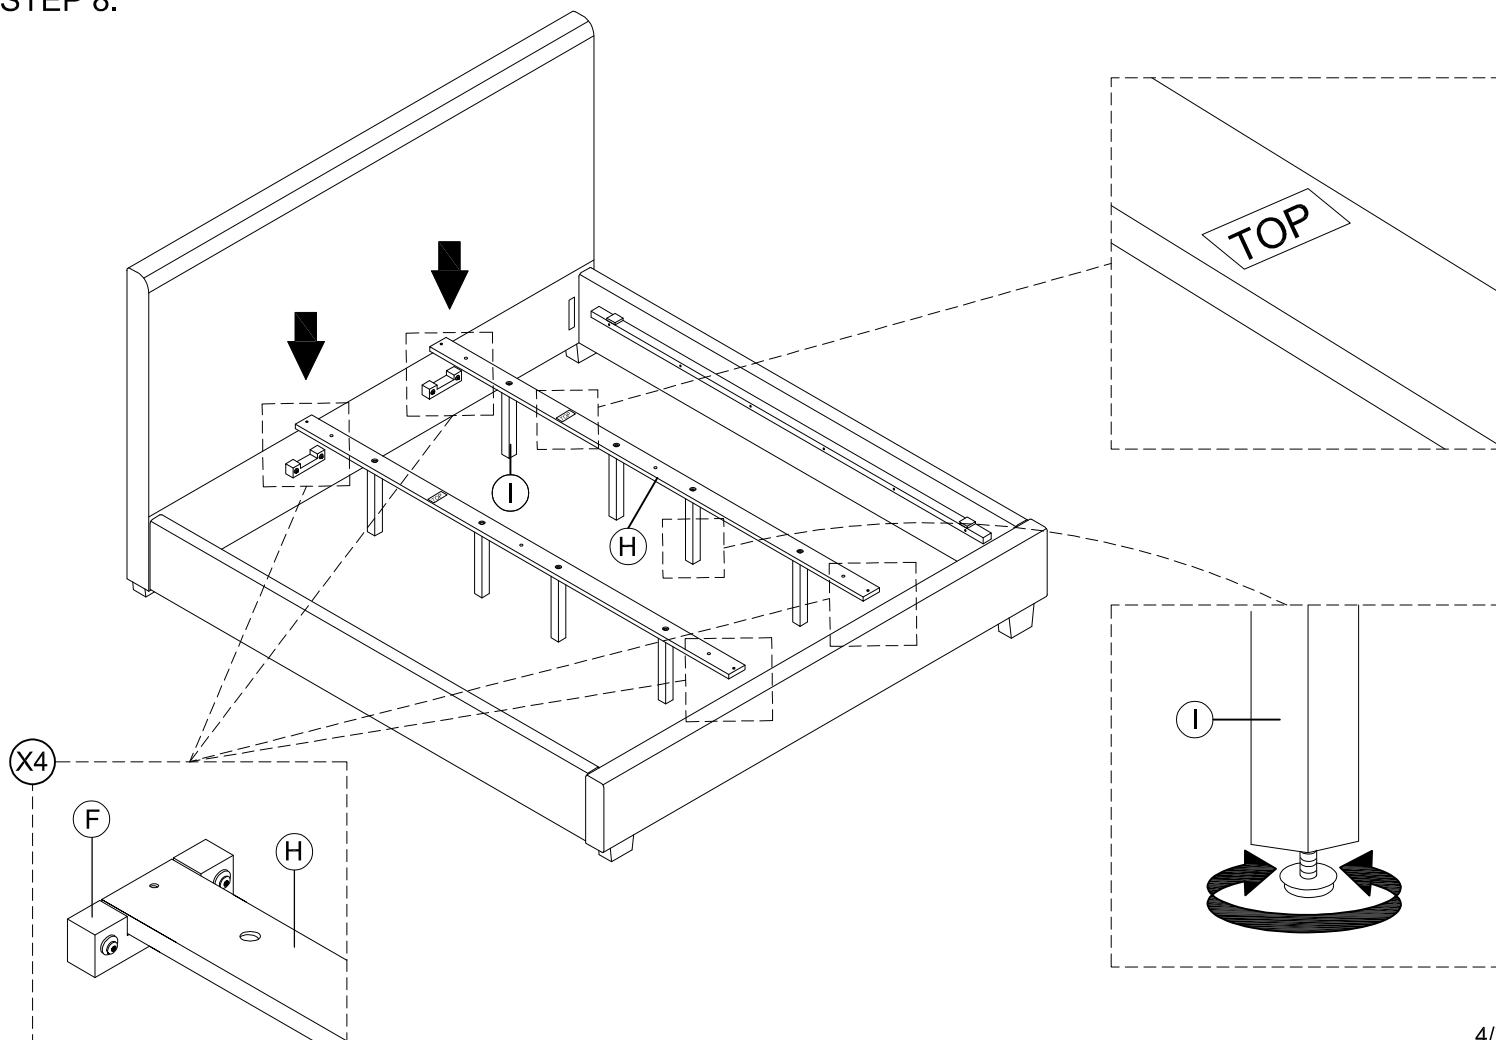


ADONA/MADELEINE/ROYAL UPHOLSTERED C.KING BED




ASSEMBLY INSTRUCTIONS



STEP 9:

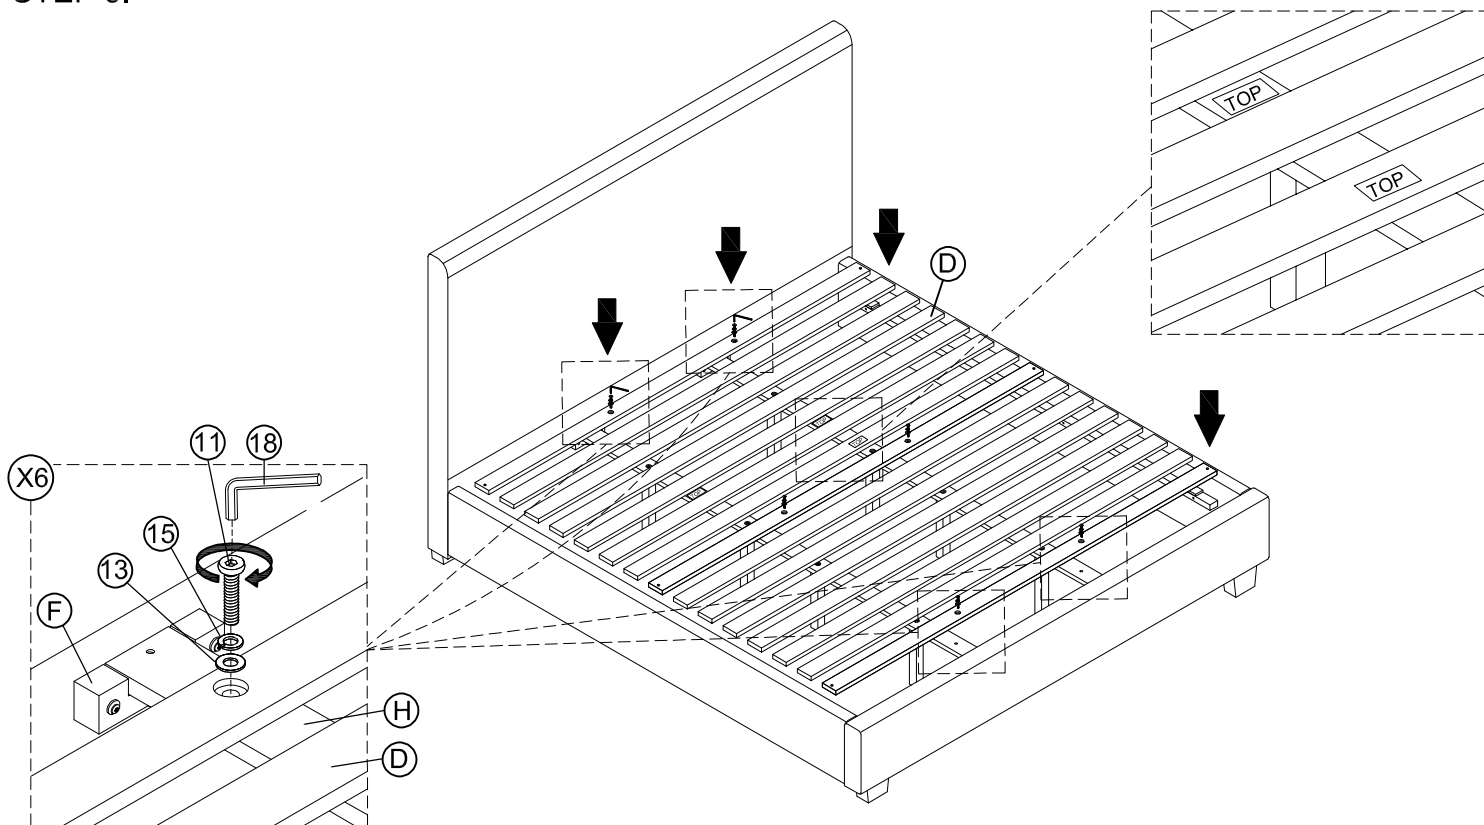


STEP 10:

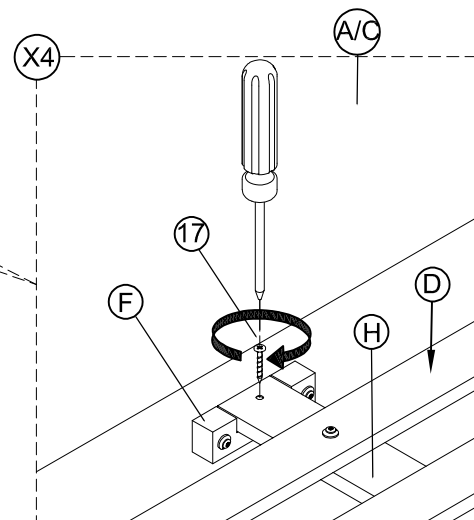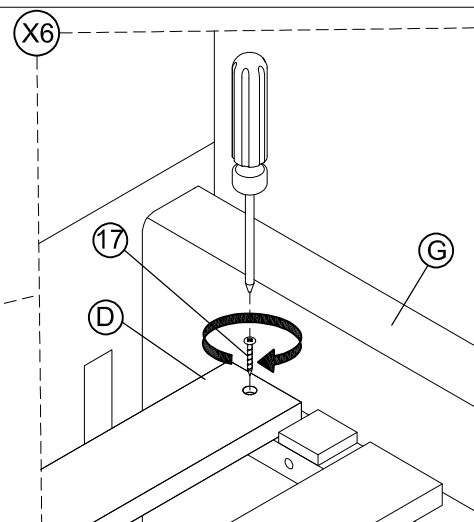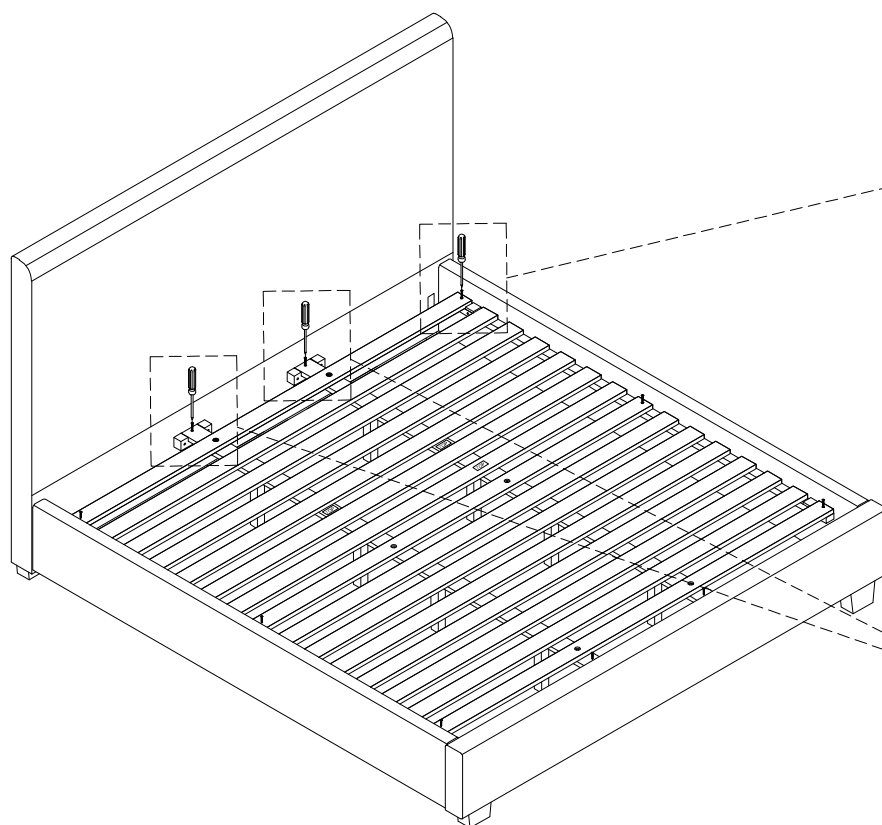

ADONA/MADELEINE/ROYAL UPHOLSTERED C.KING BED

ASSEMBLY INSTRUCTIONS

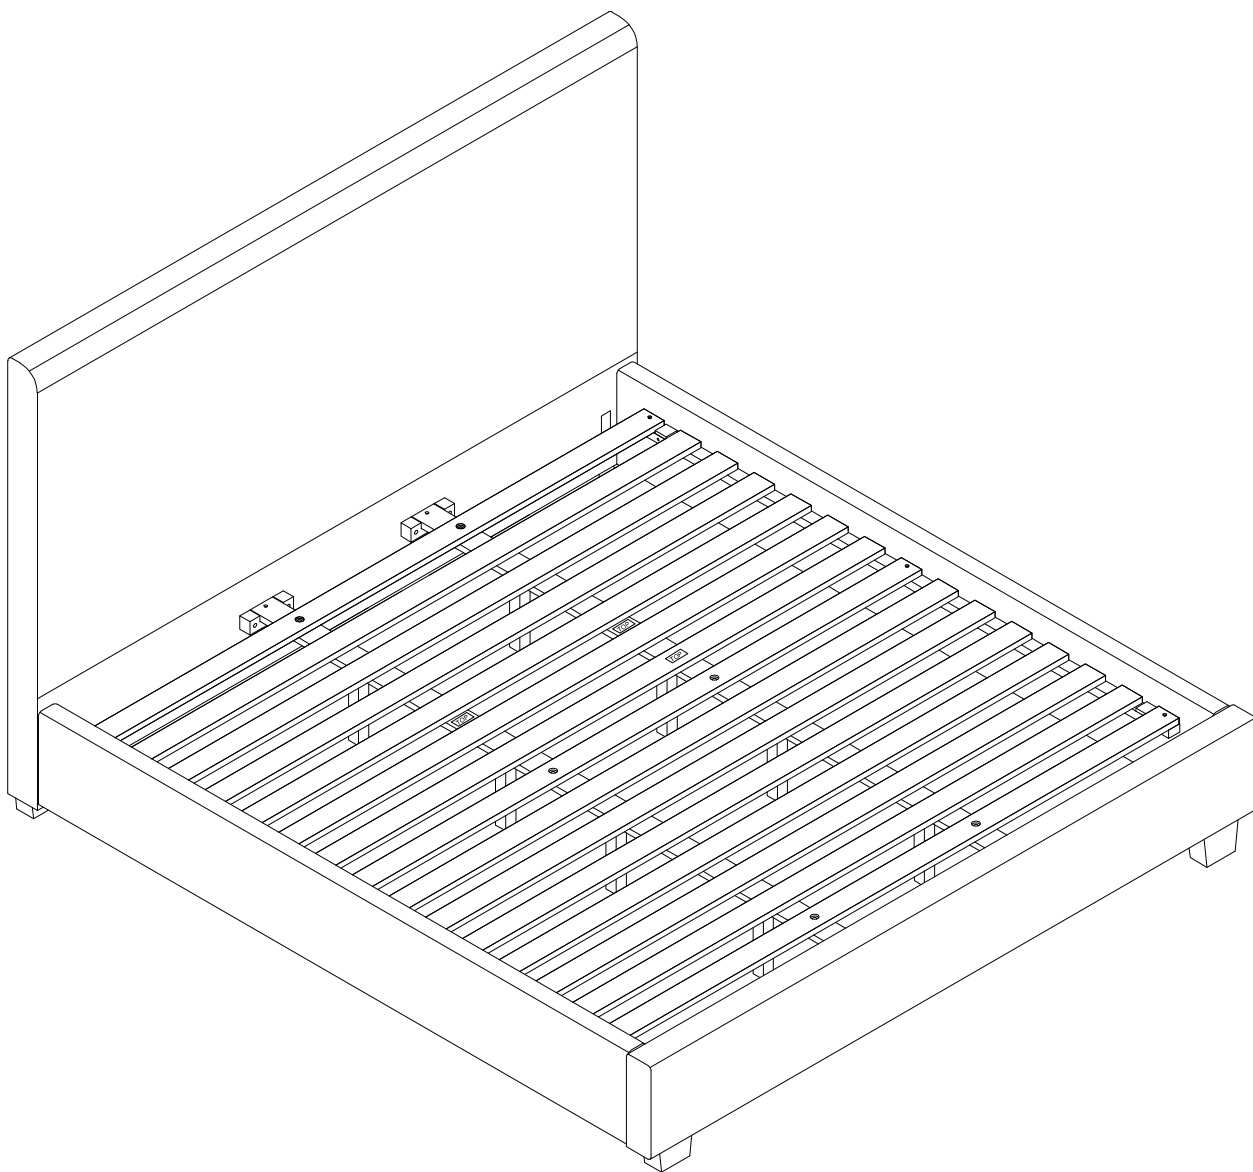


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.

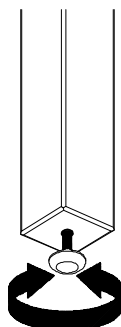

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

ADONA/MADELEINE/ROYAL UPHOLSTERED C.KING BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

D. SLAT ROLL	1 SET
F. CENTER SLAT SUPPORT CLEAT	4 PCS
H. CENTER SLAT SUPPORT	2 PCS
I. SUPPORT LEG	8 PCS

STEP 1:

USE ALLEN KEY (18) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

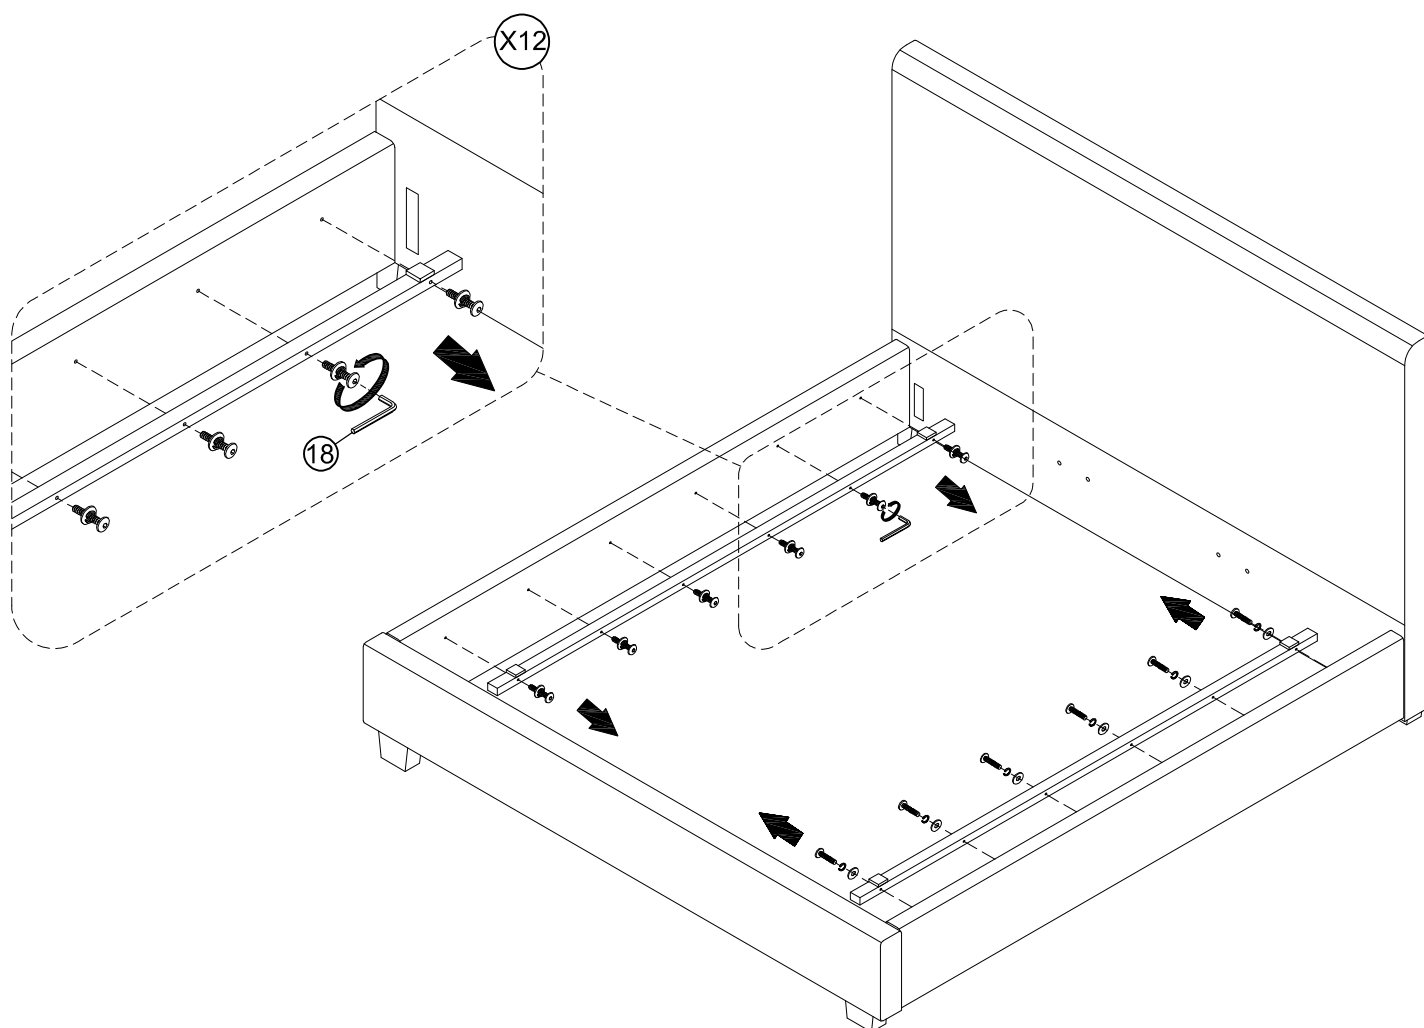

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION

ADONA/MADELEINE/ROYAL UPHOLSTERED FULL BED


ASSEMBLY INSTRUCTIONS



BOX#1

A. HEADBOARD
B. LEG

1 PC
2 PCS

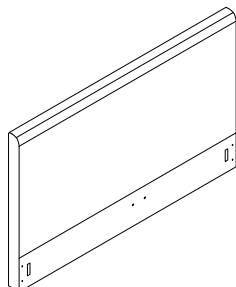

A



B


HARDWARE KIT PACKED IN BOX #1

No.	Description	Image	Quantity
1	ALLEN BOLT (5/16"x 3-1/2")		4 PCS
2	ALLEN BOLT (5/16"x 1-3/4")		4 PCS
3	FLAT WASHER (5/16")		12 PCS
4	LOCK WASHER (5/16")		12 PCS
5	ALLEN KEY (5/16")		1 PC
6	HEX NUT (5/16")		4 PCS
7	WRENCH		1 PC


BOX#2

C. FOOTBOARD
D. SLAT ROLL
E. LEG
F. CENTER SLAT SUPPORT CLEAT

1 PC
1 SET
2 PCS
2 PCS

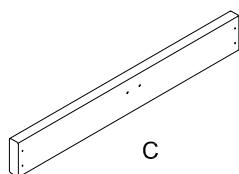

C

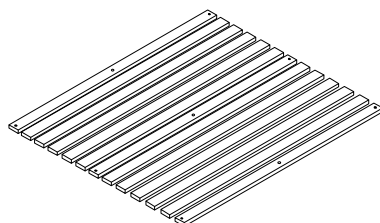

D




E



F


HARDWARE KIT PACKED IN BOX #2

8	THREADED BOLT (5/16"x 3-1/2")		8 PCS
9	ALLEN BOLT (5/16"x 3-1/2")		4 PCS
10	ALLEN BOLT (5/16"x 2-1/2")		4 PCS
11	ALLEN BOLT (1/4"x 1-1/4")		3 PCS
12	FLAT WASHER (5/16")		16 PCS
13	FLAT WASHER (1/4")		3 PCS
14	LOCK WASHER (5/16")		16 PCS
15	LOCK WASHER (1/4")		3 PCS
16	HEX NUT (5/16")		8 PCS
17	PHILLIPS SCREW (M4 x 32mm)		8 PCS
18	ALLEN KEY (5/16")		1 PC
19	WRENCH		1 PC
20	CONNECTING BRACKET		4 PCS


BOX#3

G. SIDE RAIL
H. CENTER SLAT SUPPORT
I. SUPPORT LEG

2 PCS
1 PC
4 PCS

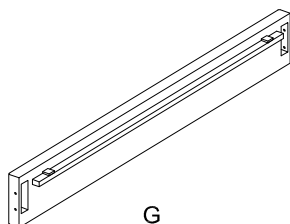

G




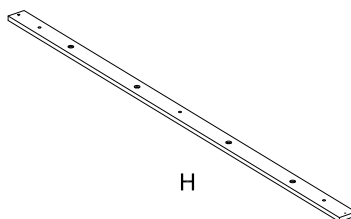


H



I

FULLY ASSEMBLED

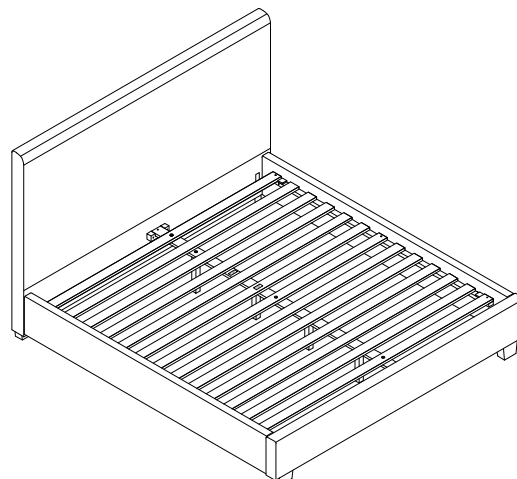


ADONA/MADELEINE/ROYAL UPHOLSTERED FULL BED


ASSEMBLY INSTRUCTIONS




STEP 1:

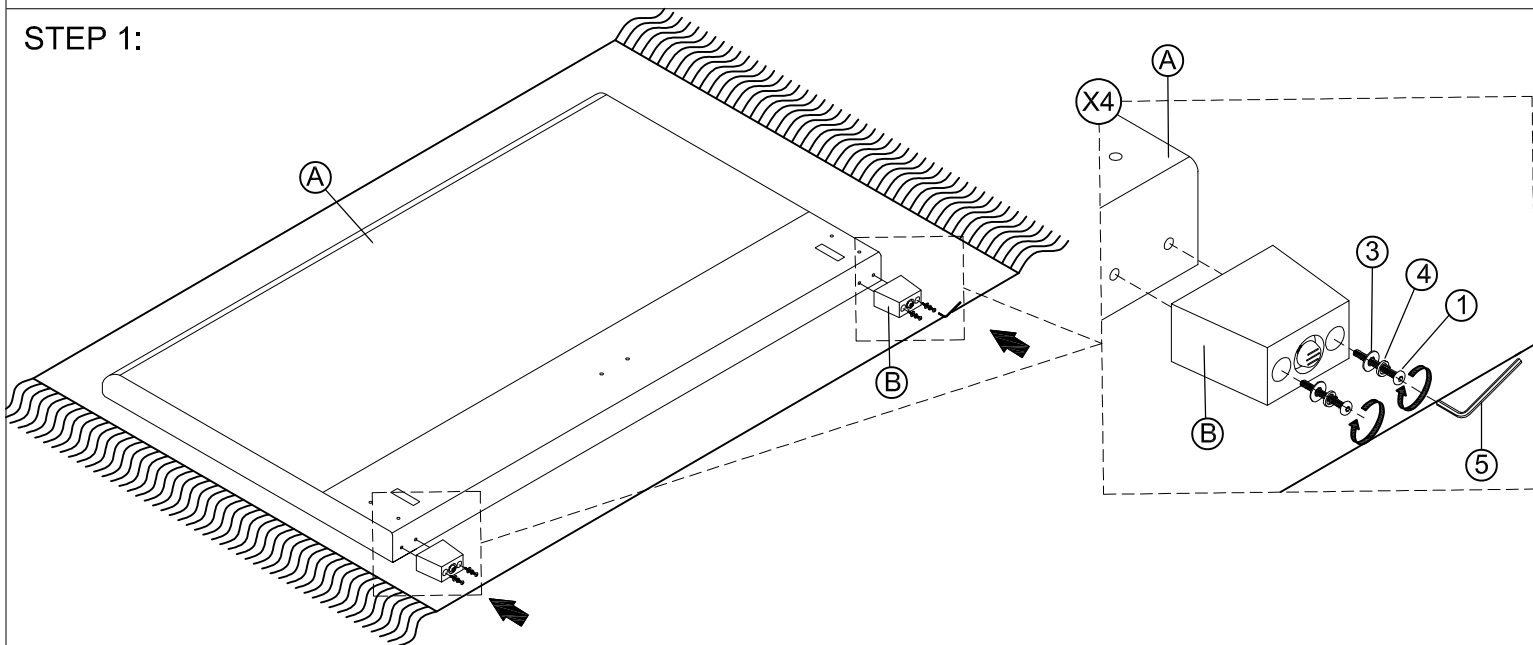

STEP 2:

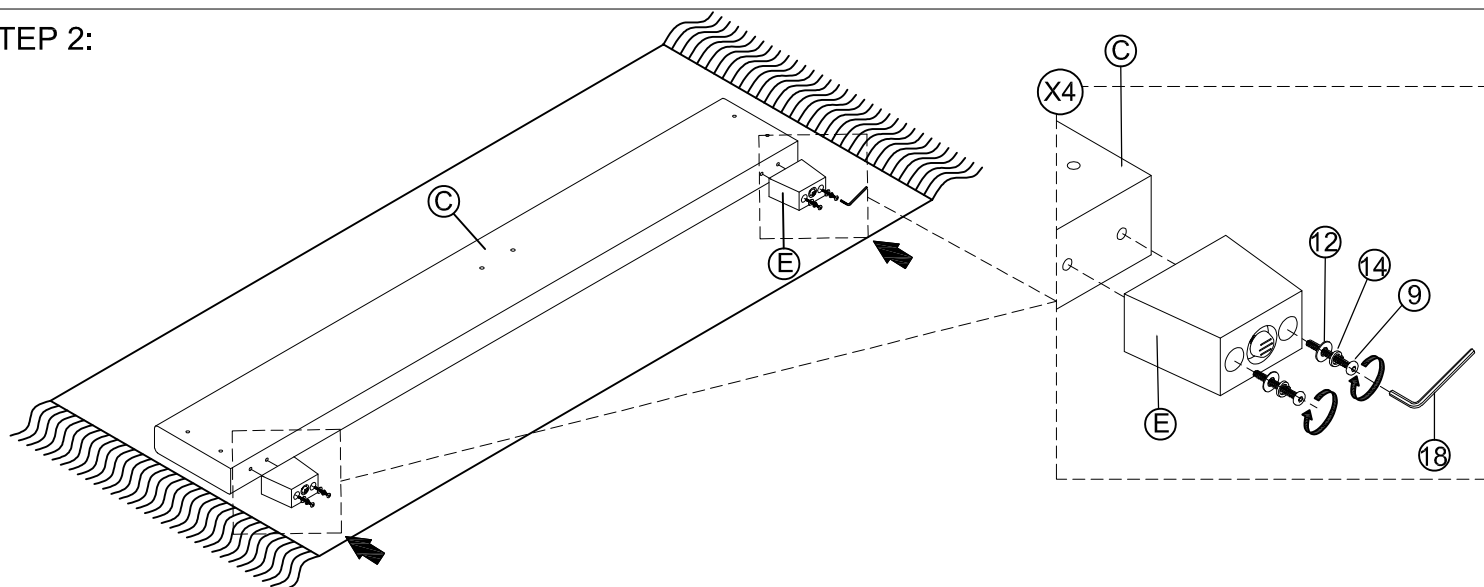

STEP 3:

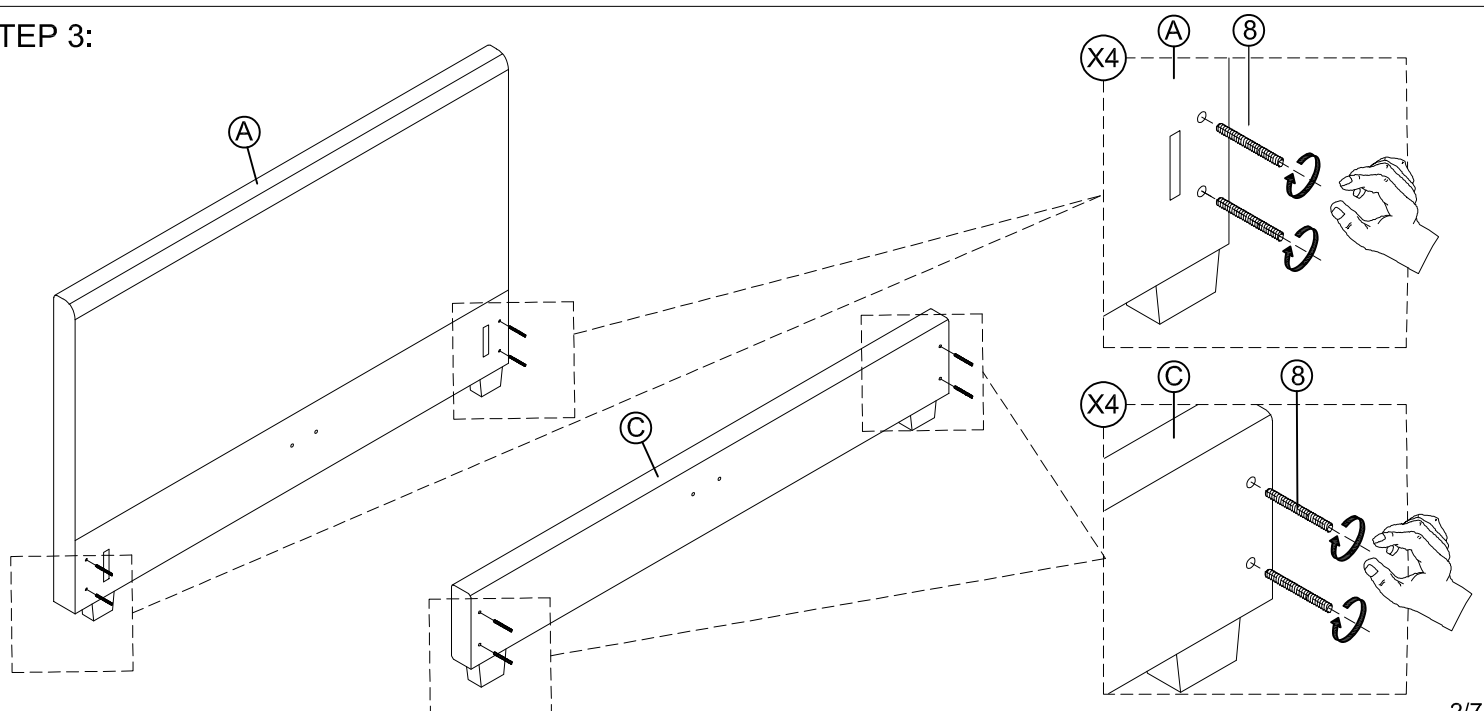


ADONA/MADELEINE/ROYAL UPHOLSTERED FULL BED


ASSEMBLY INSTRUCTIONS



STEP 4:

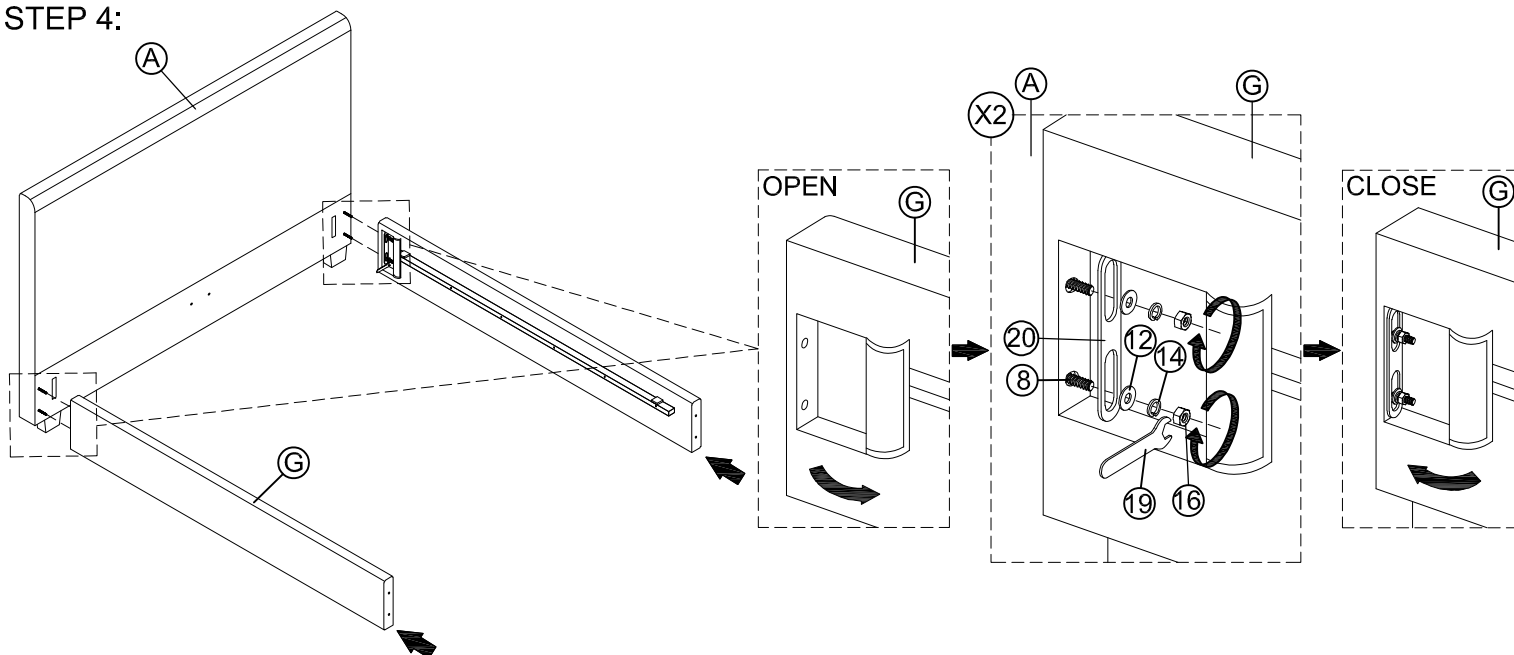

STEP 5:

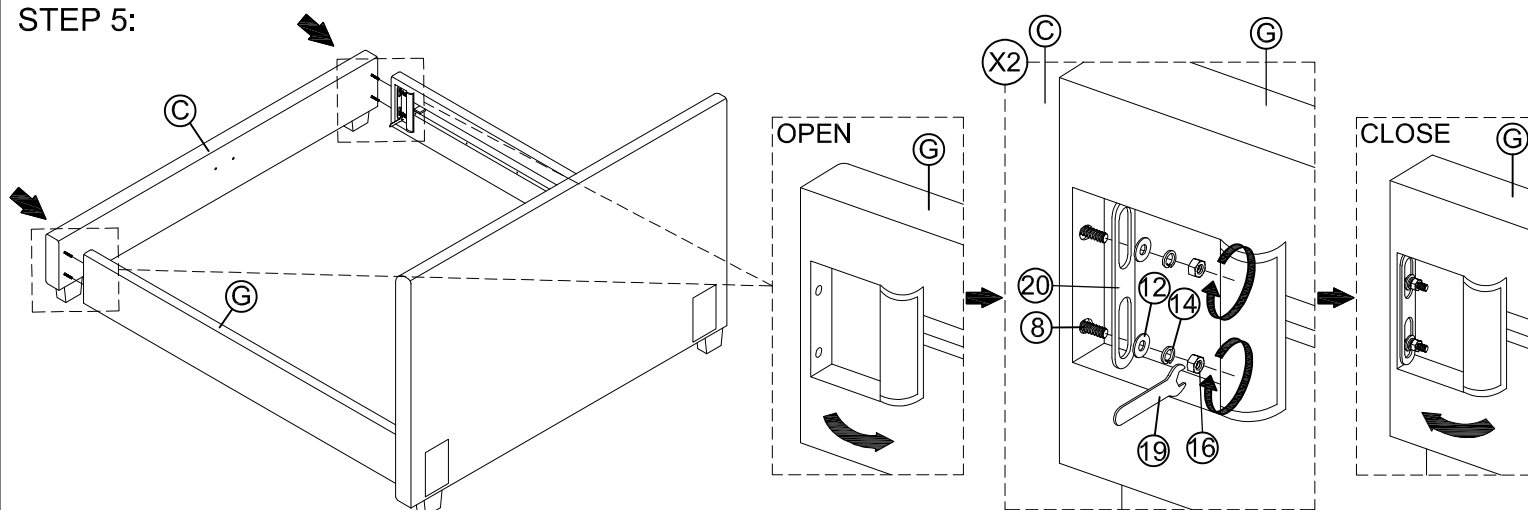


STOP



- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 6-10 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 6.

STEP 6:

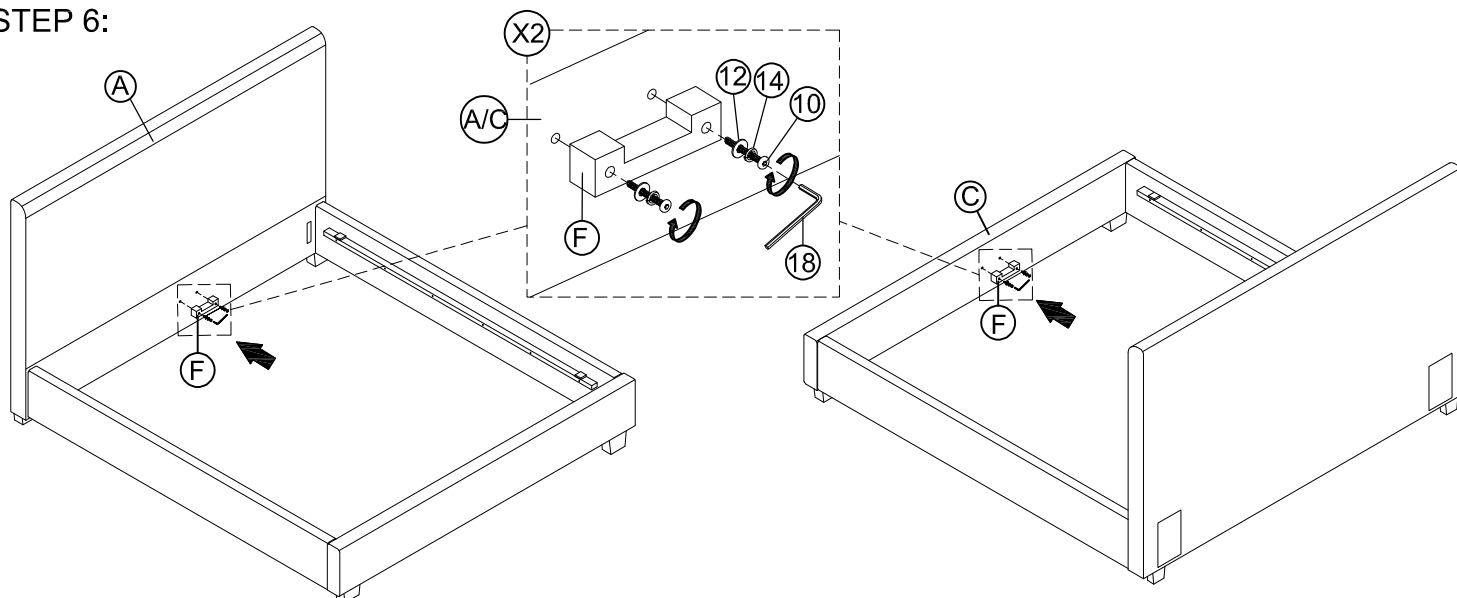


ADONA/MADELEINE/ROYAL UPHOLSTERED FULL BED


ASSEMBLY INSTRUCTIONS



STEP 7:

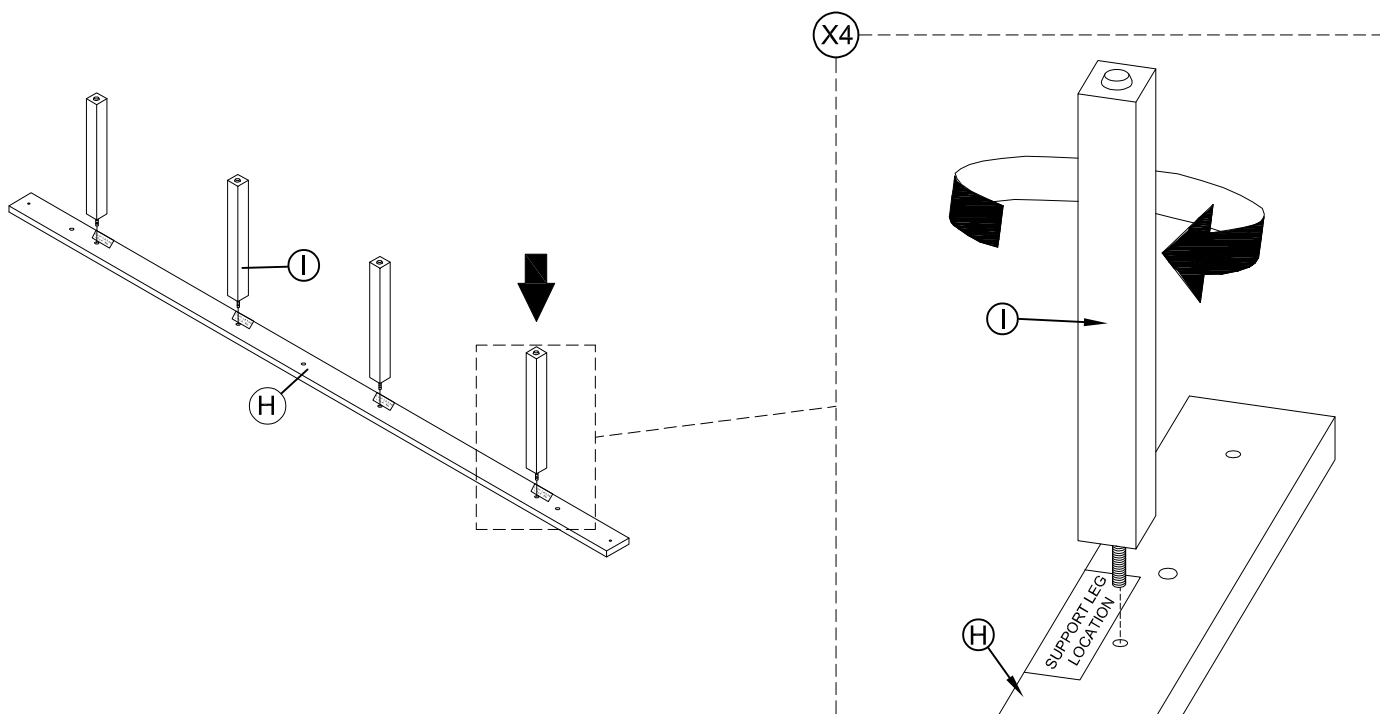

STEP 8:

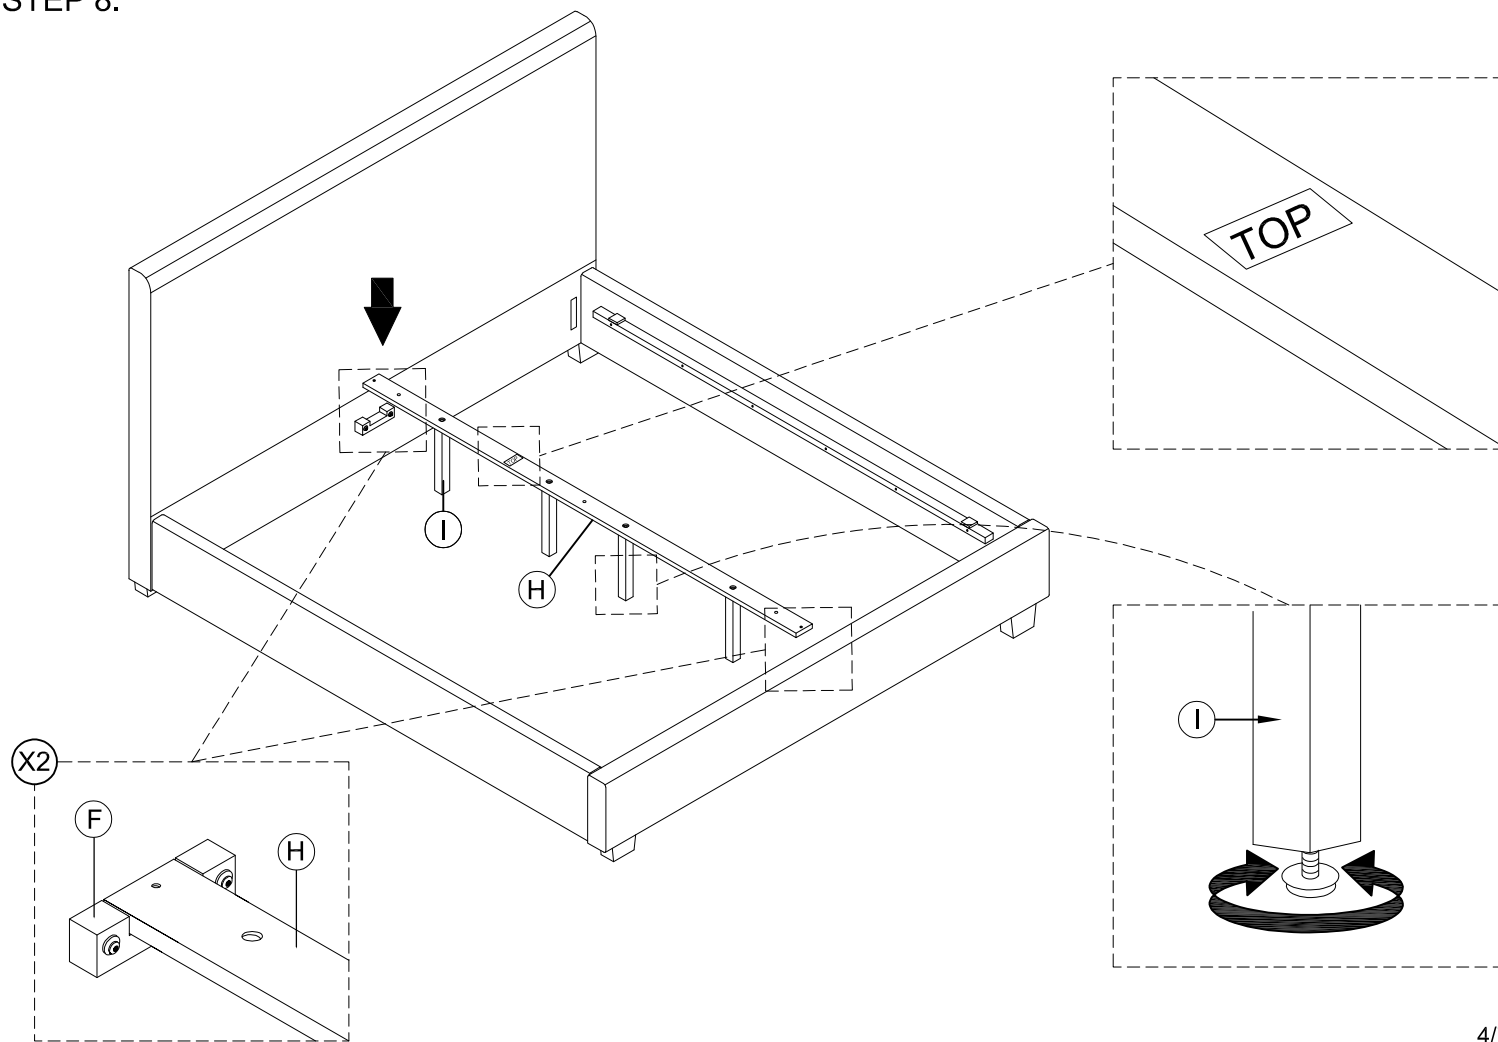


ADONA/MADELEINE/ROYAL UPHOLSTERED FULL BED


ASSEMBLY INSTRUCTIONS



STEP 9:

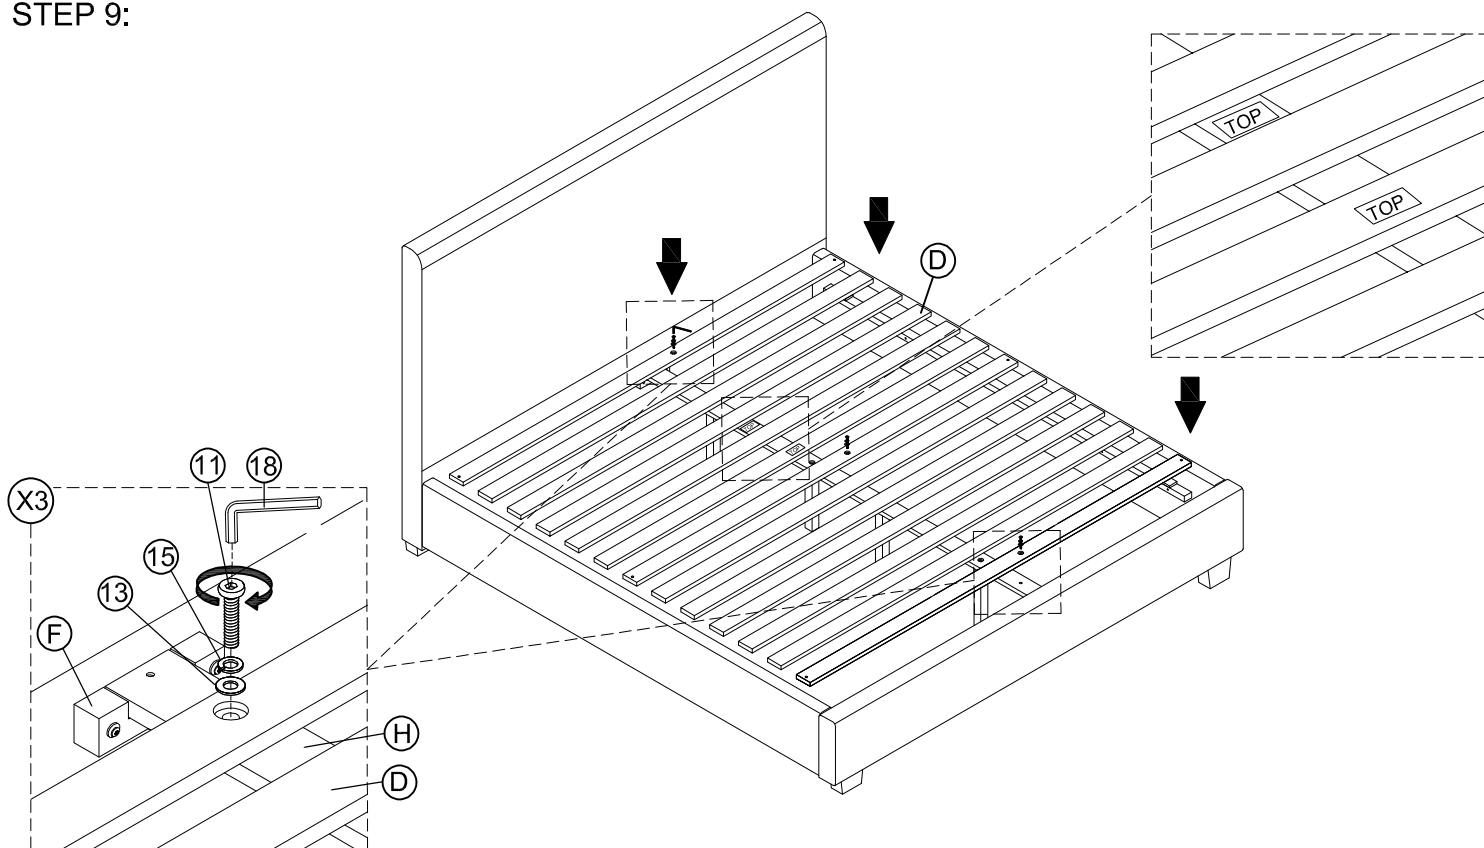


STEP 10:

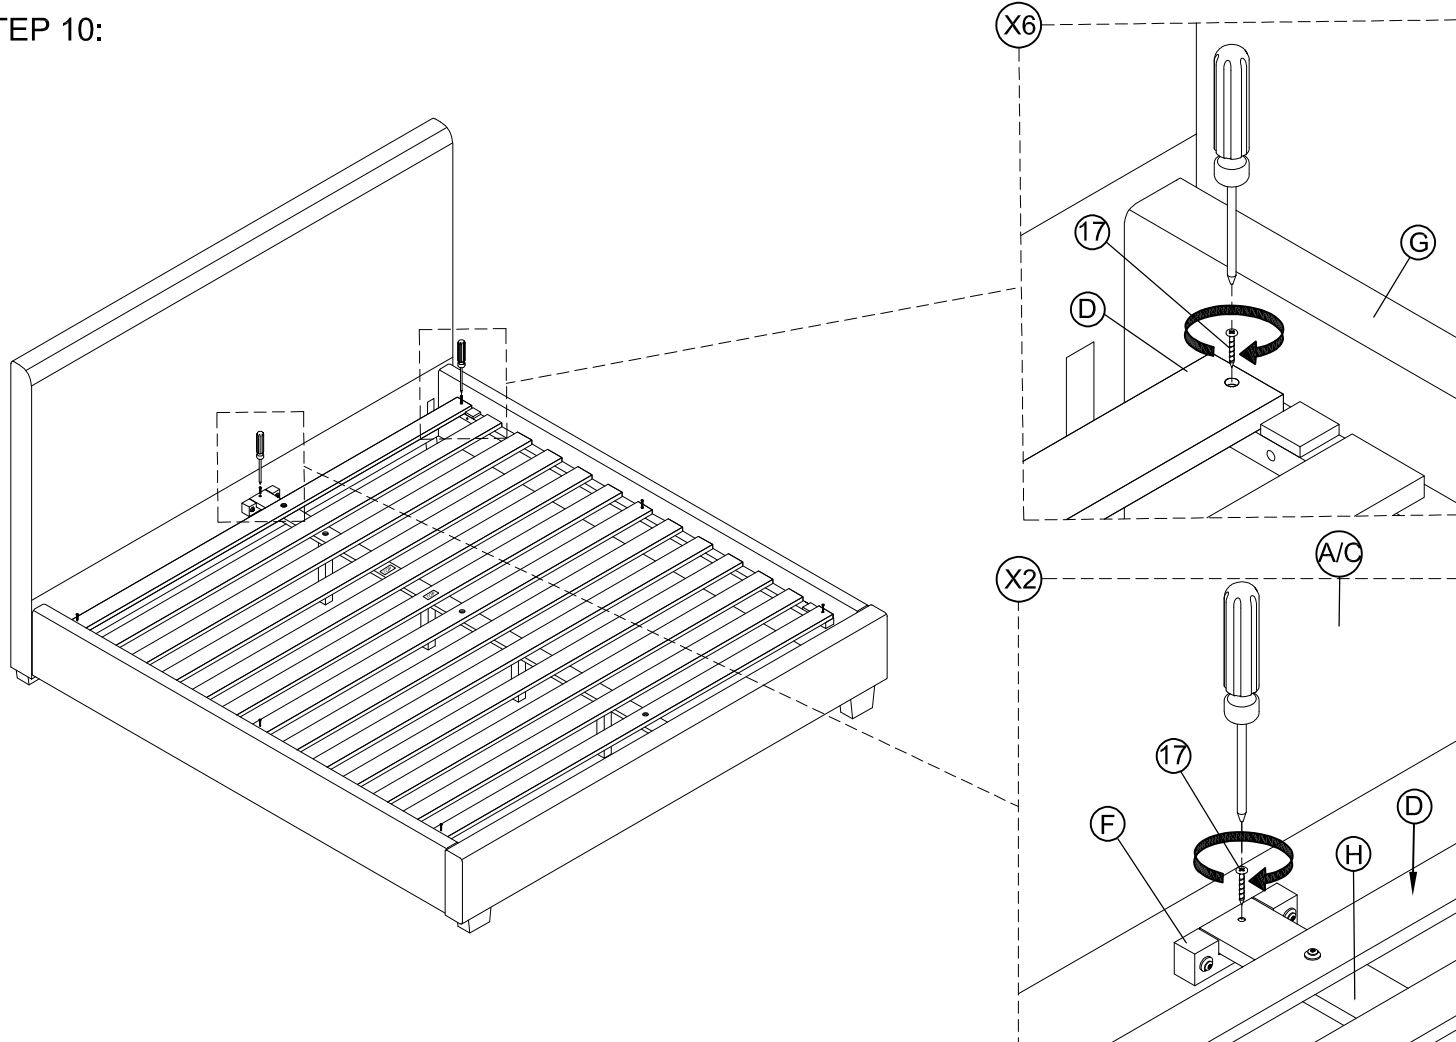

ADONA/MADELEINE/ROYAL UPHOLSTERED FULL BED

ASSEMBLY INSTRUCTIONS

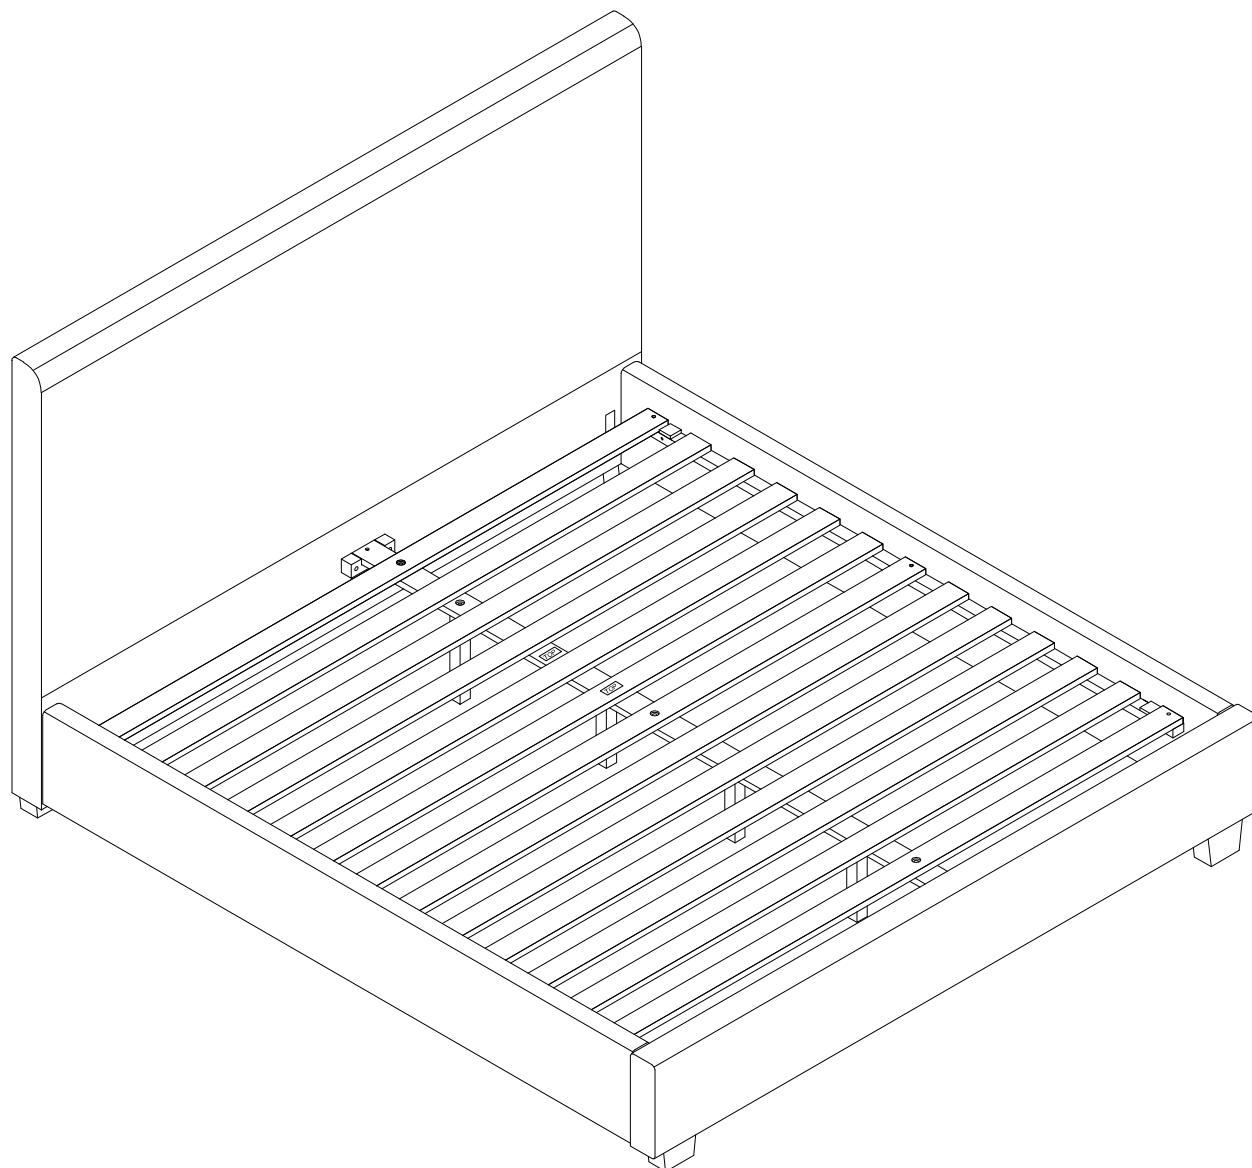


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.

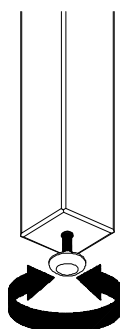

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

ADONA/MADELEINE/ROYAL UPHOLSTERED FULL BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

D. SLAT ROLL	1 SET
F. CENTER SLAT SUPPORT CLEAT	2 PCS
H. CENTER SLAT SUPPORT	1 PC
I. SUPPORT LEG	4 PCS

STEP 1:

USE ALLEN KEY (18) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

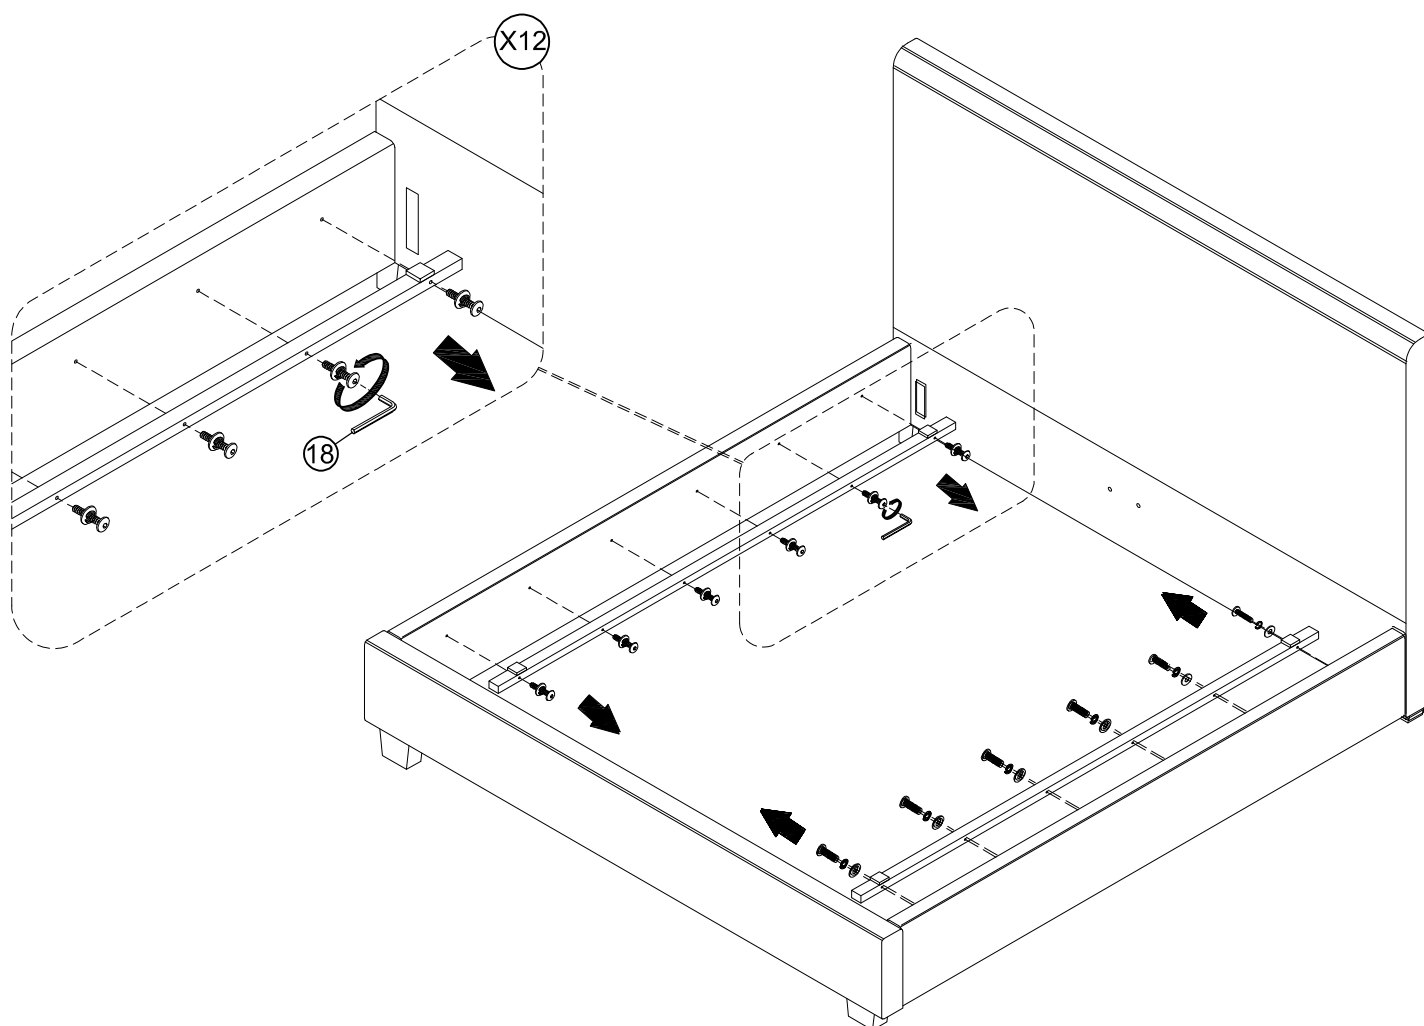

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION