

ASSEMBLY INSTRUCTION

2-DRAWER STACKABLE CABINET WITH METAL FRAME

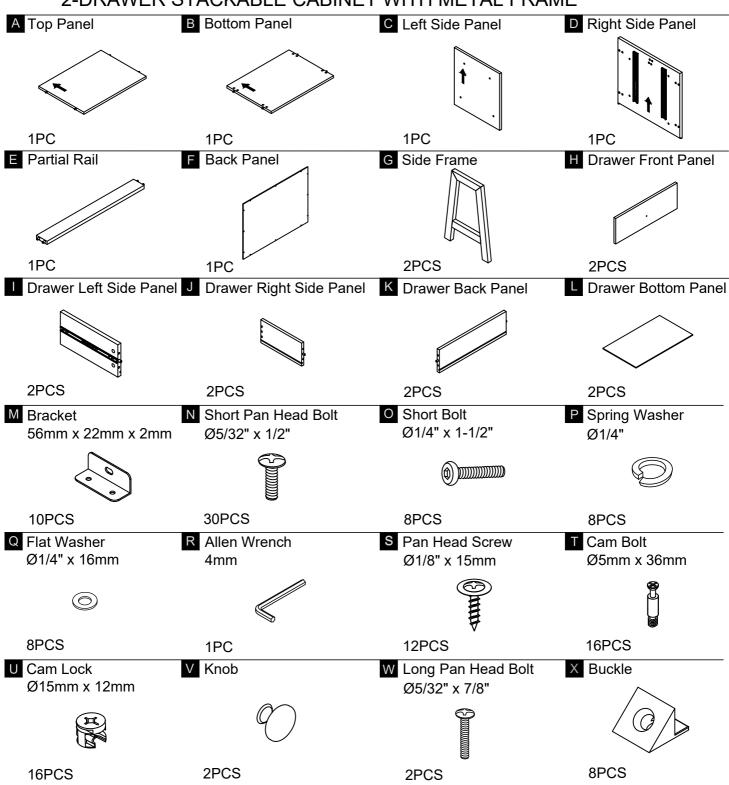




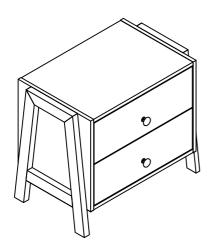


These pages list all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

Attach Bracket (M) to Top & Bottom Panel (A & B) and Left & Right Side Panel (C & D) using Short Pan Head Bolt (N) with screwdriver (not provided).

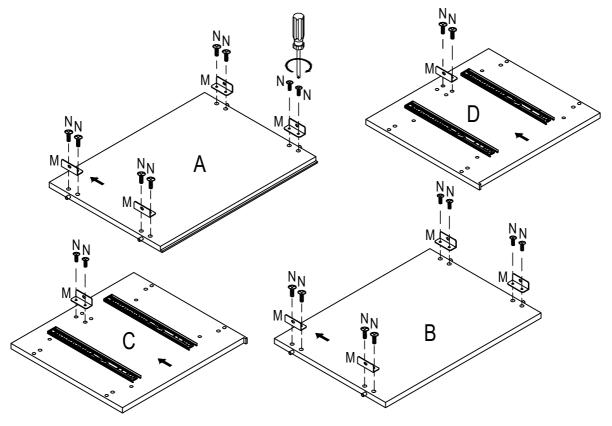


Attach Top Panel (A) to Right Side Panel (D) using pre-installed dowels and Short Pan Head Bolt (N) with screwdriver (not provided).

Note: Make sure to follow the arrow direction when assembling.

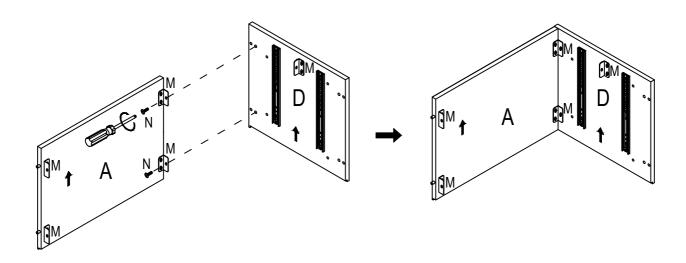


Attach Partial Rail (E) to Right Side Panel (D) using pre-installed dowels and Short Pan Head Bolt (N) with screwdriver (not provided).

Note: Make sure to follow the arrow direction when assembling.

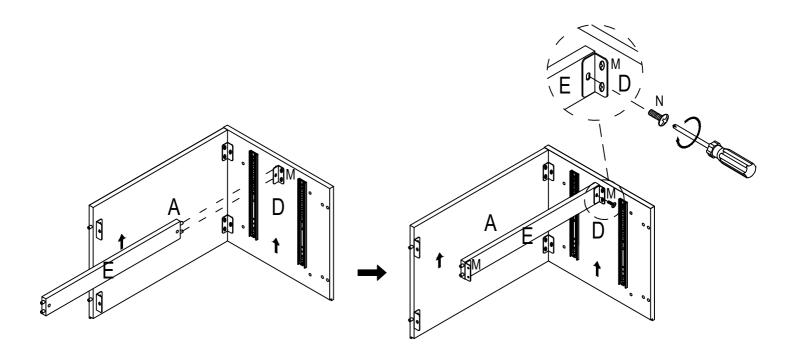


Attach Bottom Panel (B) to Right Side Panel (D) using pre-installed dowels and Short Pan Head Bolt (N) with screwdriver (not provided).

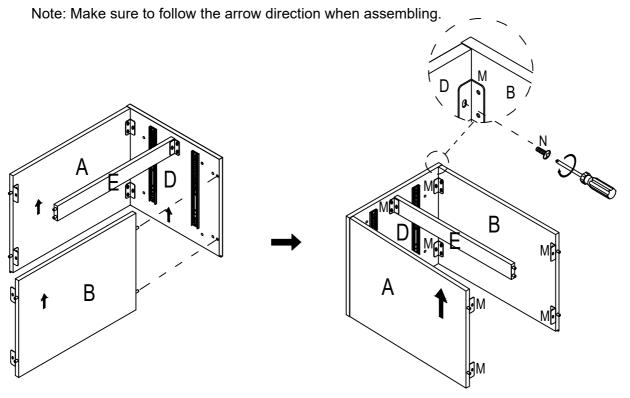


Attach Left Side Panel (C) to Top & Bottom Panel (A & B) and Partial Rail (E) using pre-installed dowels and Short Pan Head Bolt (N) with screwdriver (not provided).


Note: Make sure to follow the arrow direction when assembling.

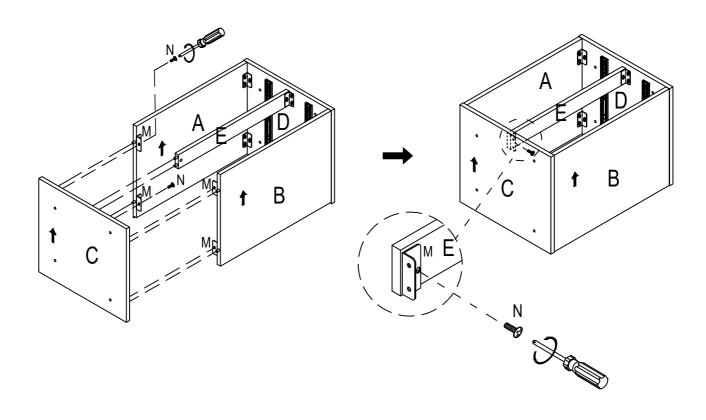

Attach Side Frame (G) to Left & Right Side Panel (C & D) using Short Bolt (O), Spring Washer (P) and Flat Washer (Q) with Allen Key (R).

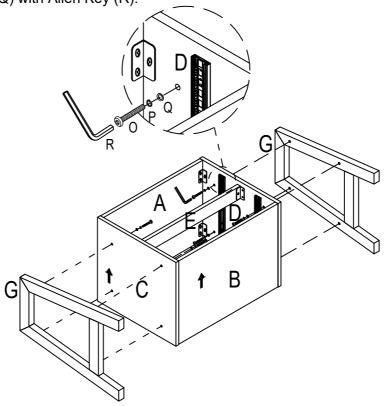


Attach Back Panel (F) to the back of the cabinet using Pan Head Screw (S) with screwdriver (not provided).

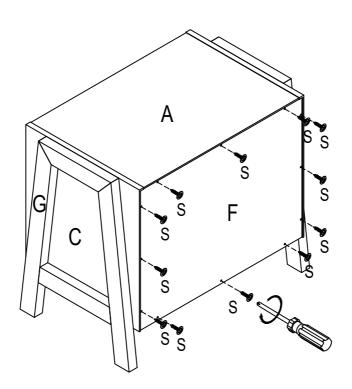


Attach Cam Bolt (T) to the Drawer Left & Right Side Panel (I & J) and Drawer Front Panel (H) with screwdriver. Attach Drawer Left & Right Side Panel (I & J) to Drawer Back Panel (K) using pre-installed dowels, then lock Cam Lock (U) with screwdriver (not provided).


Note: Make sure to follow the groove direction as shown below when assembling.

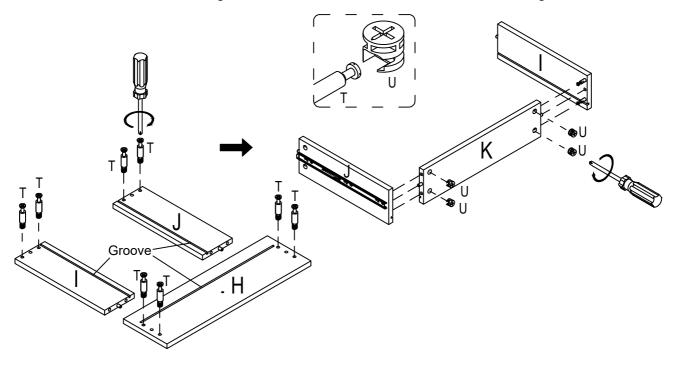


Slide Drawer Bottom Panel (L) into the grooves on Drawer Left & Right Side Panel (I & J) and Drawer Back Panel (K). Attach Drawer Front Panel (H) to the Drawer Left & Right Side Panel (I & J) using pre-installed dowels, then lock Cam Lock (U) with screwdriver (not provided).

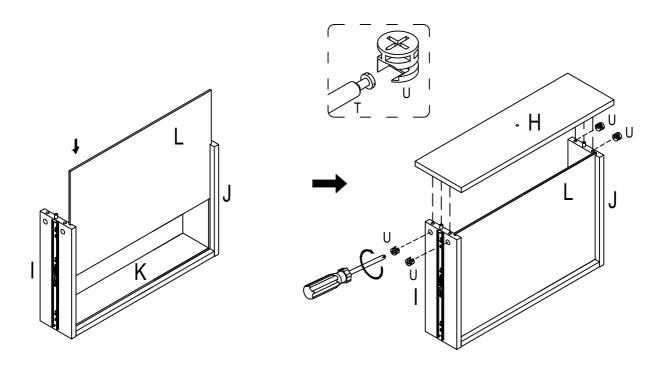

Attach Knob (V) to Drawer Front Panel (H) using Long Pan Head Bolt (W). Then attach Buckle (X) to the bottom of the drawer using Flat Head Screw (Y) with screwdriver (not provided).

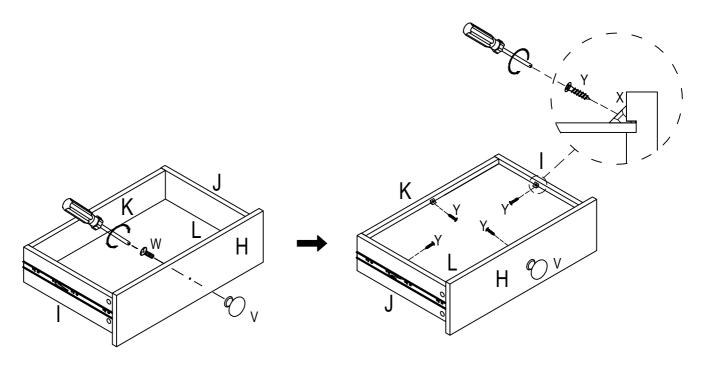

Attach the drawers to the cabinet by inserting the drawer slides into the tracks.

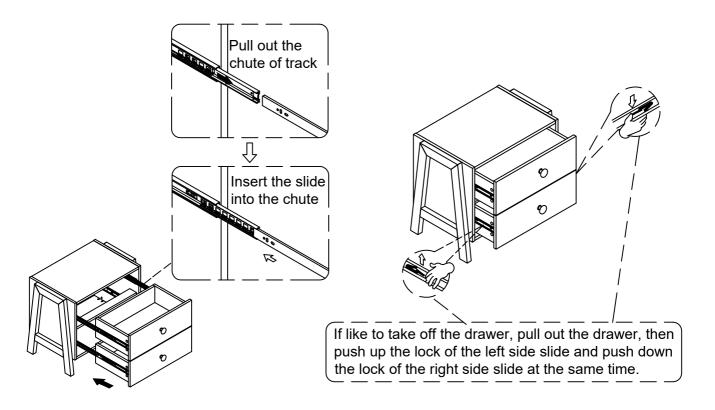

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.