


HEKMAN[®]

X A HOWARD MILLER COMPANY

79401 & 79421 EXECUTIVE CREDENZA

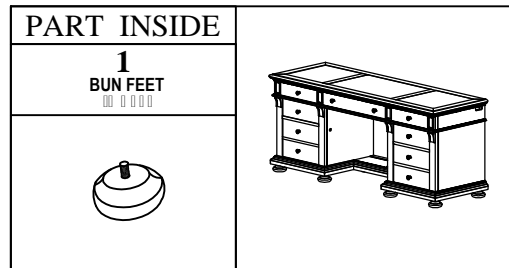

Assembly Instruction

STEP 1.

INSERT ALL THE BUN FEET (1) IN PRE-DRILLED HOLES, SECURE BY TURNING THE BUN FOOT IN A CLOCKWISE DIRECTION AS SHOWN.

