






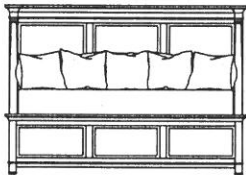


HEKMAN®

A HOWARD MILLER COMPANY

23565 QUEEN PANEL BED 23566 KING PANEL BED


Hardware List

A	B	C	D	E	F	G	
BOLT M8 x 100 8 PCS.	HALF WASHER M8 8 PCS.	SPRING W. M8 8 PCS.	HEXAGONAL NUTS M8 (8 PCS.)	ALLEN BOLT M6 X 40 (4 PCS.)	ALLEN KEY M4 (FOR ALLEN BOLT) 1 PC.	WRENCH (FOR HEXA BOLT) 1 PC.	
							

Assembly Instruction


STEP 1:

TURN CONNECTING BOLT (A) IN TO THREADED INSERT IN HEADBOARD AND FOOTBOARD. PLACE SIDE RAIL IN POSITION AND LOCK WITH THE HALFMOON WASHER (B), SPRING WASHER (C), HEXA BOLT (D) USING WRENCH (G) PROVIDED.

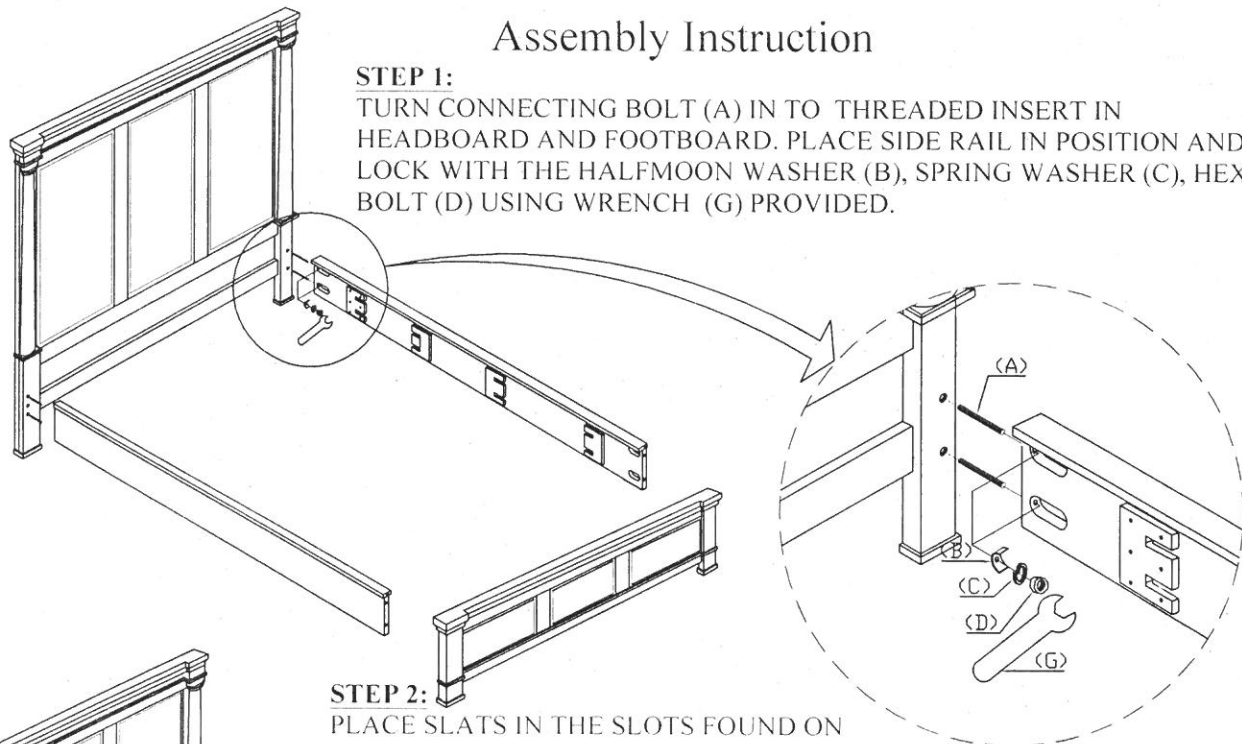

STEP 2:

PLACE SLATS IN THE SLOTS FOUND ON THE INSIDE OF SIDE RAILS. IF THE SLATS ARE IN THE HIGHER SLOTS USE THE LONG FEET, AND IF IN THE LOWER SLOTS USE THE SHORT FEET. ATTACH THE FEET WITH ALLEN BOLT (D) AND TIGHTEN USING ALLEN KEY M4 (F).

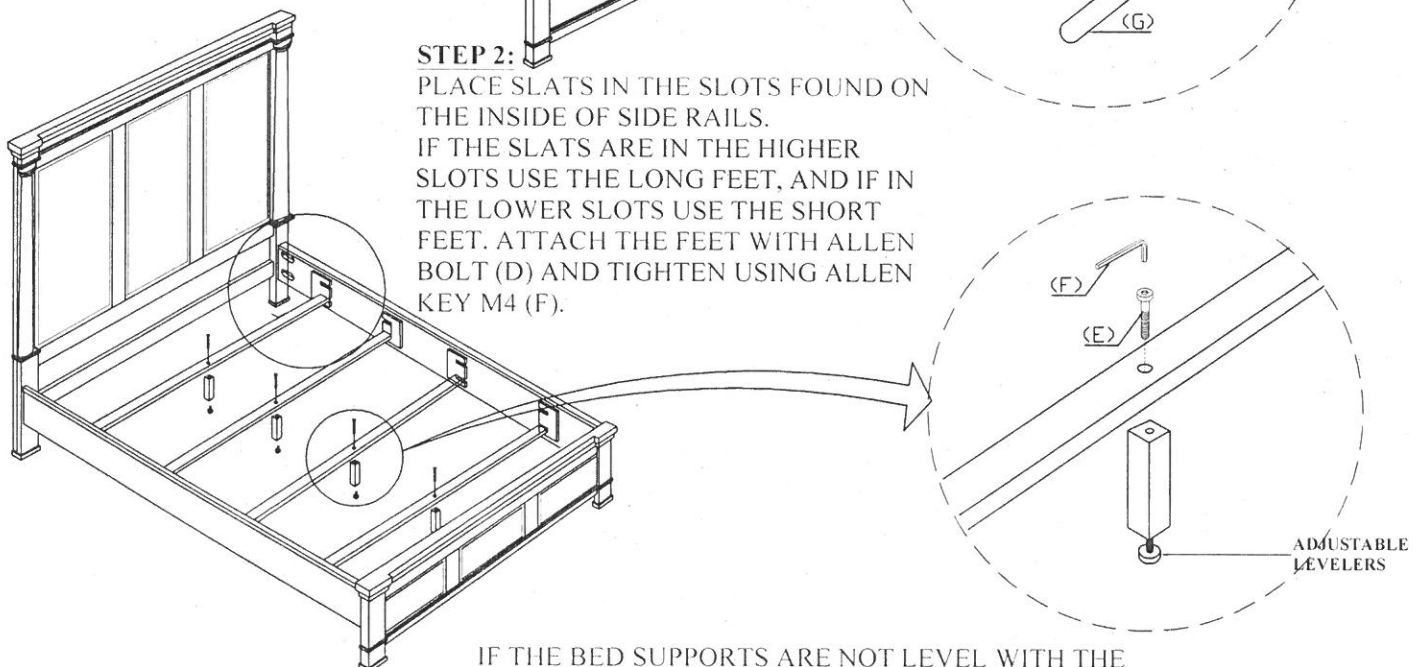

IF THE BED SUPPORTS ARE NOT LEVEL WITH THE FLOOR, ADJUST THE ADJUSTABLE LEVELERS FOUND UNDERNEATH LEG SUPPORTS.