


HEKMAN®

A HOWARD MILLER COMPANY

23326 BUFFET

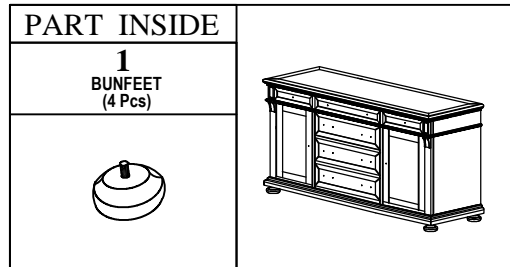

Assembly Instruction

STEP 1.

INSERT ALL THE BUNFEET (1) IN PRE-DRILLED HOLES, SECURE BY TURNING THE BUNFOOT IN A CLOCKWISE DIRECTION AS SHOWN.

