


HEKMAN[®]

X A HOWARD MILLER COMPANY

79412 & 79432 FILE

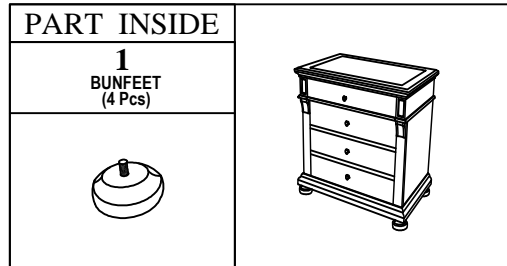

Assembly Instruction

STEP 1.

INSERT ALL THE BUNFEET (1) IN PRE-DRILLED HOLES, SECURE BY TURNING THE BUNFOOT IN A CLOCKWISE DIRECTION AS SHOWN.

