

Magnetic Phone Mount

Car Vent Attachment

User's Manual

Contents:


1 Two Metal Discs* with Adhesive

*Product includes an extra metal plate for use with a second device.

2 Non-Slip Magnetic Surface

3 Release Button

4 Holding Clamp

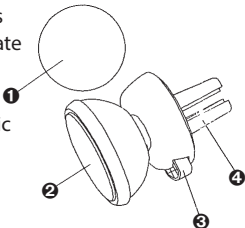

Adhere Metal Disc to device:

FOR BEST RESULTS:

The outside of your device case must be clean and dry.

Step 1 - Peel adhesive liner off Metal Disc

Step 2 - Adhere Metal Disc to center outside of device case




Allow 24-hours for adhesive to cure

Mount to vent:

Step 1 - Press Release Button to open Holding Clamp

Step 2 - Slide Holding Clamp over vehicle air vent and release button

Step 3 - Place device on Magnetic Non-Slip Surface

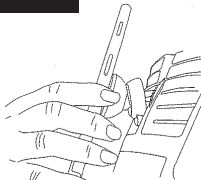

- Compatible with any air vent angle
- Rotates 360 degrees
- Magnets will not harm device