




Regent Tubular Leverset/Knobset Installation Instructions

● Fit Doors 35mm(1-3/8") to 50mm(2") Thick


● Backset 60 mm (2-3/8") /70 mm(2-3/4")

New Door Preparation


- A: Fold template on edge of door mark site 60mm(2-3/8") or 70mm(2-3/4") of holes.
- B: Drill a \varnothing 54mm(2-1/8") hole through door (from both sides to avoid damaging door).
- C: Drill a \varnothing 25mm(1") hole in door edge.
- D: Cut out a 58x26x3mm (2-9/32"x1"x1/8") base.

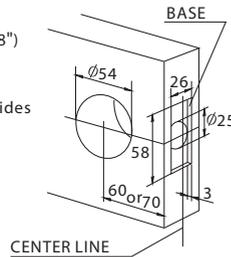


Latch Preparation

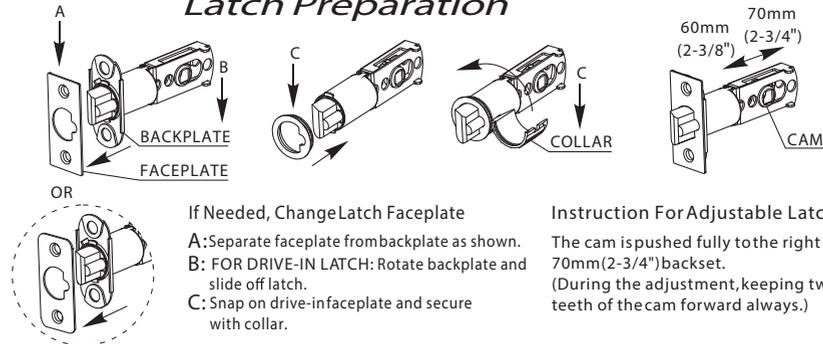


Install Latch

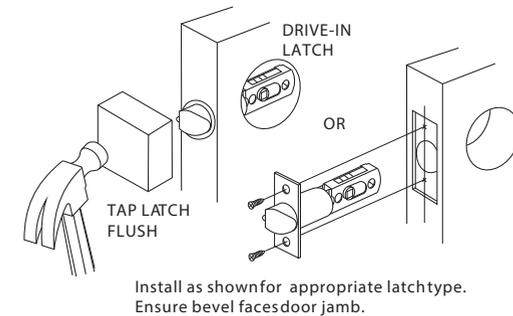


1 DISASSEMBLE INSIDE LEVER/KNOB AND INSIDE ROSE

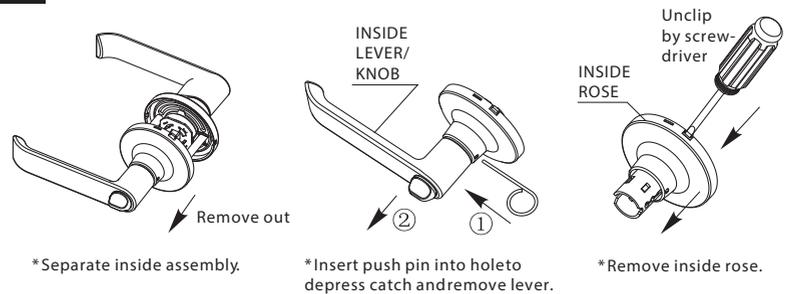


2 INSTALL OUTSIDE LEVER/KNOB

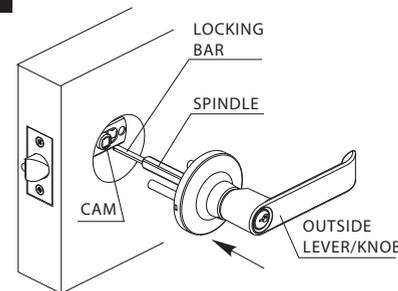


3 INSTALL INSIDE PLATE ASSEMBLY

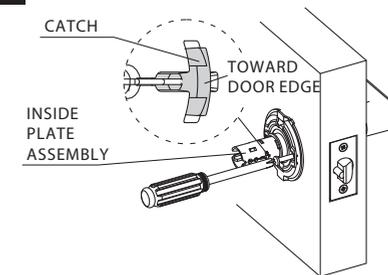


4 INSTALL INSIDE ROSE

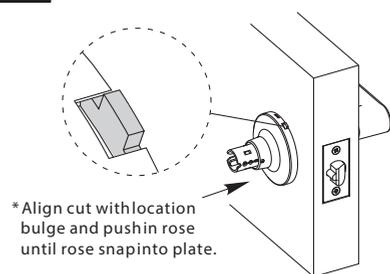

5 INSTALL INSIDE LEVER/KNOB

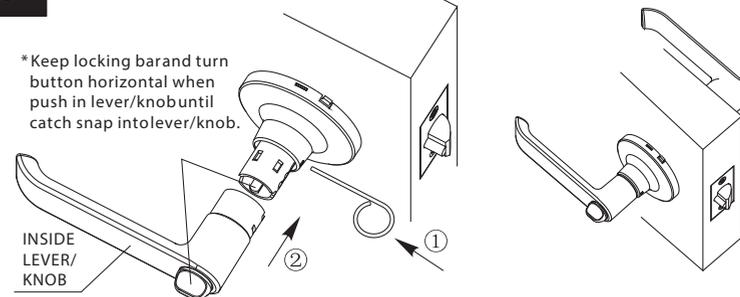

6 INSTALL STRIKE

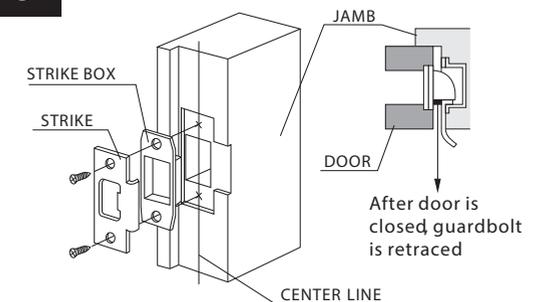

Allegion (Australia) Pty Ltd
Phone 1800 098 094
Website www.allegion.com.au

Allegion (New Zealand) Limited
Phone 0800 477 869
Website www.allegion.co.nz