

















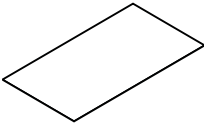



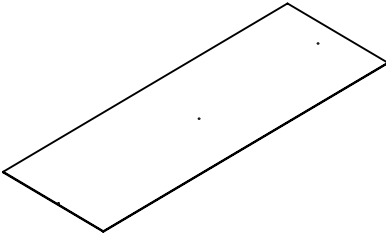


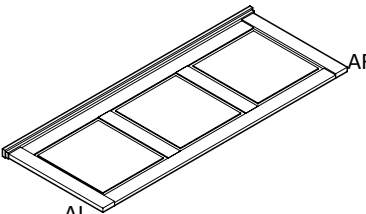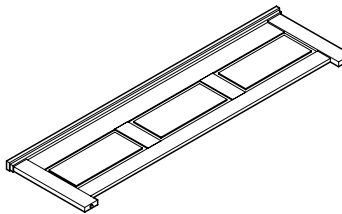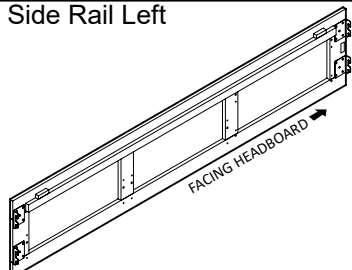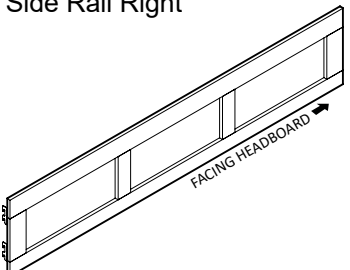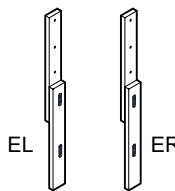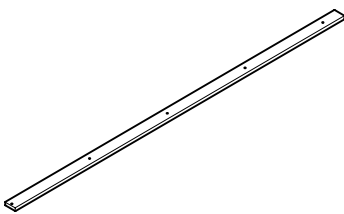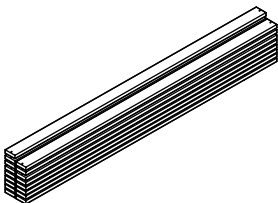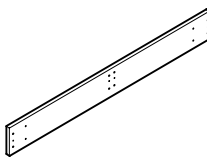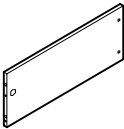








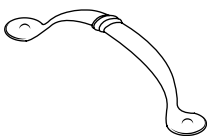




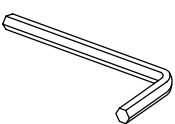





# ASSEMBLY INSTRUCTION

QUEEN BED  
EASTERN KING BED
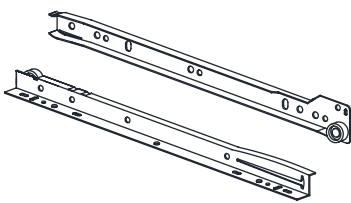
<b>A</b> Headboard  1pc	<b>B</b> Footboard  1pc	<b>C</b> Side Rail Left  1pc
<b>D</b> Side Rail Right  1pc	<b>E</b> Headboard Post  2pcs	<b>F</b> Center Slat  1pc
<b>G</b> Slat  1set (13pcs)	<b>H</b> Drawer Back Support  2pcs	<b>I</b> Drawer Side Support Left  4pcs
<b>J</b> Drawer Side Support Right  4pcs	<b>K</b> Storage Side Panel  4pcs	<b>L</b> Storage Back Panel  2pcs
<b>M</b> Storage Bottom Panel  2pcs	<b>N</b> Drawer Front  4pcs	<b>O</b> Drawer Side Left  4pcs

<b>P</b>	Drawer Side Right	<b>Q</b>	Drawer Back	<b>R</b>	Drawer Bottom Support
  					
4pcs		4pcs		4pcs	
<b>S</b>	Drawer Bottom	<b>T</b>	Slat Support Leg	<b>U</b>	Storage Support Leg
  					
4pcs		4pcs		4pcs	
<b>V</b>	Drawer Support Leg	<b>W</b>	Dust Cover	<b>X</b>	Cam Bolt 6.5mm x 35mm
  					
4pcs		2pcs		76pcs	
<b>Y</b>	Cam Lock 15mm x 12mm	<b>Z</b>	Dowel Ø8 x 25mm	<b>AA</b>	CBS M3.5 x 16mm
  					
76pcs		60pcs		62pcs	
<b>AB</b>	CBS M4 x 38mm	<b>AC</b>	CBS M4 x 30mm	<b>AD</b>	JCBC M6 x 30mm
  					
16pcs		26pcs		17 pcs	

<b>AE</b> JCBC M6 x 50mm  4pcs	<b>AF</b> Drawer Slide 350mm  4sets	<b>AG</b> JCBB M8 x 20mm  16pcs
<b>AH</b> JCBB M8 x 40mm  6pcs	<b>AI</b> Handle  4pcs	<b>AJ</b> PH M4 x 20mm  8pcs
<b>AK</b> Spring Washer M8  6pcs	<b>AL</b> Flat Washer M8  6pcs	<b>AM</b> Allen Key M4  1pc
<b>AN</b> Allen Key M5  1pc	<b>AO</b> Adjustable Glider M6 (Ø23)  4pcs	<b>AP</b> Adjustable Glider M6 (Ø16)  8pcs

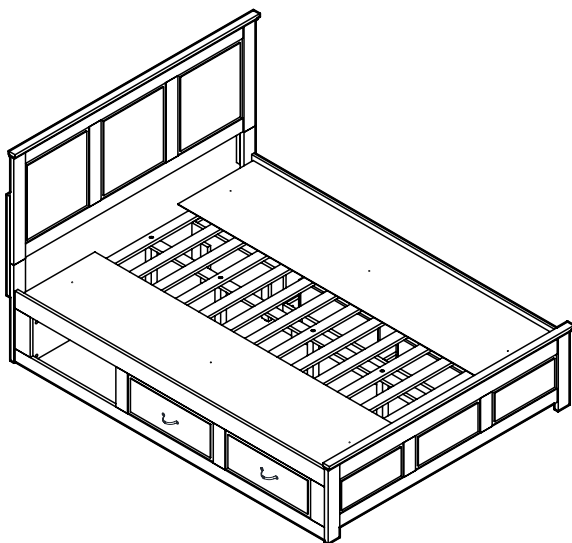


These pages list all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

#### IMPORTANT NOTE :

1. Do not tighten all screws / bolts until all completely assembled.
2. Keep all hardware parts out of reach of children.


# 1

- (i) Attach Adjustable Glider (AO) to Slat Support Leg (T) and attach Adjustable Glider (AP) to Storage Support Leg (U) and Drawer Support Leg (V).
- (ii) Attach Cam Bolt (X) to Drawer Back Support (H) holes and tighten with screwdriver (not provided) as image below.

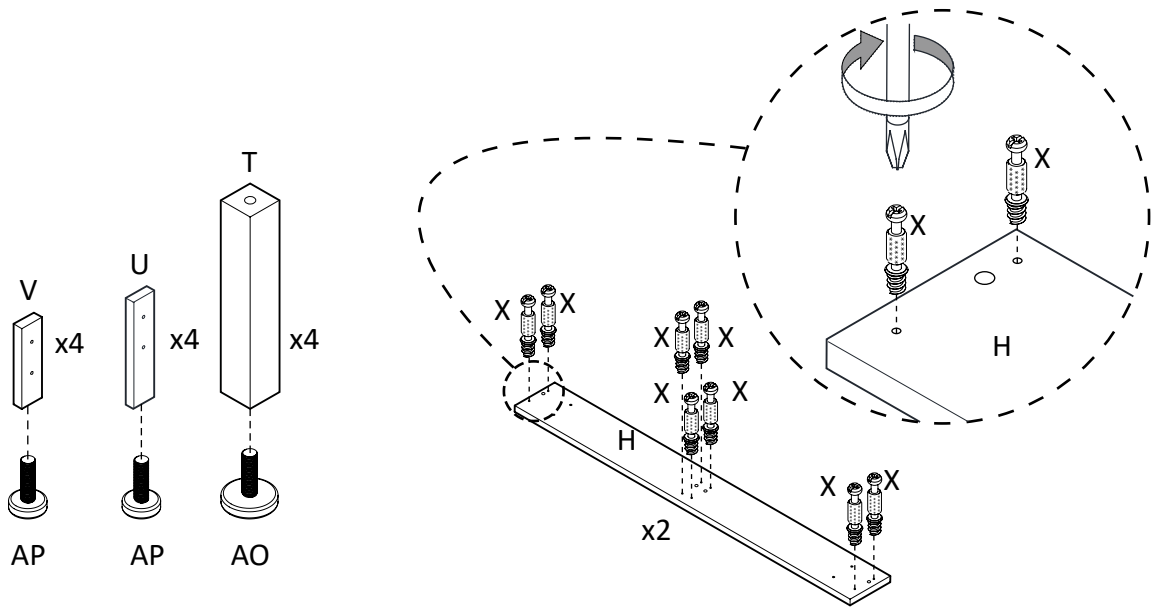


# 2

- (i) Turn the Headboard (A) upside down and place it on a piece of cloth to prevent from scratching.
- (ii) Attach Headboard Post (E) to the Headboard (A) with right pair (AL to EL, AR to ER).
- (iii) Insert JCBB (AH), Spring Washer (AK) and Flat Washer (AL) to the holes and tighten using Allen Key (AN) as image below.

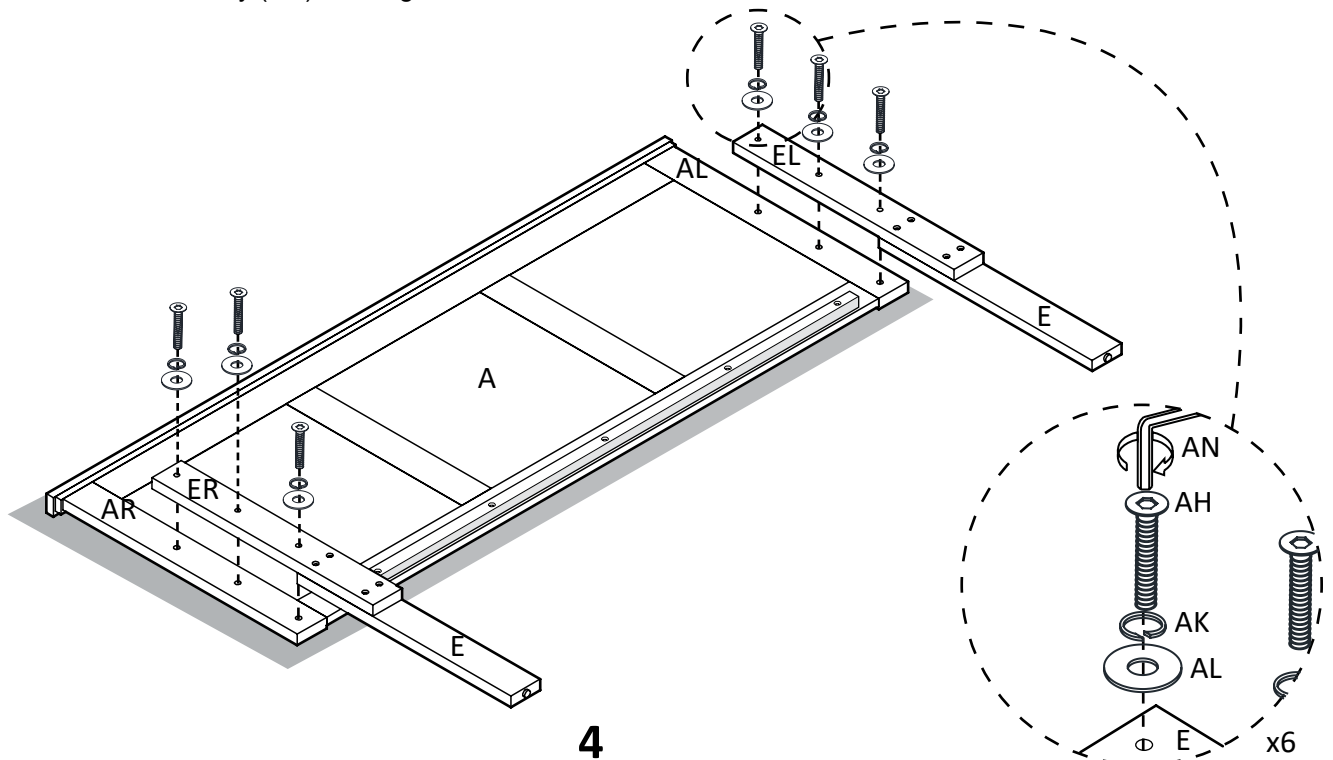


# 3

Attach Cam Bolt (X) to Side Rail Left (C) and Side Rail Right (D) holes and tighten with screwdriver (not provided) as image below.

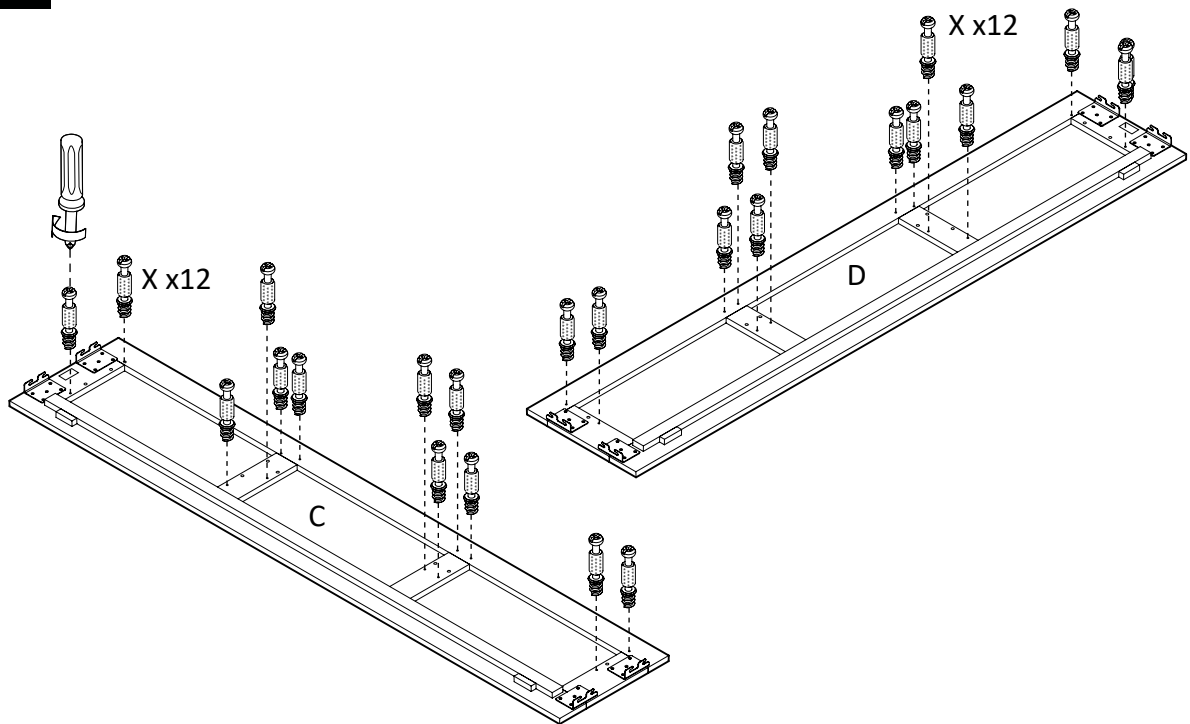

# 4


- (i) Attach Cam Bolt (X) to Storage Side Panel (K) and Storage Back Panel (L) holes and tighten with screwdriver (not provided).
- (ii) Attach Cam Lock (Y) to Drawer Side Support Left (I), Drawer Side Support Right (J), Storage Side Panel (K) and Storage Bottom Panel (M) to the holes.
- (iii) Attach Dowel (Z) to Drawer Side Support Left (I), Drawer Side Support Right (J), Storage Side Panel (K), and Storage Bottom Panel (M) to the holes as image below.

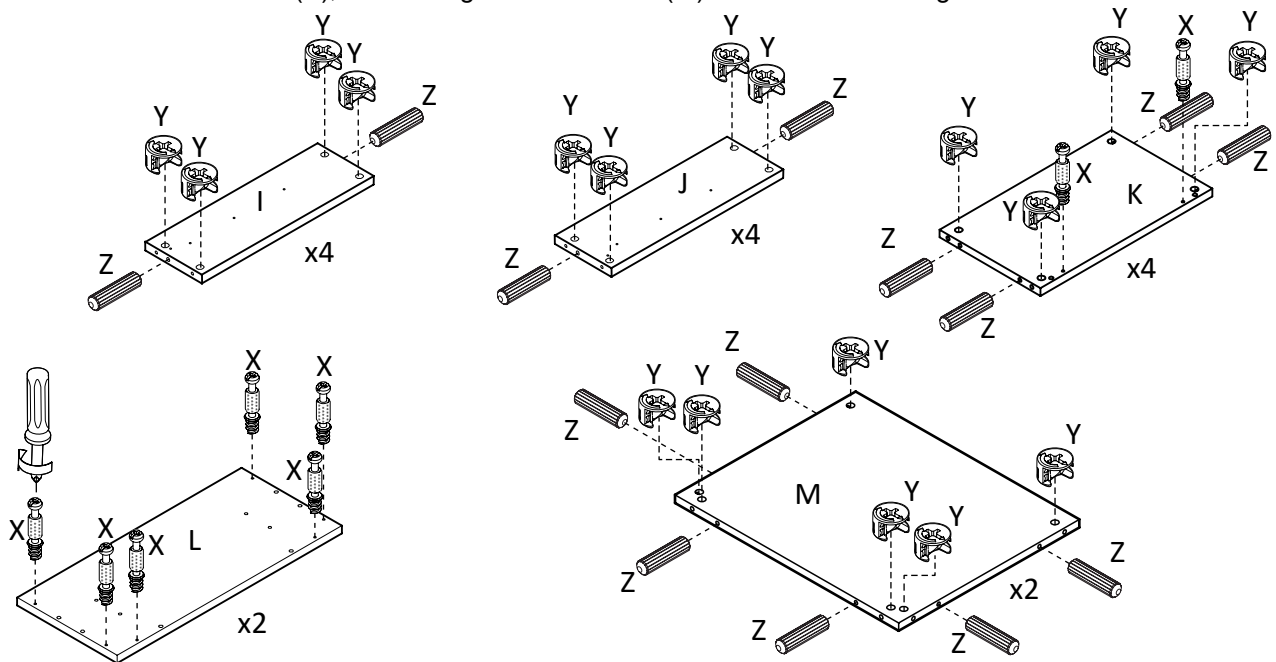

# 5


5

- (i) Attach Cam Bolt (X) to Drawer Front (N) holes as image below and tighten with screwdriver (not provided).
- (ii) Attach Drawer Slide (AF) to Drawer Side Support Left (I), Drawer Side Support Right (J) and insert CBS (AA) to the holes as image below and tighten with screwdriver (not provided).

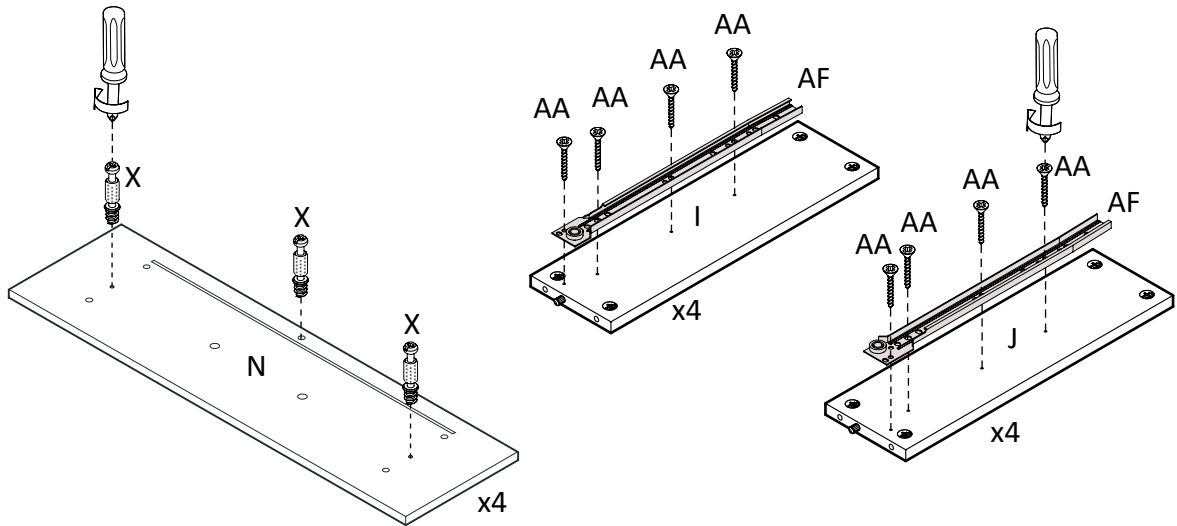


6

- (i) Attach Cam Bolt (X) to Drawer Back (Q) holes and tighten with screwdriver (not provided).
- (ii) Attach Dowel (Z) to Drawer Side Left (O) and Drawer Side Right (P) to the holes.
- (iii) Attach Drawer Slide (AF) to Drawer Side Left (O) and Drawer Side Right (P) and insert CBS (AA) to the holes as image below and tighten with screwdriver (not provided).

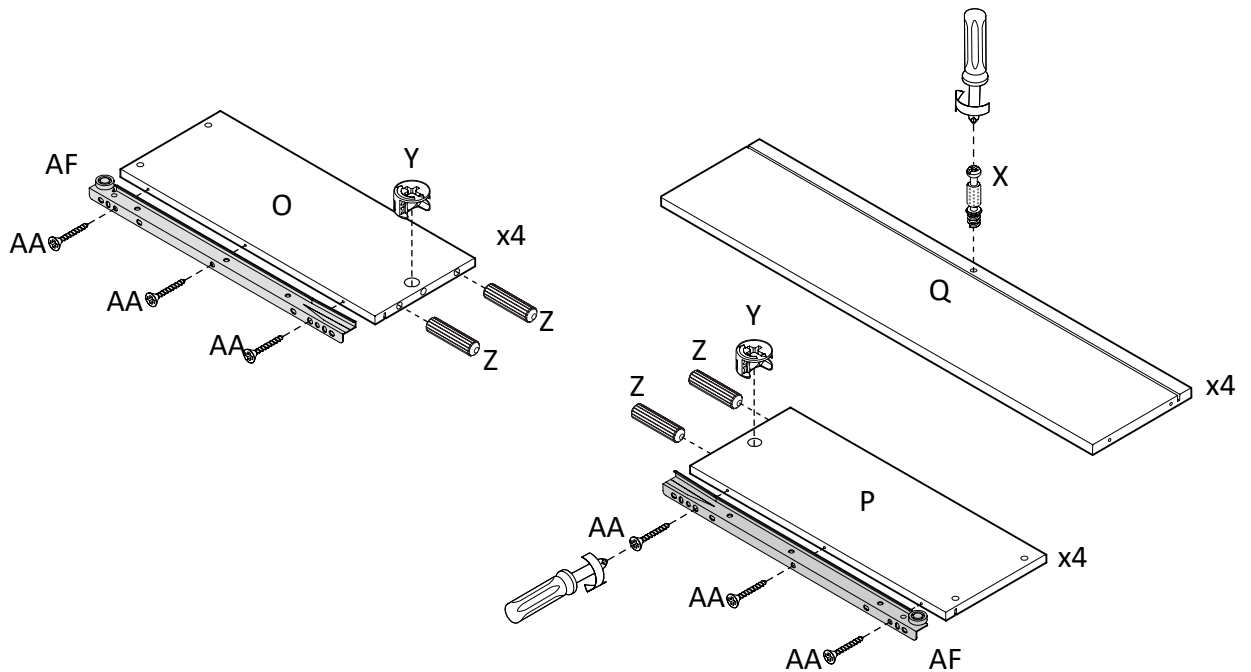


7

Attach Drawer Support Leg (V) to Drawer Back Support (H) and attach Storage Support Leg (U) to Storage Back Panel (L) and insert JCBC (AD) to the holes and tighten using Allen Key (AM) as image below.

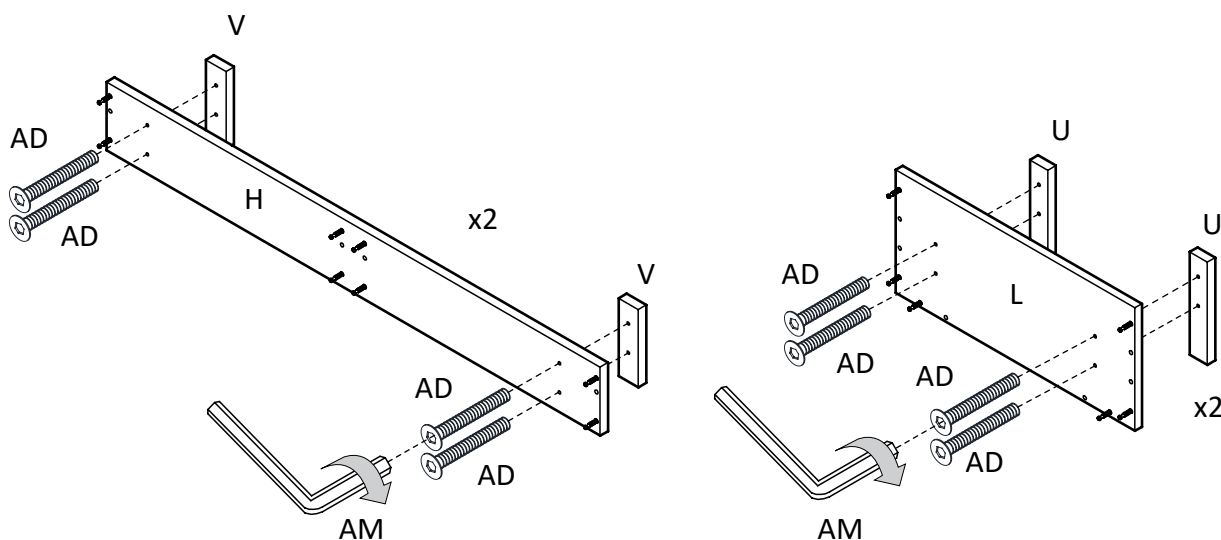


8

- (i) Attach Storage Side Panel (K) to Storage Bottom Panel (M) and tighten Cam Lock (Y) to Cam Bolt (X) using screwdriver (not provided) as image below.
- (ii) Attach Storage Back Panel (L) to Storage Bottom Panel (M) and Storage Side Panel (K) and tighten Cam Lock (Y) to Cam Bolt (X) using screwdriver (not provided) as image below.

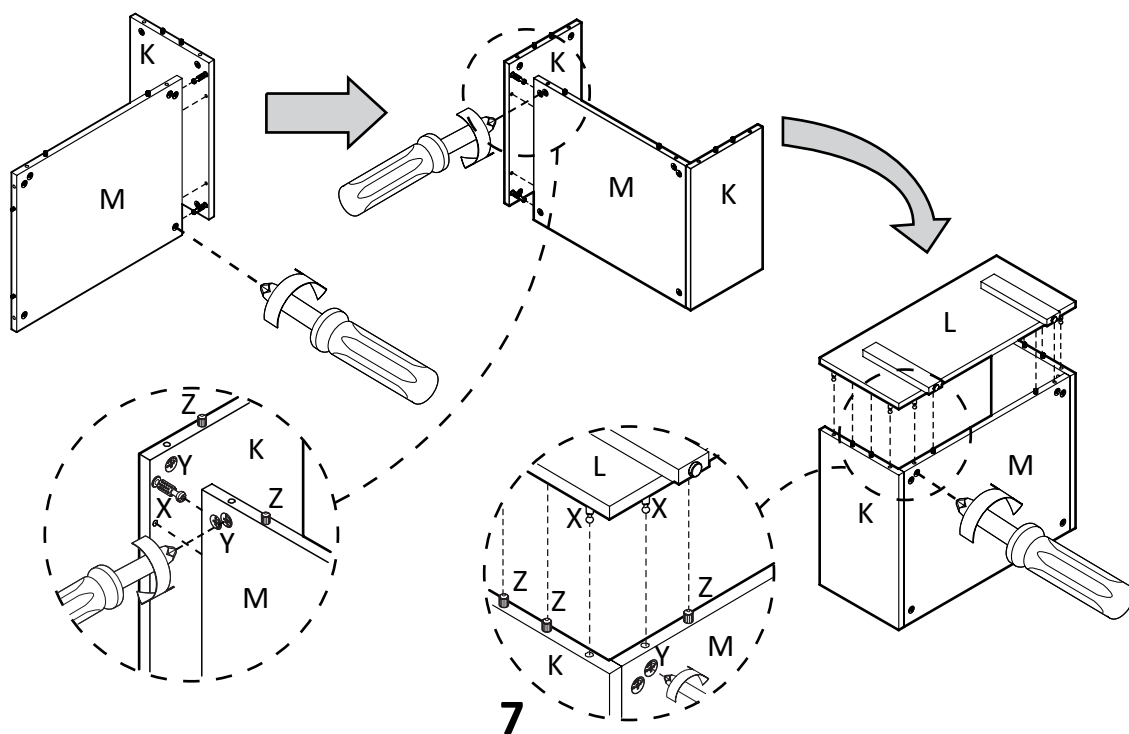


9

- (i) Attach Side Rail Left (C) and Side Rail Right (D) to Headboard (A) and Footboard (B) by inserting JCBB (AG) loosely into provided holes.
- (ii) Hook Brackets on the Side Rail (C) & (D) and the facing headboard side should have the stickers 'FACING HEADBOARD' and tighten all JCBB (AG) using Allen Key (AN) as image below.

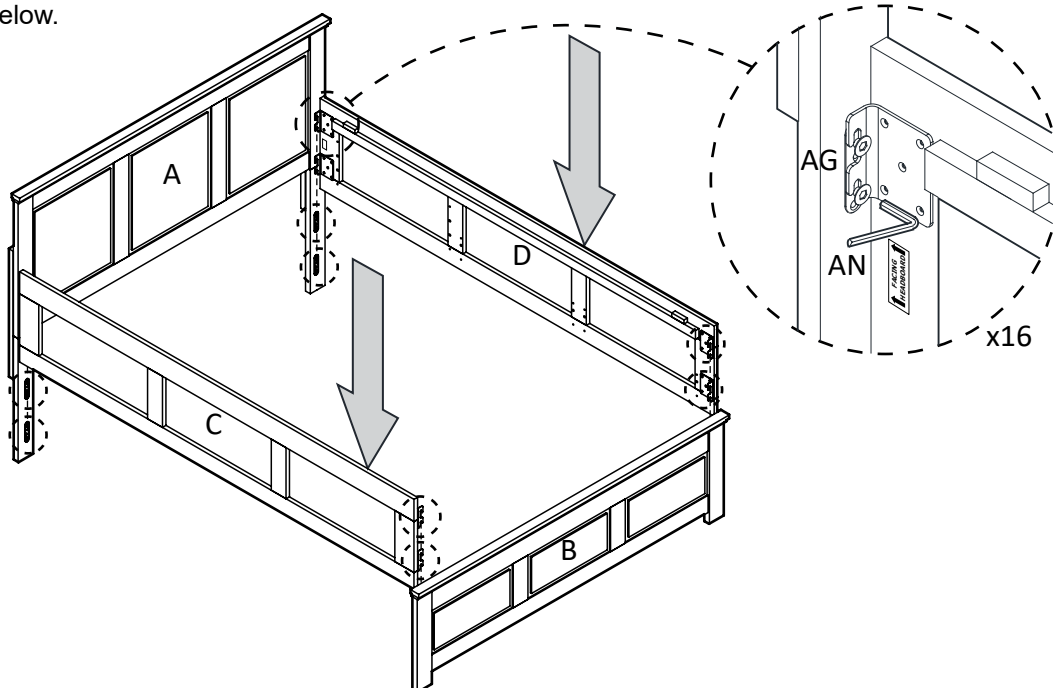

10


- Attach Storage Box (K,L,M) to Side Rail (C) & (D) and tighten Cam Lock (Y) to Cam Bolt (X) using screwdriver (not provided) as image below.

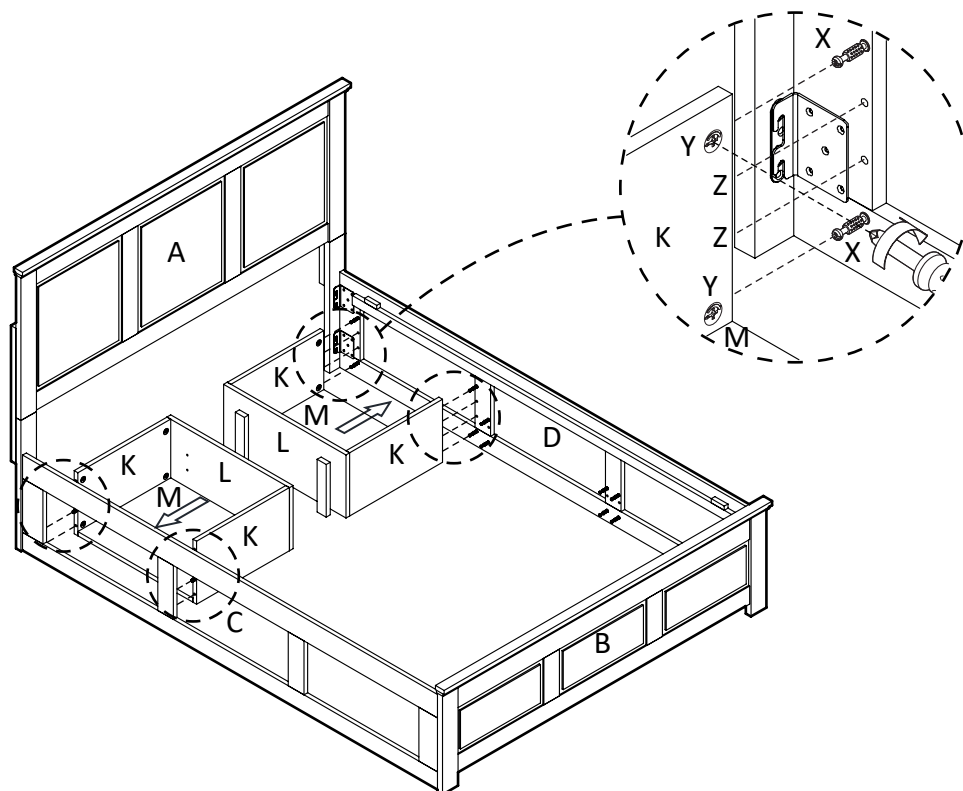




# 11

Attach Drawer Side Support Left (I) and Drawer Side Support Right (J) to Side Rail Left (C) and Side Rail Right (D) and tighten Cam Lock (Y) to Cam Bolt (X) using screwdriver (not provided) as image below.

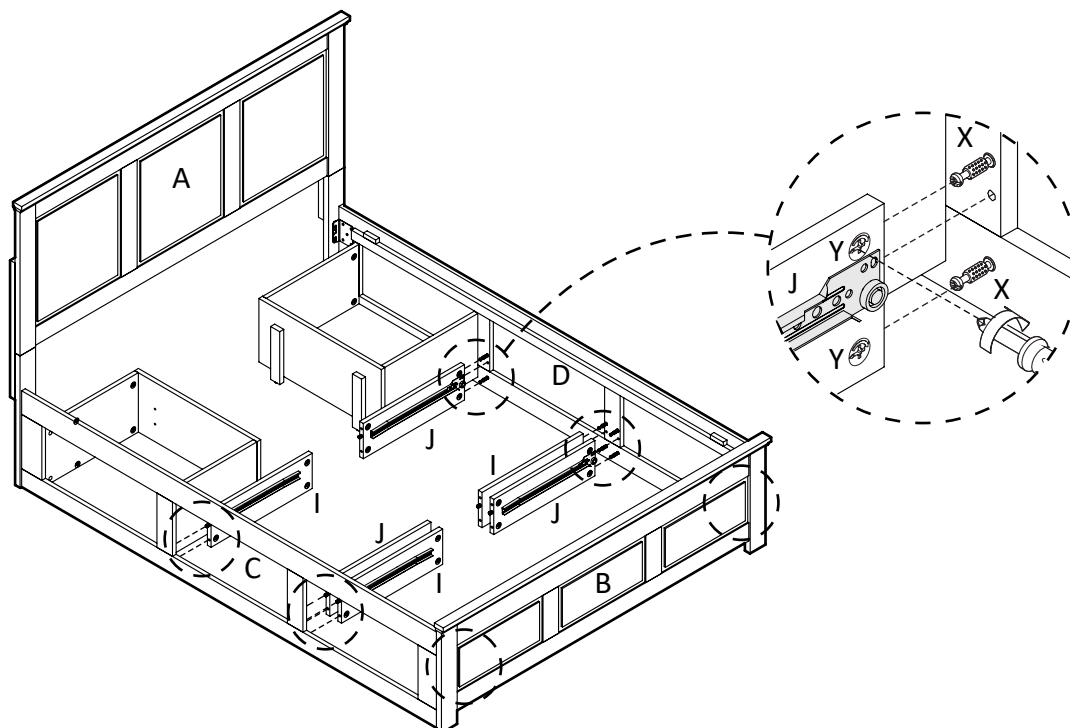


# 12

Attach Drawer Back Support (H) to Drawer Side Support Left (I) and Drawer Side Support Right (J) and tighten Cam Lock (Y) to Cam Bolt (X) using screwdriver (not provided) as image below.

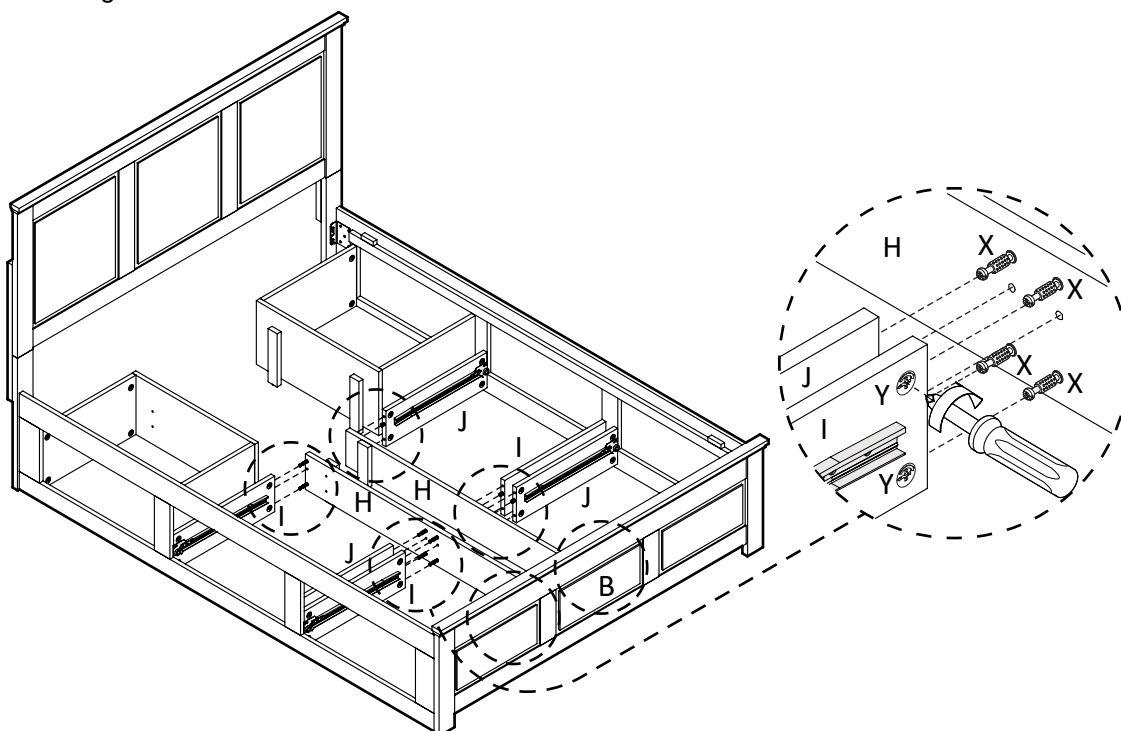


**13**

Attach Drawer Side Left (O) and Drawer Side Right (P) to Drawer Front (N) and fully tighten Cam Lock (Y) to Cam Bolt (X) using screwdriver (not provided) as image below.

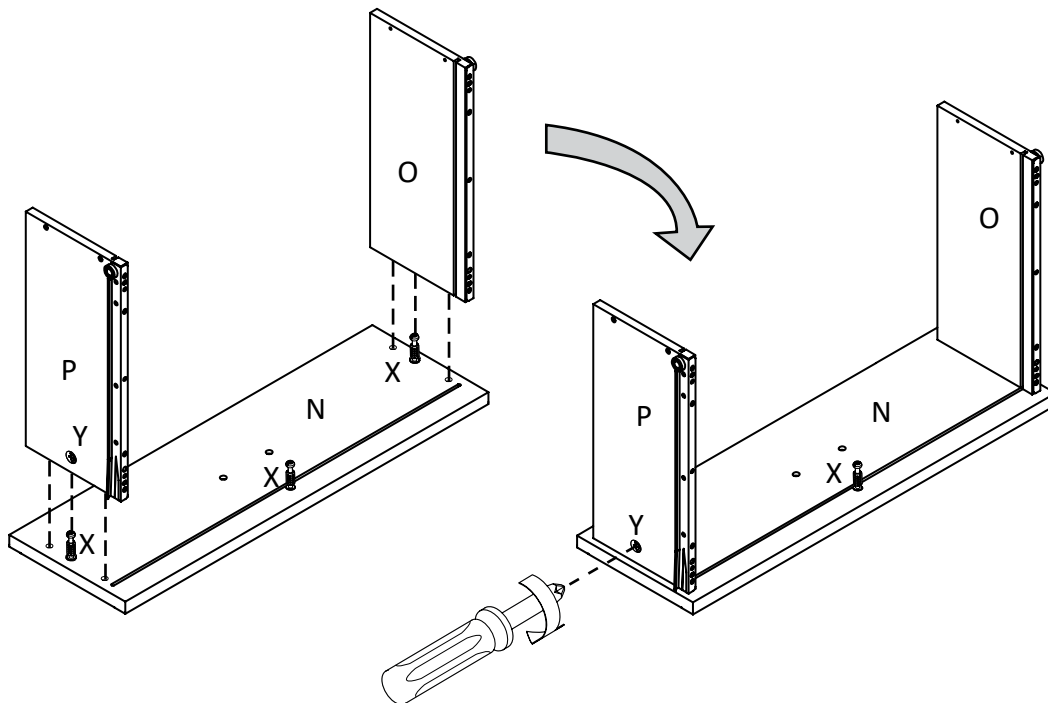
**14**

Attach Drawer Bottom Support (R) to Drawer Front (N) and fully tighten Cam Lock (Y) to Cam Bolt (X) using screwdriver (not provided) as image below.

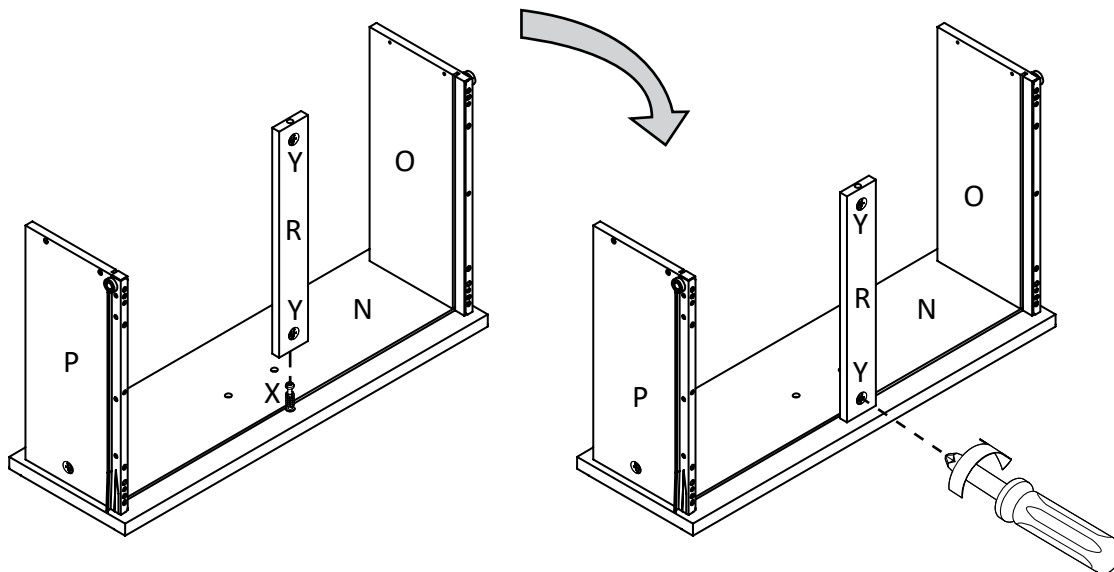


**15**


Slide in Drawer Bottom (S) to Drawer Side Left (O) and Drawer Side Right (P) groove.

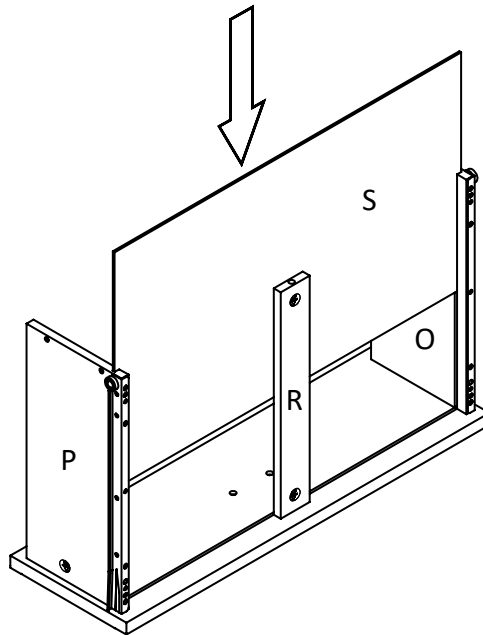**16**


- (i) Attach Drawer Back (Q) to Drawer Side Left (O) and Drawer Side Right (P) and insert CBS (AB) to the holes and fully tighten using screwdriver (not provided).
- (ii) Lock Drawer Bottom Support (R) and fully tighten Cam Lock (Y) to Cam Bolt (X) which is on Drawer Back (Q) using screwdriver (not provided).

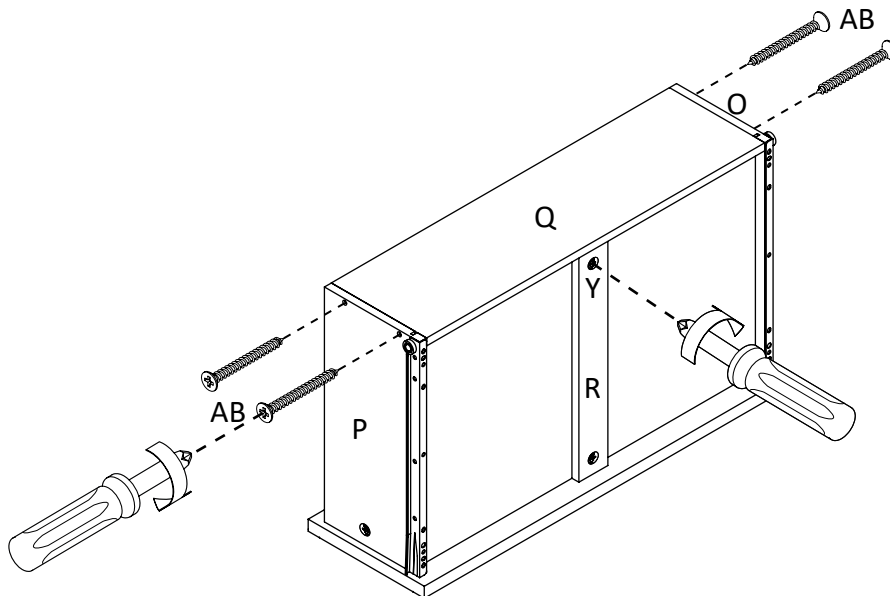

**17** Attach Handle (AI) to Drawer Front (N) and insert PH (AJ) to holes and tighten using screwdriver (not provided).

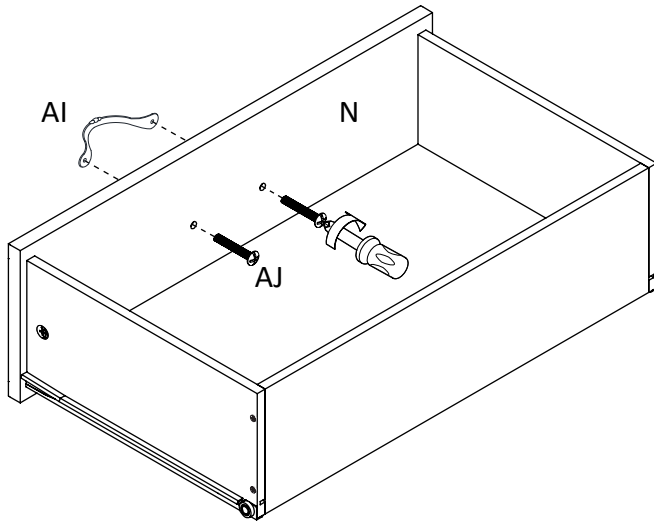


**18** Slide in Drawer Box Sets properly as image below.

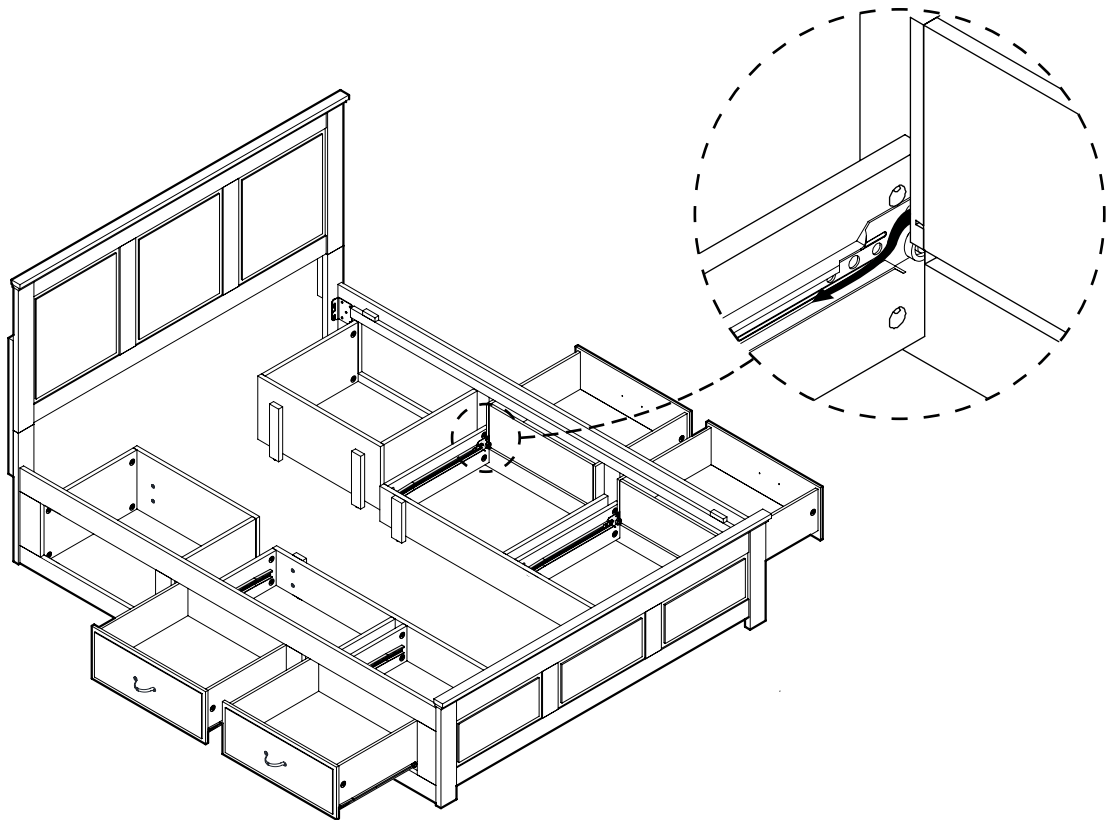

12


# 19

- (i) Please notice on FACING HEADBOARD sticker on Slat (G) to match on Center Slat (F).
- (ii) Spread the Slat (G) with bottom facing up. Place Center Slat (F) and Slat Support Leg (T) on top of Slat (G).
- (iii) From bottom of Slat (G) insert JCBC (AE) to the holes and tighten using Allen Key (AM) as image below.

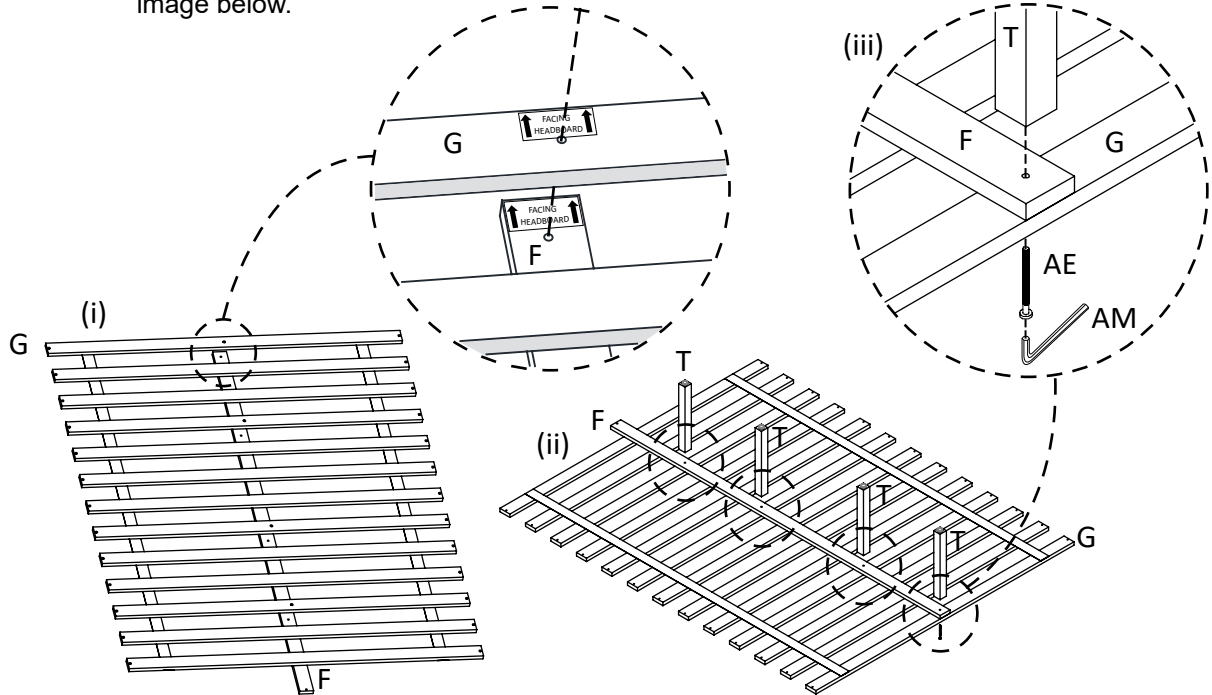


# 20

- (i) Attach Slat (G) and Center Slat (F) to back of Footboard (B) and insert JCBC (AD) to the hole and tighten using Allen Key (AM).
- (ii) Tighten the Slat (G) on Side Rail Left (C) and Side Rail Right (D) with CBS (AC) using screwdriver (not provided).

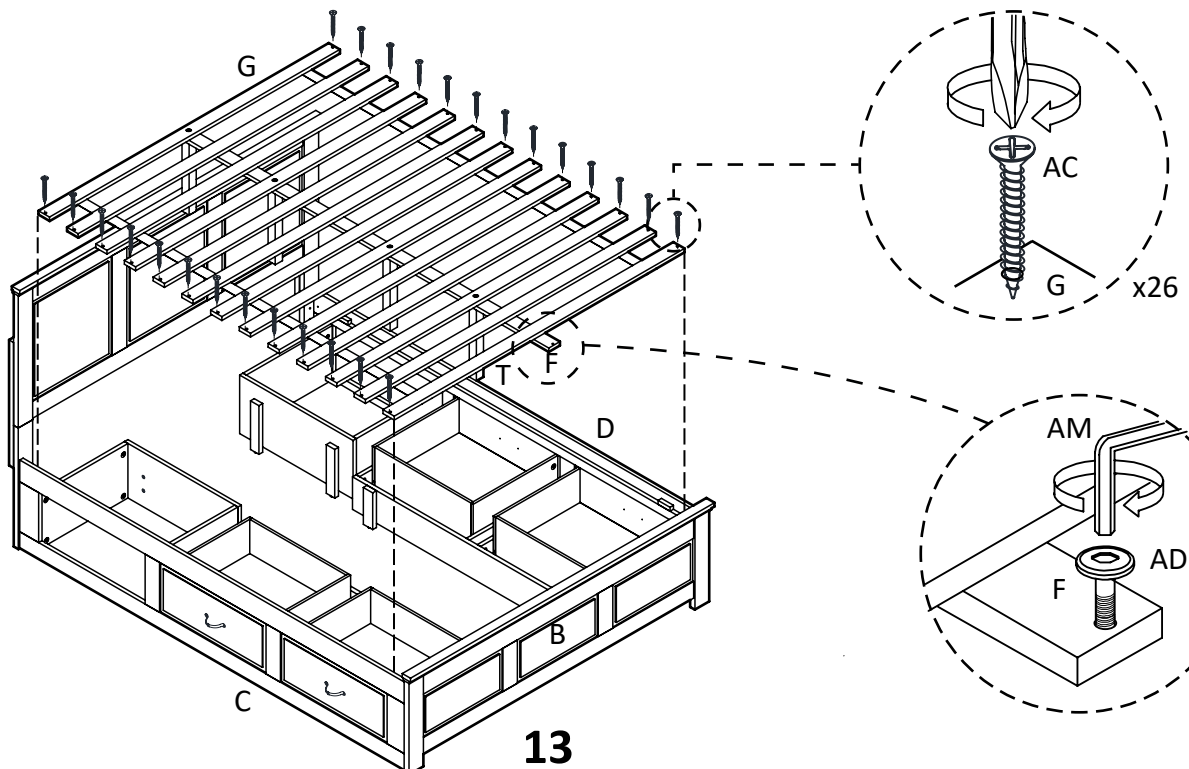

**21**

Attach Dust Cover (W) to the top of Slat (G) and Drawer area by CBS (AA) and tighten using screwdriver (not provided) as image below.

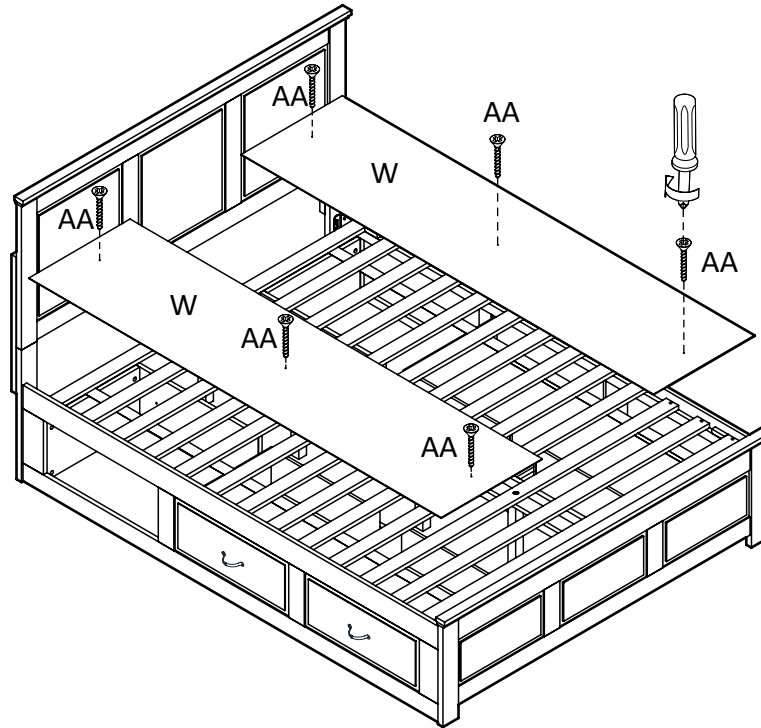

---

## Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.