



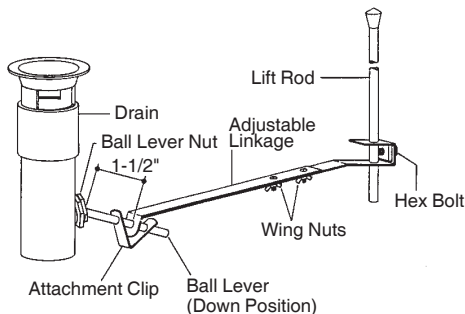

Installation

- ❑ Assemble adjustable linkage to ball lever with attachment clip so that the end of the adjustable linkage is approximately 1-1/2" from the ball lever housing. See dimension on illustration.
- ❑ Loosen wing nuts on adjustable linkage. Position square end of linkage under lift rod and slide lift rod through holes in linkage.
- ❑ Adjust ball lever to down position. Hand tighten wing nuts on adjustable linkage. Tighten hex bolt onto lift rod using a wrench.
- ❑ Check operation. If needed, adjust the length of the linkage and its position on lift rod to obtain proper opening and closing of drain. Ball lever nut may need to be adjusted for smoother operation.

วิธีการติดตั้ง

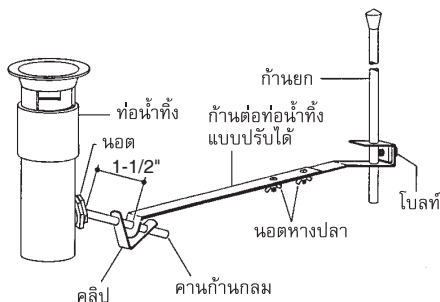

วิธีการติดตั้ง

- ❑ ประกอบกันต่อท่อน้ำทิ้งกับคานก้านกลมด้วยคลิป กำหนดระยะจากปลายกันต่อท่อน้ำทิ้งถึงคานจัดก้านกลมประมาณ 1-1/2 นิ้ว ดังรูป
- ❑ คลายนอตที่กันต่อท่อน้ำทิ้ง จับให้ปลายกันต่อท่อน้ำทิ้งสวมเข้ากับก้านยก โดยเลื่อนก้านยกสวมลงในรูกันต่อท่อน้ำทิ้ง
- ❑ ปรับตำแหน่งให้คานก้านกลมอยู่ด้านล่าง ชันนอตทางปลาที่กันต่อท่อน้ำทิ้ง ใช้ประแจขันโบลท์เข้ากับก้านยก
- ❑ ทดสอบการทำงาน โดยปรับความยาวของกันต่อท่อน้ำทิ้งและตำแหน่งของก้านยก เพื่อให้การปิด-เปิดท่อน้ำทิ้งเหมาะสมกับการใช้งาน สามารถปรับคานก้านกลมเพื่อให้การปรับสะดวกขึ้น