



1500 Cherokee Parkway, Suite 100, Acworth, GA 30102
 P: 866-845-5451 • F: 866-816-6165
 E: service@acclaim-lighting.com • www.acclaim-lighting.com

by Acclaim Lighting

TP10015AB

INSTALLATION INSTRUCTIONS

Please read carefully and save these instructions, as you may need them at a later date.

CAUTION

WARNING: Risk of Fire. Consult a qualified electrician to ensure correct branch circuit conductor. Min 90°C supply conductors.

Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.


GENERAL

All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

ASSEMBLY AND INSTALLATION

1. Attach long nipple (19) into lamp body (20).
2. Put rod (18) onto long nipple (19) and secure rod (18) with hex nut (17), washer (16), and loop (15).
3. Swing the arms (21) clockwise from horizontal position to vertical position.
4. Adjust chain (14) to desired length, and connect loop (15) with lower chain link (13) and chain (14).
5. Attach mounting bar (08) to outlet box (01) with box screws (09).
6. Pass the power supply cord and ground wire through chain (14), collar loop (12), canopy (11), nipple (10), and into outlet box (01).
7. Make wire connection with white wire (02) and black wire (03). Use wire connectors (05) to secure the connections. Secure ground wire (04) and ground wire from the fixture to mounting bar (08) with ground screw (07).
8. Screw nipple (10) into collar loop (12), then screw nipple (10) into mounting bar (08) and tight with hex nut (06).
9. Unscrew the threaded ring from collar loop (12), then attach chain (14) to threaded ring and canopy (11).
10. Use upper chain lock (13) to connect chain (14) to collar loop (12).
11. Raise canopy (11) to the ceiling, verify all wires are securely inside, then secure canopy (11) in place by tightening threaded ring onto collar loop (12).

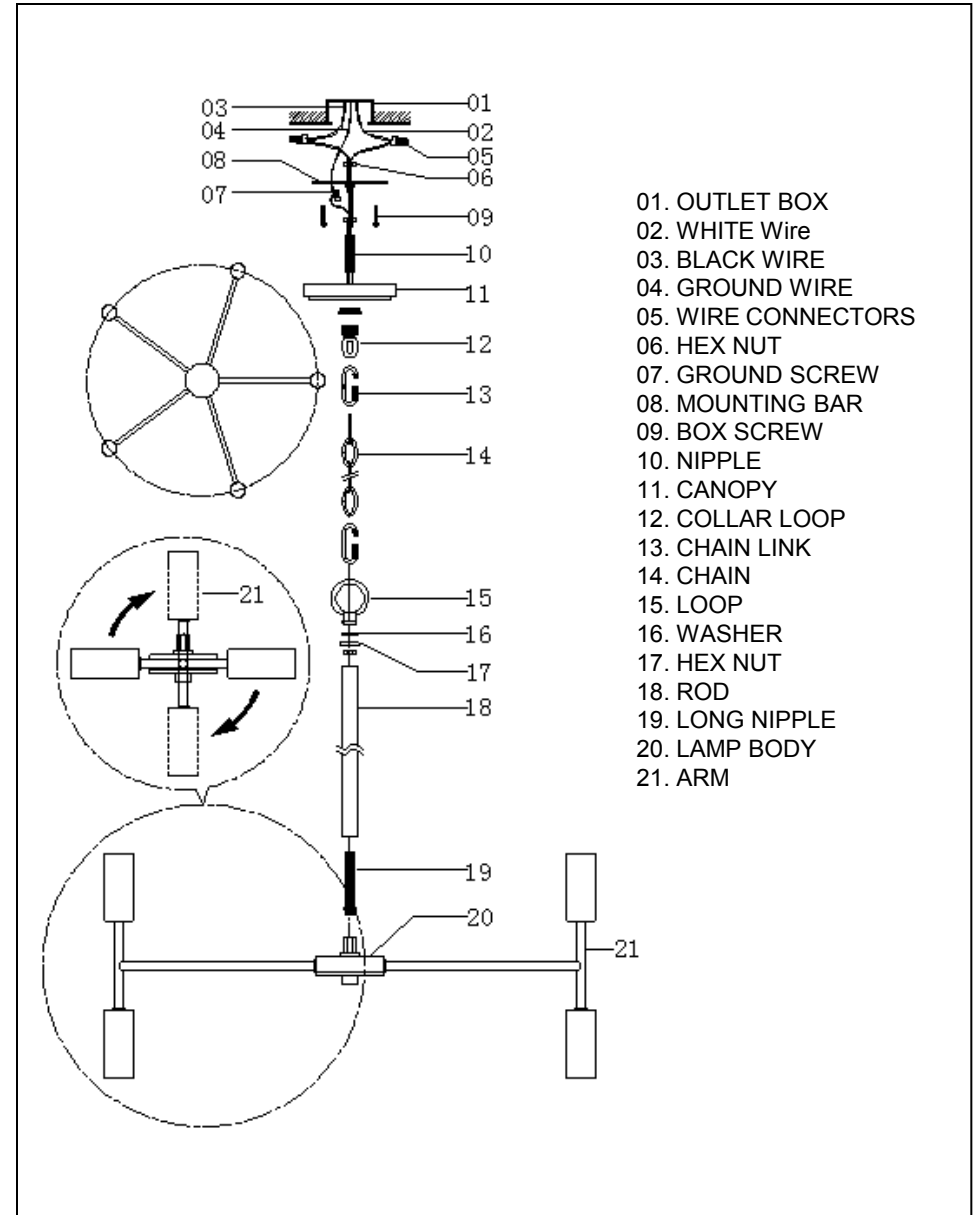

INSTALLATION IS NOW COMPLETE.