
ASSEMBLY INSTRUCTION


6 Drawer Double Dresser

ASTM F2057-23 certified Sturdy Act Compliant

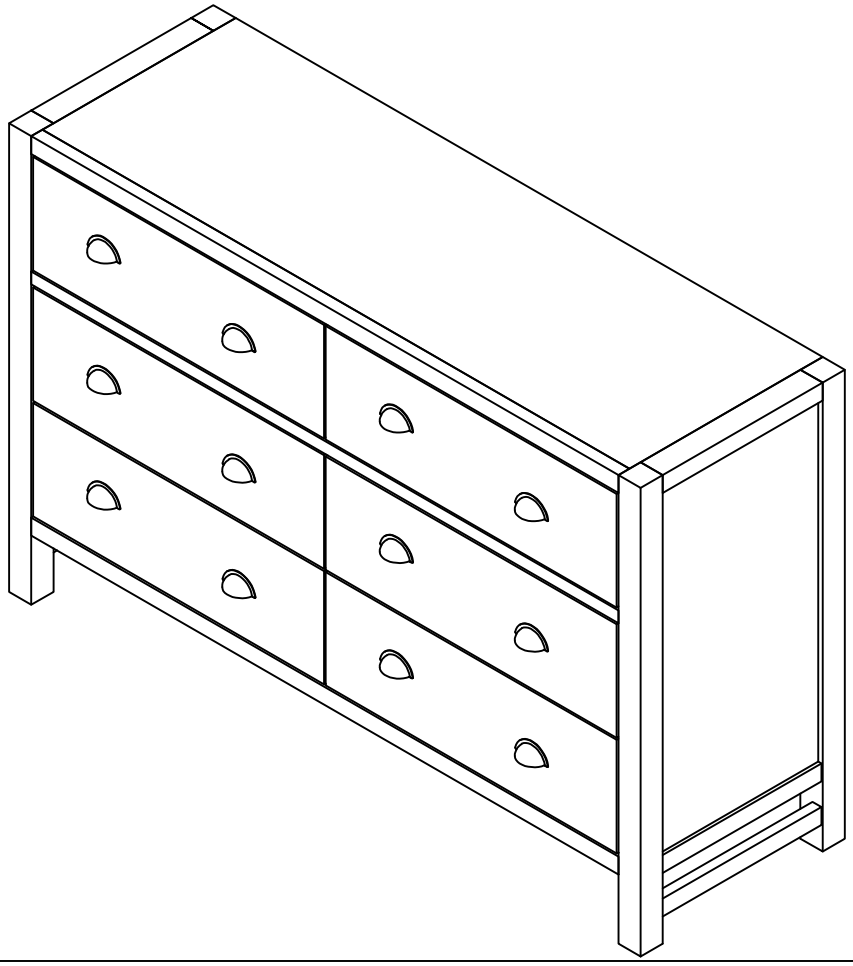


REPLACEMENT PARTS

Please do not contact the company purchased from as we can help you faster.
Order replacement parts and hardware at " www.boltonfurniture.com "

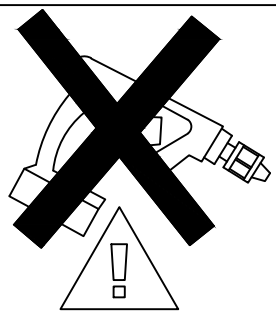


. Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe !!!
. Please assemble on a clean soft surface to avoid damage.

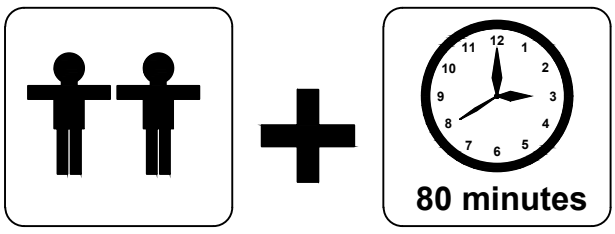

Tools Required


(included)


(Not included)


www.boltonfurniture.com

Part list - 6 Drawer Double Dresser

Box A: Part 2, 3, 4, Assembly Hardware

Box B: Part 1, 5 (x2), 6, 7, 8, 9, 11 (x6), 12 (x6), 13 (x6), 14 (x6), 15 (x3), 16 (x3).

Box C: Part 10 (x2)

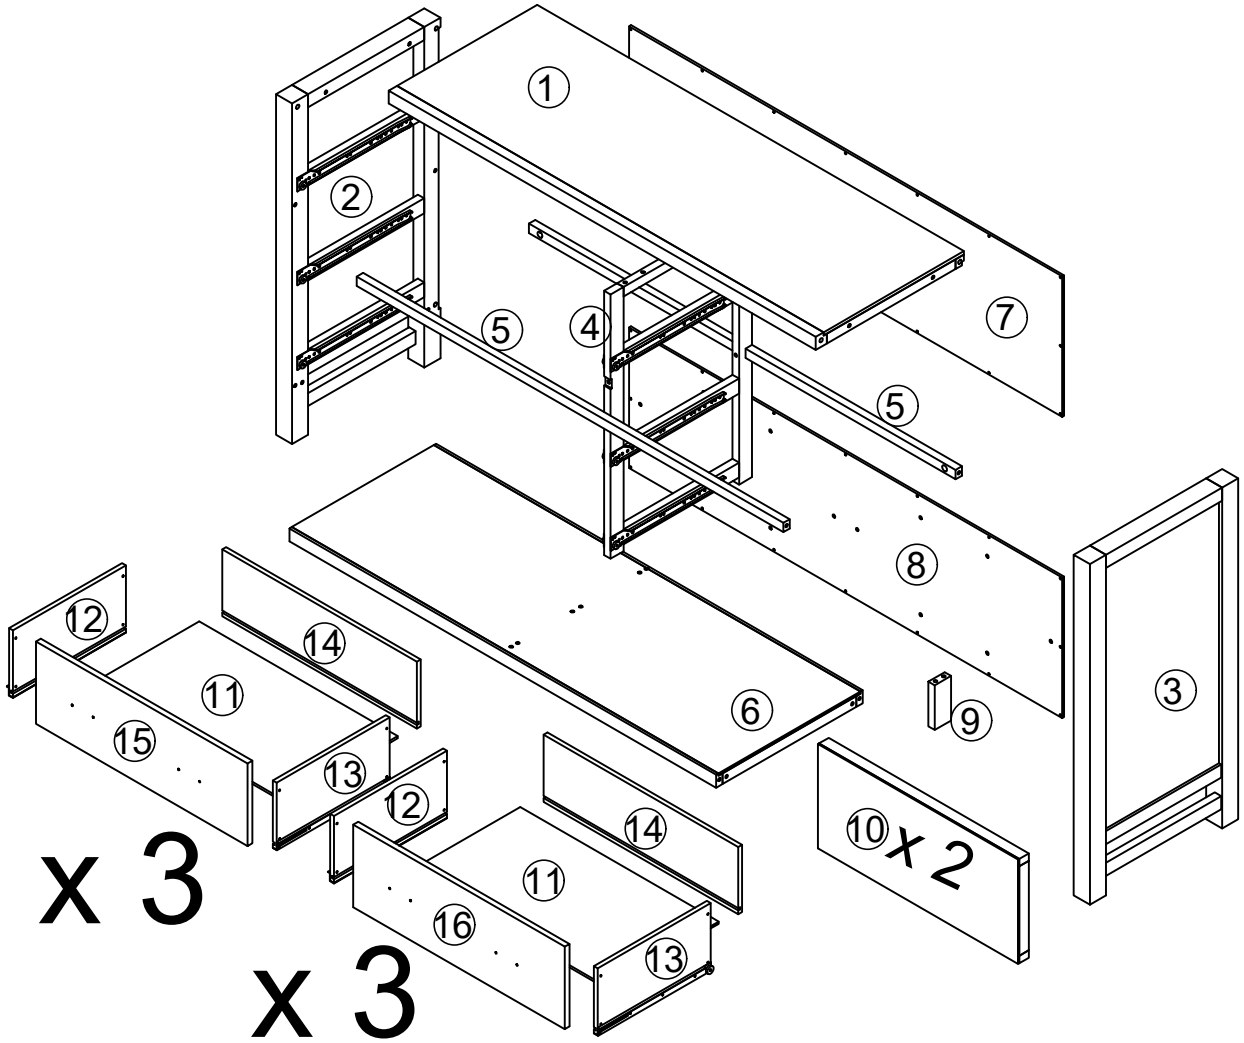


Identifying the hardware-Identify the hardware using the illustrations below

A Ø10x35 **10**	**B** **M6x35mm Bolt** **11**	**C** **ϕ4 x 25mm Screw** **48**
D **ϕ4 x 13mm Screw** **24**	**E** **12**	**F** **ϕ3 x 15mm Screw** **32**
G **01**	**H** **04**	**I** **04**
J **ANTI-TIP** **02**	**K** Ø8x30 **02**	**L** **M6x50mm Bolt** **05**
M **01**		**N** **M6x25mm Bolt** **12**

www.boltonfurniture.com

Step 01


H 04

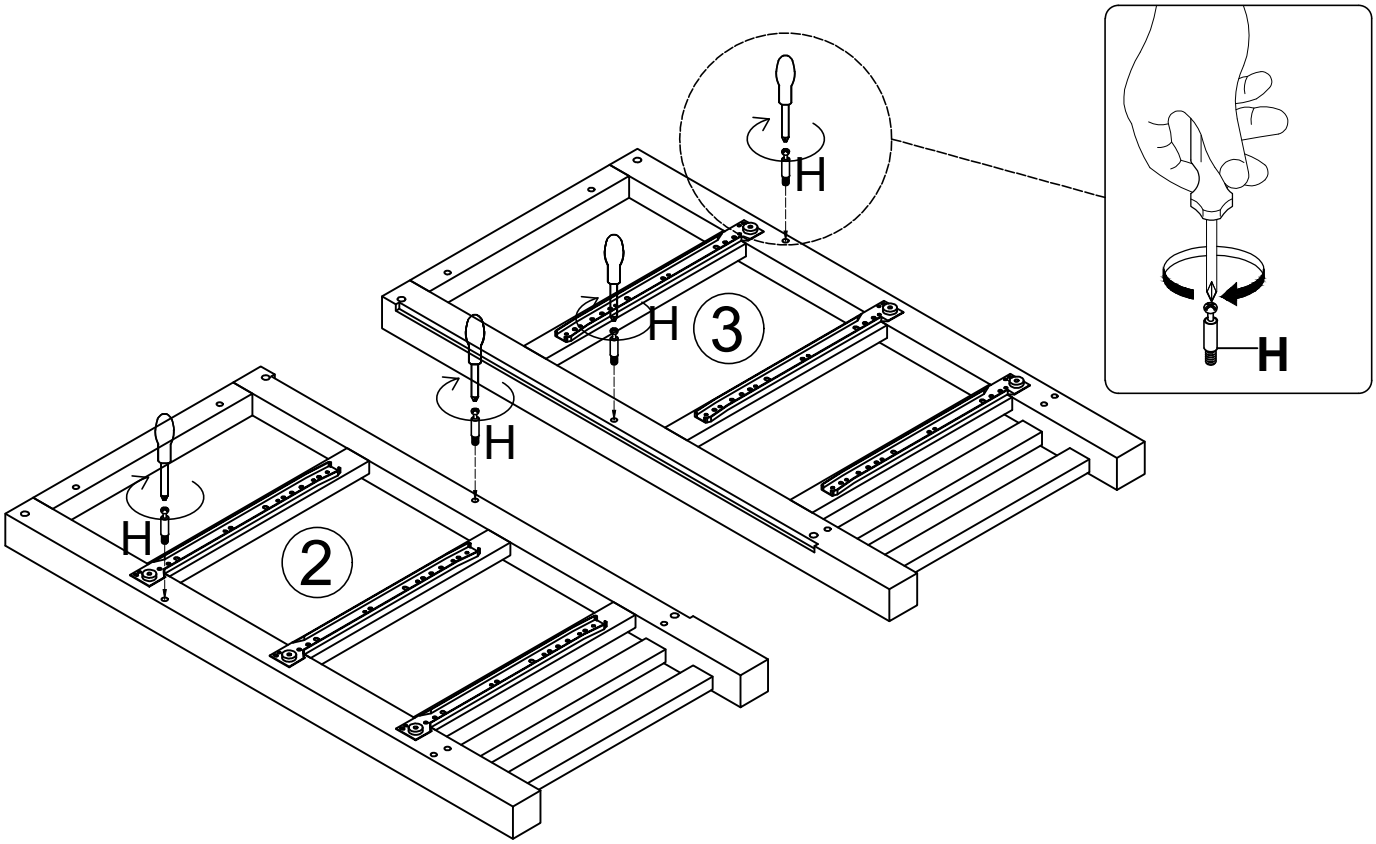

Step 02

A 10 Ø10x35


K 02 Ø8x30

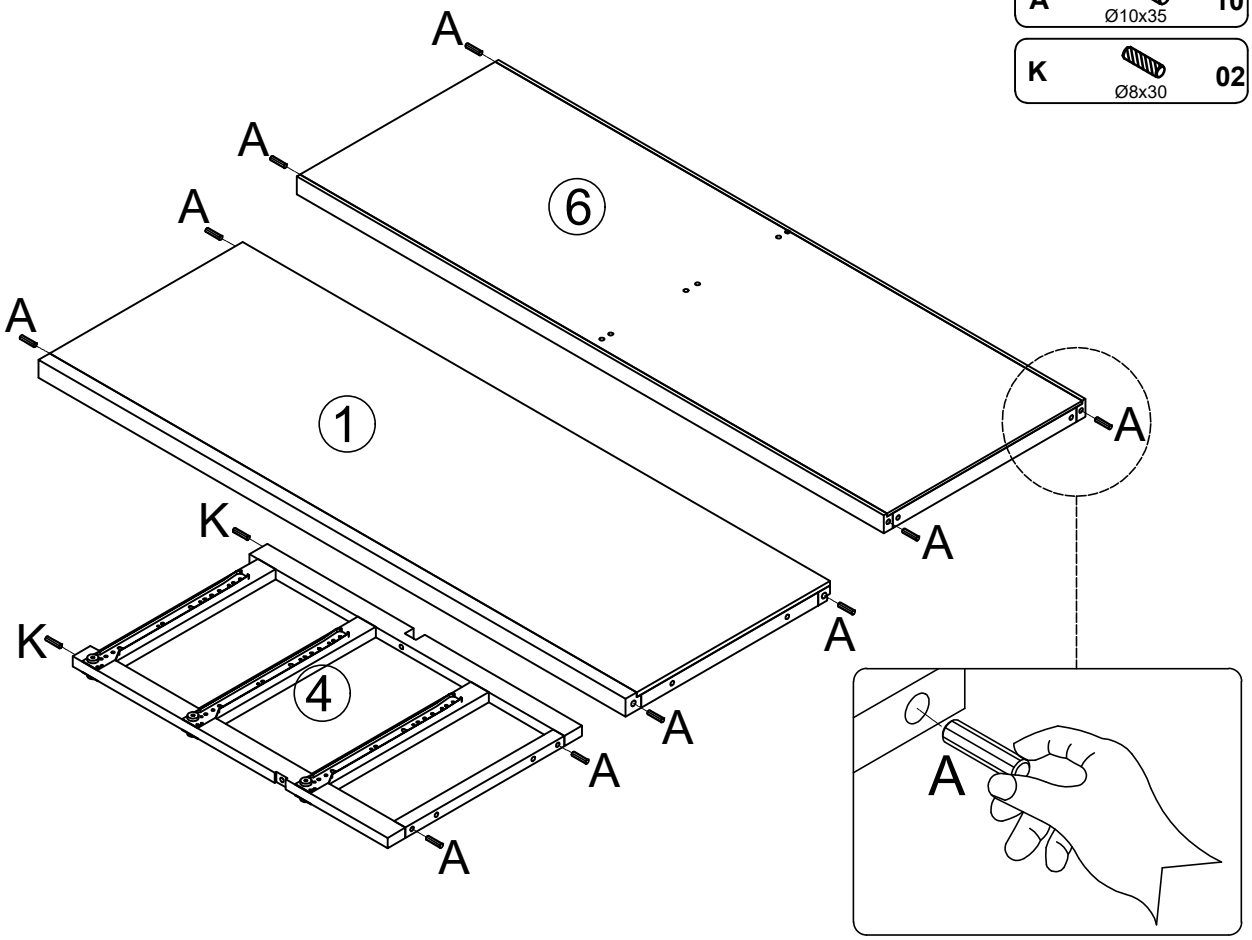

Step 03

B M6x35mm Bolt 02

G 01

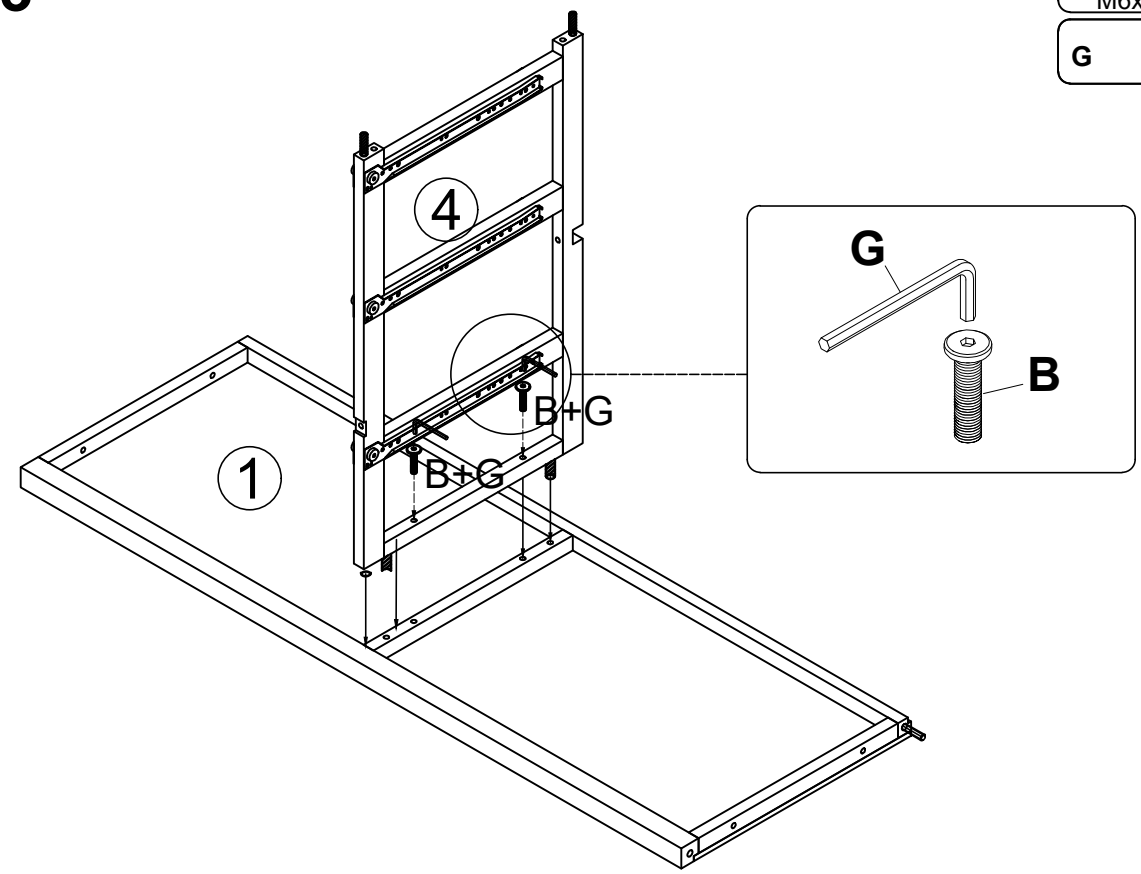


Step 04


B M6 x 35mm Bolt 01


L M6 x 50mm Bolt 01


G 01

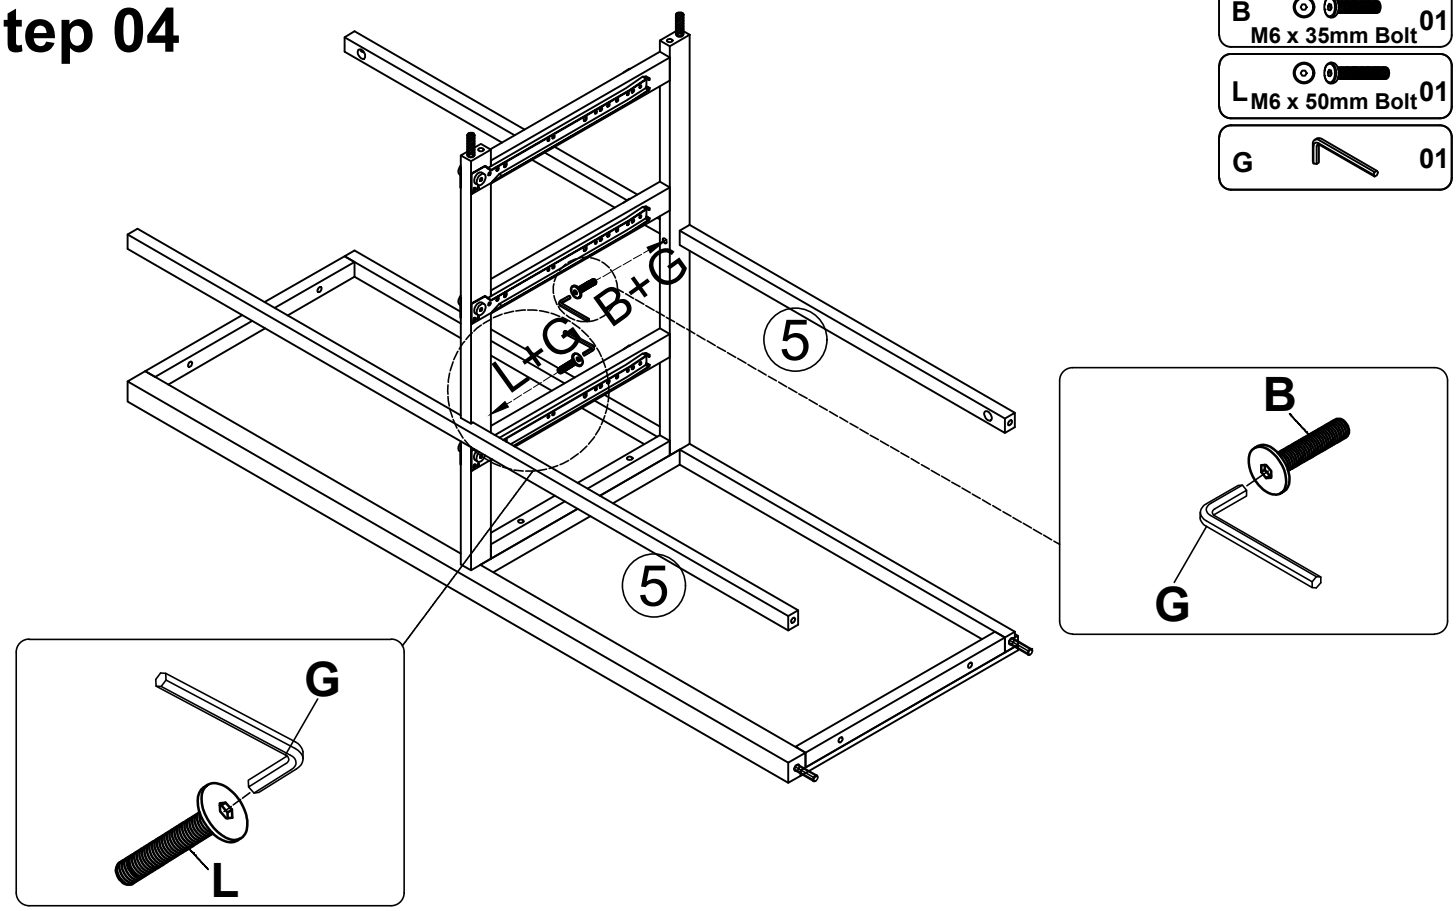


Step 05

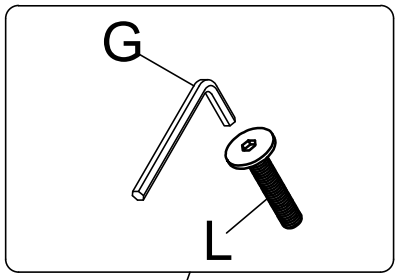


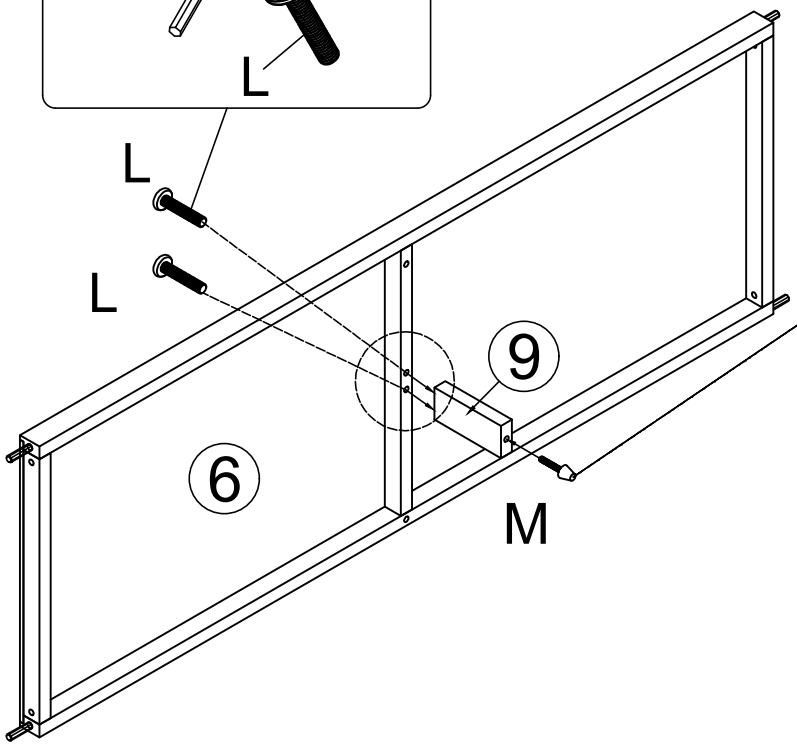


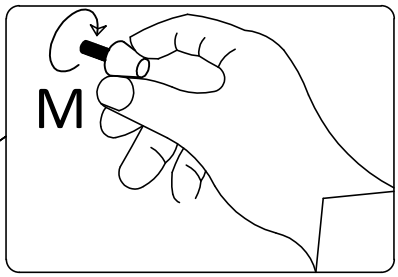


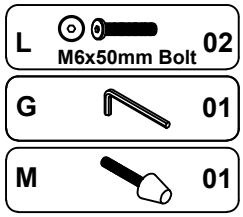


Step 06

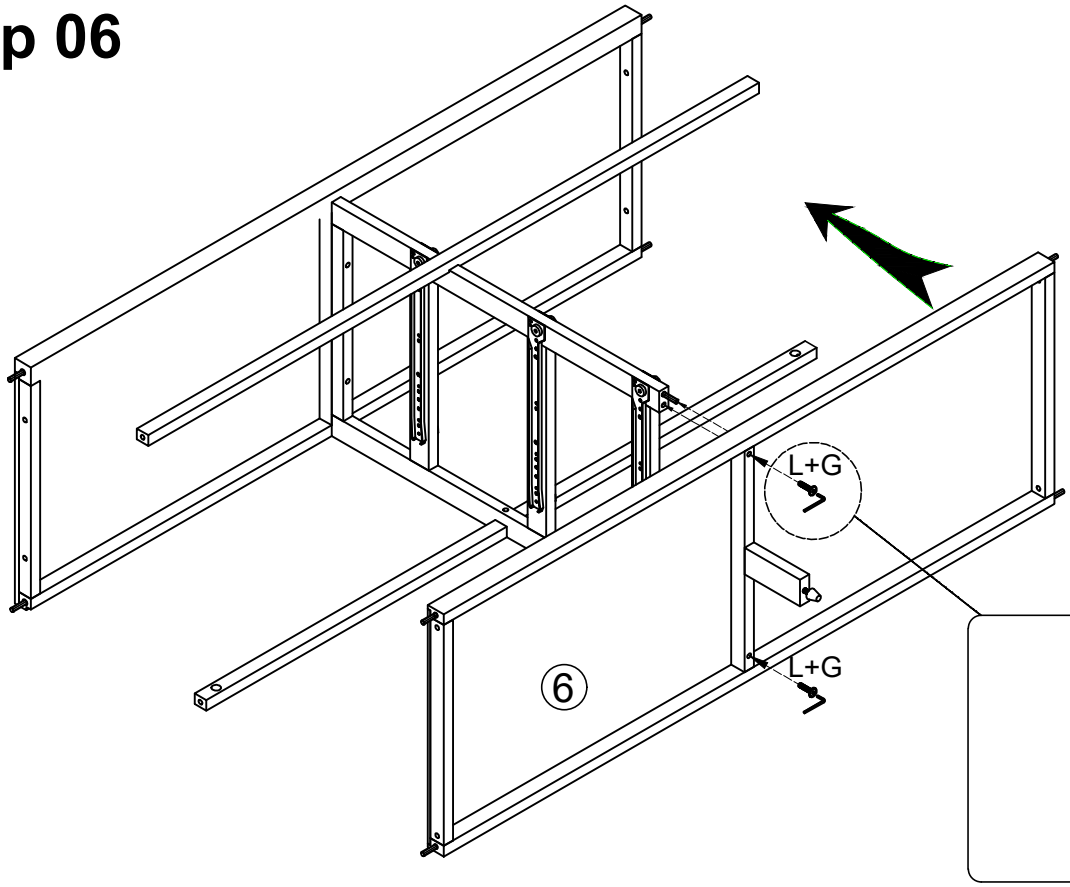

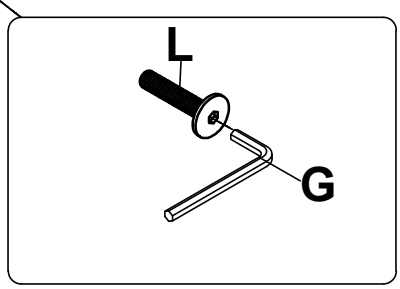


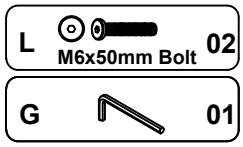

Step 07

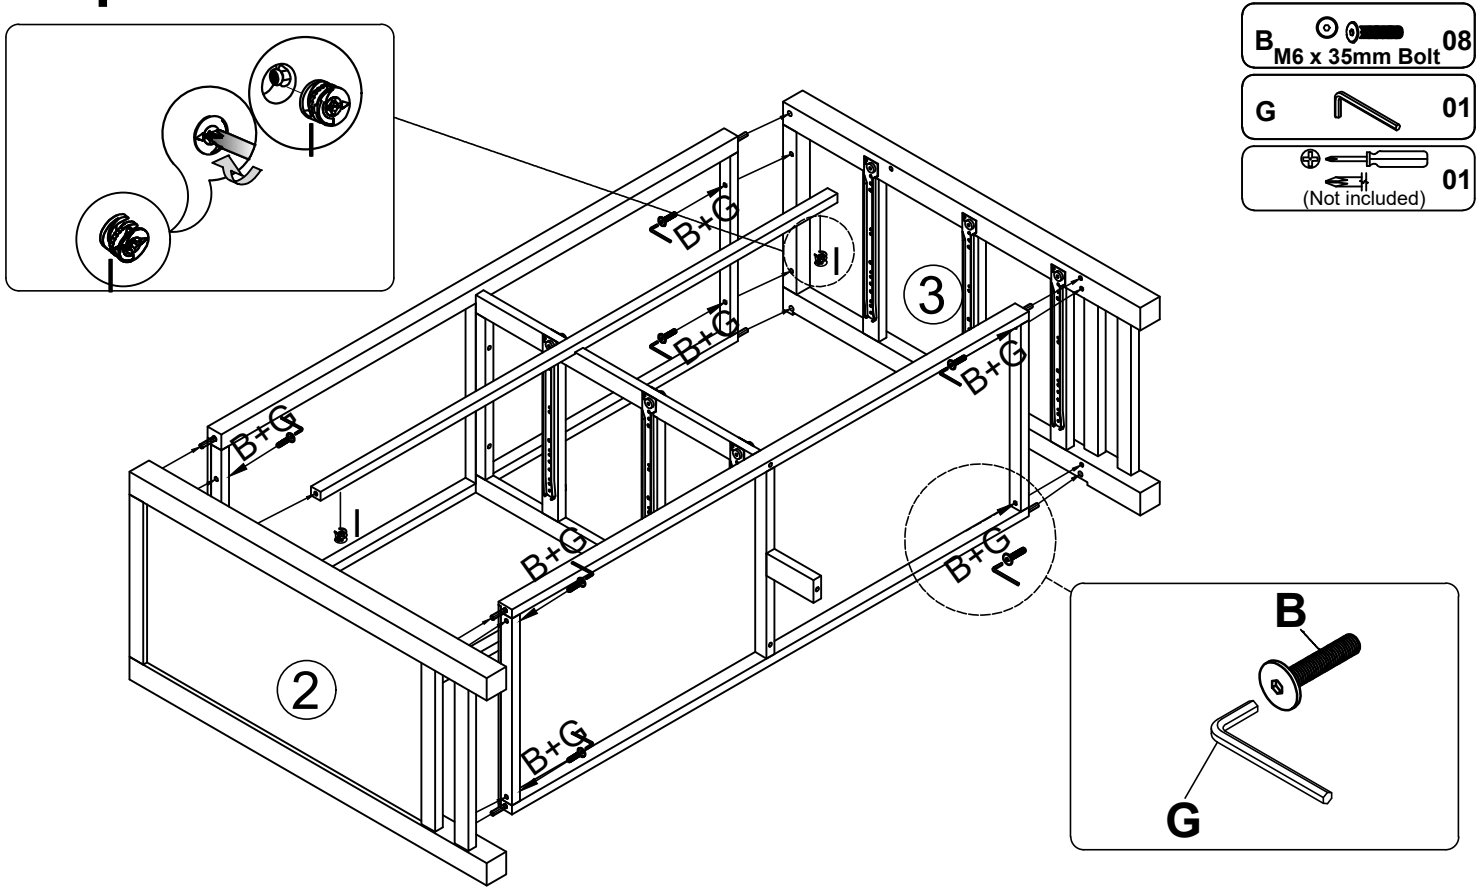


Step 08

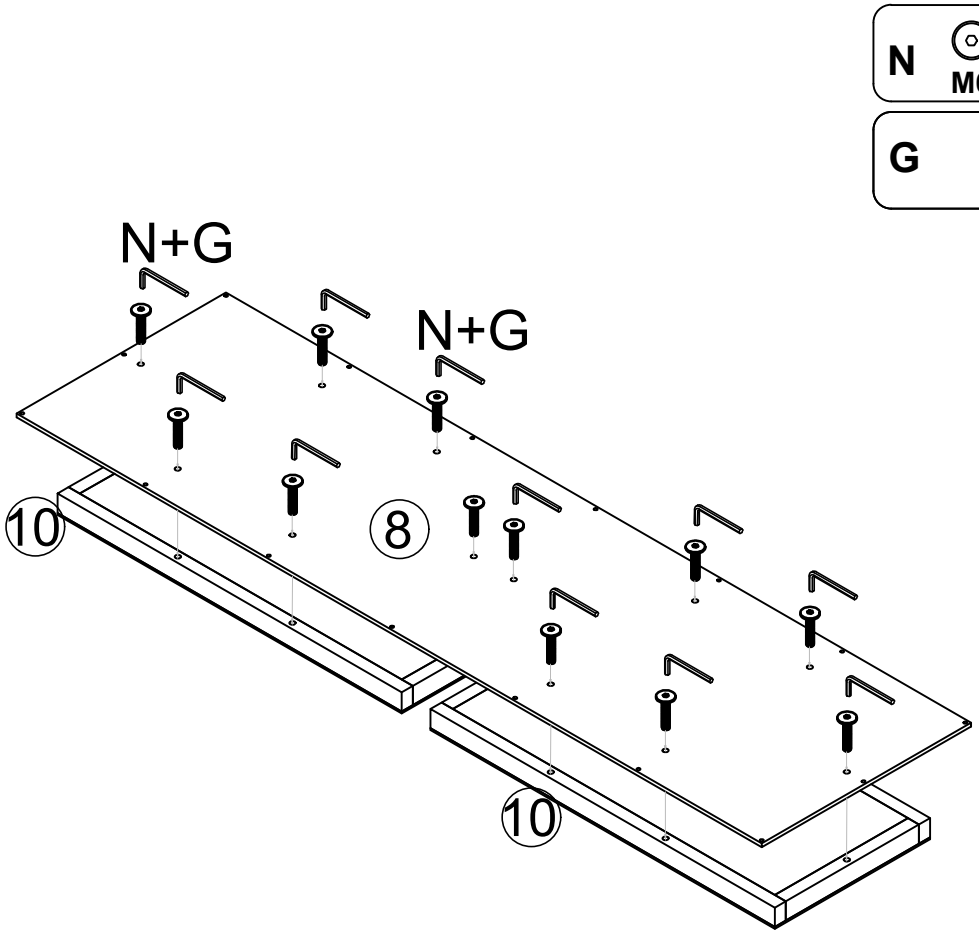

Step 09

F M3x15mm Screw 32

01 (Not included)

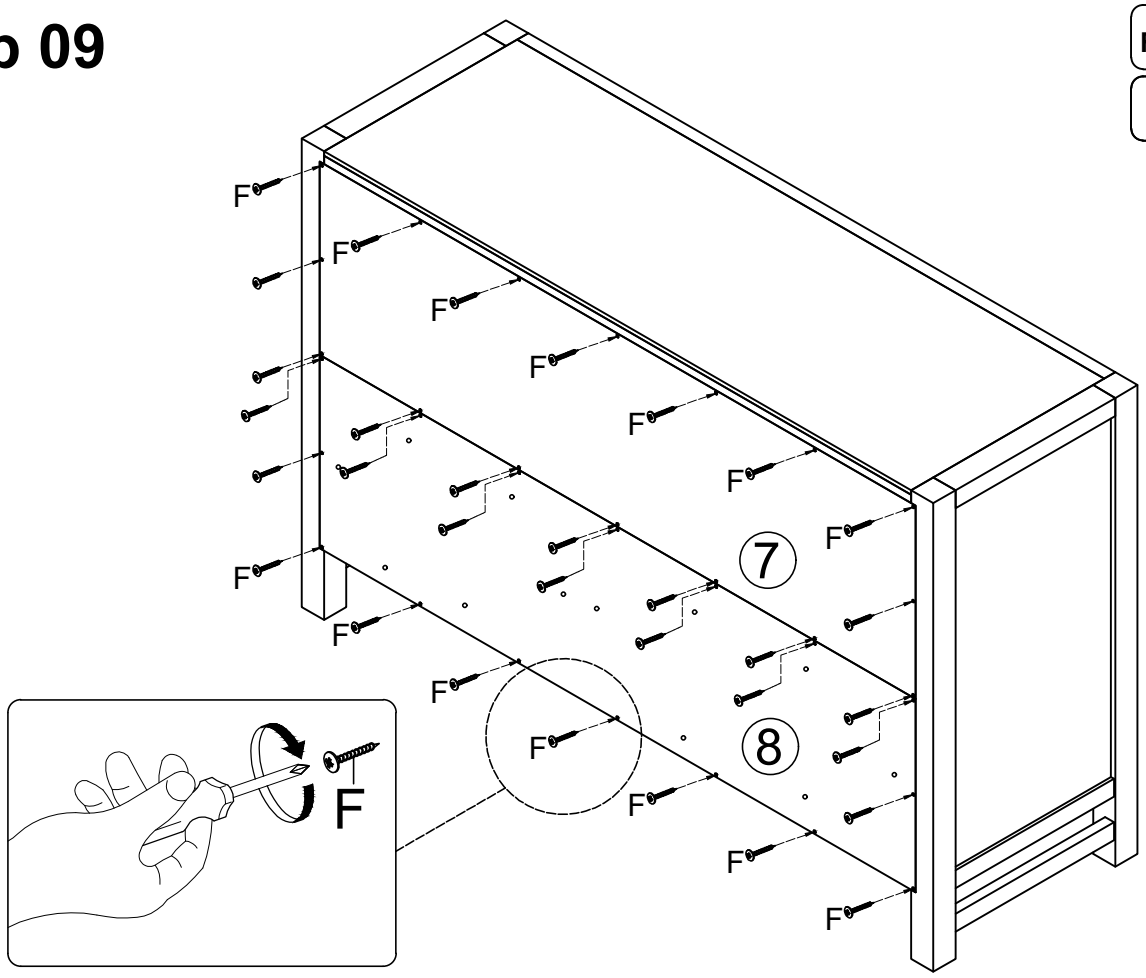


Step 10

C ϕ4 x 25mm Screw 24


D ϕ4 x 13mm Screw 12

E 06

01 (Not included)

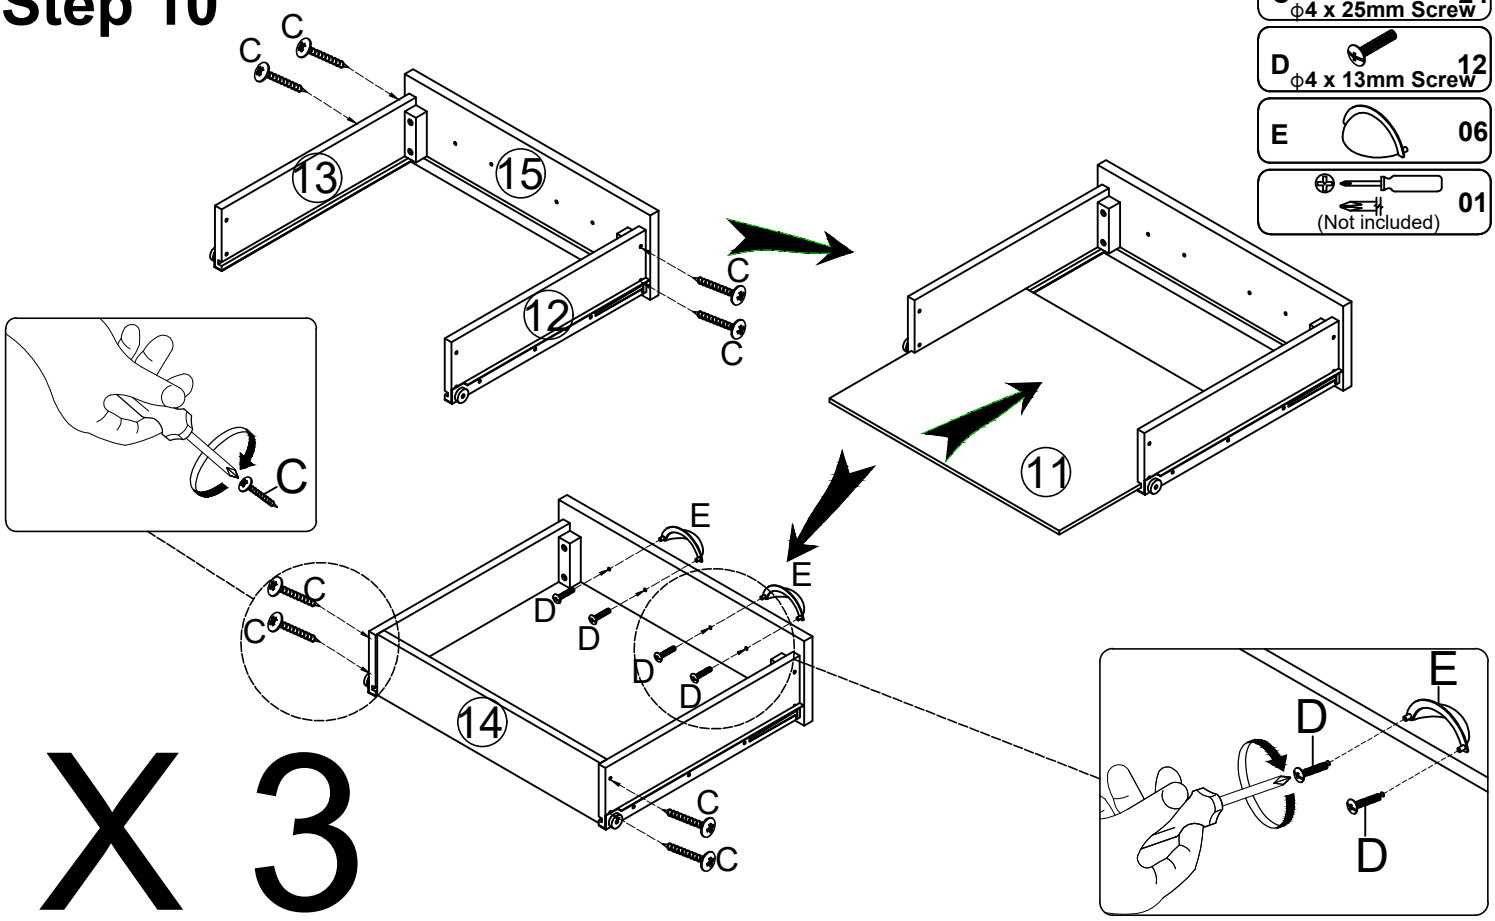

Step 11

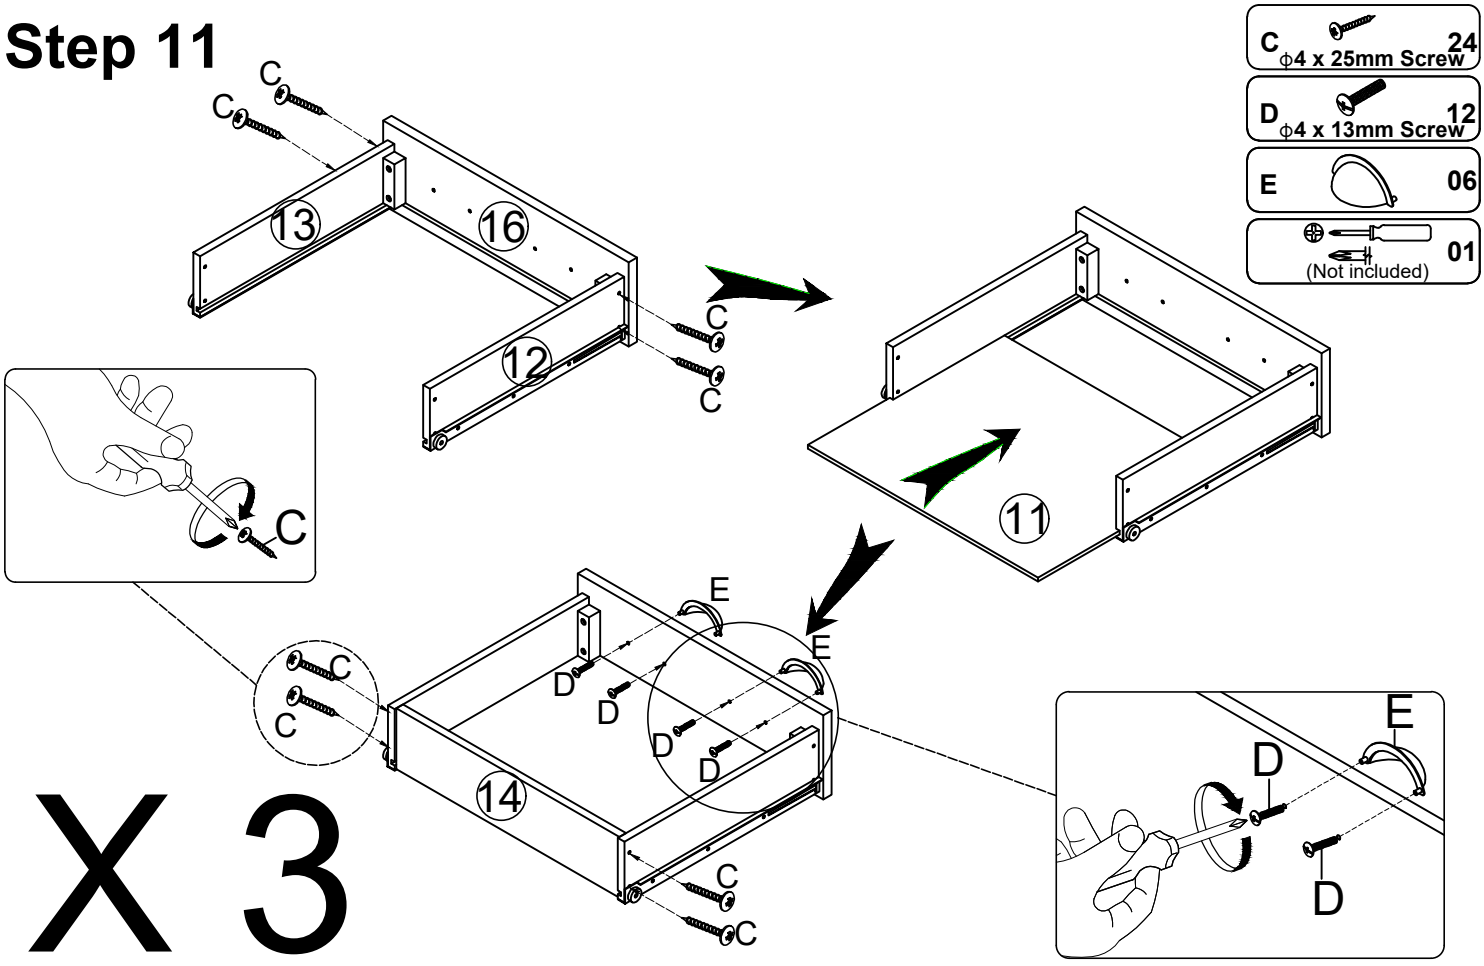

C ϕ4 x 25mm Screw 24

D ϕ4 x 13mm Screw 12

E 06

01 (Not included)

Step 12

⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

.ALWAYS install Anti-tip device provided.

.NEVER put a TV on this product.


.NEVER allow children to stand, climb or hang on drawers, doors, or shelves.

.NEVER open more than one drawer at a time.





.Place heaviest items in the lowest drawers.

This is a permanent label. Do not remove!


PLACE DRAWER WITH WARNING LABEL AT TOP

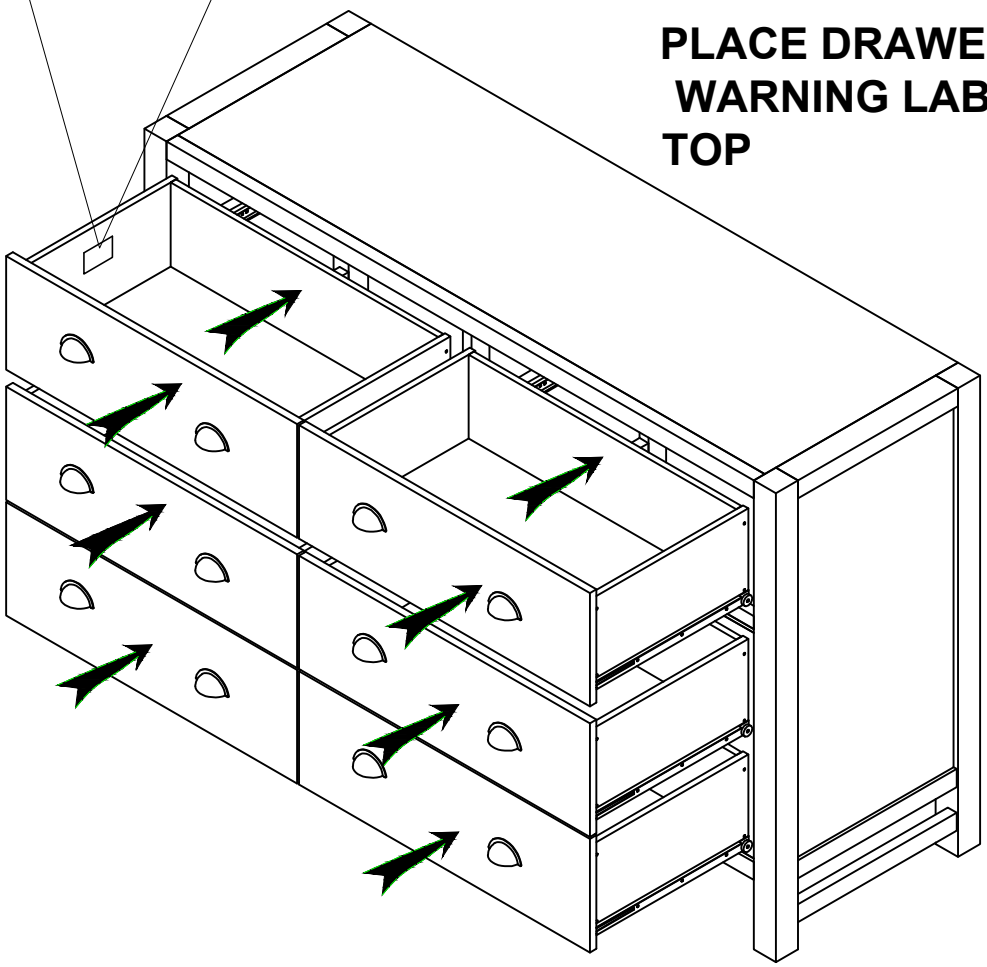



"J" Anti-Tip


A	 4x14 Screw	04	C	 Plastic wall bracket	04
B	 4x35 Screw	04	D	 Nylon strap 140mm	02


Secure to Stud behind Wallboard

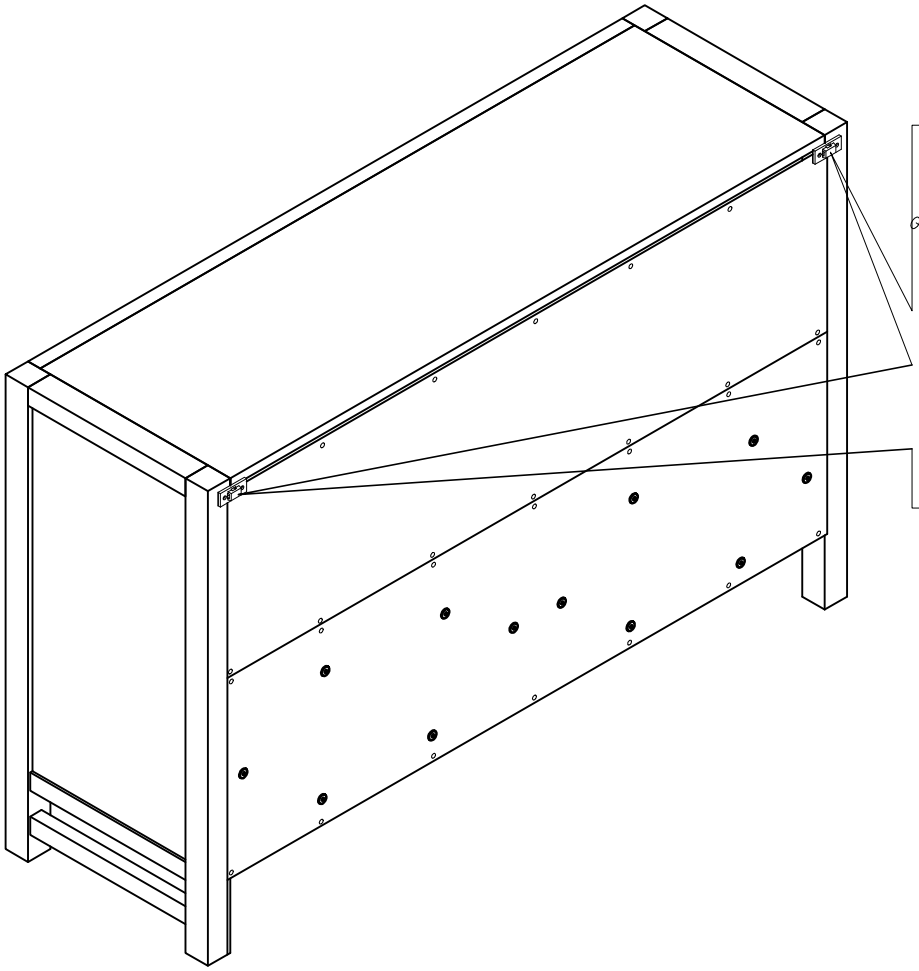

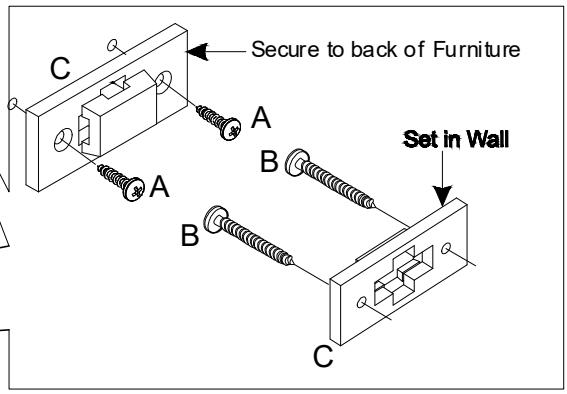

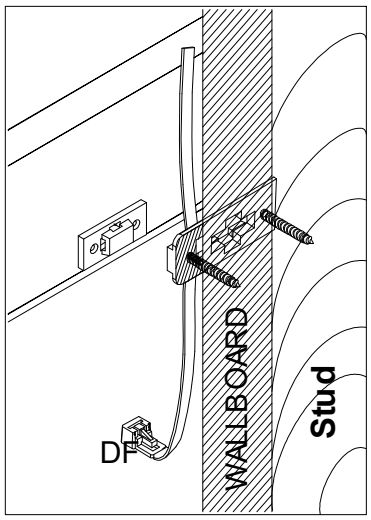

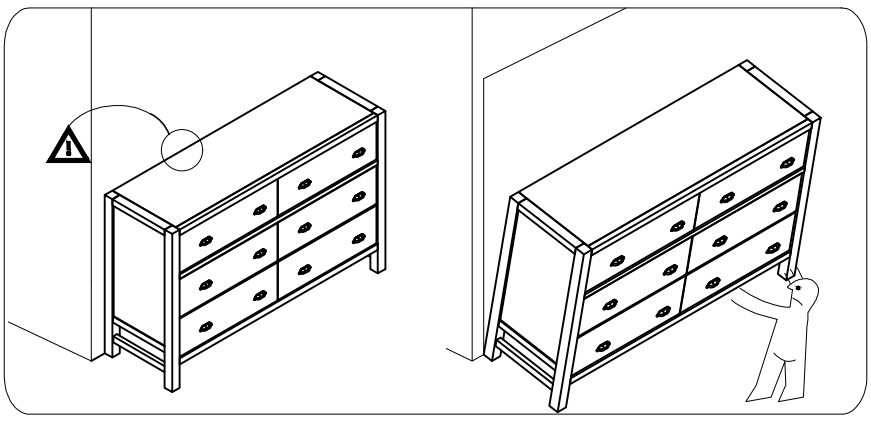

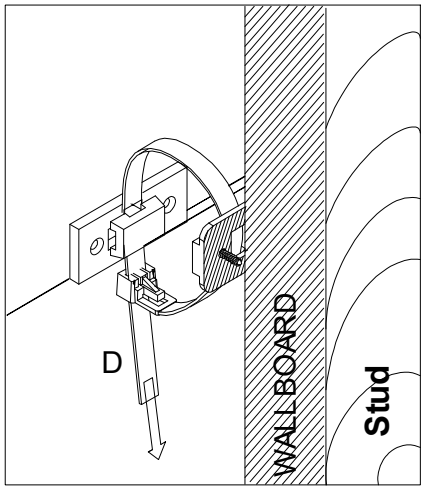

Secure to Stud behind Wallboard!