


Your new Design House furniture will give you years of trouble-free performance. Thank you for choosing our product for your home. Please read carefully and save these instructions, as you may need them at a later date.

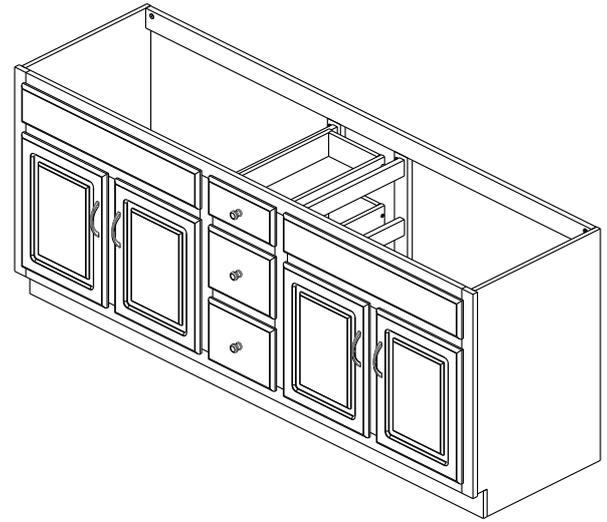


- | | | | |
|--|-------------------------------------|--|--------------------------------------|
| | A Left Side x1 | | M Front Drawer Fixated x2 |
| | B Right Side x1 | | N Left Door x2 |
| | C Crossbar Back Upper x | | O Right Door x2 |
| | D Crossbar Back Bottom x1 | | P Front Drawer Strait x1 |
| | E Crossbar Back Vertical x2 | | Q Left Side Drawer Strait x1 |
| | F Bottom Panel x1 | | R Right Side Drawer Strait x1 |
| | G Front Frame x1 | | S Back Drawer Strait x1 |
| | H Skirting Board x1 | | T Bottom Drawer x3 |
| | I Crossbar Support Runner x6 | | U Front Drawer x2 |
| | J Side Support hinges x2 | | V Left Side Drawer x2 |
| | K Division Support hinges x2 | | X Right Side Drawer x2 |
| | L Central Feet x1 | | Y Back Drawer x2 |
| | | | Z Cleat for Shoe x4 |

- | | |
|--|--|
| | A1 Wooden Dowels x52
Ø5/16" x 1 1/8" |
| | B1 Bolt x01
1/4" x 2 5/16" |
| | C1 Screw x08
1.8" x 1 15/16" |
| | D1 Screw x50
1.8" x 1 1/8" |
| | E1 Screw x11
M1.8" x 15/16" |
| | F1 Screw x32
1.8" x 7/16" |
| | G1 Screw x36
1.8" x 7/16" |
| | H1 Minifix x41 |
| | I1 Minifix Drum x41 |
| | J1 Drawer Pulls x03 |
| | K1 Drawer Pulls x04 |
| | L1 Metal Glides 15 11/16" x06 |
| | M1 Hinge x08 |
| | N1 Allen Wrench x01 |
| | O1 Adjustable Damper x04 |


Continued on next page

Figure 1

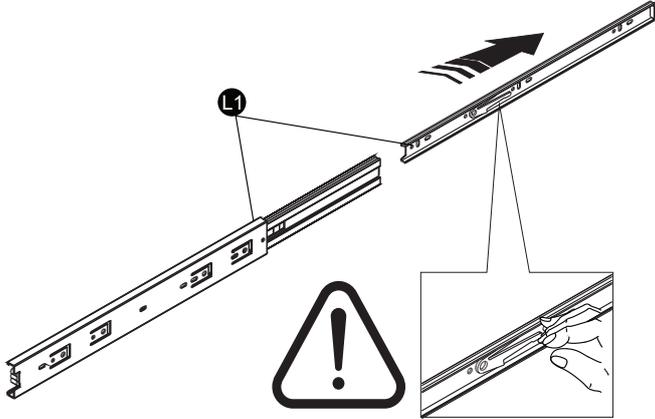


1. Open the **slides** according to the drawing and tilt them slightly the key (as detailed) to remove the internal part which will be fixed to the drawer. (see figure 1).

Figure 2

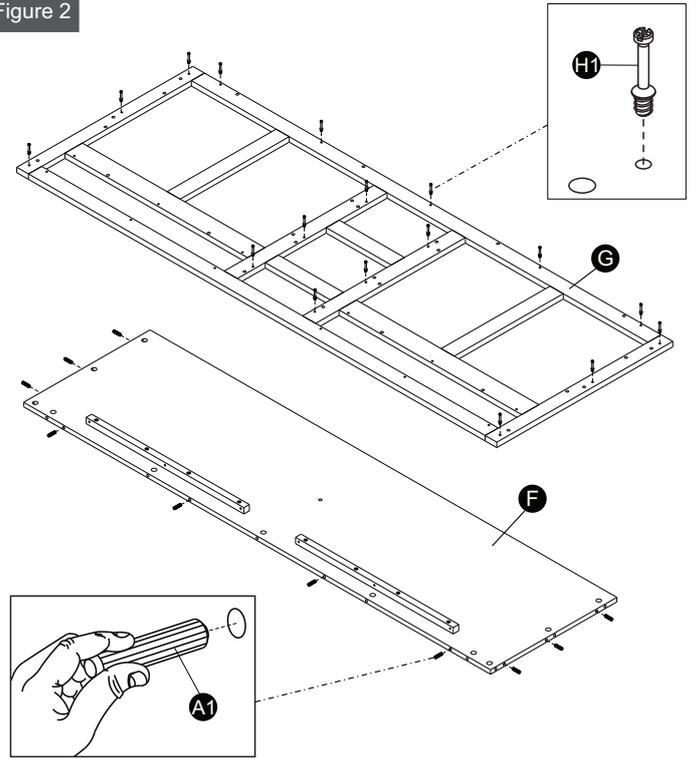


2. Attach **wooden dowels (A1)** into the **bottom panel (F)** .
3. Fix the **minifix rods (H1)** in the **front frame (G)** (see figure 2).

Figure 3

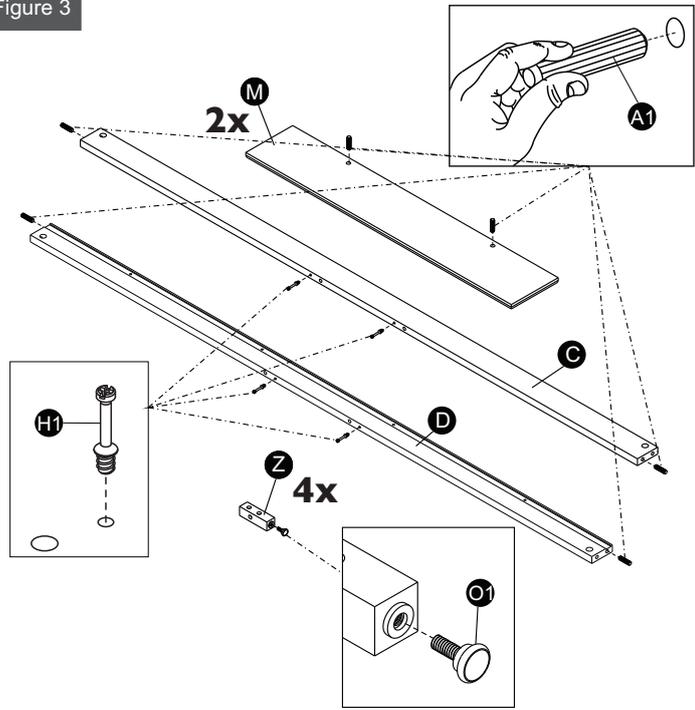

4. Attach **wooden dowels (A1)** in the parts **(C, D and M)** .
5. Fix the **minifix rods (H1)** in the parts **(C and D)** .
6. Fix the **adjustable Damper (O1)** in the **cleat for shoe (Z)** (see figure 3)..

Figure 4

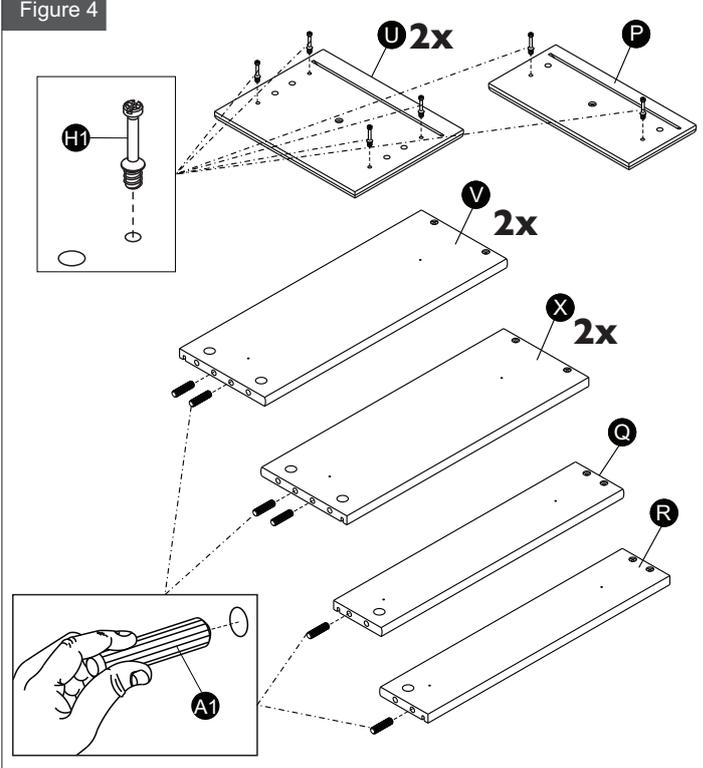


7. Attach **wooden dowels (A1)** into the parts **(Q, R, V and X)** .
8. Fix the **minifix rods (H1)** in the **front drawers (P and U)** (see figure 4).

Follow Us on Social

Rev - 07/2024


Design House Inc. reserves the right to make changes in materials, specifications, & models at any time. Design House Inc. also reserves the right to discontinue product without notice or obligation.

Figure 5

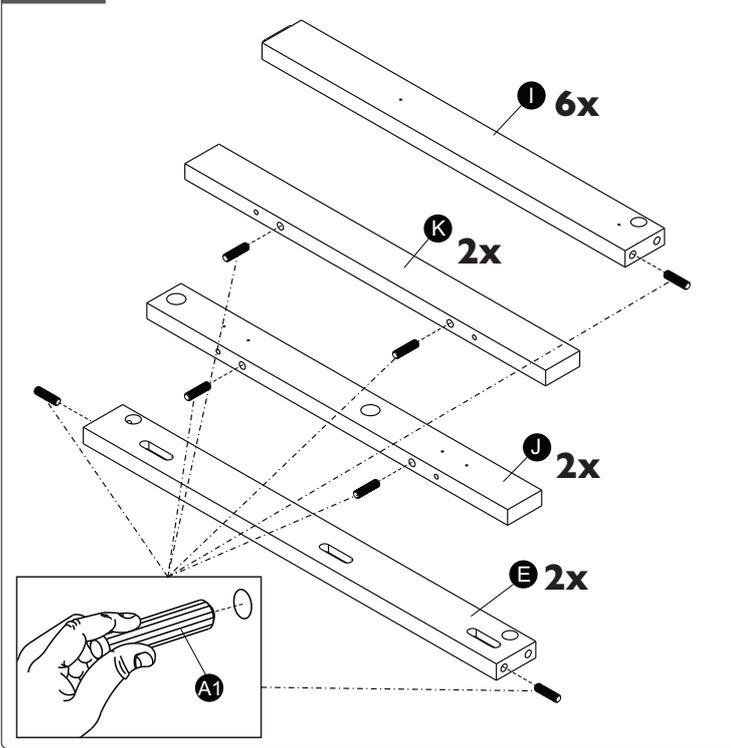


9. Attach **wooden dowels (A1)** in the parts **(E, I, J and K)** (see figure 5).

Figure 6

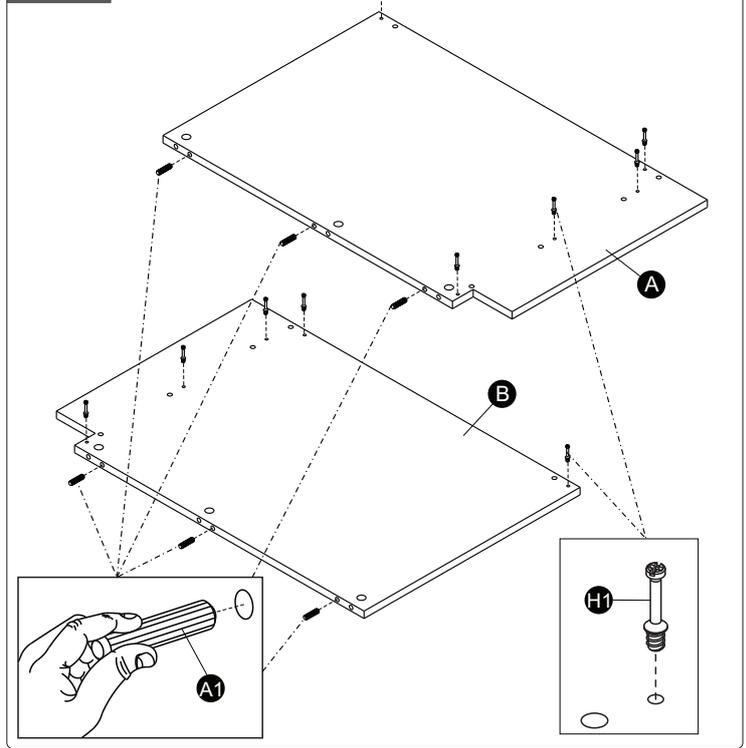


10. Attach **wooden dowels (A1)** into the **sides (A and B)**.
11. Fix the **minifix rods (H1)** in the **sides (A and B)** (see figure 6).

Figure 7

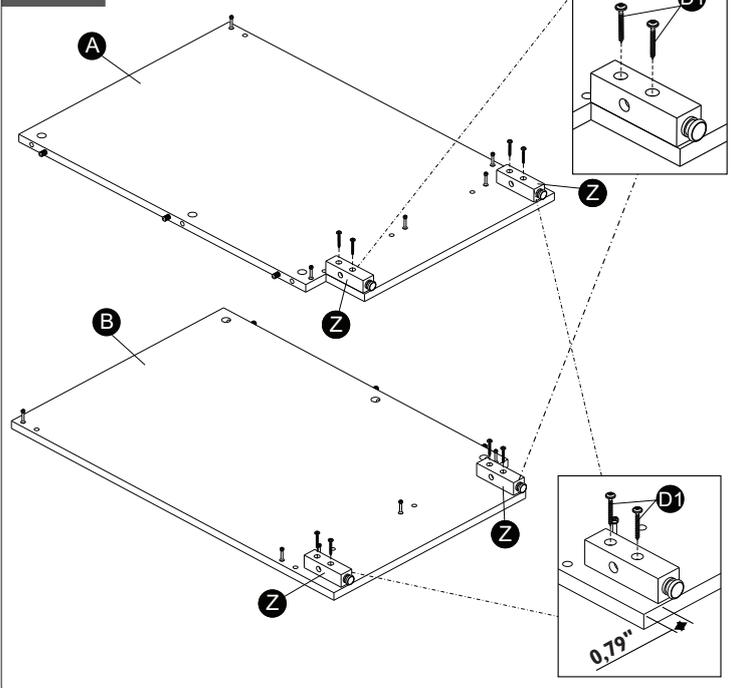

12. Attach the **cleat for shoe (Z)** in the **sides (A and B)** with the **screws (D1)** (see figure 7).

Figure 8

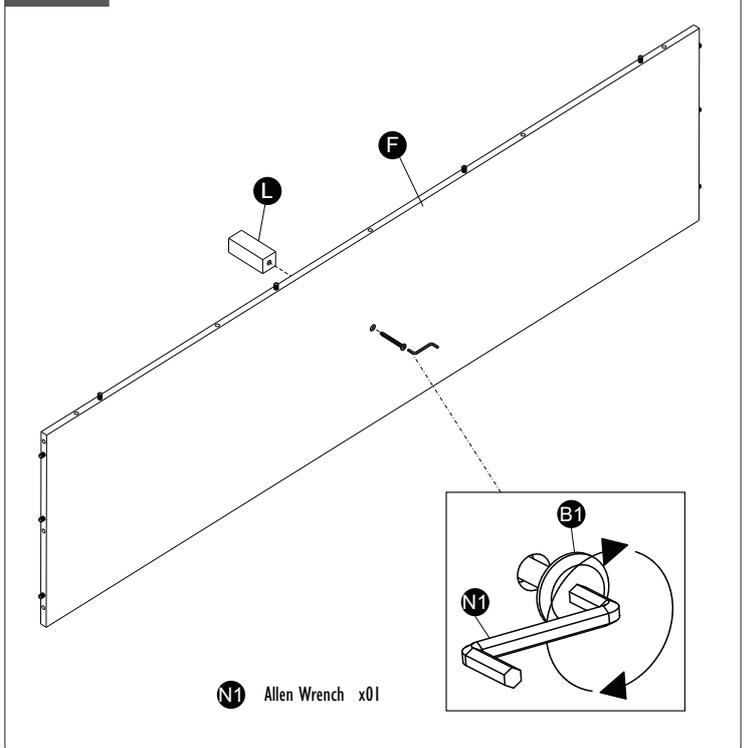

13. Attach the **central feet (L)** in the **bottom panel (F)** with the **screw (B1)** using **allen wrench (N1)** (see figure 8).


Rev - 07/2024

Follow Us on Social

Design House Inc. reserves the right to make changes in materials, specifications, & models at any time. Design House Inc. also reserves the right to discontinue product without notice or obligation.


Figure 9

Top Assembly

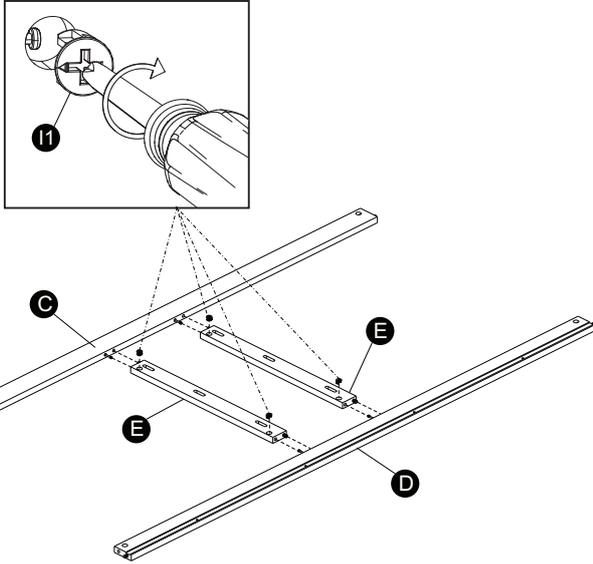


14. Attach the **crossbar (C, D and E)** with the **minifix drum (II)** (see figure 9).

Figure 10

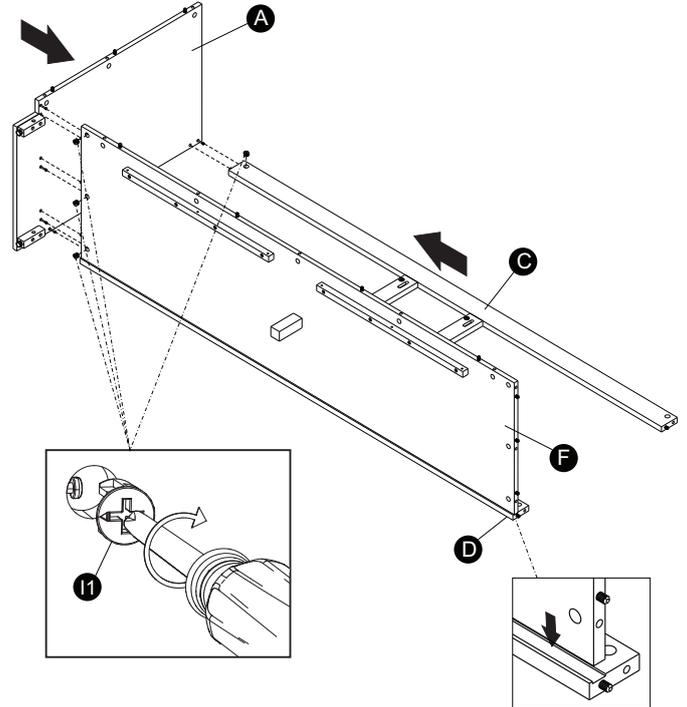


15. Attach the **side left (A)** to **bottom panel (F)**, **crossbar back upper (C)** and **crossbar back bottom (D)** with **minifix drum (II)** (see figure 10).

Figure 11

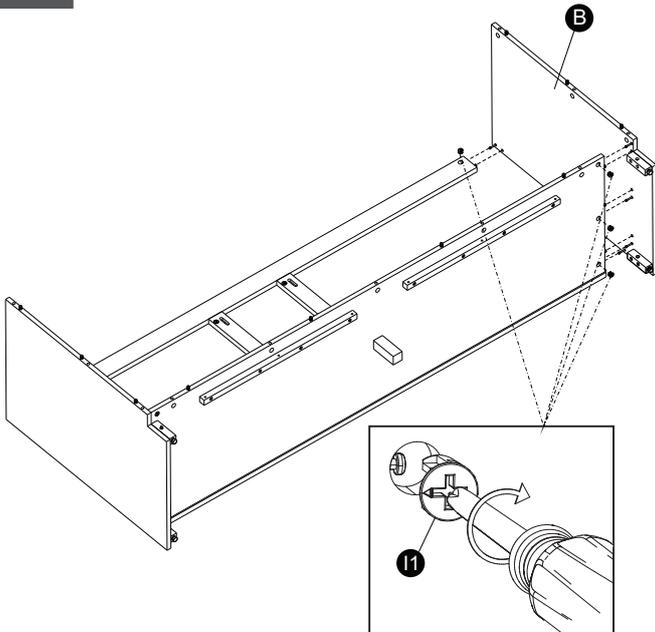

16. Attach the **side right (B)** to **bottom panel (F)**, **crossbar back upper (C)** and **crossbar back bottom (D)** with **minifix drum (II)** (see figure 11).

Figure 12

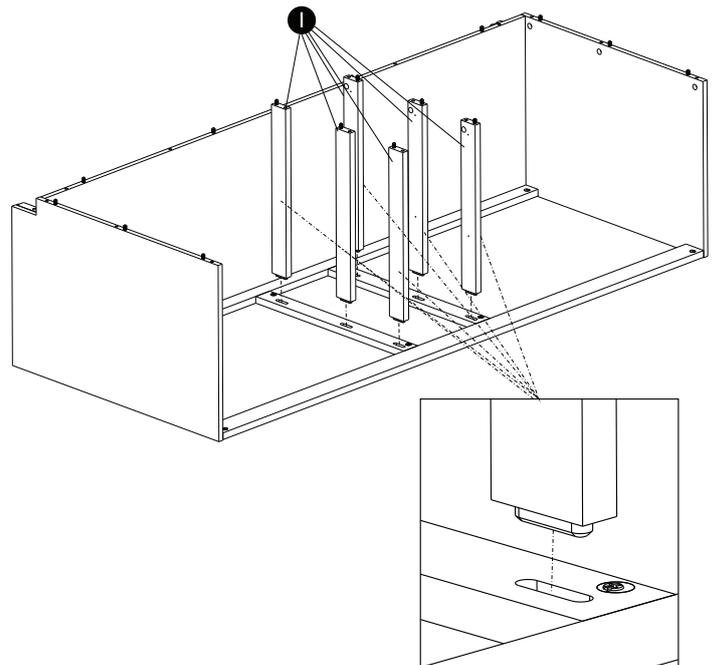


17. Insert the **crossbar support runner (I)** fitting into the **crossbar back vertical (E)** (see figure 12).

Follow Us on Social     

Rev - 07/2024


Design House Inc. reserves the right to make changes in materials, specifications, & models at any time. Design House Inc. also reserves the right to discontinue product without notice or obligation.

Figure 13

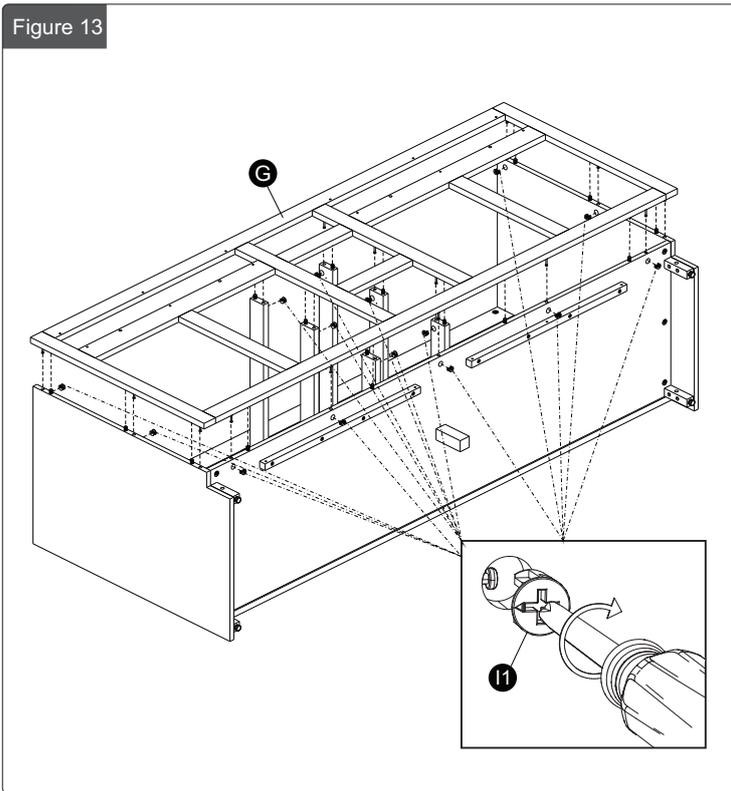


18. Attach the **front frame (G)** with the **minifix drum (II)** (see figure 13).

Figure 14

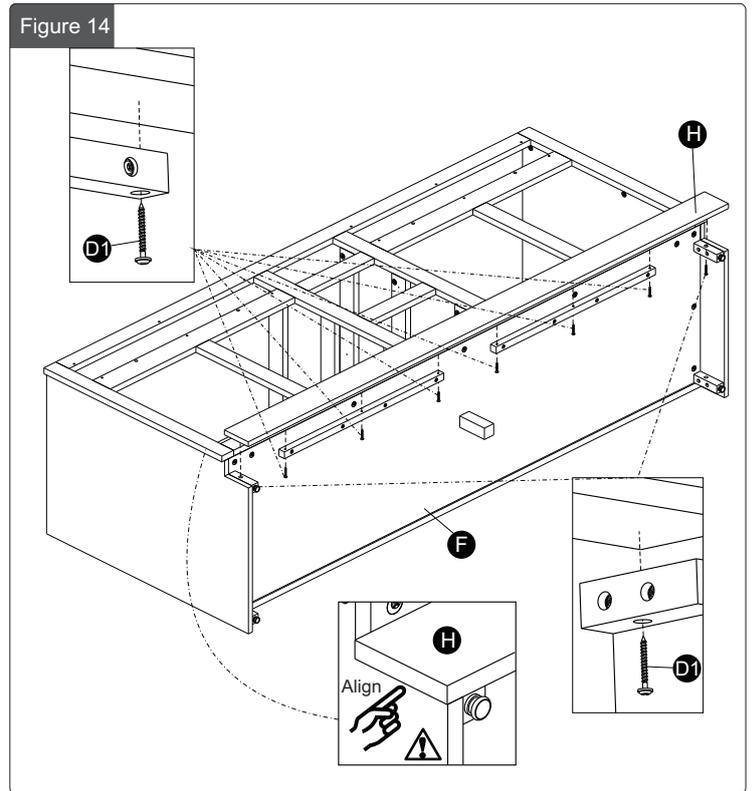


19. Before fixing the **skirting board (H)**, align the tops with the sides and attach with the **screws (DI)** (see figure 14).

Figure 15

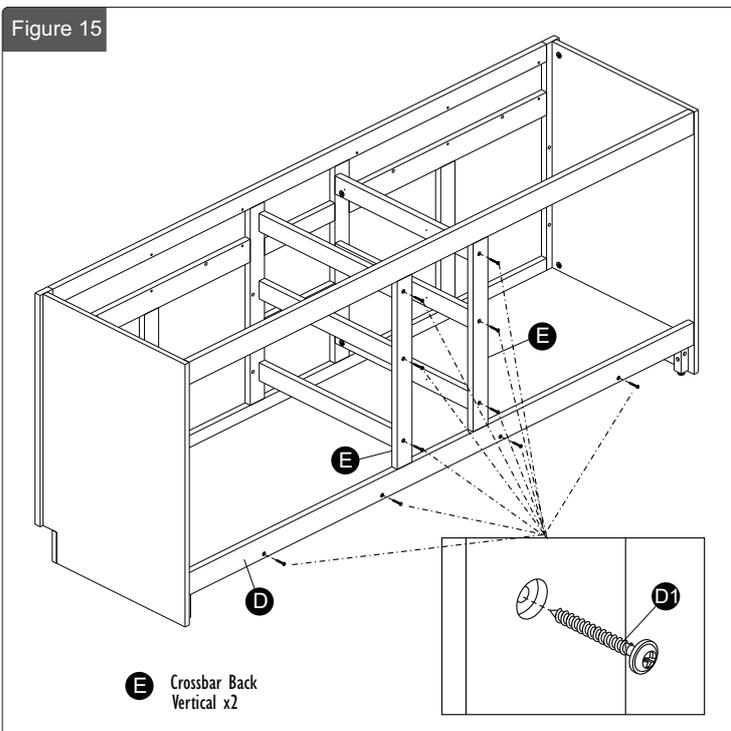


20. Finish fixing the **crossbar back vertical (E)** and **crossbar back bottom (D)** with the **screws (DI)** (see figure 15).

Figure 16

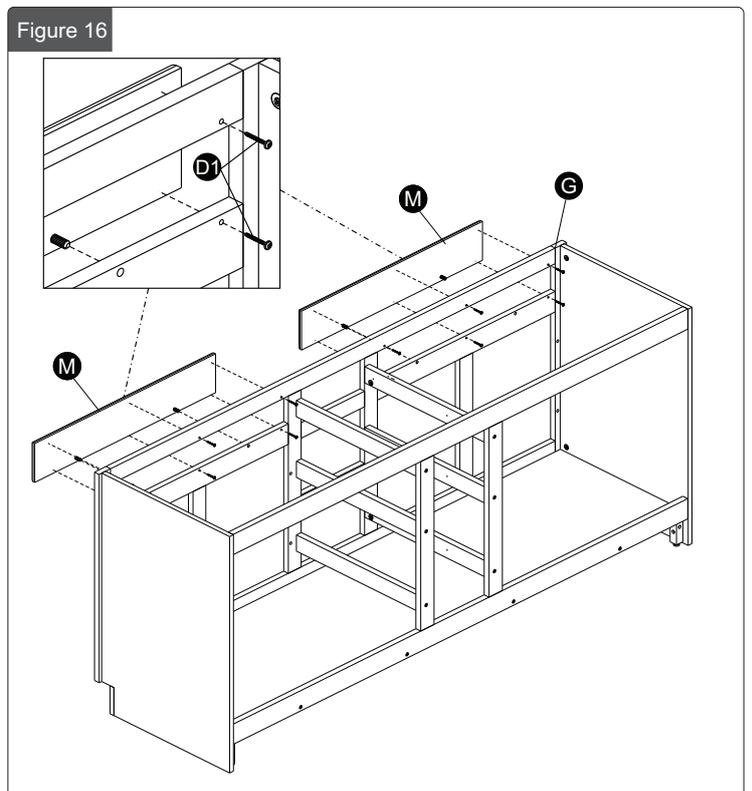


21. Attach the **front drawer fixated (M)** in the the **front frame (G)** with the **screws (DI)** (see figure 16).

Figure 17

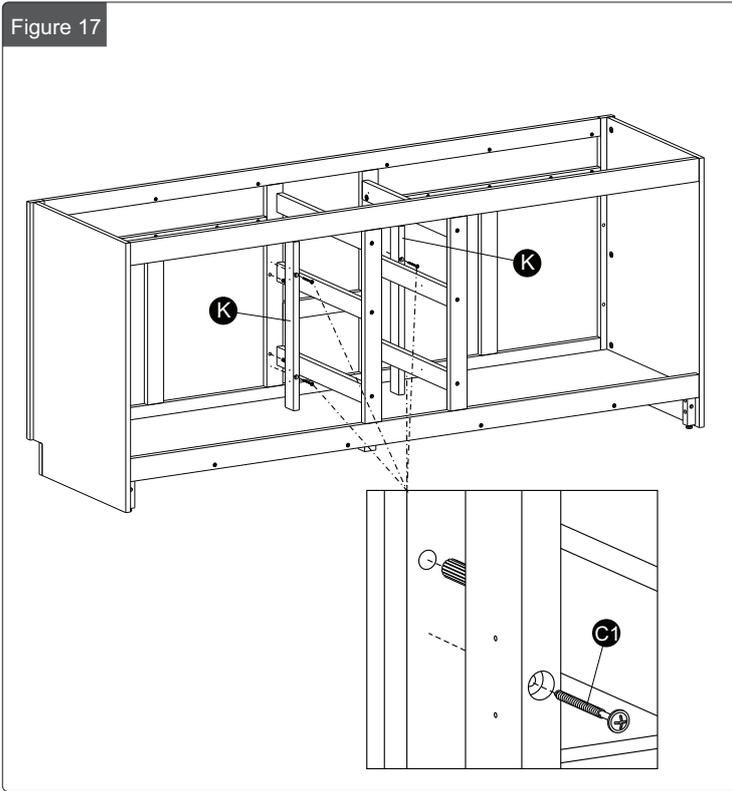


22. Attach the **division support hinges (K)** in the **front frame (G)** with the **screws (C1)** (see figure 17).

Figure 18

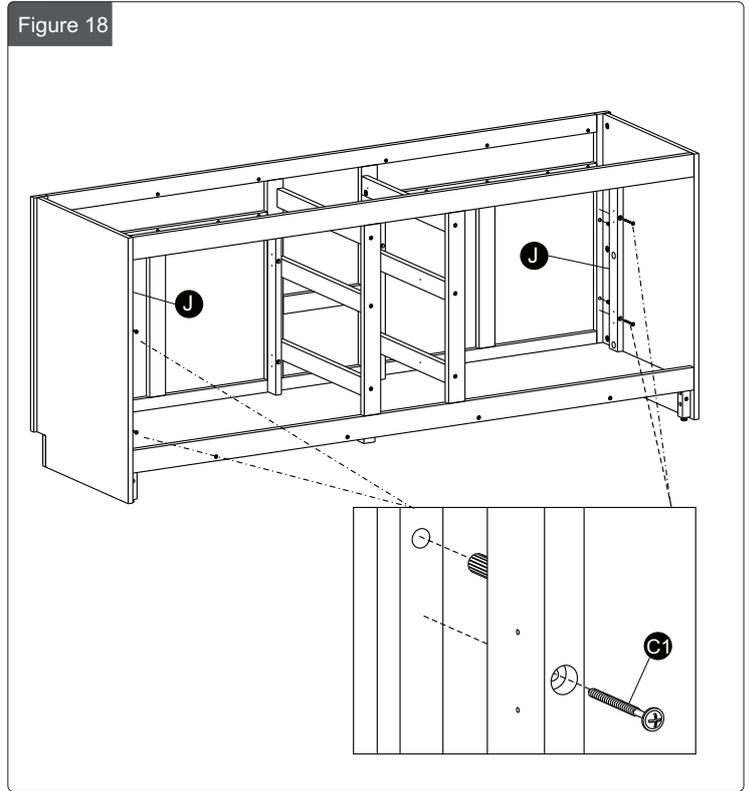


23. Attach the **side support hinges (J)** in the **front frame (G)** with the **screws (C1)** (see figure 18).

Figure 19

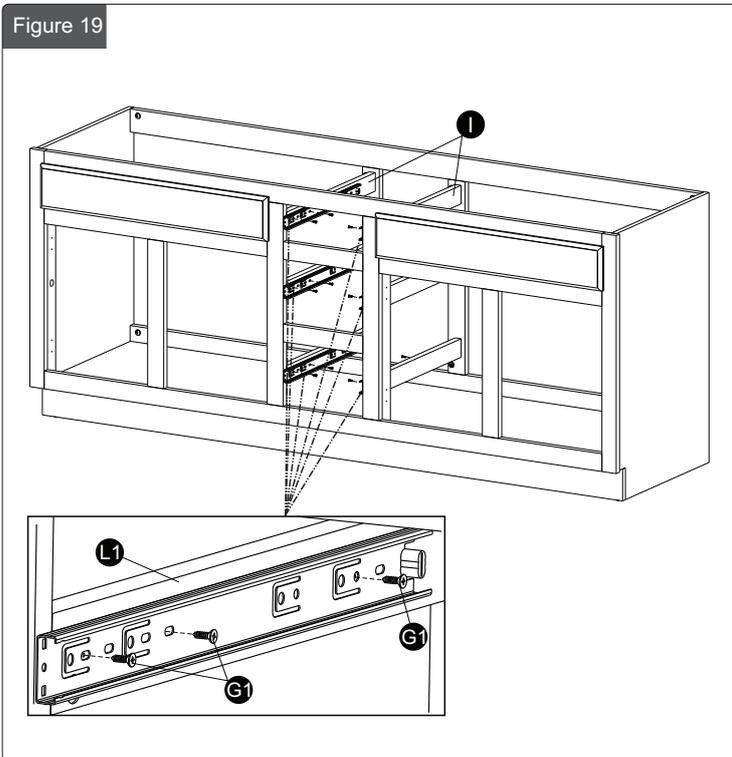

24. Attach the **metal glides (L1)** in the **division support hinges (K)** with the **screws (G1)** (see figure 19).

Figure 20

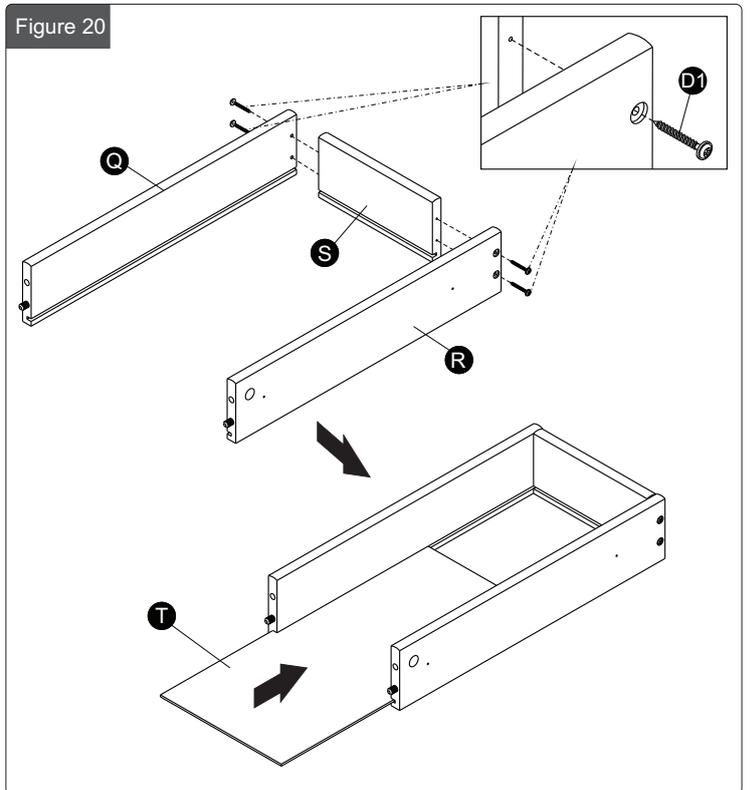

25. Attach the **back drawer strait (S)** in the **side drawers strait (Q and R)** with the **screws (D1)**.


26. Insert the **bottom drawer (T)**, (see figure 20).

Rev - 07/2024

Follow Us on Social     


Design House Inc. reserves the right to make changes in materials, specifications, & models at any time. Design House Inc. also reserves the right to discontinue product without notice or obligation.

Figure 21

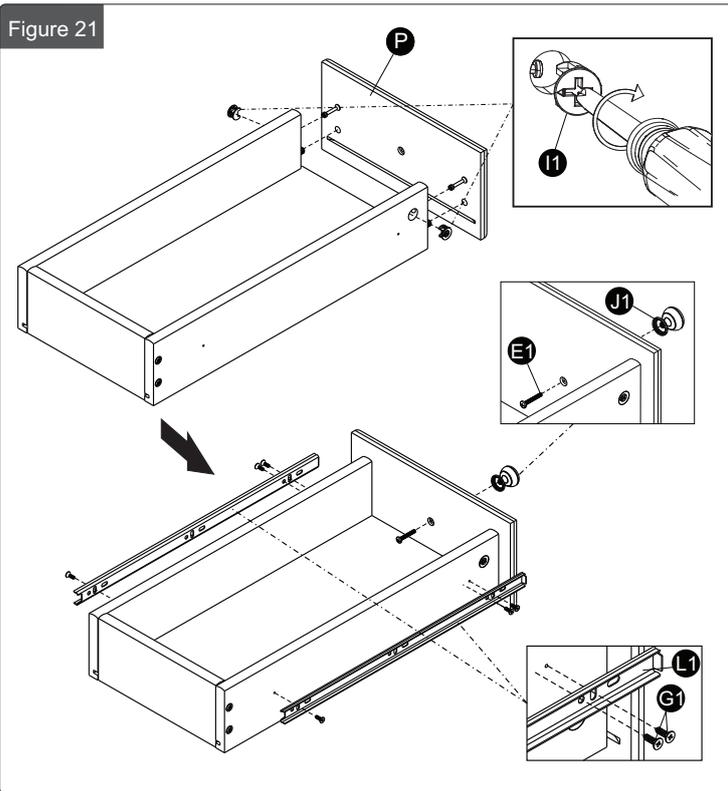


- 27. Attach the **front drawer strait (P)** in the sides drawers with the **minifix drum (I1)**.
- 28. Attach the **drawer pulls (J1)** in the **front drawer strait (P)** in the sides drawers with the **screw (E1)**.
- 29. Attach the **metal glides (L1)** in the sides drawers with the **screw (G1)** (see figure 21).

Figure 22

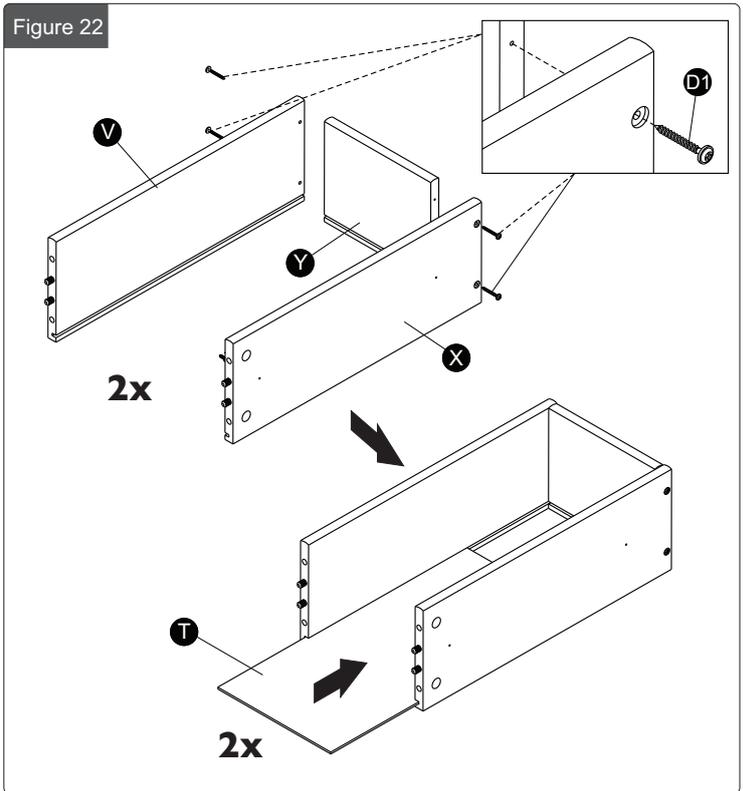


- 30. Attach the **back drawer (Y)** in the **side drawers (V and X)** with the **screws (D1)**.
- 31. Insert the **bottom drawer (T)**. (see figure 22).

Figure 23

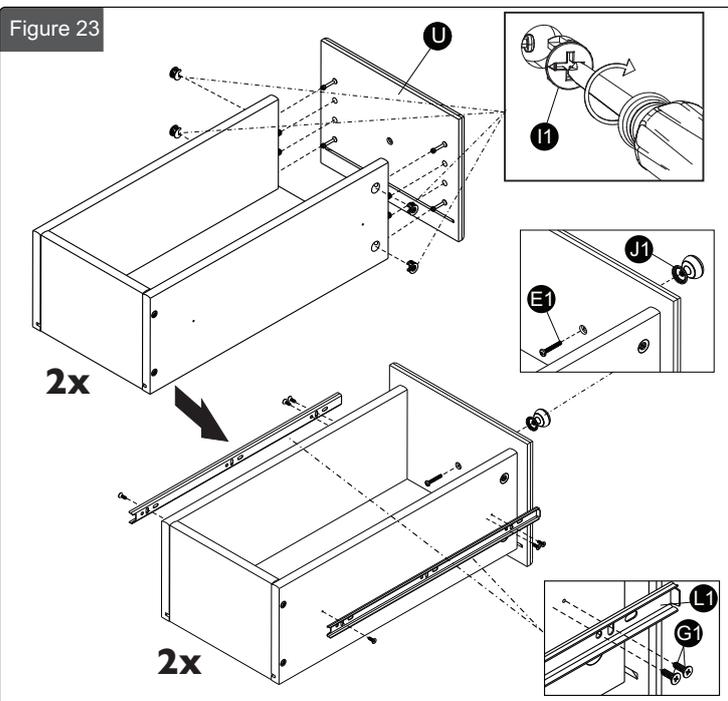


- 32. Attach the **front drawer (U)** in the sides drawers with the **minifix drum (I1)**.
- 33. Attach the **drawer pulls (J1)** in the **front drawer (U)** in the sides drawers with the **screw (E1)**.
- 34. Attach the **metal glides (L1)** in the sides drawers with the **screw (G1)** (see figure 23).

Figure 24

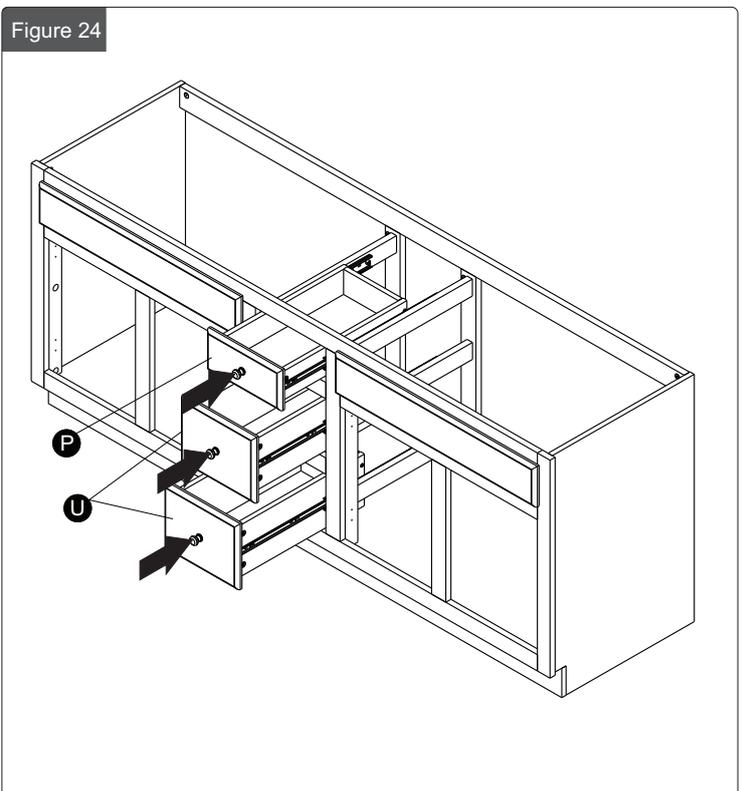


- 35. Insert the **drawers**, (see figure 24).

Figure 25

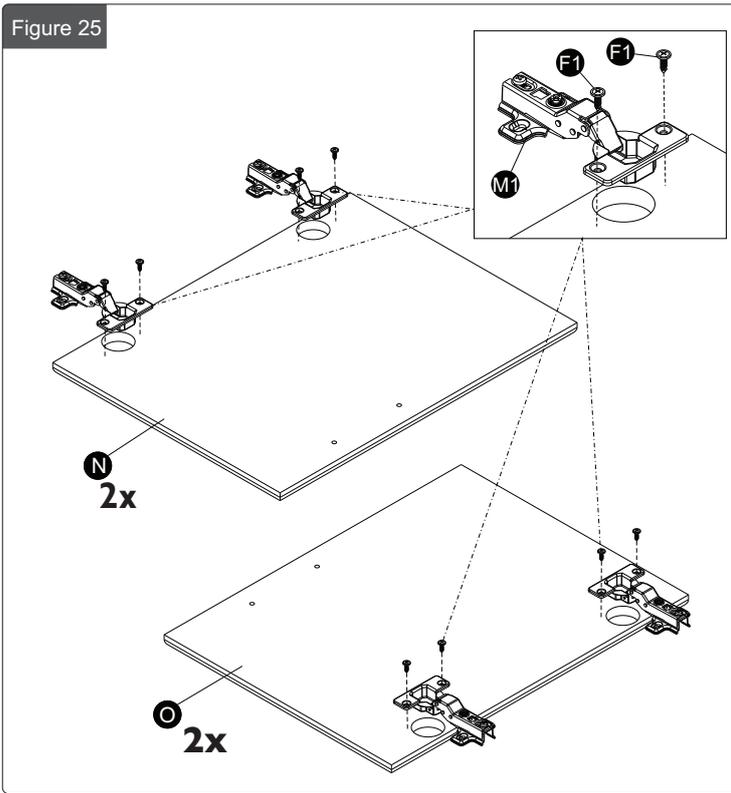


36. Attach the **hinges (M1)** in the **doors (N and O)** with the **screws (F1)** (see figure 25).

Figure 26

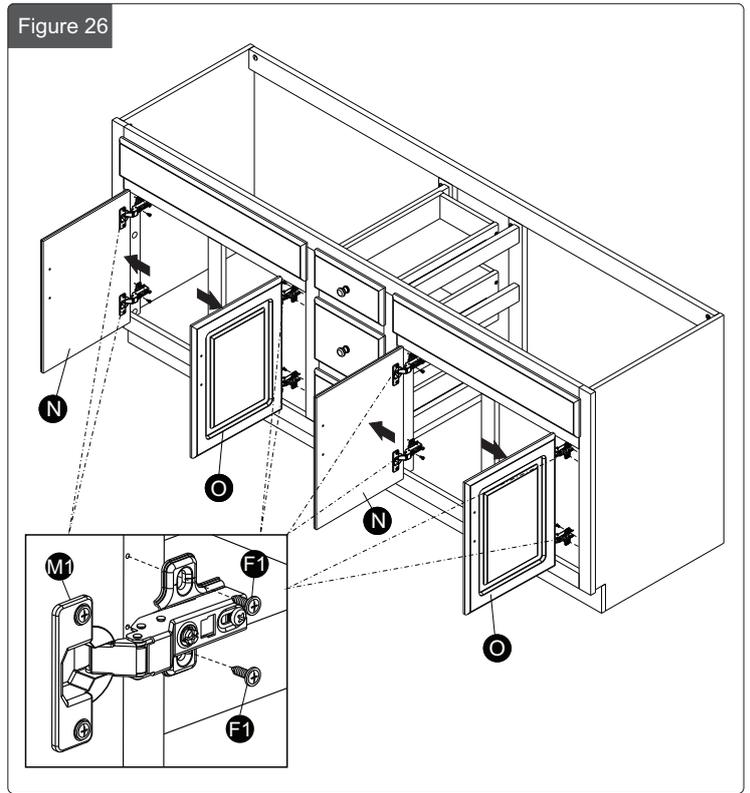


37. Attach the **hinges (M1)** of doors with the **screws (F1)** (see figure 26).

Figure 27

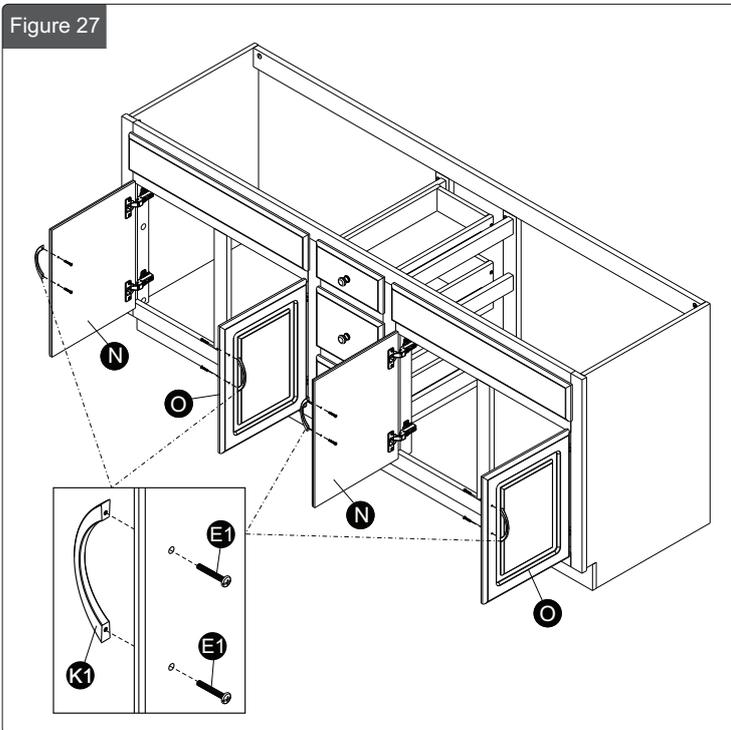

38. Attach the **drawer pulls (K1)** on the **doors (N and O)** with the **screws (E1)** (see figure 27).

Figure 28

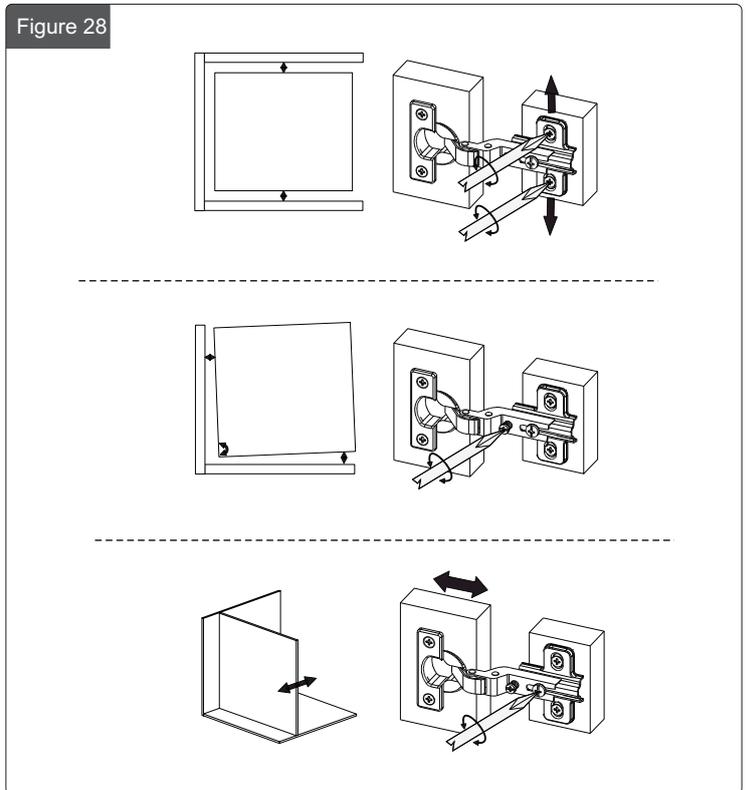

39. Adjust door any direction as shown above. (see figure 28).