














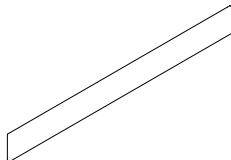
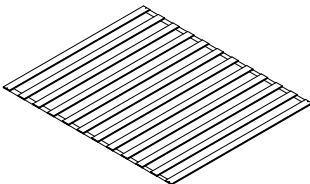
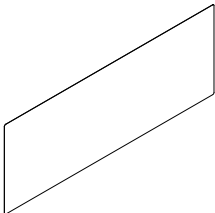






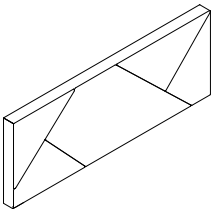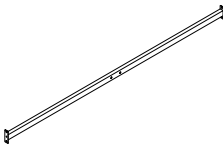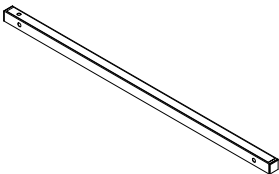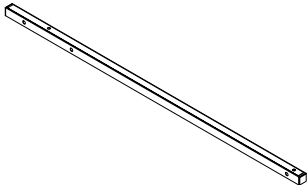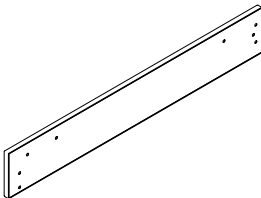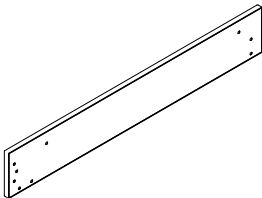

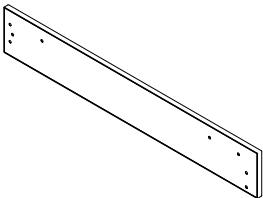

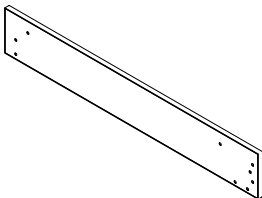



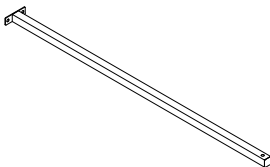


ASSEMBLY INSTRUCTION

UPHOLSTERED PLATFORM FULL BED UPHOLSTERED PLATFORM QUEEN BED

A Headboard  1PC	B Headboard Leg - Left  1PC	C Headboard Leg - Right  1PC	D Headboard Stretcher  1PC
E Rail Cleat - Front  2PCS	F Rail Cleat - Rear  2PCS	G Left Side Rail - Front  1PC	H Left Side Rail - Rear  1PC
I Right Side Rail - Front  1PC	J Right Side Rail - Rear  1PC	K Center Rail  2PCS	L Support Bar  1PC
M Rail Support Leg  2PCS	N Center Support Leg  3PCS	O Footboard Leg  2PCS	P Footboard  1PC
Q Slat  1SET (12PCS)	R Fabric Cover  1PC	S Bracket 20 x 106 x 106 x 2mm  2PCS	T Bracket 37 x 45 x 82 x 2mm  2PCS



U Bracket 37 x 45 x 82 x 2mm 	V Bracket 11.5 x 25 x 65 x 2mm 	W Bolt 1/4" x 19mm 	X Bolt 1/4" x 40mm 
2PCS	1PC	44PCS	12PCS
Y Bolt 1/4" x 30mm 	Z Bolt 5/16" x 48mm 	AA Nut 1/4" 	AB Nut M8 
10PCS	4PCS	2PCS	2PCS
AC Washer Ø16mm 	AD Washer Ø19mm 	AE Ratchet Tool 4mm 	AF Wrench 1/4" x 5/16" 
16PCS	4PCS	1PC	1PC

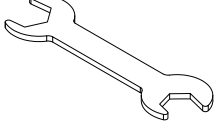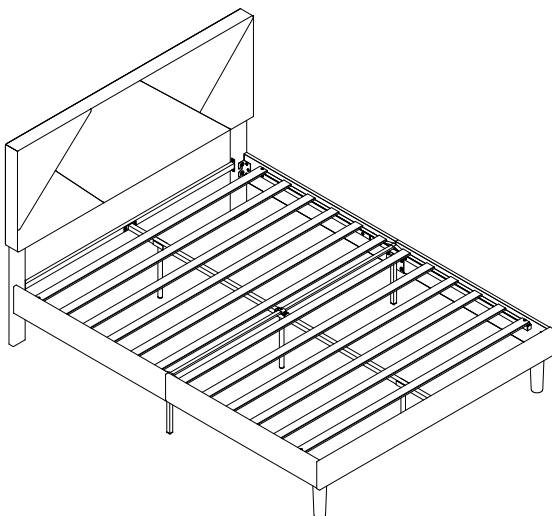

These pages list all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


How to Use the Ratchet Tool (AE)

1. Before assembling the furniture, please adjust the lock as needed.

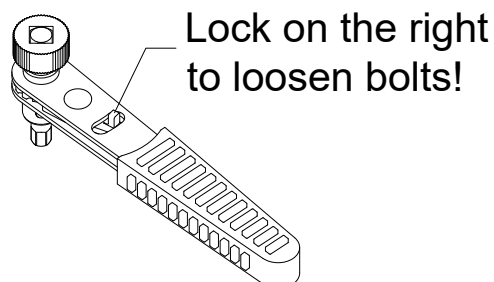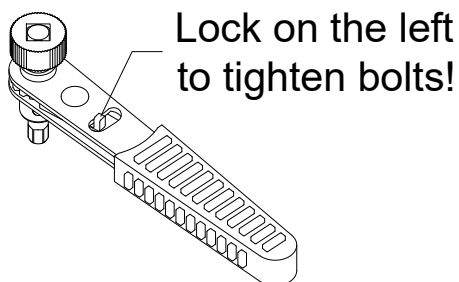


2. Tighten or loosen bolts.

- **Tighten bolts:** Locate the turncap and rotate it clockwise to screw the bolt quickly until it cannot be rotated any more. Then start rotating the handle clockwise to finalize tightening the bolt.

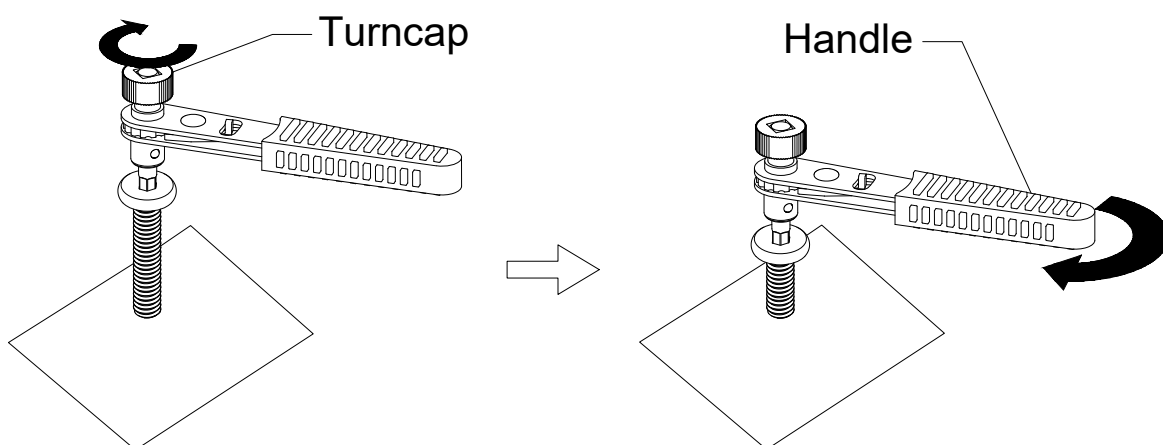


- **Loosen bolts:** Rotate the handle counterclockwise to loosen the bolt. Then continue rotating the turncap in the same direction to remove the bolt completely.

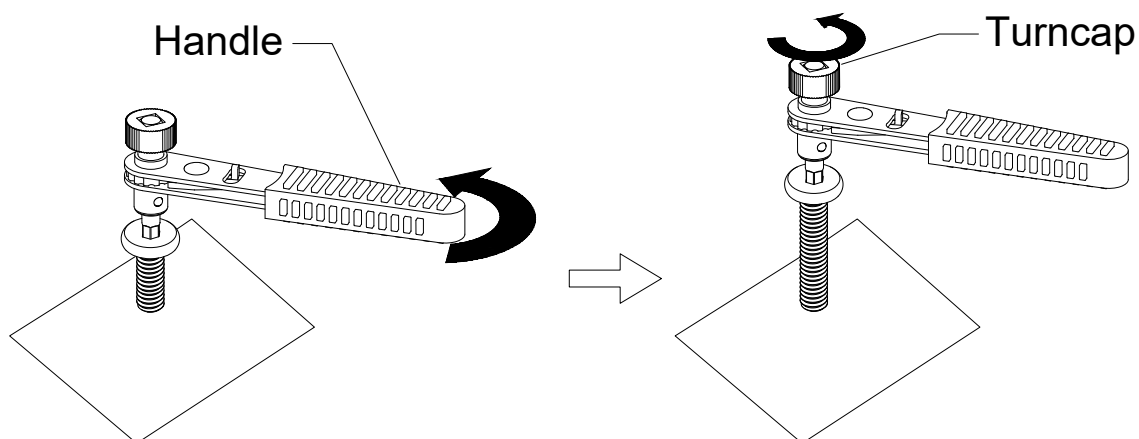


1

Attach Headboard Leg (B & C) to Headboard (A) using Bolt (Z) and Washer (AD) with Ratchet Tool (AE). Then cover Headboard (A) with Fabric Cover (R).

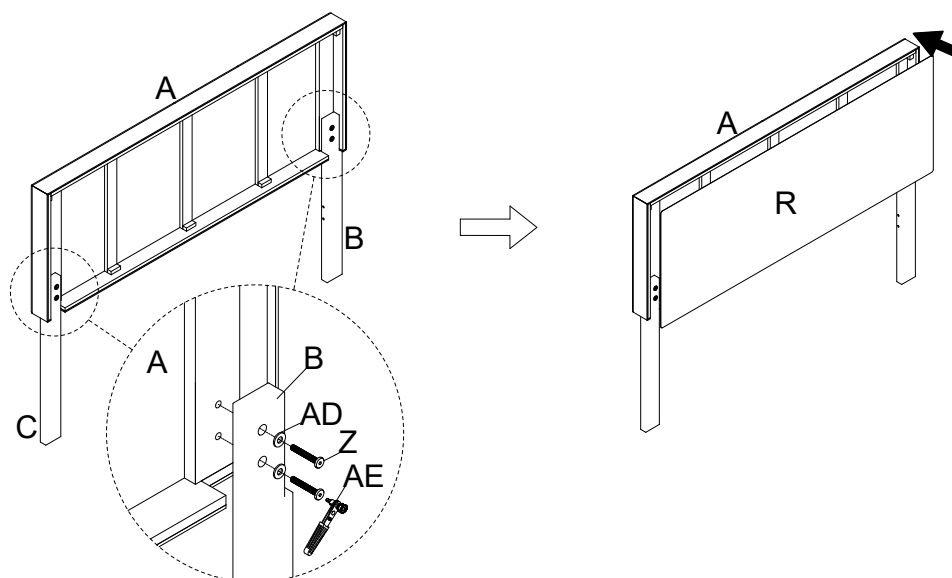


2

Attach Headboard Stretcher (D) to Headboard Leg (B & C) using Bolt (W) with Ratchet Tool (AE).

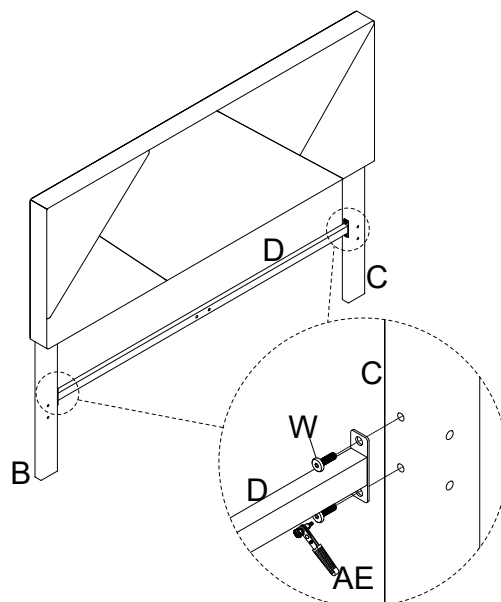


3

Attach Rail Cleat (E & F) to Left & Right Side Rail (G & H & I & J) using Bolt (X) with Ratchet Tool (AE).

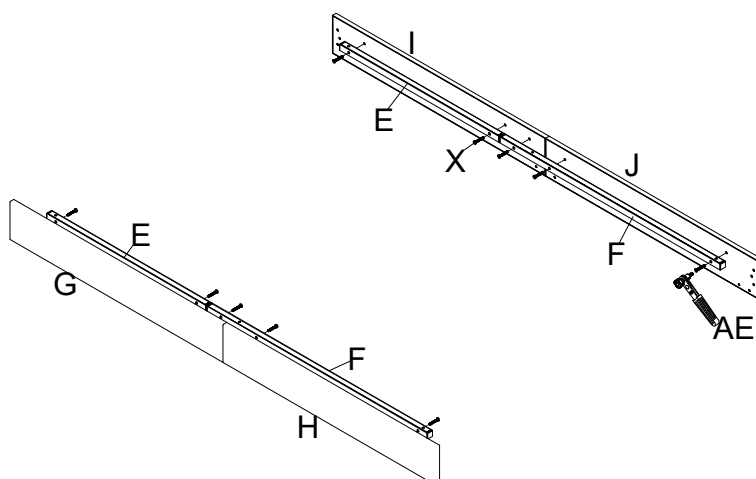


4

Attach Bracket (T) to Left Side Rail - Rear (H) and Right Side Rail - Front (I) using Bolt (W) with Ratchet Tool (AE). Attach Bracket (U) to Left Side Rail - Front (G) and Right Side Rail - Rear (J) using Bolt (W) with Ratchet Tool (AE). Then attach Rail Support Leg (M) to Left & Right Side Rail (G & H & I & J) using Bolt (W) and Washer (AC) with Ratchet Tool (AE).

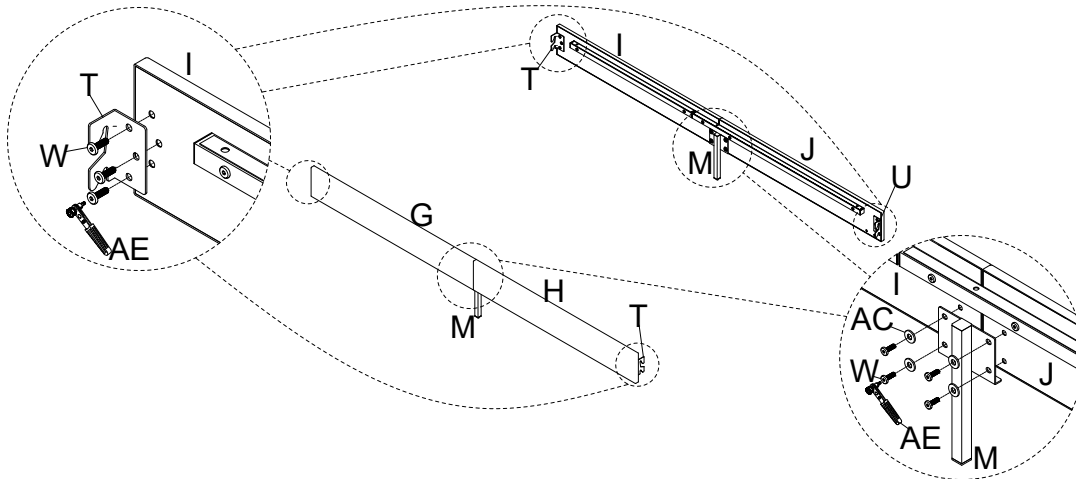


5

Attach Left Side Rail - Front (G) and Right Side Rail - Front (I) to Headboard Leg (B & C) using Bolt (Y) and Washer (AC) with Ratchet Tool (AE). Then attach Left Side Rail - Rear (H) and Right Side Rail - Rear (J) to Footboard Leg (P) using Bolt (W) and Washer (AC) with Ratchet Tool (AE).

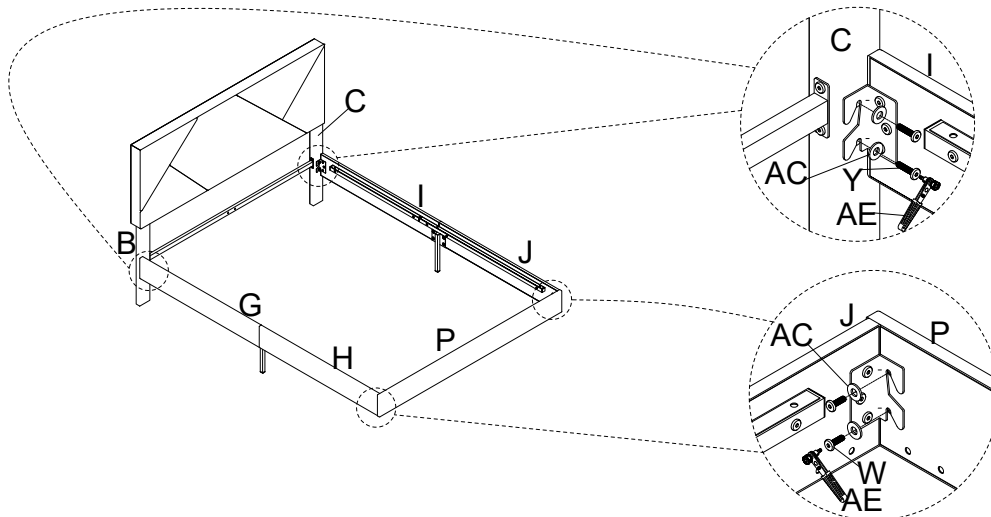


6

Attach Bracket (S) to Footboard Leg (O) and tighten with Nut (AB).

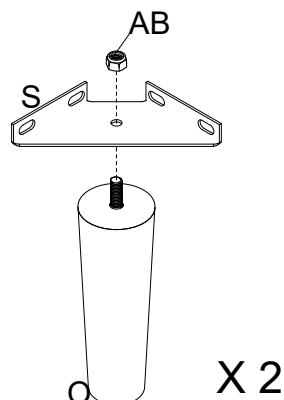


7

Attach Footboard Leg (O) to Left Side Rail - Rear (H), Right Side Rail - Rear (J) and Footboard (P) by Bracket (S) using Bolt (W) with Ratchet Tool (AE).

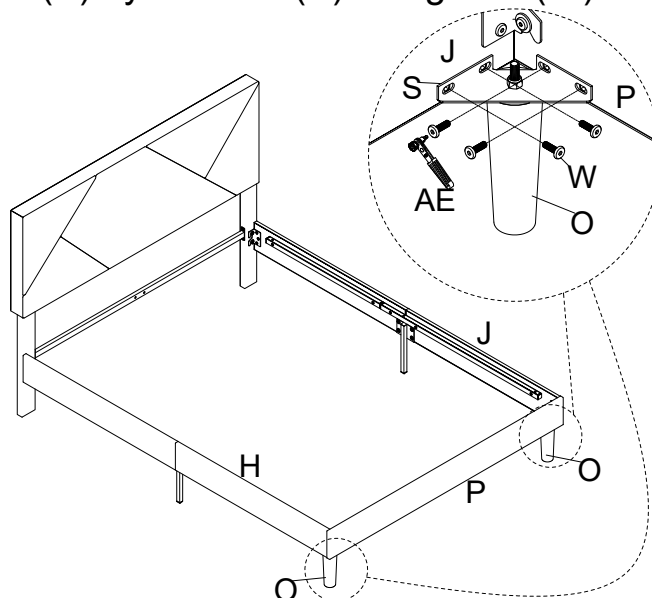


8

Attach Center Support Leg (N) to Center Rail (K) using Bolt (W) with Ratchet Tool (AE).

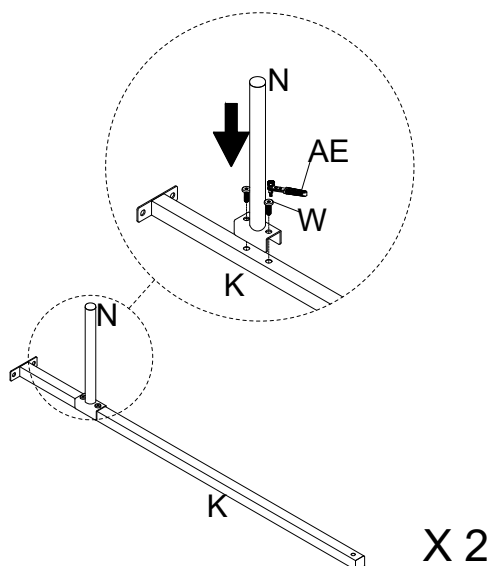


9

Attach Center Rail (K) to Headboard Stretcher (D) and Footboard (P) using Bolt (W) with Ratchet Tool (AE).

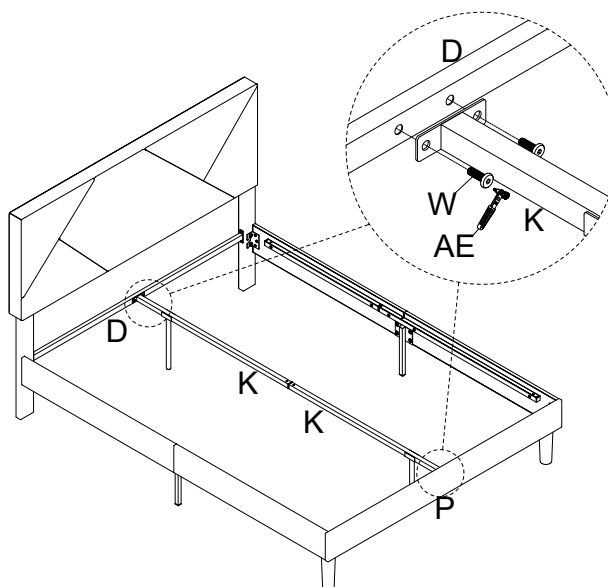


10


Attach Support Bar (L) to Rail Cleat - Rear (F) using Bolt (Y) with Ratchet Tool (AE). Then assemble Bracket (V), Support Bar (L), Center Rail (K) and Center Support Leg (N) using Bolt (X) and Nut (AA) with Ratchet Tool (AE) and Wrench (AF).

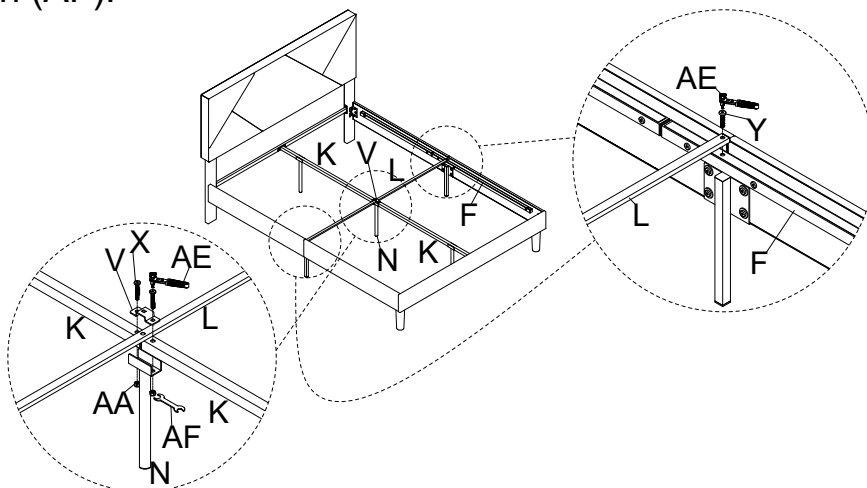**11**

Expand and attach Slat (Q) to Rail Cleat (E & F).

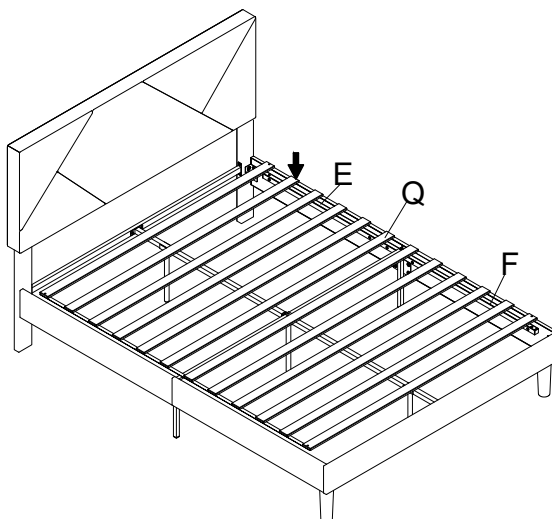**12**

Insert Bolt (Y) into Slat (Q) and Rail Cleat (E & F) and tighten with Ratchet Tool (AE).

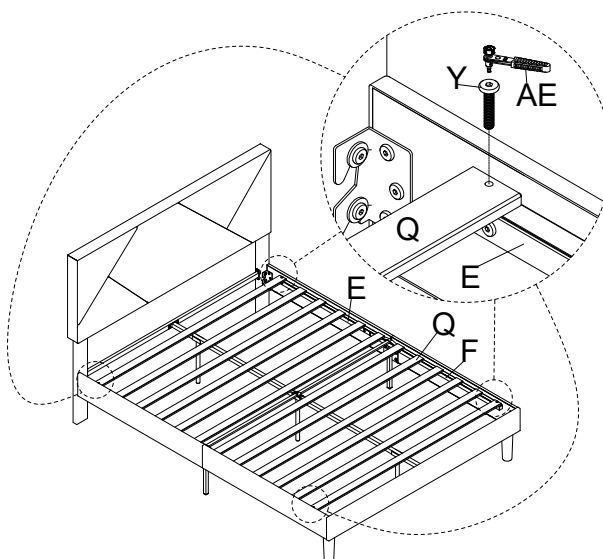

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.