




Pillar Flush Mount Instructions

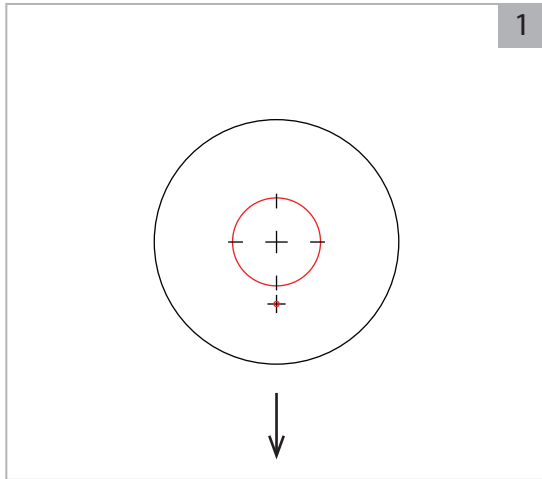


Print the provided template on page 4. Position the center of the template at the desired location for the center of the Pillar Mount. Make sure the small 1/8" mark is facing toward the front of where the Pillar Mount will be facing.

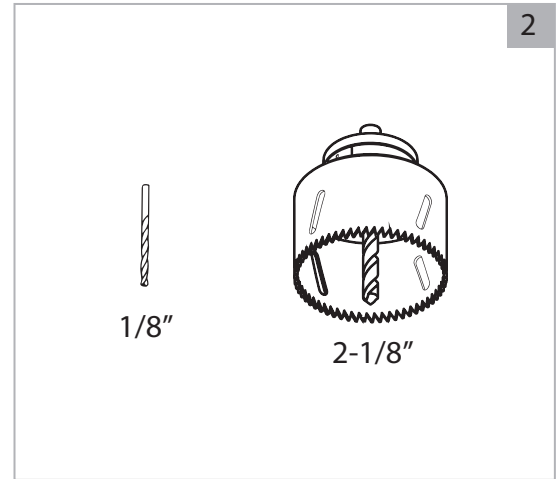

Use a 2-1/8" hole saw to cut a hole in the surface for the mounting nut. Using the template as a center guide. Use a 1/8" drill bit to drill a hole for the alignment bolt on the FlushMount base.

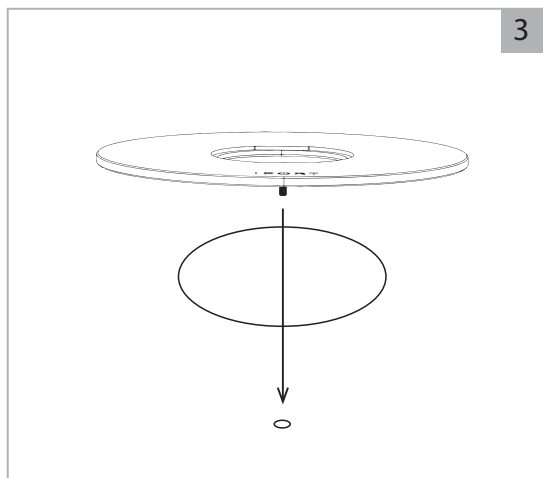

Insert the Flush Mount baseplate alignment bolt into the 1/8" hole and center the base receiver hole with the 2-1/8" hole.

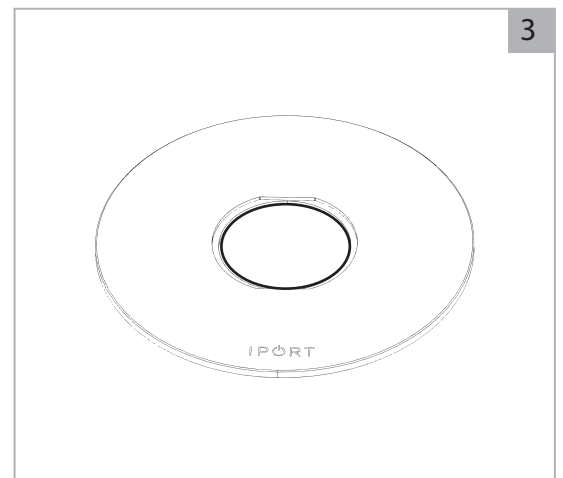



Place the pillar onto the base temporarily to verify alignment is correct.



Provided are depth shims to accommodate a large range of surface thickness'. Use the appropriate amount of shims to ensure a tight fit of the mounting nut and the pillar base. The Flush Mount kit has a minimum mounting surface thickness of 7/8" (22mm) and a Maximum of 1-9/16" (40mm)




Ensure the V notch of all the shims are aligned for correct fitment of the mounting hardware





Insert the mounting nut with shims into the pillar hole and start threading the mounting nut and shims by hand into the Pillar base.


I PORT

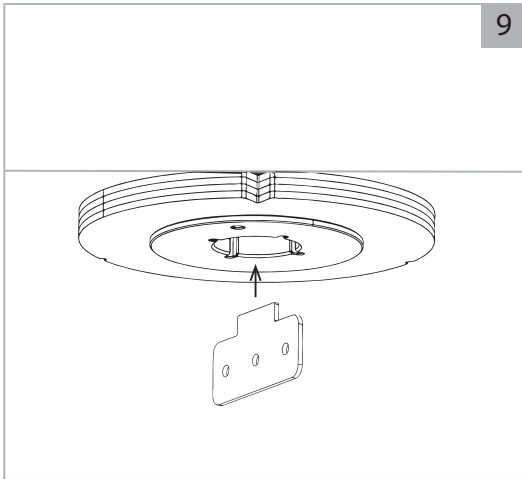

Once hand tight use the provided Pillar Mount tool to tighten the shims and mounting nut so the pillar is secure in place.

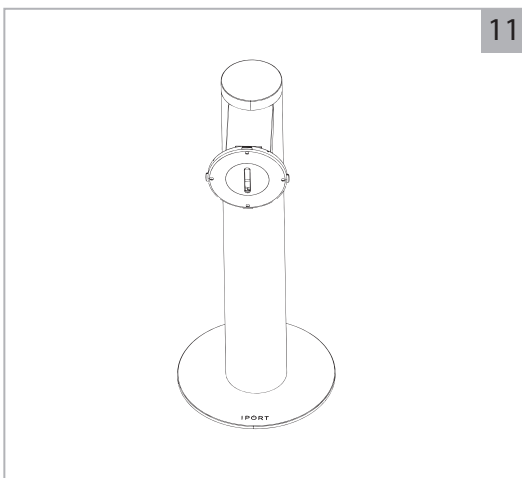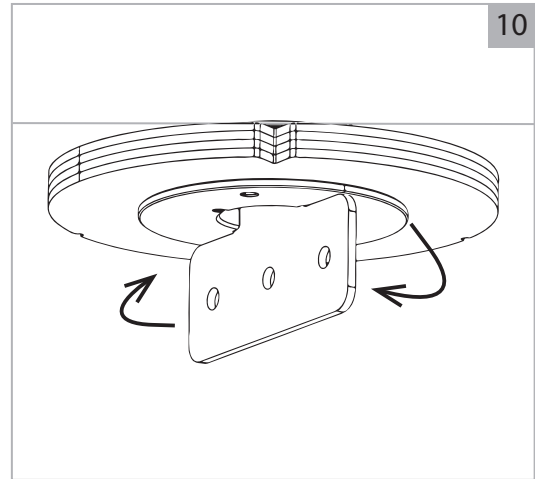


Once the Pillar Mount is secure refer to that Pillar manual for instructions on mounting the iPad Cases and powering the Pillar Mount.

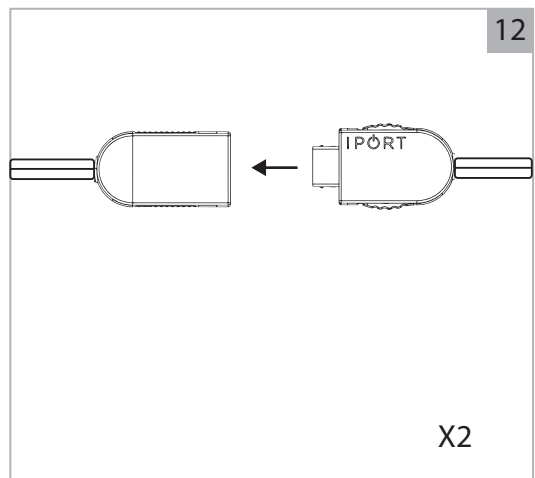


Attach the H10 Connector with the USB-C into the female H10 Connector on the Pillar System. Repeat for both connectors.

X2


I PORT

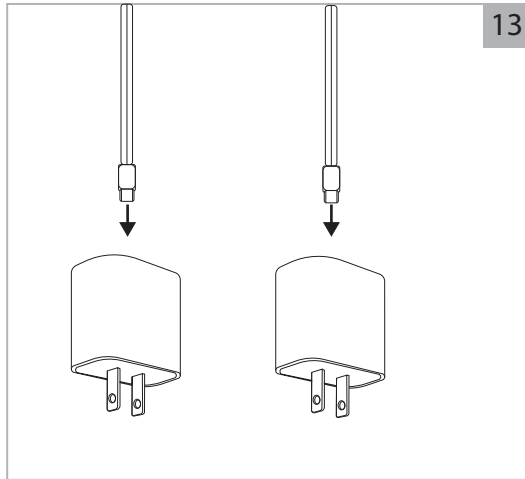


Plug in the USB-C cable into the Apple power supply provided with each iPad and plug the power adapter into the wall.

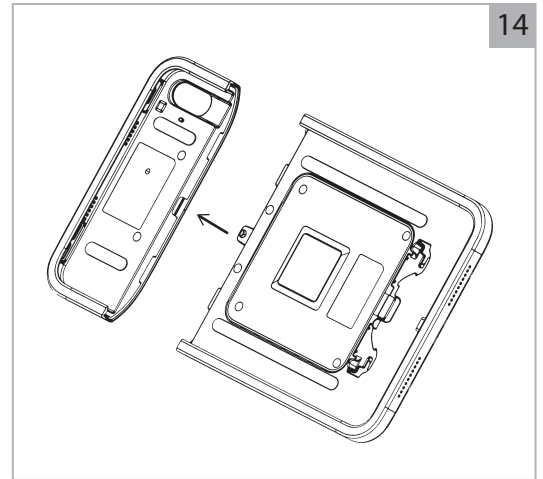

Remove the Sleeve Top From the CONNECT Case.

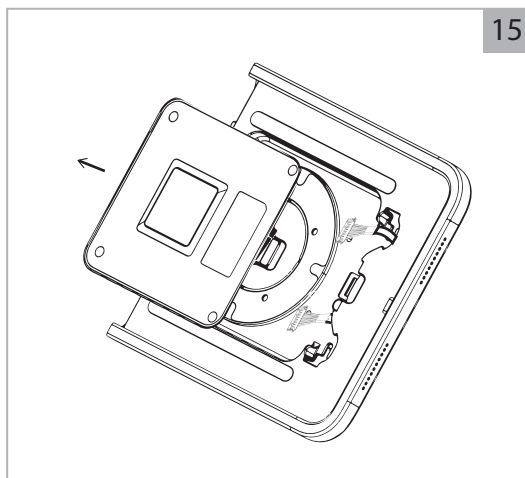


Remove the Electronics Cover from the inside of the Case.

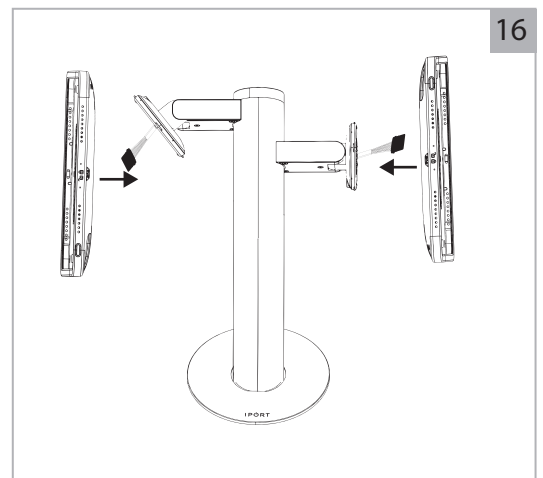


Place one or both Cases onto the Pillar head make sure to feed the cable through the center of the Case.


I PORT

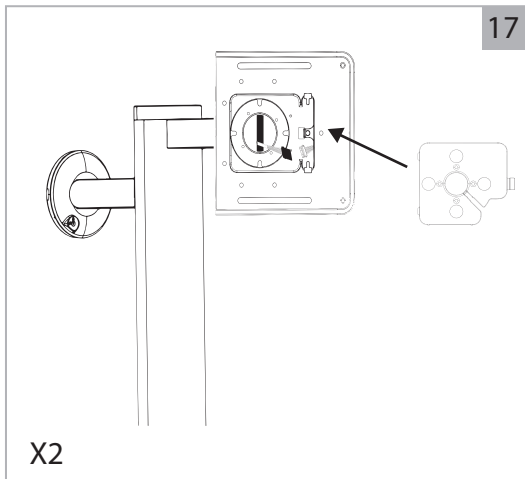


Insert the Case mounting plate into the case and over top of the Molex cable. Repeat this step for a second iPad.

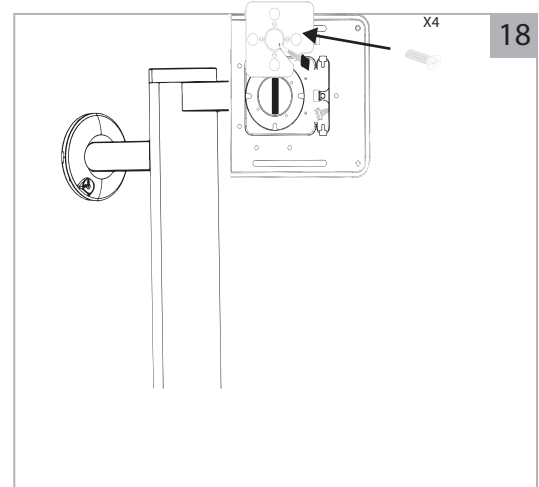

Insert the 4ea provided philips head screws into the Case mounting plate and tighten snug ensuring the case is secure to the pillar head.

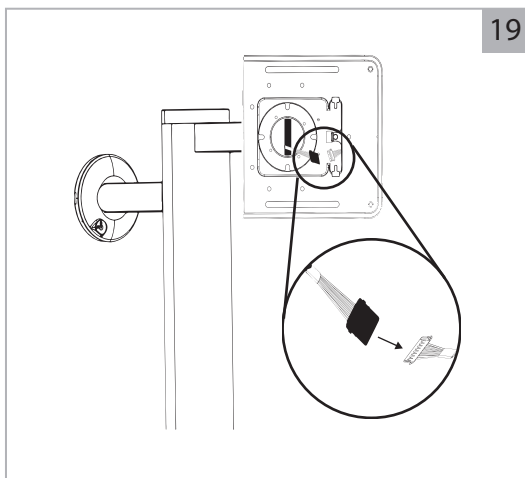


Insert the male Case Molex cable into the female Pillar Molex connector and ensure the retention cover is secured.

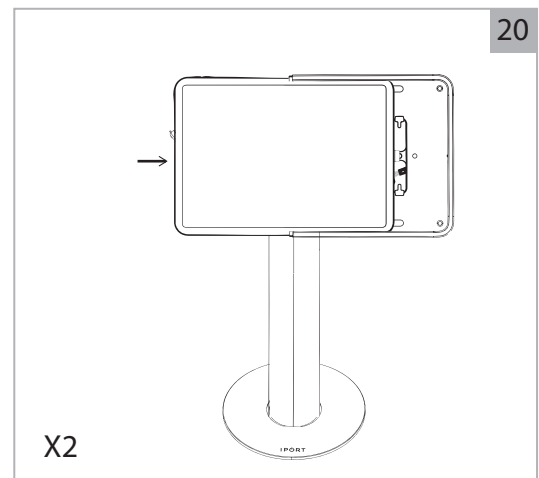


Insert the iPad into the Case ensuring the iPad is seated fully into the bottom of the Case and the USB-C connection.

I PORT

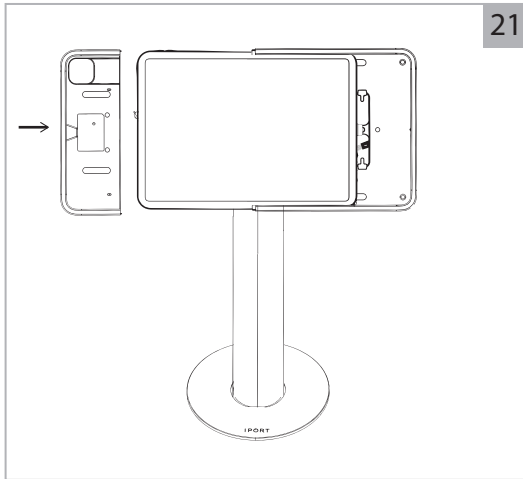


Reinstall the Case Top onto the iPad and Case making sure to fully snap the Case Top in place.

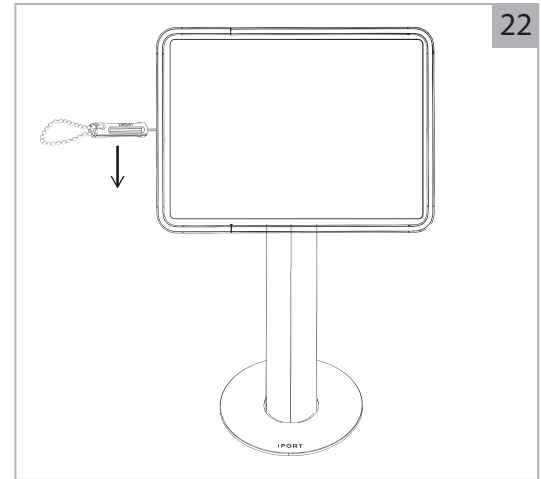

Insert the provided IPORT Security tool into top of the Case and slide towards the lock position securely locking the iPad into the Case.

PILLAR - FLUSH MOUNT *INSTALLATION TEMPLATE*

Scale: 1:1

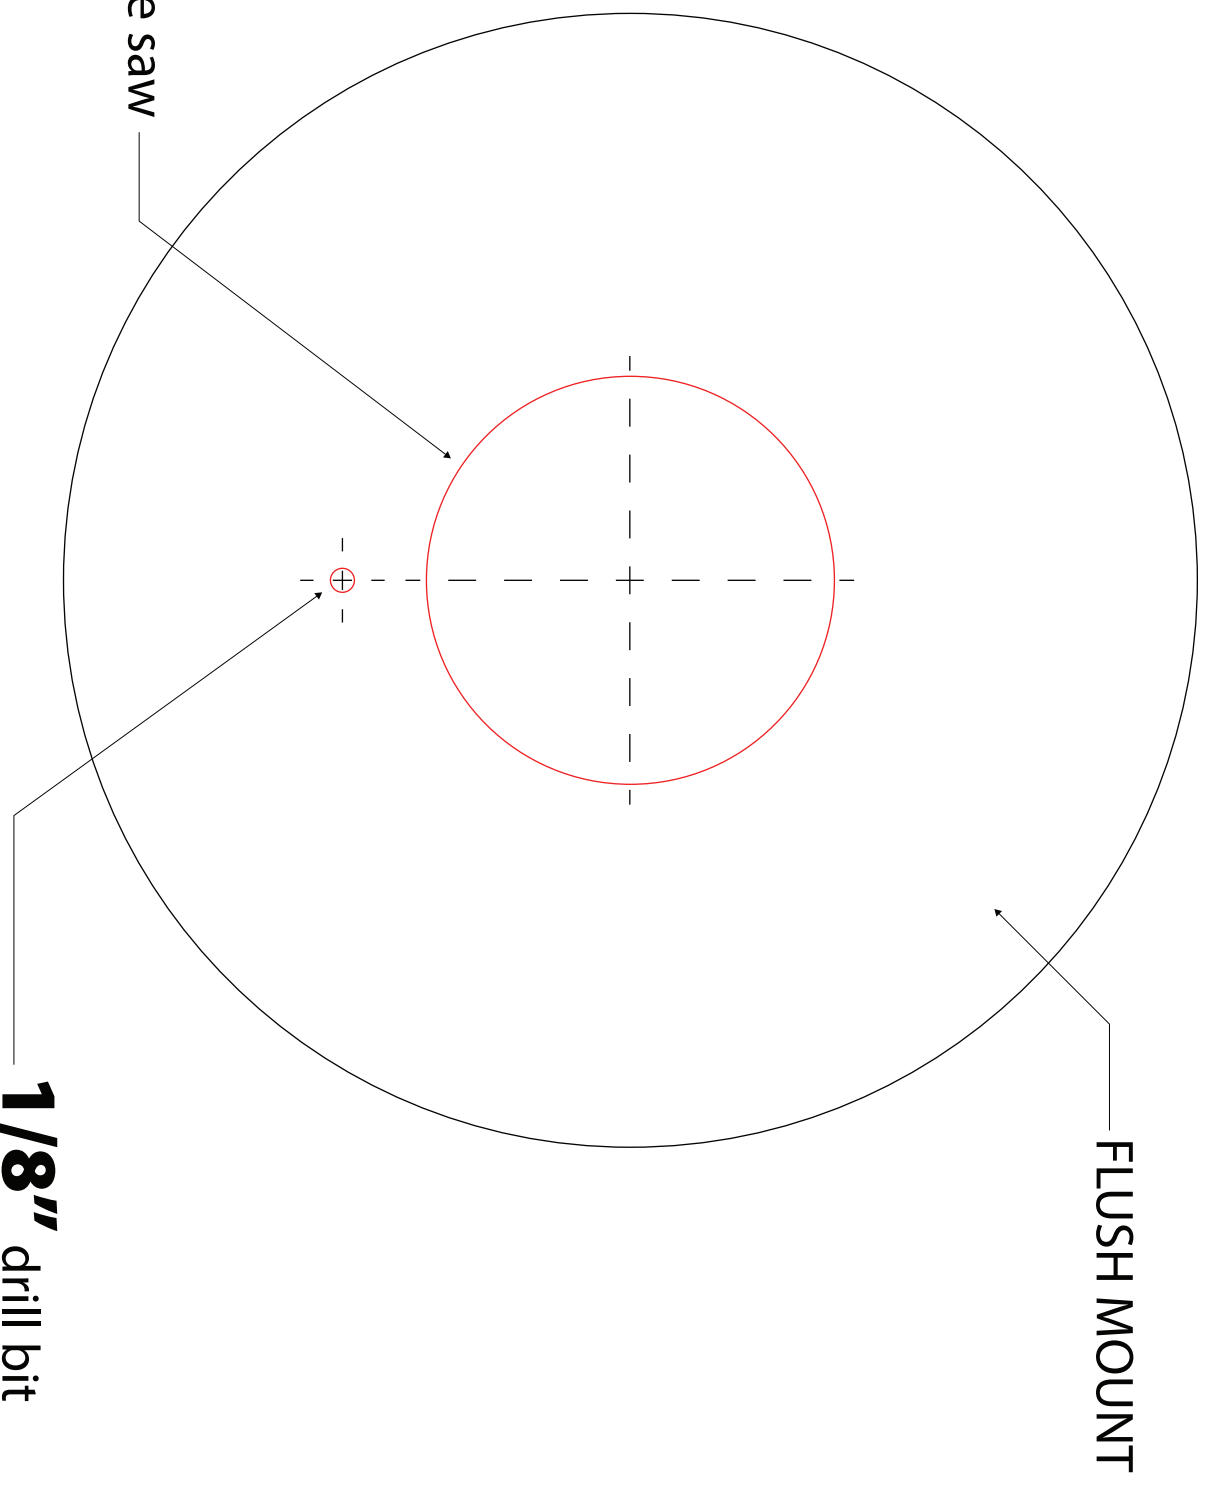

PORT

2-1/8" hole saw

1/8" drill bit

FLUSH MOUNT