

BACALL WING WOOD UPHOLSTERED QUEEN BED


ASSEMBLY INSTRUCTIONS



BOX#1

A. HEADBOARD

1 PC

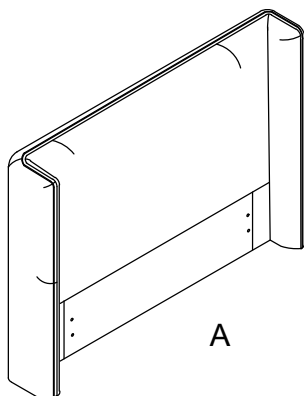

A

BOX#2

B. FOOTBOARD


1 PC

C. SLAT


5 PCS

D. SUPPORT LEG


5 PCS

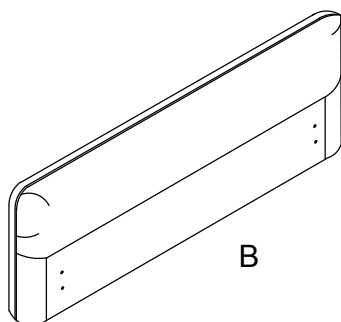

B

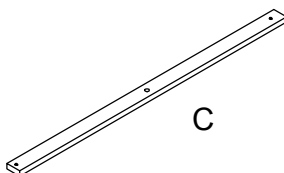

C




D

BOX#3

E. SIDE RAIL

2 PCS


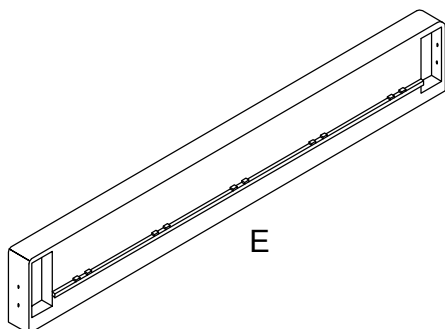


E

HARDWARE KIT PACKED IN BOX #2

No.	Description	Image	Quantity
1	THREADED BOLT (5/16"x 3-1/2")		8 PCS
2	FLAT WASHER (5/16")		8 PCS
3	LOCK WASHER (5/16")		8 PCS
4	HEX NUT (5/16")		8 PCS
5	PHILLIPS SCREW (M4 x 32mm)		10 PCS
6	ALLEN KEY (5/16")		1 PC
7	WRENCH		1 PC
8	CONNECTING BRACKET		4 PCS

FULLY ASSEMBLED

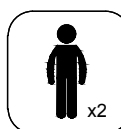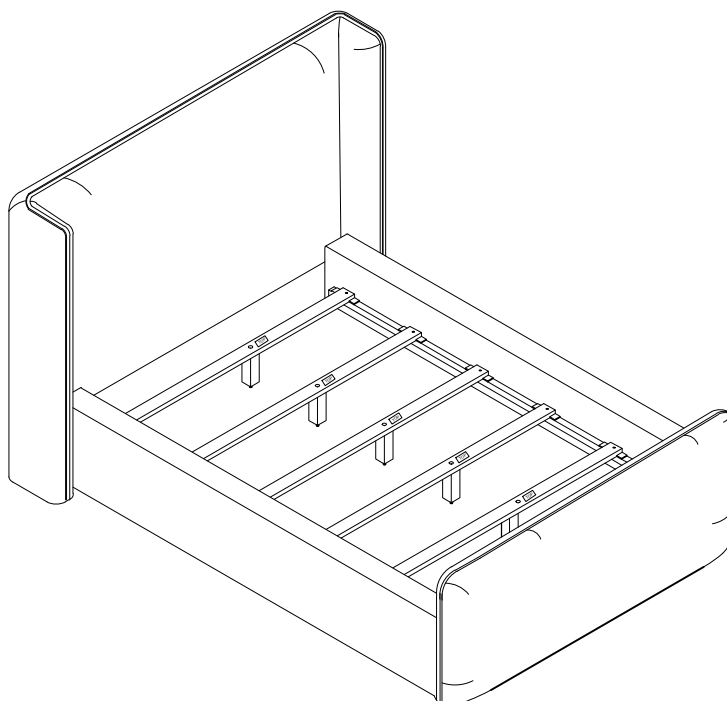

STEP 2:

The diagram illustrates the second step of the installation process, which is mounting the door. On the left, a 3D perspective view shows the door frame (A) and the door (E) being aligned. The door is shown in an 'OPEN' position. On the right, a detailed view of the door is shown in a 'CLOSE' position, with callouts 1 through 8 indicating the components of the door handle and lock mechanism. The door is shown in an 'OPEN' position and a 'CLOSE' position, with arrows indicating the direction of movement.

STEP 3:

Diagram illustrating Step 3: Attaching the door to the cabinet. The main illustration shows the door (B) being aligned with the cabinet frame. A dashed box highlights the hinge area, which is shown in a separate 'OPEN' view. This view shows the door (E) being swung open, revealing the internal hinge mechanism (8) and the door's position relative to the cabinet frame (1, 2, 3, 4, 7). A curved arrow indicates the door's movement. A second dashed box shows the door being swung closed, labeled 'CLOSE', with another curved arrow indicating the direction of movement.




- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 4-6 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 4

BACALL WING WOOD UPHOLSTERED QUEEN BED


ASSEMBLY INSTRUCTIONS

MODUS
FURNITURE


STEP 4:

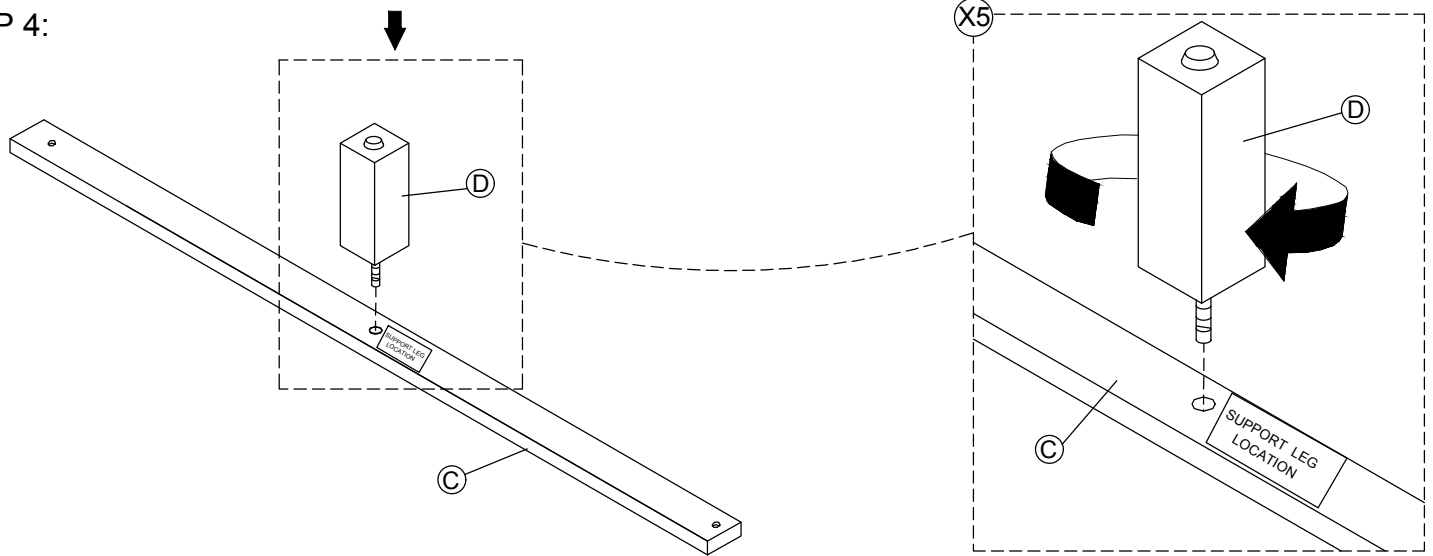

STEP 5:

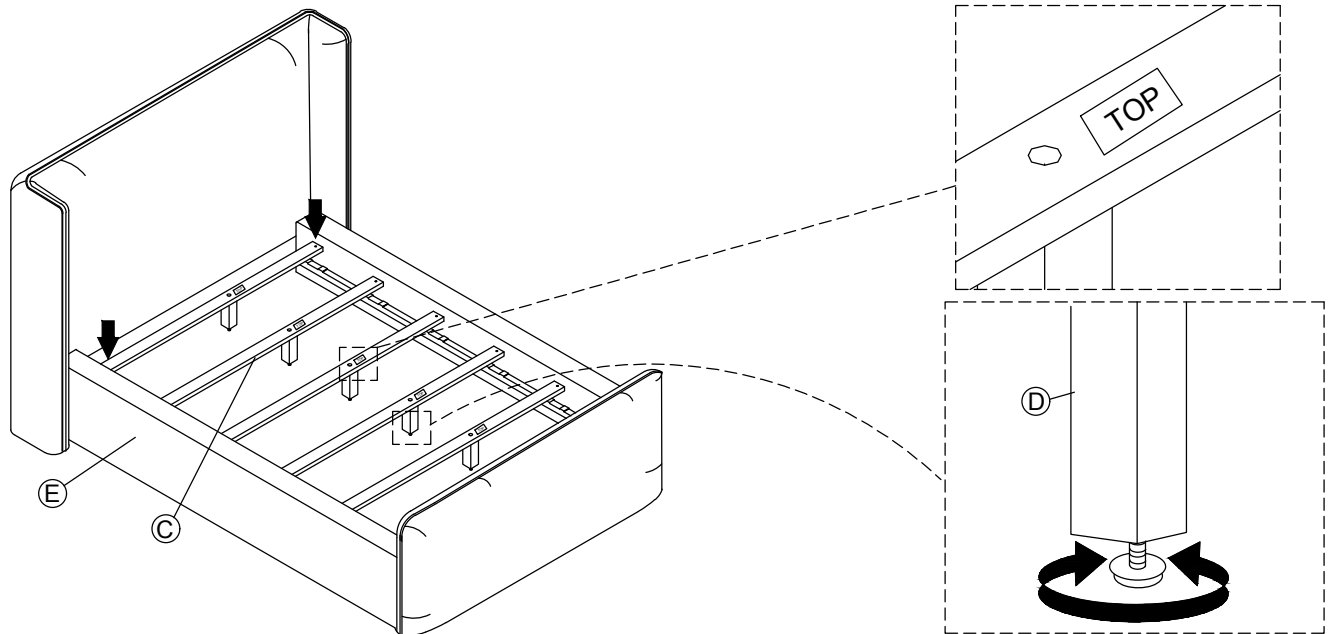


STEP 6:

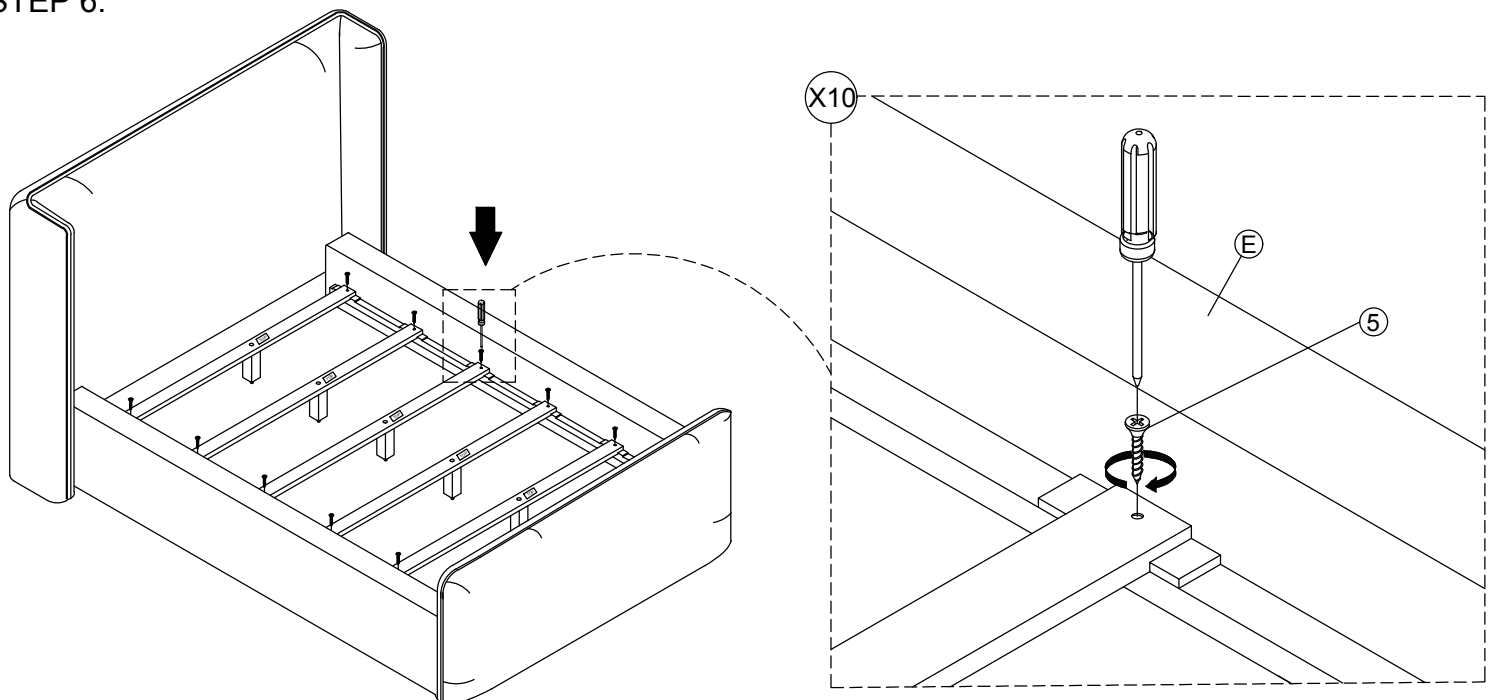

BACALL WING WOOD UPHOLSTERED QUEEN BED

ASSEMBLY INSTRUCTIONS

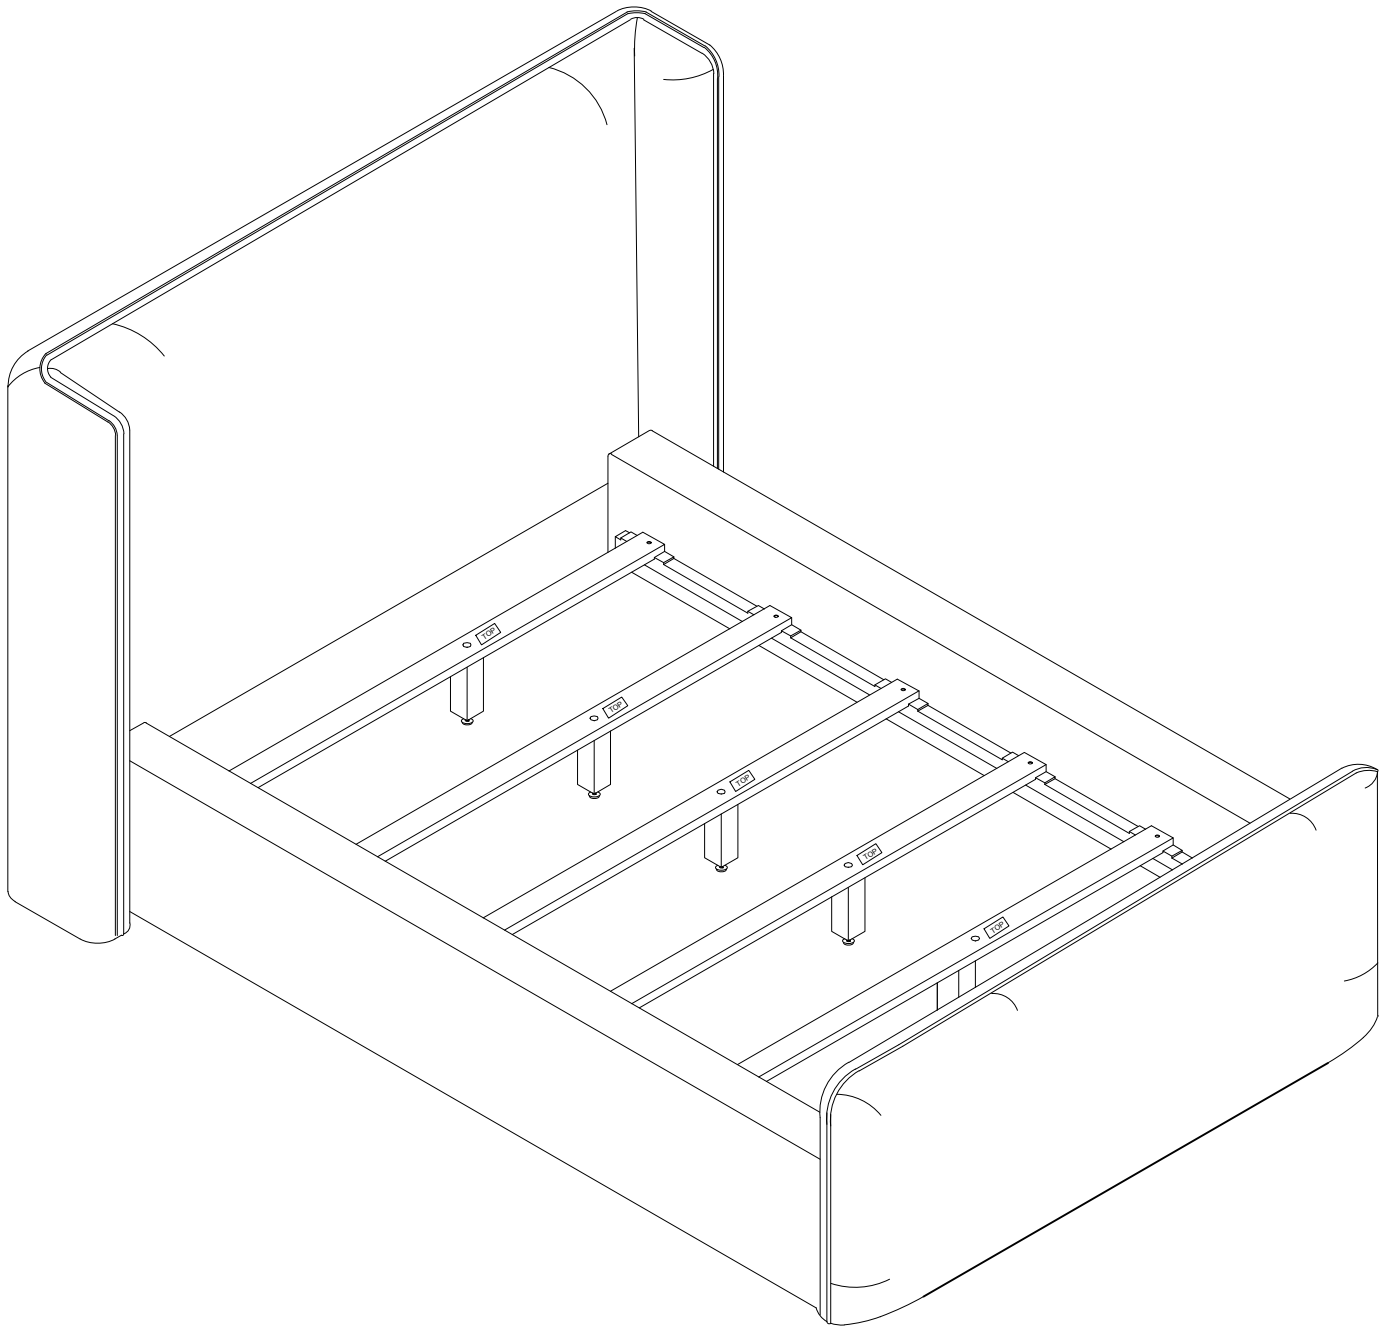


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.

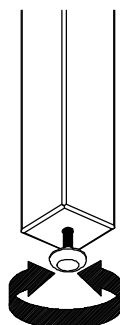

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

BACALL WING WOOD UPHOLSTERED QUEEN BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

C. SLAT	5 PCS
D. SUPPORT LEG	5 PCS

STEP 1 :

USE ALLEN KEY (6) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

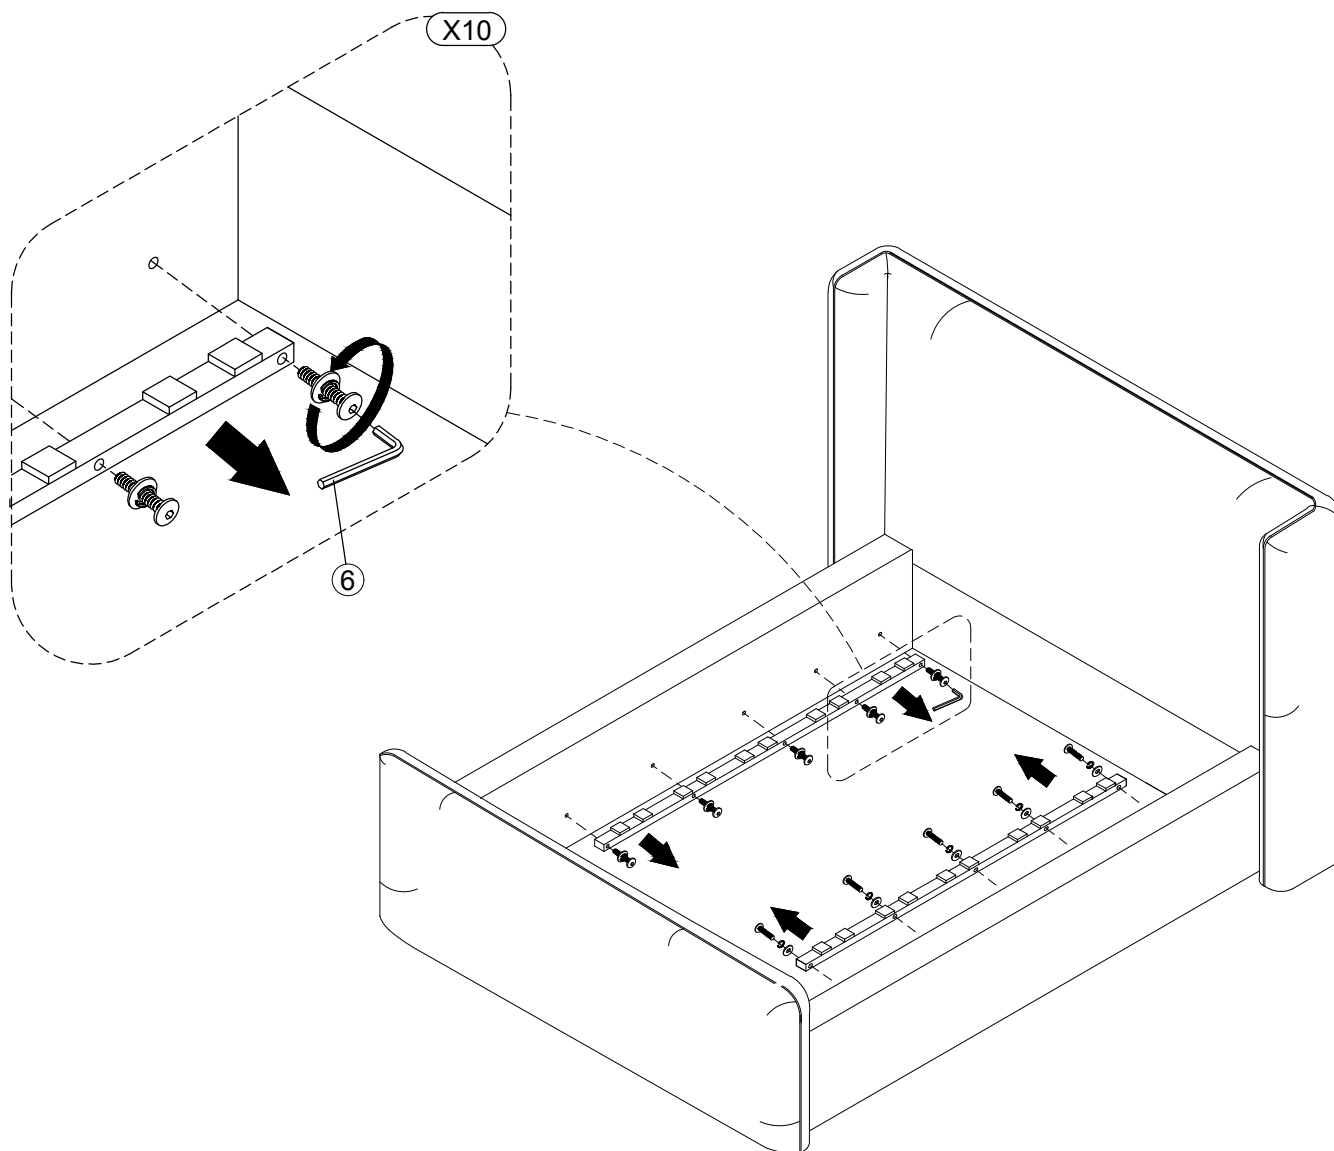

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION

BACALL WING WOOD UPHOLSTERED C.KING/KING BED


ASSEMBLY INSTRUCTIONS



BOX#1

A. HEADBOARD

1 PC

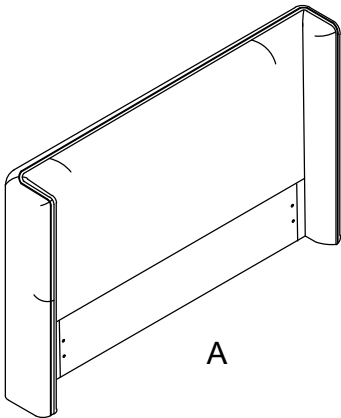

BOX#2

B. FOOTBOARD




1 PC

C. SLAT

5 PCS

D. SUPPORT LEG


10 PCS

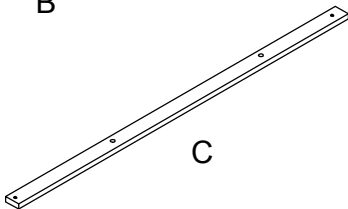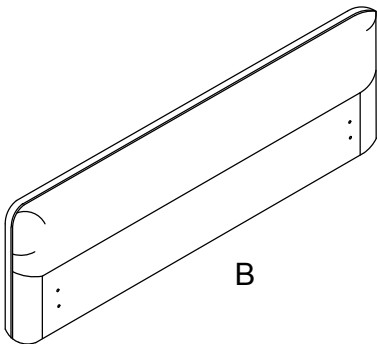

BOX#3

E. SIDE RAIL



2 PCS

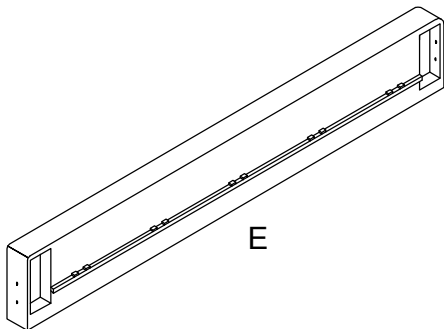

HARDWARE KIT PACKED IN BOX #2

No.	Description	Image	Quantity
1	THREADED BOLT (5/16"x 3-1/2")		8 PCS
2	FLAT WASHER (5/16")		8 PCS
3	LOCK WASHER (5/16")		8 PCS
4	HEX NUT (5/16")		8 PCS
5	PHILLIPS SCREW (M4 x 32mm)		10 PCS
6	ALLEN KEY (5/16")		1 PC
7	WRENCH		1 PC
8	CONNECTING BRACKET		4 PCS

FULLY ASSEMBLED

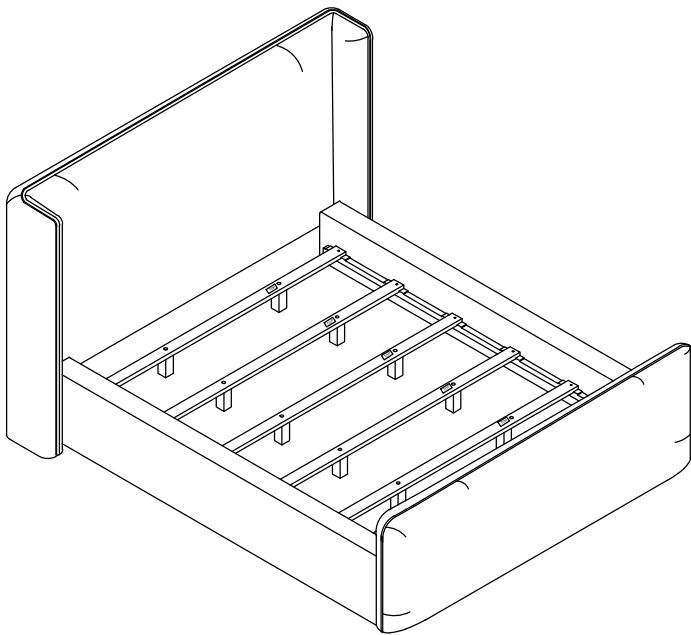


BACALL WING WOOD UPHOLSTERED C.KING/KING BED


ASSEMBLY INSTRUCTIONS

MODUS
FURNITURE


STEP 1:

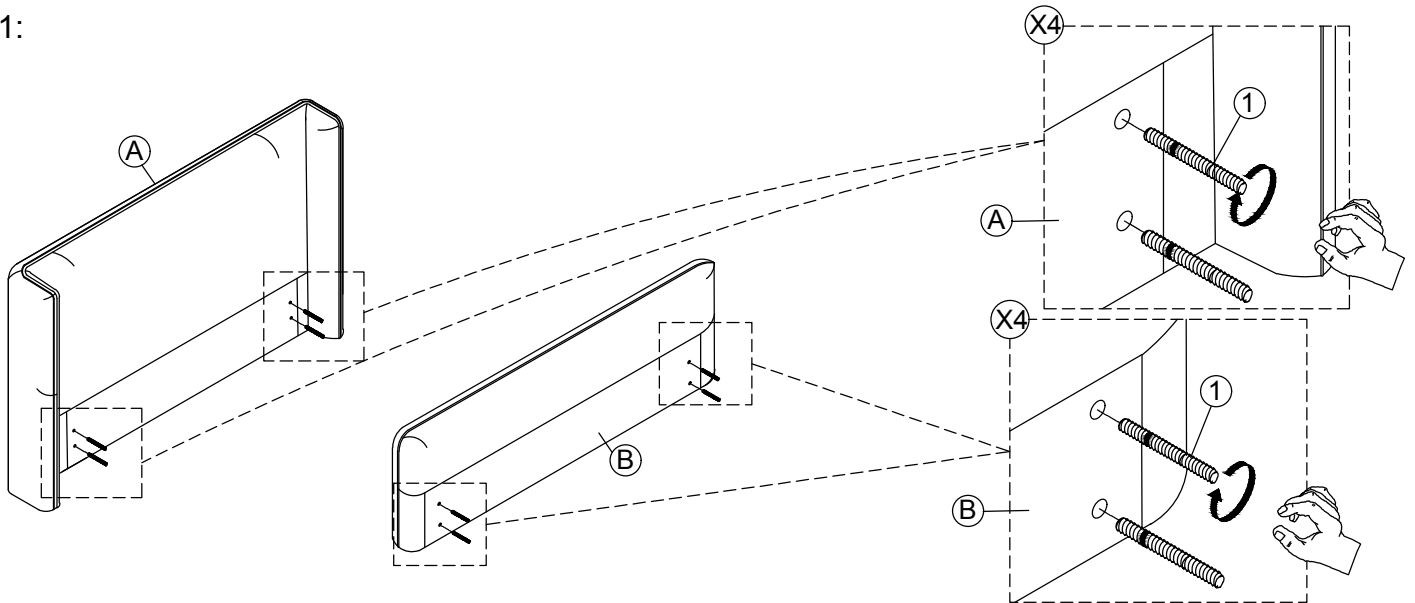

STEP 2:

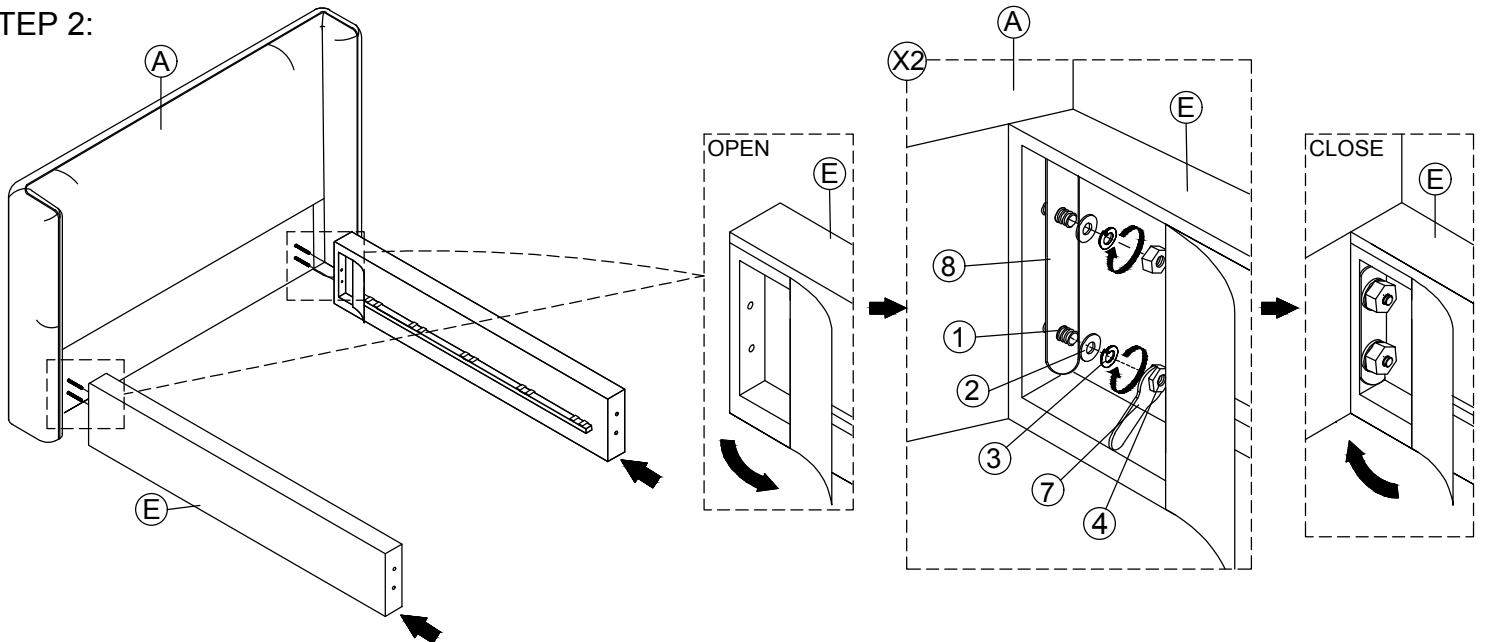

STEP 3:

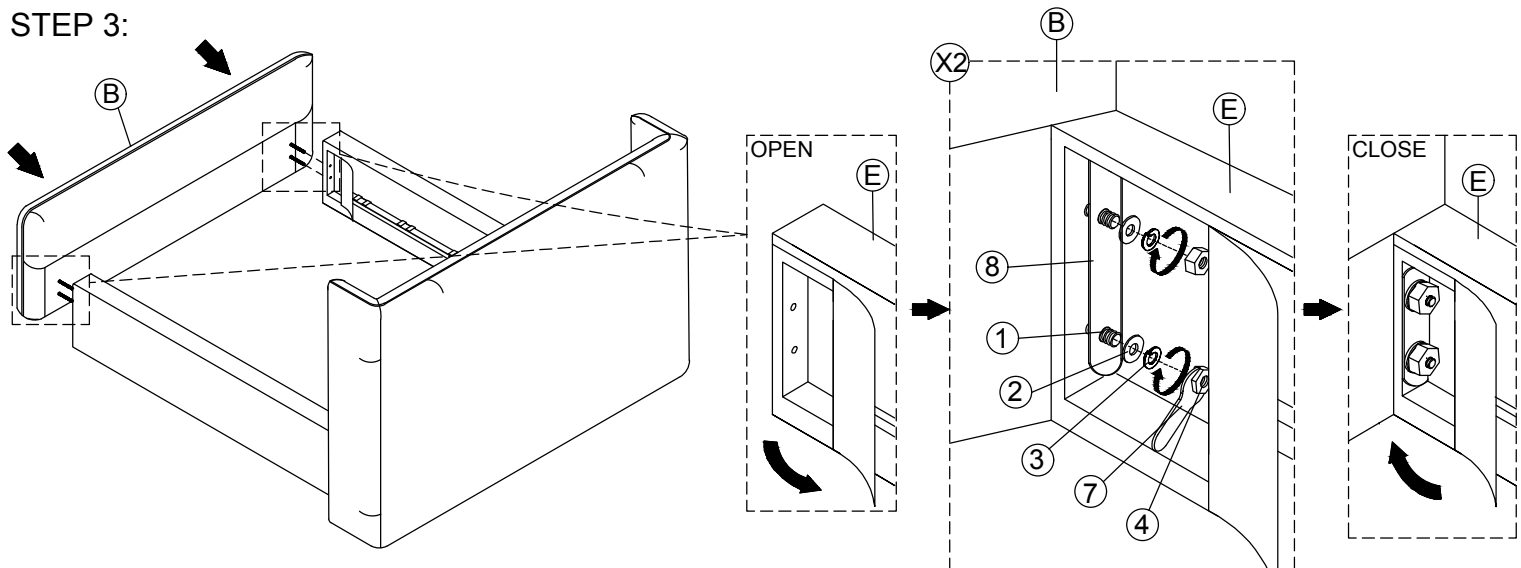

STOP


- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 4-6 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 4

BACALL WING WOOD UPHOLSTERED C.KING/KING BED


ASSEMBLY INSTRUCTIONS

MODUS
FURNITURE


STEP 4:

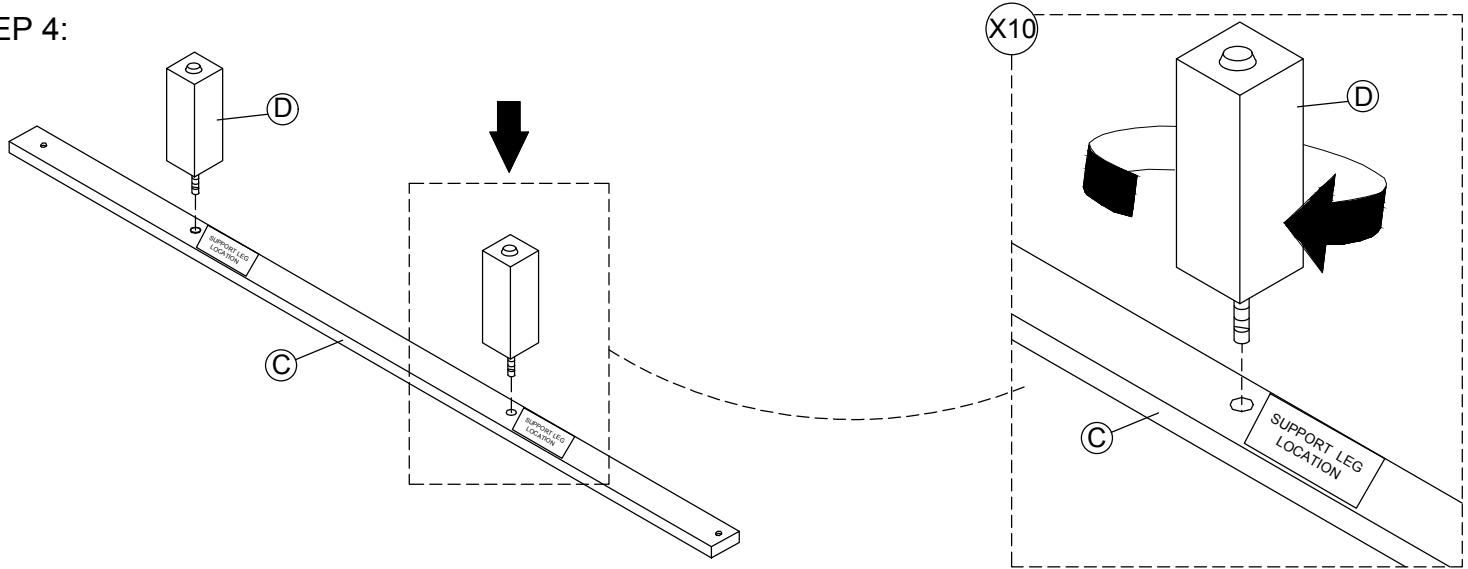

STEP 5:

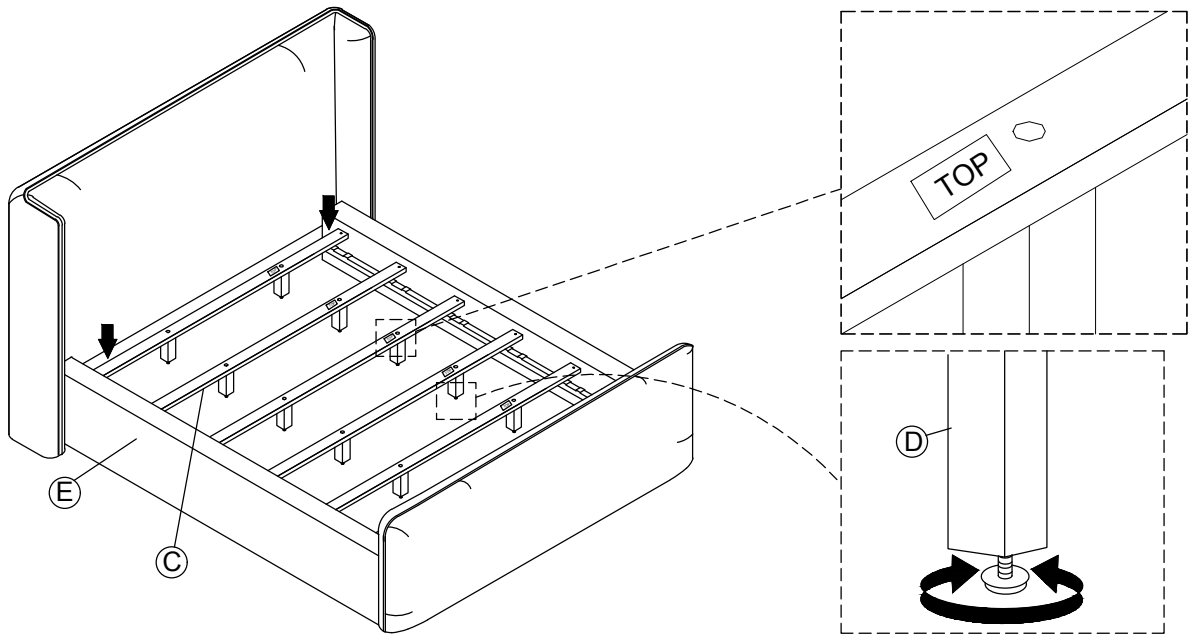


STEP 6:

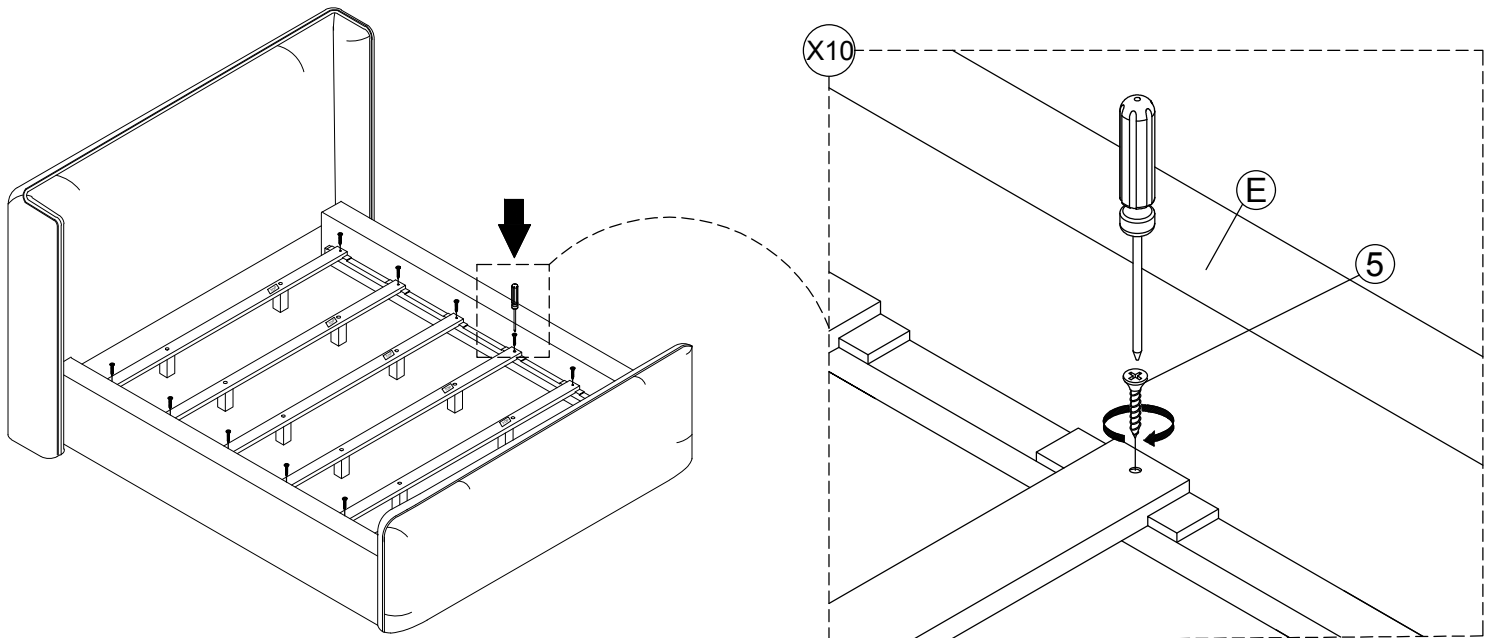

BACALL WING WOOD UPHOLSTERED C.KING/KING BED

ASSEMBLY INSTRUCTIONS

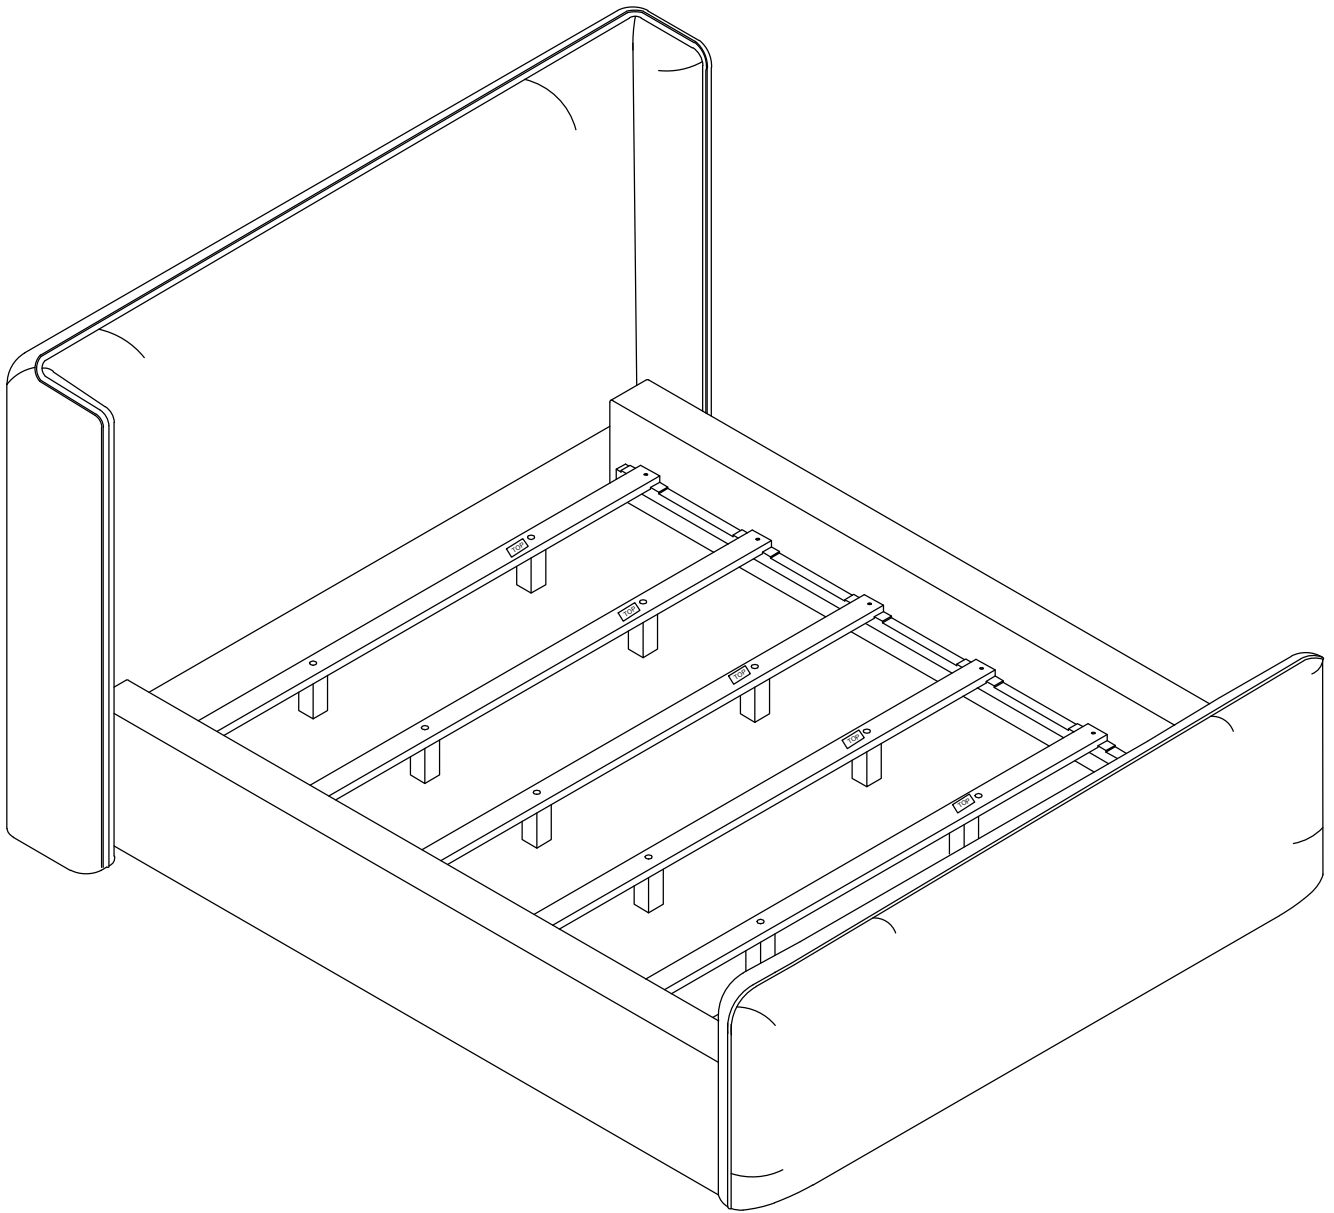


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.



MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

BACALL WING WOOD UPHOLSTERED C.KING/KING BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

C. SLAT	5 PCS
D. SUPPORT LEG	10 PCS

STEP 1 :

USE ALLEN KEY (6) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

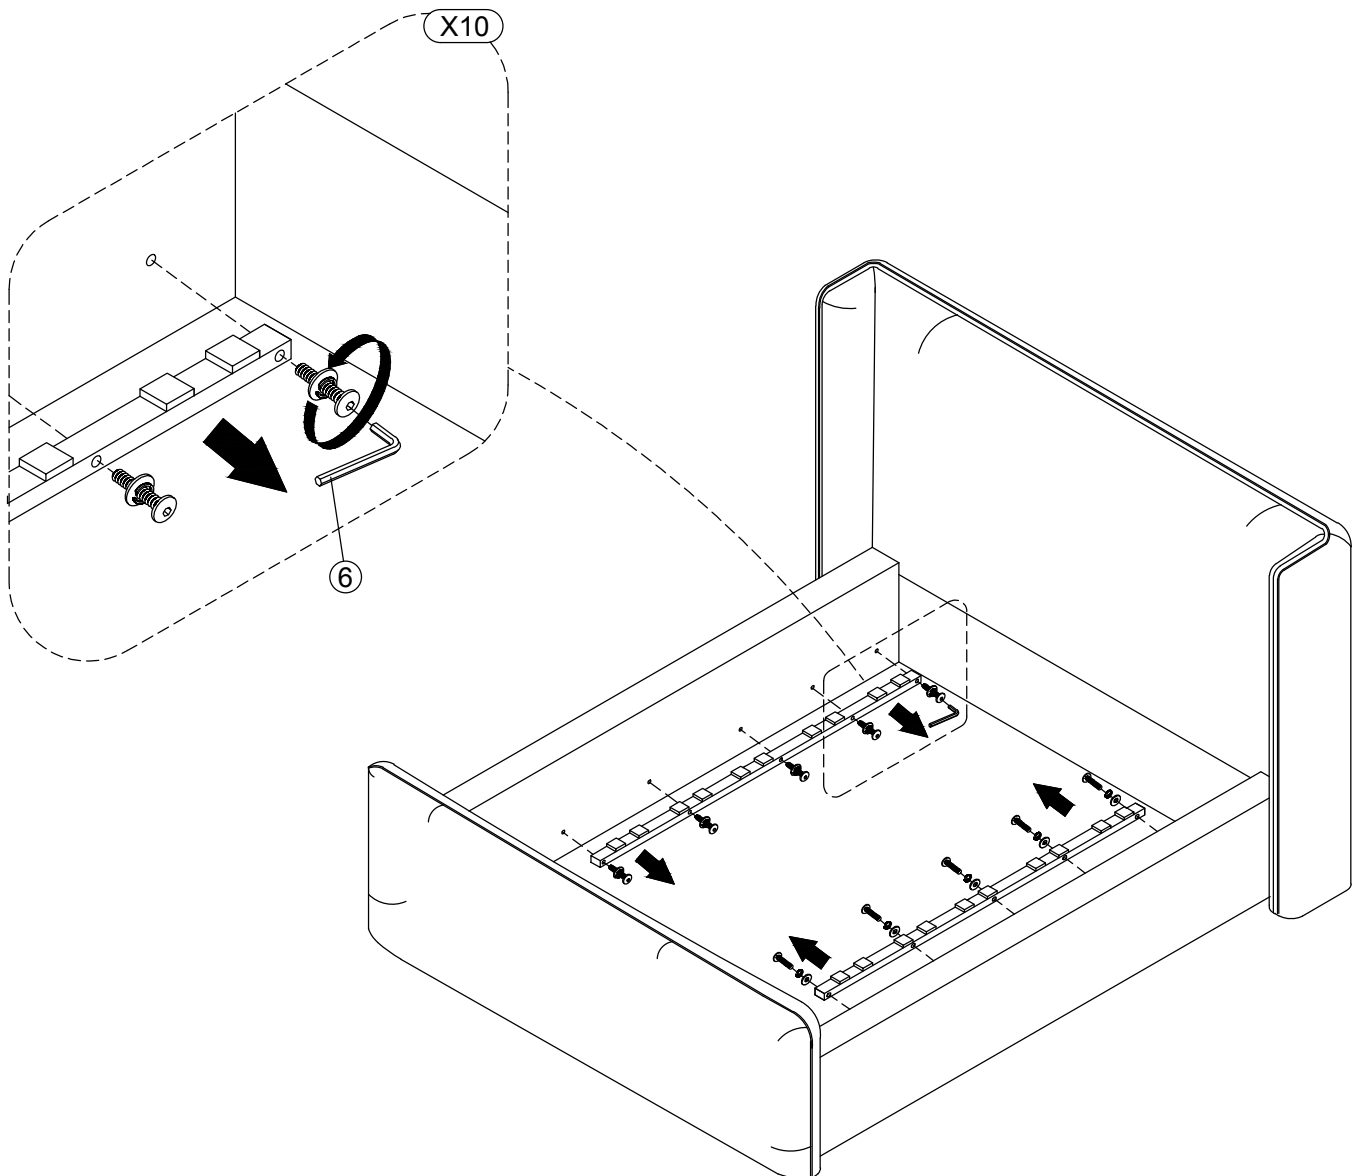

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION