


PREPARATION

1. Record your model number for future reference.
2. **DANGER: Risk of electric shock.** To avoid electric shock, the power must be turned off at the circuit breaker or fuse box before beginning the installation procedure.
3. **DANGER: Risk of electric shock.** To avoid electric shock, the outlet box must be properly grounded.
4. **Important Information.** Inspect the product for any damage. This product is for indoor use only. Observe all local codes.

Please see next page for a larger installation image

TOOLS AND MATERIALS NEEDED

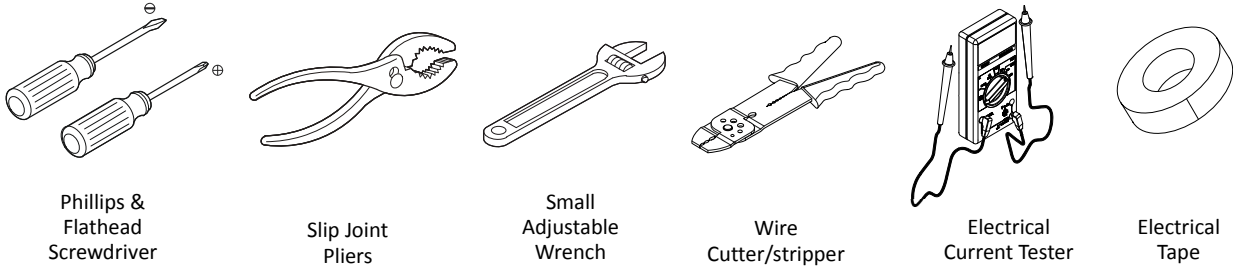

FIXTURE INSTALLATION

1. Remove the fixture and parts bag(s) from the carton. Put them onto a clean and soft cloth to protect finish. Confirm all parts are included.
2. Determine what height you want the fixture to rest at by mixing and matching the downrods (L, K, J, and I).
3. Thread wire (M) through desired downrods (L, K, J, and I). Then tighten desired rods together and attach to base (N).
4. Loosen screws (F), remove mounting plate (B) from canopy (G).
5. Thread wire (M) through decorative ring (H), canopy (G), ball joint (E), mounting plate (B). Attach ball joint (E) and decorative ring (H) onto the top downrod (shown as I).
6. Trim excess cord to minimum 13" beyond canopy (H). Strip wire to 5/8" at the end, and twist.
7. Attach mounting plate (B) onto outlet box with screws (D). Ensure ground screw (C) is attached as shown.
8. **NOTICE:** To avoid short circuit, make sure wires are not exposed. Fasten fixture green or bare ground wire to the green or bare copper wire in outlet box with wire nut (A) or fasten onto ground screw (C) on mounting plate.
9. **NOTICE:** To avoid short circuit, make sure wires are not exposed. Fasten fixture natural wire with ridges or white wire to the white wire in outlet box with wire nut (A). Wrap the wire connector with electrical tape so that the tape seals the end of wire nut (A), see diagram 1.
10. **NOTICE:** To avoid short circuit, make sure wires are not exposed. Fasten the fixture lead wire without ridges or black wire to the black wire in outlet box with wire nut (A). Wrap the wire connector with electrical tape so that the tape seals the end of wire nut (A), see diagram 1.
11. Tuck wires carefully inside outlet box. Put ball joint (E) onto canopy (G). **Please note** that the notch in canopy (G) should rest in the slot in ball joint (E). Lift fixture then attach the canopy (G) onto mount plate (B) with screws (F).
12. Remove socket ring (P) from socket. And then attach fabric shade (O) onto base (N) with socket ring (P).
13. **NOTICE:** Do not exceed recommended wattage. Rated **Max 100 W, Type A.** (Bulb(s) not included).
14. Install bulb into socket.
15. Restore power to circuit at breaker or fuse box.


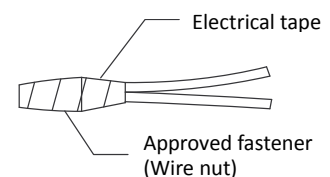


Diagram 1

CLEANING: Please clean fixture with a soft and dry cloth ONLY. Clean glass with a mild soap.

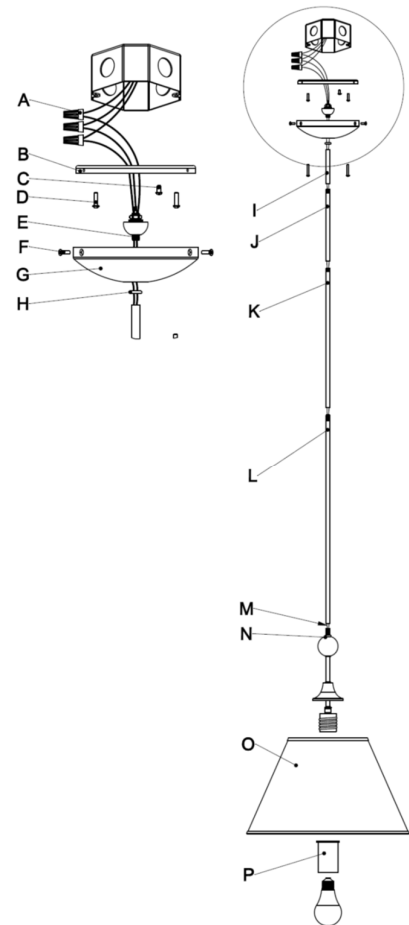