



## INSTALLATION INSTRUCTIONS




### ATTENTION:

Original portable air conditioner hose required. Please refer to the manufacturer's owner's manual for correct installation of your portable air conditioner.

Your window slider kit has been designed to fit most standard vertical and horizontal window applications. However, it may be necessary for you to modify some aspects of the installation procedures for certain types of windows. The window slider kit can be fastened with screws.

**NOTE:** If the window opening is less than the minimum length of the window slider kit, cut the end without the hole in it short enough to fit the window opening. Never cut the window kit attachment piece with the vent hose in it.


## REPLACEMENT KIT INCLUDES




2 Sealing Boards



1 Locking Pin



1 Hose (59 in.)



1 Hose Adapter

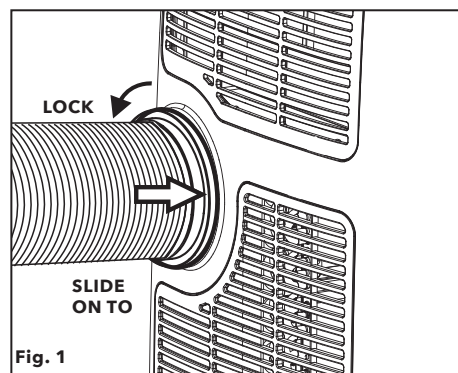


Fig. 1

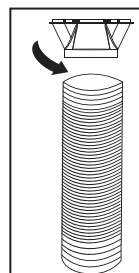


Fig. 2

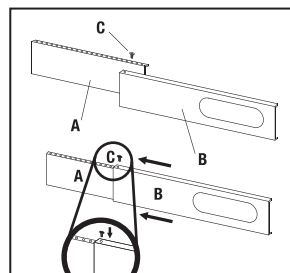


Fig. 3

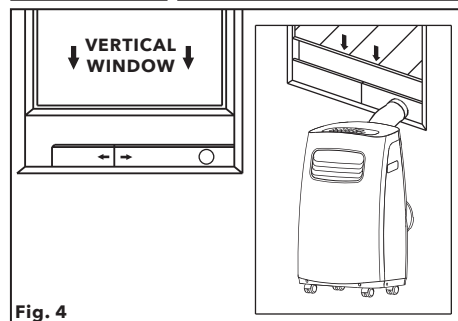


Fig. 4

## INSTALLATION INSTRUCTIONS

1. Extend either side of the hose and screw onto the hose inlet on the unit. Hose can turn clockwise or counter-clockwise depending on which end you use (Fig. 1).
2. Extend the other side of the hose and screw it on the hose outlet (Fig. 2). Attach adapter to window slider Panel B.
3. Slide panel A into B (Fig. 3) and size to window width (Fig. 4 & 5).
4. Lock the panels using the included locking pin (C).

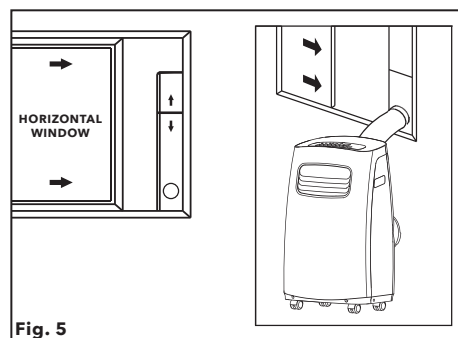


Fig. 5