


PREPARATION

1. Record your model number for future reference.
2. **DANGER: Risk of electric shock.** To avoid electric shock the electricity must be turned off at the circuit breaker or fuse box before beginning installation.
3. **DANGER: Risk of electric shock.** To avoid electric shock the outlet box must be properly grounded.
4. **Important Information.** Inspect the product for any damages. This product is for indoor use only. Observe all local codes.
5. Your product may appear different than the one illustrated. The installation procedures remain the same.

Please see next page for a larger installation image

TOOLS AND MATERIALS NEEDED

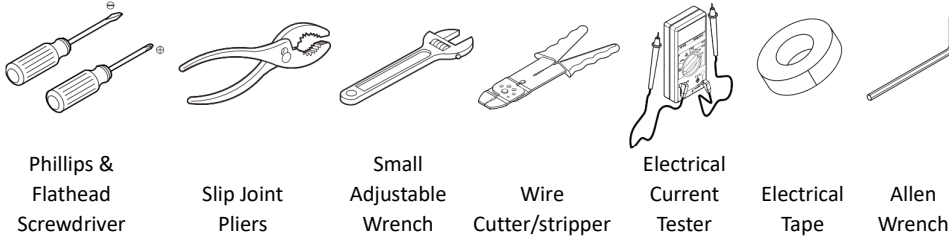

FIXTURE INSTALLATION

1. Remove the fixture and parts bag(s) from the carton. Put them onto a clean and soft cloth to protect finish. Confirm all parts are included.
2. To adjust length of cords. Loosen the set screws (E) on canopy (D) until the cord can slide, be careful not remove the set screw. Adjust length of cords to set fixtures at desired height. Pendants must be staggered in height. Then tighten set screws (E).
3. Slide safety clips (M) down to touch canopy. Do not damage the cord insulation layer.
4. Trim excess cords to minimum 6" beyond canopy (D).
 - a) Trim cloth 2" from the end.
 - b) Strip insulation 5/8" from end without cutting copper wire.
 - c) Twist each copper wire individually.
5. Attach mounting plate (B) onto outlet box with screws (C). Ensure the direction of ground screw (N) is as shown.
6. Adjust Nipple (P) so that it extends about 1-3/4" from mounting plate, secure it on mounting bar with hex nut (O).
7. **NOTICE:** To avoid short circuit, make sure wires are not exposed. Gang together three black wires from fixture and one black wire from the quick connect into a wire nut (A). Wrap the wire connector with electrical tape so that the tape seals the end of wire nut (A). Then repeat the step for the white wires from fixture and white wire from quick connect; repeat the step for the green wires from fixture and green wire from quick connect. See diagram.
8. **NOTICE:** To avoid short circuit, make sure wires are not exposed. Using the other quick connect piece, connect black wire from outlet box and black wire from the connect piece in a wire nut (A). Wrap the wire connector with electrical tape so that the tape seals the end of wire nut (A). Then repeat the step for the white wires from outlet box and white wire from quick connect; repeat the step for the green wires from outlet box and green wire from quick connect. See diagram.
9. Press together the two connectors (Q).
10. Tuck wires carefully inside outlet box. Let nipple (P) protrude the hole on canopy (D). Attach the canopy onto ceiling then secure it with nut (L).
11. **NOTICE:** Do not exceed recommended wattage. Install lamp(s). Rated **Max 60W, Type G/T/A/B.** (Bulb(s) not included).
12. Install glass (J), (G), (H) onto glass holders with screws (K), (F), (I).
13. Restore power to circuit at breaker or fuse box.

