

COLTON UPHOLSTERED QUEEN BED


ASSEMBLY INSTRUCTIONS



BOX#1

A. HEADBOARD

1 PC

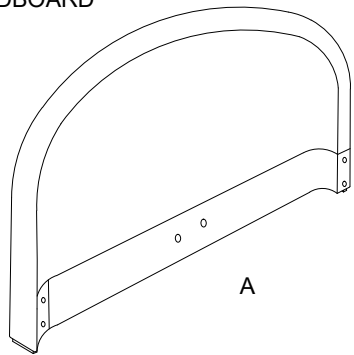

A

BOX#2

B. FOOTBOARD


1 PC

C. SLAT ROLL


1 SET

H. CENTER SLAT SUPPORT CLEAT

2 PCS

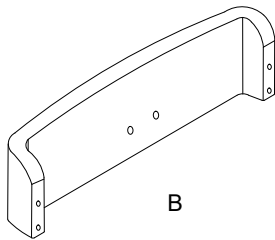

B

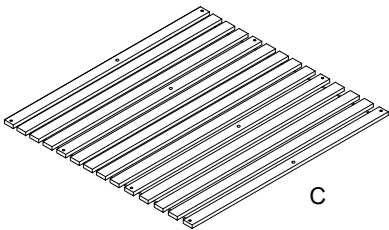

C



H

BOX#3

D. RIGHT SIDE RAIL

1 PC

E. LEFT SIDE RAIL


1 PC

F. CENTER SLAT SUPPORT


1 PC

G. SUPPORT LEG


4 PCS

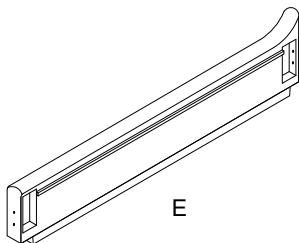

E

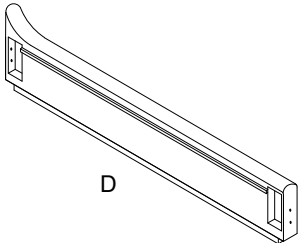

D

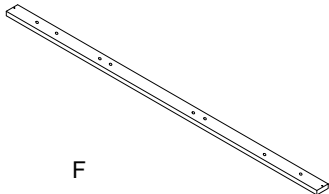

F






G

HARDWARE KIT PACKED IN BOX #2

No.	Description	Image	Quantity
1	THREADED BOLT (8 x 90mm)		8 PCS
2	ALLEN BOLT (6 x 50mm)		4 PCS
3	ALLEN BOLT (6 x 30mm)		4 PCS
4	FLAT WASHER (8 x 22mm)		8 PCS
5	FLAT WASHER (6 x 16mm)		8 PCS
6	LOCK WASHER (8 x 22mm)		8 PCS
7	LOCK WASHER (6 x 16mm)		8 PCS
8	HEX NUT (8mm)		8 PCS
9	PHILLIPS SCREW (7 x 35mm)		10 PCS
10	ALLEN KEY (6mm)		1 PC
11	WRENCH		1 PC
12	CONNECTING BRACKET		4 PCS


FULLY ASSEMBLED

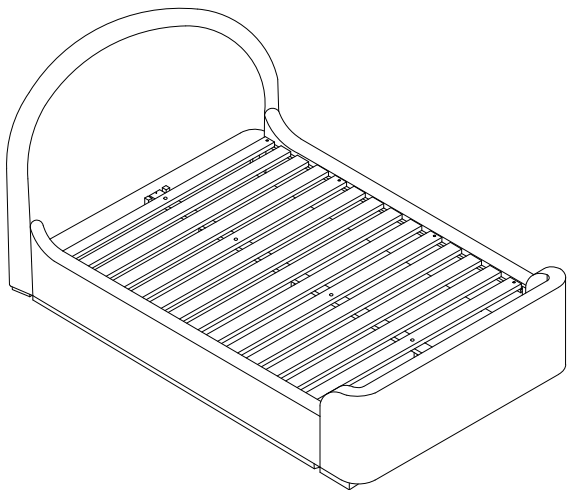


COLTON UPHOLSTERED QUEEN BED

ASSEMBLY INSTRUCTIONS


STEP 1:

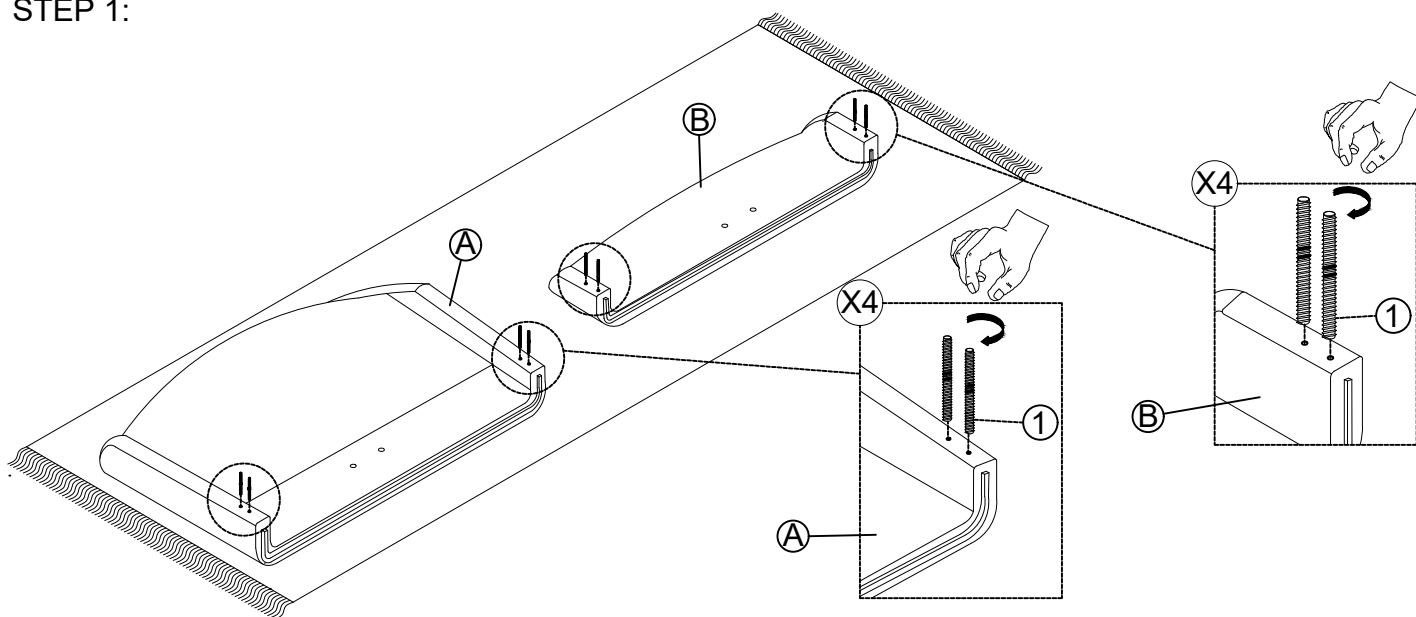

STEP 2:

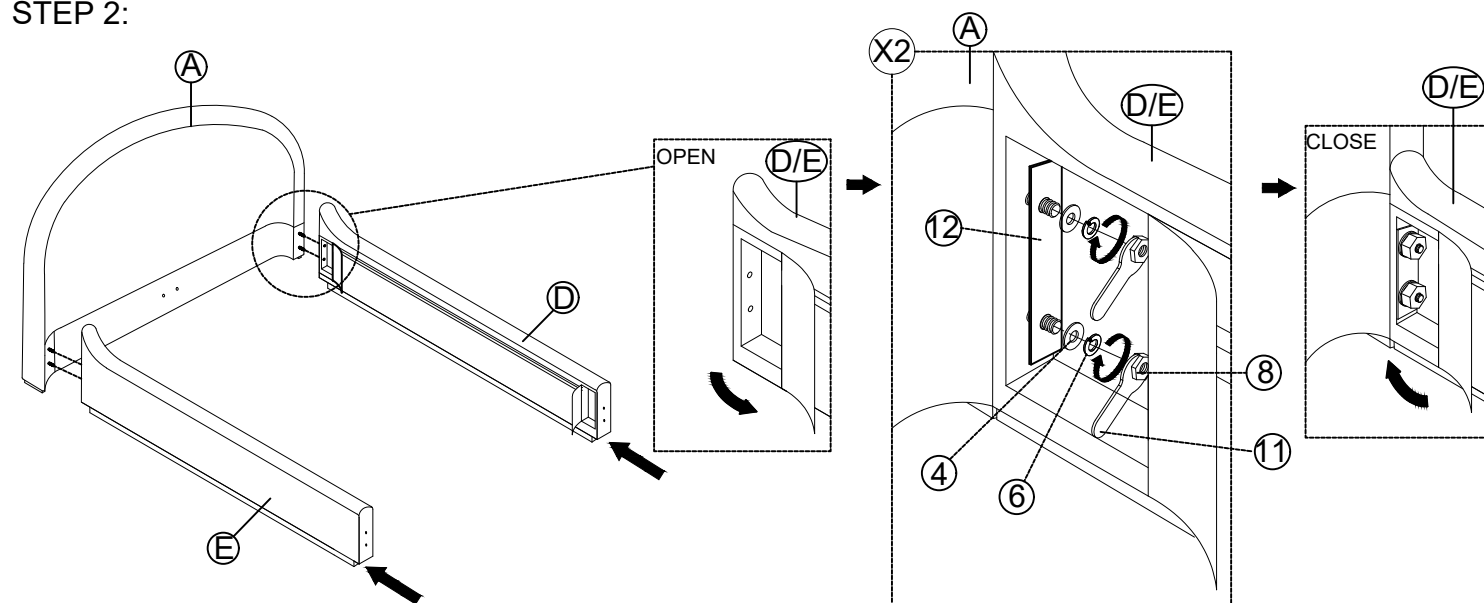

STEP 3:

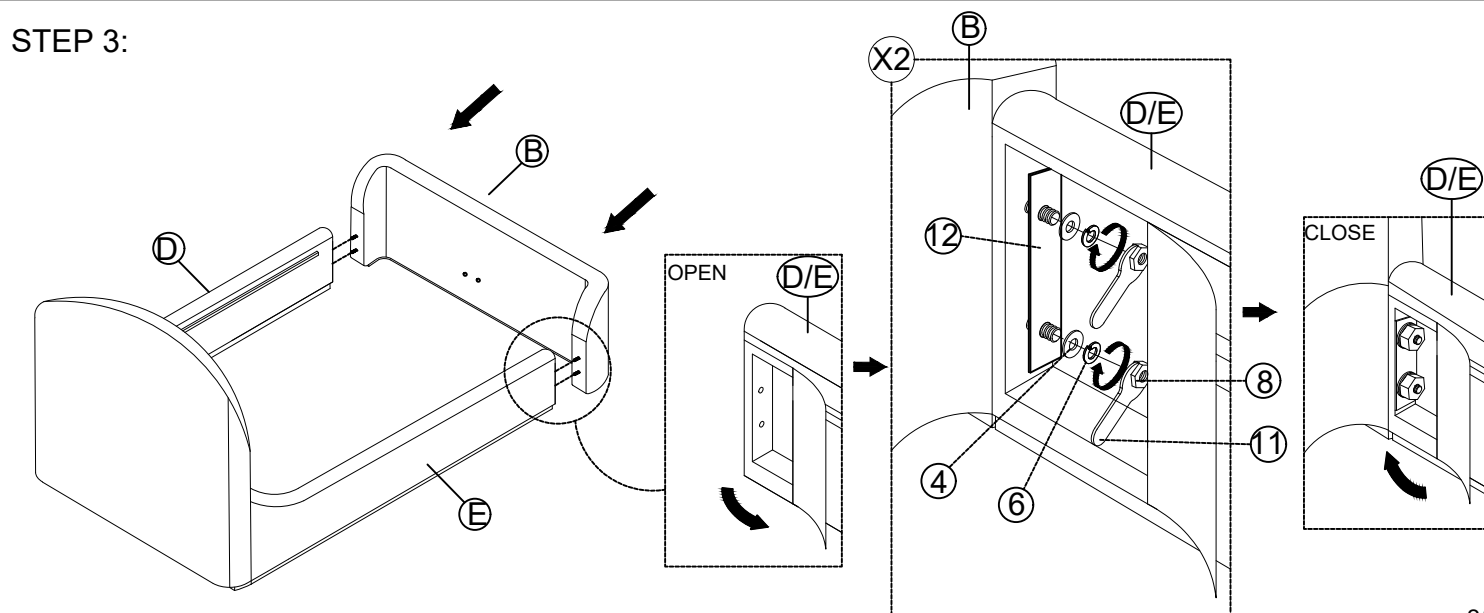

COLTON UPHOLSTERED QUEEN BED


ASSEMBLY INSTRUCTIONS




STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 4~8 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 4.


STEP 4:

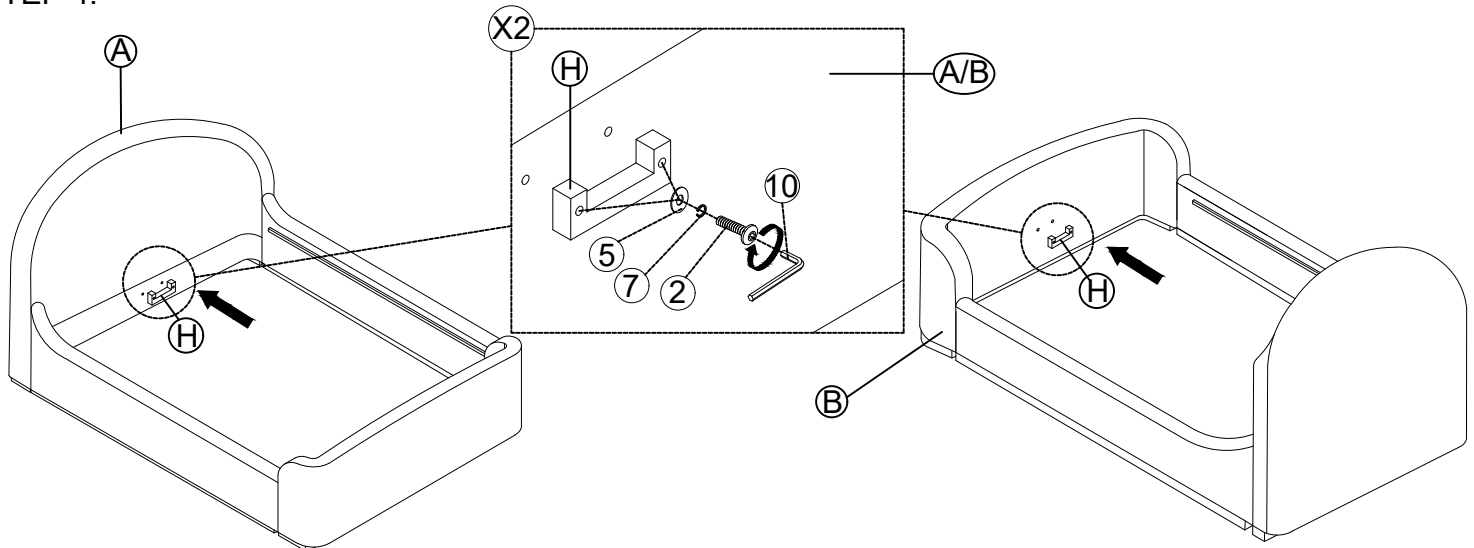

STEP 5:

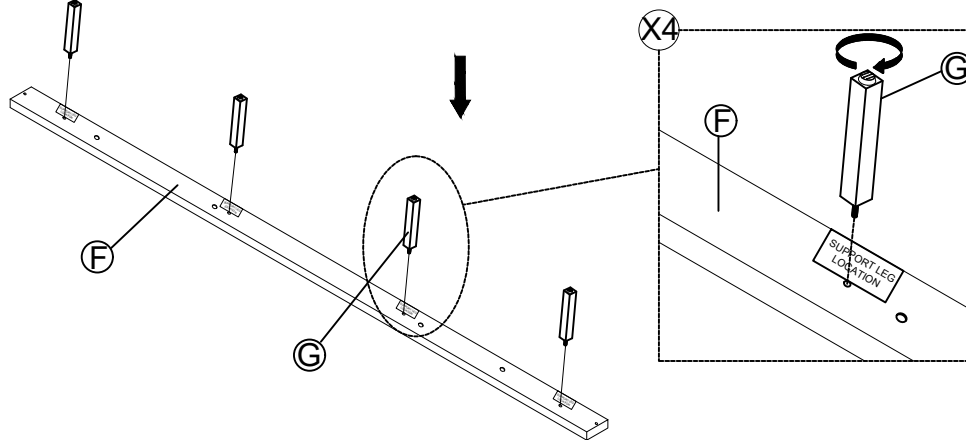

STEP 6:

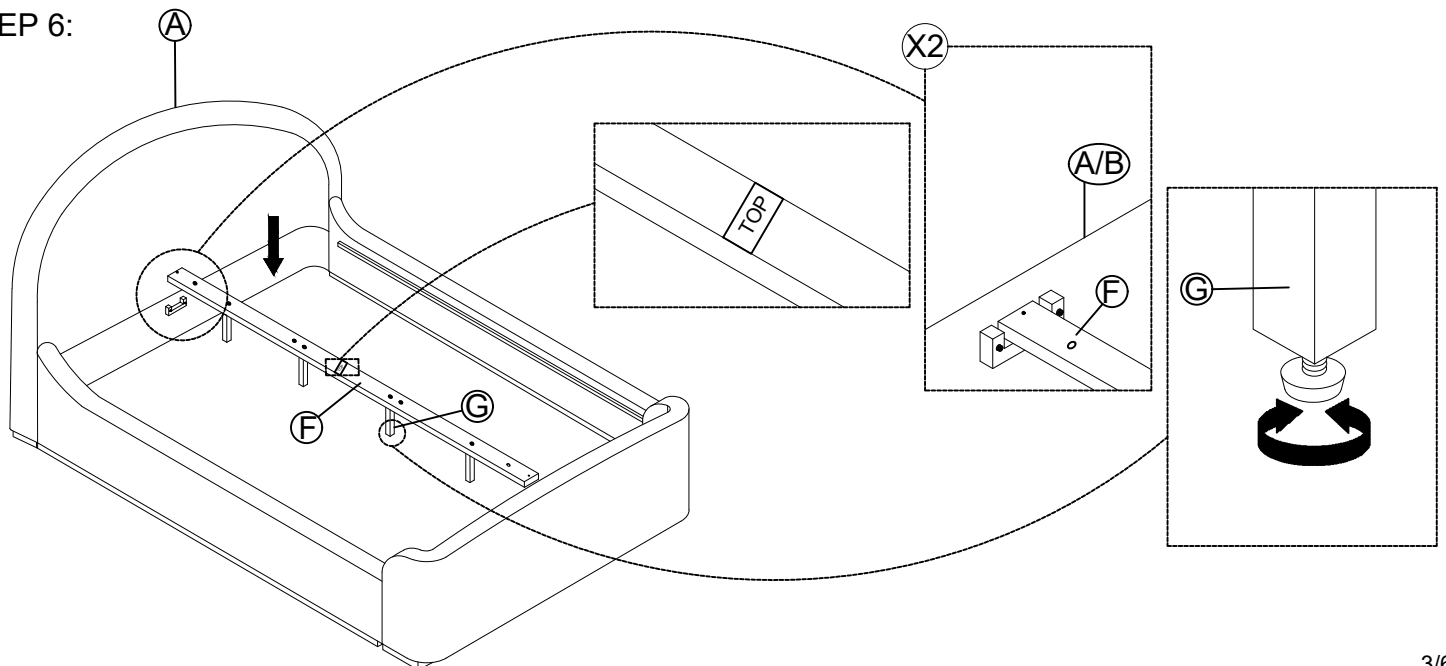


MODUS
FURNITURE

8:

The diagram illustrates the assembly of a bed frame. The main view shows a bed frame with a curved headboard and footboard, and a set of slats being inserted. Two circular callouts provide detailed views of the slat installation. The left callout shows a slat being secured with a screw (9) and a washer (A/B) into a pre-drilled hole in the frame. The right callout shows a slat being secured with a screw (9) and a washer (D/E) into a pre-drilled hole in the frame. The slats are labeled C.

COLTON UPHOLSTERED QUEEN BED

ASSEMBLY INSTRUCTIONS

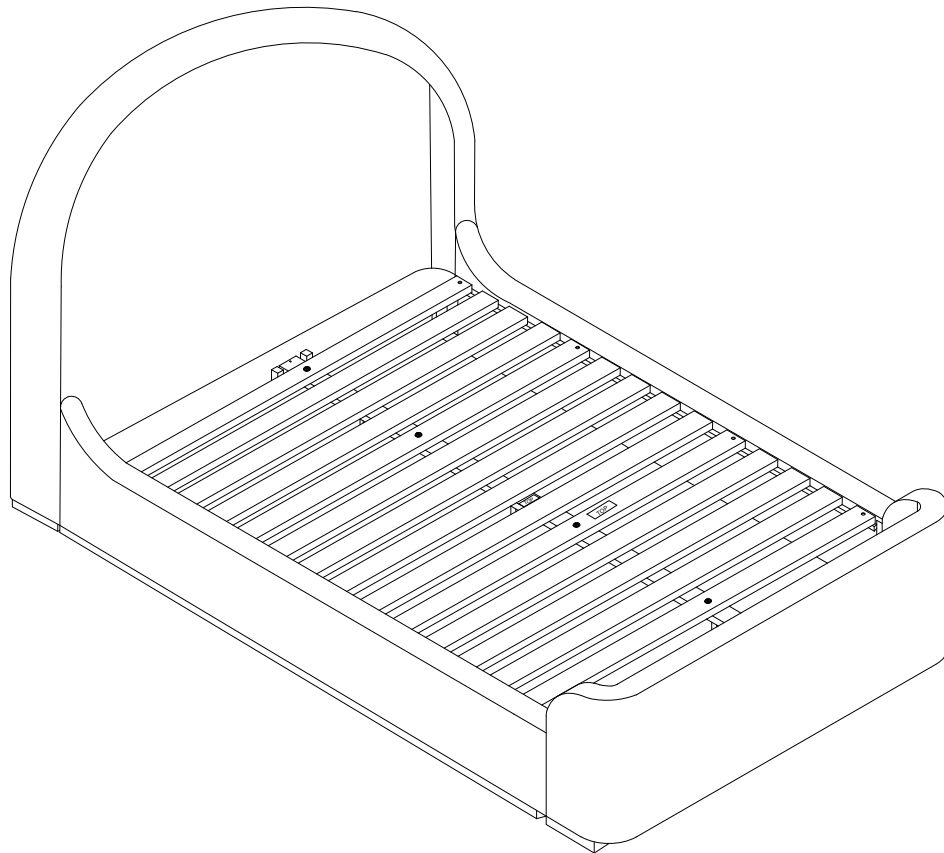


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.



MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

COLTON UPHOLSTERED QUEEN BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

C. SLAT ROLL	1 SET
F. CENTER SLAT SUPPORT	1 PC
G. SUPPORT LEG	4 PCS
H. CENTER SLAT SUPPORT CLEAT	2 PCS

STEP 1:

USE ALLEN KEY (10) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

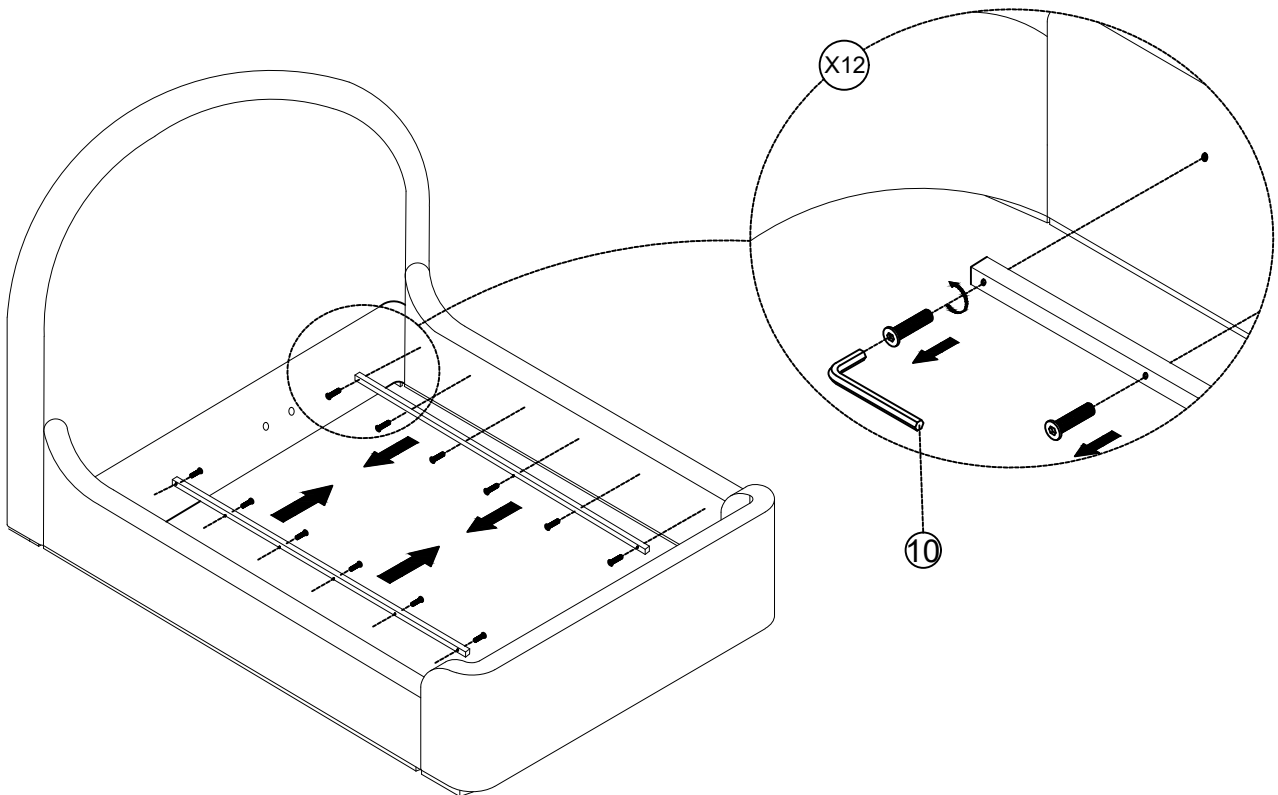

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION

COLTON UPHOLSTERED KING BED


ASSEMBLY INSTRUCTIONS



BOX#1

A. HEADBOARD

1 PC

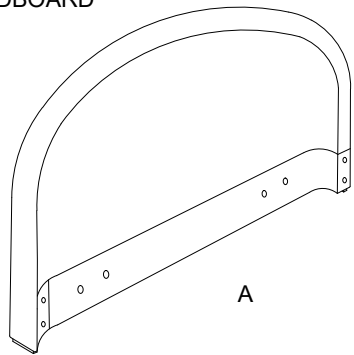

A

BOX#2

B. FOOTBOARD


1 PC

C. SLAT ROLL


1 SET

H. CENTER SLAT SUPPORT CLEAT

4 PCS

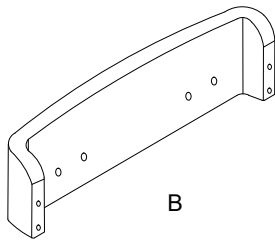

B

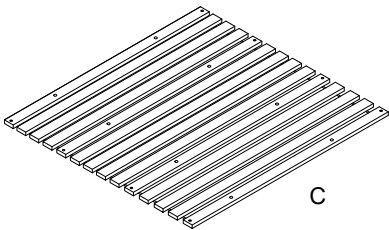

C



H

BOX#3

D. RIGHT SIDE RAIL

1 PC

E. LEFT SIDE RAIL


1 PC

F. CENTER SLAT SUPPORT


2 PCS

G. SUPPORT LEG


8 PCS

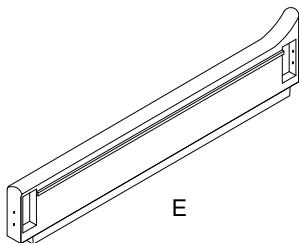

E

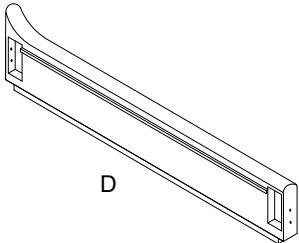

D

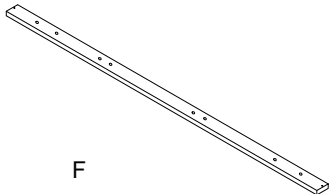

F






G

HARDWARE KIT PACKED IN BOX #2

No.	Description	Image	Quantity
1	THREADED BOLT (8 x 90mm)		8 PCS
2	ALLEN BOLT (6 x 50mm)		8 PCS
3	ALLEN BOLT (6 x 30mm)		8 PCS
4	FLAT WASHER (8 x 22mm)		8 PCS
5	FLAT WASHER (6 x 16mm)		16 PCS
6	LOCK WASHER (8 x 22mm)		8 PCS
7	LOCK WASHER (6 x 16mm)		16 PCS
8	HEX NUT (8mm)		8 PCS
9	PHILLIPS SCREW (7 x 35mm)		12 PCS
10	ALLEN KEY (6mm)		1 PC
11	WRENCH		1 PC
12	CONNECTING BRACKET		4 PCS

FULLY ASSEMBLED

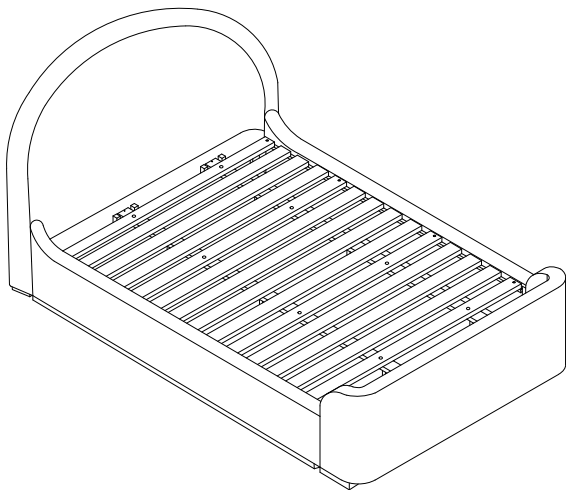


COLTON UPHOLSTERED KING BED


ASSEMBLY INSTRUCTIONS




STEP 1:

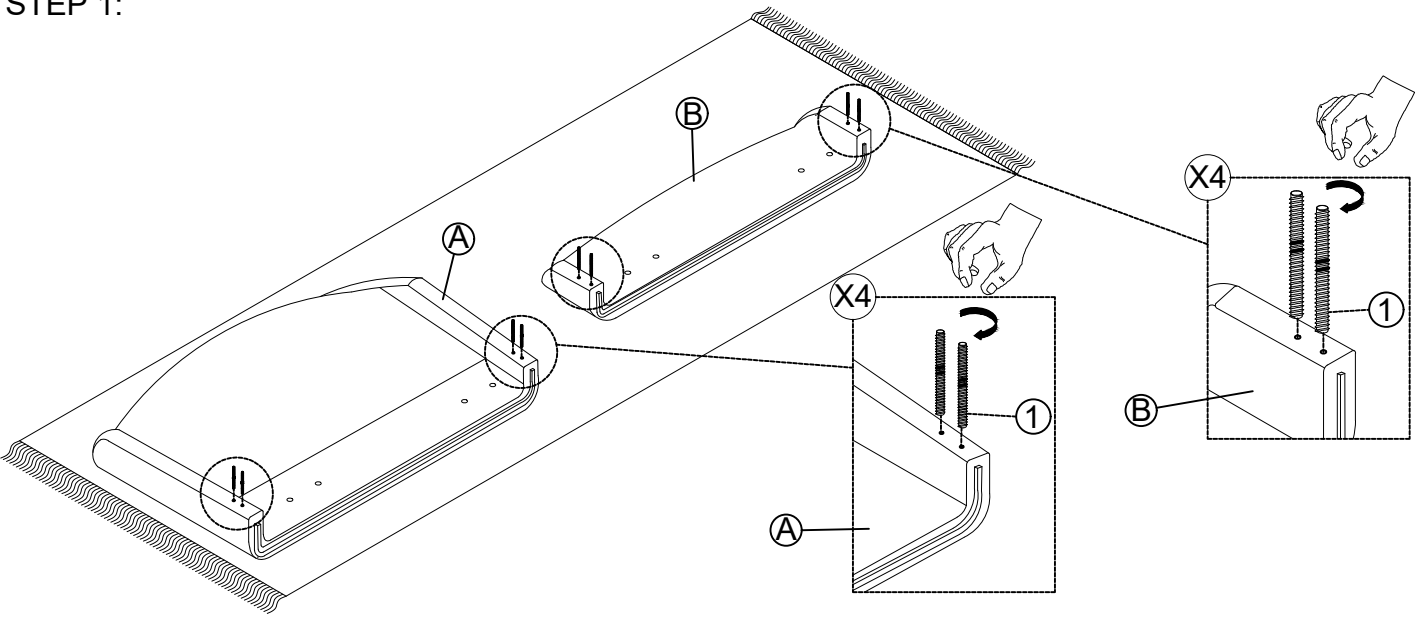

STEP 2:

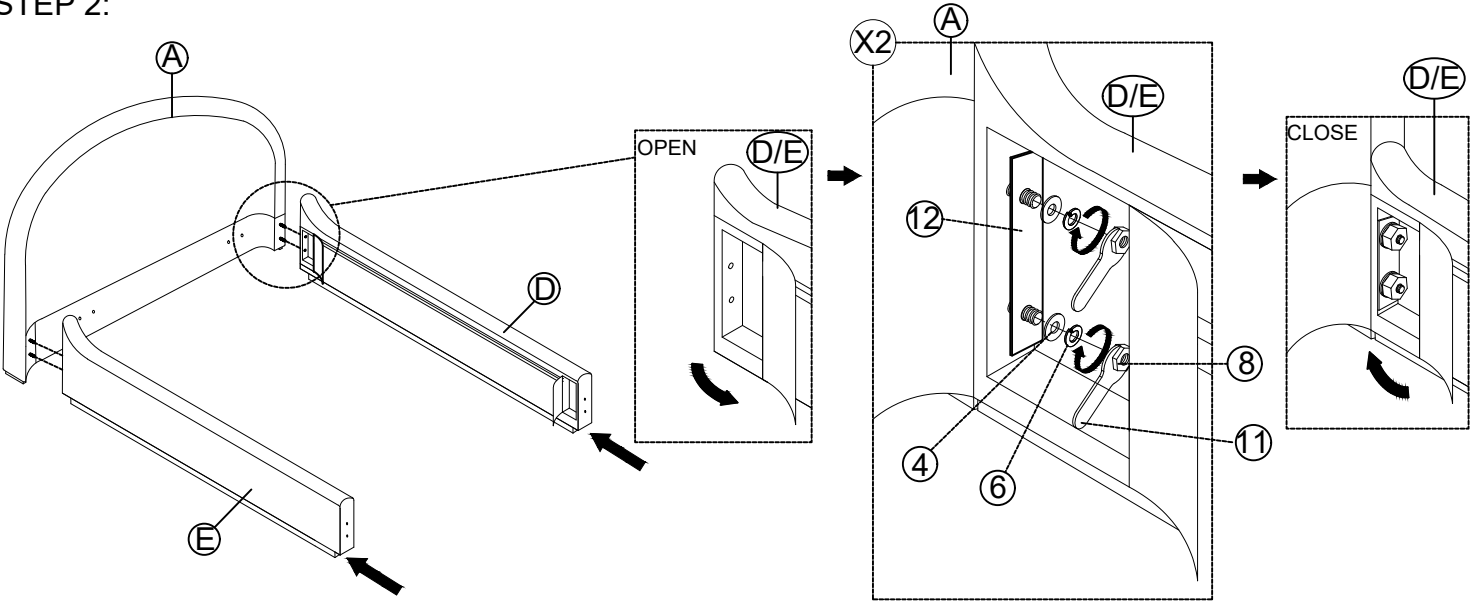

STEP 3:

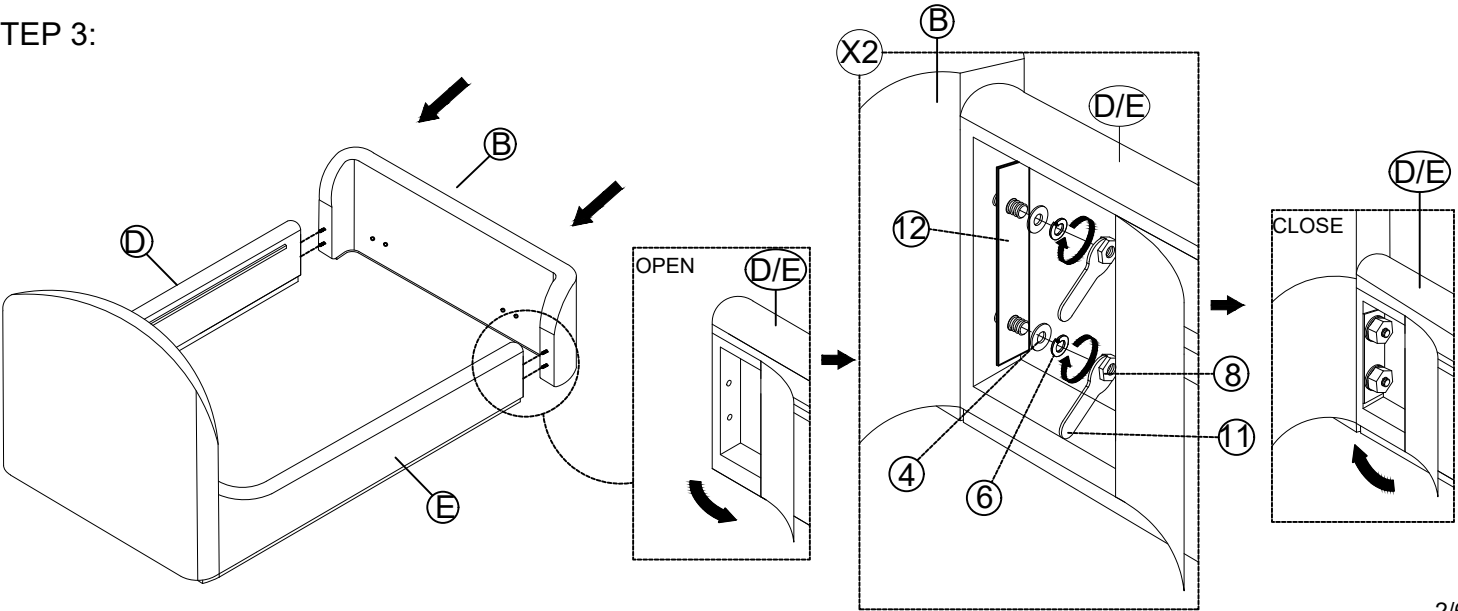

COLTON UPHOLSTERED KING BED


ASSEMBLY INSTRUCTIONS




STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 4~8 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 4.


STEP 4:

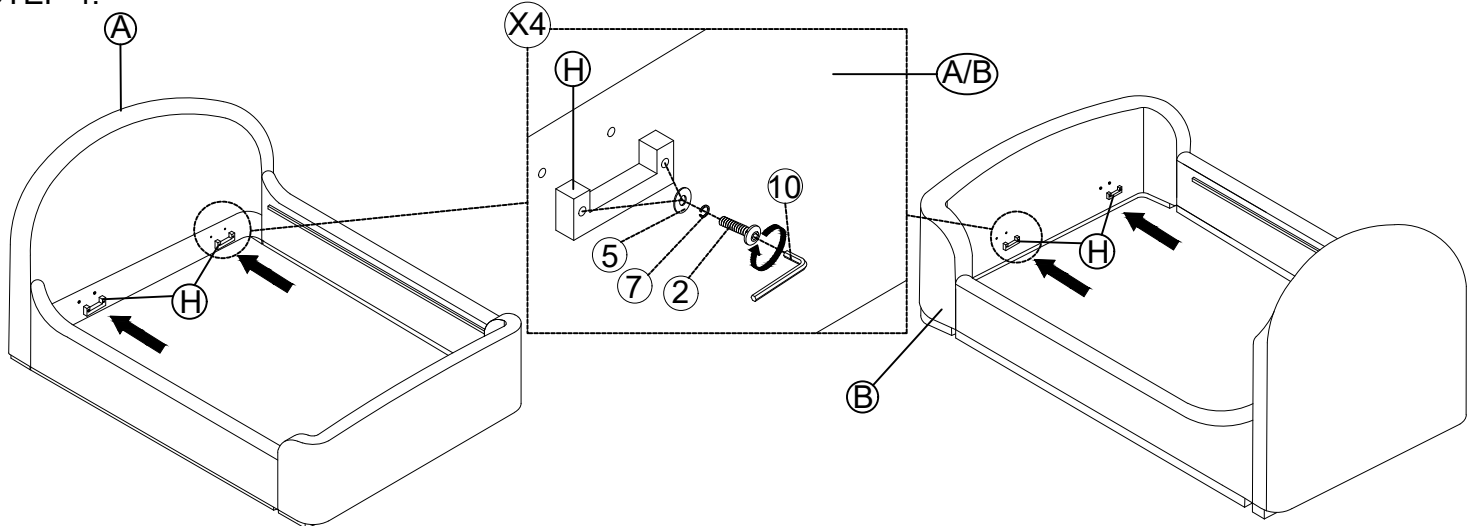

STEP 5:

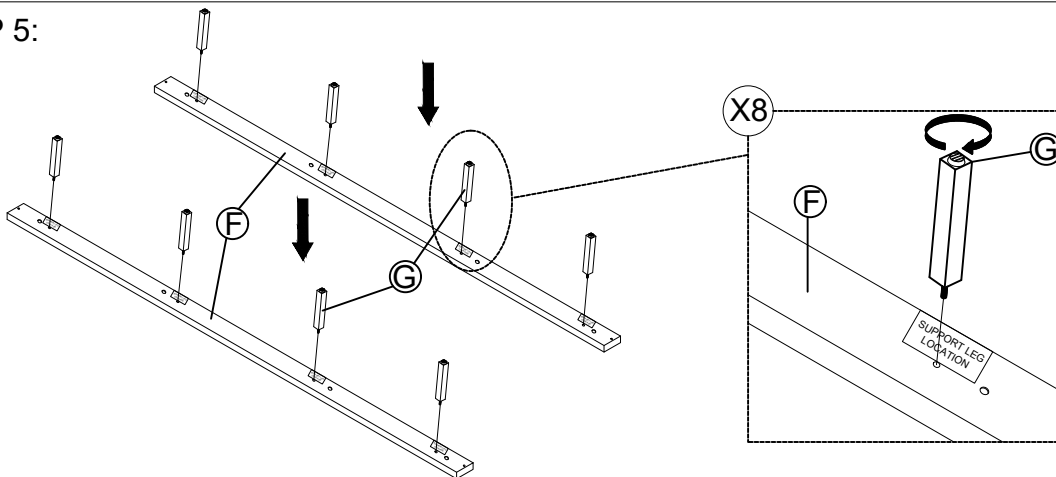

STEP 6:

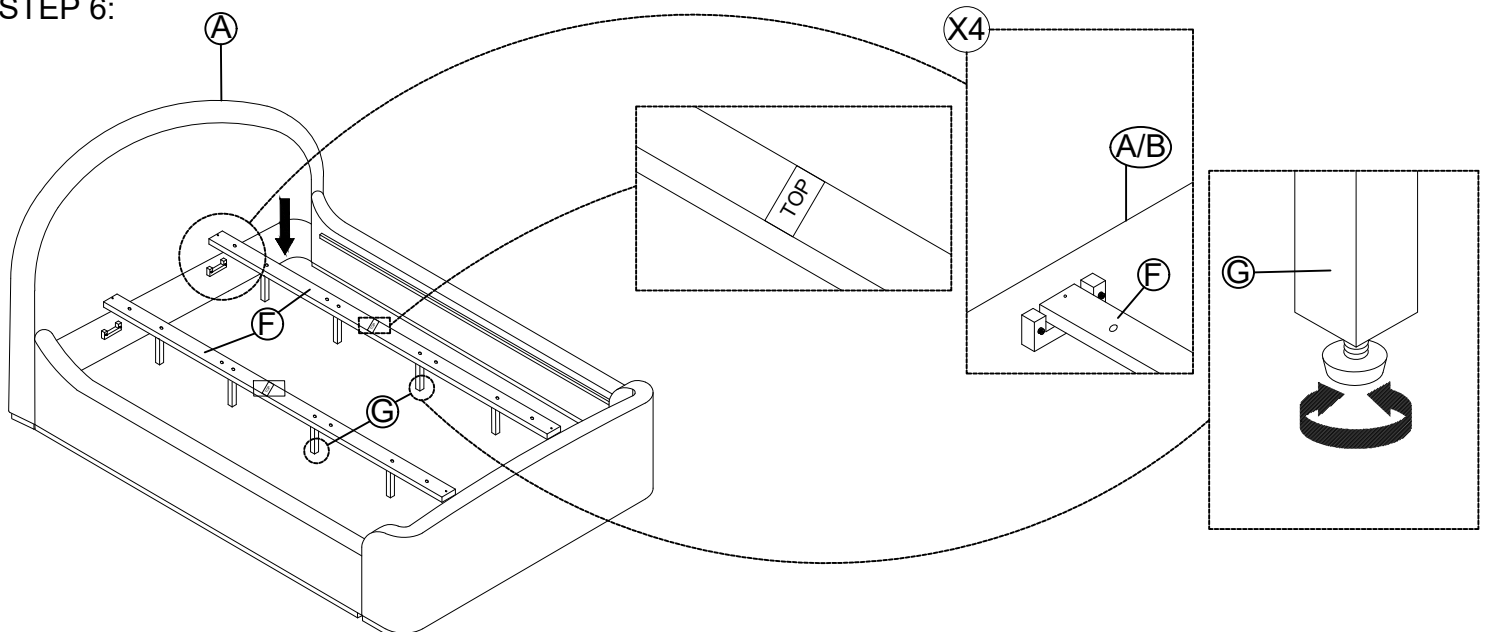


COLTON UPHOLSTERED KING BED


ASSEMBLY INSTRUCTIONS



STEP 7:

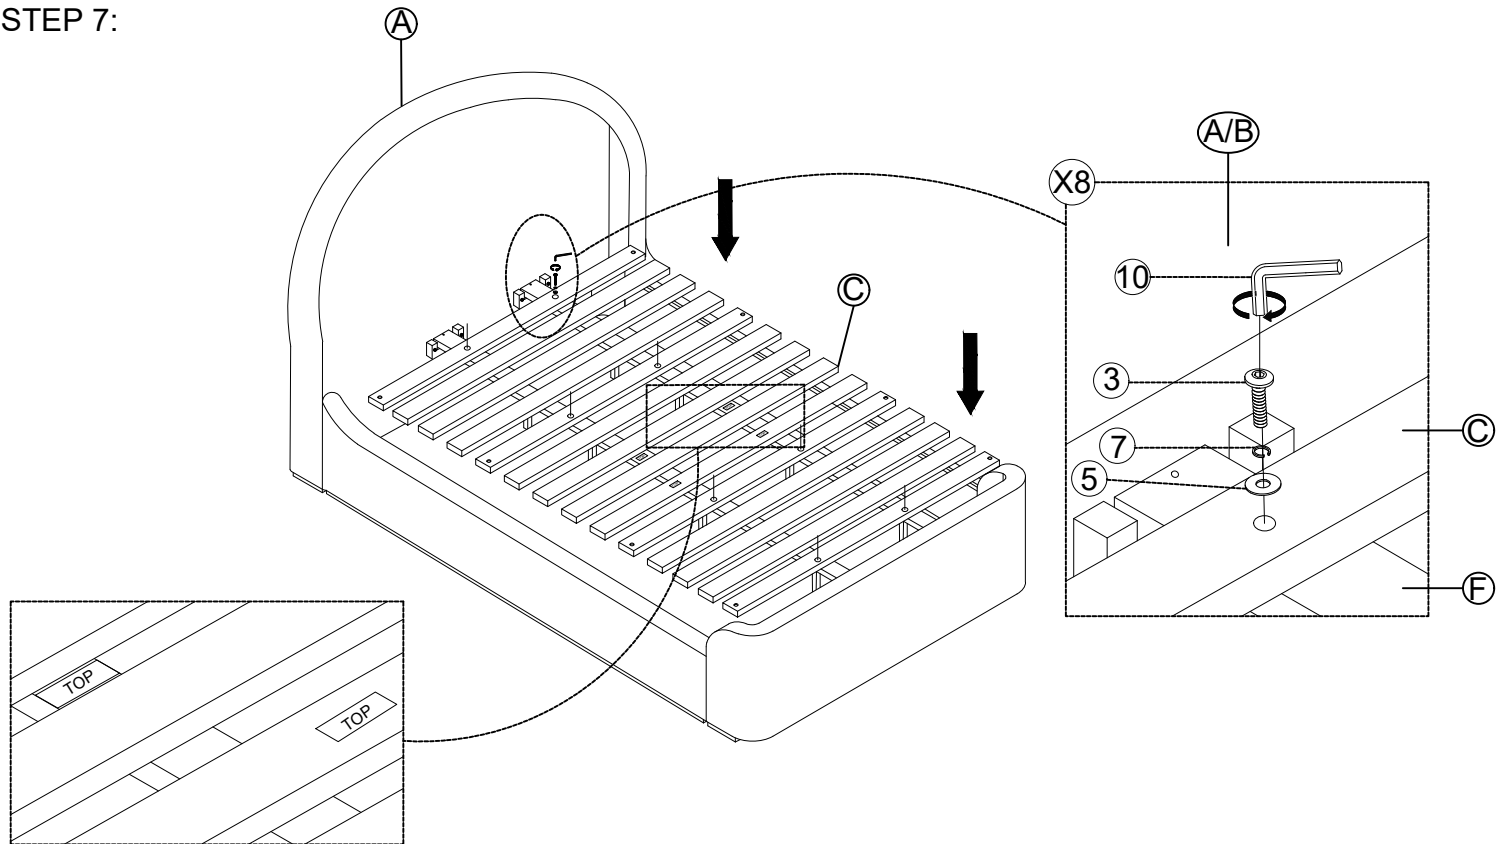


STEP 8:

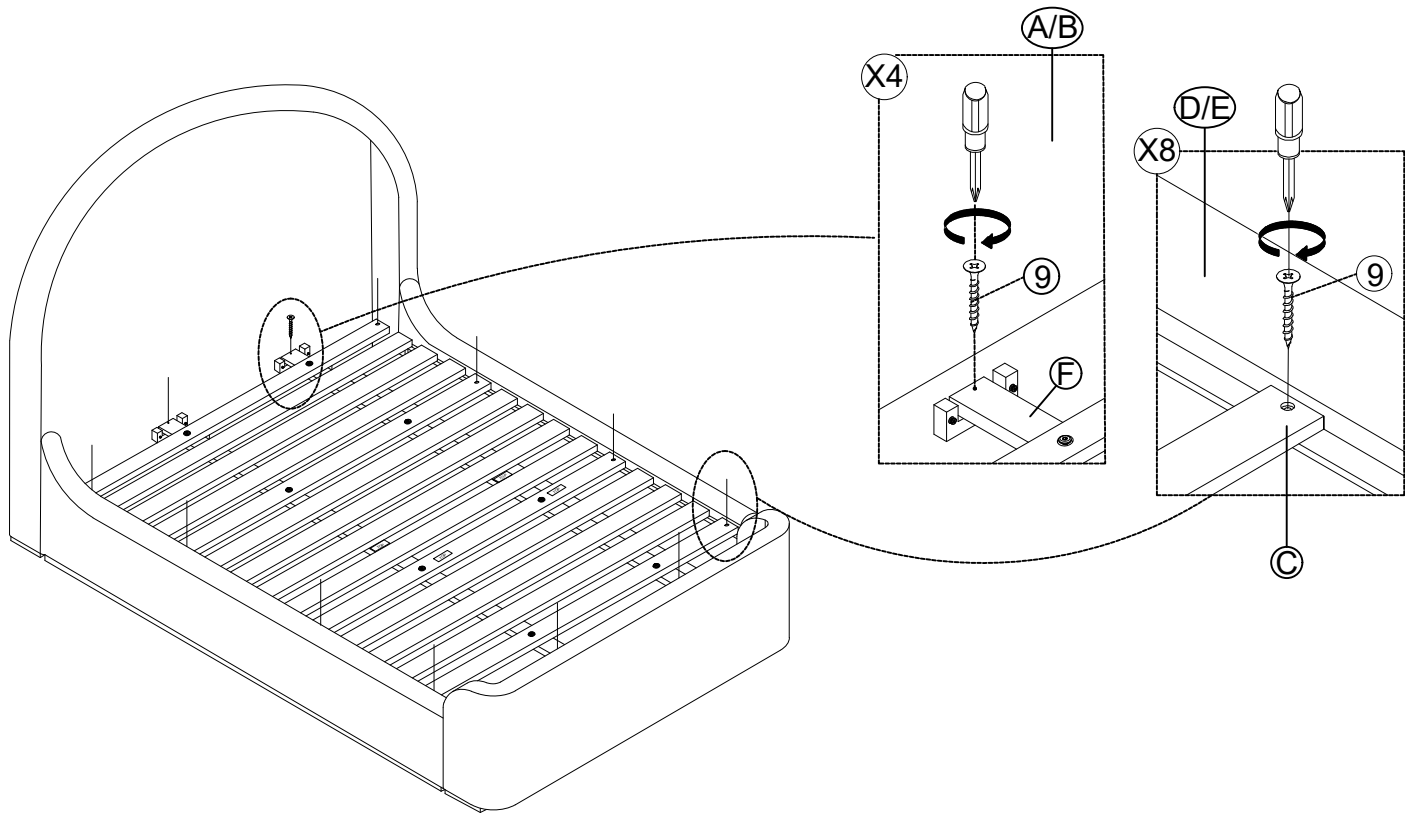

COLTON UPHOLSTERED KING BED

ASSEMBLY INSTRUCTIONS

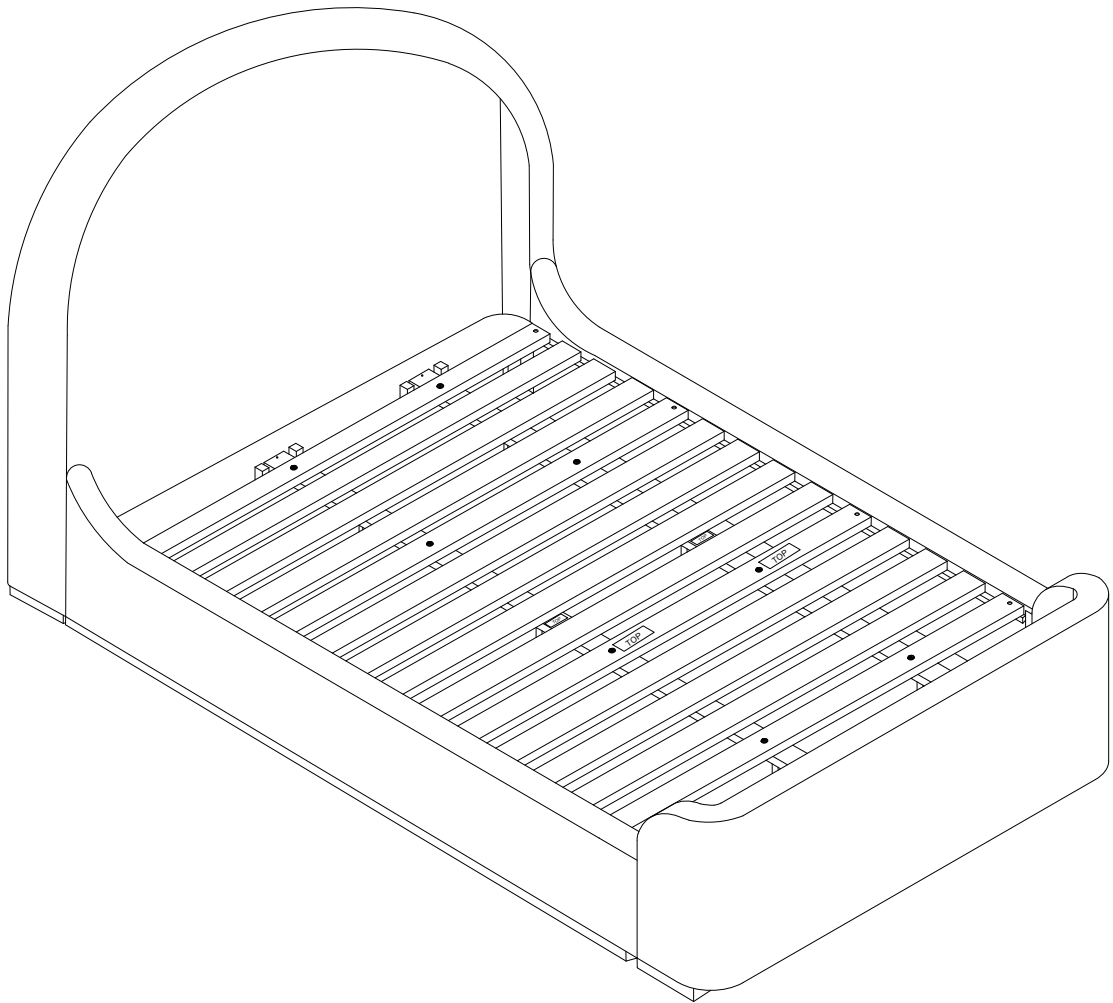


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.



MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

COLTON UPHOLSTERED KING BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

C. SLAT ROLL	1 SET
F. CENTER SLAT SUPPORT	2 PCS
G. SUPPORT LEG	8 PCS
H. CENTER SLAT SUPPORT CLEAT	4 PCS

STEP 1:

USE ALLEN KEY (10) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

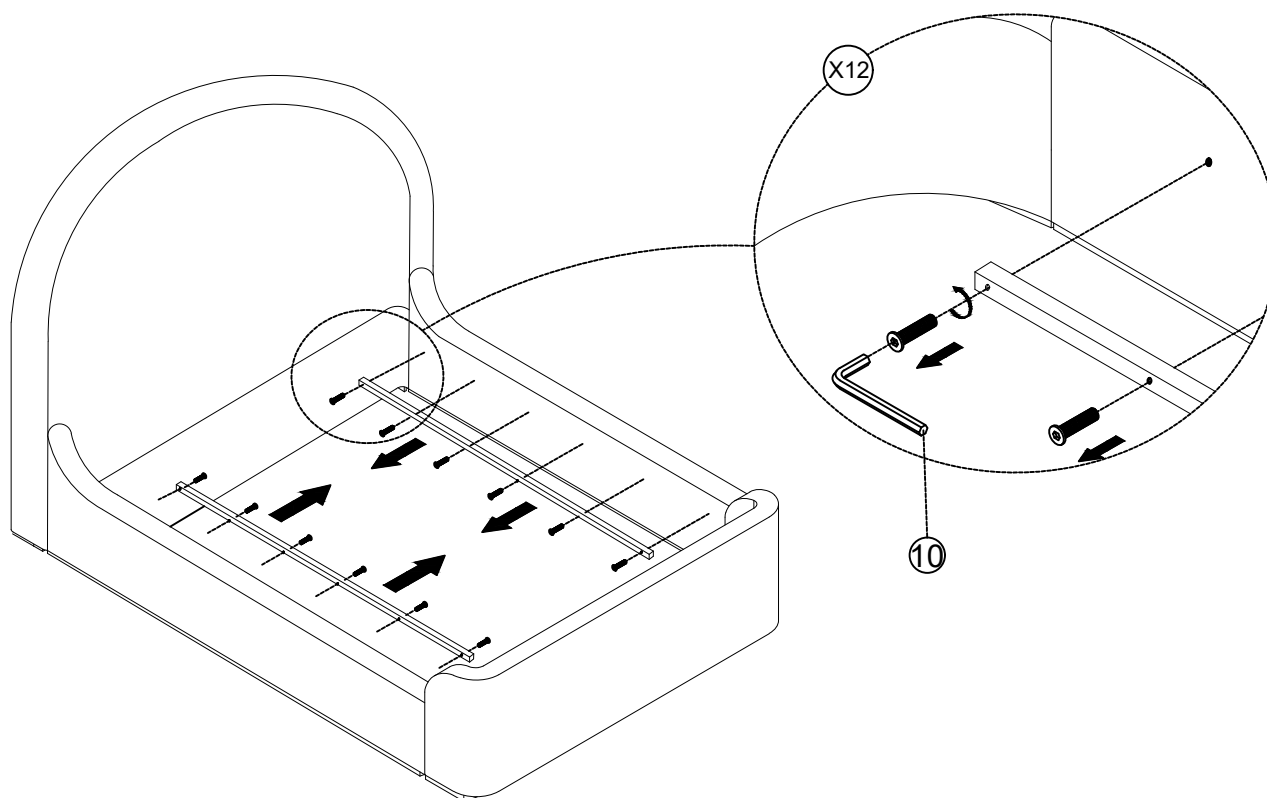

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION

COLTON UPHOLSTERED C.KING BED


ASSEMBLY INSTRUCTIONS



BOX#1

A. HEADBOARD

1 PC

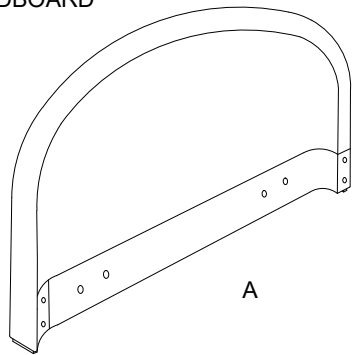

A

HARDWARE KIT PACKED IN BOX #2

No.	Description	Image	Quantity
1	THREADED BOLT (8 x 90mm)		8 PCS
2	ALLEN BOLT (6 x 50mm)		8 PCS
3	ALLEN BOLT (6 x 30mm)		6 PCS
4	FLAT WASHER (8 x 22mm)		8 PCS
5	FLAT WASHER (6 x 16mm)		14 PCS
6	LOCK WASHER (8 x 22mm)		8 PCS
7	LOCK WASHER (6 x 16mm)		14 PCS
8	HEX NUT (8mm)		8 PCS
9	PHILLIPS SCREW (7 x 35mm)		10 PCS
10	ALLEN KEY (6mm)		1 PC
11	WRENCH		1 PC
12	CONNECTING BRACKET		4 PCS

BOX#2

B. FOOTBOARD


1 PC

C. SLAT ROLL


1 SET

H. CENTER SLAT SUPPORT CLEAT

4 PCS

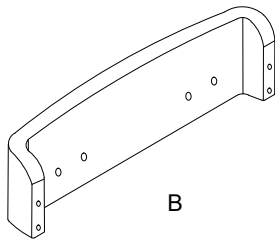

B

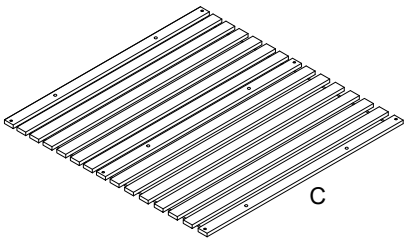

C



H

BOX#3

D. RIGHT SIDE RAIL

1 PC

E. LEFT SIDE RAIL


1 PC

F. CENTER SLAT SUPPORT


2 PCS

G. SUPPORT LEG


8 PCS

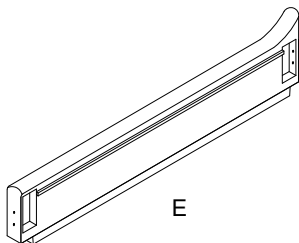

E

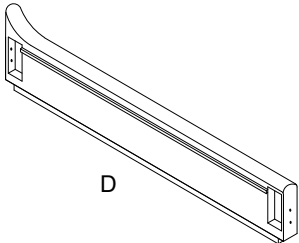

D



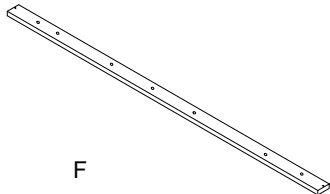


F



G

FULLY ASSEMBLED

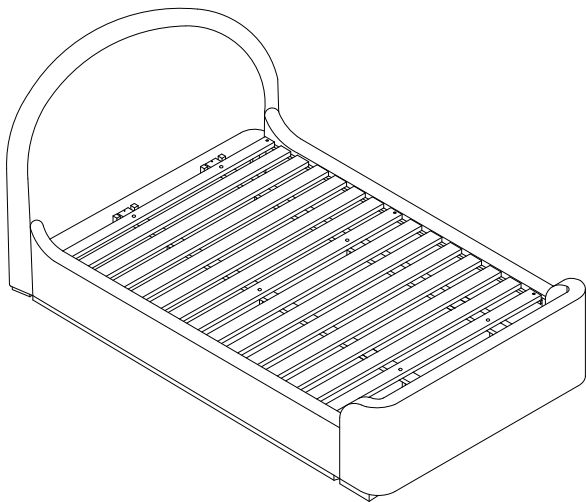


COLTON UPHOLSTERED C.KING BED


ASSEMBLY INSTRUCTIONS




STEP 1:

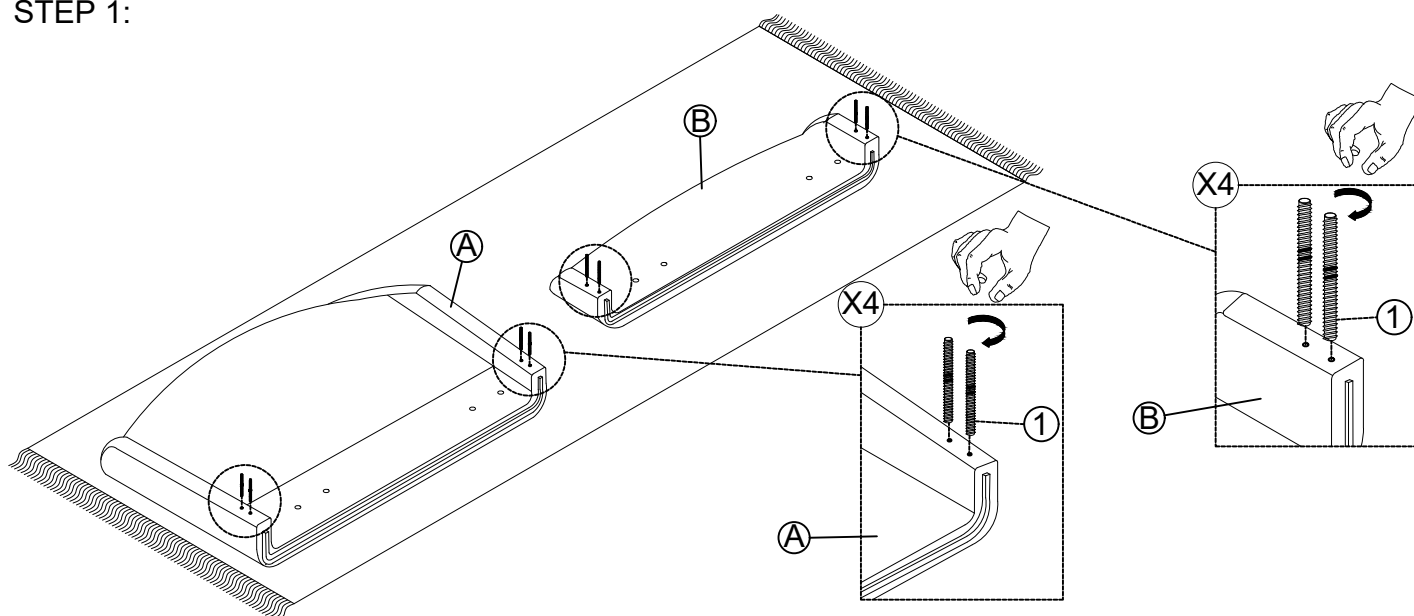

STEP 2:

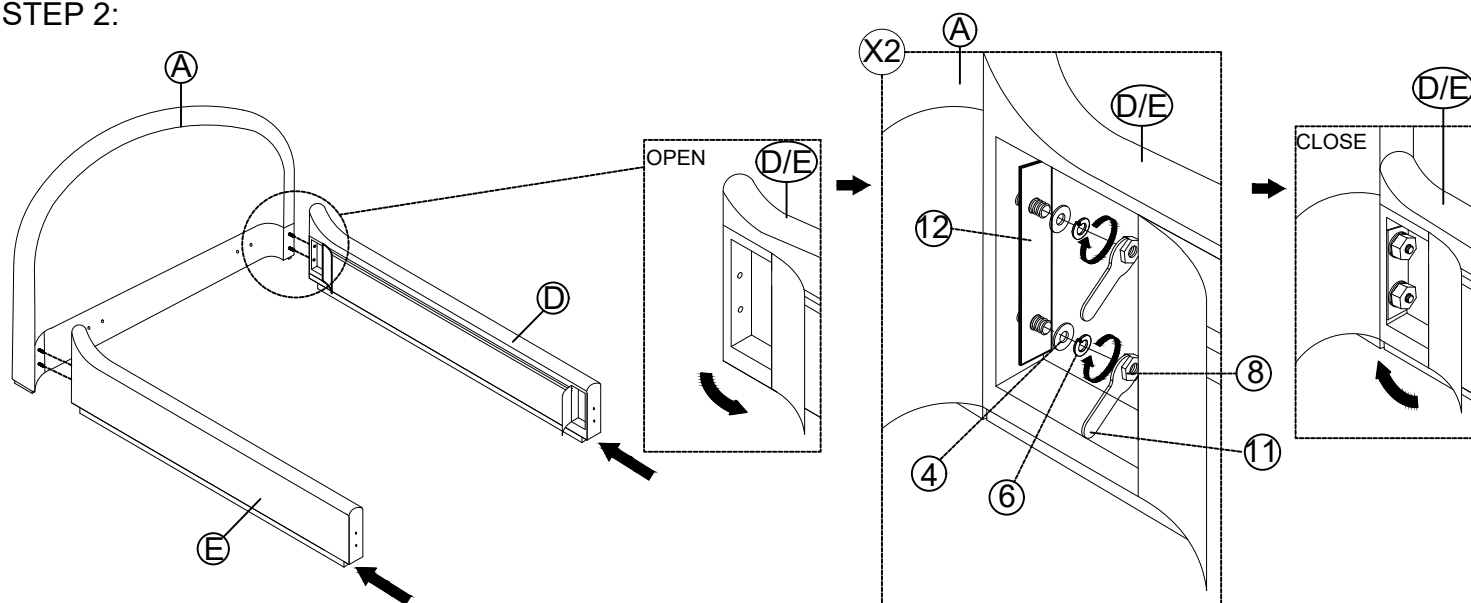

STEP 3:

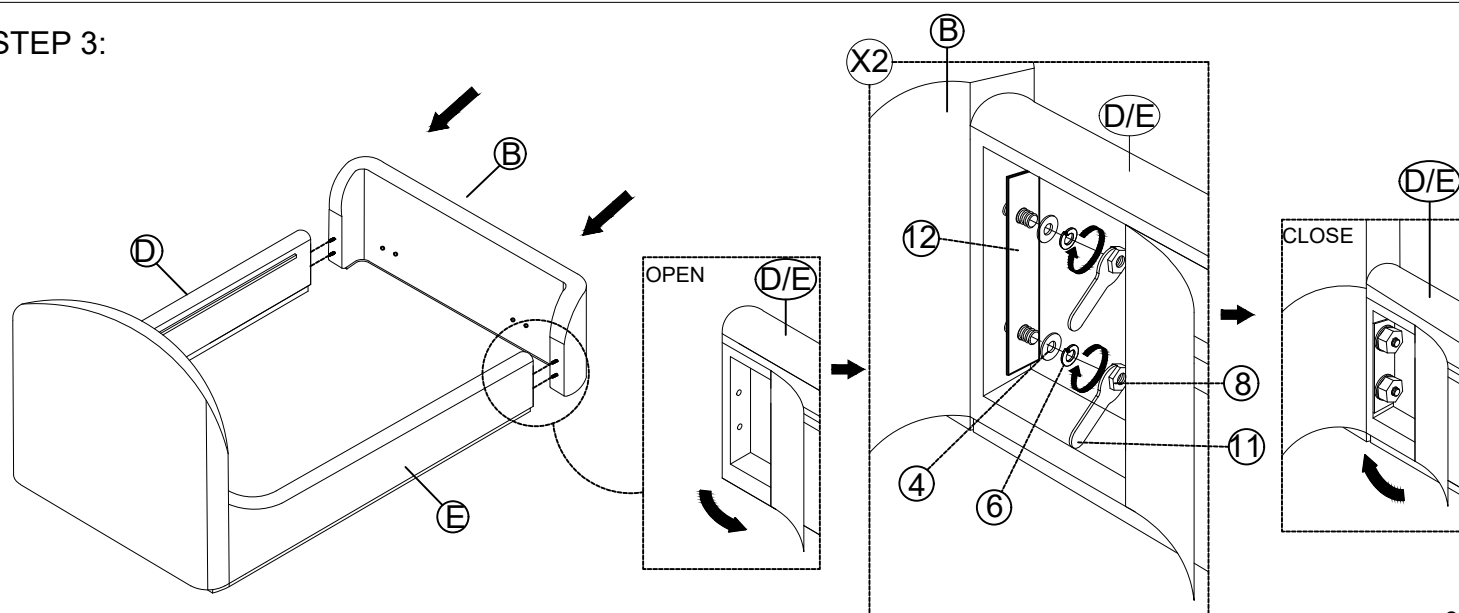

COLTON UPHOLSTERED C.KING BED


ASSEMBLY INSTRUCTIONS




STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 4~8 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 4.


STEP 4:

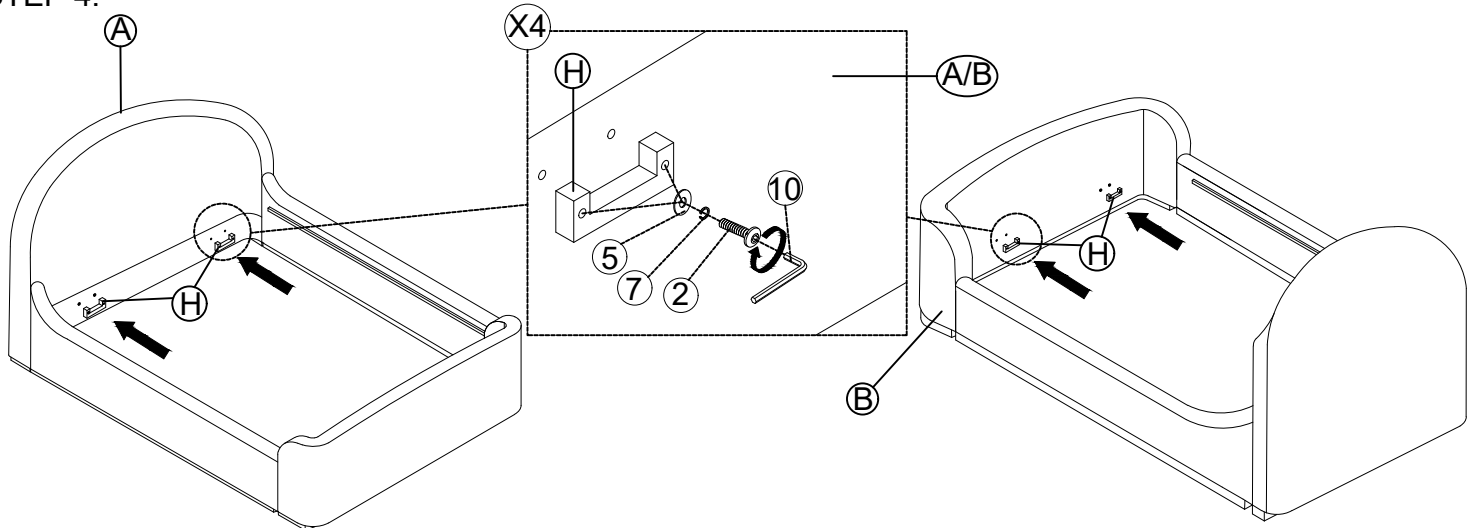

STEP 5:

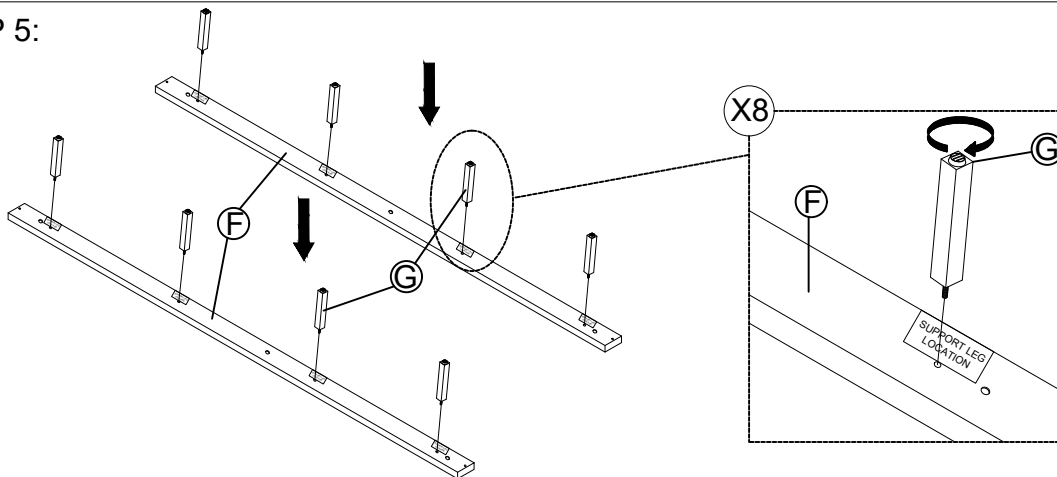

STEP 6:

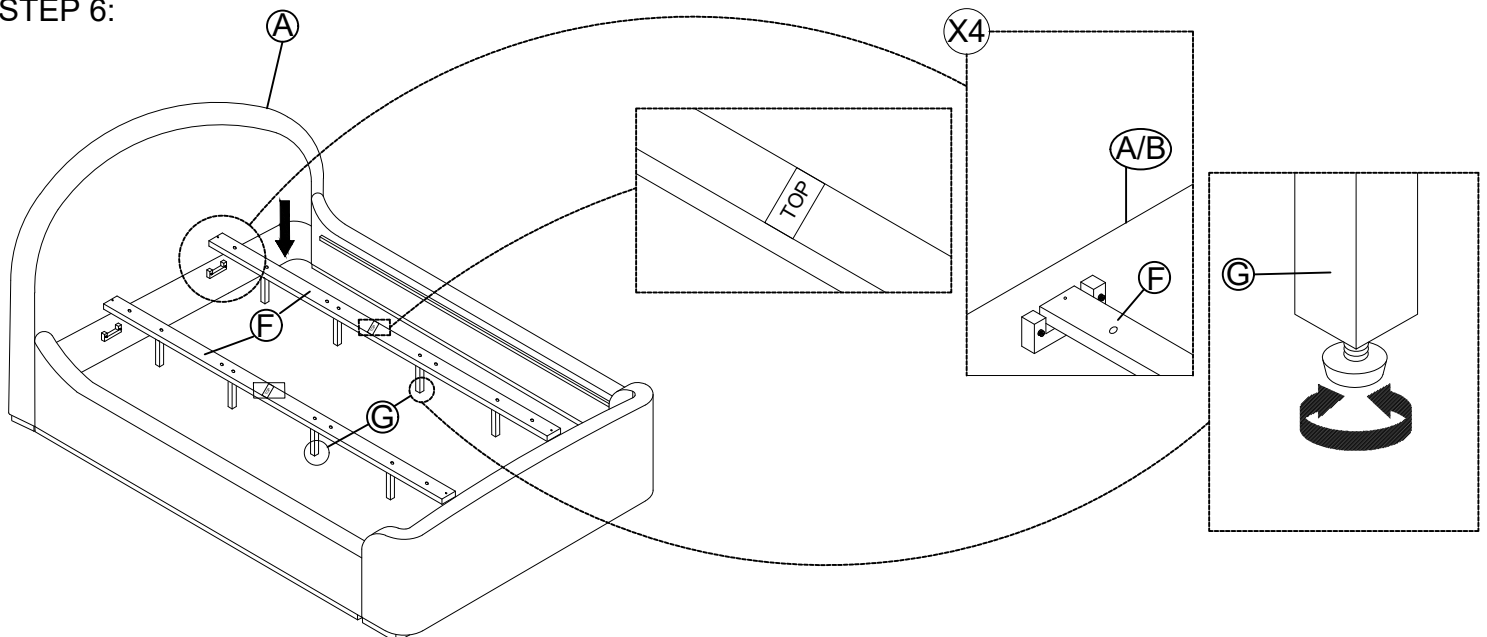


MODUS
FURNITURE

STEP 7:

Diagram illustrating Step 7: Attaching the keyboard to the base. The main view shows the keyboard being lowered into the base, indicated by arrows. A circular inset shows a close-up of a screw being inserted into a hole in the keyboard. A rectangular inset shows a close-up of the keyboard's internal structure, with labels 'TOP' indicating the top surface. A detailed view on the right shows the internal components of the keyboard, including a screw (3), a washer (7), a spacer (5), and a plate (10). The detailed view is labeled 'X6' and 'A/B'.

COLTON UPHOLSTERED C.KING BED

ASSEMBLY INSTRUCTIONS

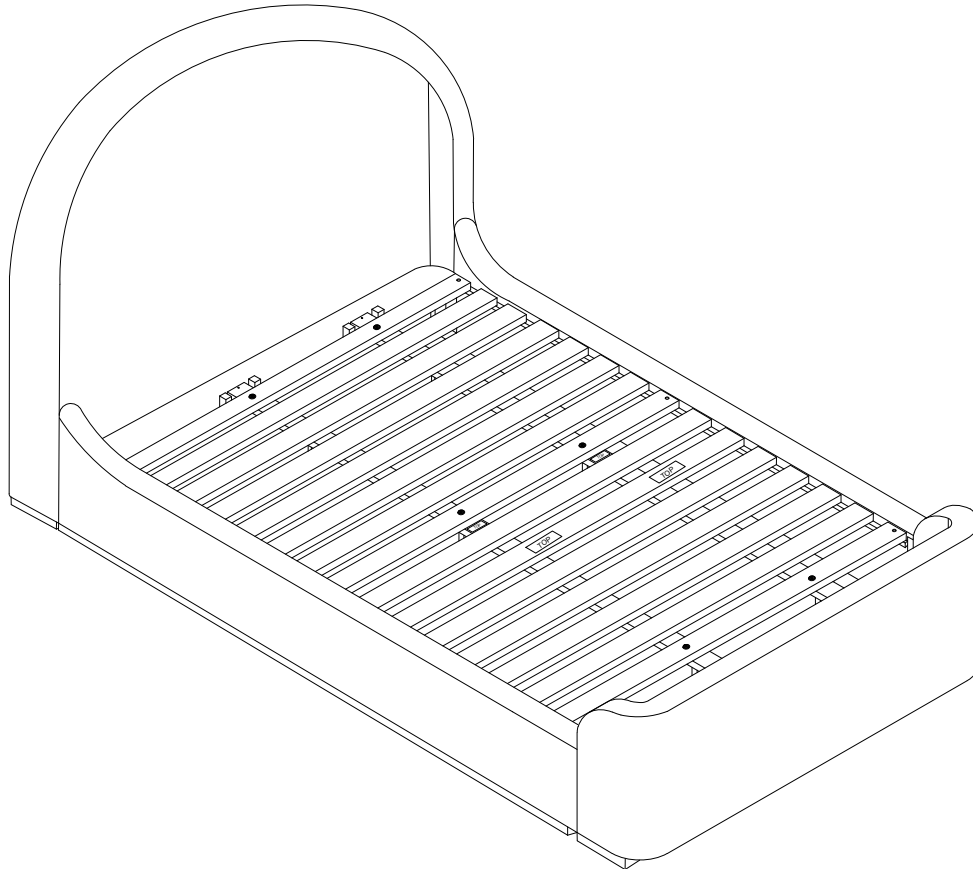


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.



MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

COLTON UPHOLSTERED C.KING BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

C. SLAT ROLL	1 SET
F. CENTER SLAT SUPPORT	2 PCS
G. SUPPORT LEG	8 PCS
H. CENTER SLAT SUPPORT CLEAT	4 PCS

STEP 1:

USE ALLEN KEY (10) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

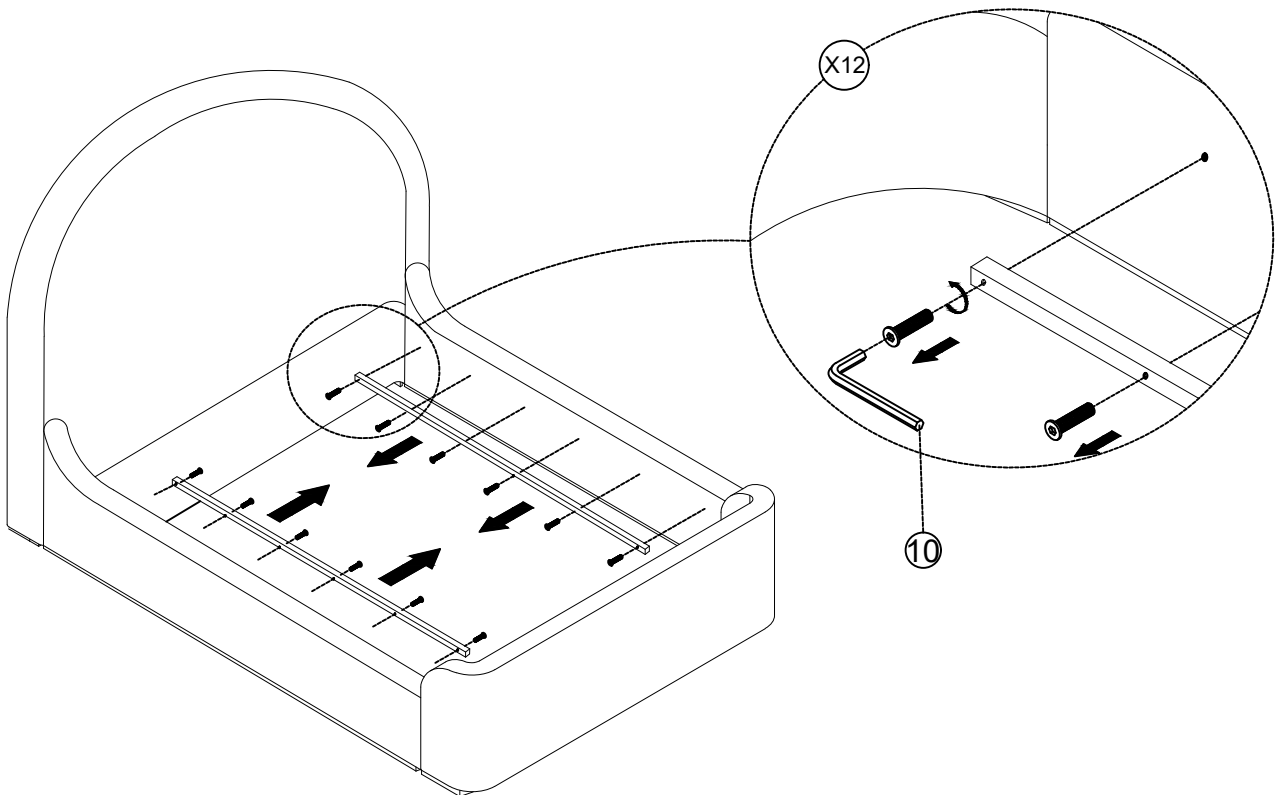

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION