


PRESLEY UPHOLSTERED QUEEN PLATFORM BED

ASSEMBLY INSTRUCTIONS



BOX#1

- A. HEADBOARD 1 PC
- B. LEFT WING 1 PC
- C. RIGHT WING 1 PC

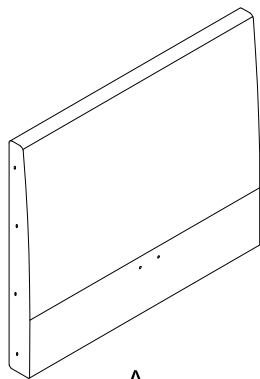

A



B



C

HARDWARE KIT PACKED IN BOX #1

No.	Description	Image	Quantity
1	ALLEN BOLT (5/16"x 2")		8 PCS
2	FLAT WASHER (5/16")		8 PCS
3	LOCK WASHER (5/16")		8 PCS
4	ALLEN KEY (5/16")		1 PC

HARDWARE KIT PACKED IN BOX #2


5	THREADED BOLT (5/16"x 3-1/2")		8 PCS
6	ALLEN BOLT (5/16"x 2-1/2")		4 PCS
7	ALLEN BOLT (1/4"x 2-3/4")		4 PCS
8	ALLEN BOLT (1/4"x 1-1/4")		4 PCS
9	FLAT WASHER (5/16")		12 PCS
10	FLAT WASHER (1/4")		8 PCS
11	LOCK WASHER (5/16")		12 PCS
12	LOCK WASHER (1/4")		8 PCS
13	HEX NUT (5/16")		8 PCS
14	PHILLIPS SCREW (M4 x 32mm)		10 PCS
15	ALLEN KEY (5/16")		1 PC
16	WRENCH		1 PC
17	CONNECTING BRACKET		4 PCS

BOX#2


- D. CLEAT 2 PCS
- E. FOOTBOARD 1 PC
- F. SLAT ROLL 1 SET
- G. CENTER SLAT SUPPORT CLEAT 2 PCS



D

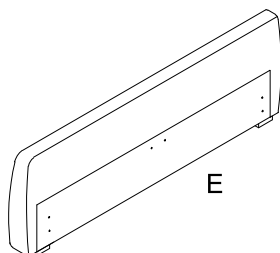

E

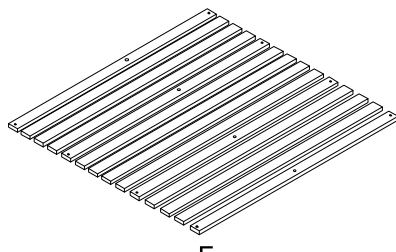


F




G

BOX#3


- H. LEFT SIDE RAIL 1 PC
- I. RIGHT SIDE RAIL 1 PC
- J. CENTER SLAT SUPPORT 1 PC
- K. SUPPORT LEG 4 PCS

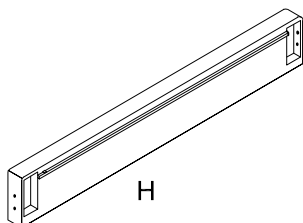

H

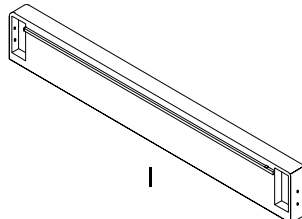

I



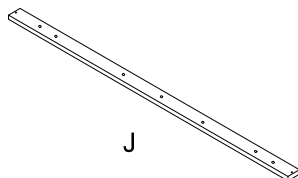


J



K

FULLY ASSEMBLED

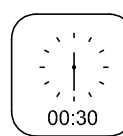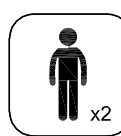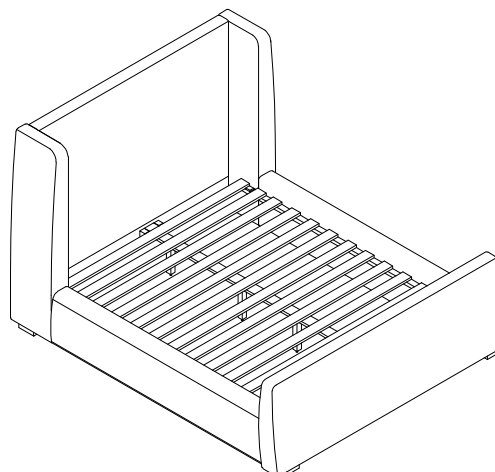


PRESLEY UPHOLSTERED QUEEN PLATFORM BED


ASSEMBLY INSTRUCTIONS




STEP 1:

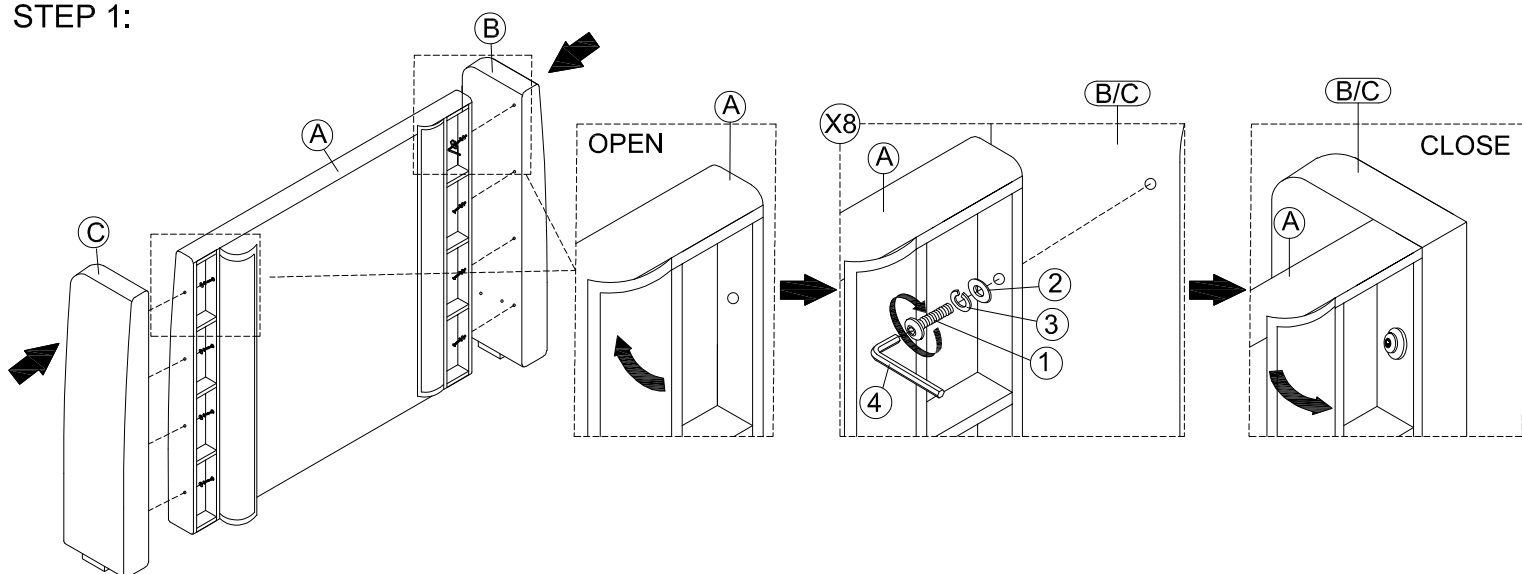

STEP 2:

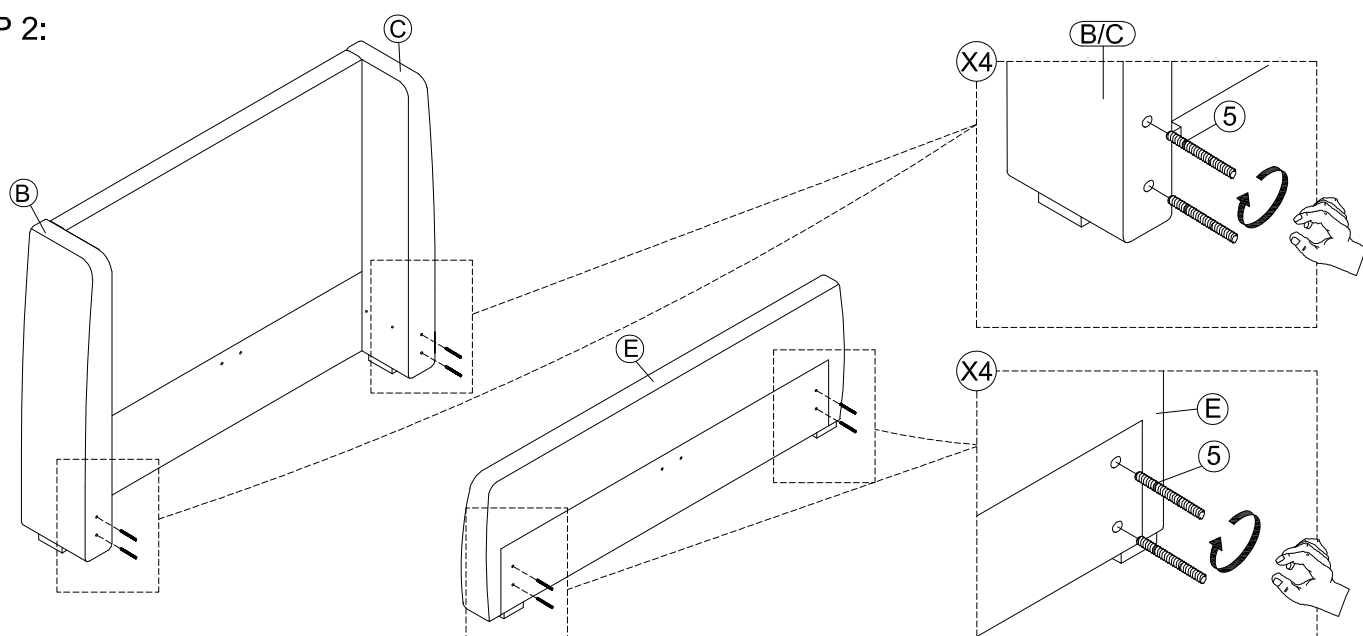

STEP 3:

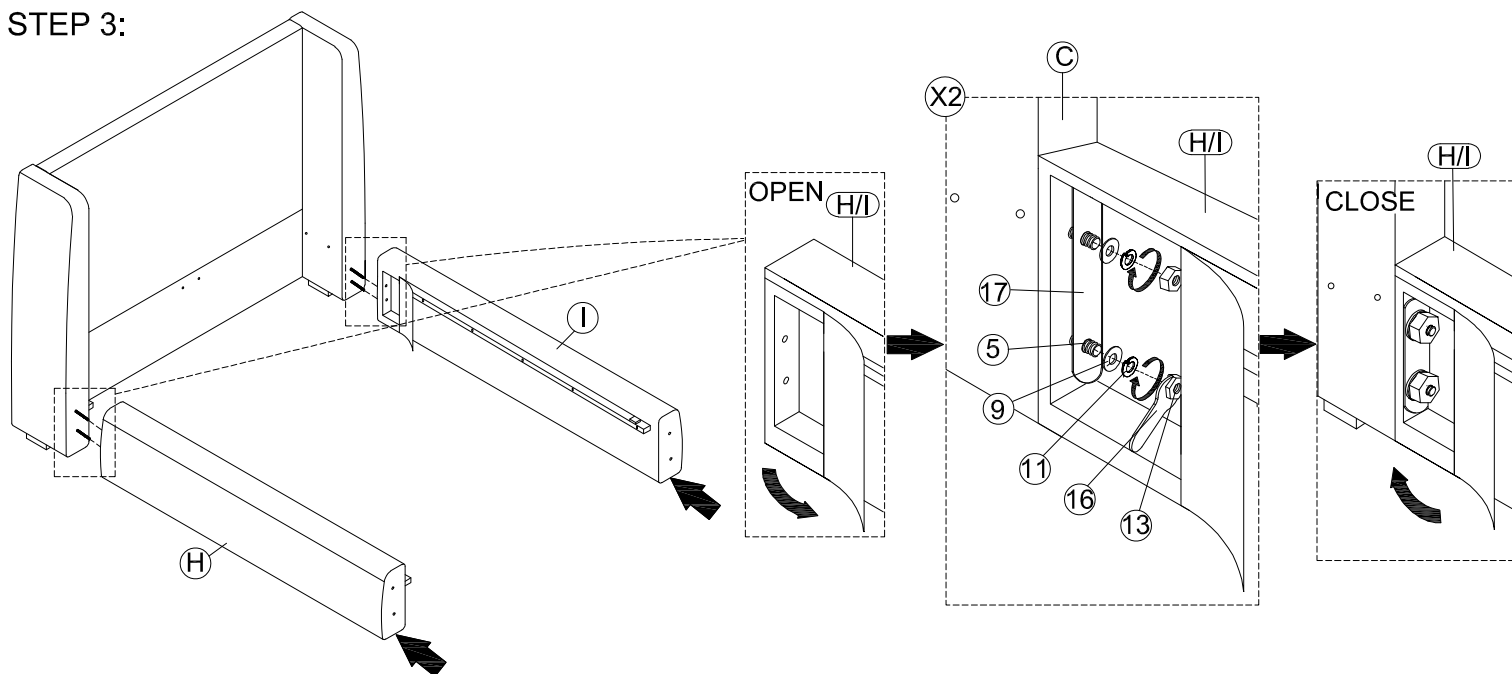


PRESLEY UPHOLSTERED QUEEN PLATFORM BED

ASSEMBLY INSTRUCTIONS




STEP 4:

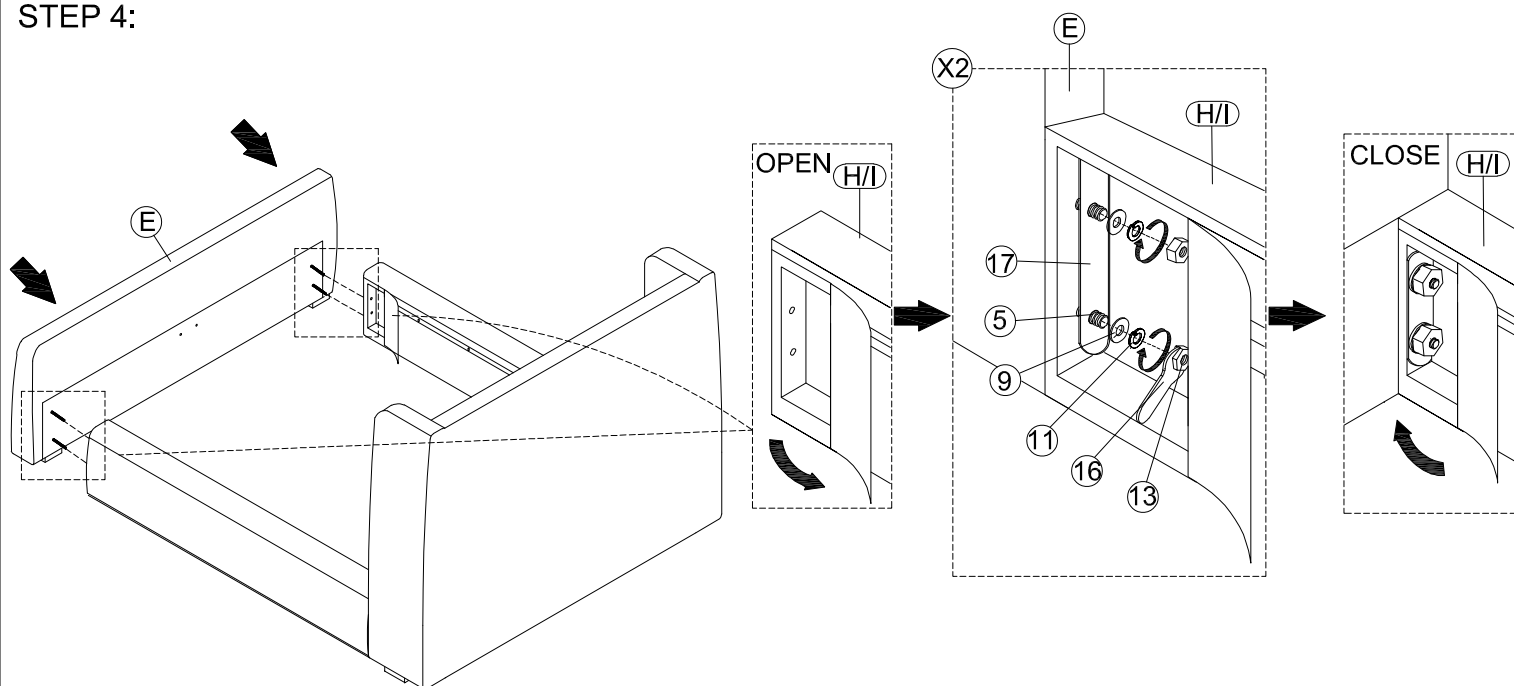

STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 5-10 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 5

STEP 5:

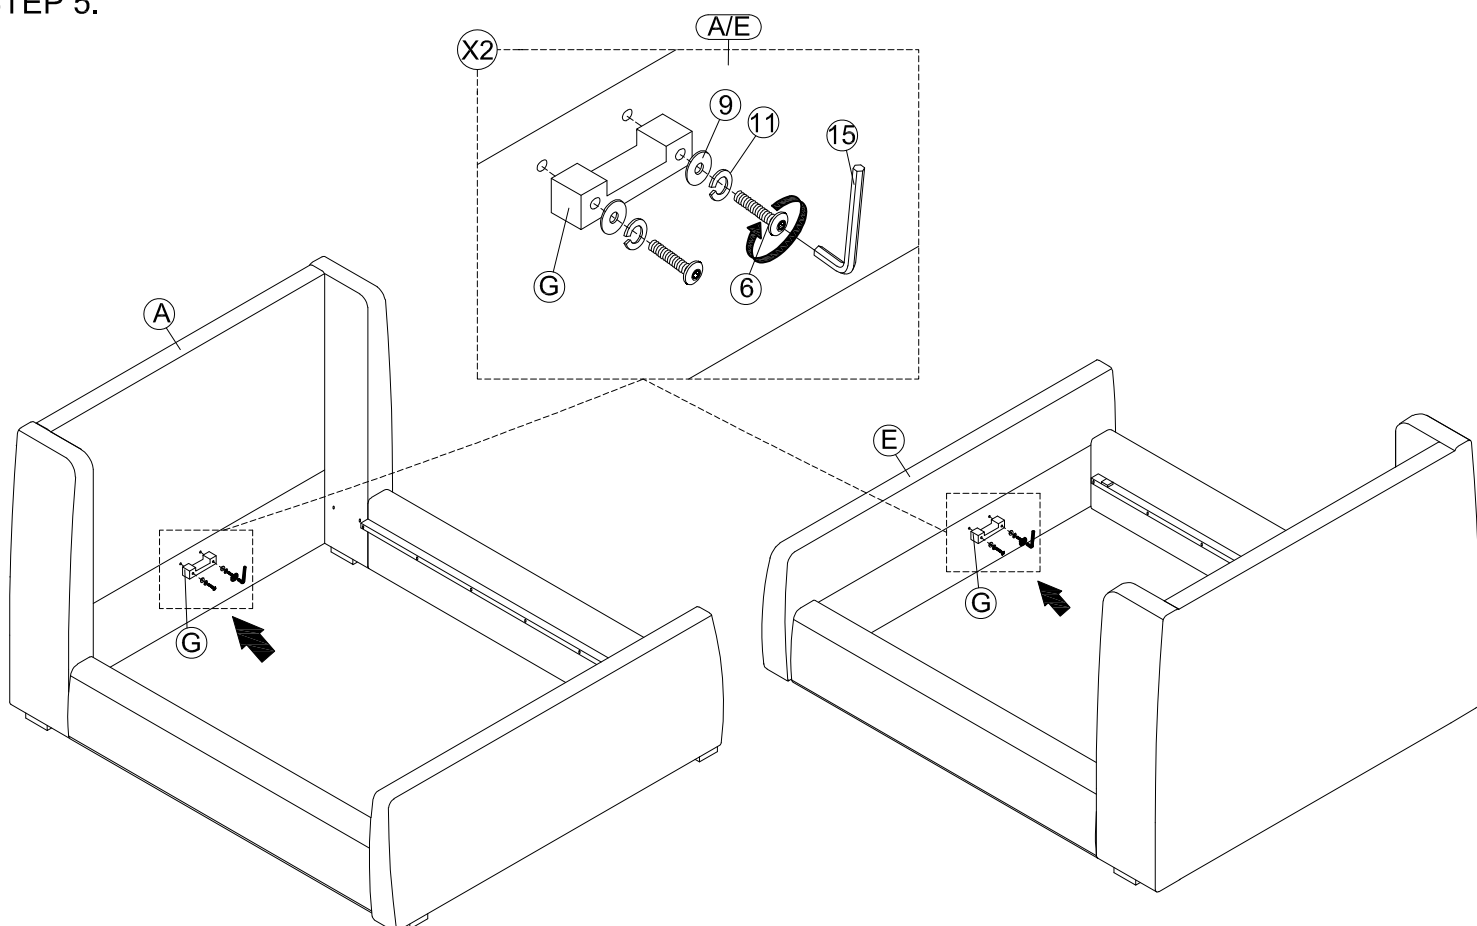


PRESLEY UPHOLSTERED QUEEN PLATFORM BED


ASSEMBLY INSTRUCTIONS




STEP 6:

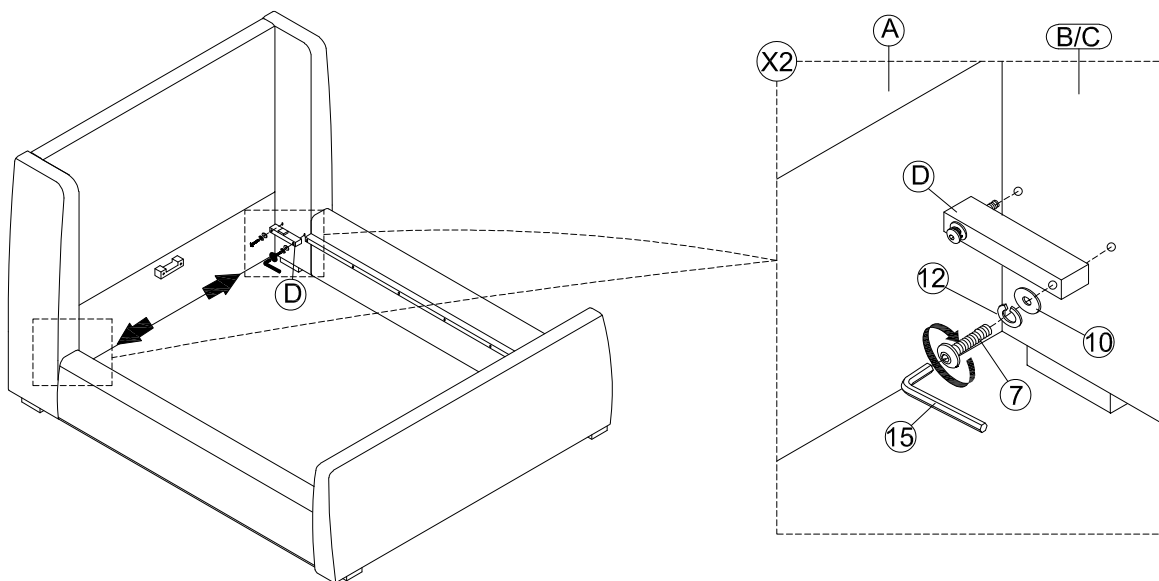

STEP 7:

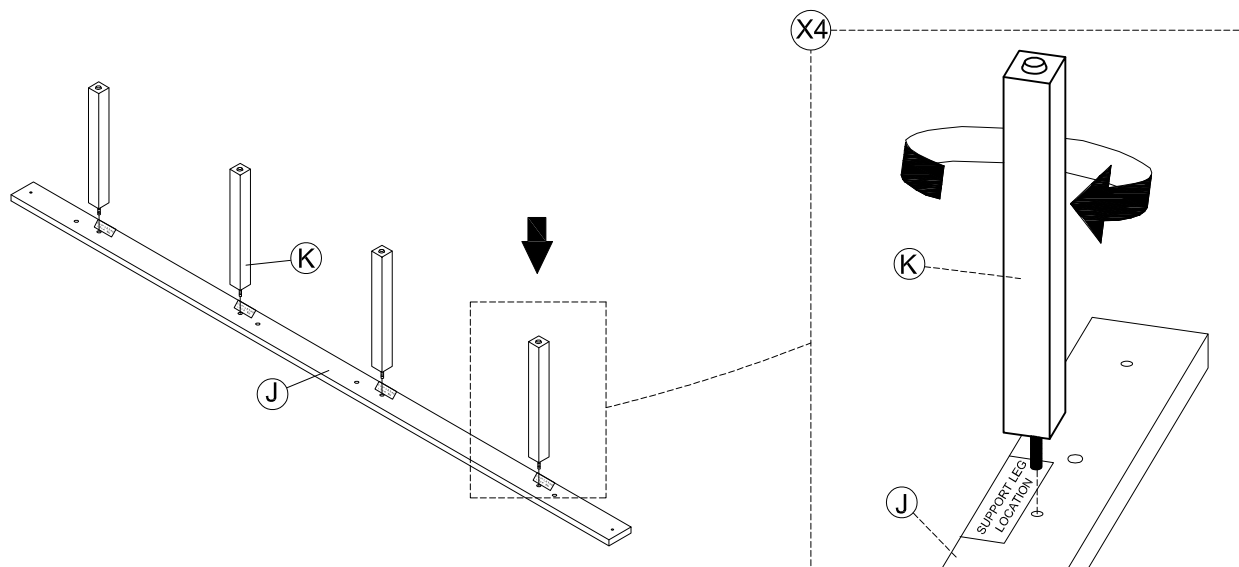

STEP 8:



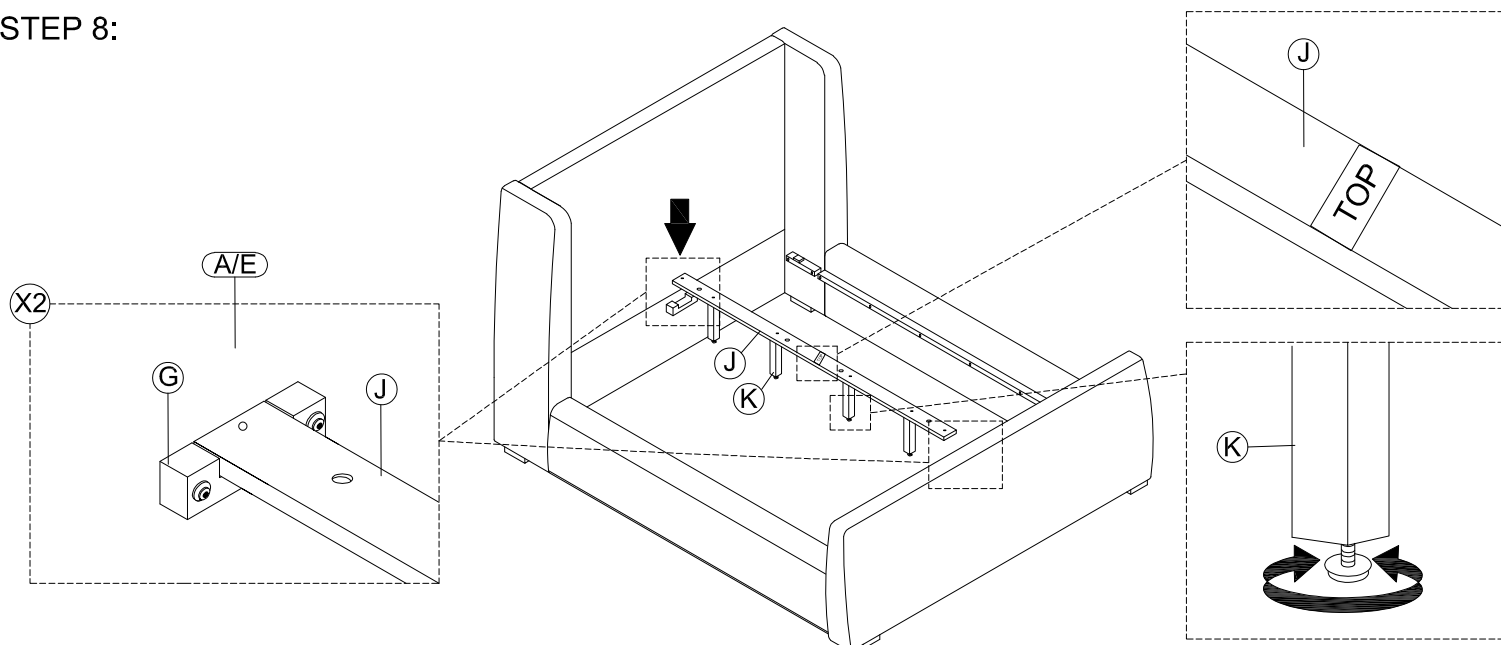


PRESLEY UPHOLSTERED QUEEN PLATFORM BED




ASSEMBLY INSTRUCTIONS



STEP 9:

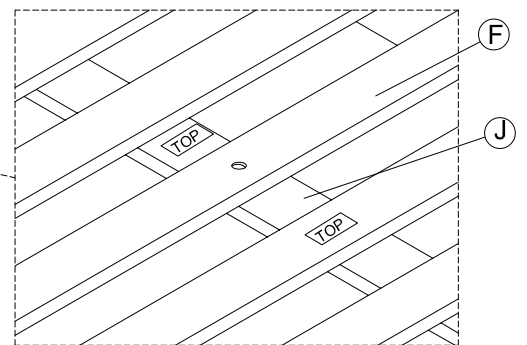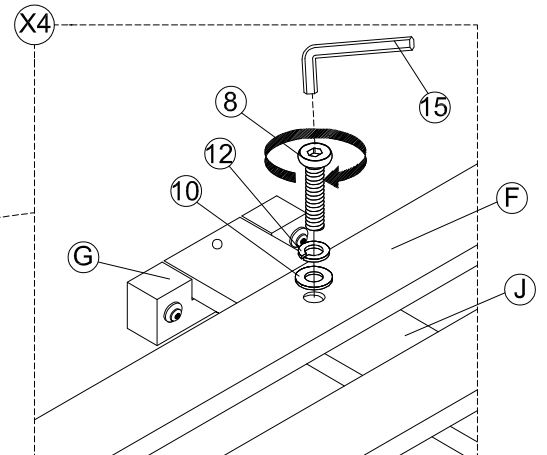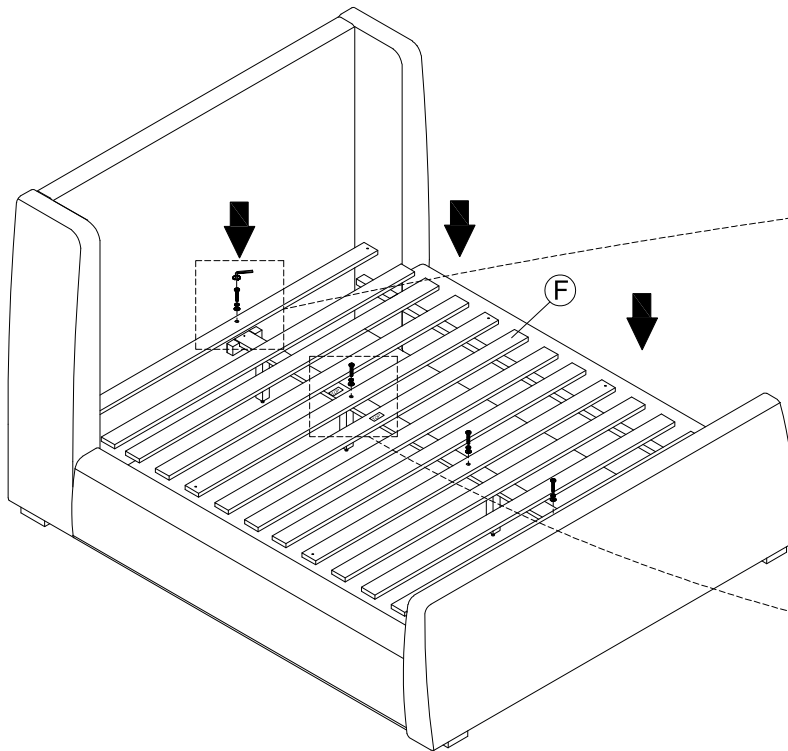


STEP 10:

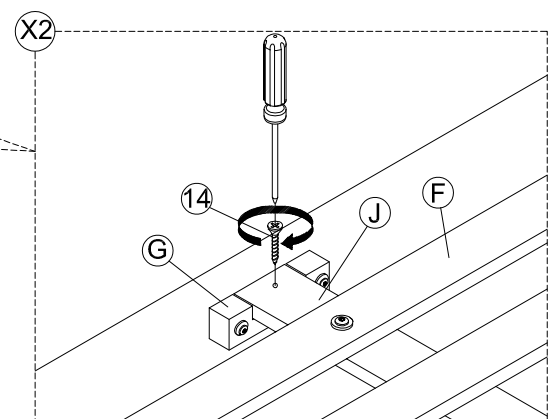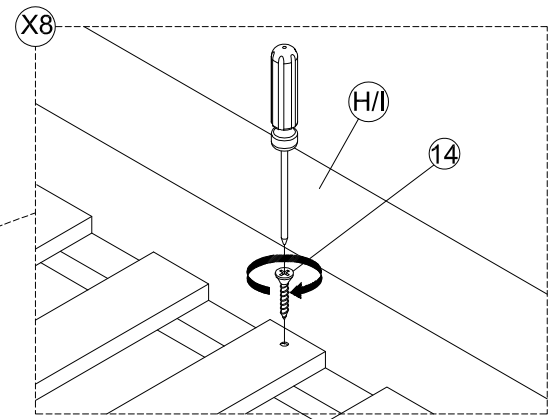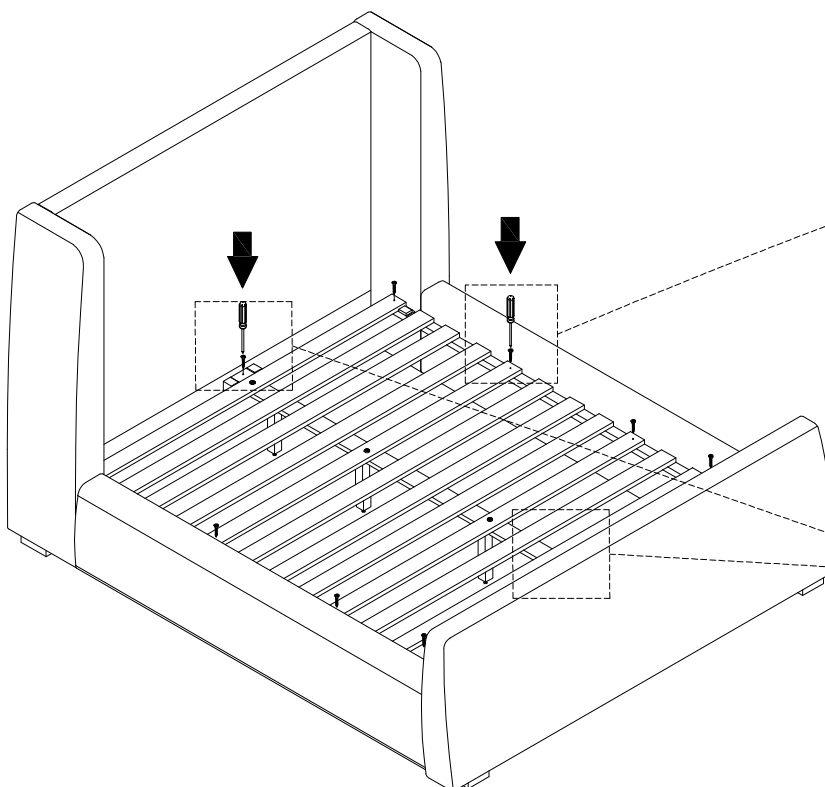

PRESLEY UPHOLSTERED QUEEN PLATFORM BED

ASSEMBLY INSTRUCTIONS

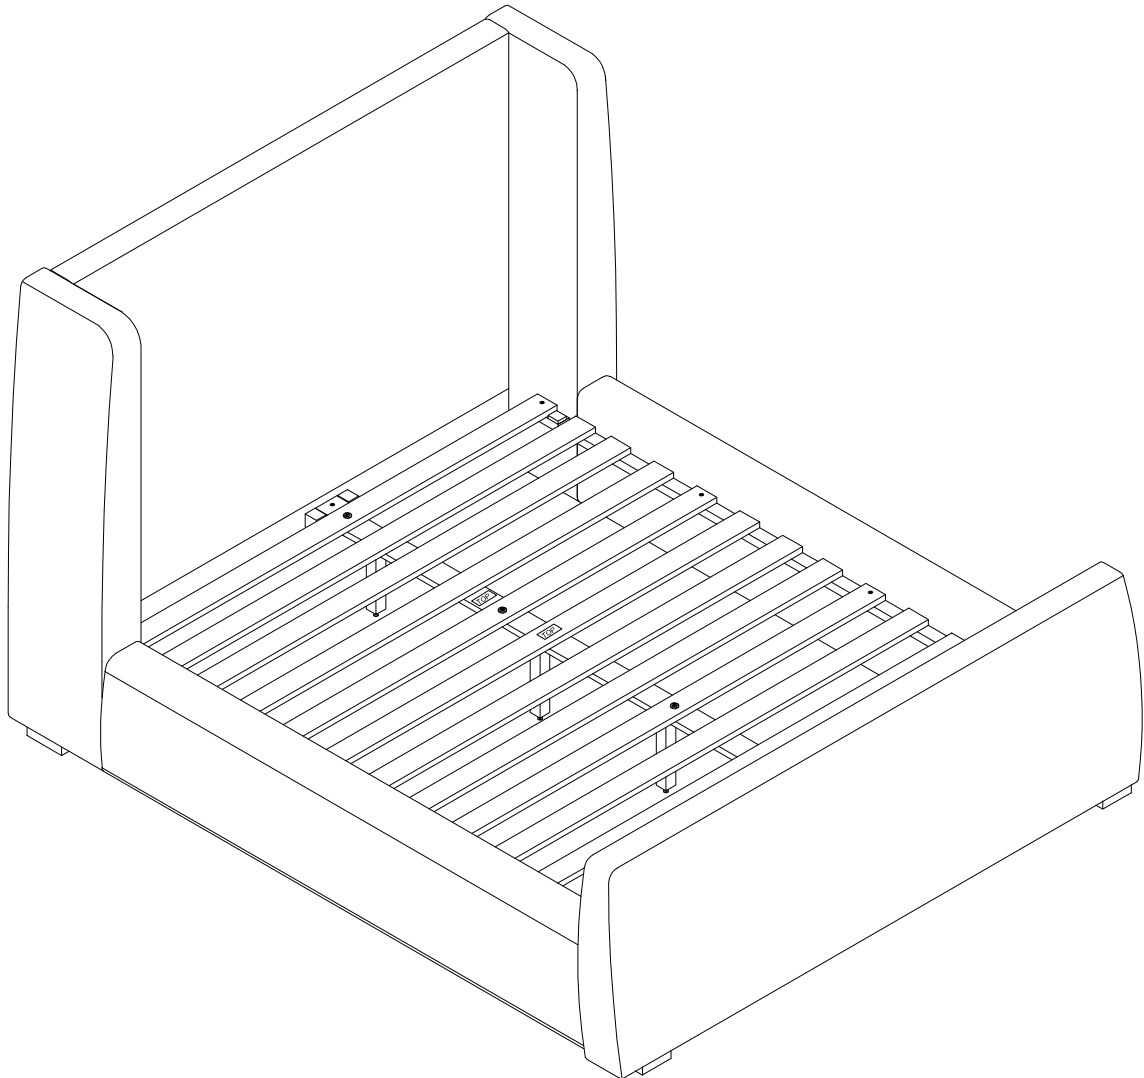


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.

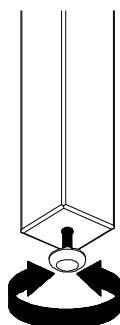

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

PRESLEY UPHOLSTERED QUEEN PLATFORM BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

D. CLEAT	2 PCS
F. SLAT ROLL	1 SET
G. CENTER SLAT SUPPORT CLEAT	2 PCS
J. CENTER SLAT SUPPORT	1 PC
K. SUPPORT LEG	4 PCS

STEP 1:

USE ALLEN KEY (15) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

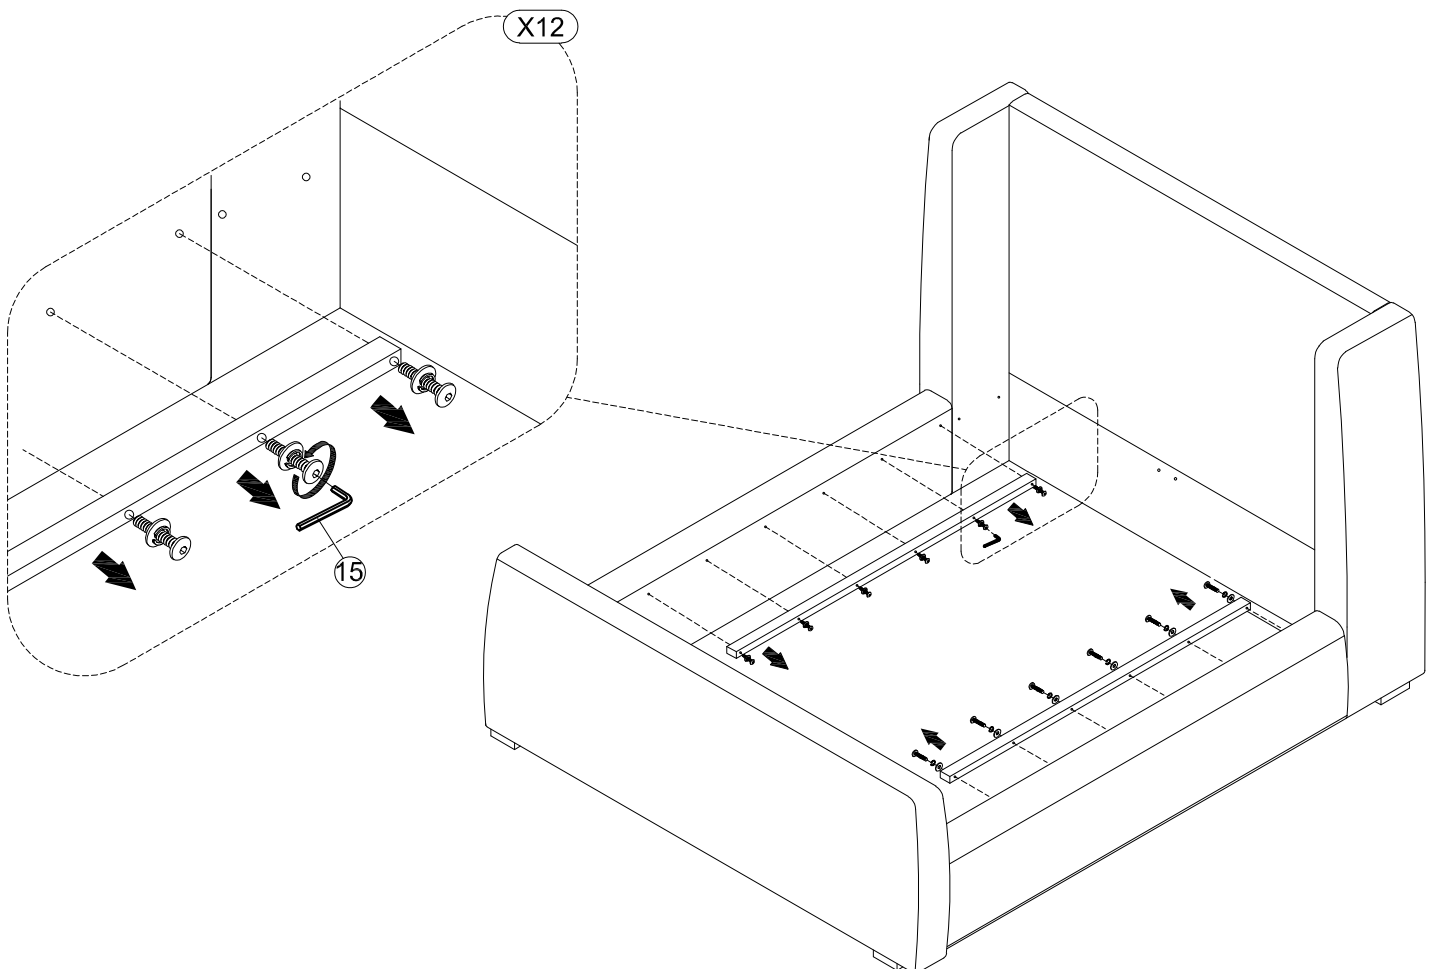

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION


PRESLEY UPHOLSTERED KING PLATFORM BED

ASSEMBLY INSTRUCTIONS



BOX#1

- A. HEADBOARD 1 PC
- B. LEFT WING 1 PC
- C. RIGHT WING 1 PC

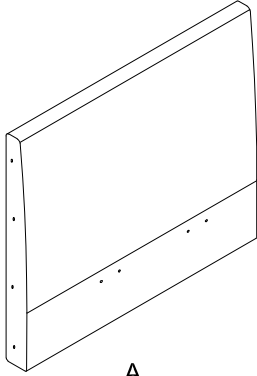

A



B




C

BOX#2


- D. CLEAT 2 PCS
- E. FOOTBOARD 1 PC
- F. SLAT ROLL 1 SET
- G. CENTER SLAT SUPPORT CLEAT 4 PCS



D

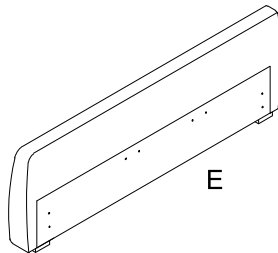

E

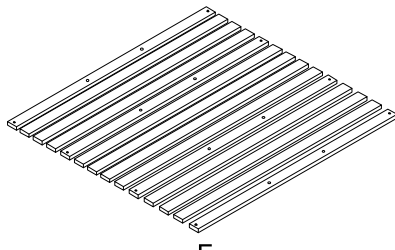


F




G

BOX#3


- H. LEFT SIDE RAIL 1 PC
- I. RIGHT SIDE RAIL 1 PC
- J. CENTER SLAT SUPPORT 2 PCS
- K. SUPPORT LEG 8 PCS

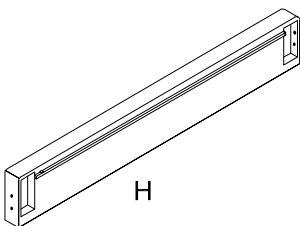

H

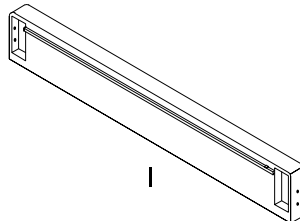

I

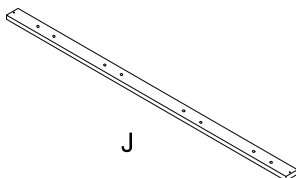

J



K



HARDWARE KIT PACKED IN BOX #1

No.	Description	Image	Quantity
1	ALLEN BOLT (5/16"x 2")		8 PCS
2	FLAT WASHER (5/16")		8 PCS
3	LOCK WASHER (5/16")		8 PCS
4	ALLEN KEY (5/16")		1 PC

HARDWARE KIT PACKED IN BOX #2

5	THREADED BOLT (5/16"x 3-1/2")		8 PCS
6	ALLEN BOLT (5/16"x 2-1/2")		8 PCS
7	ALLEN BOLT (1/4"x 2-3/4")		4 PCS
8	ALLEN BOLT (1/4"x 1-1/4")		8 PCS
9	FLAT WASHER (5/16")		16 PCS
10	FLAT WASHER (1/4")		12 PCS
11	LOCK WASHER (5/16")		16 PCS
12	LOCK WASHER (1/4")		12 PCS
13	HEX NUT (5/16")		8 PCS
14	PHILLIPS SCREW (M4 x 32mm)		12 PCS
15	ALLEN KEY (5/16")		1 PC
16	WRENCH		1 PC
17	CONNECTING BRACKET		4 PCS

FULLY ASSEMBLED

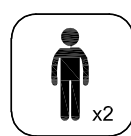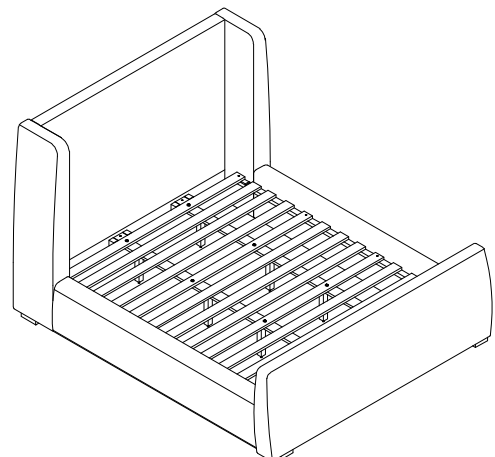


PRESLEY UPHOLSTERED KING PLATFORM BED


ASSEMBLY INSTRUCTIONS




STEP 1:

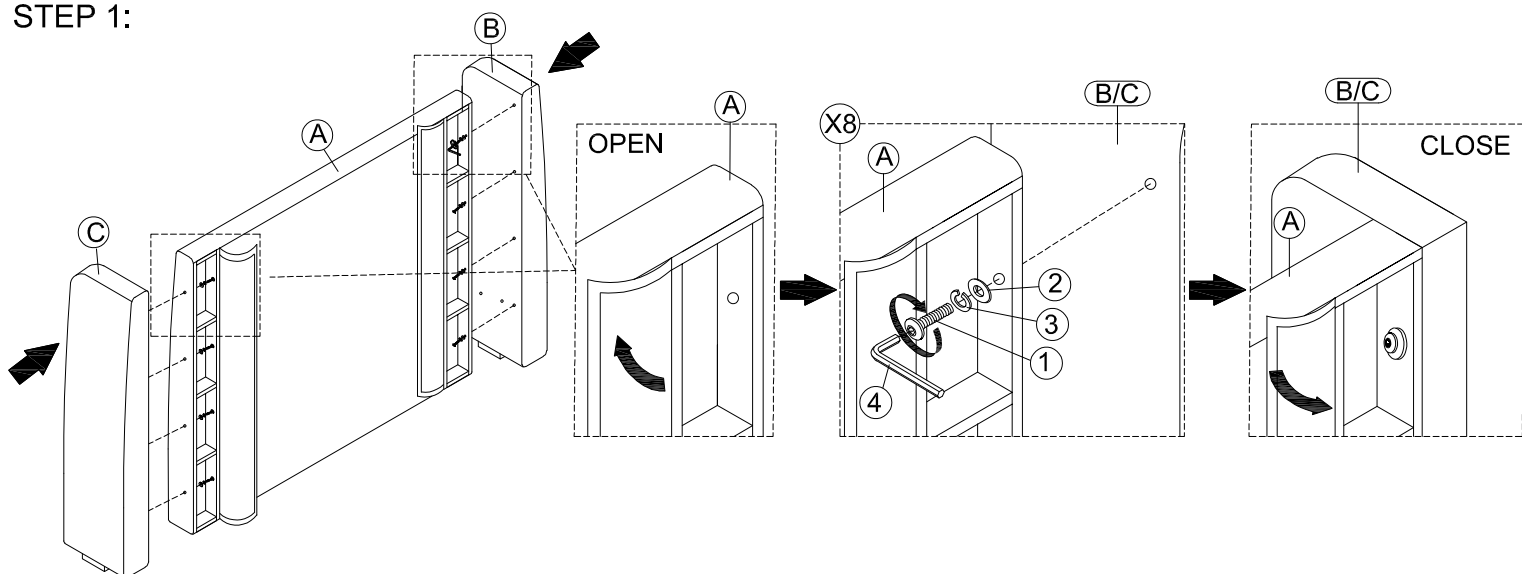

STEP 2:

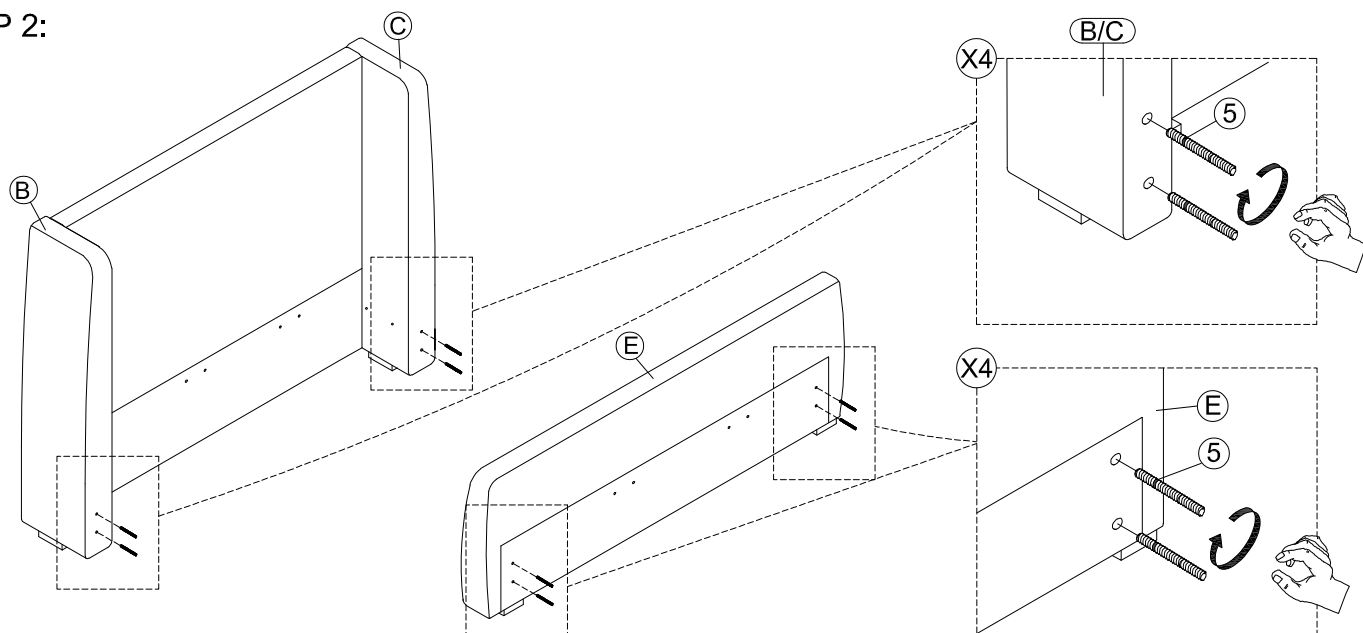

STEP 3:

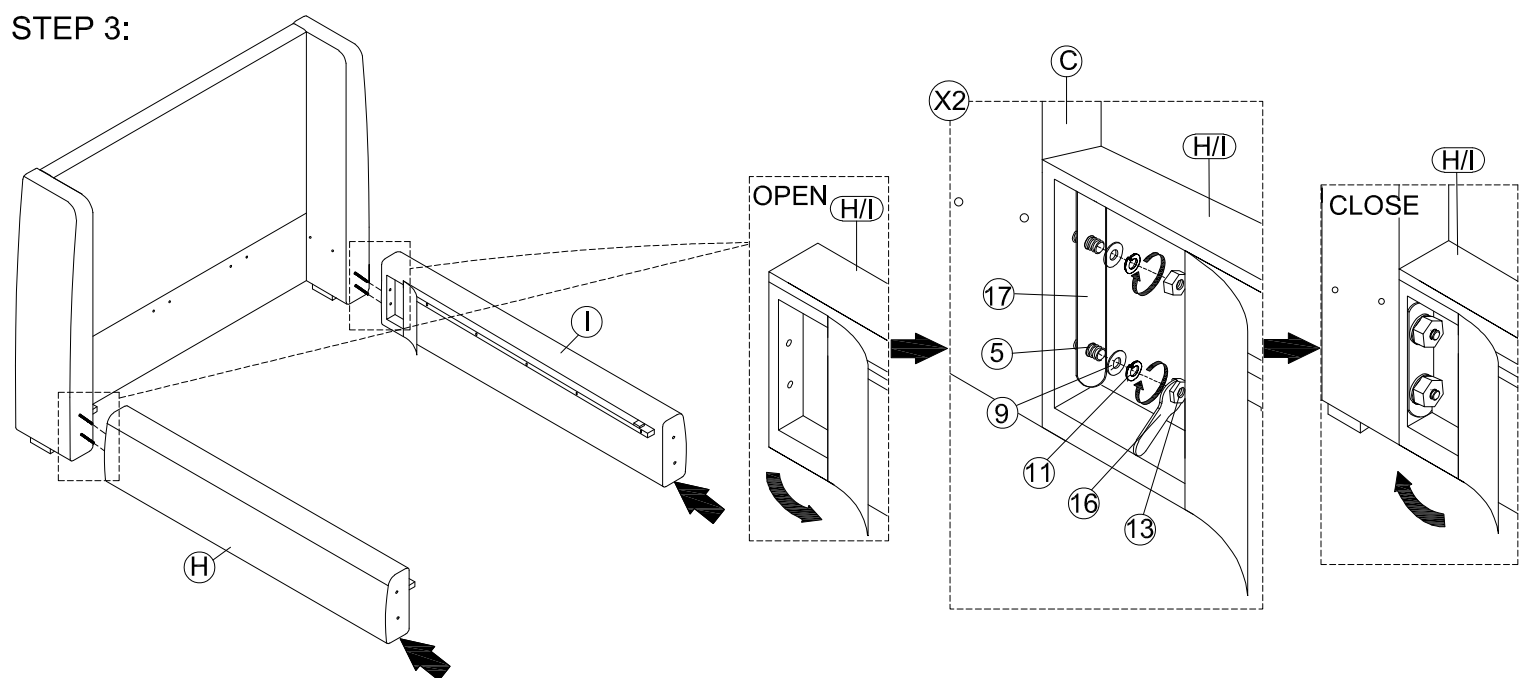


PRESLEY UPHOLSTERED KING PLATFORM BED

ASSEMBLY INSTRUCTIONS




STEP 4:

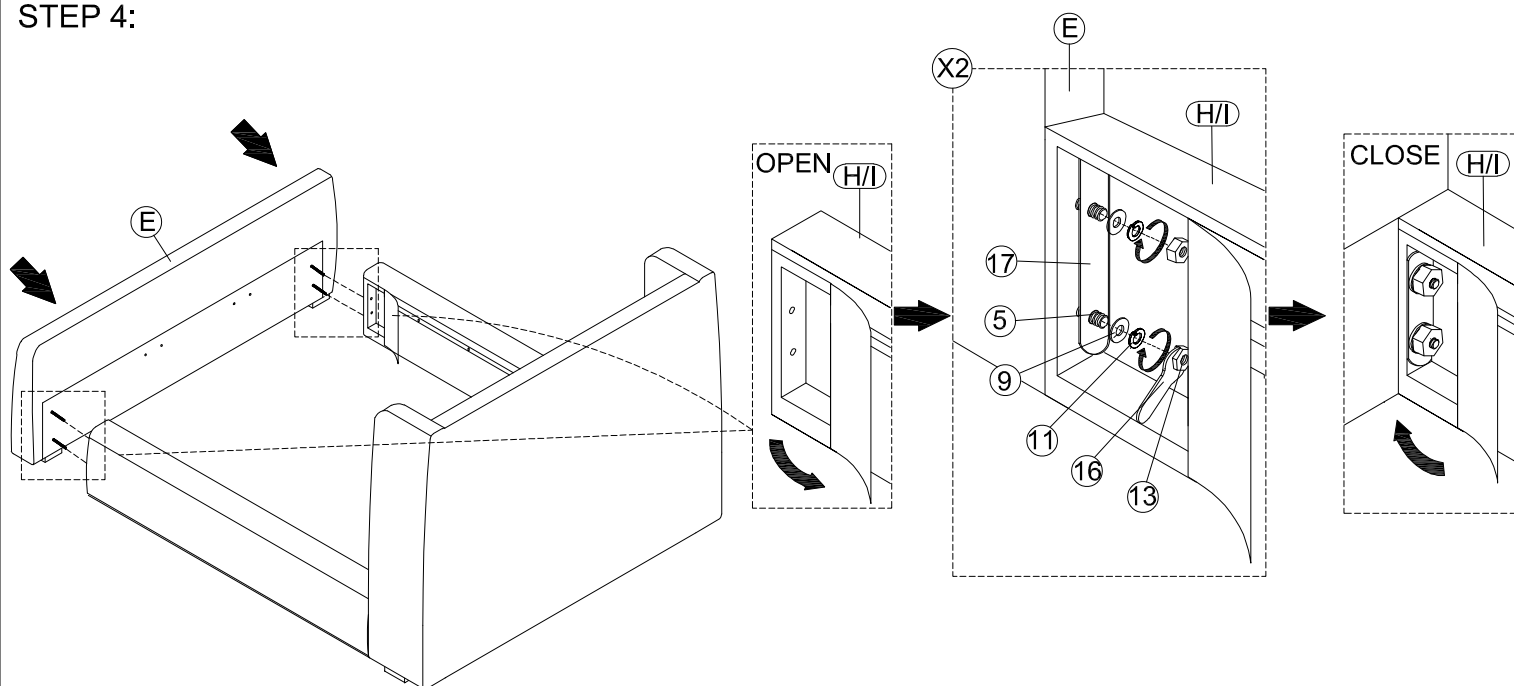

STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 5-10 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 5

STEP 5:

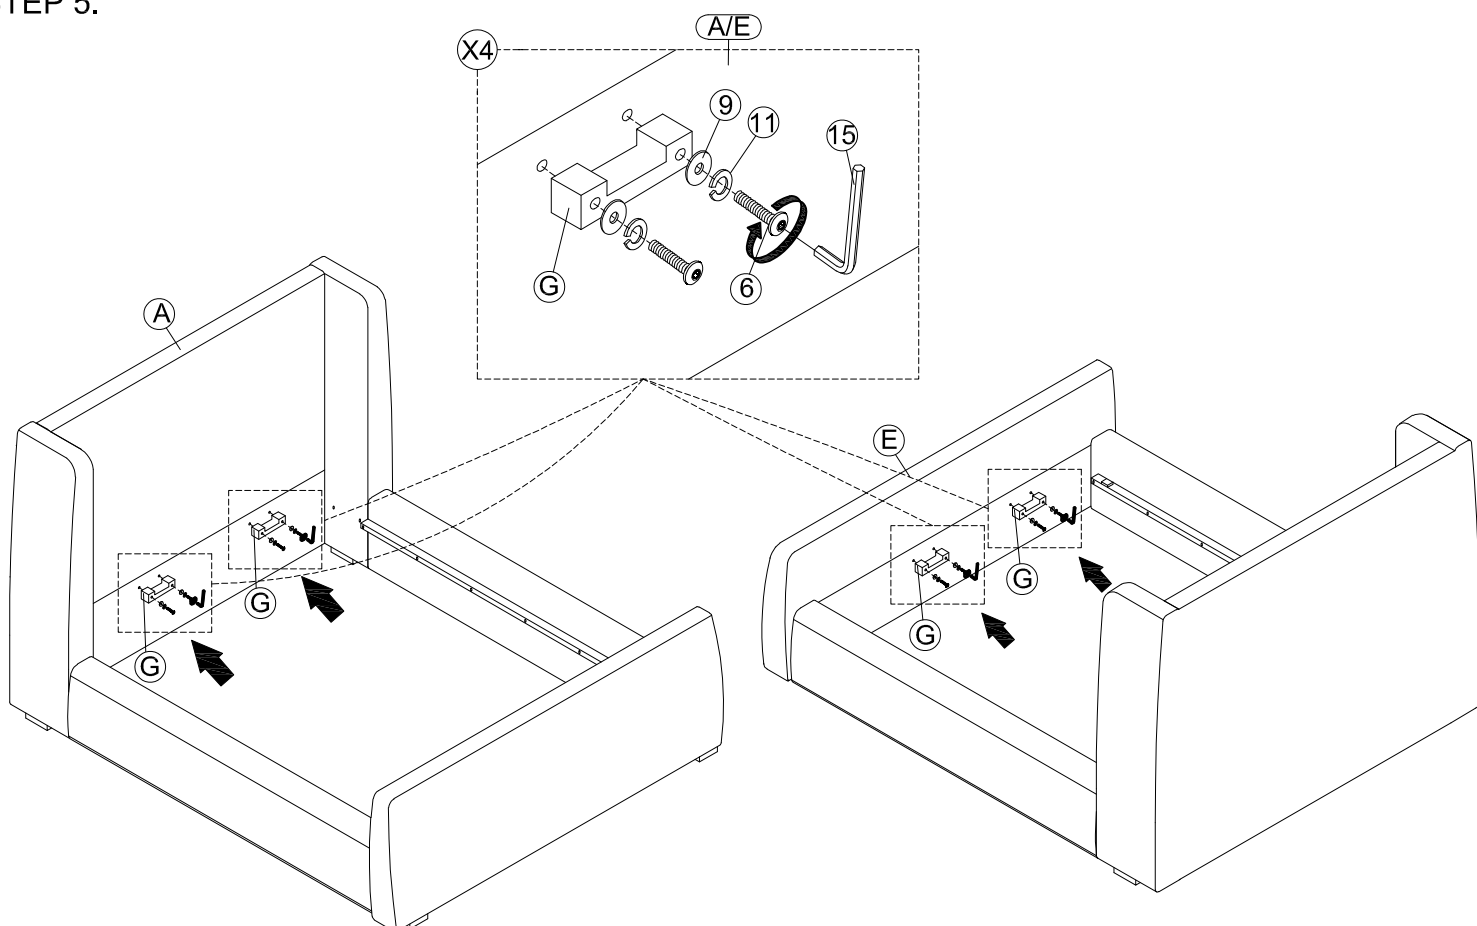


PRESLEY UPHOLSTERED KING PLATFORM BED


ASSEMBLY INSTRUCTIONS




STEP 6:

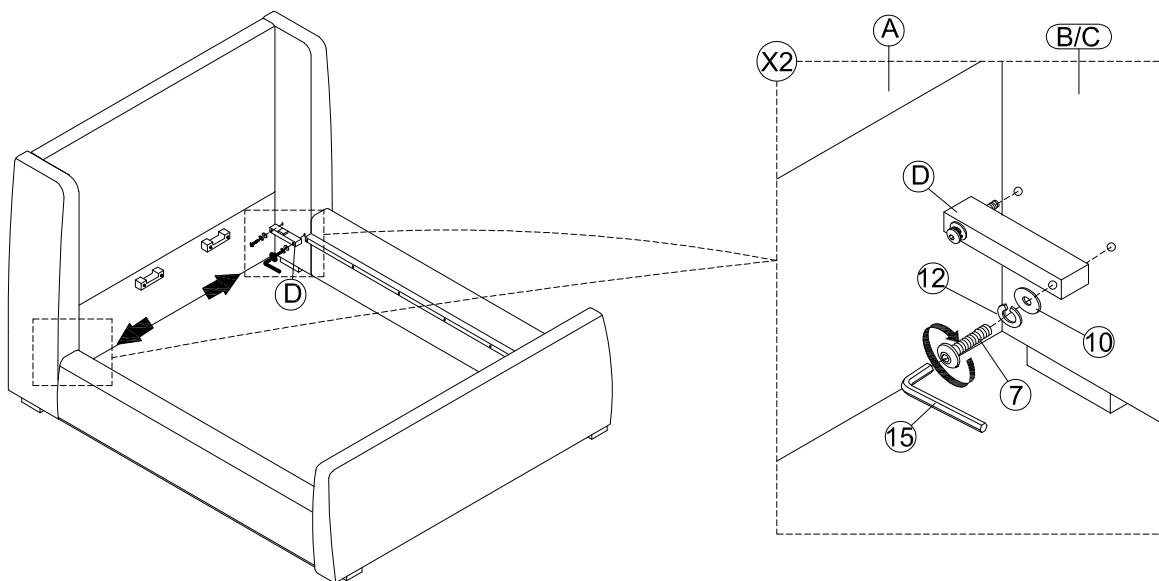

STEP 7:

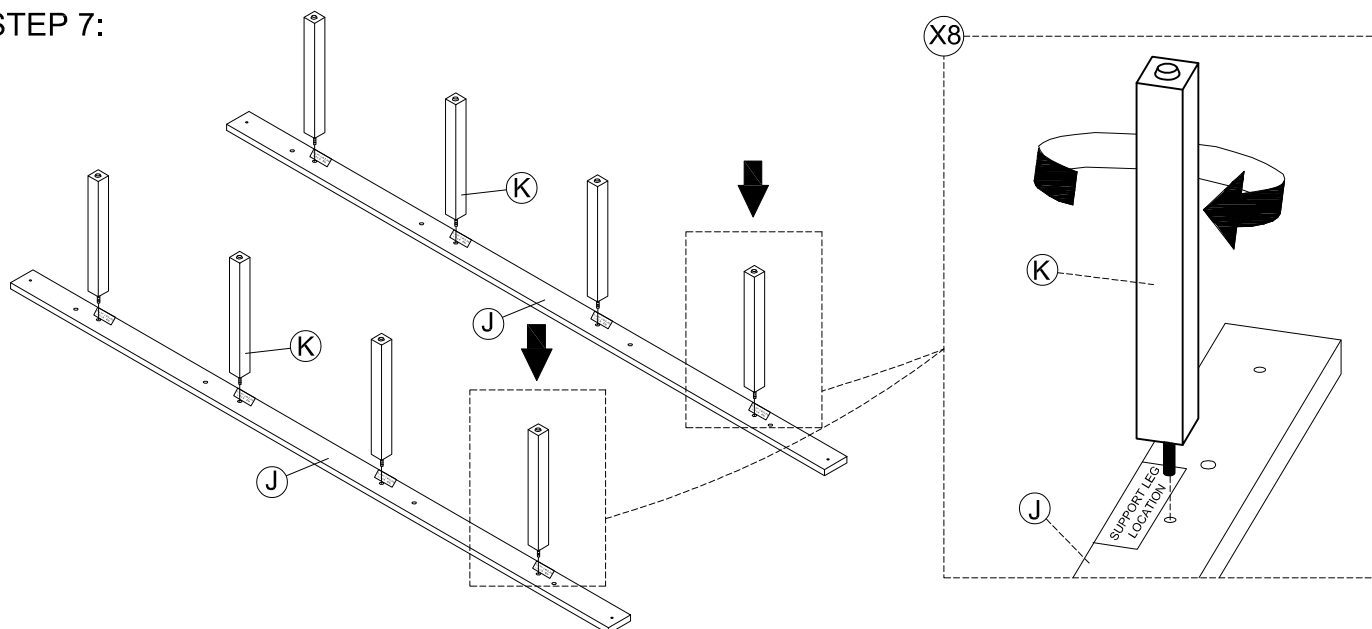

STEP 8:



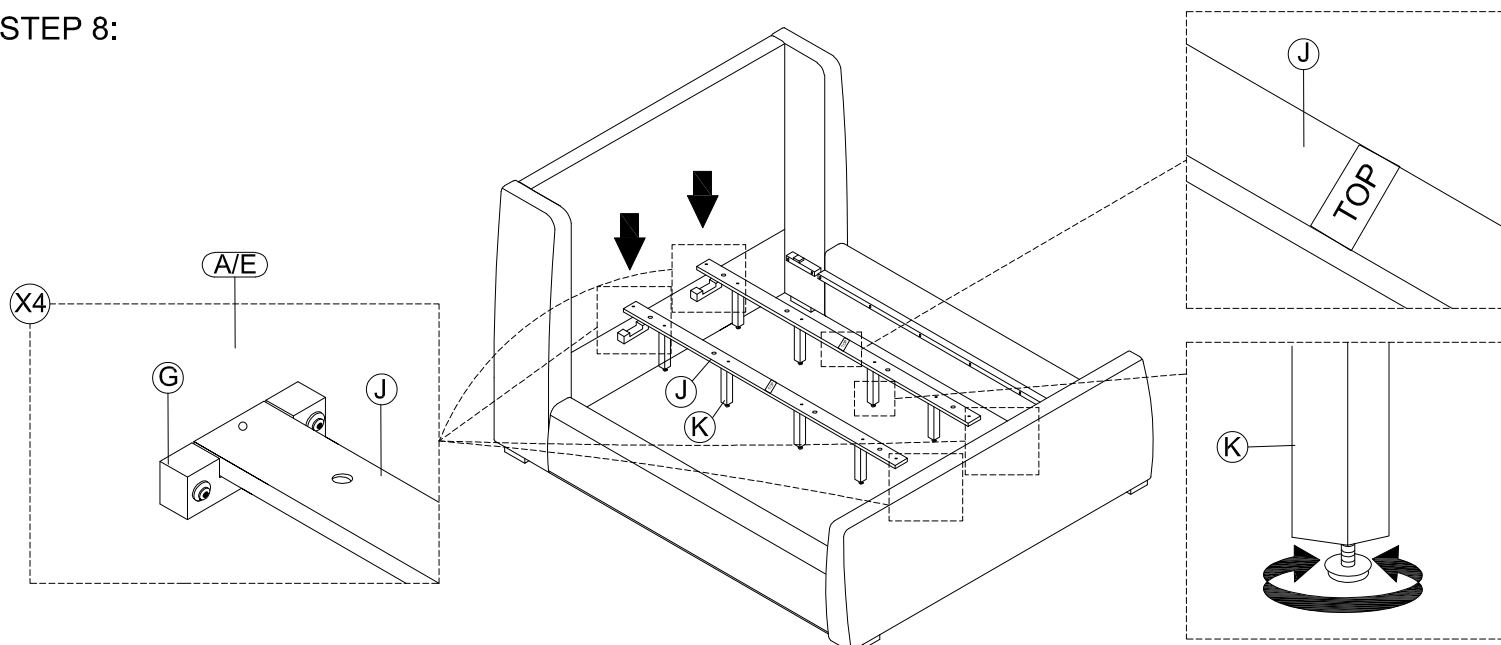


PRESLEY UPHOLSTERED KING PLATFORM BED




ASSEMBLY INSTRUCTIONS



STEP 9:

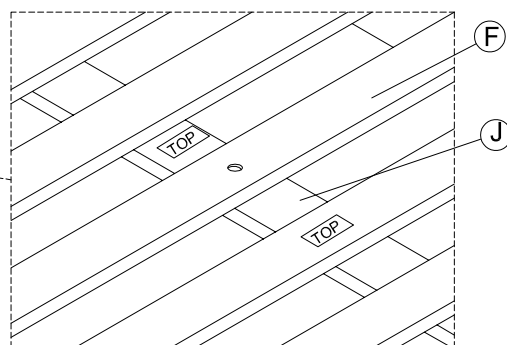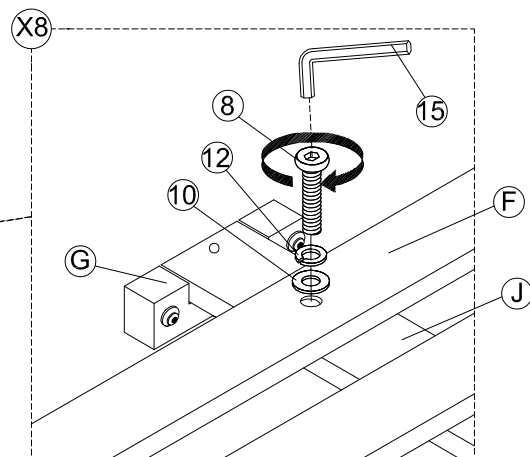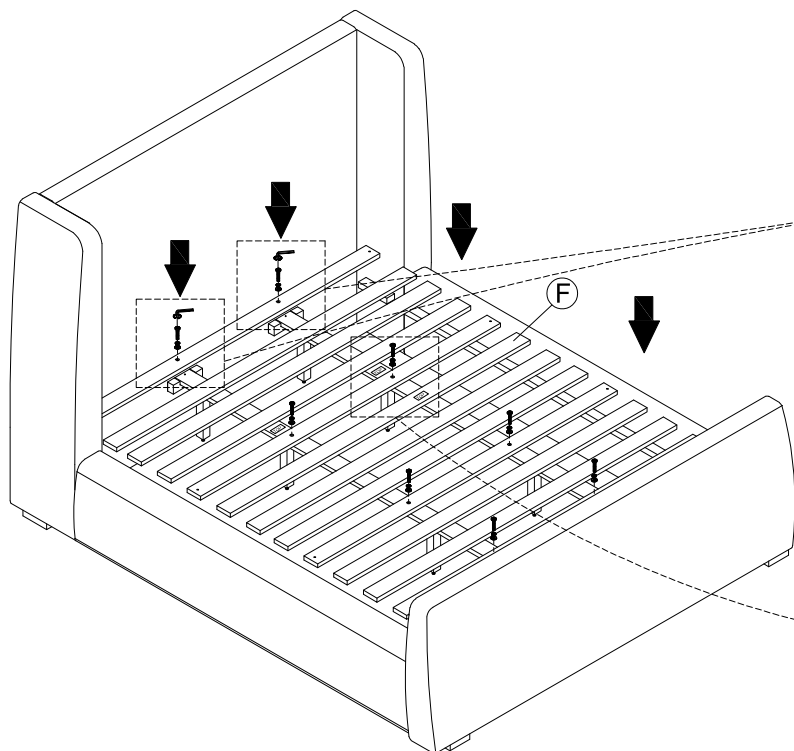


STEP 10:

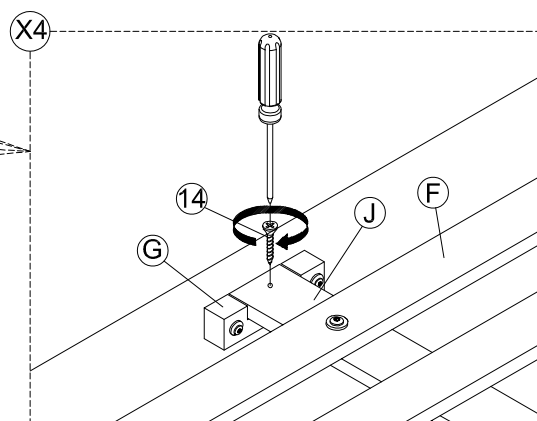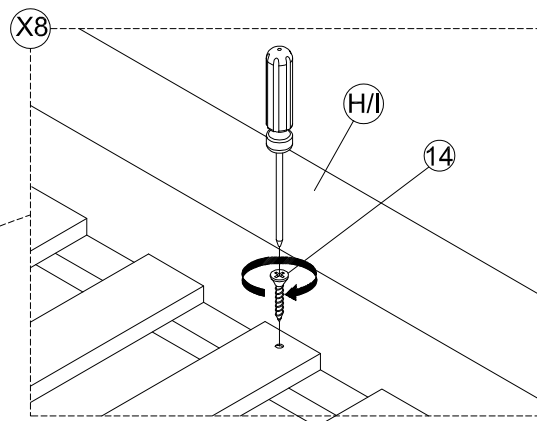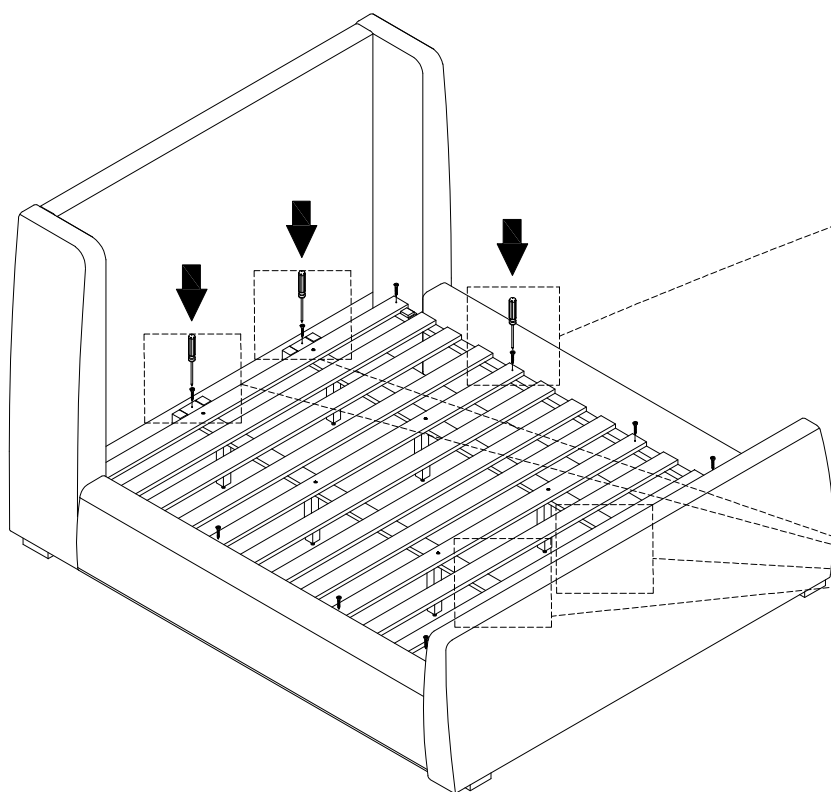

PRESLEY UPHOLSTERED KING PLATFORM BED

ASSEMBLY INSTRUCTIONS

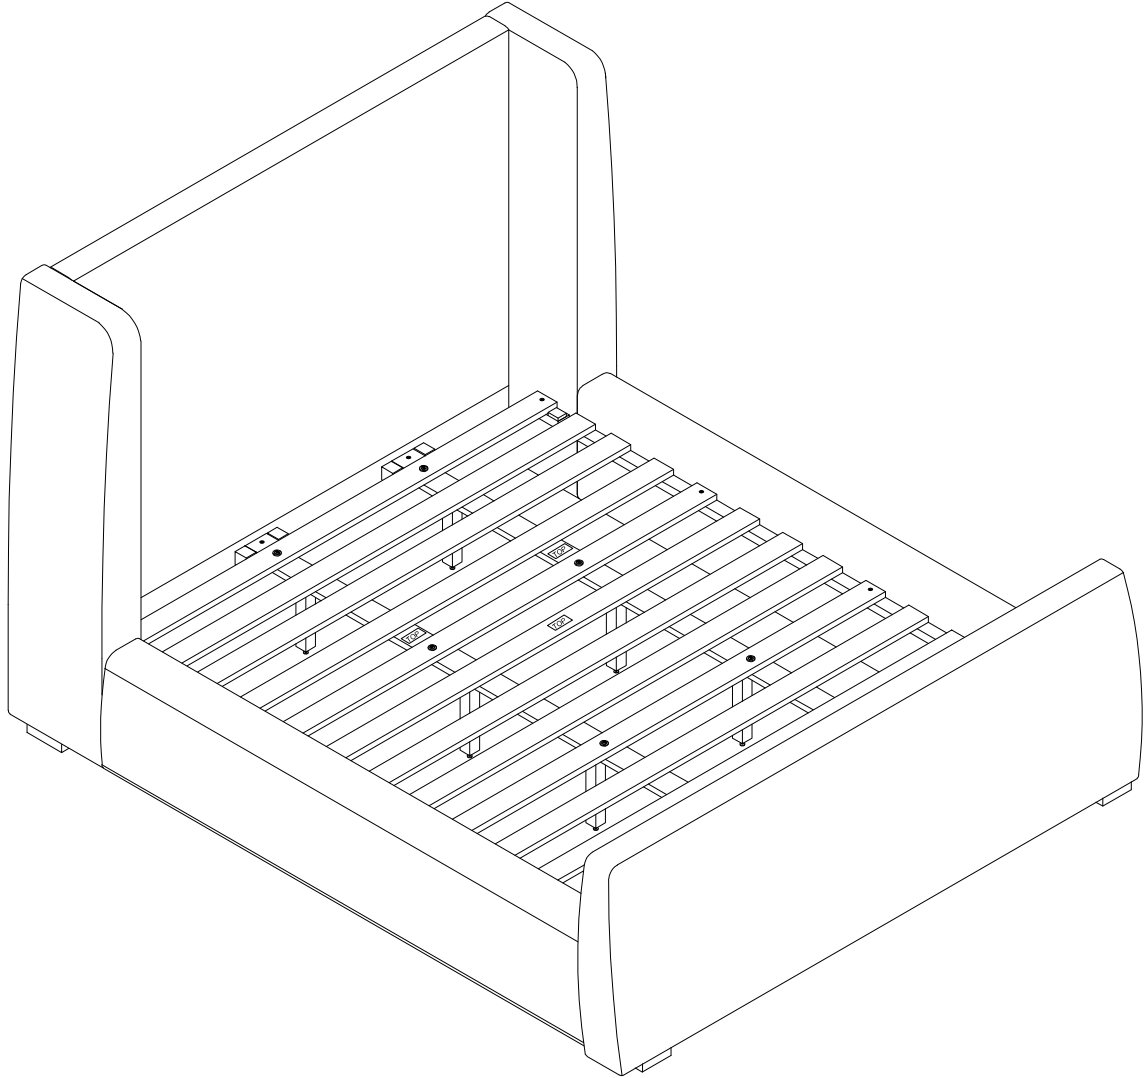


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.

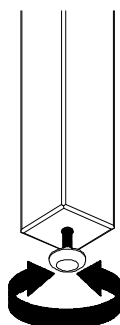

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

PRESLEY UPHOLSTERED KING PLATFORM BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

D. CLEAT	2 PCS
F. SLAT ROLL	1 SET
G. CENTER SLAT SUPPORT CLEAT	4 PCS
J. CENTER SLAT SUPPORT	2 PCS
K. SUPPORT LEG	8 PCS

STEP 1:

USE ALLEN KEY (15) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

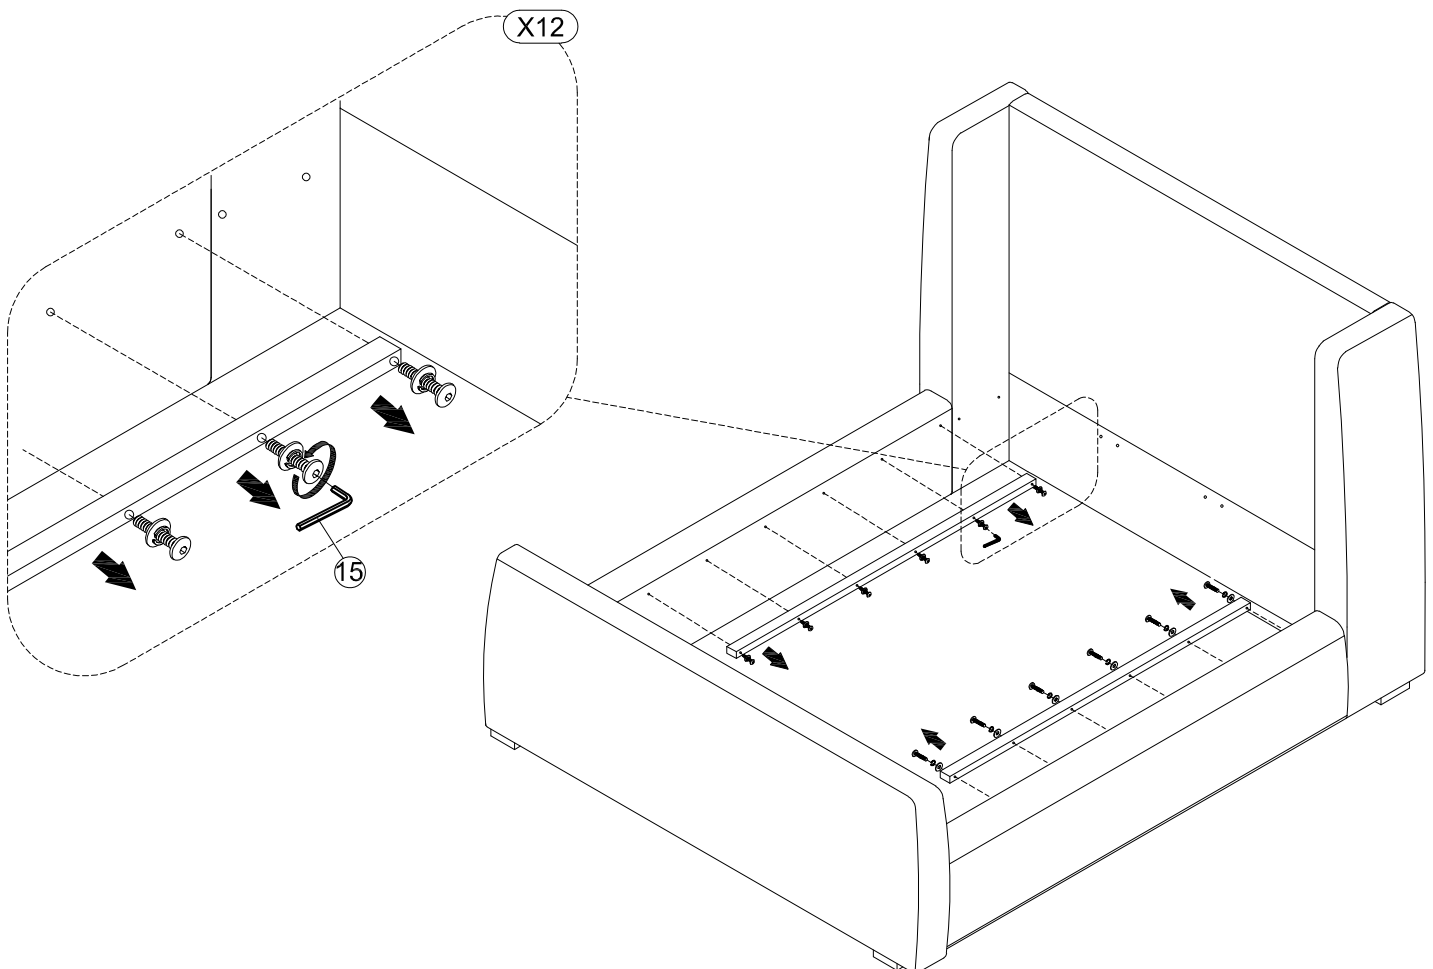

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION


PRESLEY UPHOLSTERED C.KING PLATFORM BED

ASSEMBLY INSTRUCTIONS



BOX#1

- A. HEADBOARD 1 PC
- B. LEFT WING 1 PC
- C. RIGHT WING 1 PC

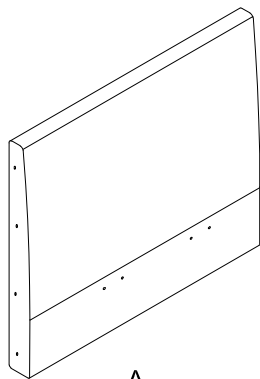

A



B



C

HARDWARE KIT PACKED IN BOX #1

No.	Description	Image	Quantity
1	ALLEN BOLT (5/16"x 2")		8 PCS
2	FLAT WASHER (5/16")		8 PCS
3	LOCK WASHER (5/16")		8 PCS
4	ALLEN KEY (5/16")		1 PC

HARDWARE KIT PACKED IN BOX #2


5	THREADED BOLT (5/16"x 3-1/2")		8 PCS
6	ALLEN BOLT (5/16"x 2-1/2")		8 PCS
7	ALLEN BOLT (1/4"x 2-3/4")		4 PCS
8	ALLEN BOLT (1/4"x 1-1/4")		6 PCS
9	FLAT WASHER (5/16")		16 PCS
10	FLAT WASHER (1/4")		10 PCS
11	LOCK WASHER (5/16")		16 PCS
12	LOCK WASHER (1/4")		10 PCS
13	HEX NUT (5/16")		8 PCS
14	PHILLIPS SCREW (M4 x 32mm)		10 PCS
15	ALLEN KEY (5/16")		1 PC
16	WRENCH		1 PC
17	CONNECTING BRACKET		4 PCS

BOX#2


- D. CLEAT 2 PCS
- E. FOOTBOARD 1 PC
- F. SLAT ROLL 1 SET
- G. CENTER SLAT SUPPORT CLEAT 4 PCS



D

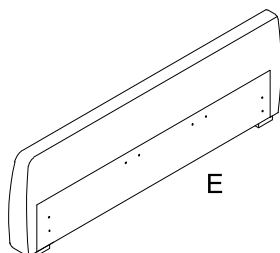

E

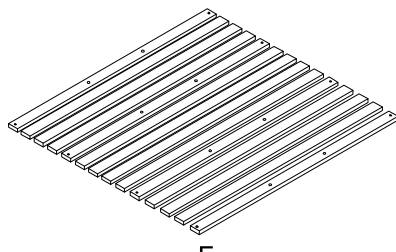


F




G

BOX#3


- H. LEFT SIDE RAIL 1 PC
- I. RIGHT SIDE RAIL 1 PC
- J. CENTER SLAT SUPPORT 2 PCS
- K. SUPPORT LEG 8 PCS

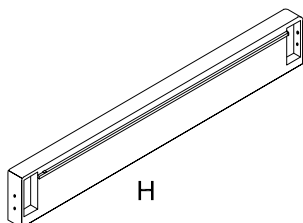

H

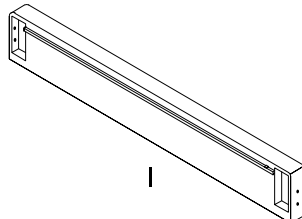

I



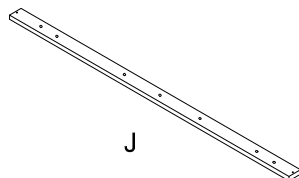


J



K

FULLY ASSEMBLED

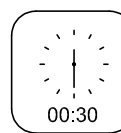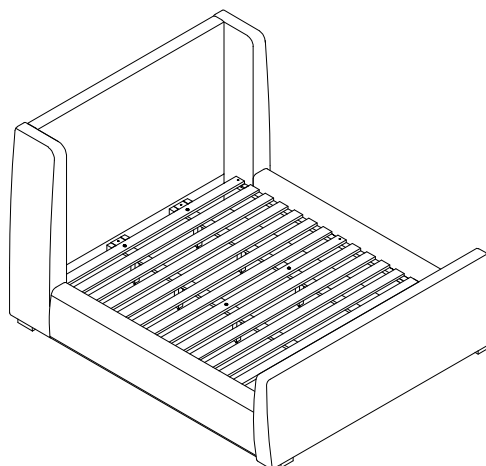


PRESLEY UPHOLSTERED C.KING PLATFORM BED


ASSEMBLY INSTRUCTIONS




STEP 1:

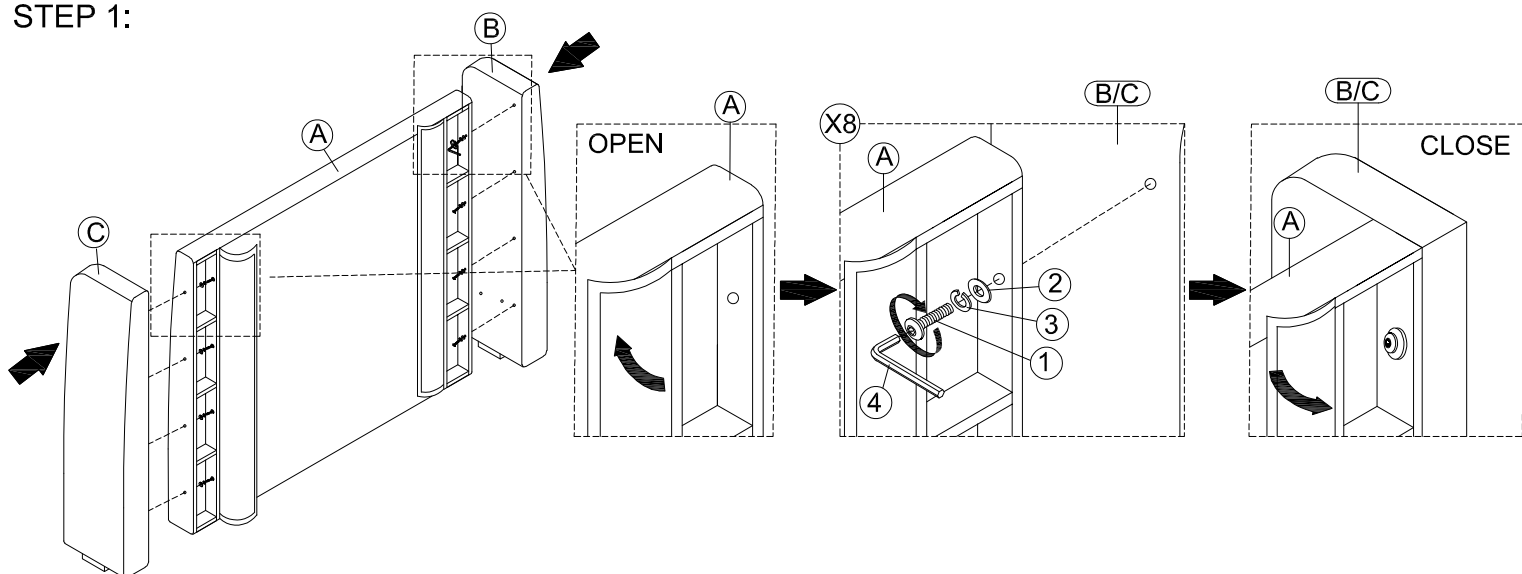

STEP 2:

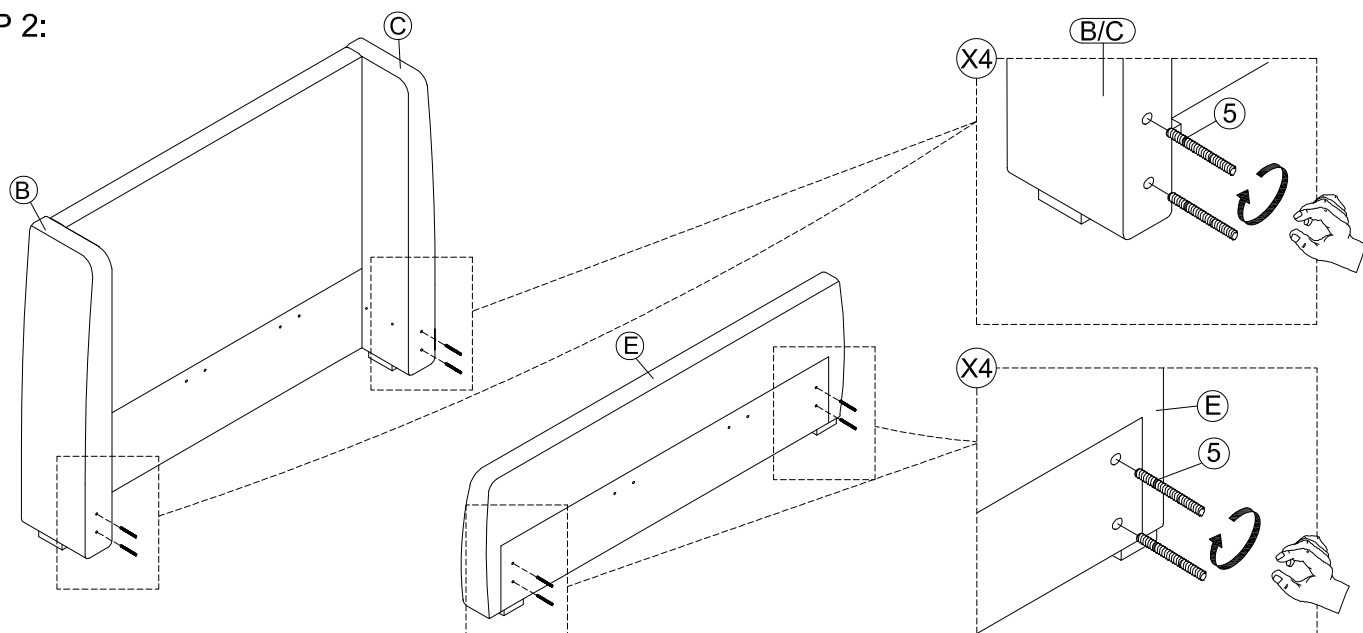

STEP 3:

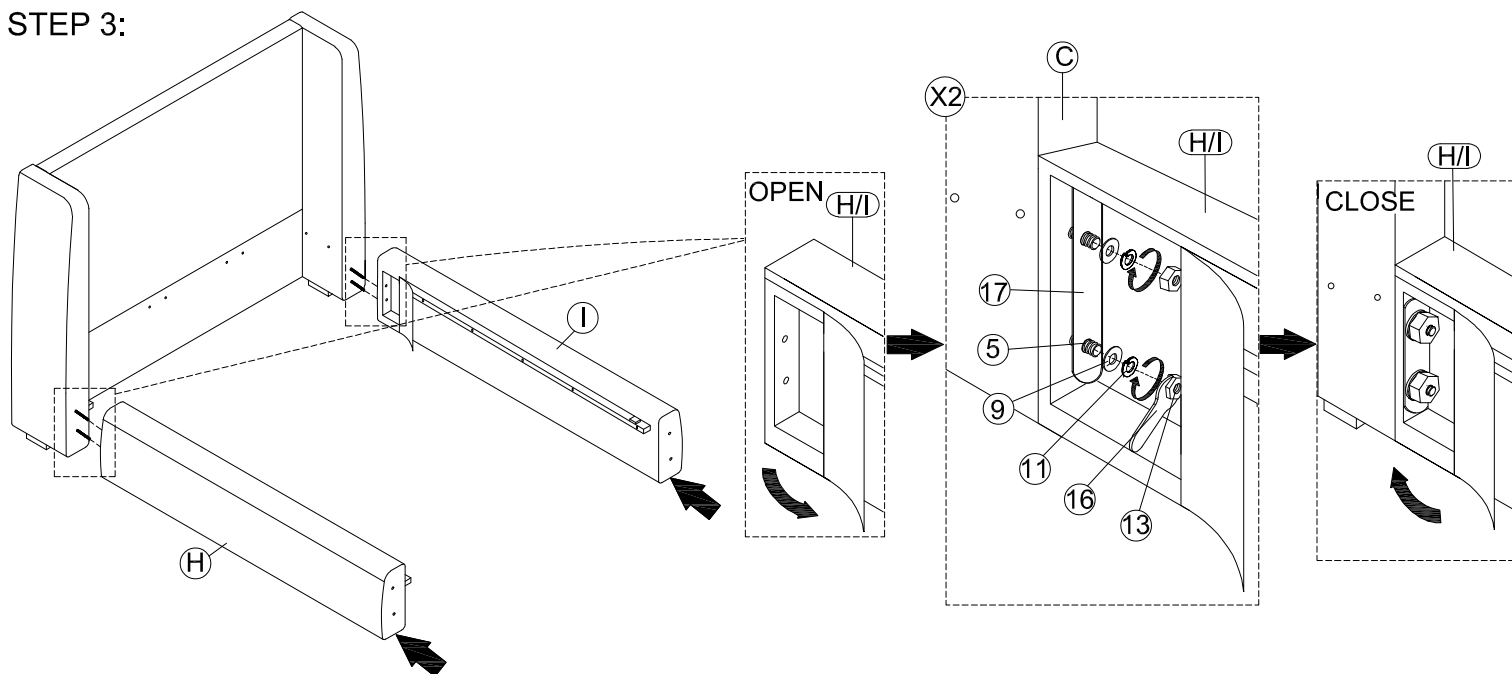


PRESLEY UPHOLSTERED C.KING PLATFORM BED

ASSEMBLY INSTRUCTIONS




STEP 4:

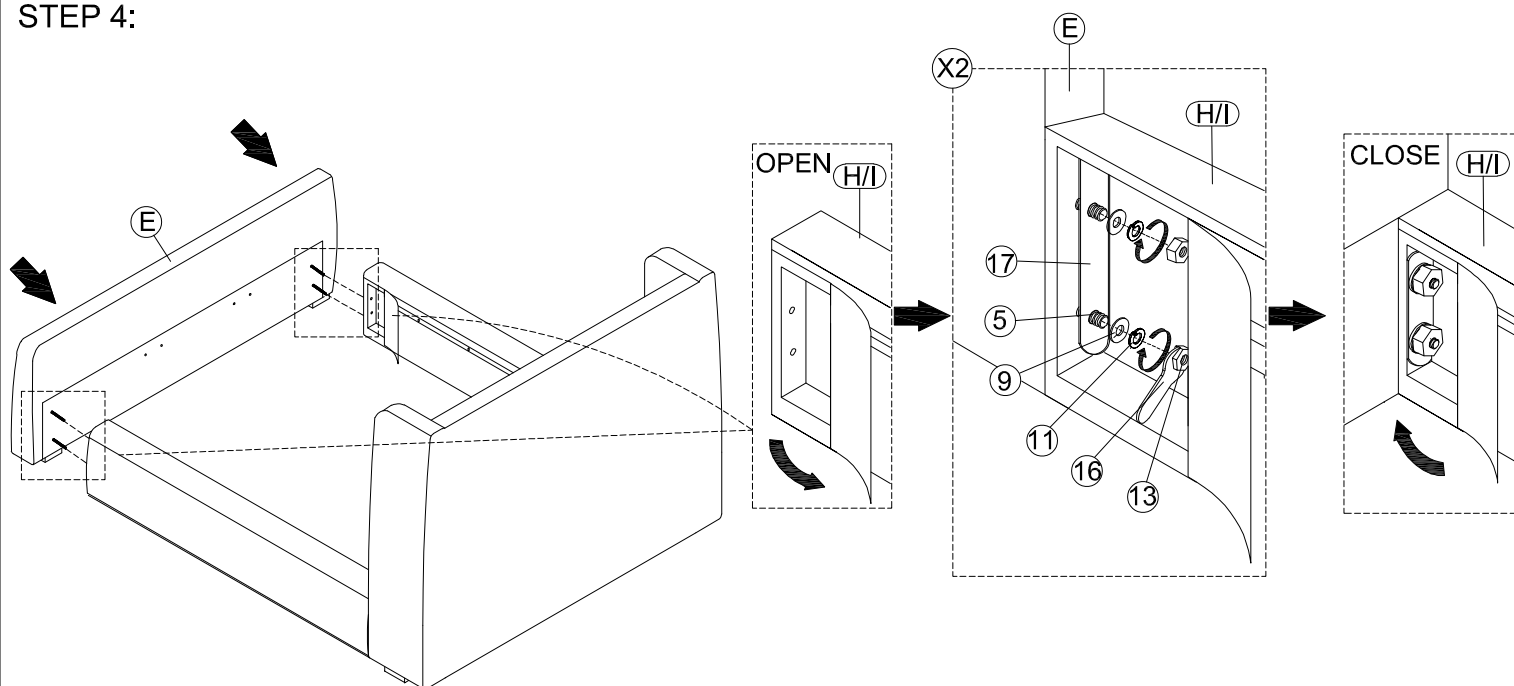

STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 5-10 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 5

STEP 5:

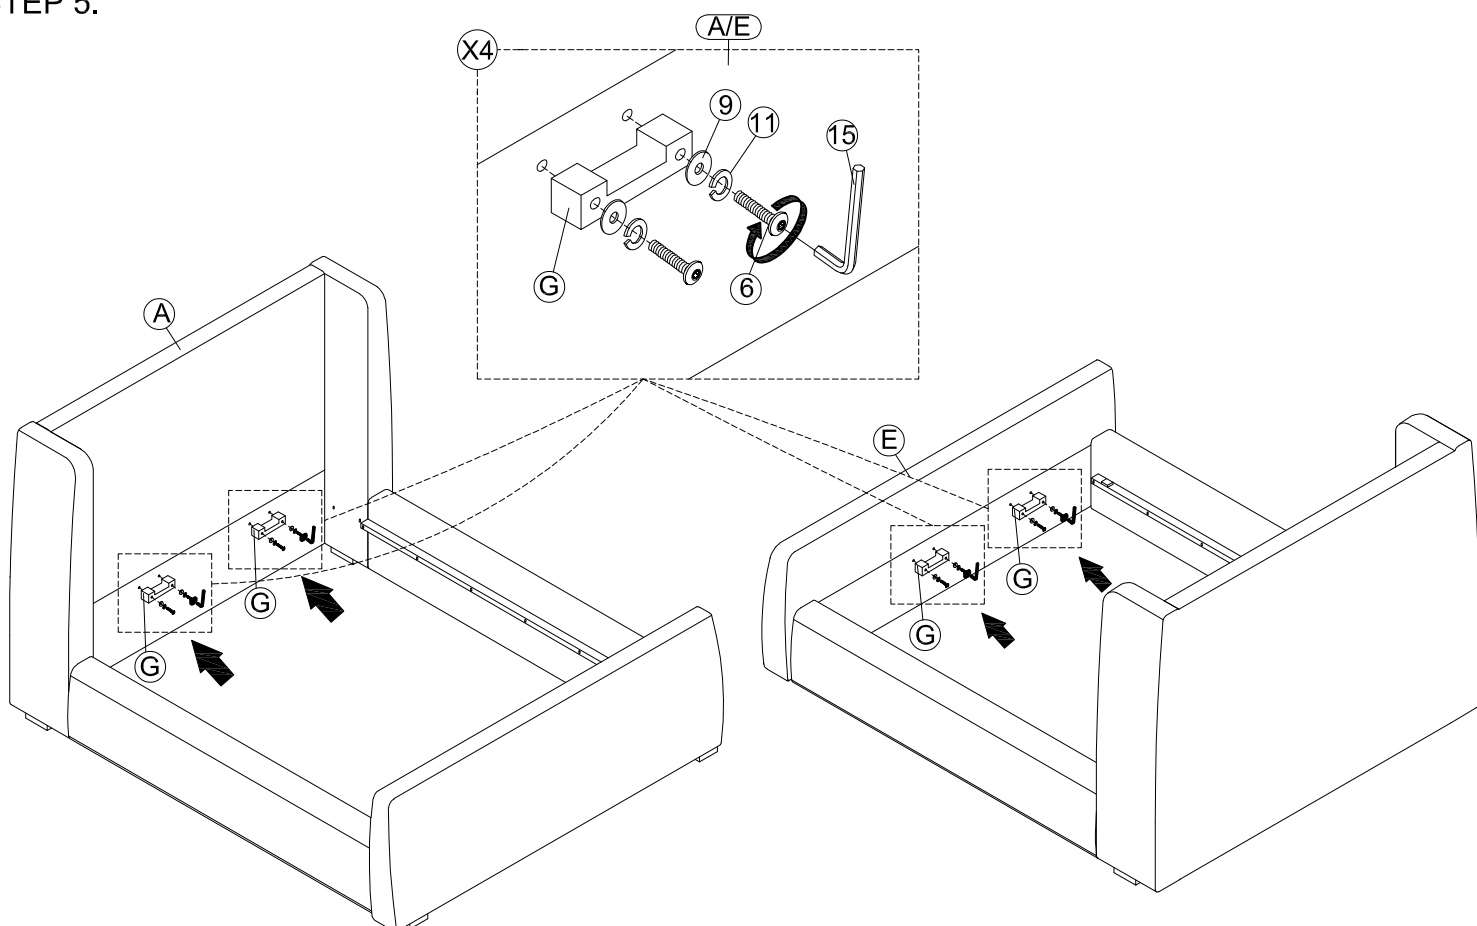


PRESLEY UPHOLSTERED C.KING PLATFORM BED


ASSEMBLY INSTRUCTIONS




STEP 6:

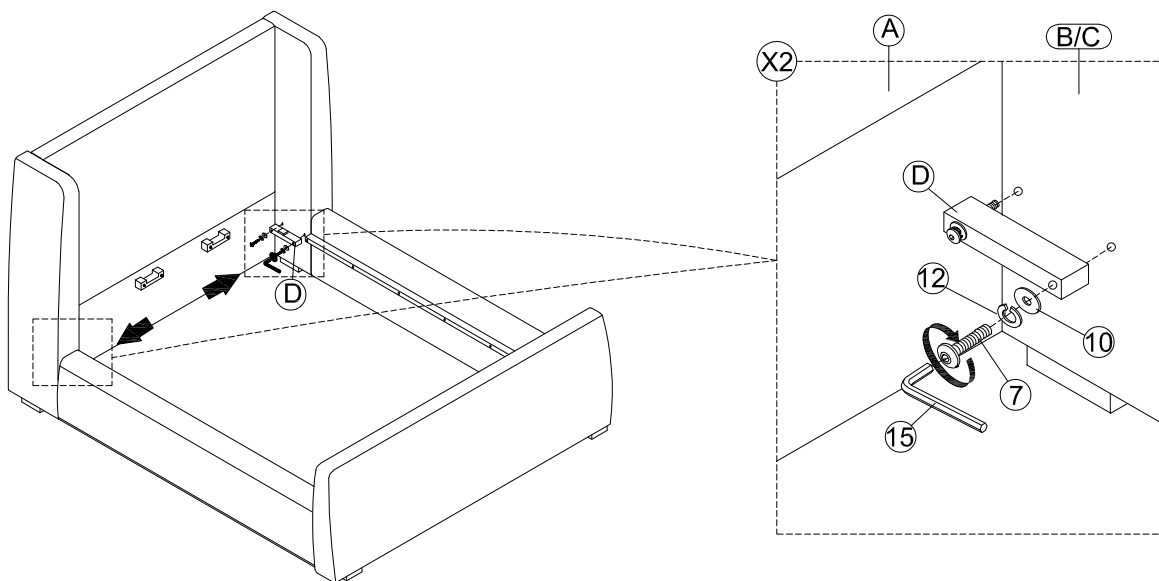

STEP 7:

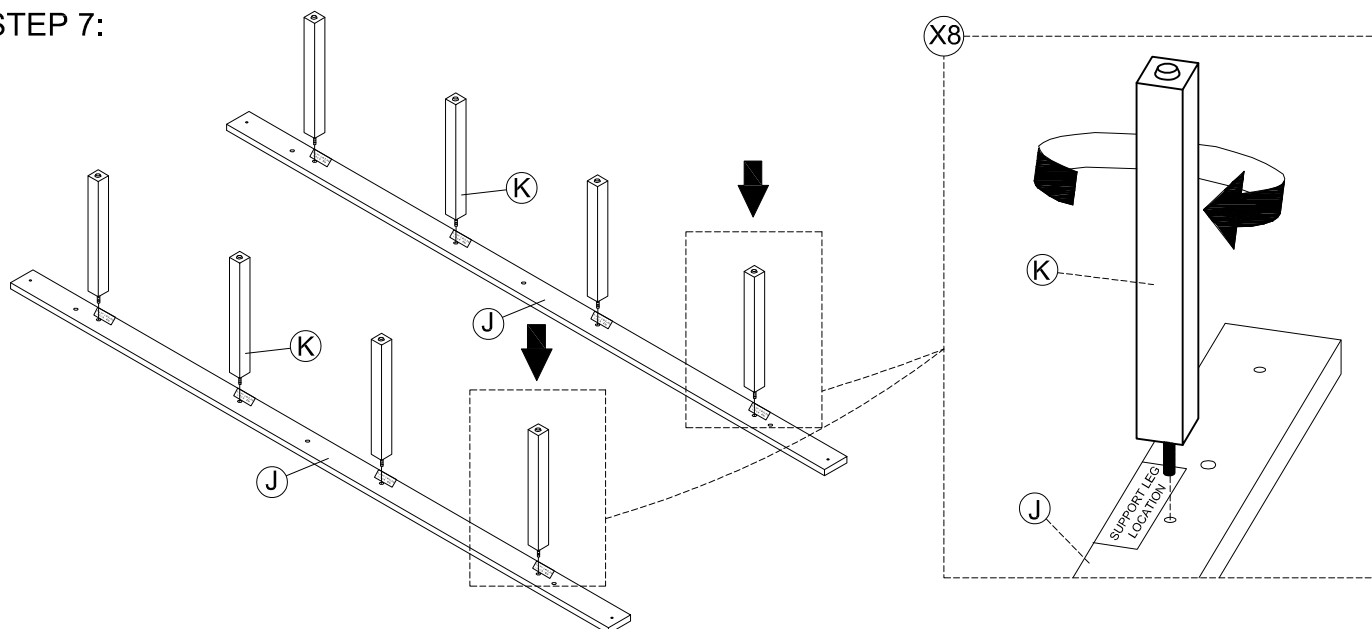

STEP 8:



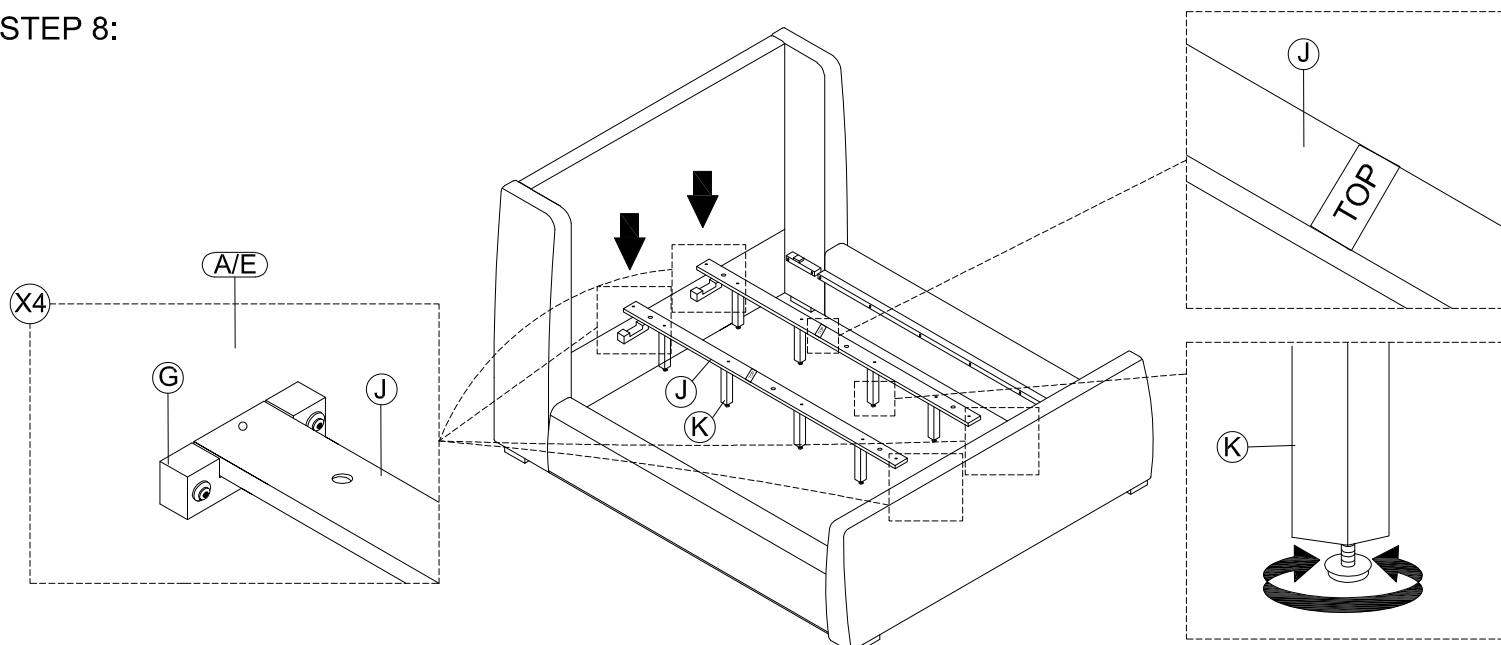


PRESLEY UPHOLSTERED C.KING PLATFORM BED




ASSEMBLY INSTRUCTIONS



STEP 9:

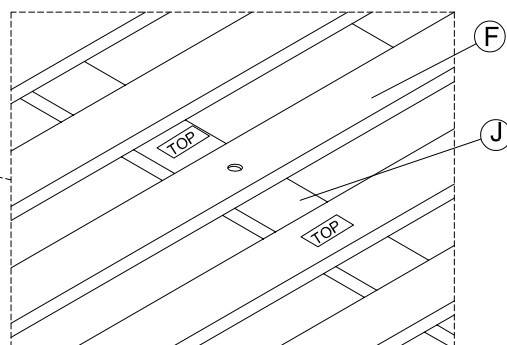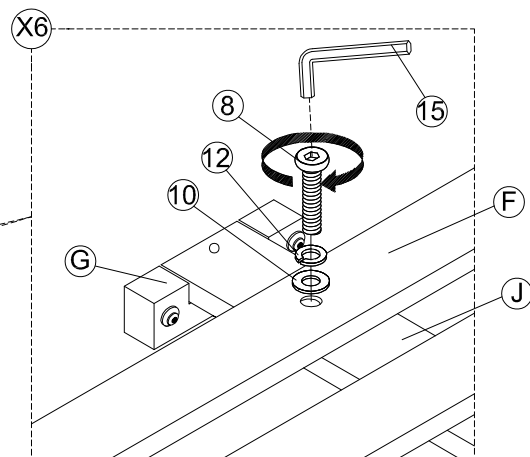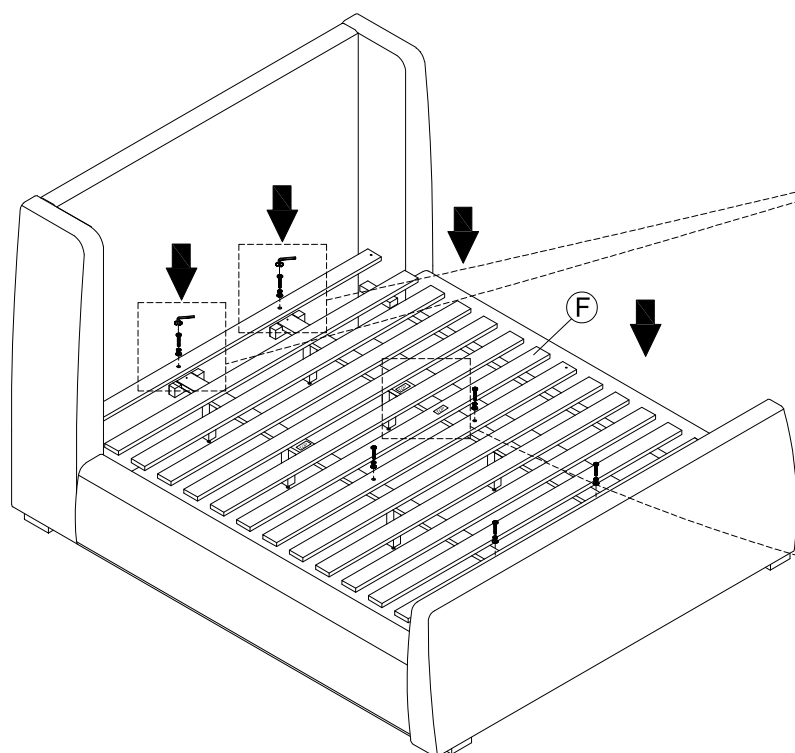


STEP 10:

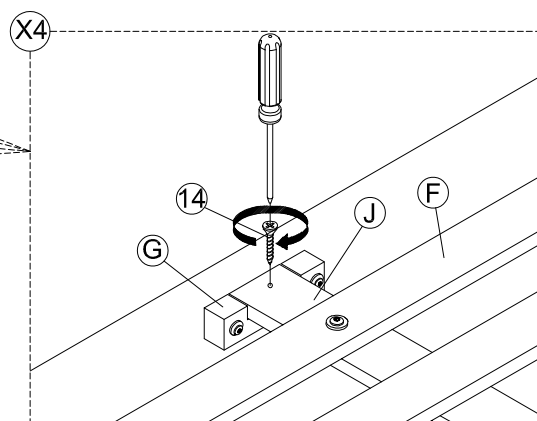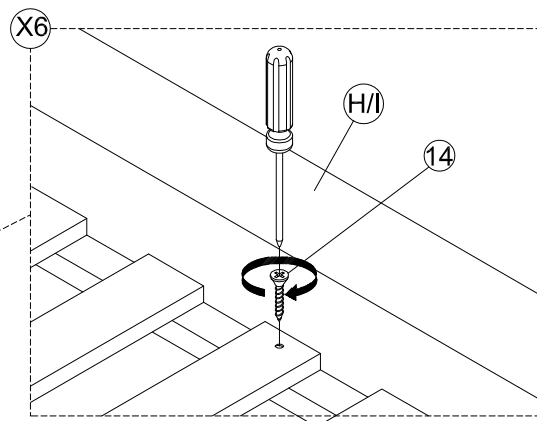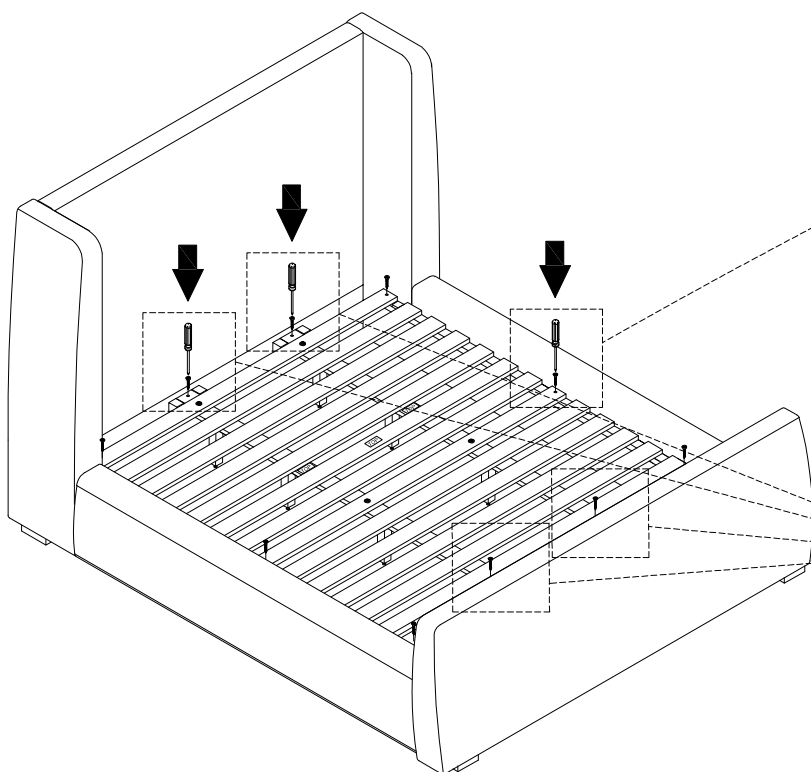

PRESLEY UPHOLSTERED C.KING PLATFORM BED

ASSEMBLY INSTRUCTIONS

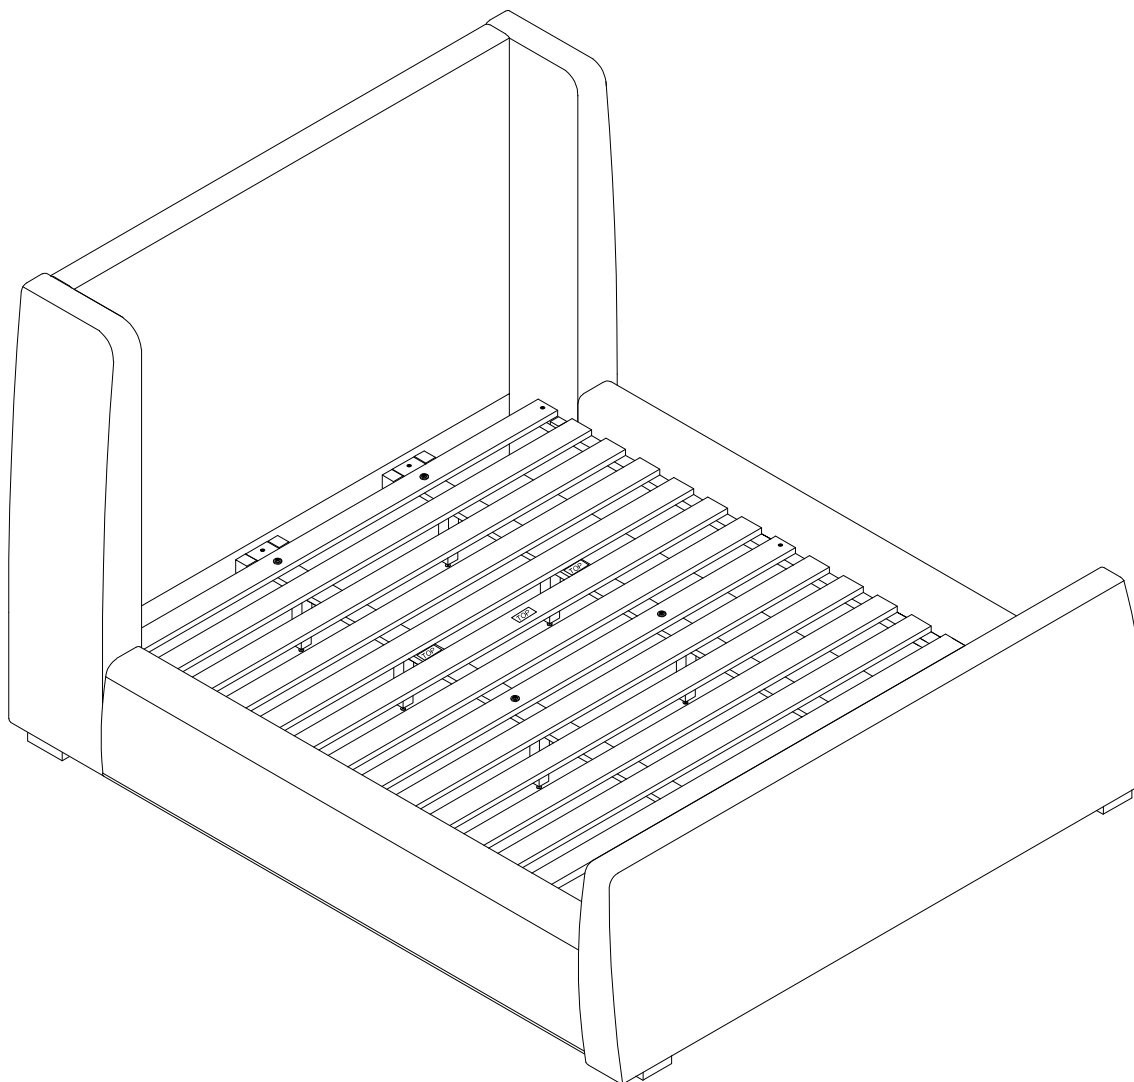


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.



MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

PRESLEY UPHOLSTERED C.KING PLATFORM BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

D. CLEAT	2 PCS
F. SLAT ROLL	1 SET
G. CENTER SLAT SUPPORT CLEAT	4 PCS
J. CENTER SLAT SUPPORT	2 PCS
K. SUPPORT LEG	8 PCS

STEP 1:

USE ALLEN KEY (15) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

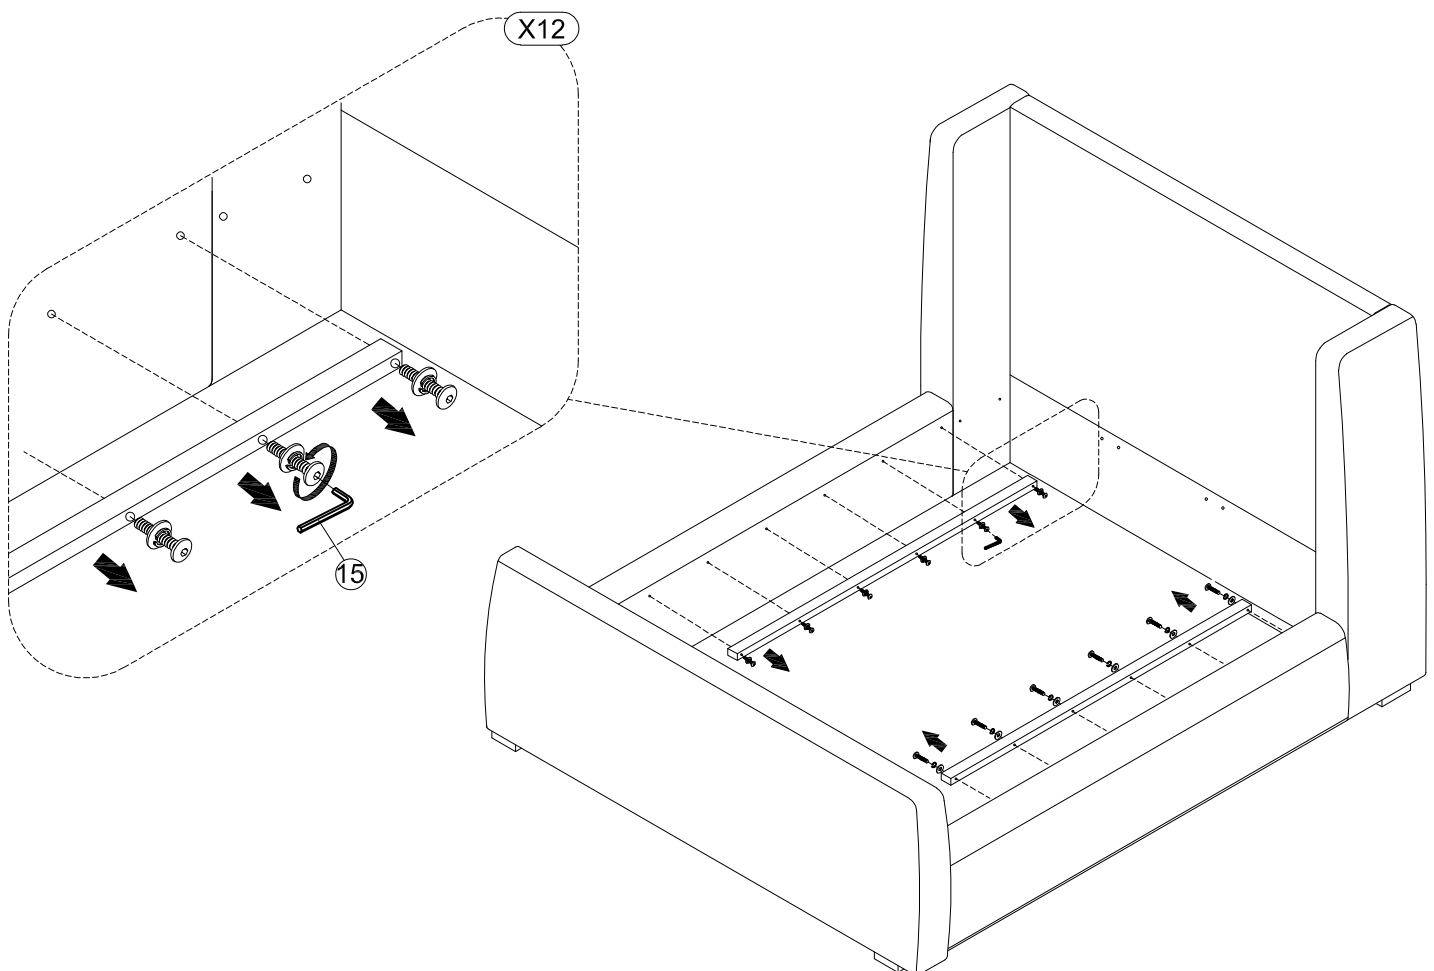

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION


PRESLEY UPHOLSTERED FULL PLATFORM BED

ASSEMBLY INSTRUCTIONS



BOX#1

- A. HEADBOARD 1 PC
- B. LEFT WING 1 PC
- C. RIGHT WING 1 PC

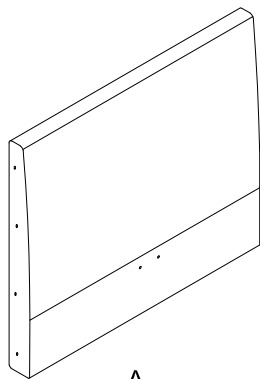

A



B



C

HARDWARE KIT PACKED IN BOX #1

No.	Description	Image	Quantity
1	ALLEN BOLT (5/16"x 2")		8 PCS
2	FLAT WASHER (5/16")		8 PCS
3	LOCK WASHER (5/16")		8 PCS
4	ALLEN KEY (5/16")		1 PC

HARDWARE KIT PACKED IN BOX #2


5	THREADED BOLT (5/16"x 3-1/2")		8 PCS
6	ALLEN BOLT (5/16"x 2-1/2")		4 PCS
7	ALLEN BOLT (1/4"x 2-3/4")		4 PCS
8	ALLEN BOLT (1/4"x 1-1/4")		3 PCS
9	FLAT WASHER (5/16")		12 PCS
10	FLAT WASHER (1/4")		7 PCS
11	LOCK WASHER (5/16")		12 PCS
12	LOCK WASHER (1/4")		7 PCS
13	HEX NUT (5/16")		8 PCS
14	PHILLIPS SCREW (M4 x 32mm)		8 PCS
15	ALLEN KEY (5/16")		1 PC
16	WRENCH		1 PC
17	CONNECTING BRACKET		4 PCS

BOX#2


- D. CLEAT 2 PCS
- E. FOOTBOARD 1 PC
- F. SLAT ROLL 1 SET
- G. CENTER SLAT SUPPORT CLEAT 2 PCS



D

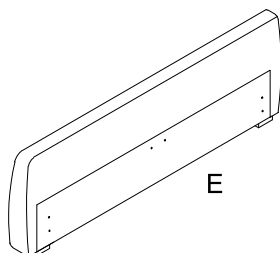

E

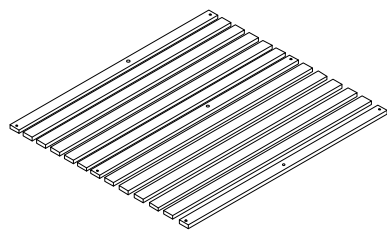


F




G

BOX#3


- H. LEFT SIDE RAIL 1 PC
- I. RIGHT SIDE RAIL 1 PC
- J. CENTER SLAT SUPPORT 1 PC
- K. SUPPORT LEG 4 PCS

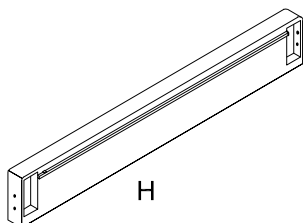

H

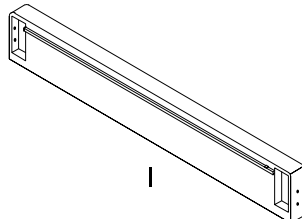

I



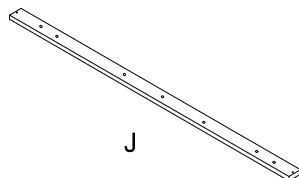


J



K

FULLY ASSEMBLED

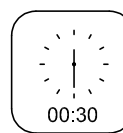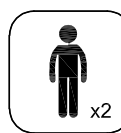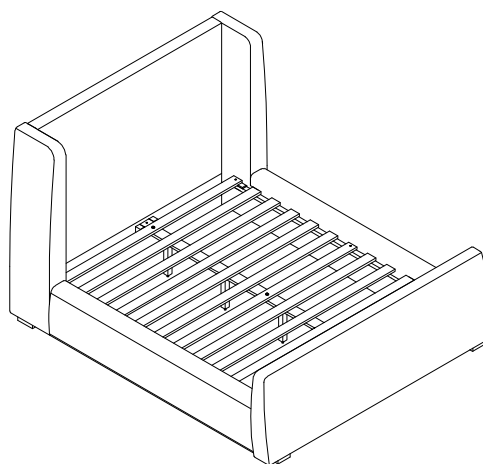


PRESLEY UPHOLSTERED FULL PLATFORM BED


ASSEMBLY INSTRUCTIONS




STEP 1:

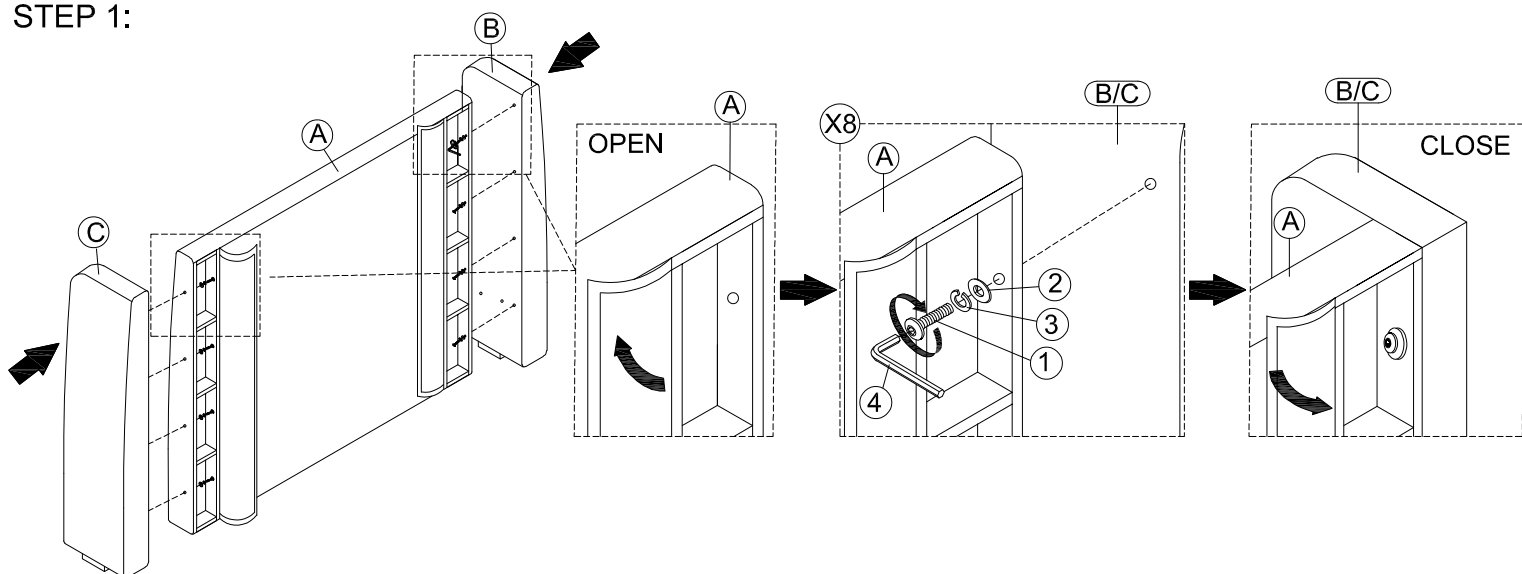

STEP 2:

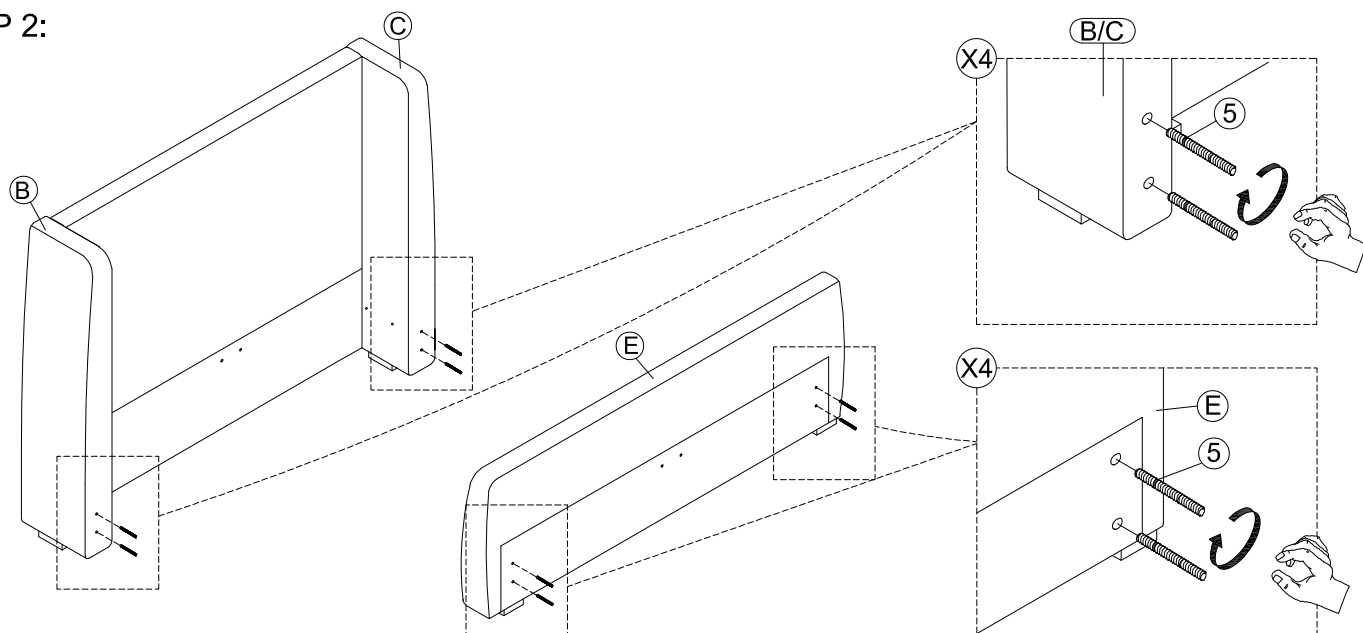

STEP 3:

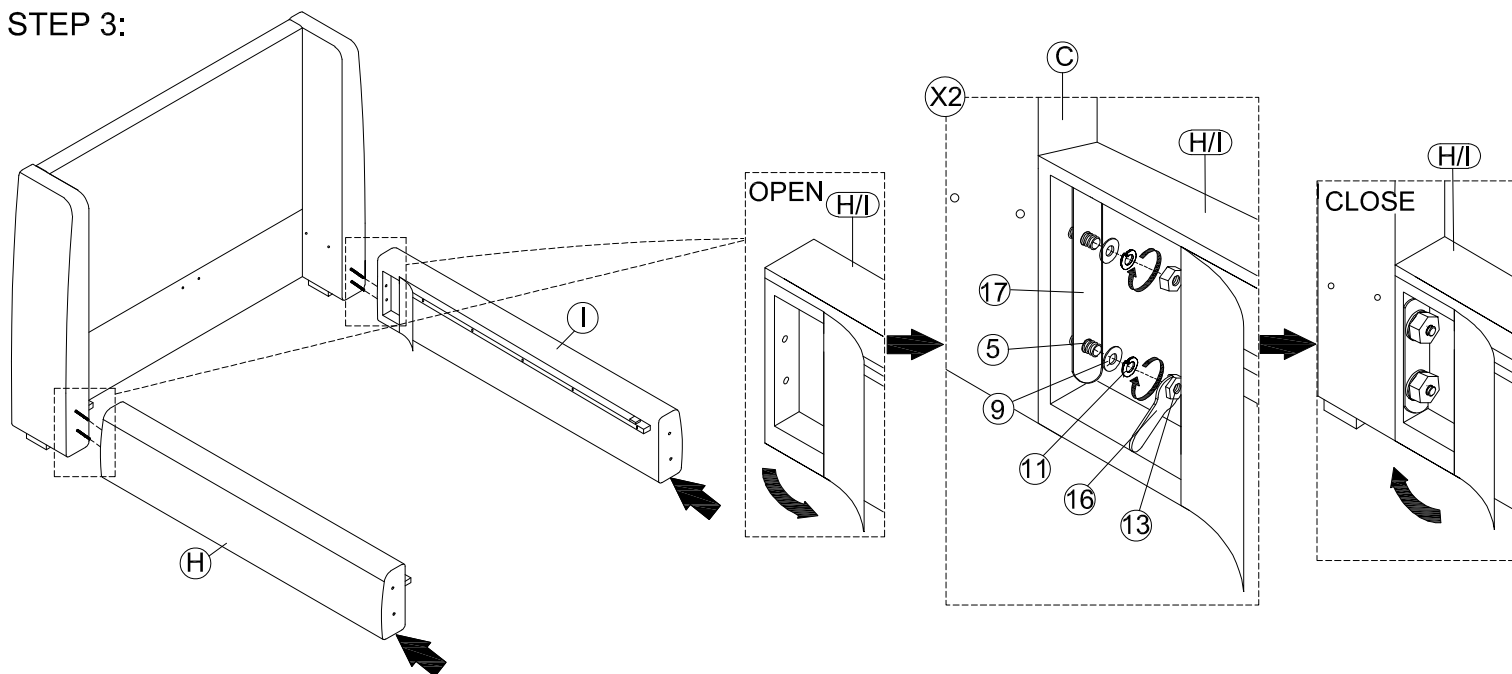


PRESLEY UPHOLSTERED FULL PLATFORM BED

ASSEMBLY INSTRUCTIONS




STEP 4:

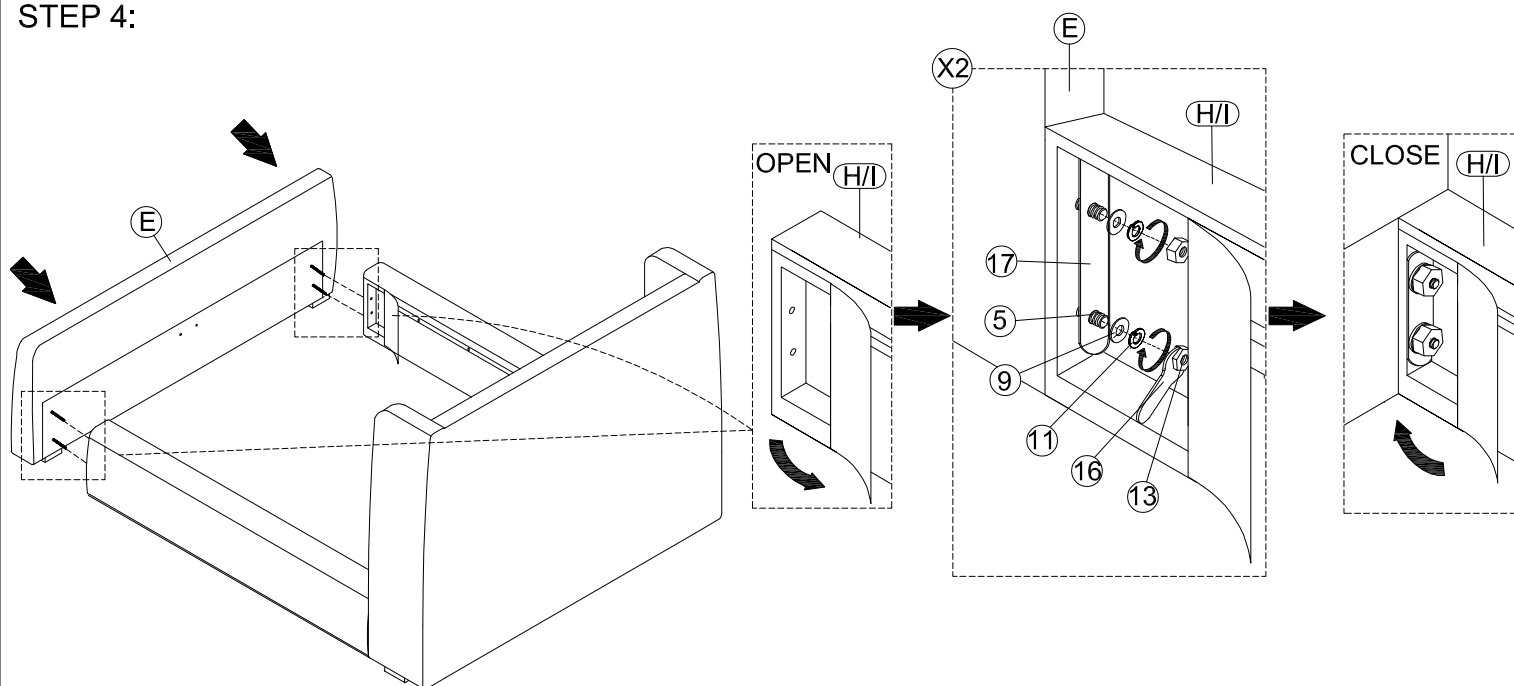

STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 5-10 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 5

STEP 5:

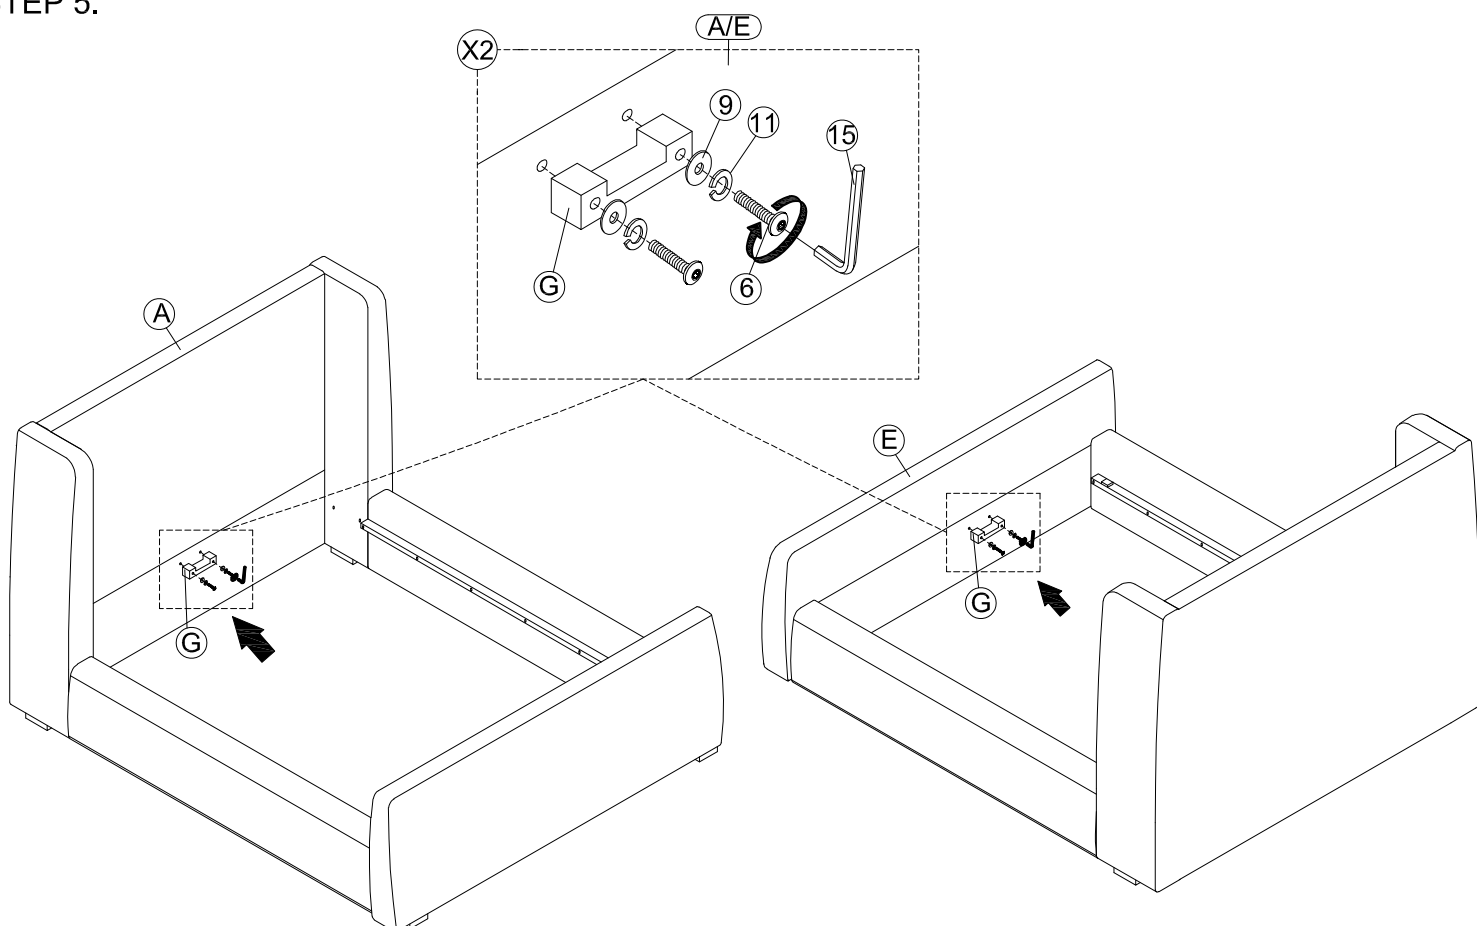


PRESLEY UPHOLSTERED FULL PLATFORM BED


ASSEMBLY INSTRUCTIONS




STEP 6:

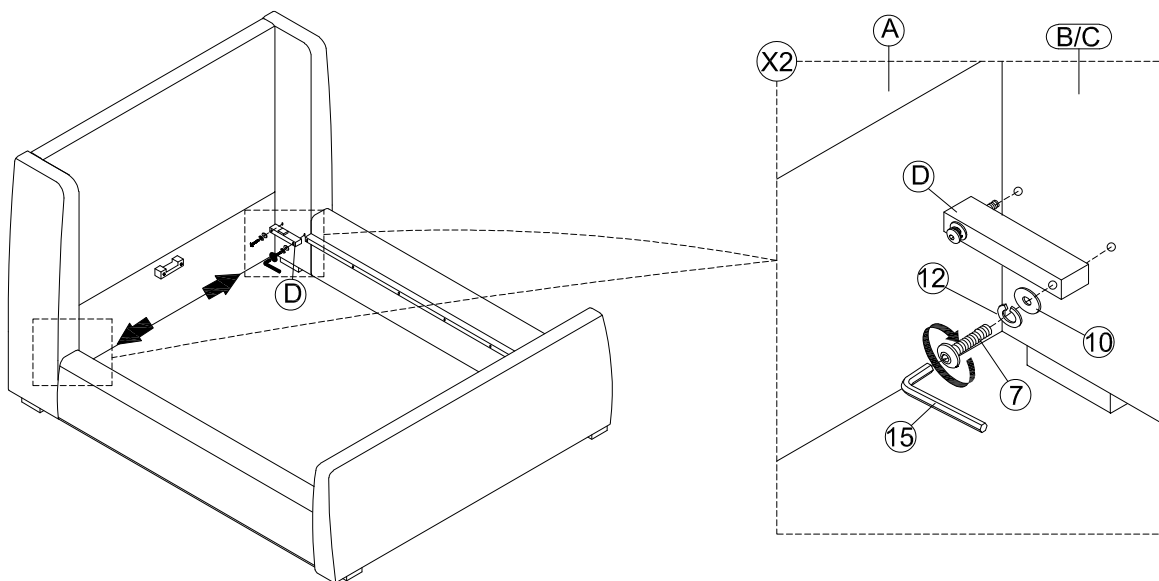

STEP 7:

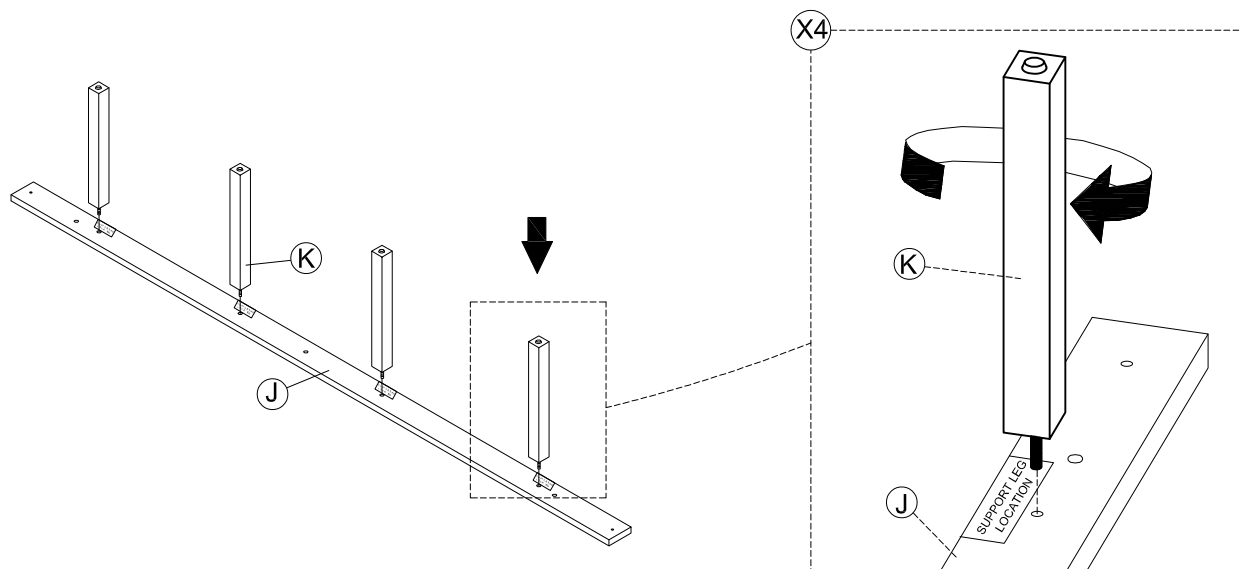

STEP 8:



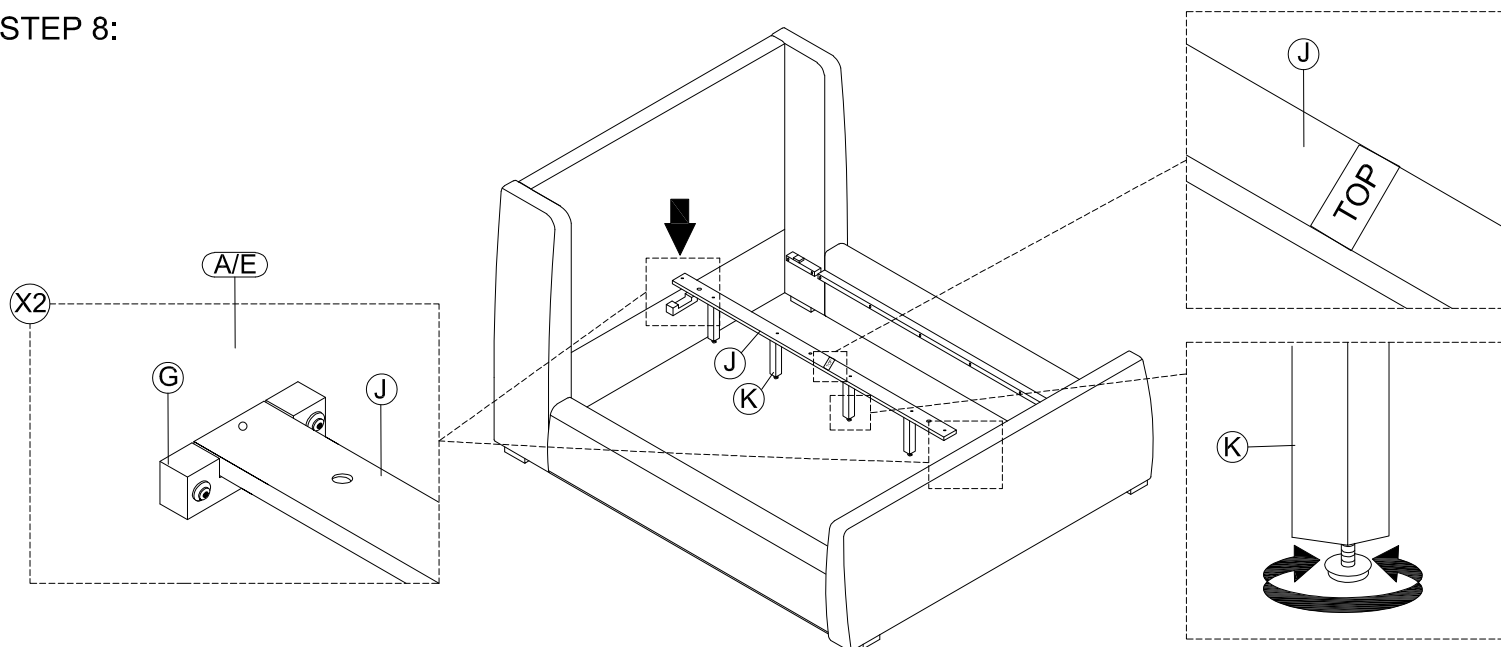


PRESLEY UPHOLSTERED FULL PLATFORM BED




ASSEMBLY INSTRUCTIONS



STEP 9:

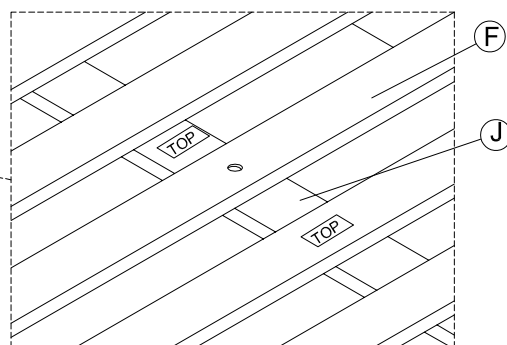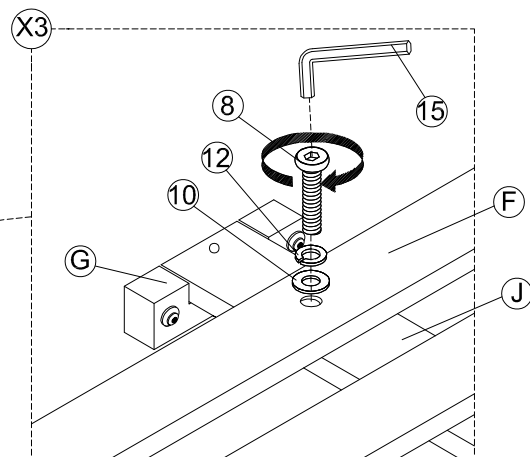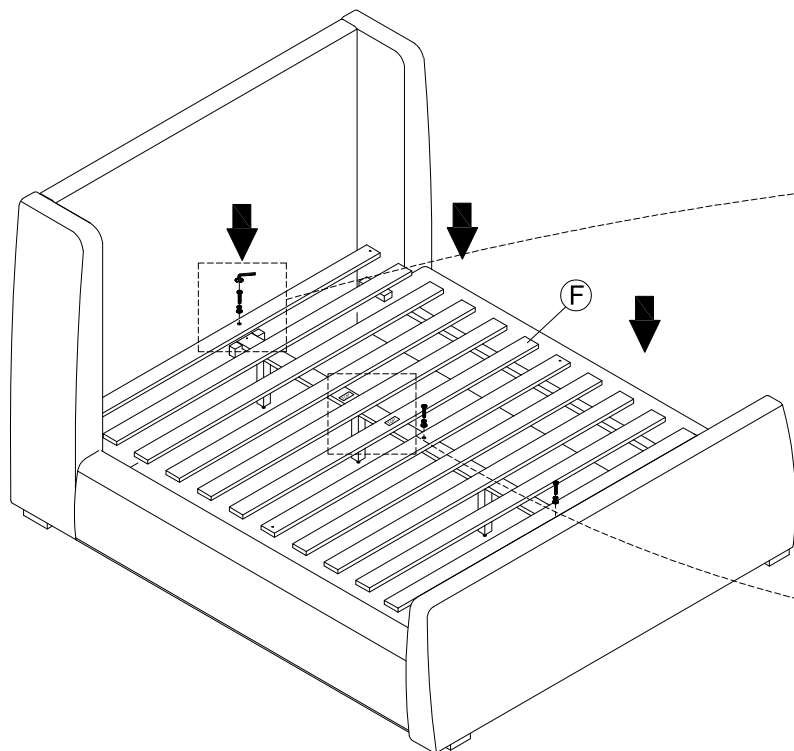


STEP 10:

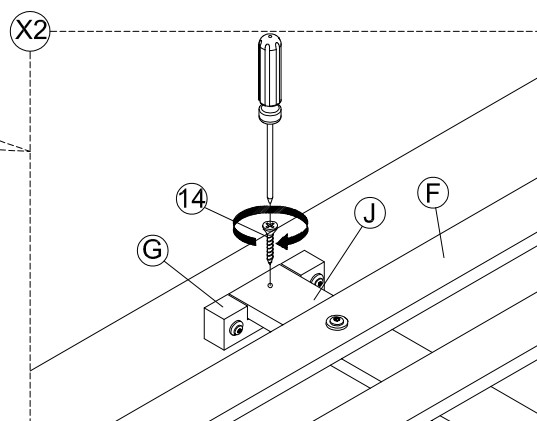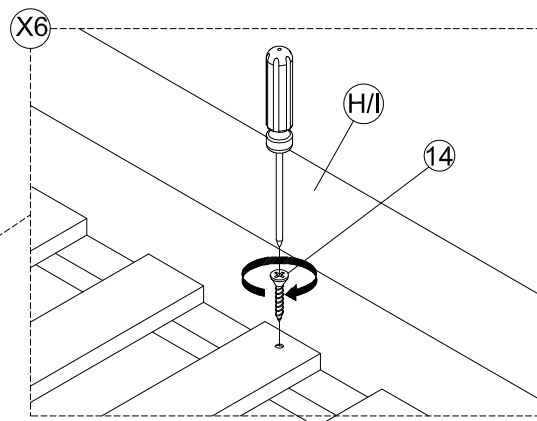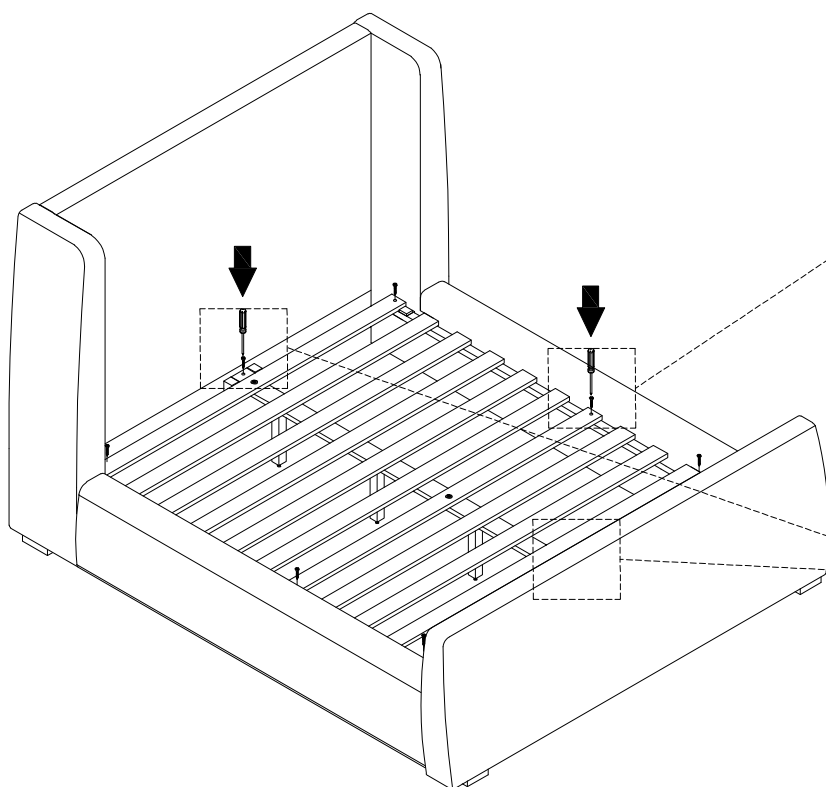

PRESLEY UPHOLSTERED FULL PLATFORM BED

ASSEMBLY INSTRUCTIONS

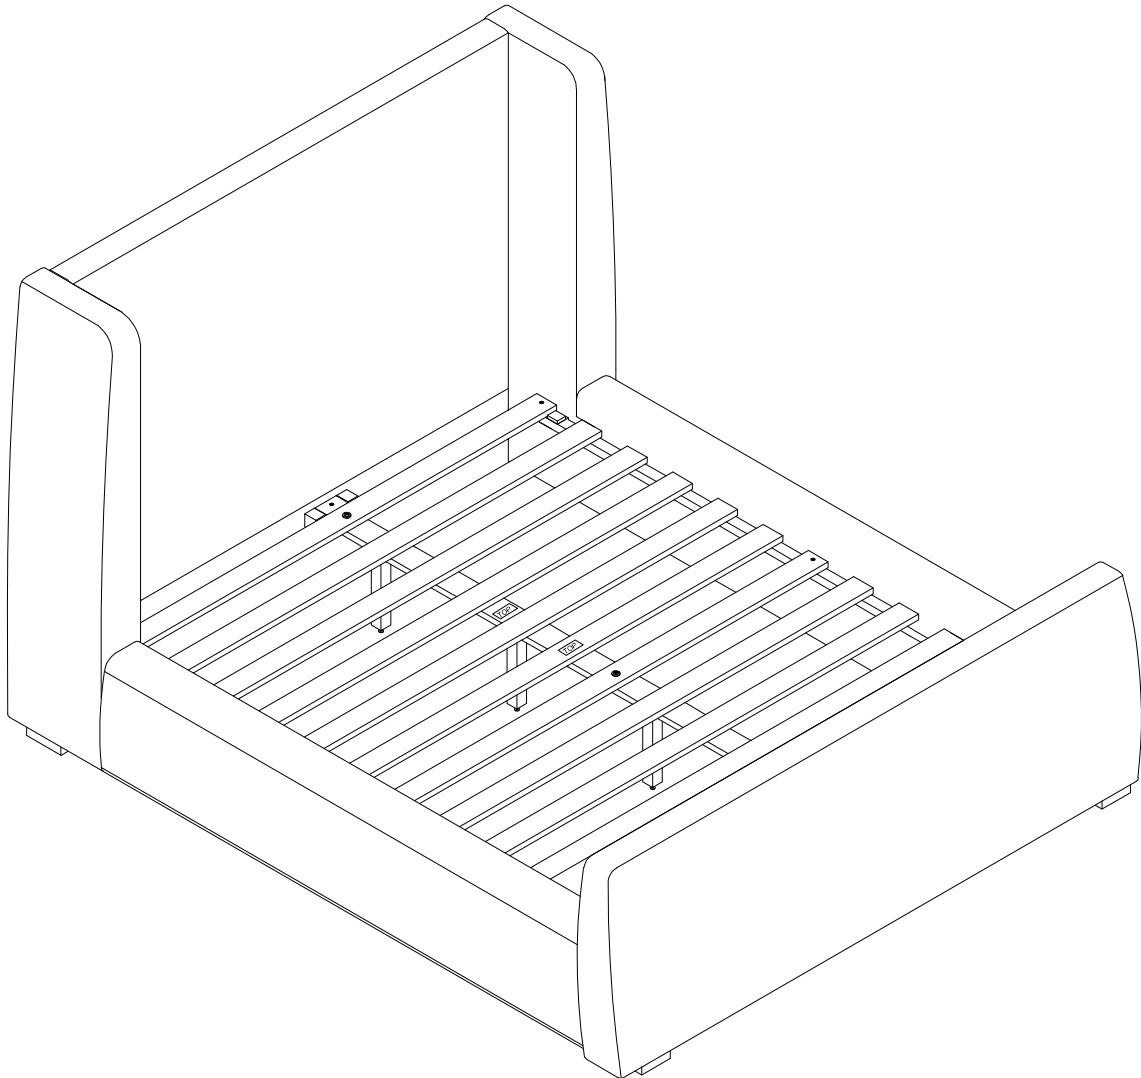


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.

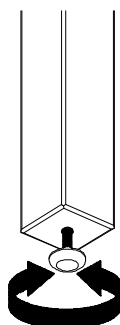

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

PRESLEY UPHOLSTERED FULL PLATFORM BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

D. CLEAT	2 PCS
F. SLAT ROLL	1 SET
G. CENTER SLAT SUPPORT CLEAT	2 PCS
J. CENTER SLAT SUPPORT	1 PC
K. SUPPORT LEG	4 PCS

STEP 1:

USE ALLEN KEY (15) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

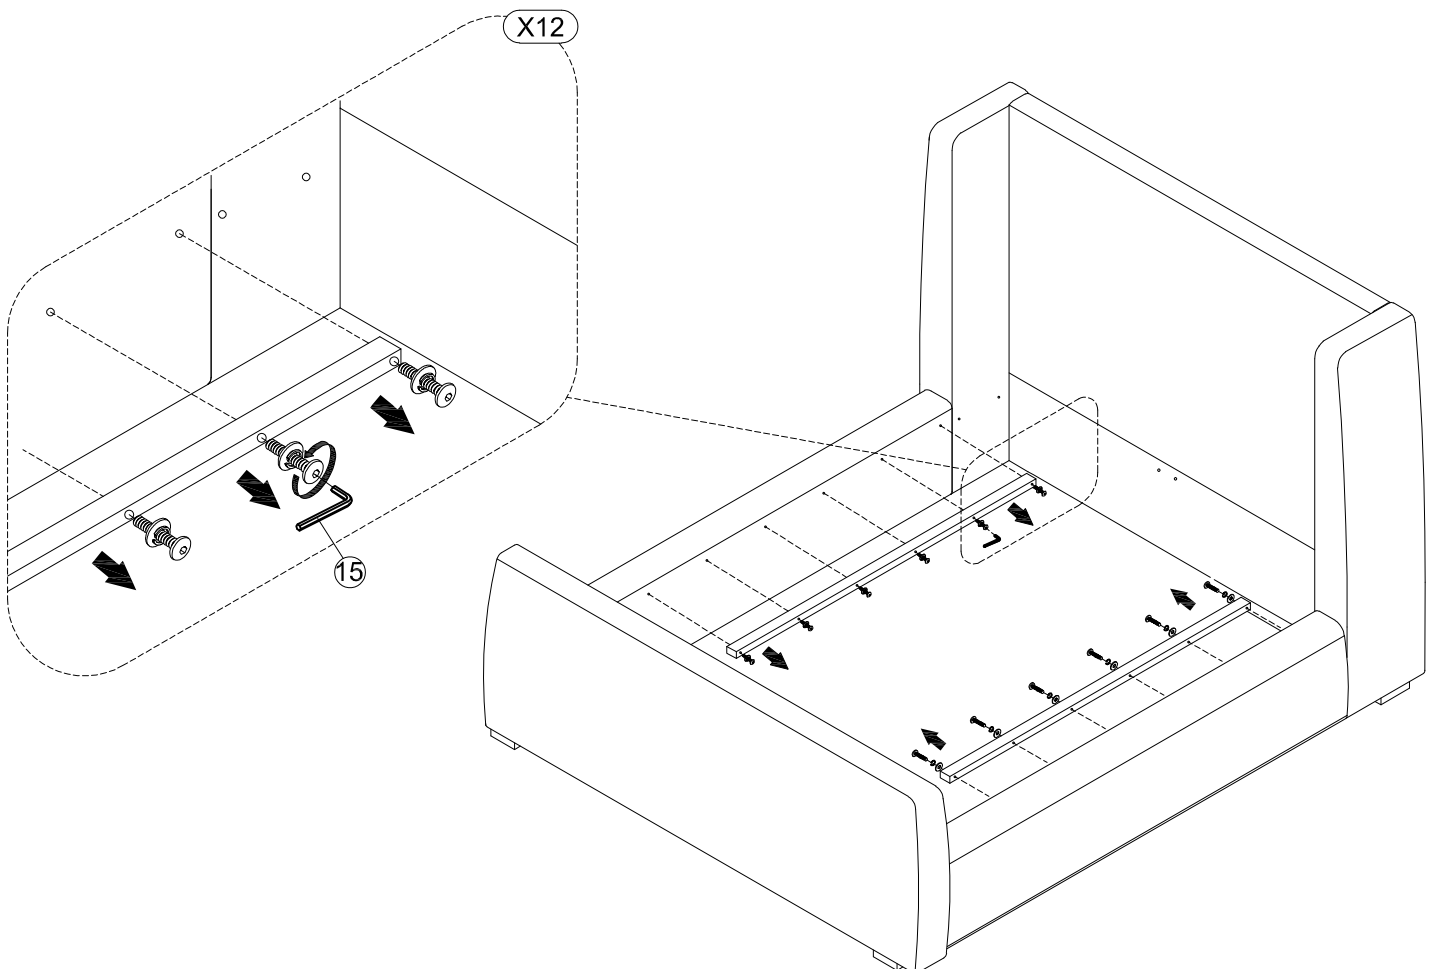

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION