


# WILLISTON STORAGE CART

## ASSEMBLY INSTRUCTIONS

**FIRSTIME & CO.®**  
— AMERICAN DESIGNED —


### STEP 1

Attach side frames (B) to the top frame (A).  
Tighten screws 75%.

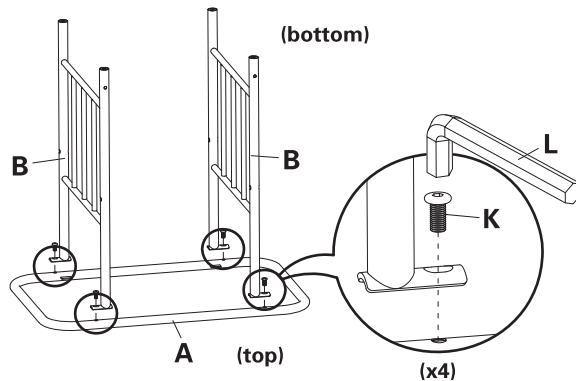


### STEP 2

Attach arc tubes (C) to the side frames (B).  
Tighten screws 75%.

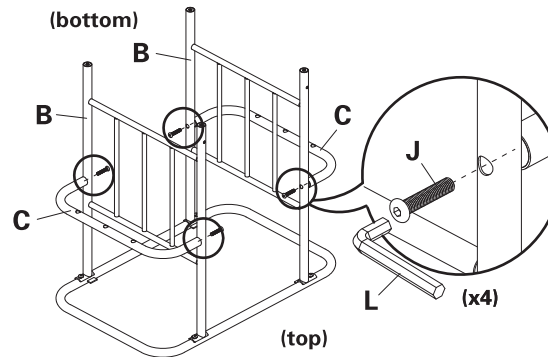


### STEP 3

Insert straight tubes (E) into arc tubes (C).  
Attach bottom shelf (D) onto side frames (B).  
Tighten screws 75%.

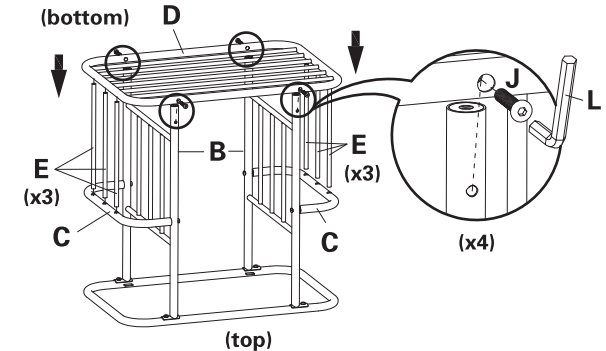


### STEP 4

Tighten all screws 100%.  
Attach wheels (G + H) to the bottom of the side frames (B) by screwing into place.

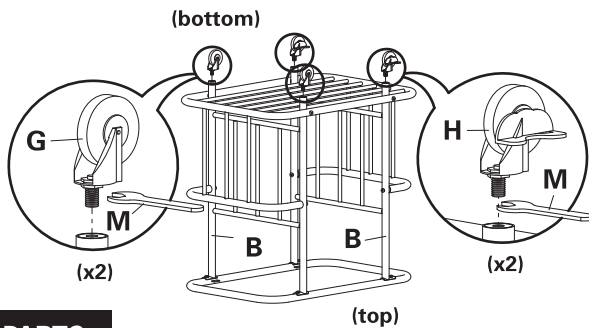

### STEP 5

Rotate cart upright.  
Place glass pads (I) along the sides of the top frame (A). Place glass shelf (F) onto the top frame (A).

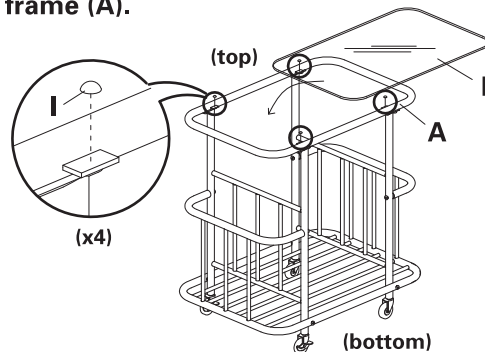

### FULLY ASSEMBLED



### PARTS

<b>A</b>	<b>B</b>	<b>C</b>	<b>D</b>	<b>E</b>	<b>F</b>	<b>G</b>	<b>H</b>	<b>I</b>	<b>J</b>	<b>K</b>	<b>L</b>	<b>M</b>
1 PC	2 PC	2 PC	1 PC	6 PC	1 PC	2 PC	2 PC	4 PC	8 PC	4 PC	1 PC	1 PC

**NOTE: DO NOT TIGHTEN SCREWS 100% UNTIL FULLY ASSEMBLED.**