


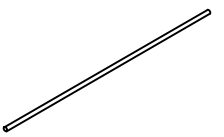
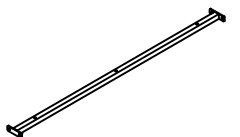
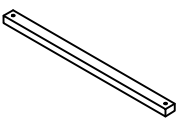
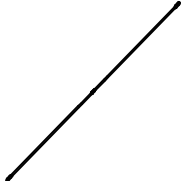
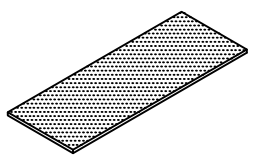
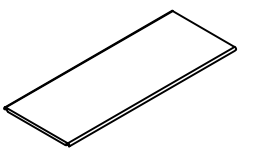

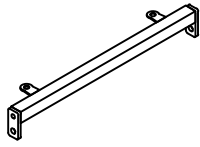
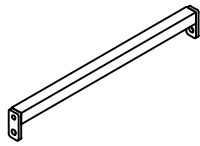
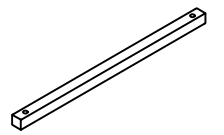
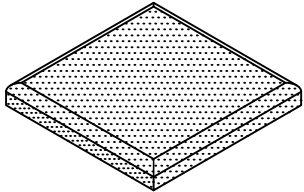













# ASSEMBLY INSTRUCTION

## 3PC PACK COUNTER HEIGHT SET


<b>A</b> Counter Frame - LSF  1pc	<b>B</b> Counter Frame - RSF  1pc	<b>C</b> Connect Bar  2pcs	<b>D</b> Stretcher  1pc
<b>E</b> Connect Support  2pcs	<b>F</b> Cross bar  2pcs	<b>G</b> Counter Top  1pc	<b>H</b> Shelf Board  1pc
<b>I</b> Stool Frame  4pcs	<b>J</b> Stool Stretcher - Upper  4pcs	<b>K</b> Stool Stretcher - Lower  4pcs	<b>L</b> Stool Connect Bar  4pcs
<b>M</b> Cushion  2pcs	<b>N</b> Bolt $\varnothing 1/4" \times 1/2"$  8pcs	<b>O</b> Bolt $\varnothing 1/4" \times 1-1/4"$  3pcs	<b>P</b> Bolt $\varnothing 1/4" \times 1/2"$  28pcs
<b>Q</b> Bolt $\varnothing 1/4" \times 1-1/4"$  16pcs	<b>R</b> Bolt $\varnothing 1/4" \times 1-3/4"$  4pcs	<b>S</b> Bolt $\varnothing 3/16" \times 1/2"$  5pcs	<b>T</b> Screw $M4 \times 15mm$  8pcs
<b>U</b> Flat Washer $\varnothing 16mm$  11pcs	<b>V</b> Flat Washer $\varnothing 12mm$  14pcs	<b>W</b> Hex Nut $\varnothing 3/16"$  1pc	<b>X</b> Allen Key $M4$  1pc

**Y** Spanner  
8-11mm




1pc

**Z** Screwdriver  
(Not Provided)

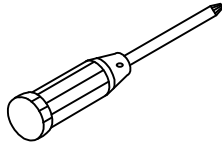


1pc

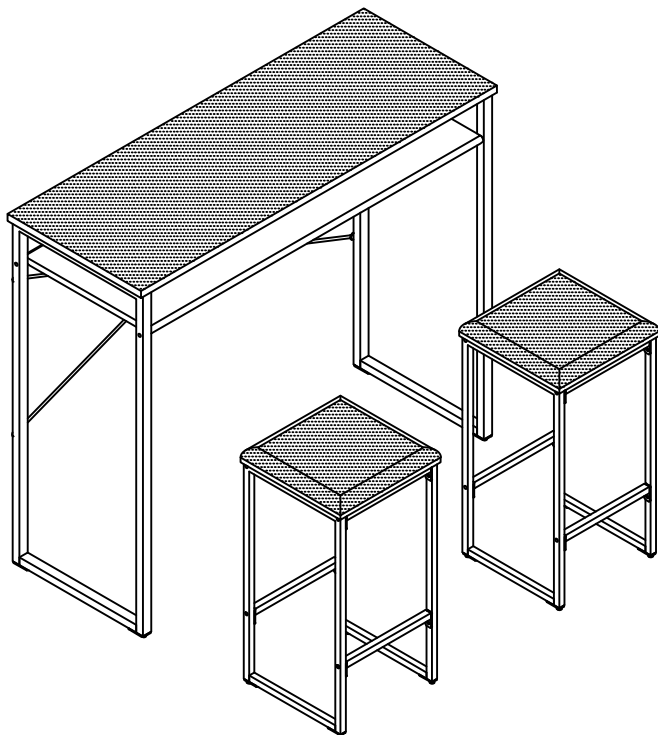


The first & second pages list all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

## COUNTER HEIGHT


- 1** Assemble Connect Support (E) to Counter Frame - LSF (A) & Counter Frame - RSF (B), using Bolt (P) to fasten by Allen Key (X) as below shown.

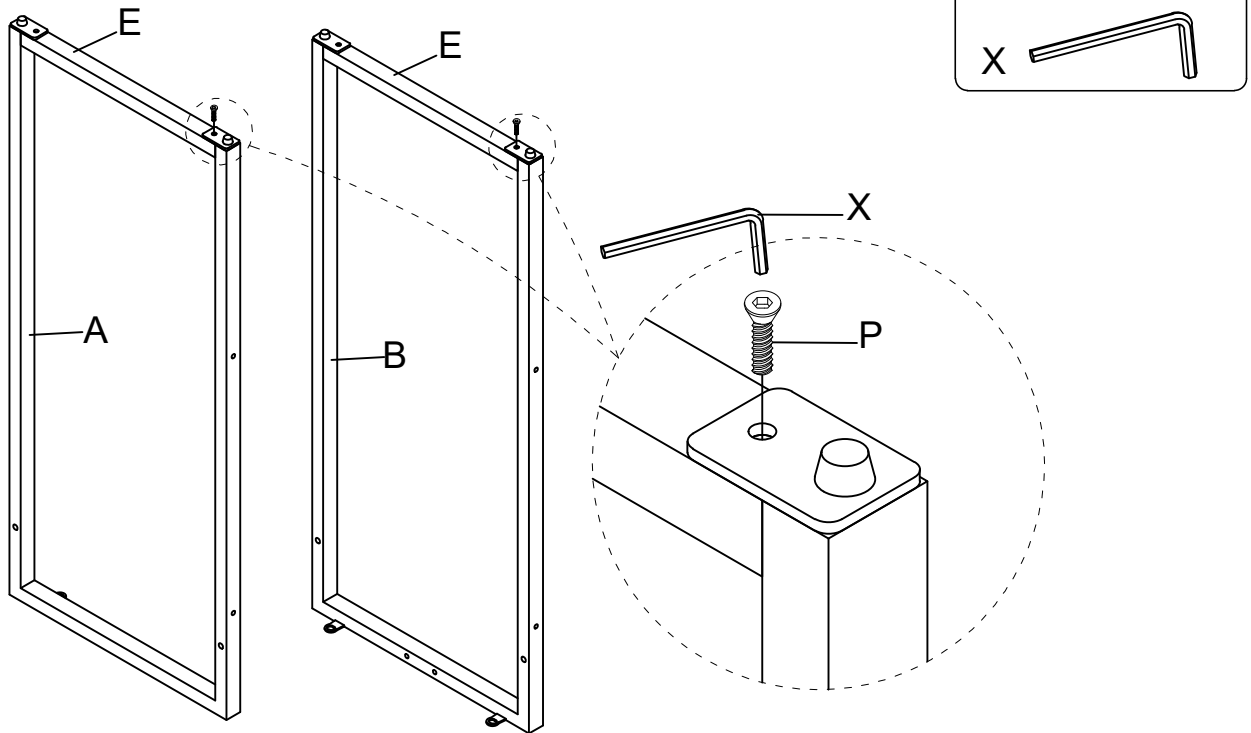


- 2** Assemble Stretcher (D) to the top of Counter Frame - LSF (A) and Counter Frame - RSF (B), using Bolt (N) & Flat Washer (U) to tighten by Allen Key (X).

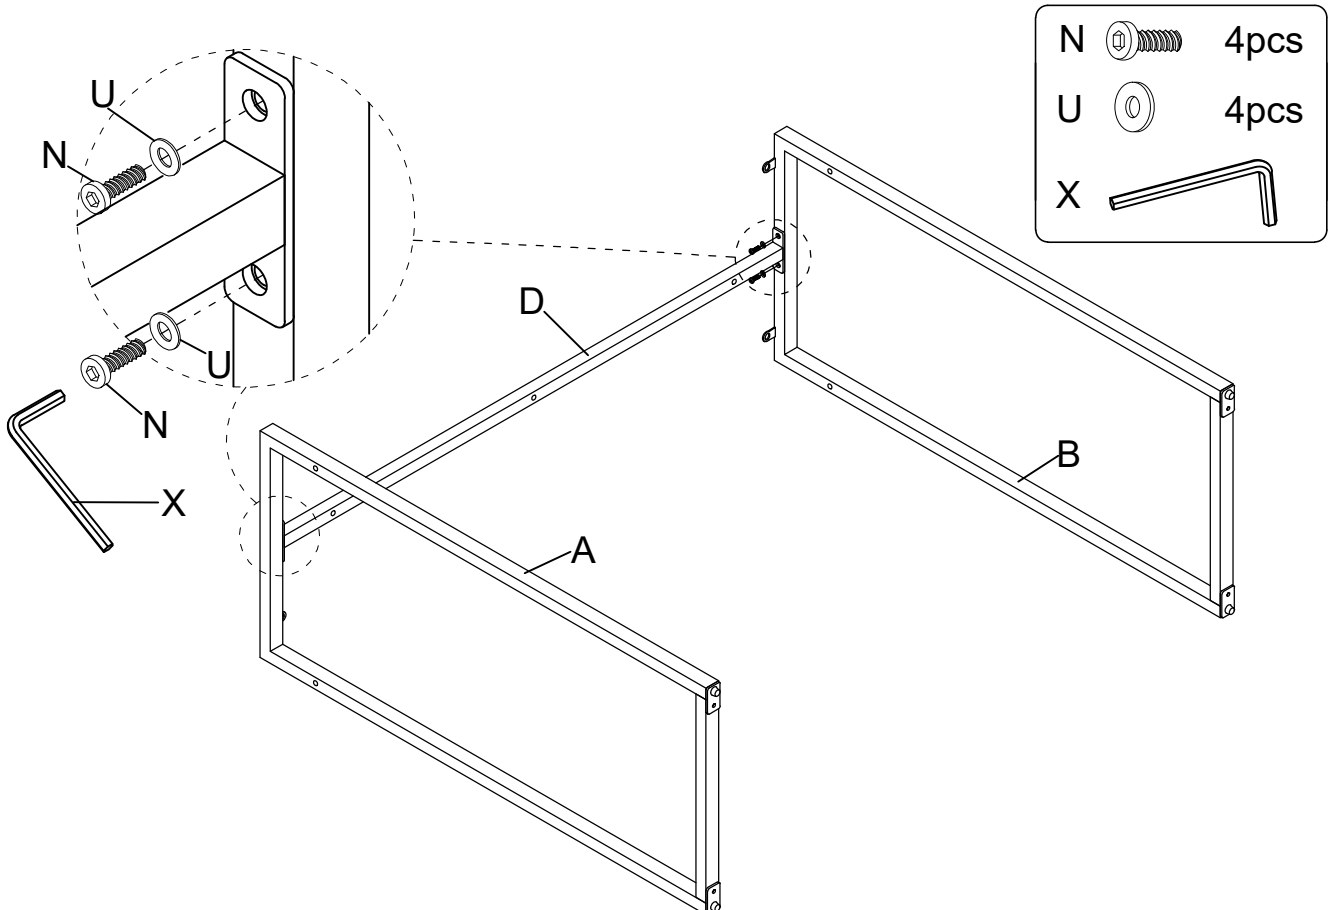


- 3** Assemble Counter Top (G) to Counter Frame - LSF (A), Right Frame - RSF (B) and Stretcher (D), using Bolt (N), Bolt (O) and Flat Washer (U) to tighten by Allen Key (X).

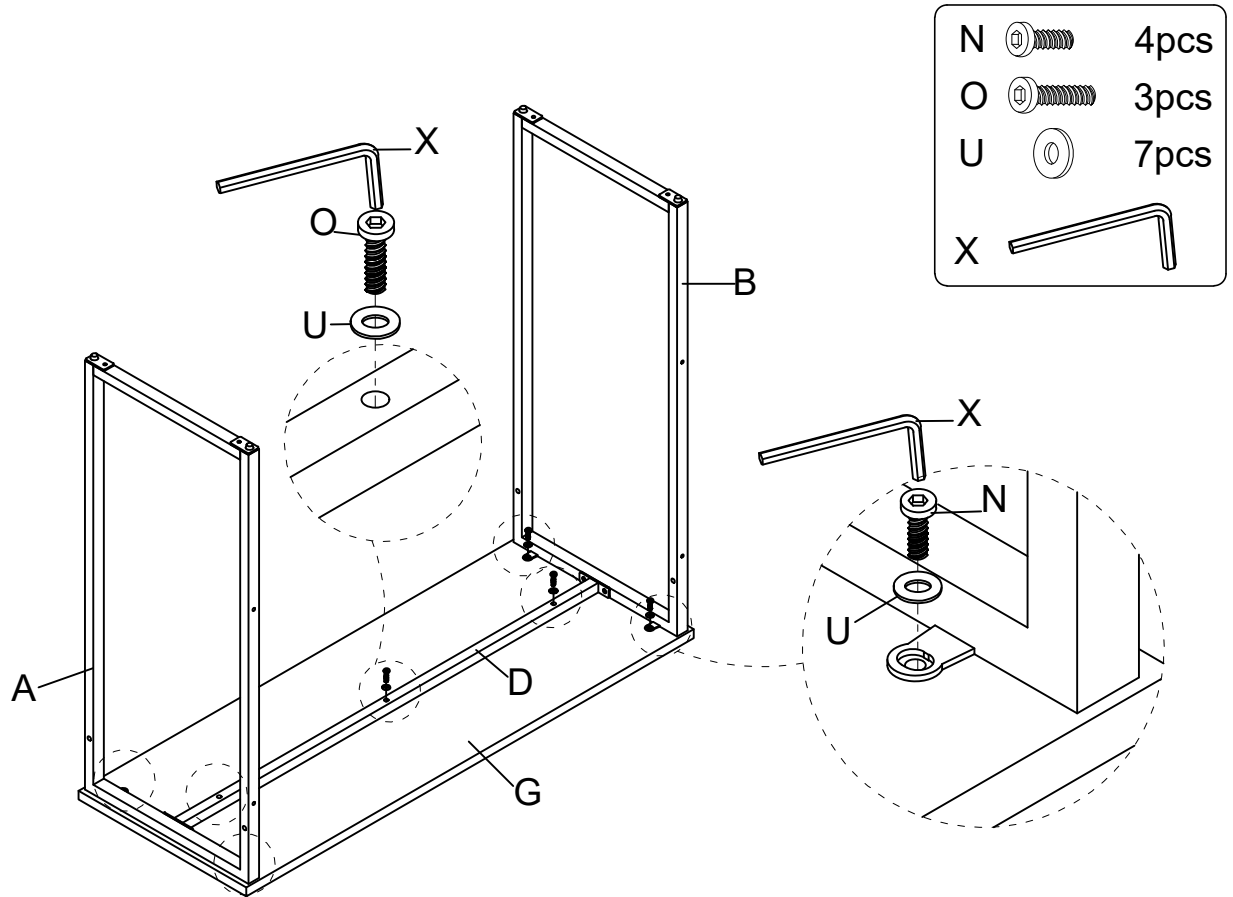

- 4** Assemble Connect Bar (C) to Counter Frame - LSF (A) & Counter Frame - RSF (B), using Bolt (R) to fasten by Allen Key (X) as below shown.

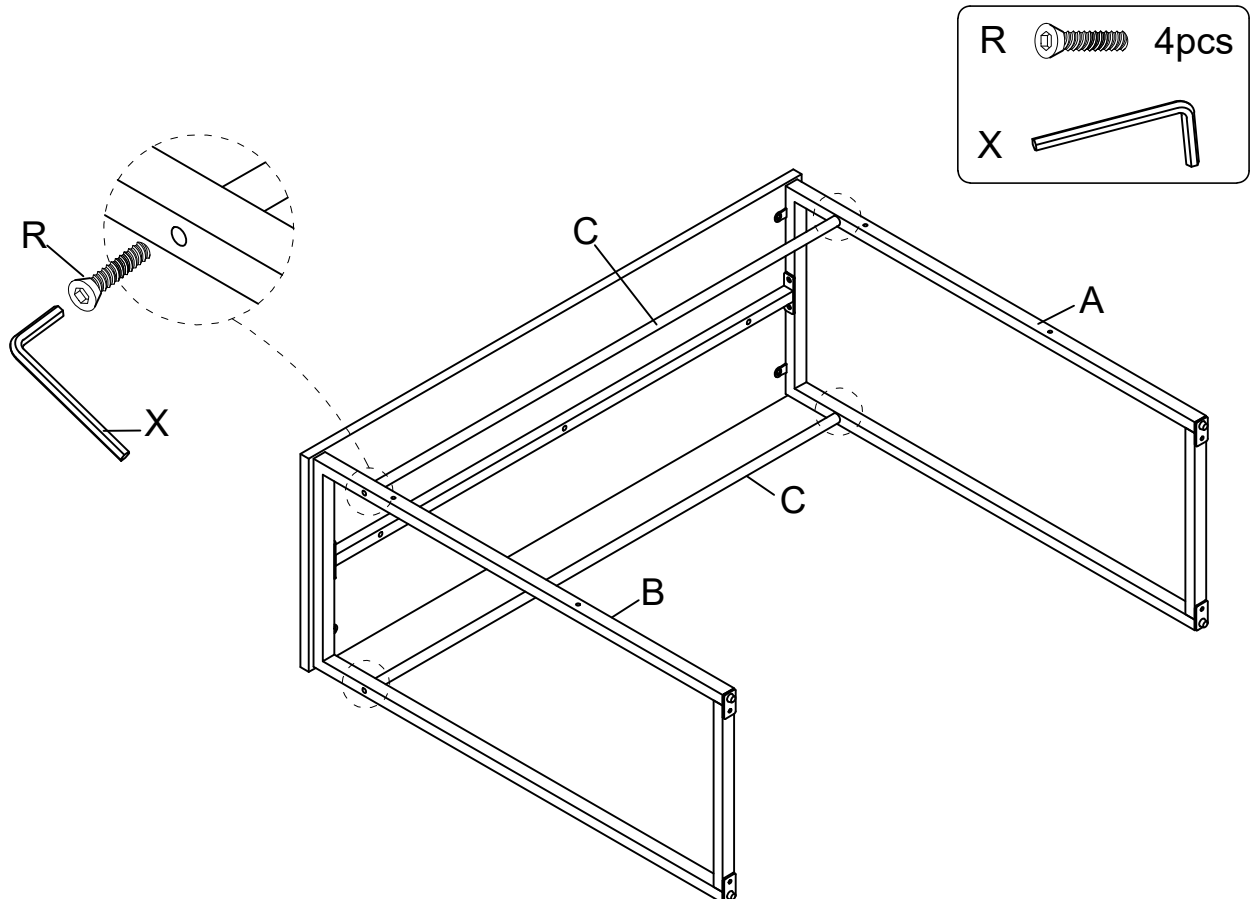

5

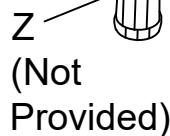


6




## STOOL SET

- 7** Assemble Stool Connect Bar (L) to the Stool Frame (I), using Bolt (P) to fasten by Allen Key (X).

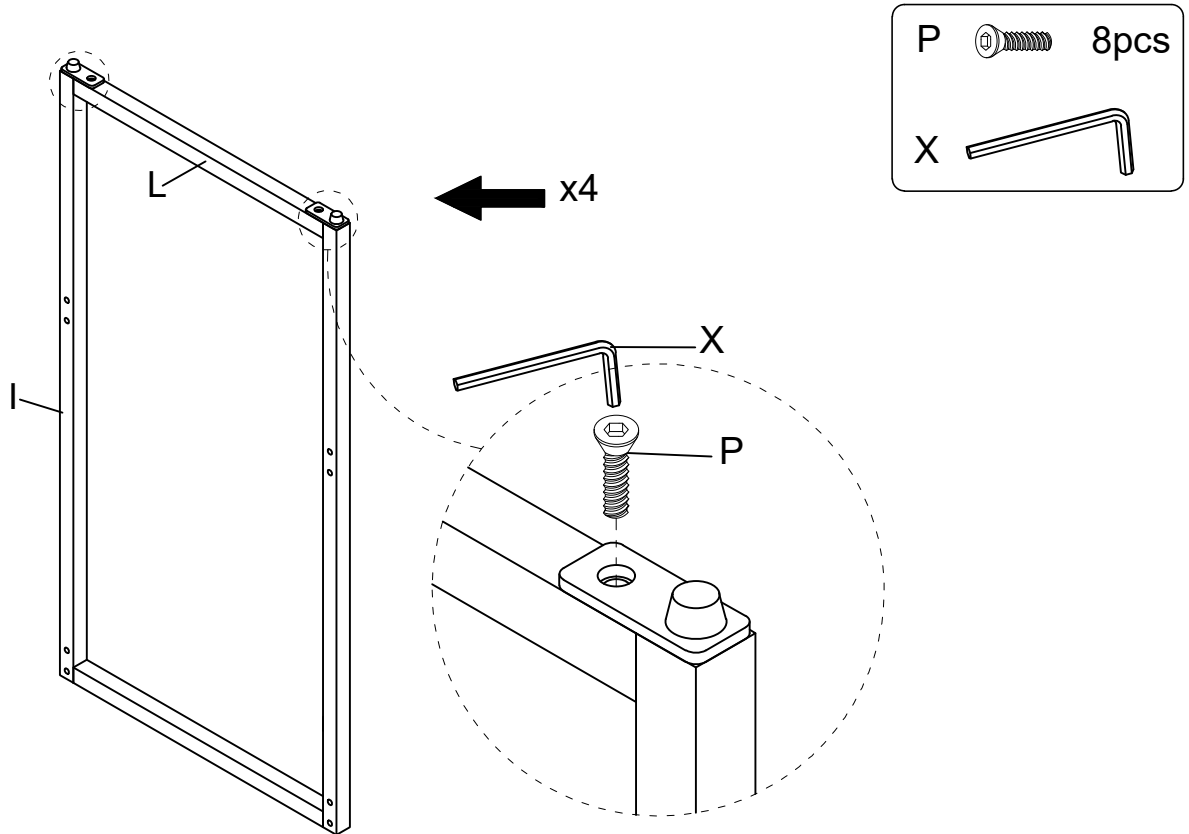


- 8** Assemble Stool Connect - Upper (J) & Stool Connect - Lower (K) to Stool Frame (I), using Bolt (P) & Bolt (Q) to fasten by Allen Key (X).

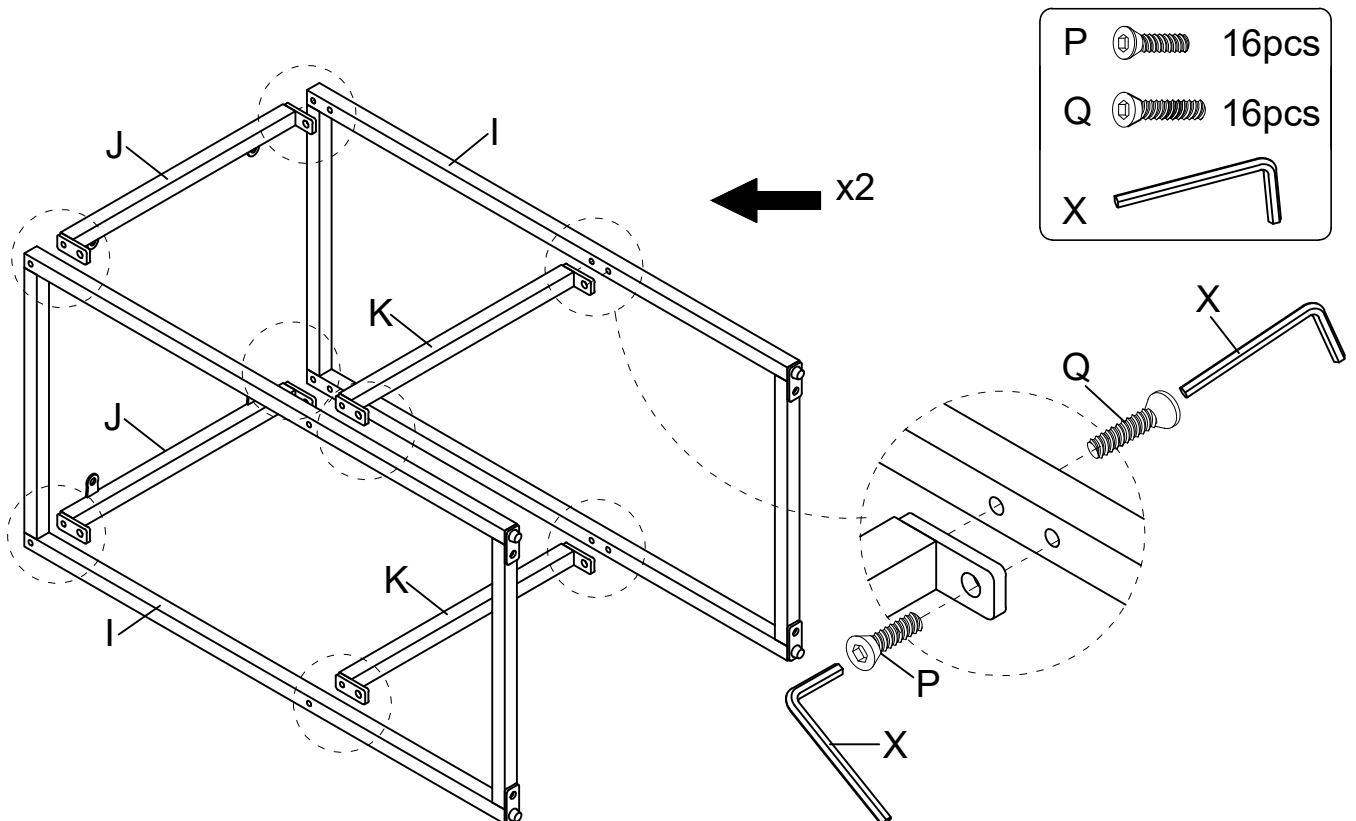


9

Assemble Stool Cushion (M) to the pre-assembled Stool Frame (I) & Stool Stretcher - Upper (J), using Bolt (T) & Flat Washer (V) by Screwdriver (Z).

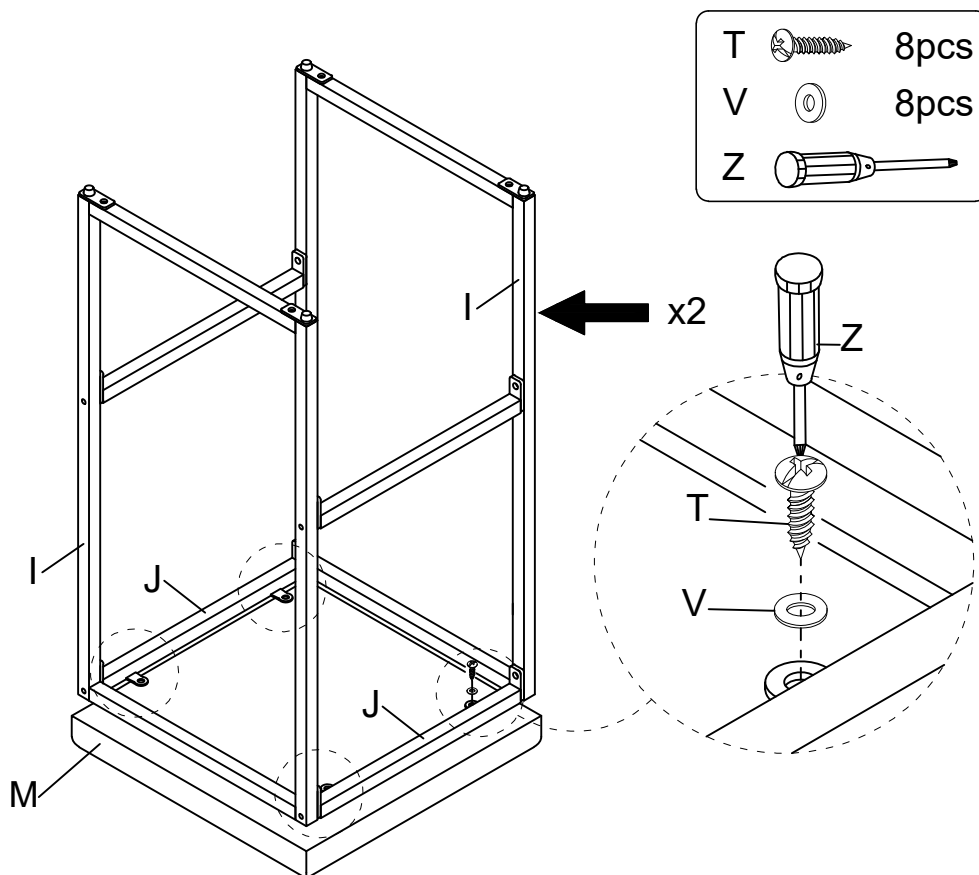

10

Adjust any parts out of alignment and tighten all bolts and screws from step 7 through 10.

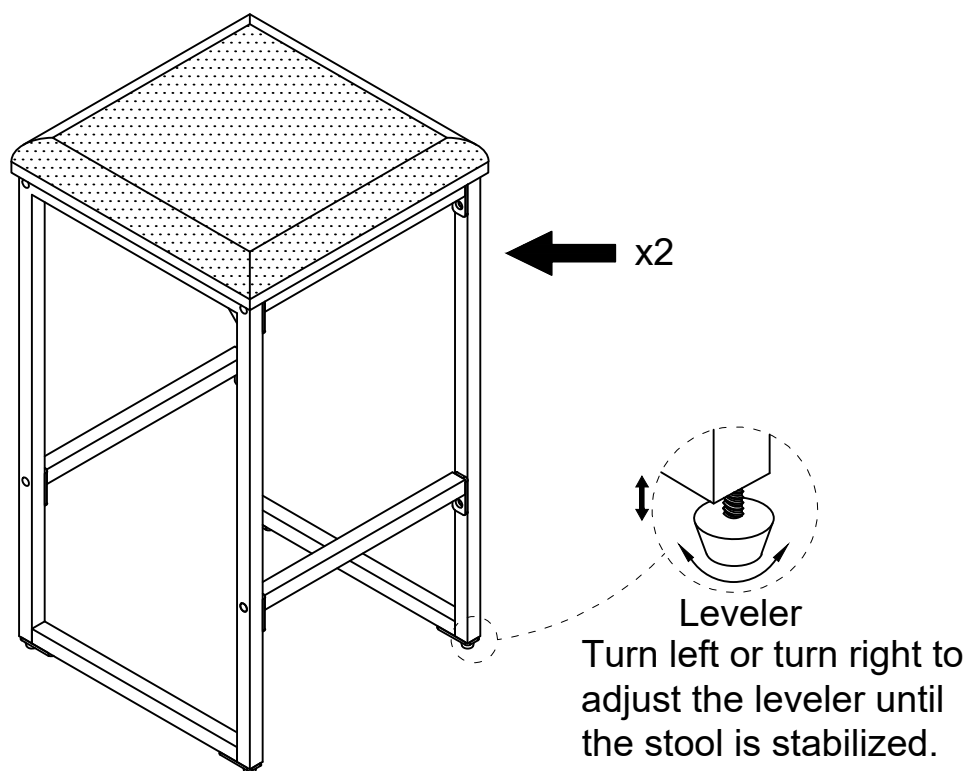

### Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.