


CUSTOMER ASSEMBLY INSTRUCTION

Note: Two people are required to assemble the cabinet


1. Step 1: Place the base on the floor.

2. Step 2: Place the top onto the base.

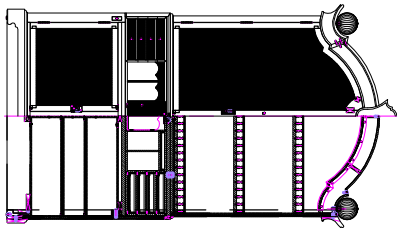


Alnwick Bureau
Sale Code: 530034-WAA
Factory Code: 004084-AA

1. Base (1 pc)

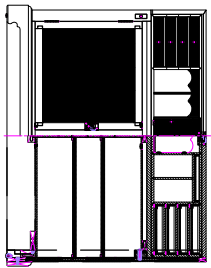

2. Top (1pc)

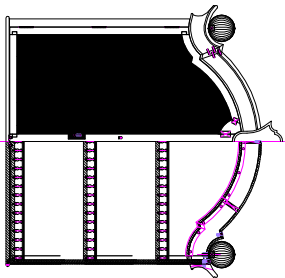

3. Brass bracket (2pcs)



4. Screw (4pcs)

