

KIKI UPHOLSTERED QUEEN BED


ASSEMBLY INSTRUCTIONS



BOX#1

A. HEADBOARD
I. LEG

1 PC
2 PCS

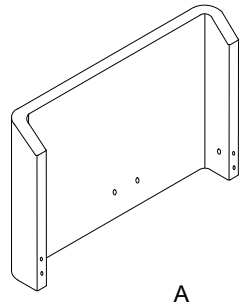

HARDWARE KIT PACKED IN BOX #1

No.	Description	Image	Quantity
1	ALLEN BOLT (8 x 50mm)		2 PCS
2	FLAT WASHER (8 x 19mm)		2 PCS
3	LOCK WASHER (8 x 22mm)		2 PCS
4	ALLEN KEY (8mm)		1 PC



HARDWARE KIT PACKED IN BOX #2

5	THREADED BOLT (8 x 90mm)		8 PCS
6	ALLEN BOLT (8 x 50mm)		2 PCS
7	ALLEN BOLT (6 x 50mm)		8 PCS
8	ALLEN BOLT (6 x 30mm)		4 PCS
9	FLAT WASHER (8 x 22mm)		8 PCS
10	FLAT WASHER (8 x 19mm)		2 PCS
11	FLAT WASHER (6 x 16mm)		12 PCS
12	LOCK WASHER (8 x 22mm)		10 PCS
13	LOCK WASHER (6 x 16mm)		12 PCS
14	HEX NUT (8mm)		8 PCS
15	PHILLIPS SCREW (7 x 35mm)		10 PCS
16	ALLEN KEY (6mm)		1 PC
17	ALLEN KEY (8mm)		1 PC
18	WRENCH		1 PC
19	CONNECTING BRACKET		4 PCS

BOX#2

B. FOOTBOARD
C. SLAT ROLL
H. CENTER SLAT SUPPORT CLEAT
I. LEG




1 PC
1 SET
2 PCS
2 PCS

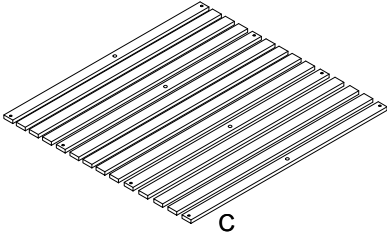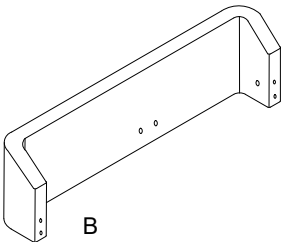





BOX#3

D. LEFT SIDE RAIL
E. RIGHT SIDE RAIL
F. CENTER SLAT SUPPORT
G. SUPPORT LEG

1 PC
1 PC
1 PC
4 PCS

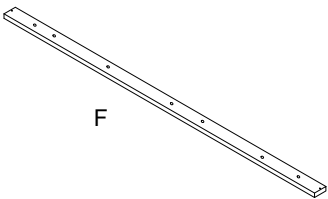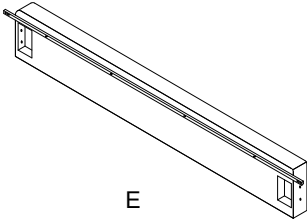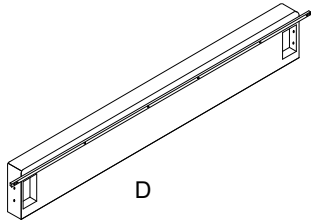

FULLY ASSEMBLED

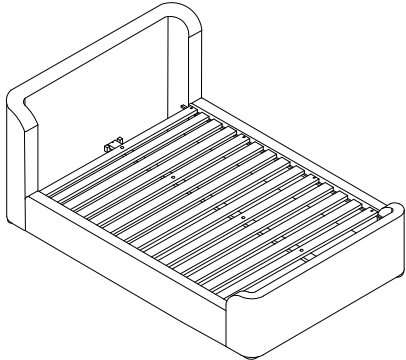


KIKI UPHOLSTERED QUEEN BED


ASSEMBLY INSTRUCTIONS




STEP 1:

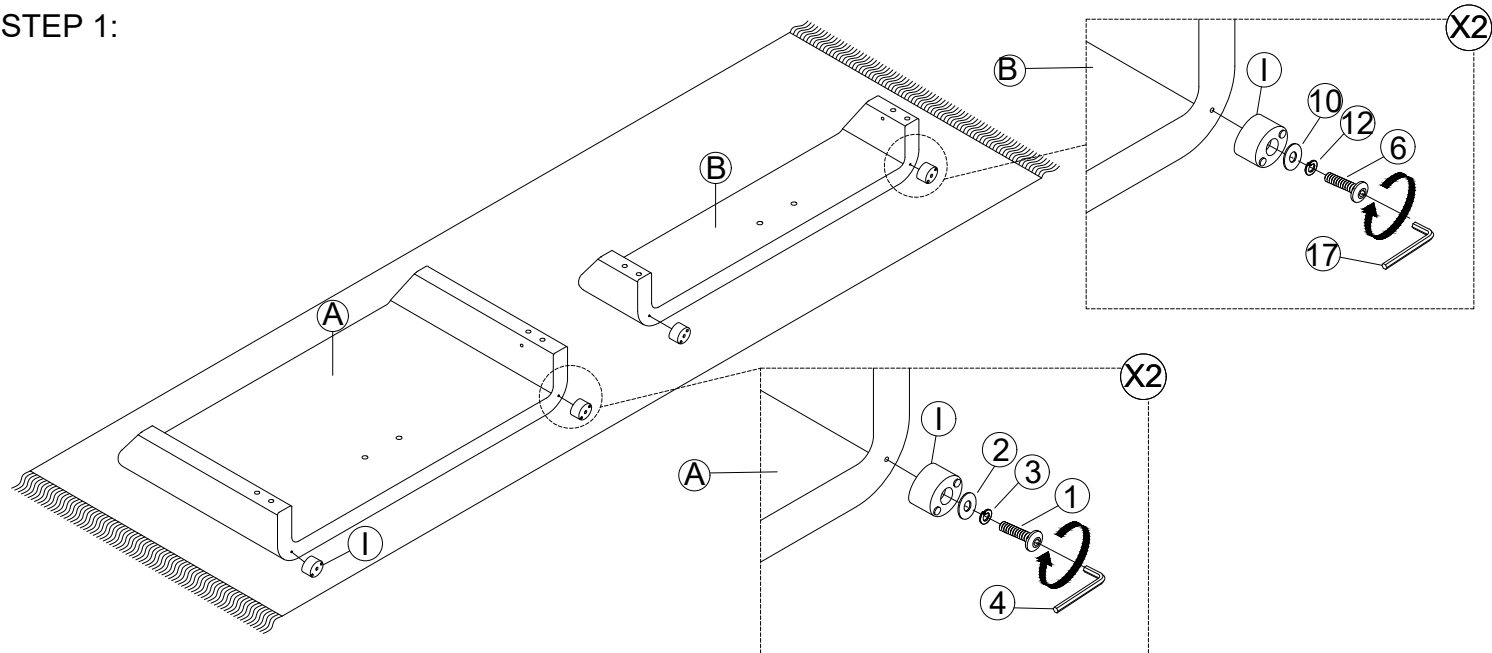

STEP 2:

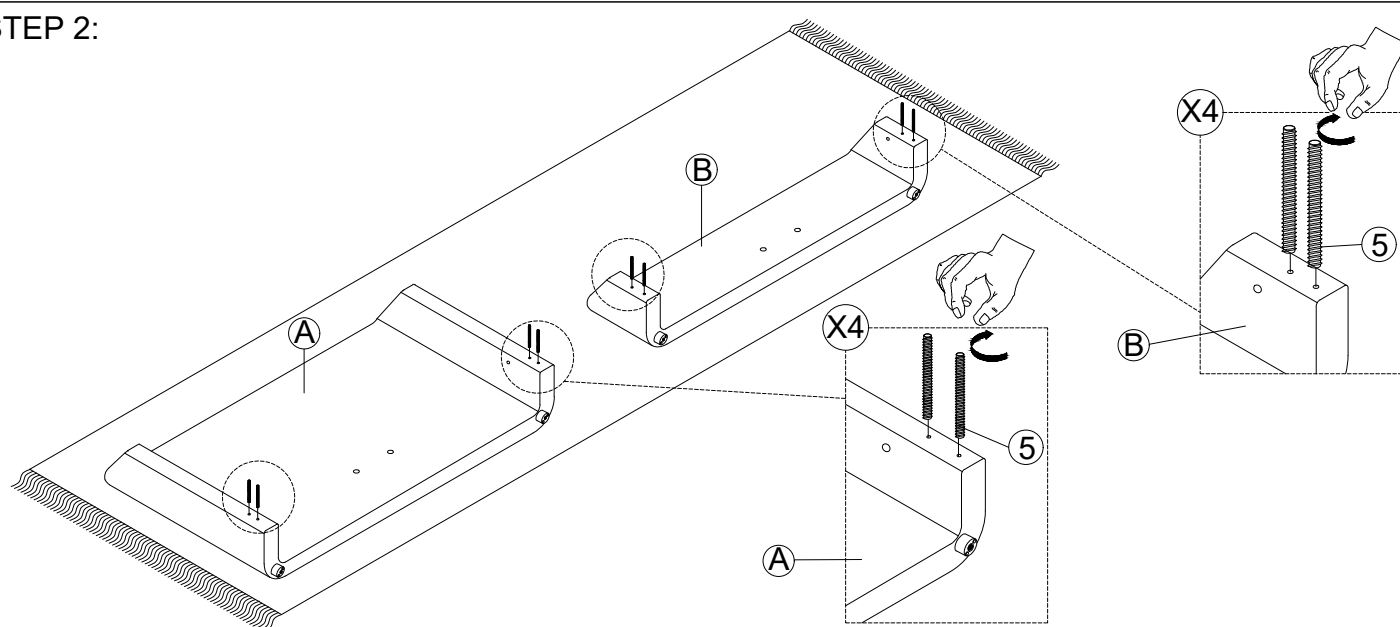

STEP 3:

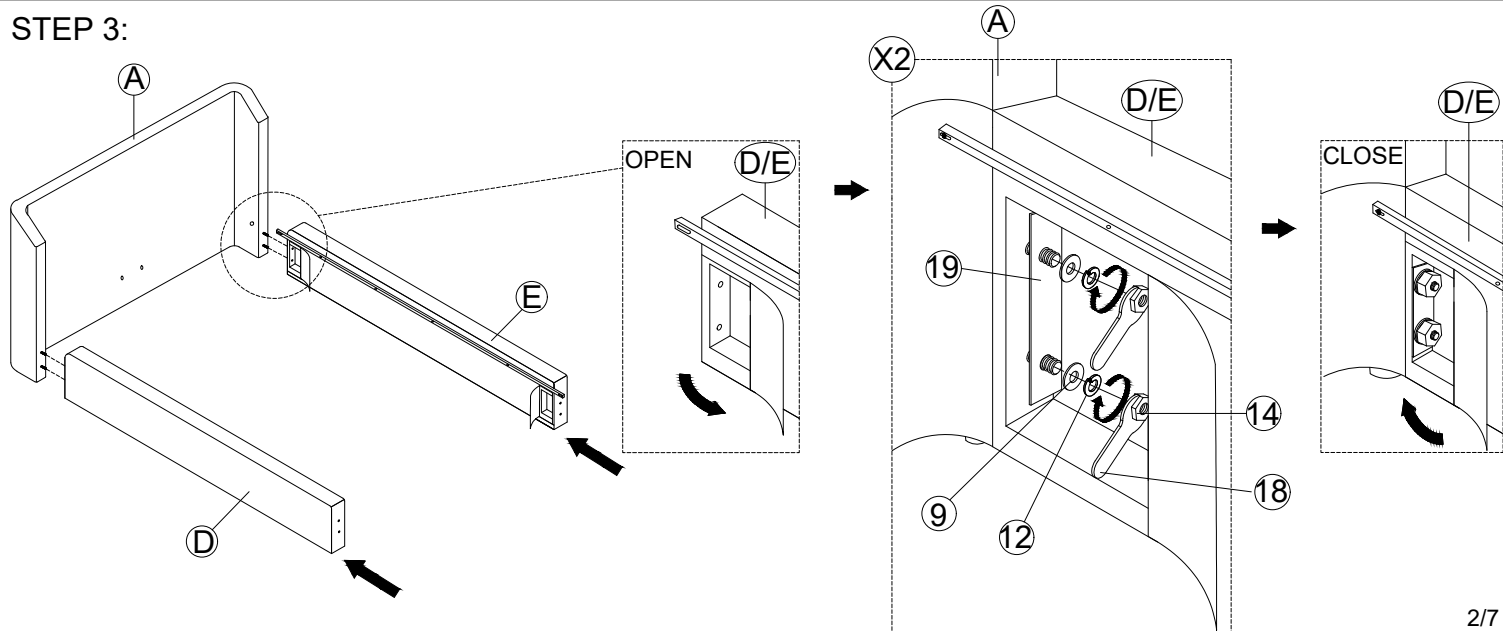


KIKI UPHOLSTERED QUEEN BED

ASSEMBLY INSTRUCTIONS




STEP 4:

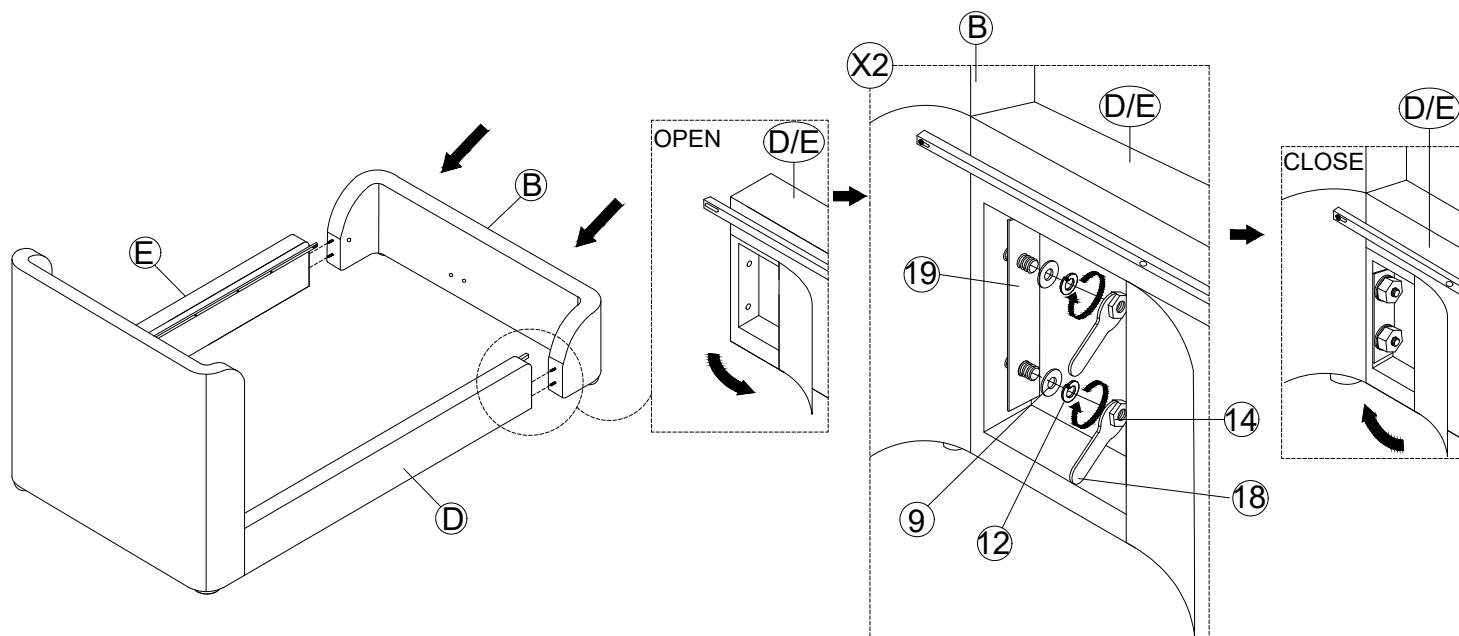

STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 5~11 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 5.

STEP 5:

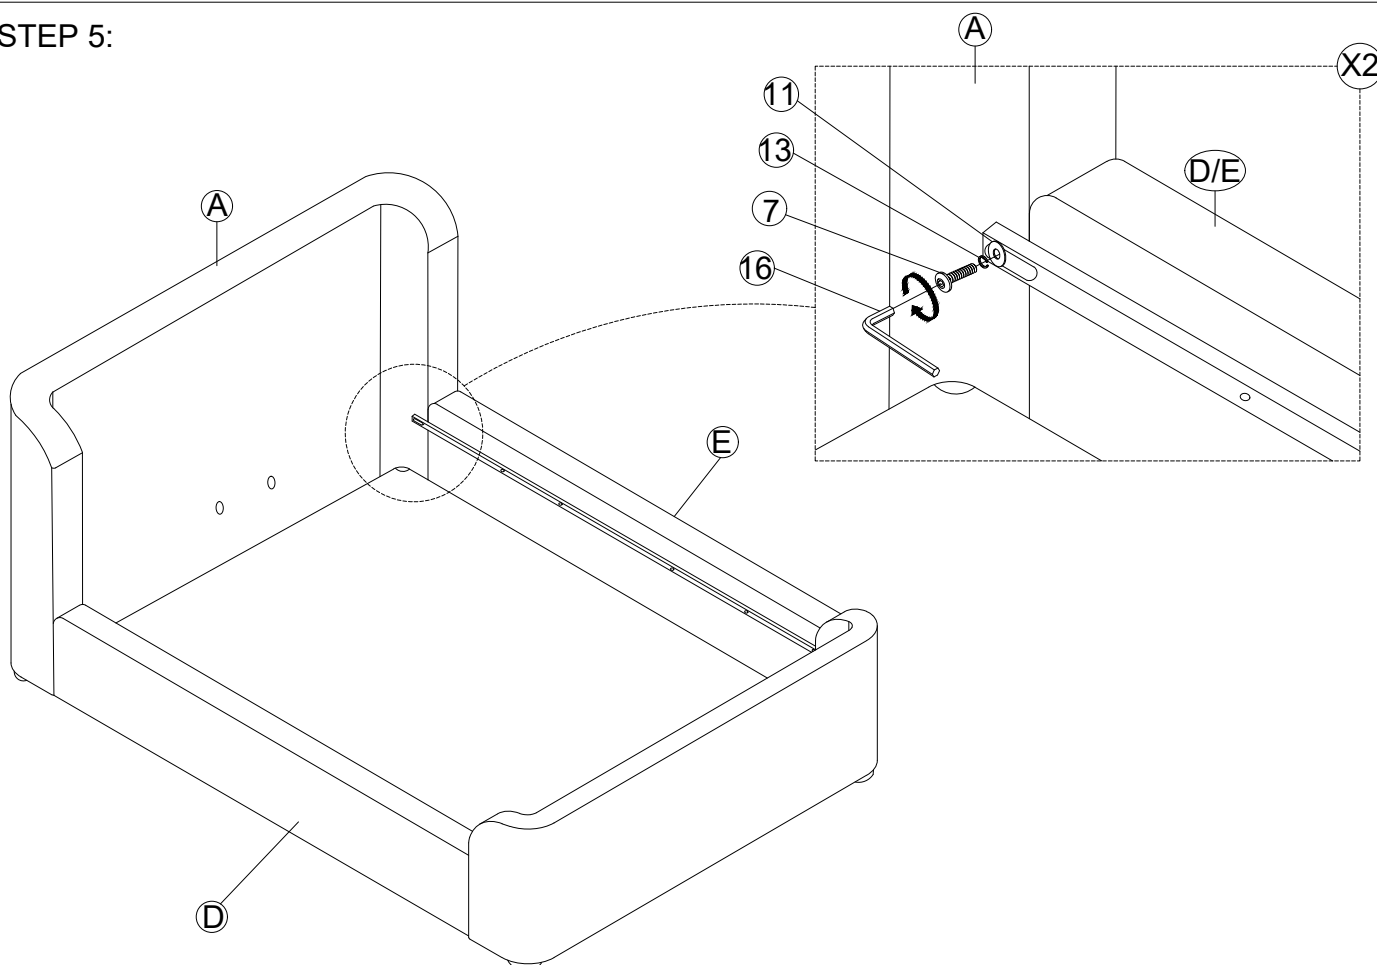

MODUS
FURNITURE


The diagram illustrates the assembly of the front panel (A) and back panel (B). The front panel (A) is shown on the left, and the back panel (B) is shown on the right. Both panels have a central slot for the front panel (A) to fit into. The assembly is secured by screws (H) and a bracket (16). An inset shows a detailed view of the bracket assembly with labels 11, 13, 7, and 16. The bracket (16) is shown being rotated into place, as indicated by the curved arrow. The screws (H) are used to secure the bracket to the panels. The label 'X2' indicates that two of each part are required.

KIKI UPHOLSTERED QUEEN BED


ASSEMBLY INSTRUCTIONS




STEP 9:

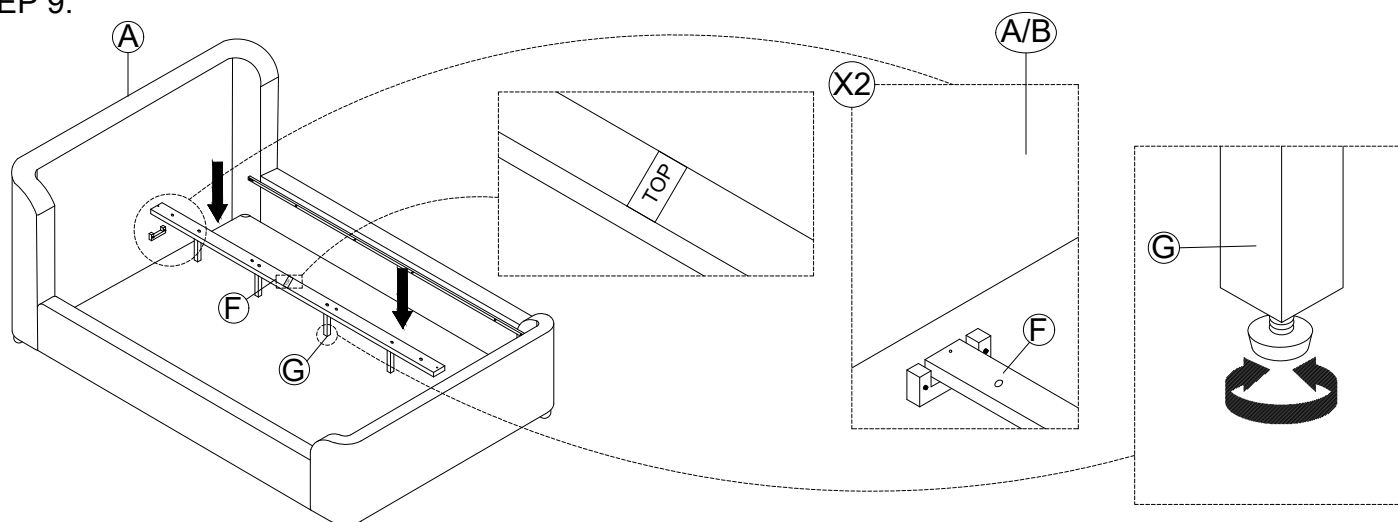


STEP 10:

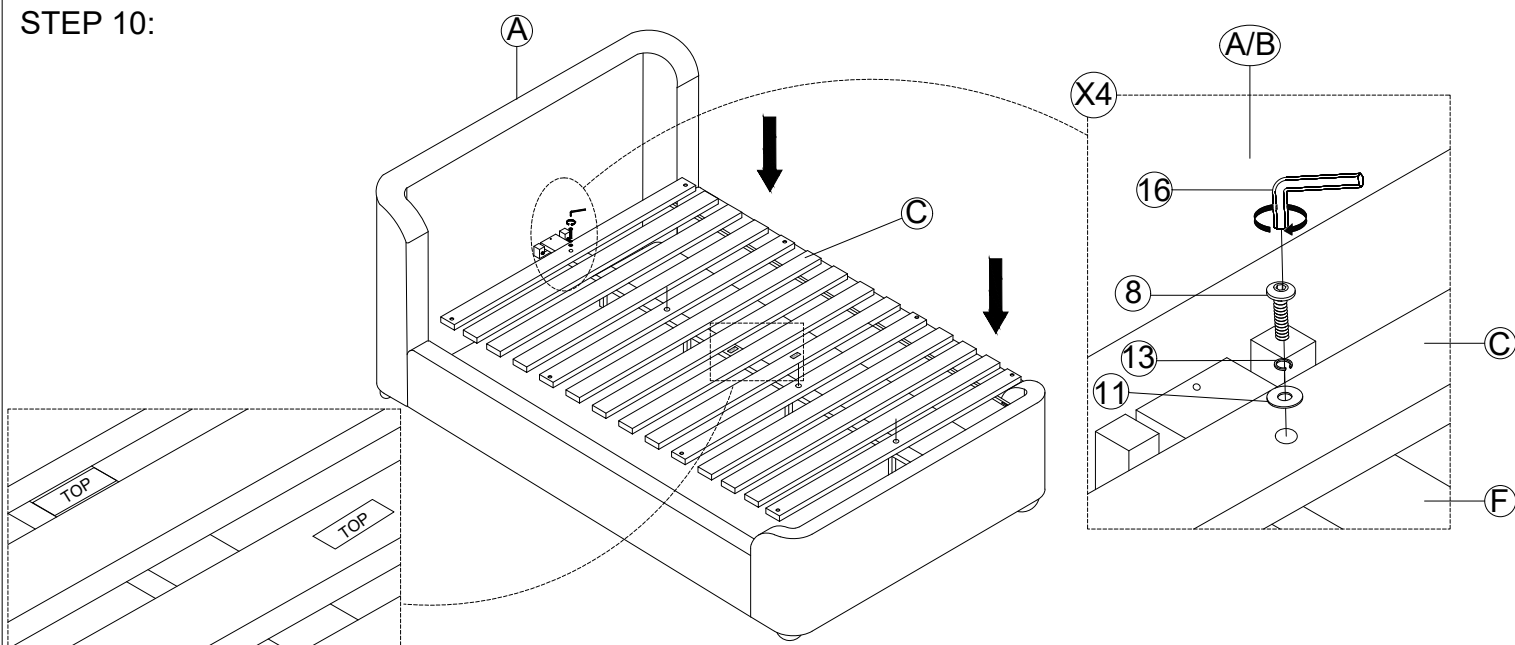

STEP 11:

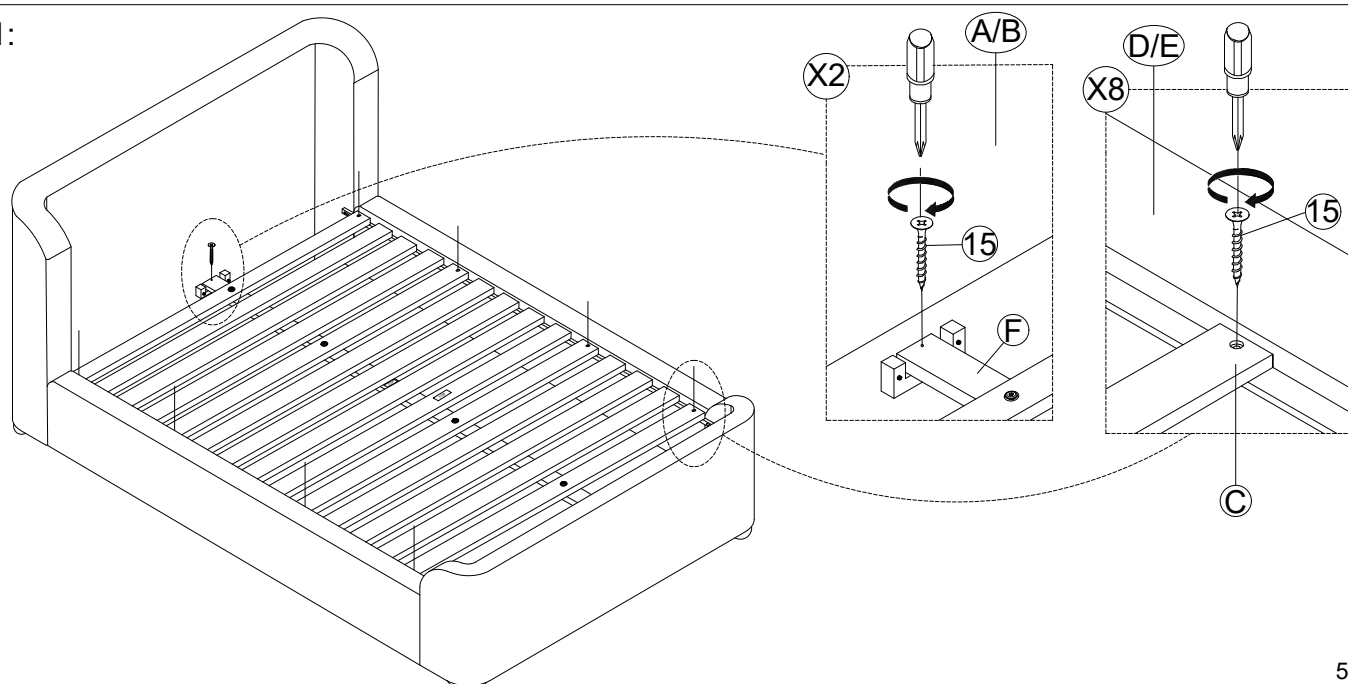

KIKI UPHOLSTERED QUEEN BED ASSEMBLY INSTRUCTIONS

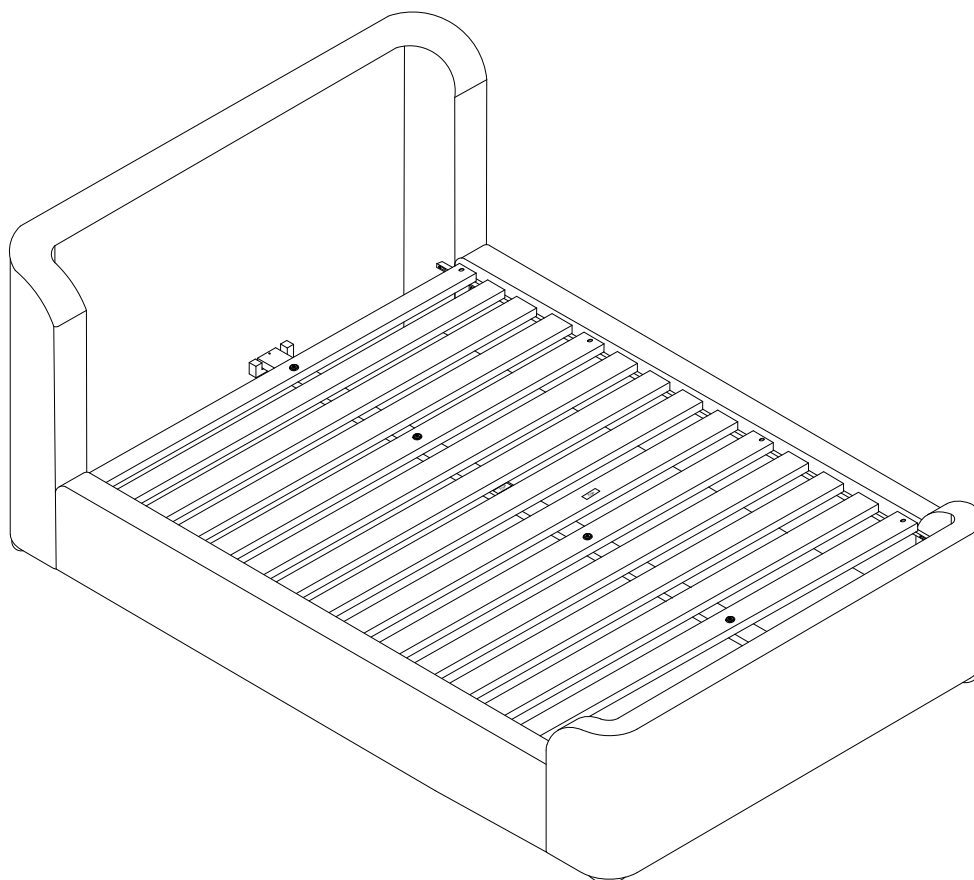


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.



MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

KIKI UPHOLSTERED QUEEN BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

C. SLAT ROLL	1 SET
F. CENTER SLAT SUPPORT	1 PC
G. SUPPORT LEG	4 PCS
H. CENTER SLAT SUPPORT CLEAT	2 PCS

STEP 1:

USE ALLEN KEY (16) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

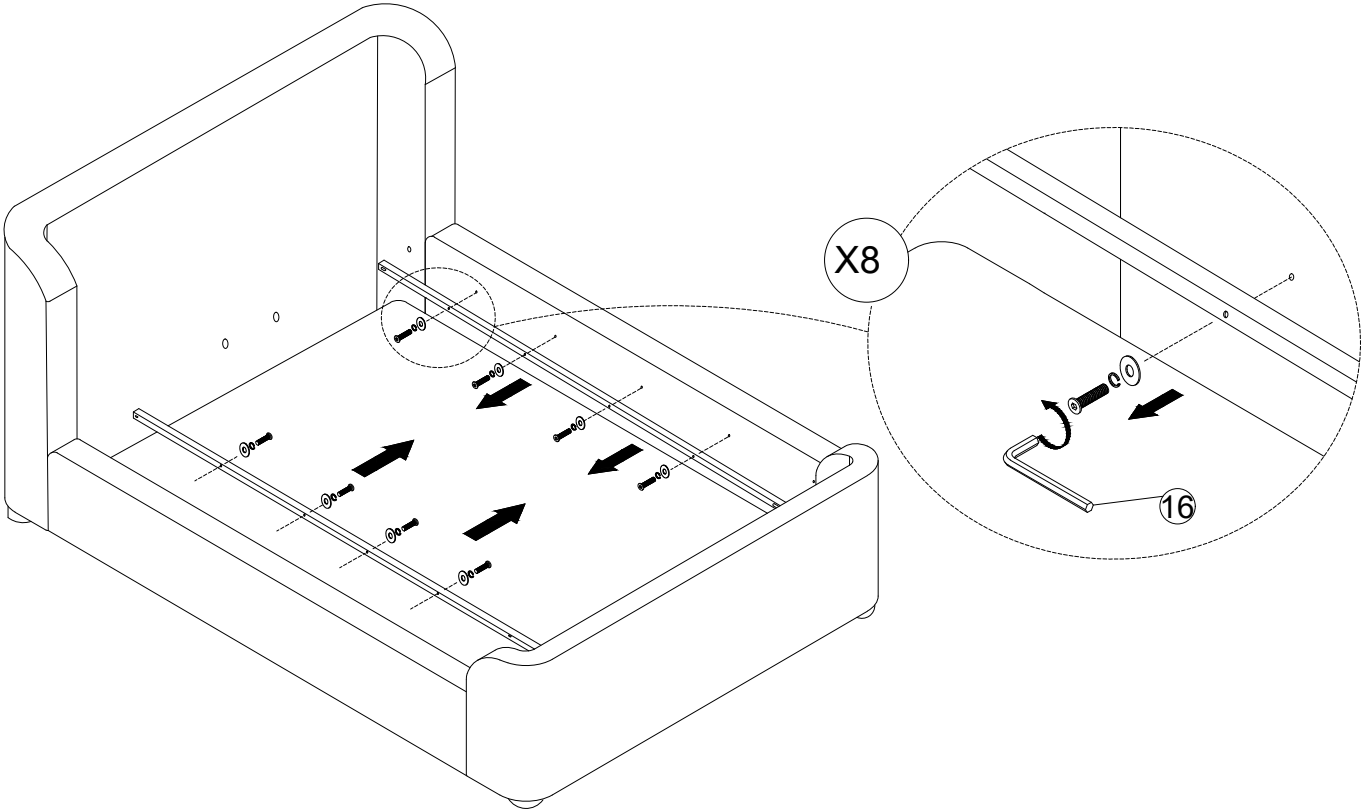

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION


KIKI UPHOLSTERED KING BED
ASSEMBLY INSTRUCTIONS



BOX#1

A. HEADBOARD
I. LEG

1 PC
2 PCS

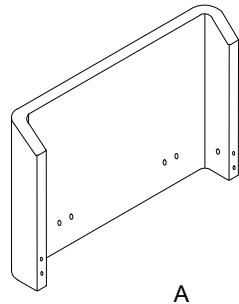

HARDWARE KIT PACKED IN BOX #1

No.	Description	Image	Quantity
1	ALLEN BOLT (8 x 50mm)		2 PCS
2	FLAT WASHER (8 x 19mm)		2 PCS
3	LOCK WASHER (8 x 22mm)		2 PCS
4	ALLEN KEY (8mm)		1 PC



HARDWARE KIT PACKED IN BOX #2

5	THREADED BOLT (8 x 90mm)		8 PCS
6	ALLEN BOLT (8 x 50mm)		2 PCS
7	ALLEN BOLT (6 x 50mm)		12 PCS
8	ALLEN BOLT (6 x 30mm)		8 PCS
9	FLAT WASHER (8 x 22mm)		8 PCS
10	FLAT WASHER (8 x 19mm)		2 PCS
11	FLAT WASHER (6 x 16mm)		20 PCS
12	LOCK WASHER (8 x 22mm)		10 PCS
13	LOCK WASHER (6 x 16mm)		20 PCS
14	HEX NUT (8mm)		8 PCS
15	PHILLIPS SCREW (7 x 35mm)		12 PCS
16	ALLEN KEY (6mm)		1 PC
17	ALLEN KEY (8mm)		1 PC
18	WRENCH		1 PC
19	CONNECTING BRACKET		4 PCS

BOX#2

B. FOOTBOARD
C. SLAT ROLL
H. CENTER SLAT SUPPORT CLEAT
I. LEG




1 PC
1 SET
4 PCS
2 PCS

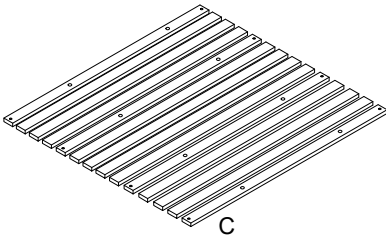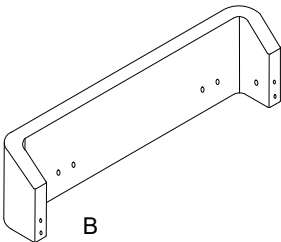





BOX#3

D. LEFT SIDE RAIL
E. RIGHT SIDE RAIL
F. CENTER SLAT SUPPORT
G. SUPPORT LEG

1 PC
1 PC
2 PCS
8 PCS

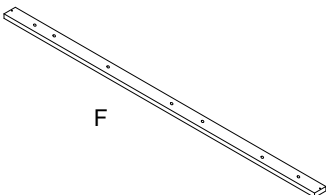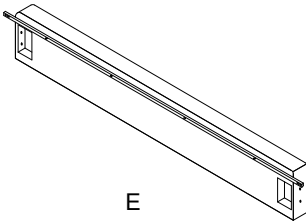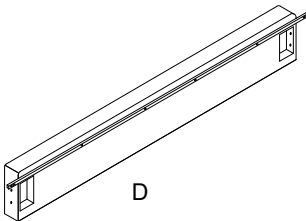


FULLY ASSEMBLED

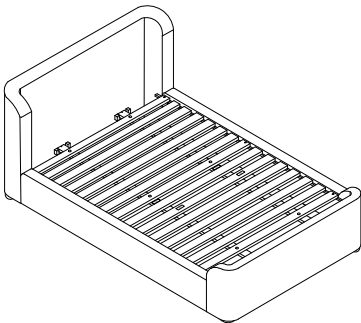


KIKI UPHOLSTERED KING BED
ASSEMBLY INSTRUCTIONS




STEP 1:

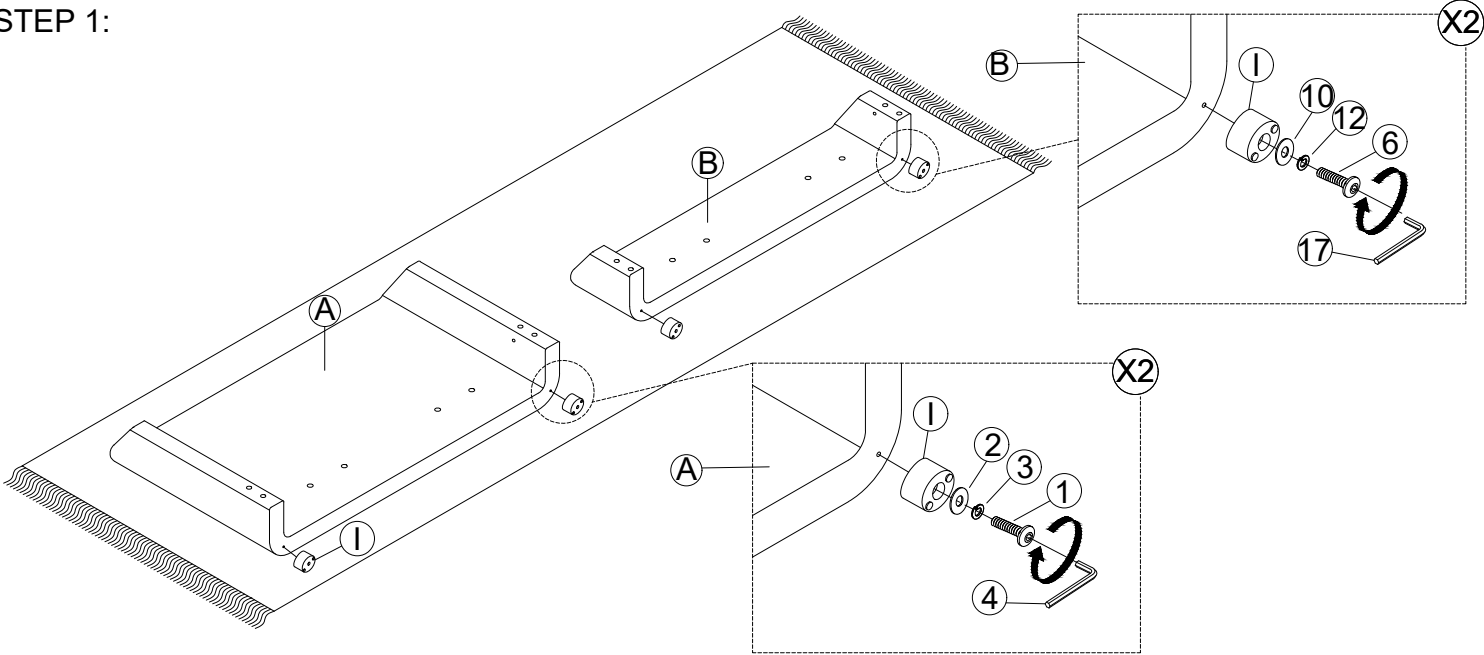

STEP 2:

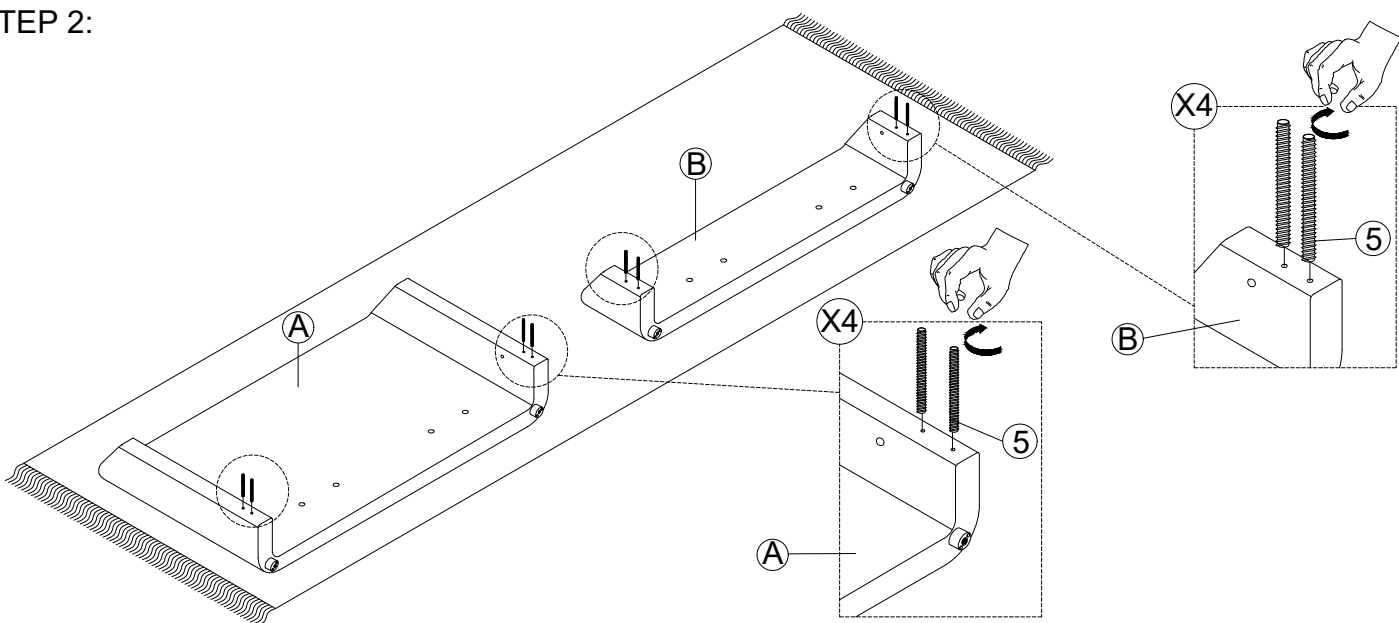


STEP 3:

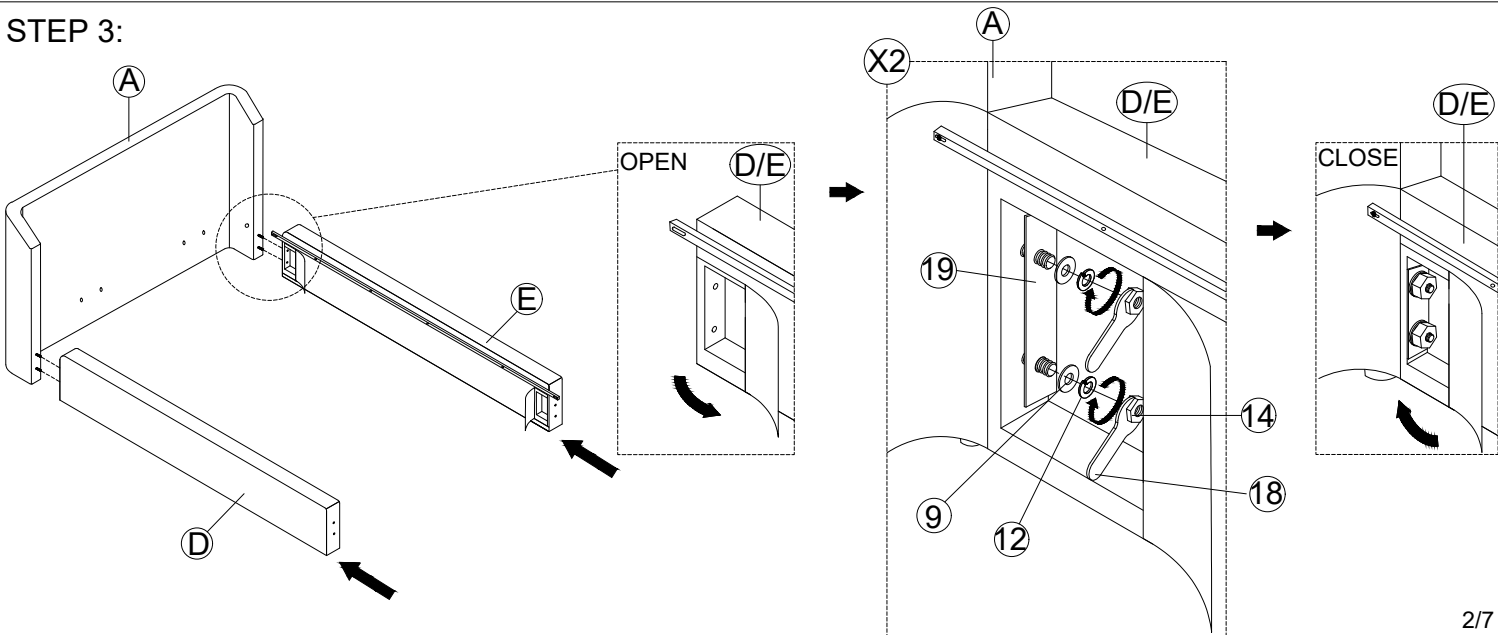

KIKI UPHOLSTERED KING BED

ASSEMBLY INSTRUCTIONS


STEP 4:

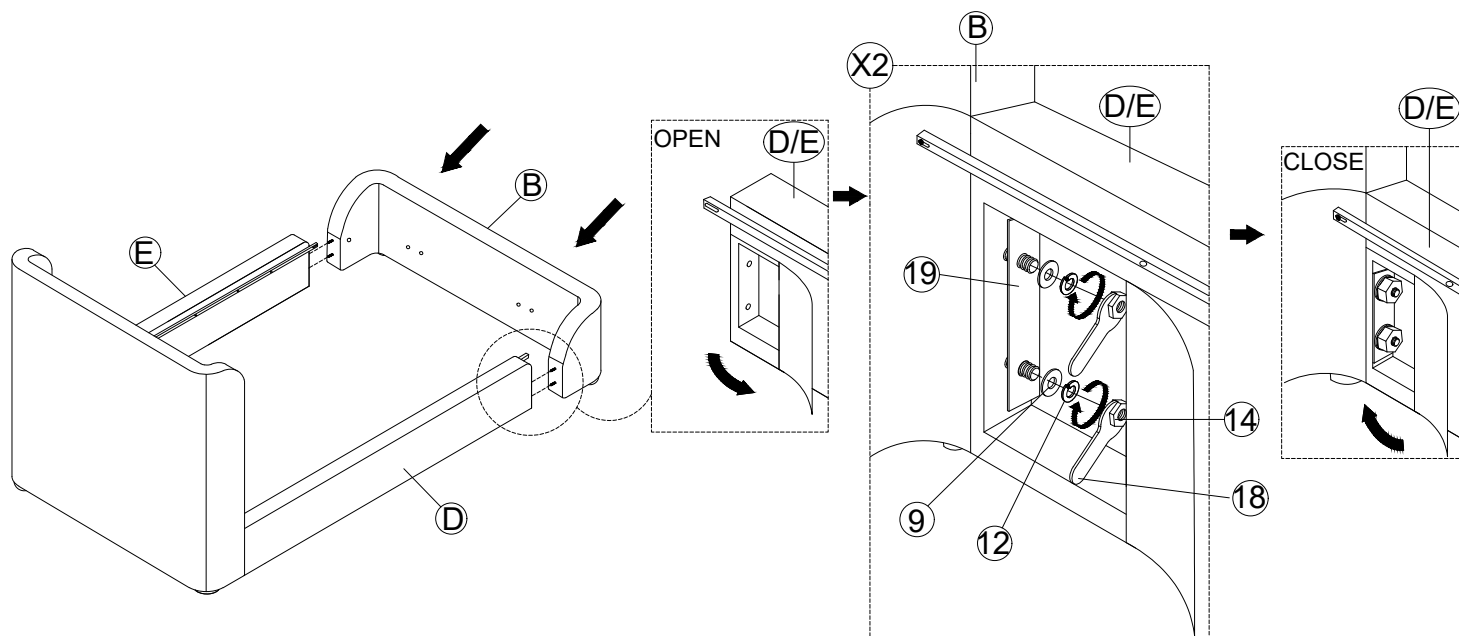

STOP




- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 5~11 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 5.

STEP 5:

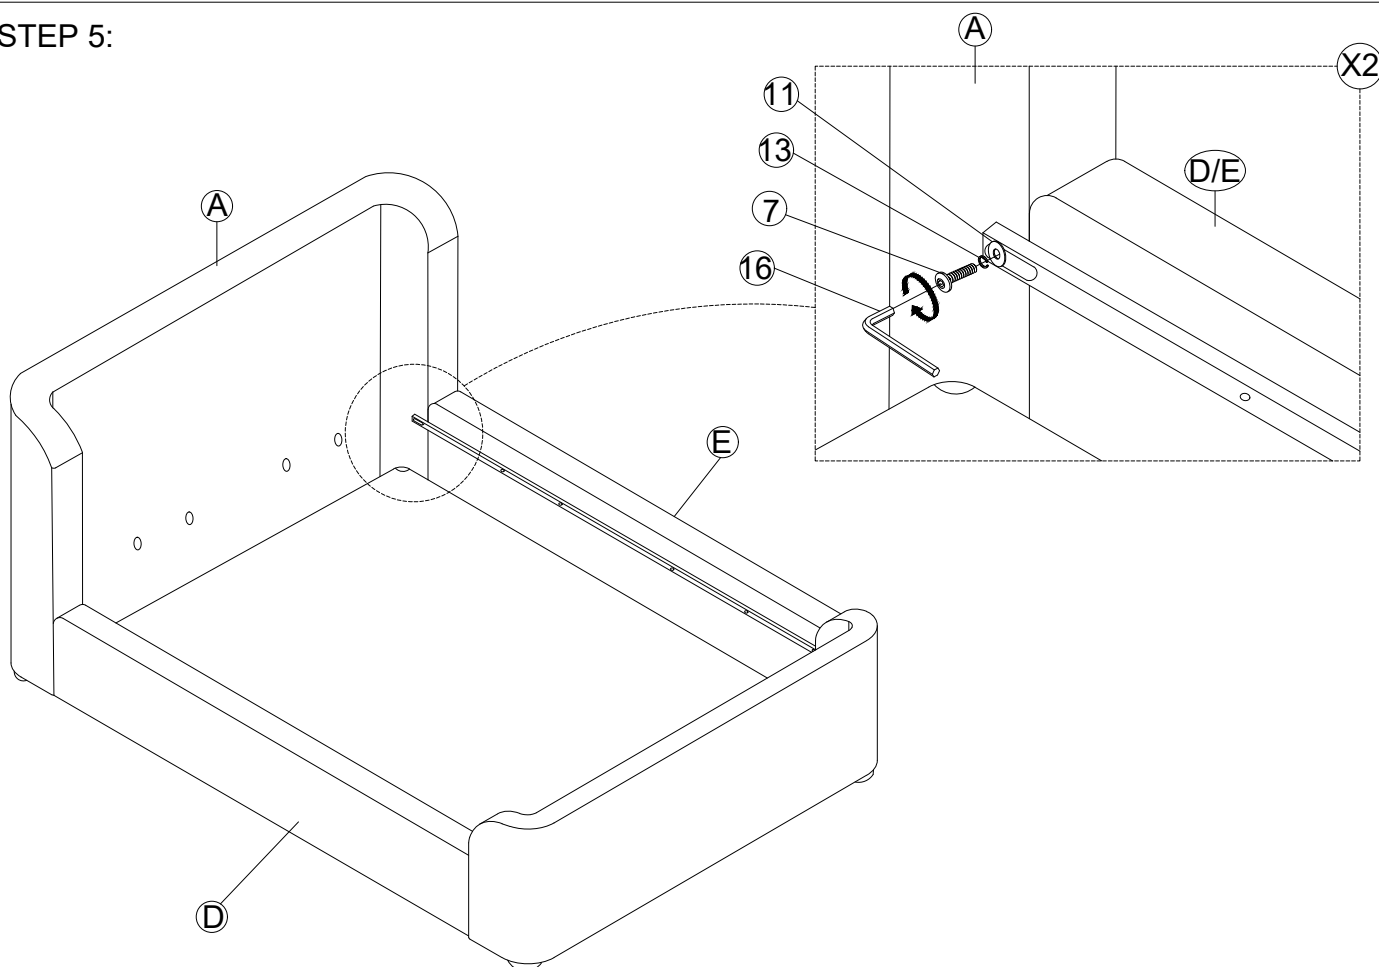

KIKI UPHOLSTERED KING BED


ASSEMBLY INSTRUCTIONS

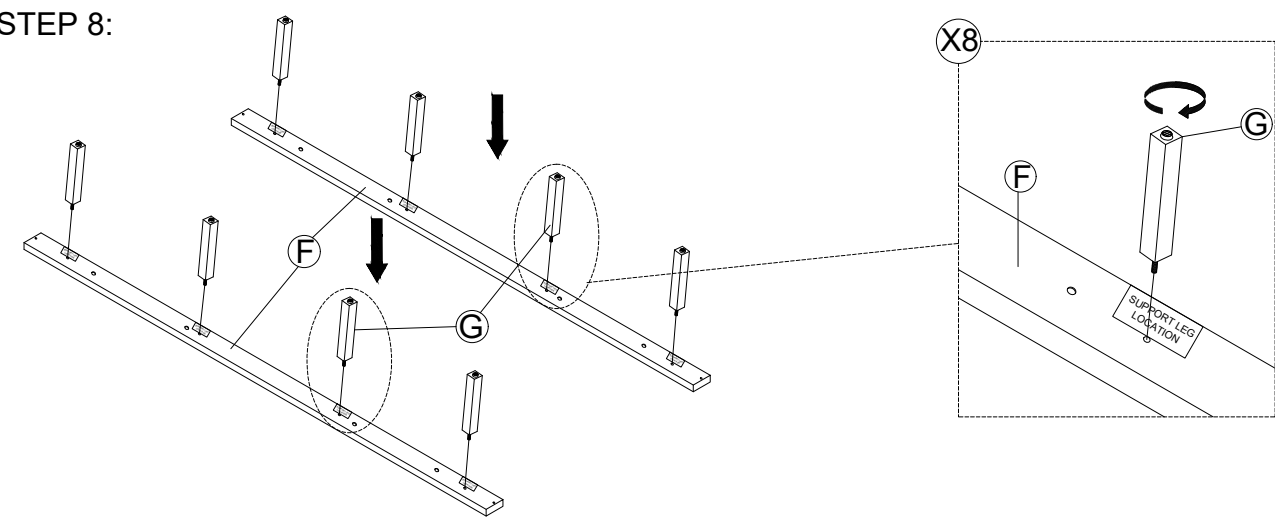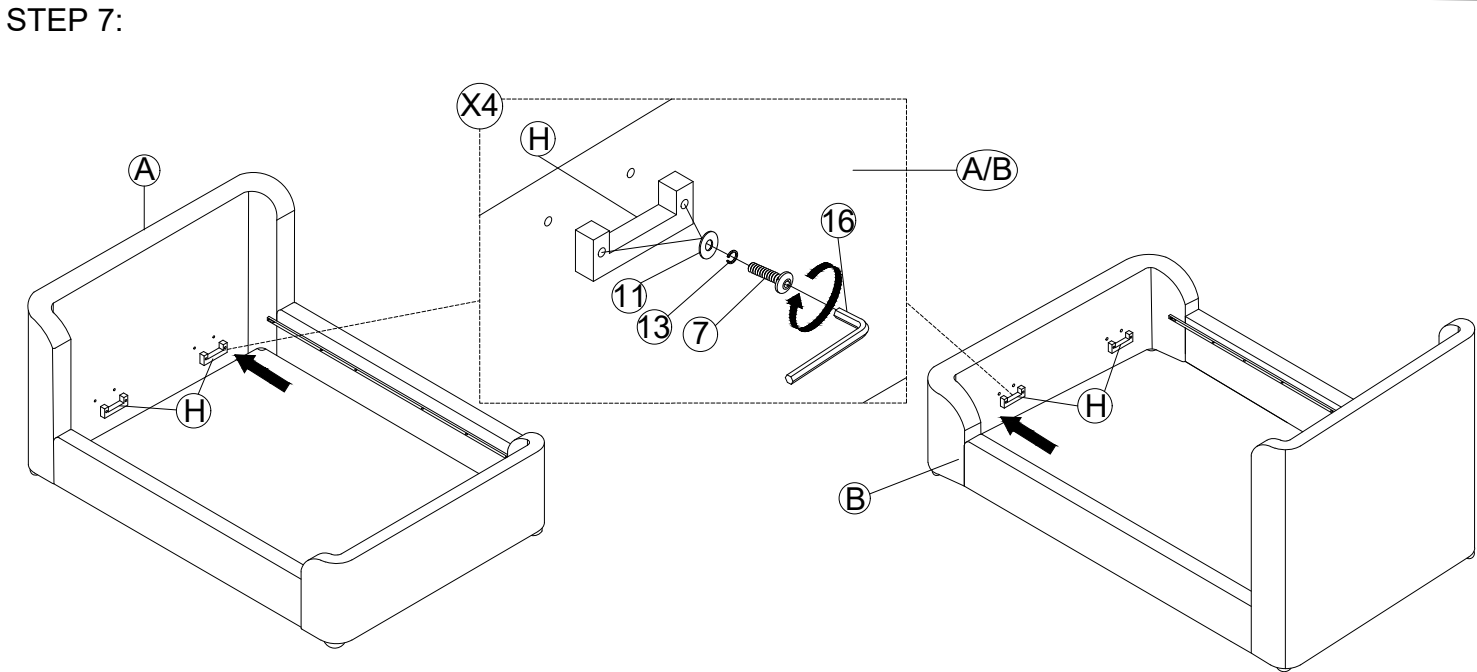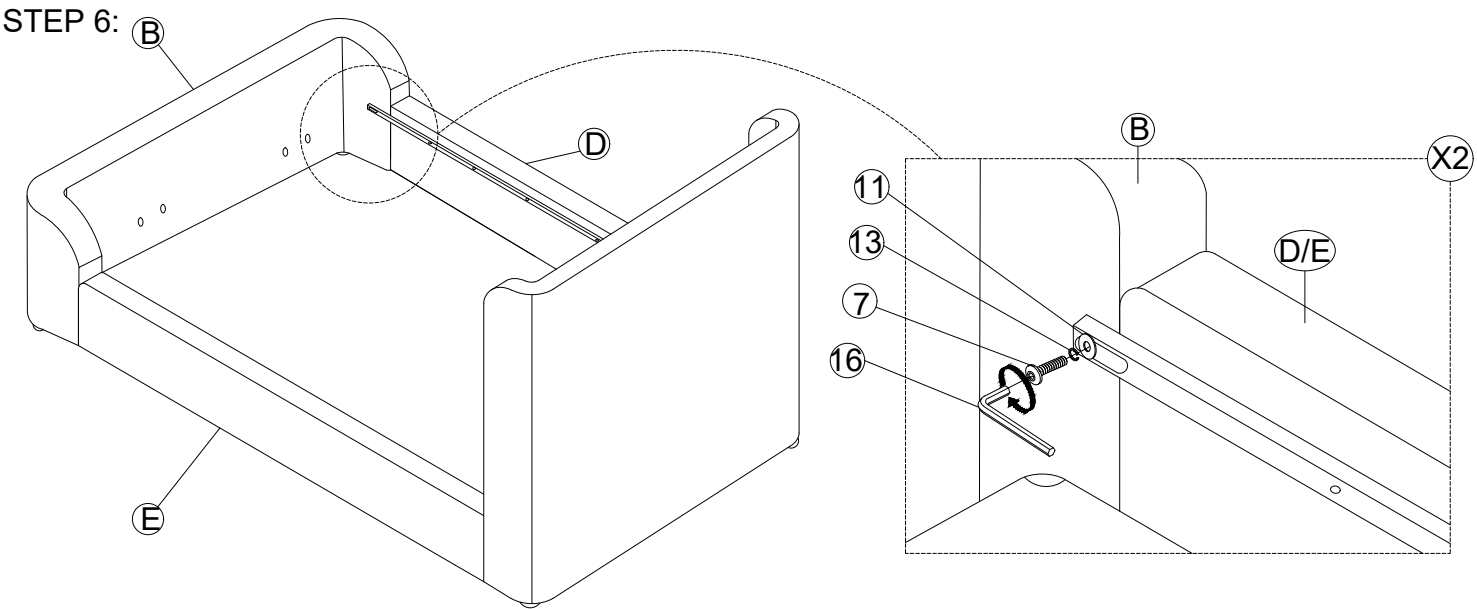


KIKI UPHOLSTERED KING BED
ASSEMBLY INSTRUCTIONS




STEP 9:

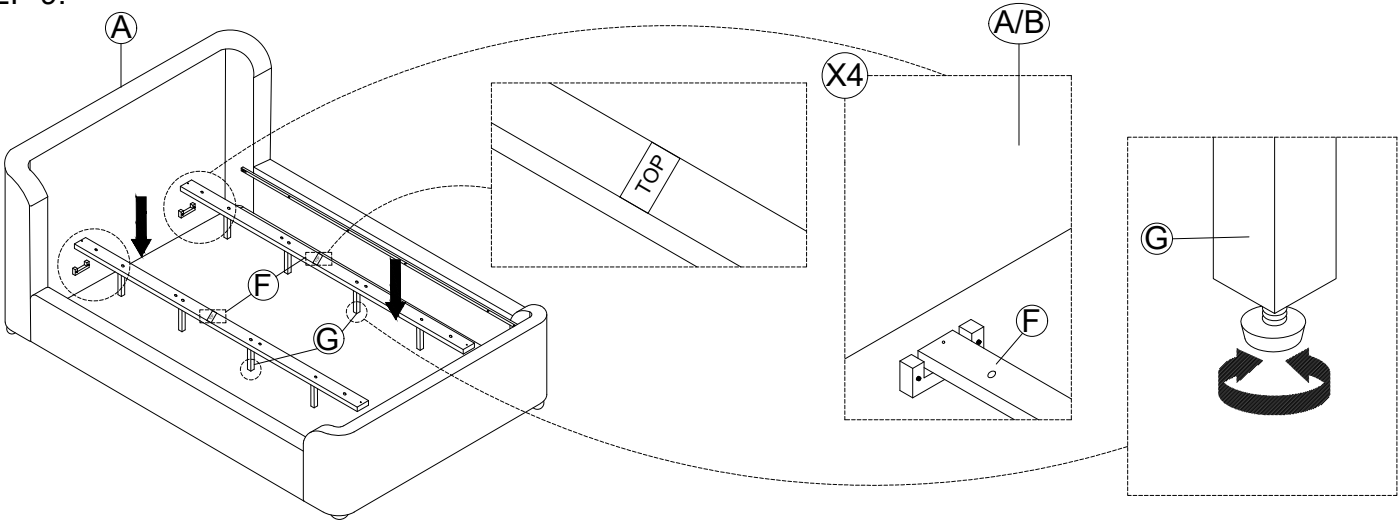

STEP 10:

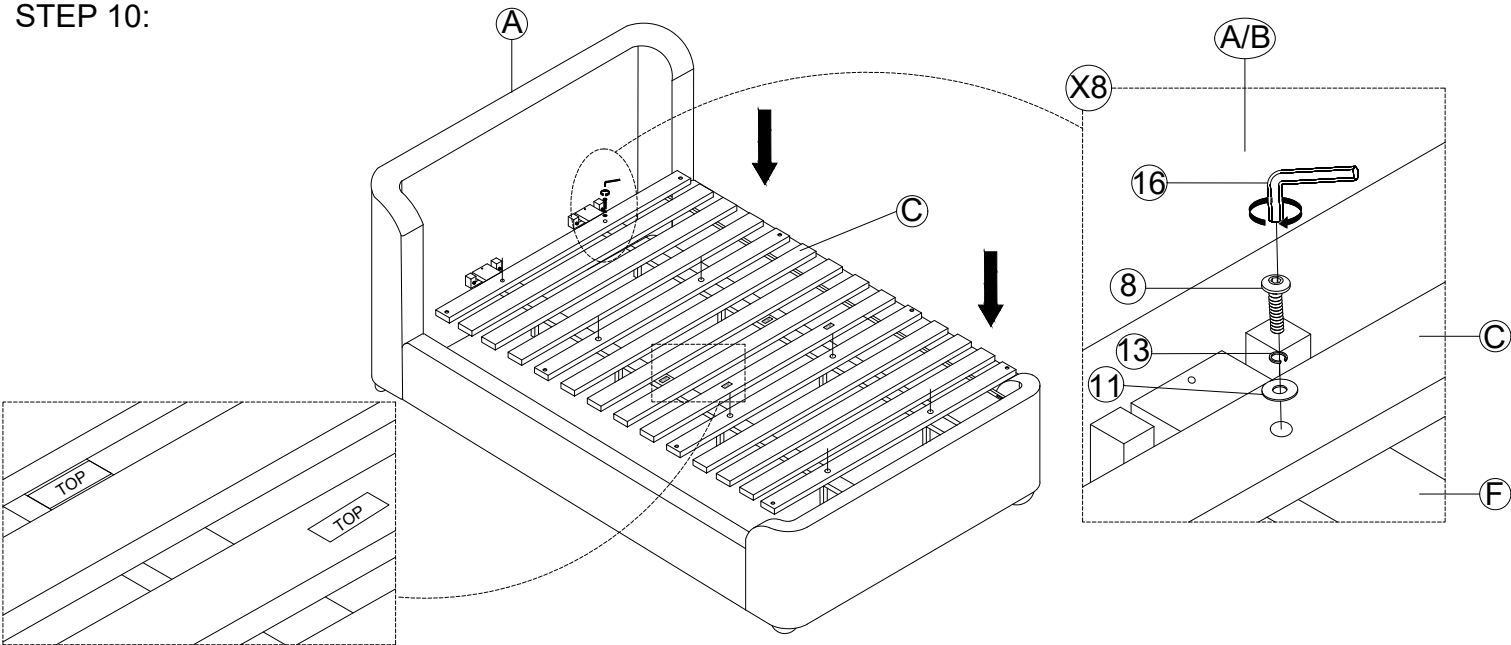


STEP 11:

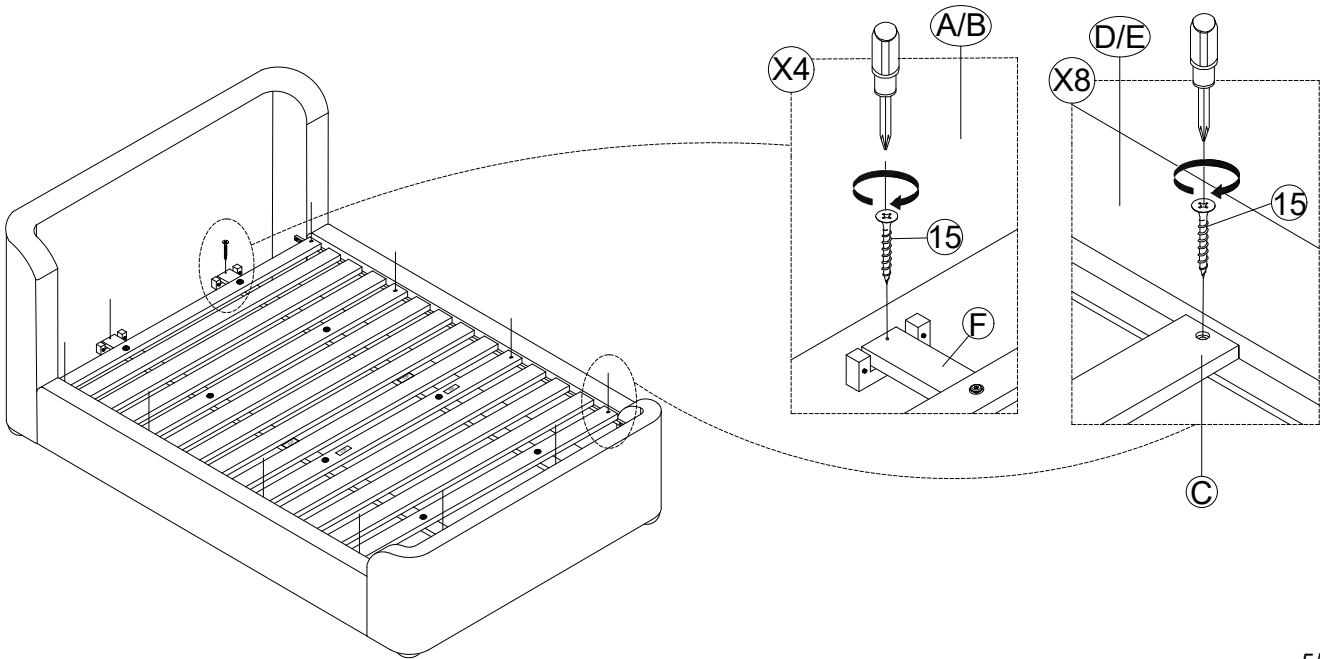

KIKI UPHOLSTERED KING BED

ASSEMBLY INSTRUCTIONS

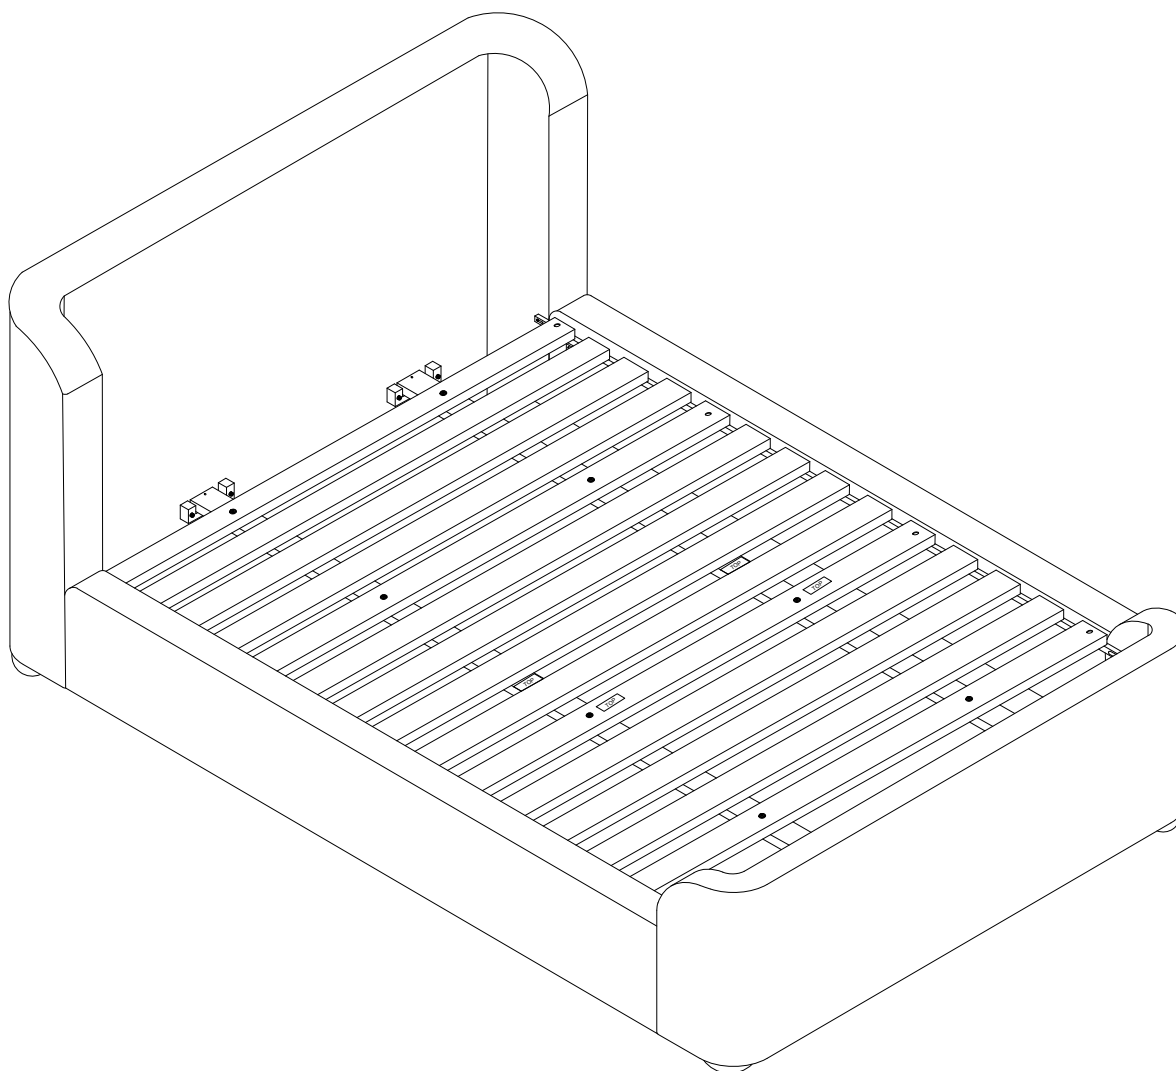


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.



MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

KIKI UPHOLSTERED KING BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

C. SLAT ROLL	1 SET
F. CENTER SLAT SUPPORT	2 PCS
G. SUPPORT LEG	8 PCS
H. CENTER SLAT SUPPORT CLEAT	4 PCS

STEP 1:

USE ALLEN KEY (16) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

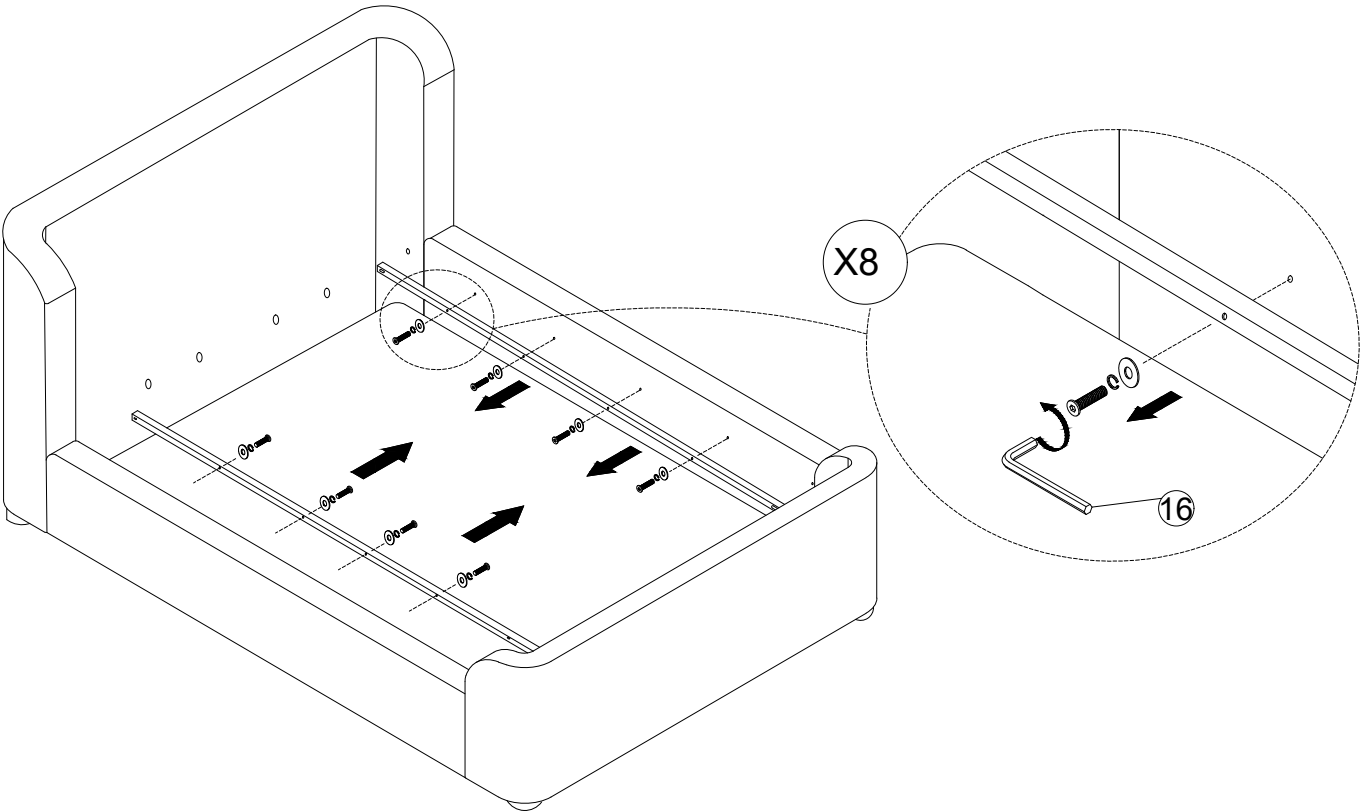

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION

KIKI UPHOLSTERED C.KING BED


ASSEMBLY INSTRUCTIONS



BOX#1

A. HEADBOARD
I. LEG

1 PC
2 PCS

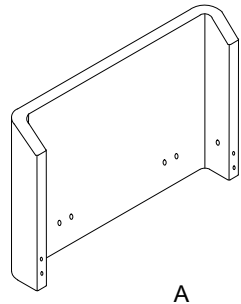

HARDWARE KIT PACKED IN BOX #1

No.	Description	Image	Quantity
1	ALLEN BOLT (8 x 50mm)		2 PCS
2	FLAT WASHER (8 x 19mm)		2 PCS
3	LOCK WASHER (8 x 22mm)		2 PCS
4	ALLEN KEY (8mm)		1 PC



HARDWARE KIT PACKED IN BOX #2

5	THREADED BOLT (8 x 90mm)		8 PCS
6	ALLEN BOLT (8 x 50mm)		2 PCS
7	ALLEN BOLT (6 x 50mm)		12 PCS
8	ALLEN BOLT (6 x 30mm)		6 PCS
9	FLAT WASHER (8 x 22mm)		8 PCS
10	FLAT WASHER (8 x 19mm)		2 PCS
11	FLAT WASHER (6 x 16mm)		18 PCS
12	LOCK WASHER (8 x 22mm)		10 PCS
13	LOCK WASHER (6 x 16mm)		18 PCS
14	HEX NUT (8mm)		8 PCS
15	PHILLIPS SCREW (7 x 35mm)		10 PCS
16	ALLEN KEY (6mm)		1 PC
17	ALLEN KEY (8mm)		1 PC
18	WRENCH		1 PC
19	CONNECTING BRACKET		4 PCS

BOX#2

B. FOOTBOARD
C. SLAT ROLL
H. CENTER SLAT SUPPORT CLEAT
I. LEG




1 PC
1 SET
4 PCS
2 PCS

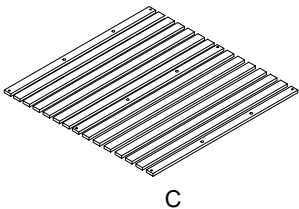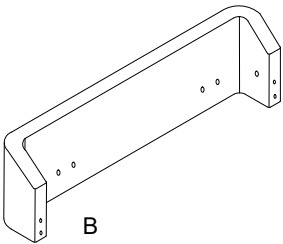





BOX#3

D. LEFT SIDE RAIL
E. RIGHT SIDE RAIL
F. CENTER SLAT SUPPORT
G. SUPPORT LEG

1 PC
1 PC
2 PCS
8 PCS

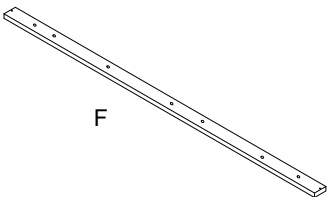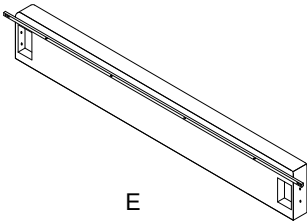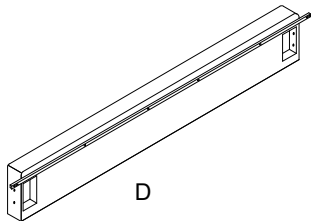

FULLY ASSEMBLED

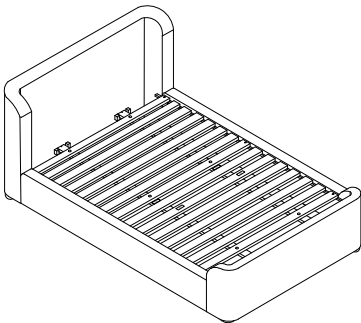


KIKI UPHOLSTERED C.KING BED


ASSEMBLY INSTRUCTIONS




STEP 1:

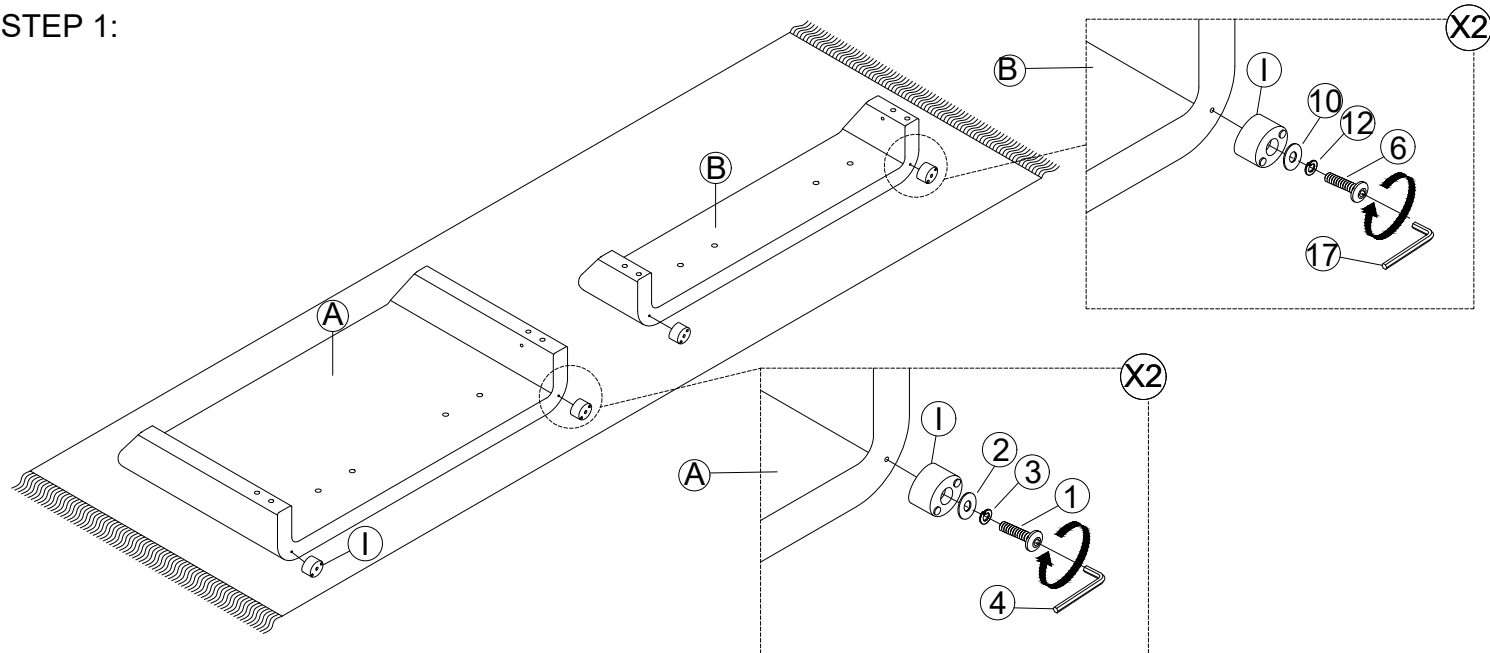

STEP 2:

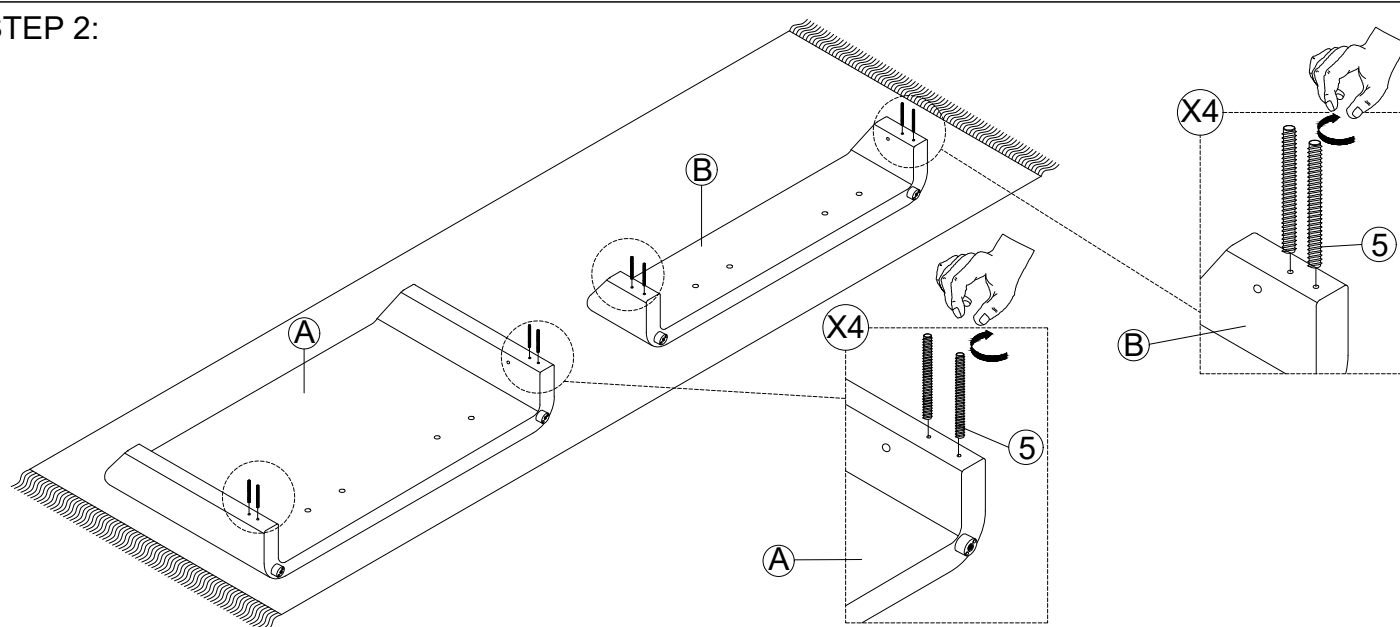

STEP 3:

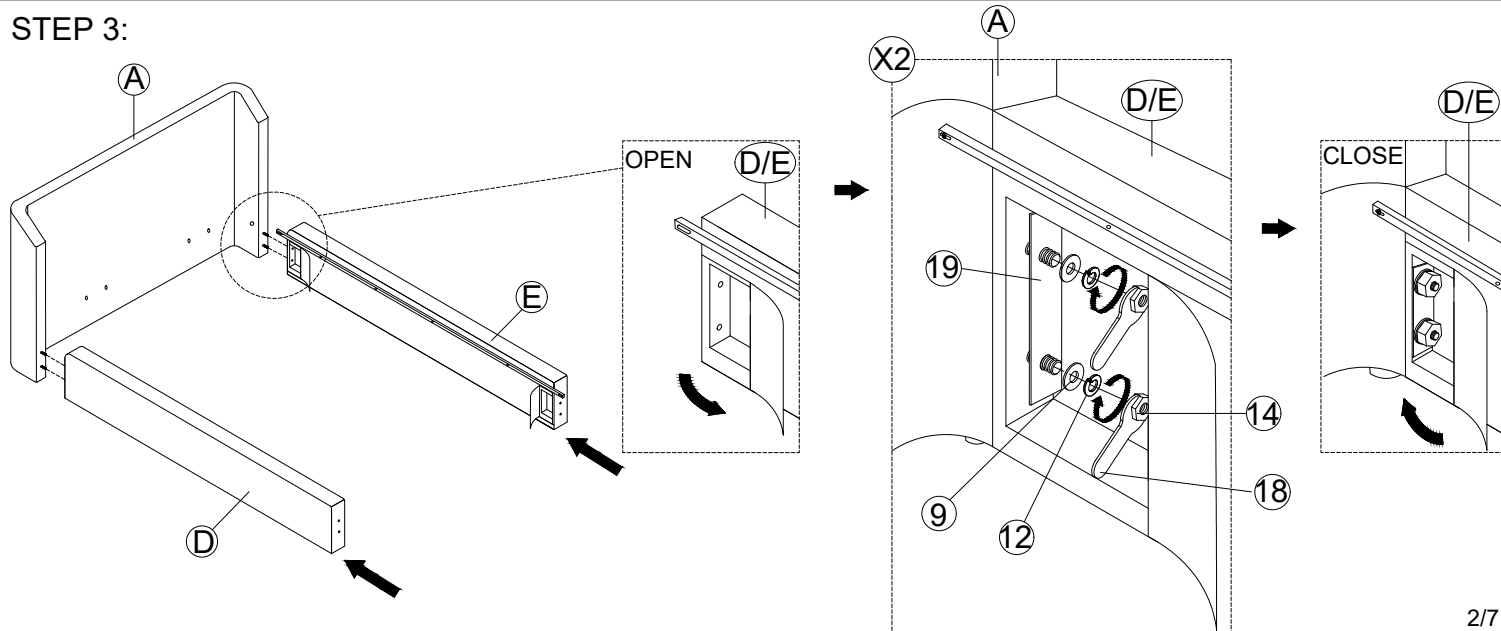


KIKI UPHOLSTERED C.KING BED

ASSEMBLY INSTRUCTIONS




STEP 4:

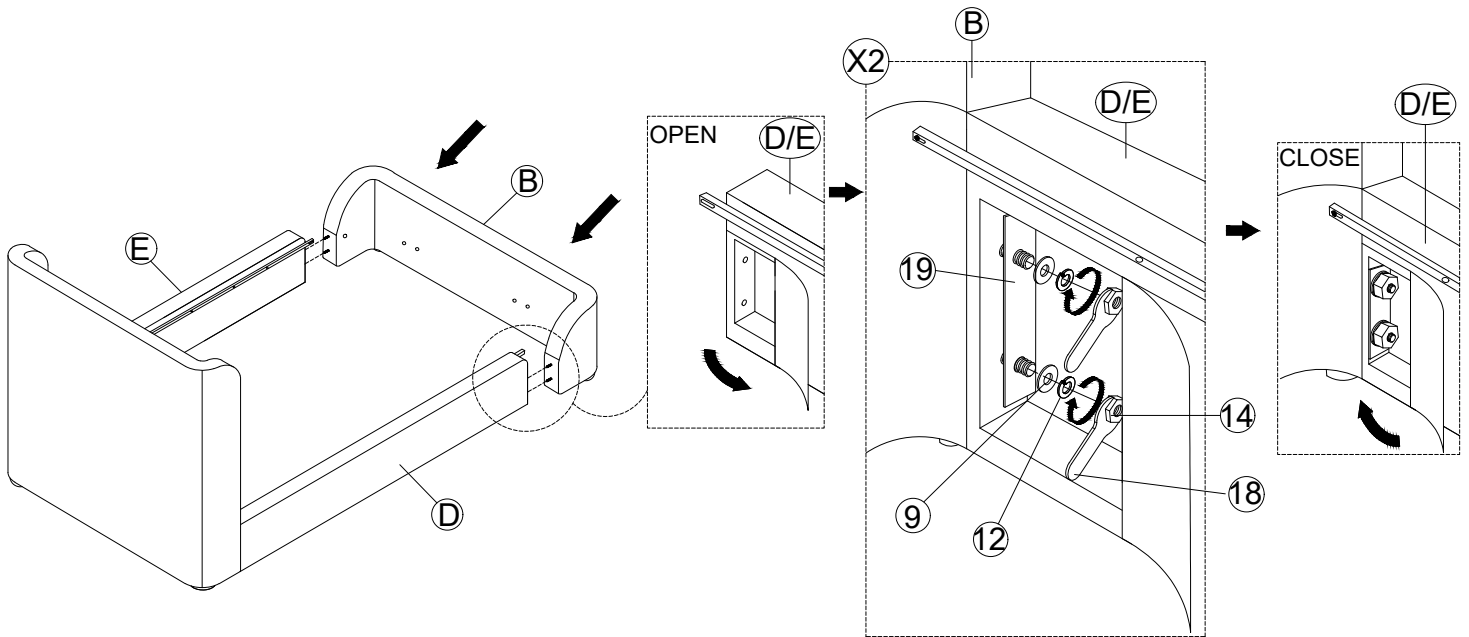

STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 5~11 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 5.

STEP 5:

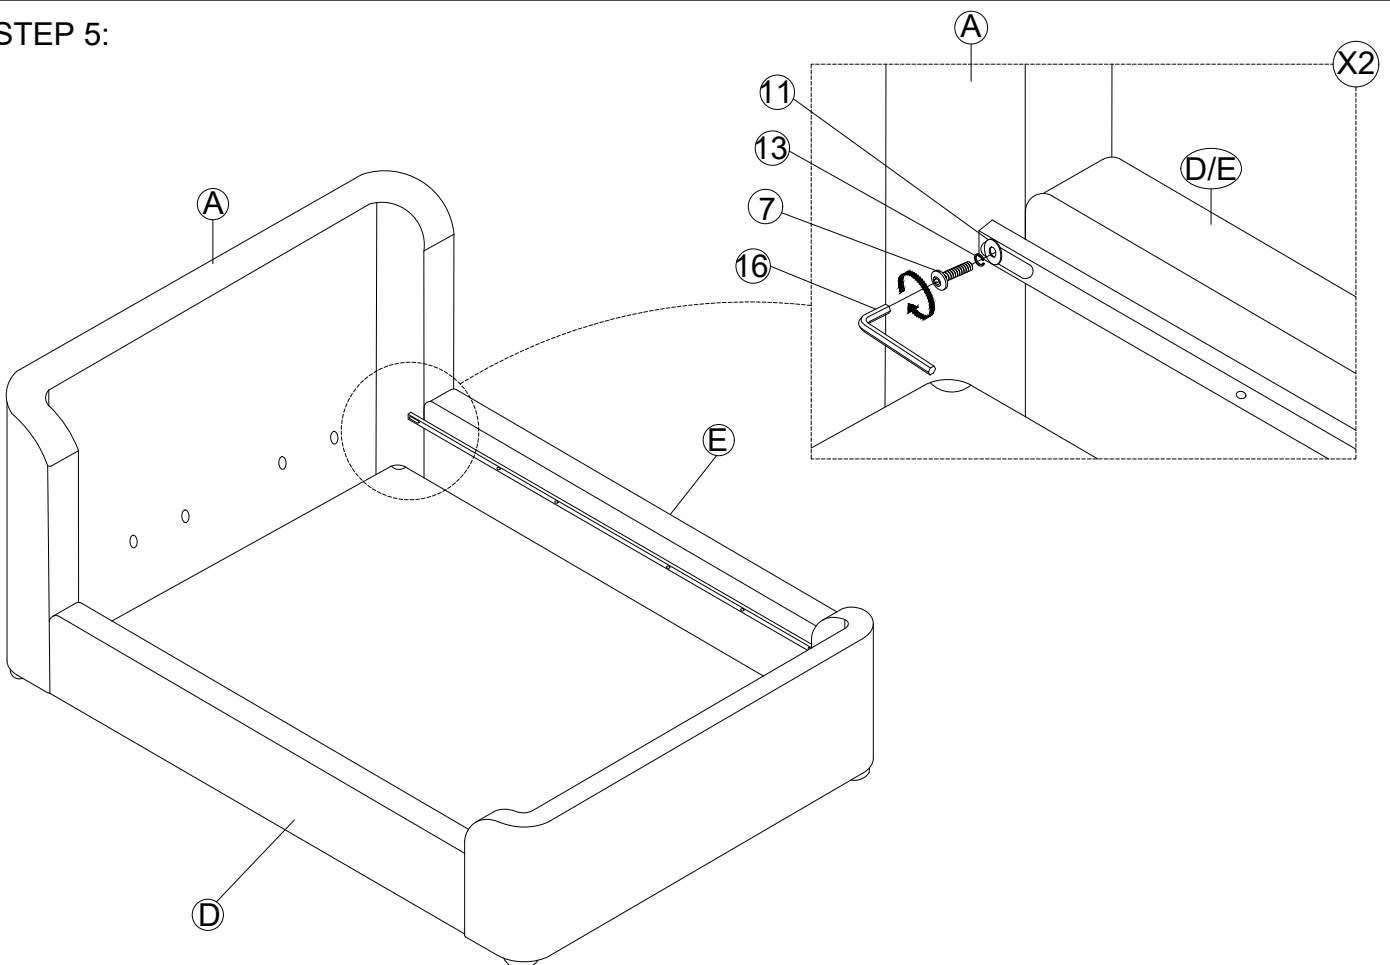


KIKI UPHOLSTERED C.KING BED


ASSEMBLY INSTRUCTIONS




STEP 6:

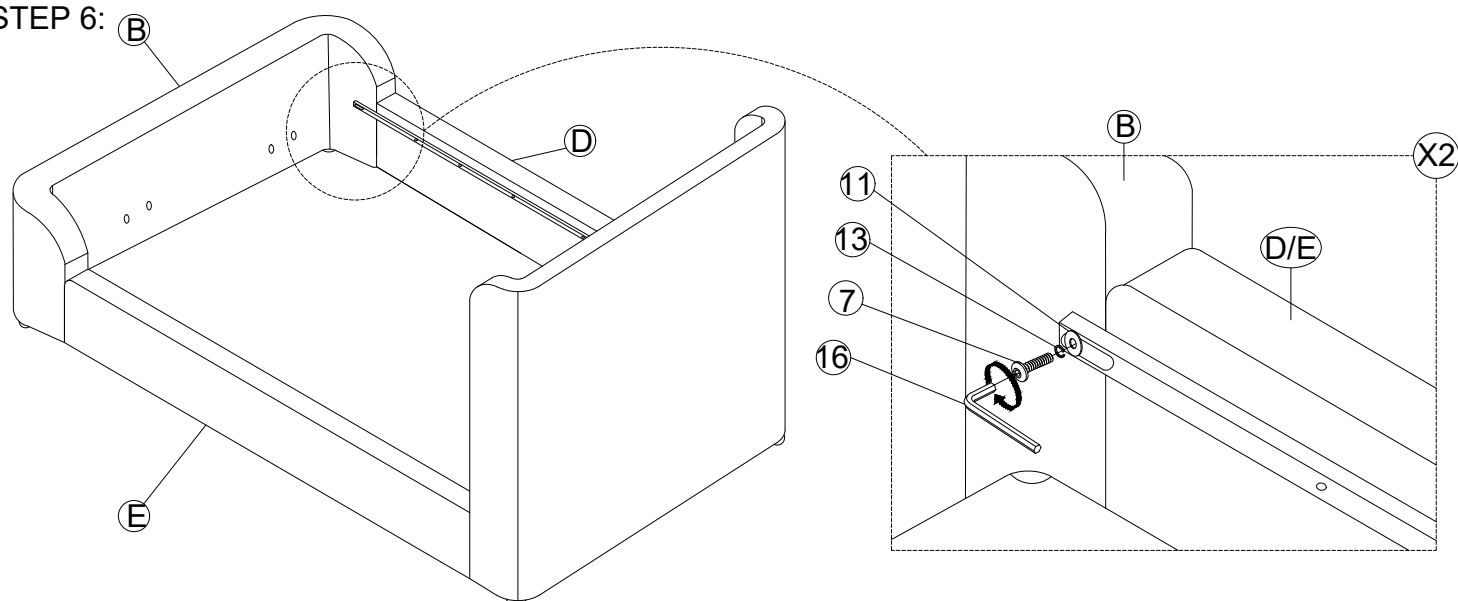

STEP 7:

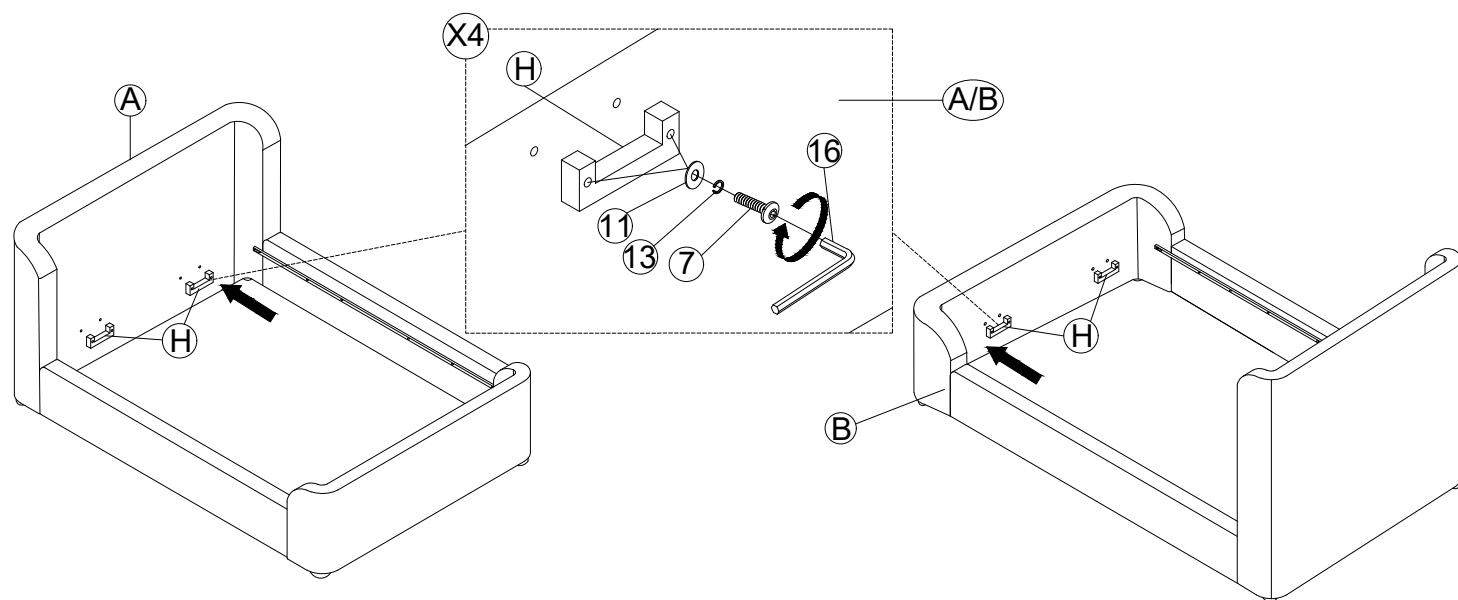

STEP 8:

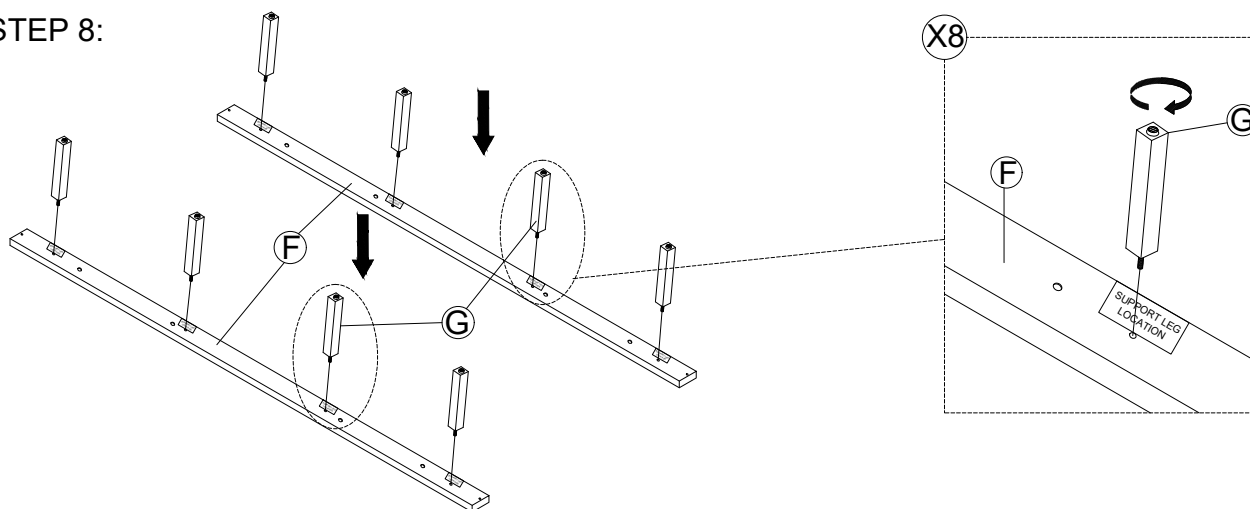


KIKI UPHOLSTERED C.KING BED


ASSEMBLY INSTRUCTIONS




STEP 9:

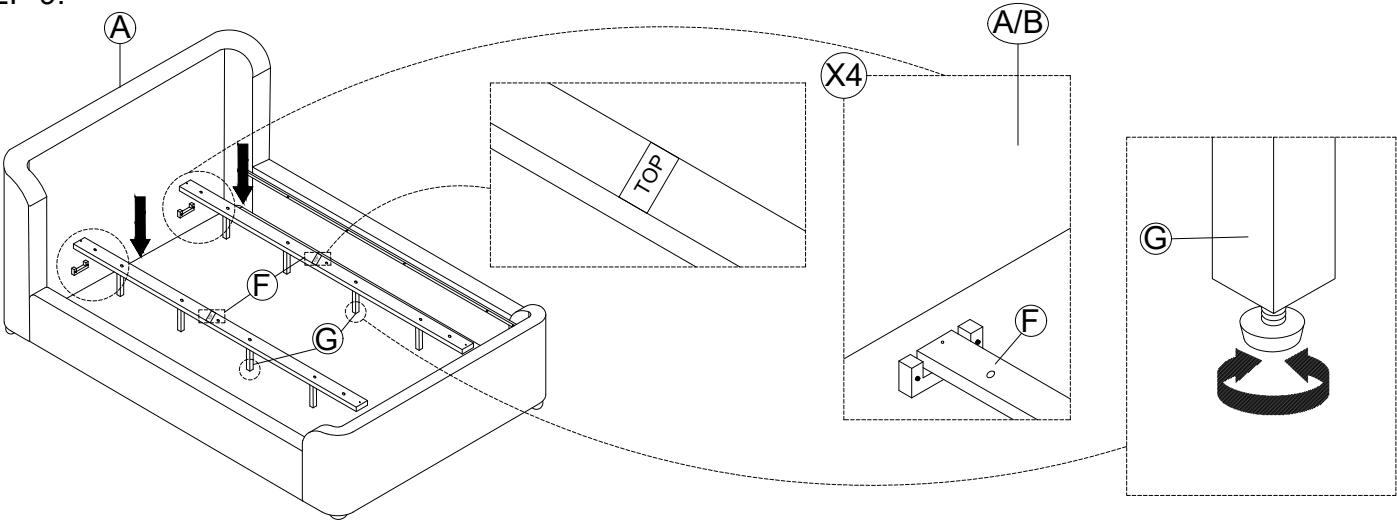

STEP 10:

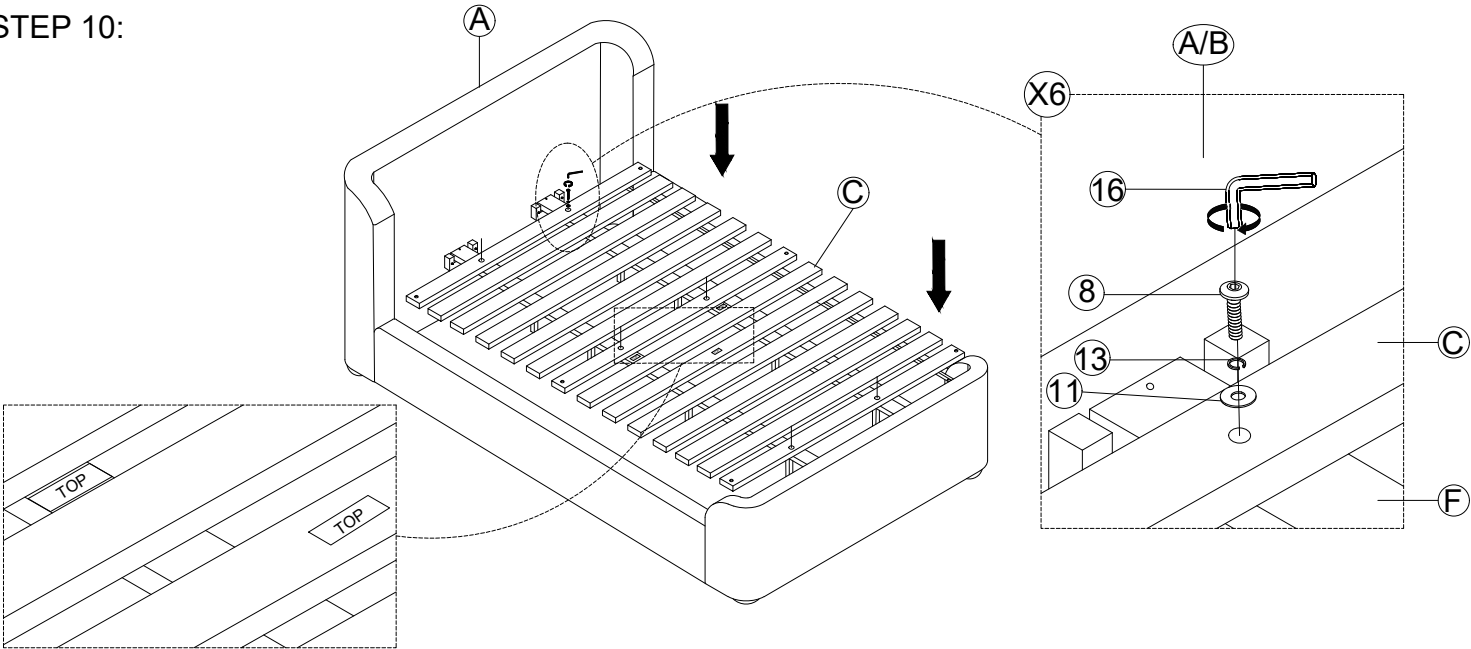


STEP 11:

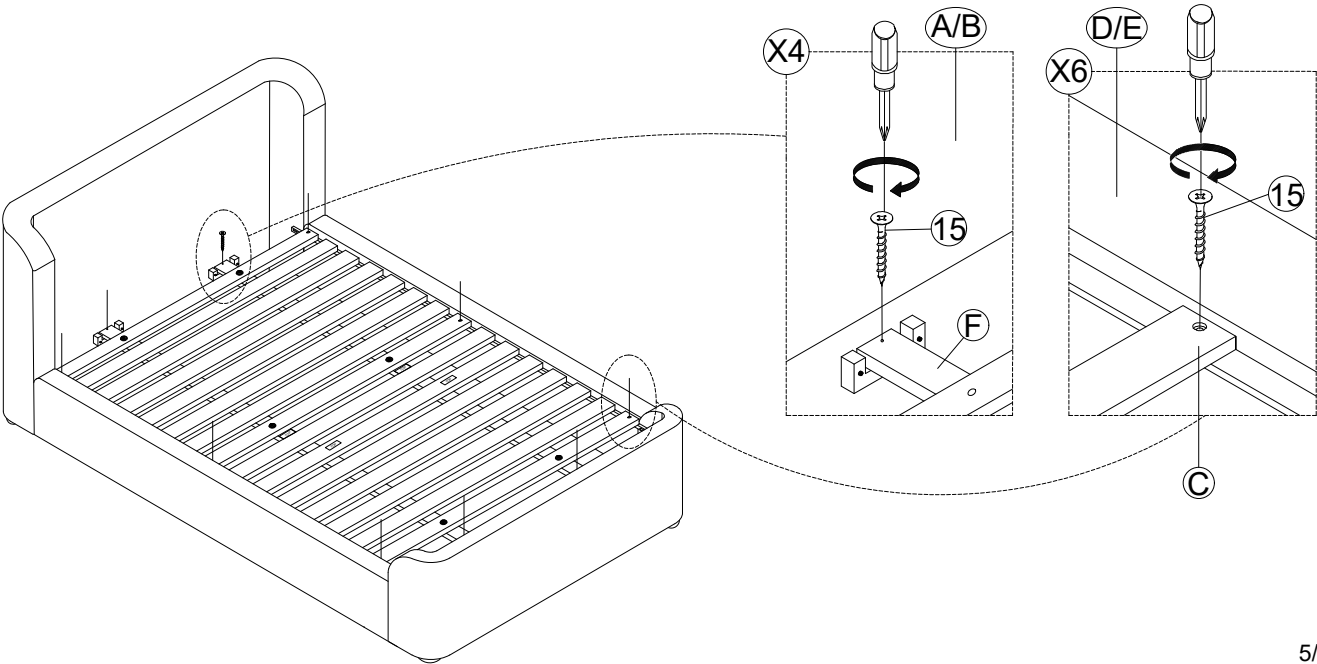

KIKI UPHOLSTERED C.KING BED

ASSEMBLY INSTRUCTIONS

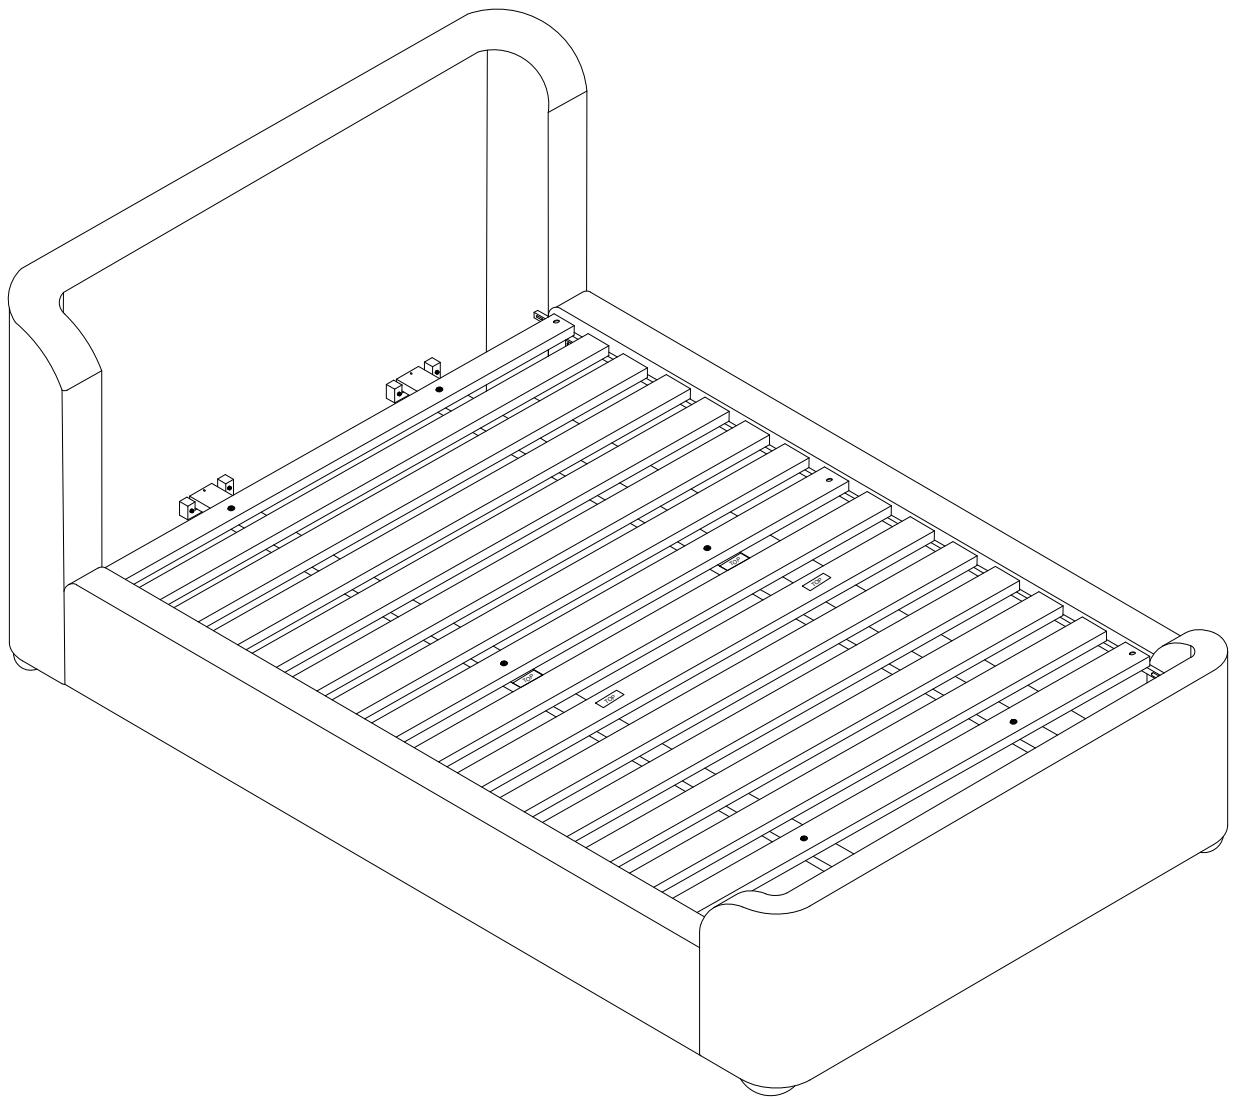


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.



MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

KIKI UPHOLSTERED C.KING BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

C. SLAT ROLL	1 SET
F. CENTER SLAT SUPPORT	2 PCS
G. SUPPORT LEG	8 PCS
H. CENTER SLAT SUPPORT CLEAT	4 PCS

STEP 1:

USE ALLEN KEY (16) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

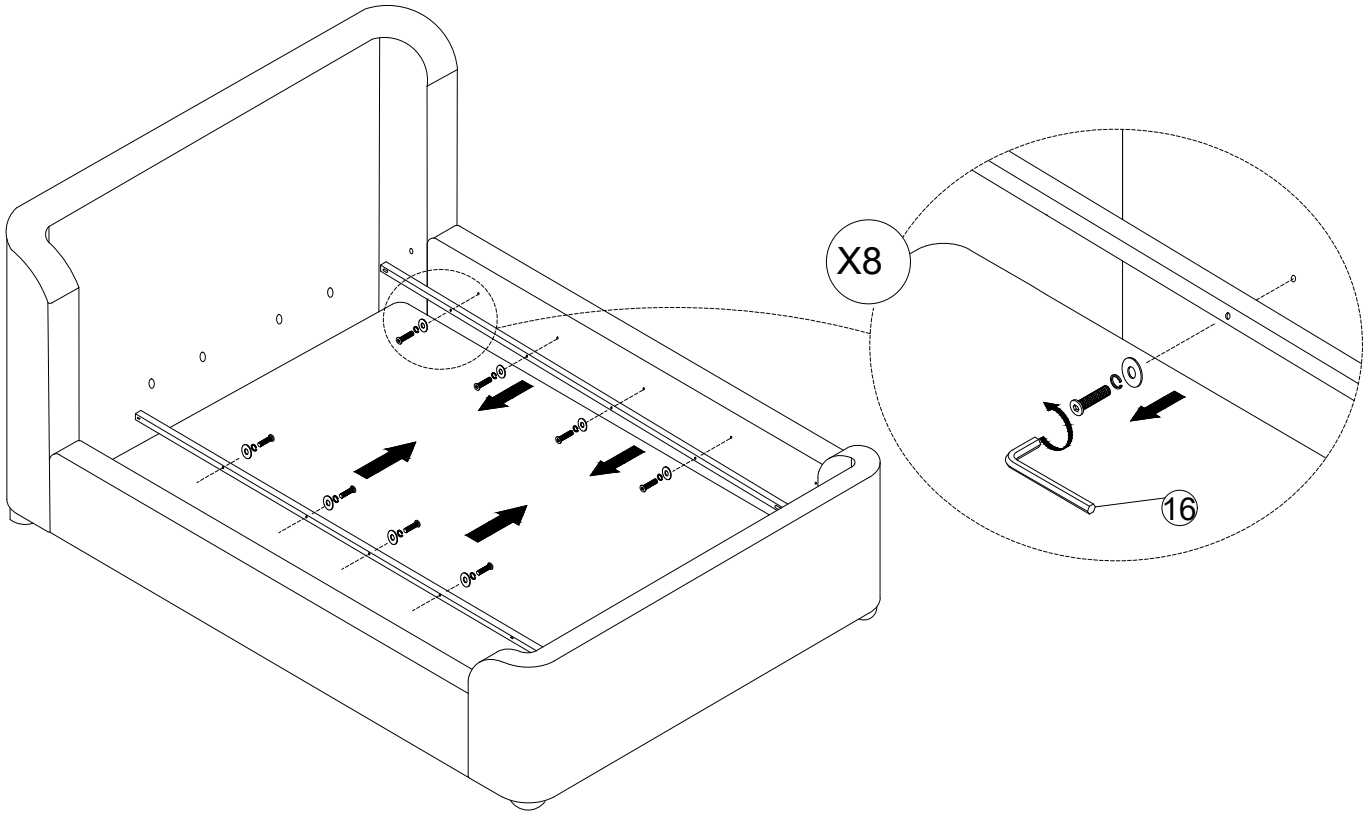

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION

KIKI UPHOLSTERED FULL BED


ASSEMBLY INSTRUCTIONS



BOX#1

A. HEADBOARD
I. LEG

1 PC
2 PCS

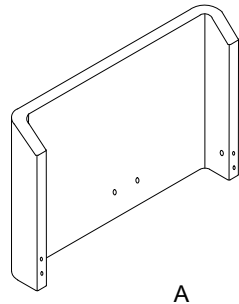

HARDWARE KIT PACKED IN BOX #1

No.	Description	Image	Quantity
1	ALLEN BOLT (8 x 50mm)		2 PCS
2	FLAT WASHER (8 x 19mm)		2 PCS
3	LOCK WASHER (8 x 22mm)		2 PCS
4	ALLEN KEY (8mm)		1 PC



HARDWARE KIT PACKED IN BOX #2

5	THREADED BOLT (8 x 90mm)		8 PCS
6	ALLEN BOLT (8 x 50mm)		2 PCS
7	ALLEN BOLT (6 x 50mm)		8 PCS
8	ALLEN BOLT (6 x 30mm)		3 PCS
9	FLAT WASHER (8 x 22mm)		8 PCS
10	FLAT WASHER (8 x 19mm)		2 PCS
11	FLAT WASHER (6 x 16mm)		11 PCS
12	LOCK WASHER (8 x 22mm)		10 PCS
13	LOCK WASHER (6 x 16mm)		11 PCS
14	HEX NUT (8mm)		8 PCS
15	PHILLIPS SCREW (7 x 35mm)		8 PCS
16	ALLEN KEY (6mm)		1 PC
17	ALLEN KEY (8mm)		1 PC
18	WRENCH		1 PC
19	CONNECTING BRACKET		4 PCS

BOX#2

B. FOOTBOARD
C. SLAT ROLL
H. CENTER SLAT SUPPORT CLEAT
I. LEG




1 PC
1 SET
2 PCS
2 PCS

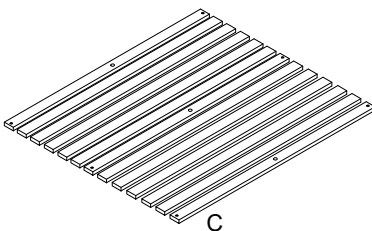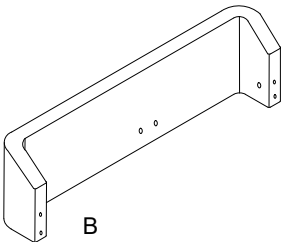





BOX#3

D. LEFT SIDE RAIL
E. RIGHT SIDE RAIL
F. CENTER SLAT SUPPORT
G. SUPPORT LEG

1 PC
1 PC
1 PC
4 PCS

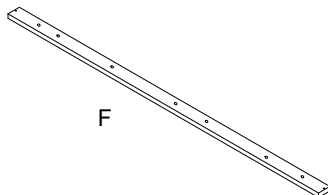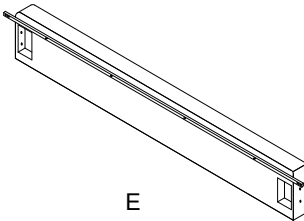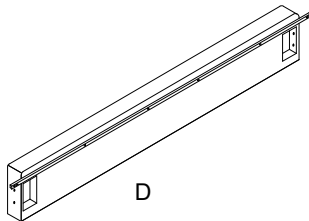


FULLY ASSEMBLED

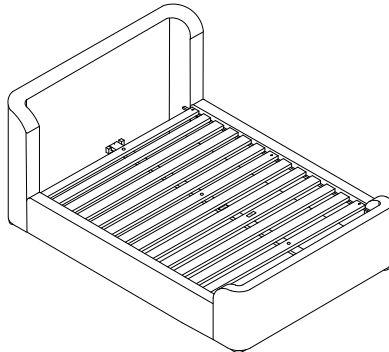


KIKI UPHOLSTERED FULL BED

ASSEMBLY INSTRUCTIONS


STEP 1:

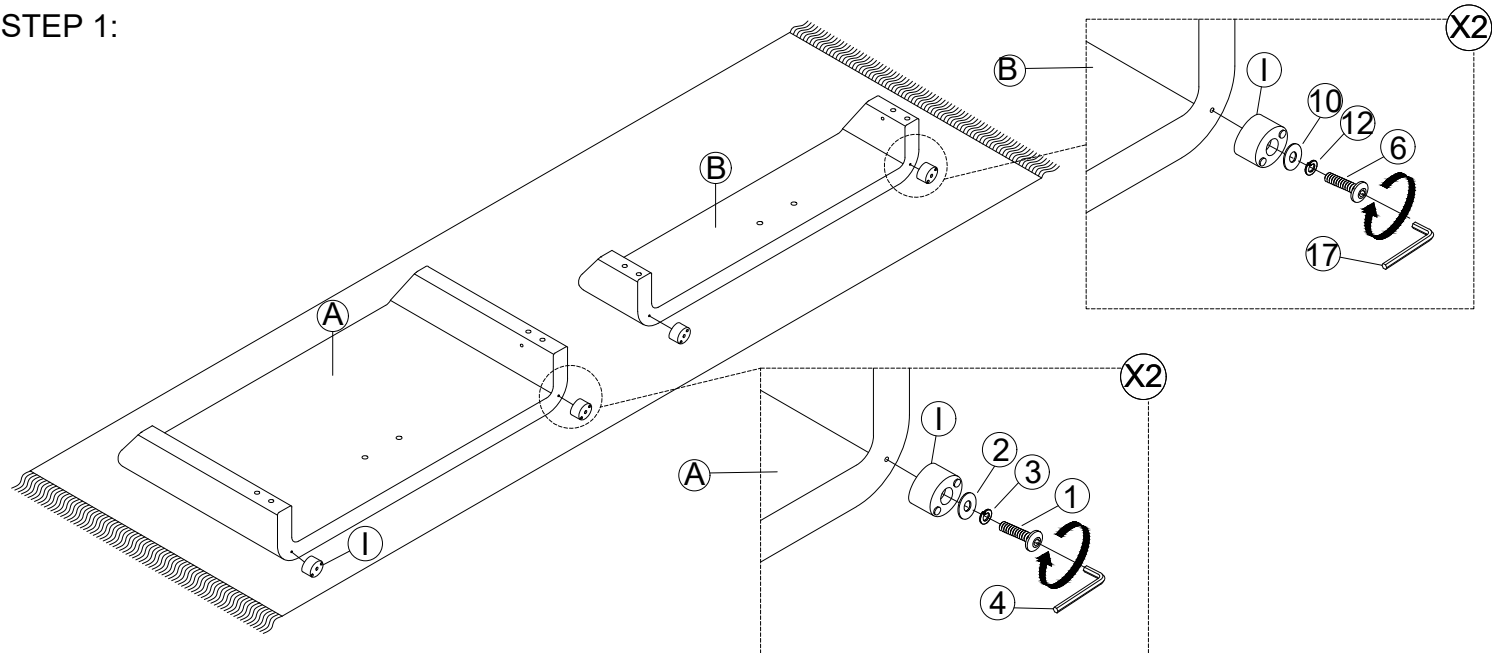

STEP 2:

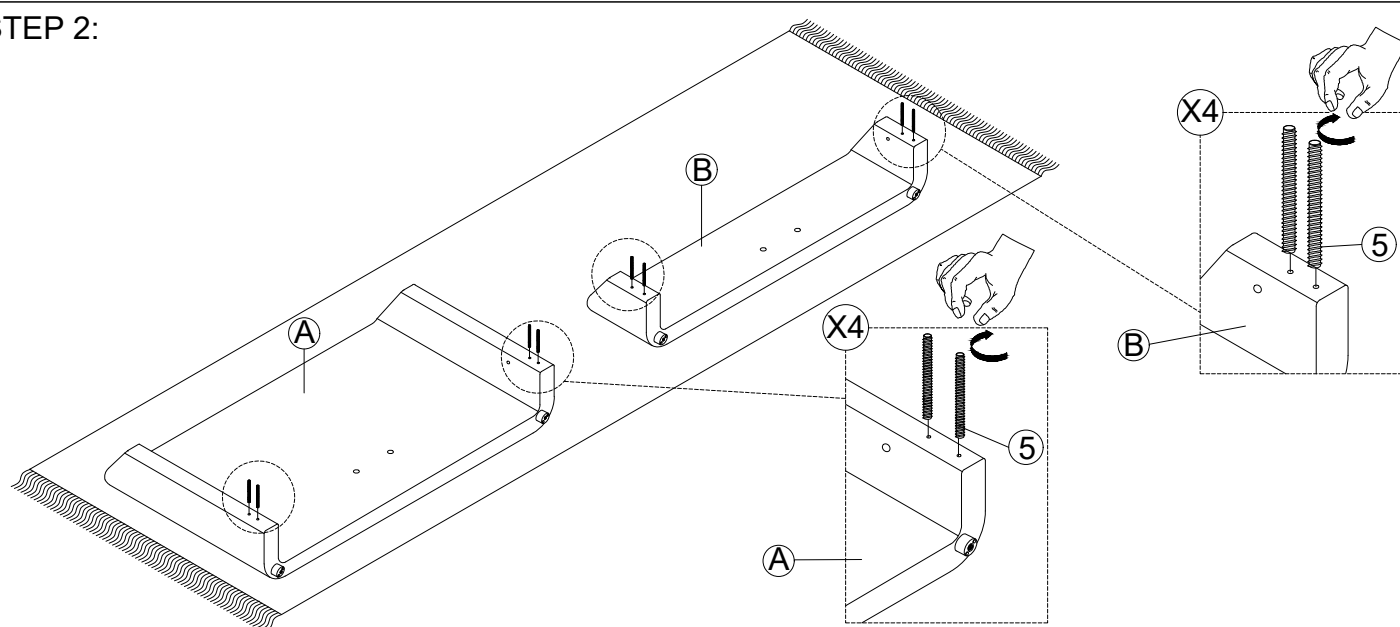


STEP 3:

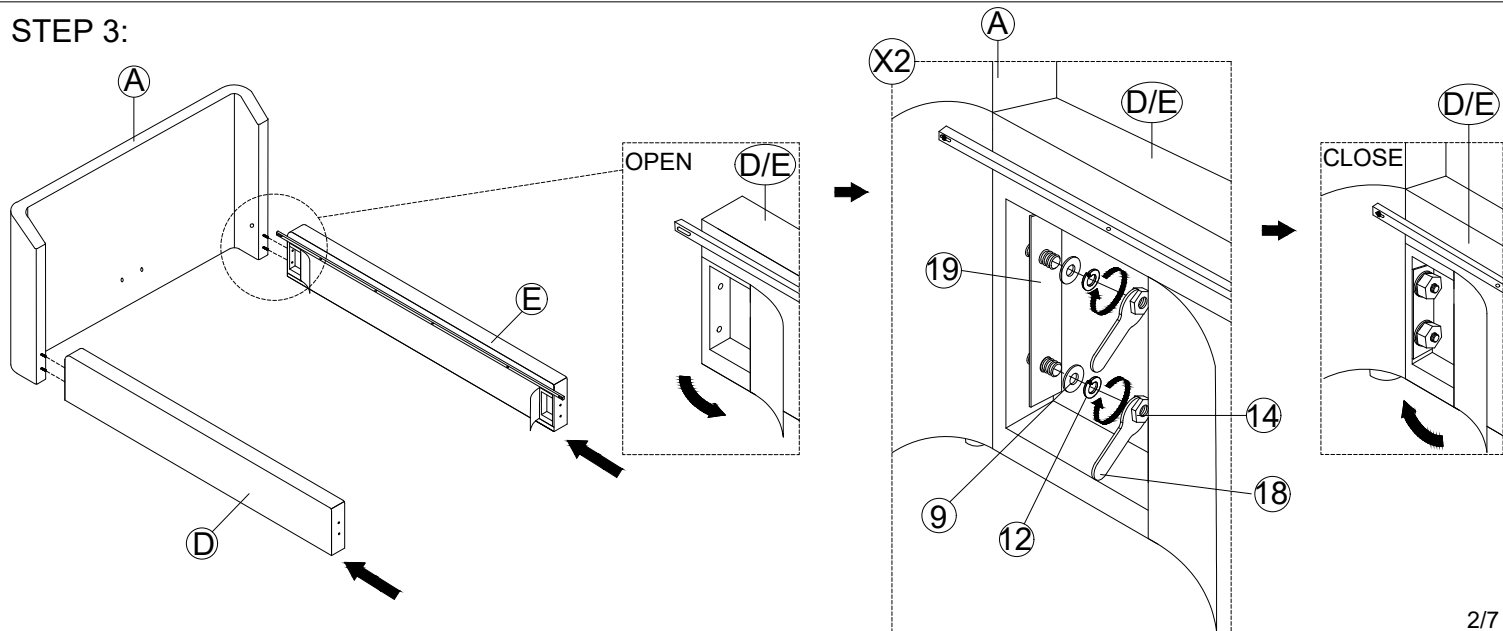

KIKI UPHOLSTERED FULL BED

ASSEMBLY INSTRUCTIONS


STEP 4:

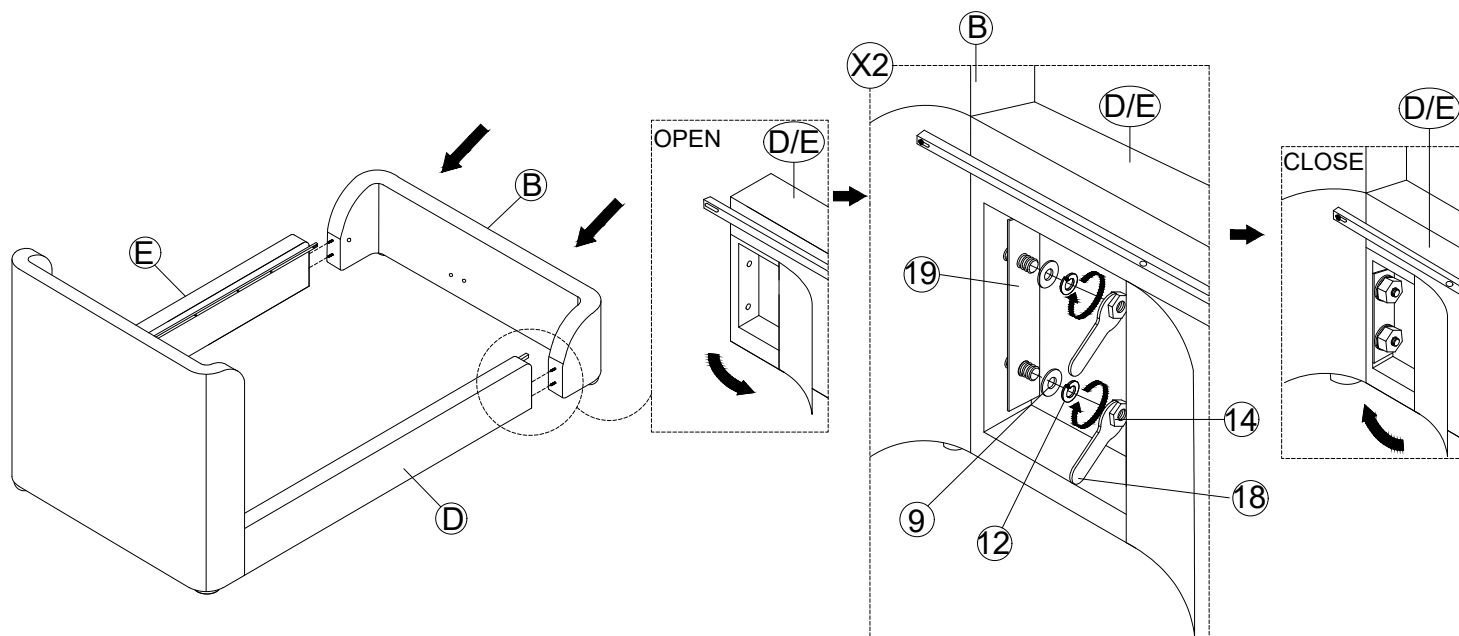

STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 5~11 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 5.

STEP 5:

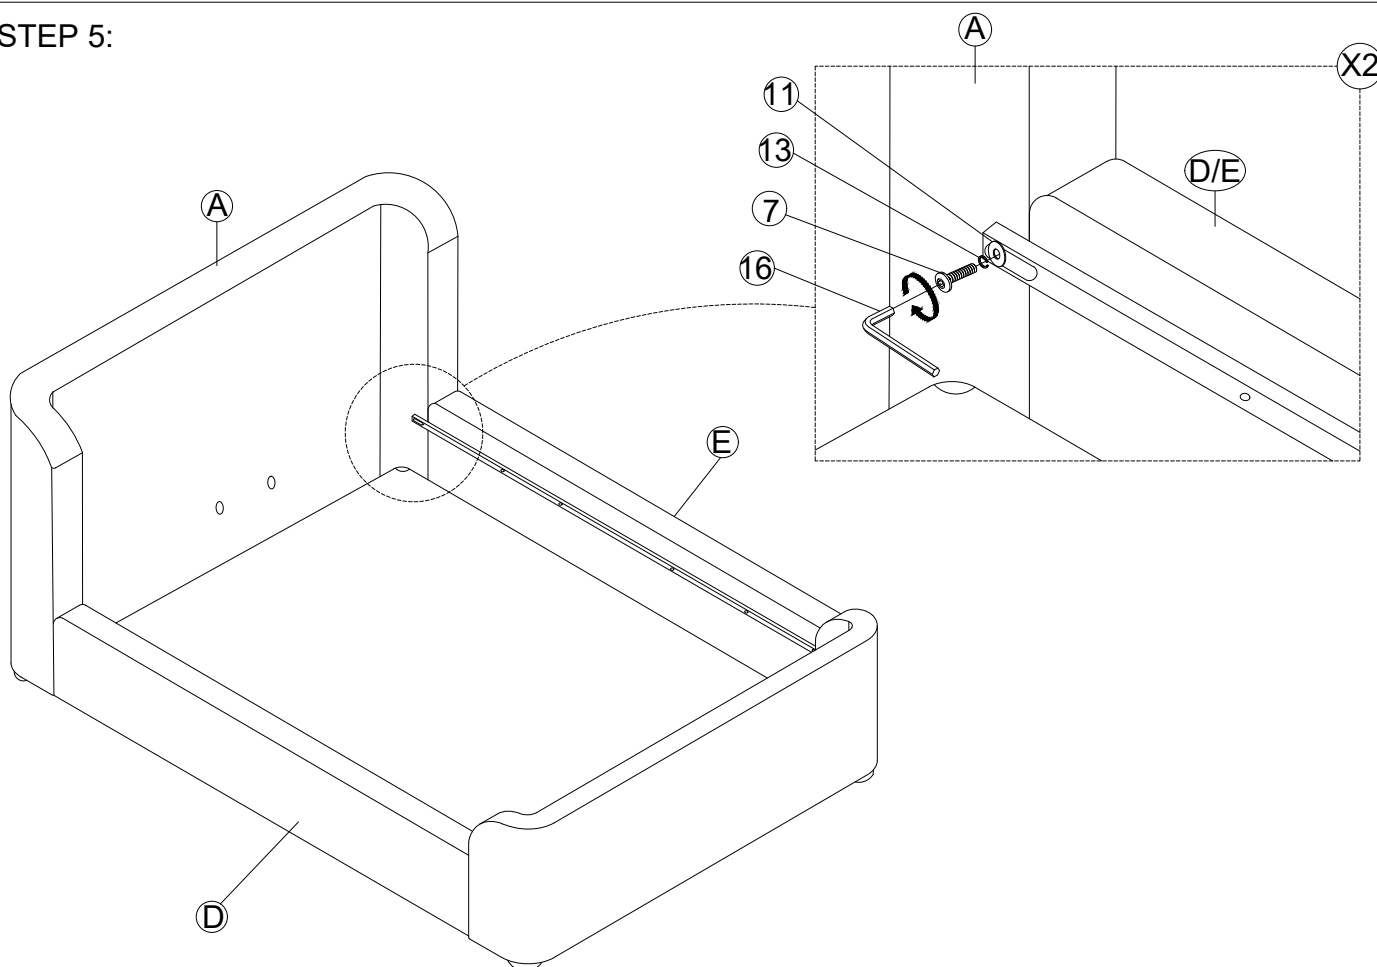


KIKI UPHOLSTERED FULL BED


ASSEMBLY INSTRUCTIONS




STEP 6:

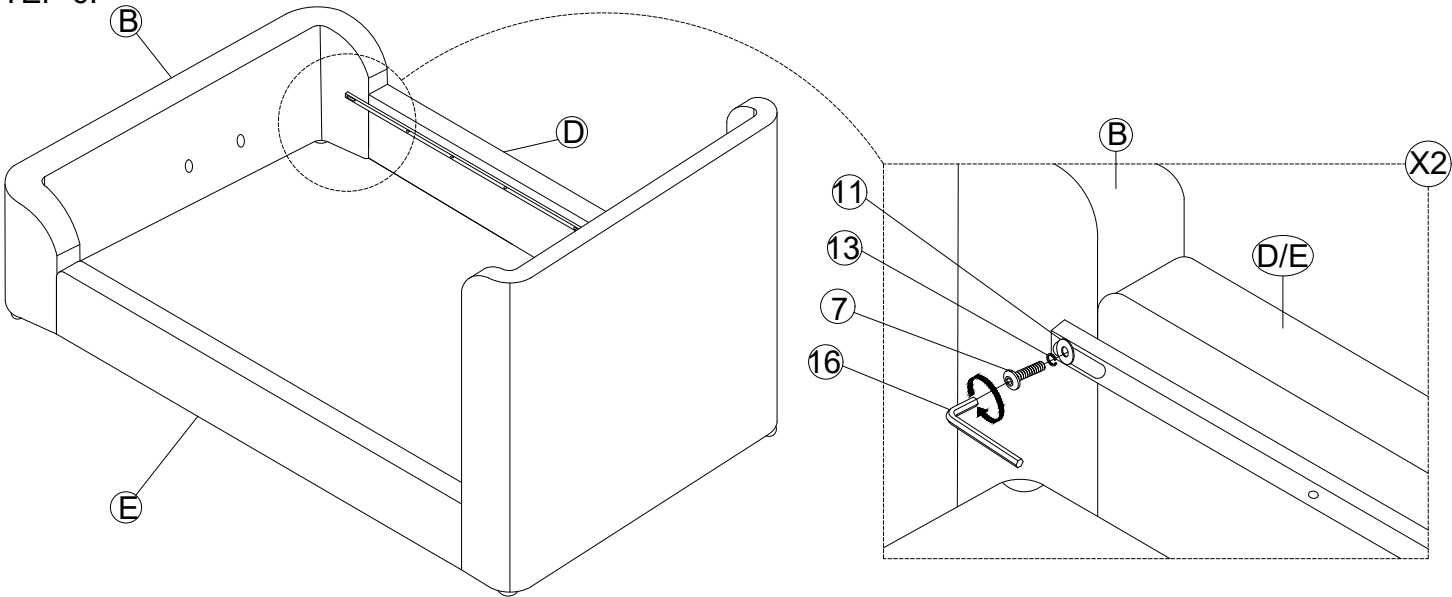

STEP 7:

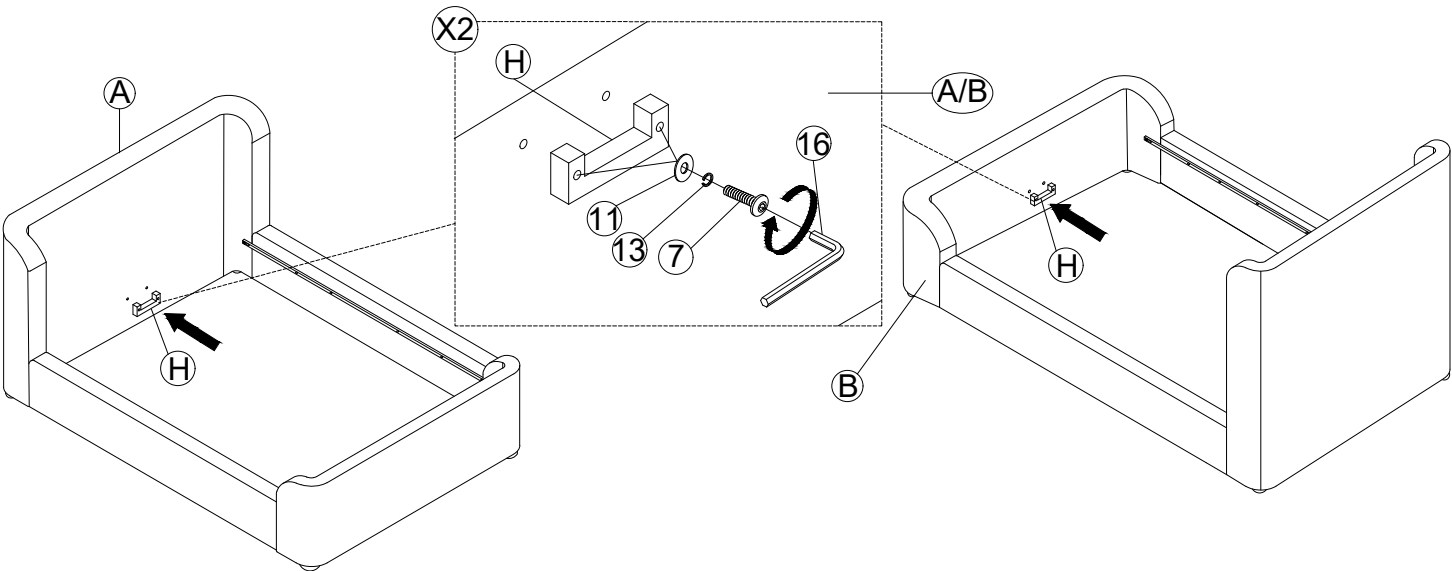

STEP 8:

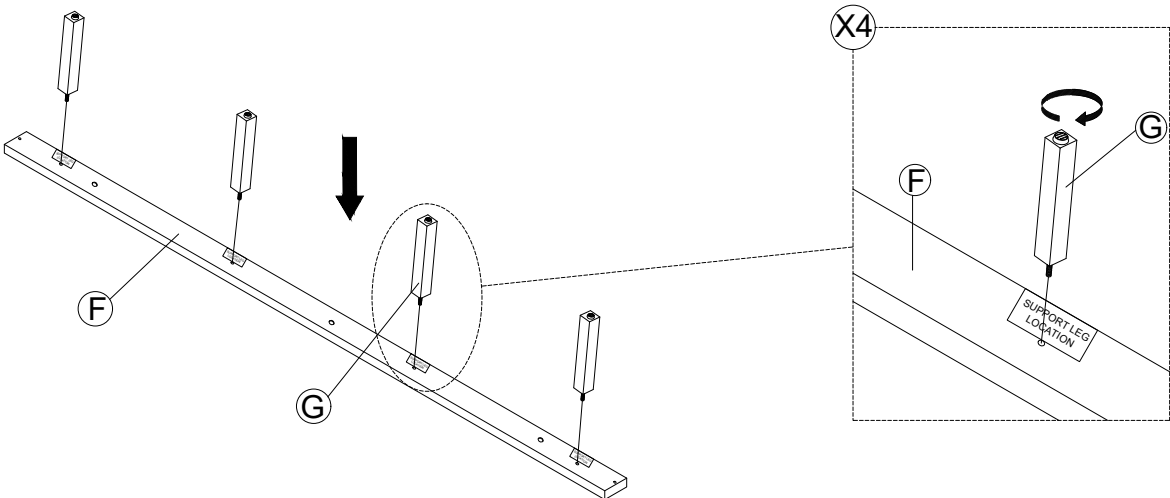


KIKI UPHOLSTERED FULL BED


ASSEMBLY INSTRUCTIONS




STEP 9:

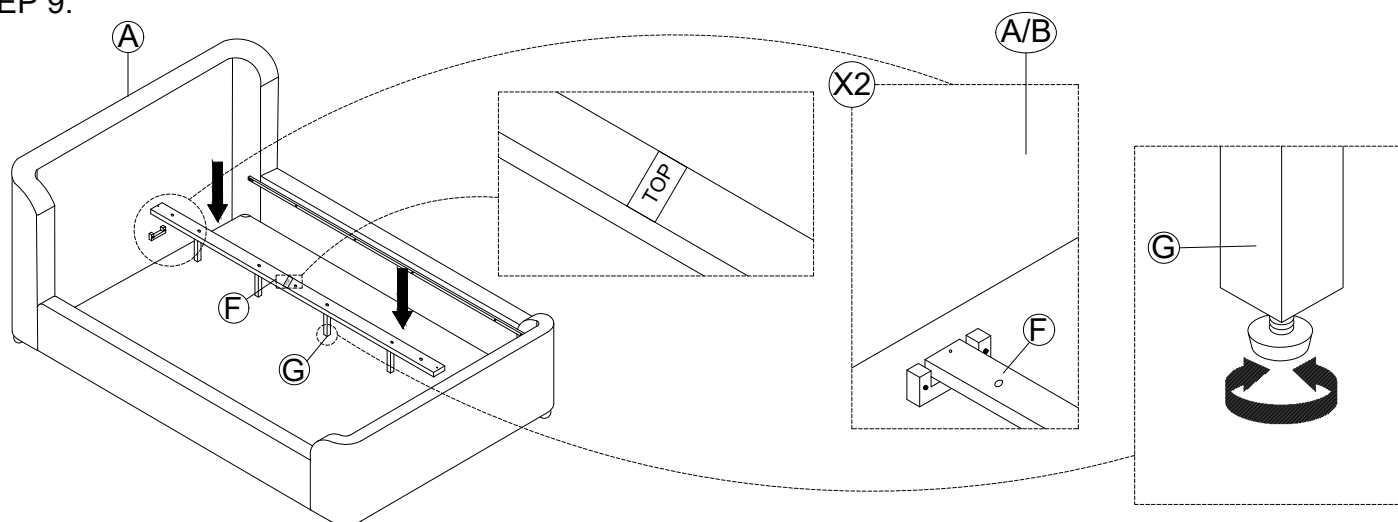

STEP 10:

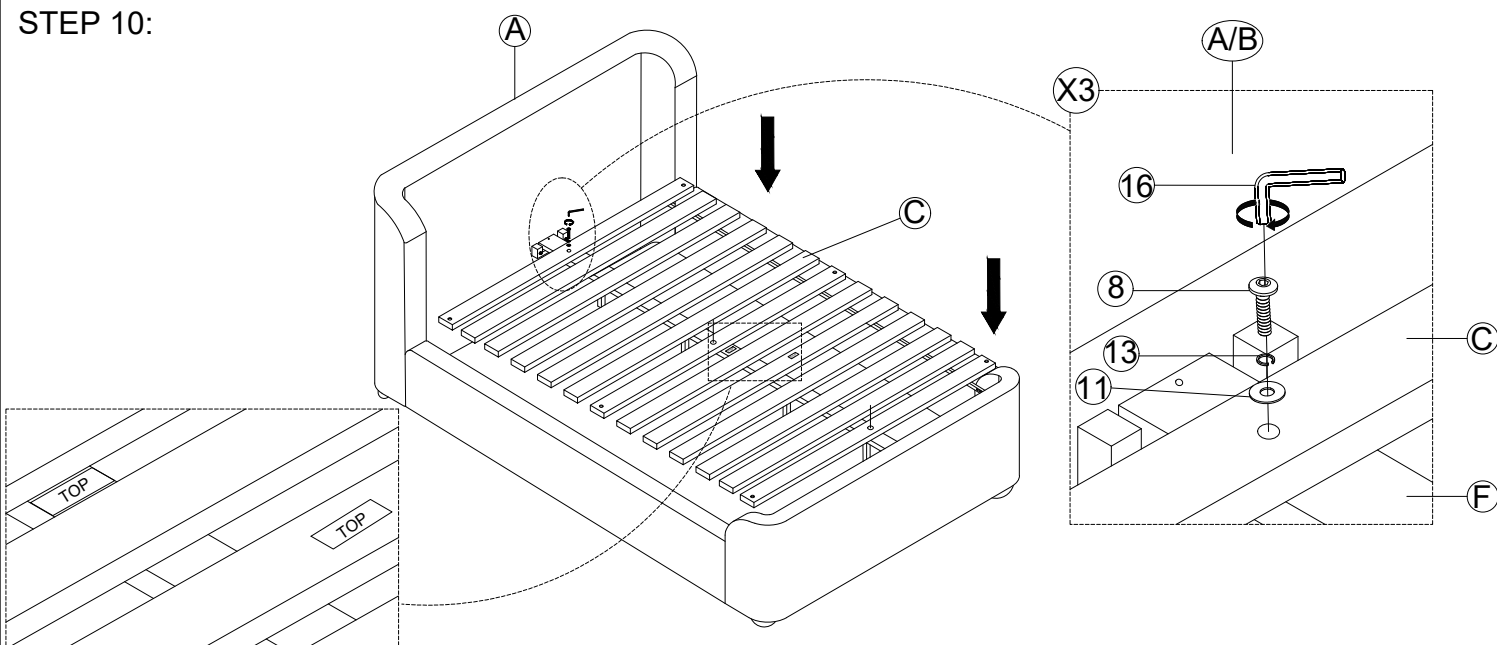


STEP 11:

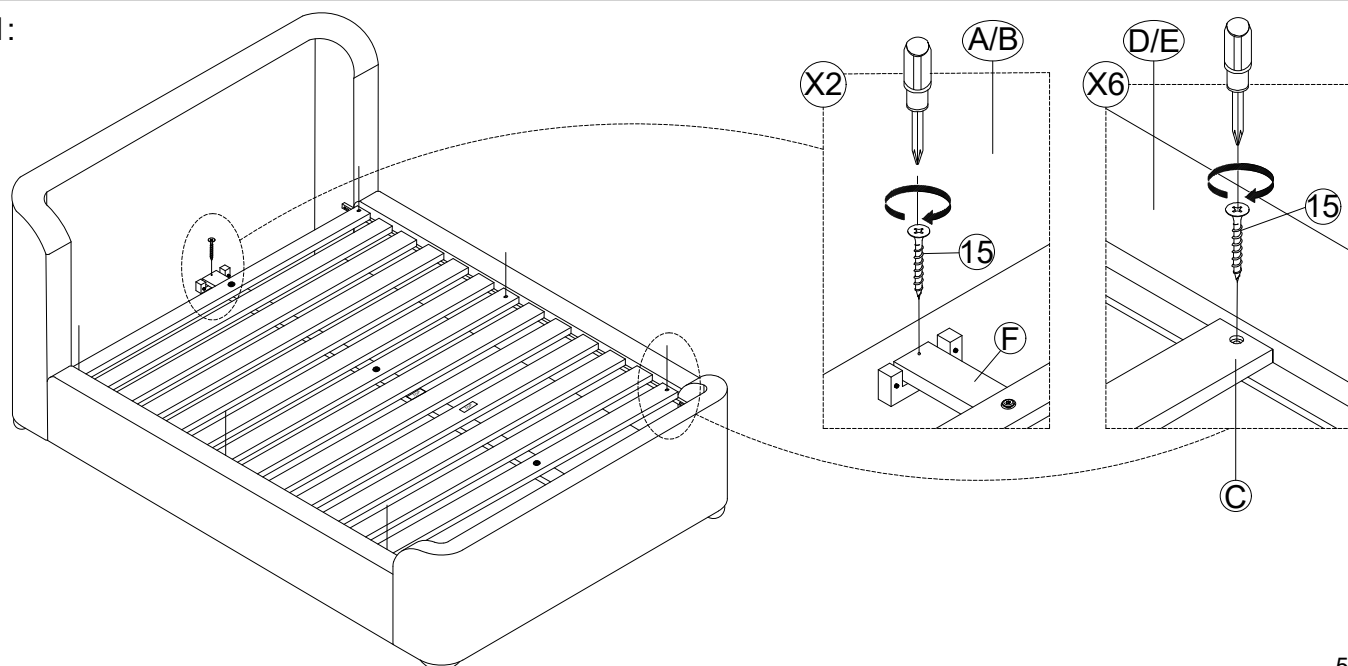

KIKI UPHOLSTERED FULL BED

ASSEMBLY INSTRUCTIONS

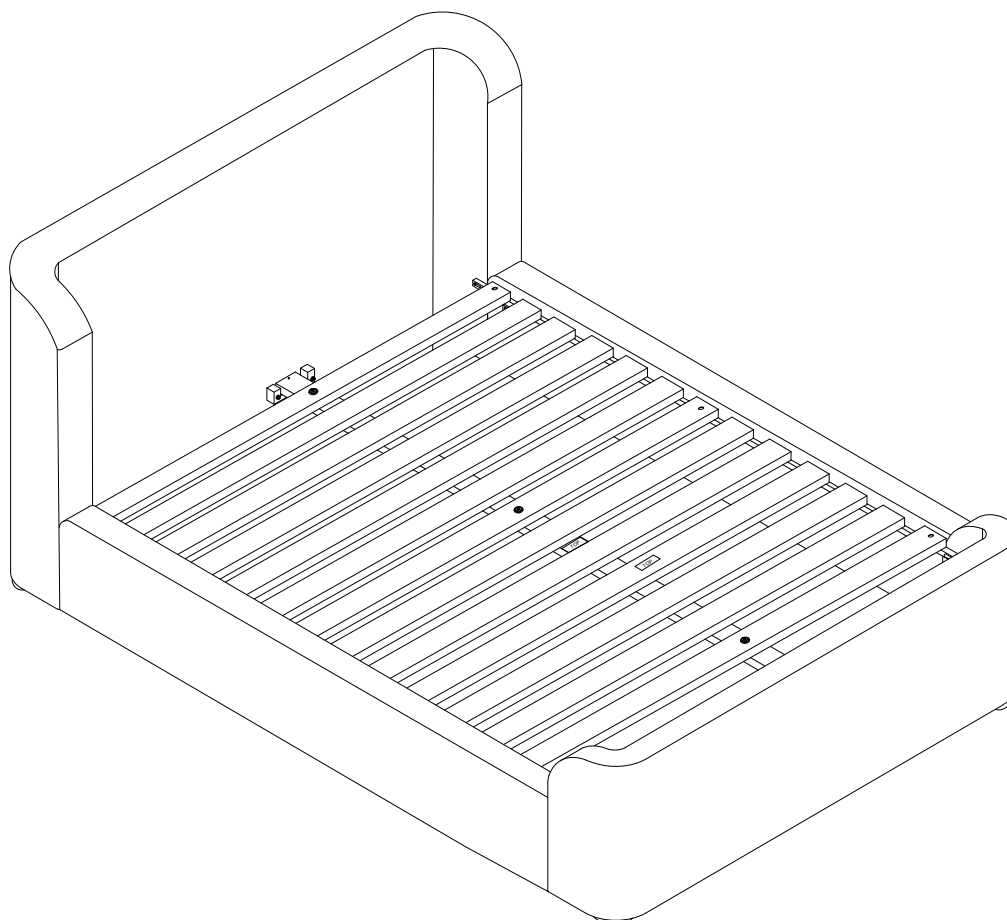


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.



MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

KIKI UPHOLSTERED FULL BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

C. SLAT ROLL	1 SET
F. CENTER SLAT SUPPORT	1 PC
G. SUPPORT LEG	4 PCS
H. CENTER SLAT SUPPORT CLEAT	2 PCS

STEP 1:

USE ALLEN KEY (16) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

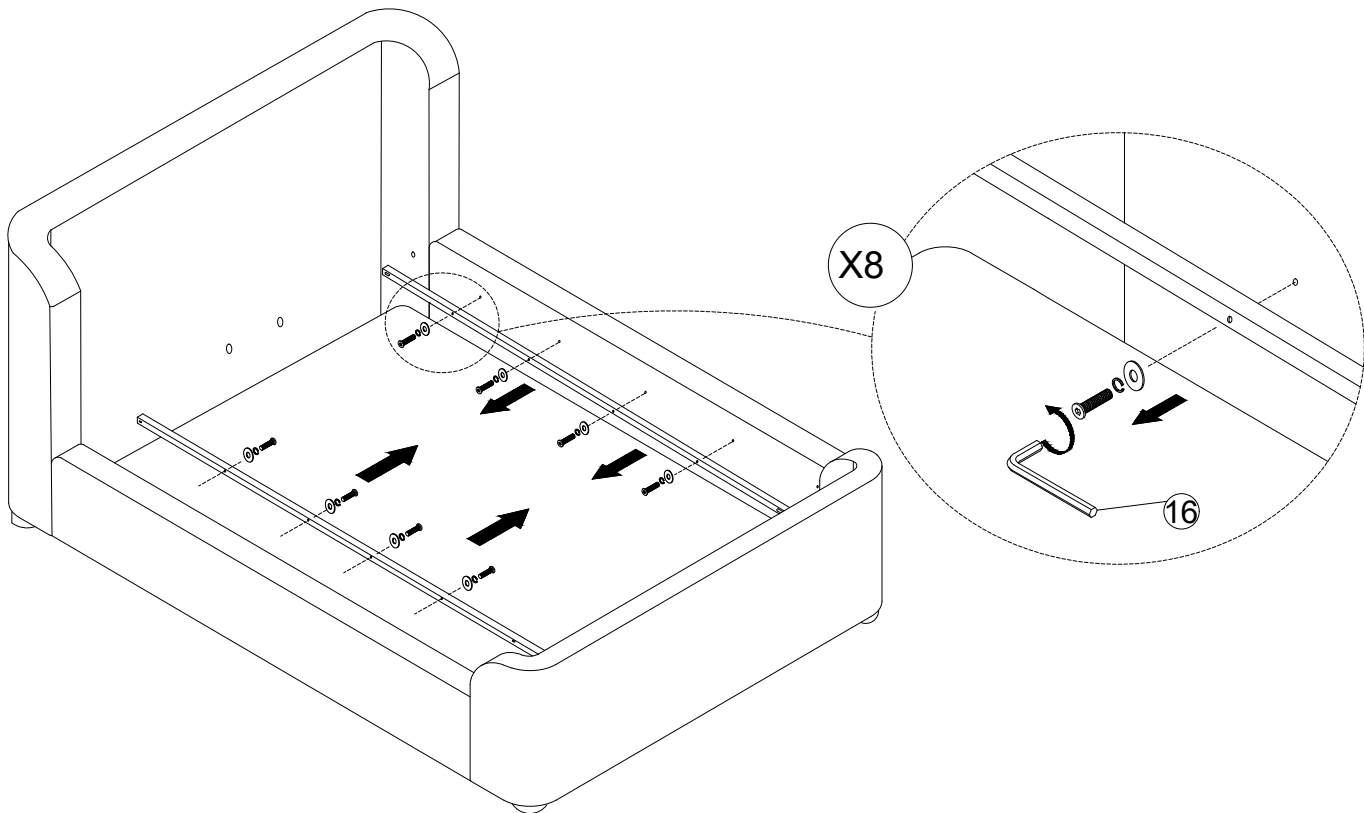

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION