


Fit here on door edge

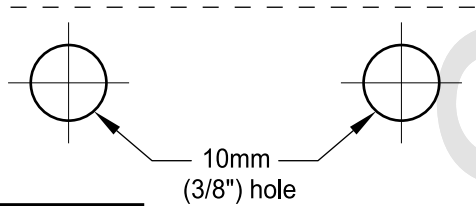

TRILOCK DUMMY FITTING INSTRUCTIONS

Step 1.

- Fold template where indicated.
- Position template on door edge at desired height. (Generally to line up with operating Trilock on opposite door)
- Firmly hold template to door and mark the four hole centres as indicated.
- Drill holes (suggest pilot holes first 3mm, 1/8") then the correct size 10mm, 3/8" from both sides of the door.

Step 2.

For Contemporary Series

- Install threaded posts to the outside faceplate.


Step 2.

For Traditional Series


- Install blind screws and brass posts to Trilock external faceplate (this is the faceplate without the rectangle snib push-button).

Step 3.

- Insert dummy plug into the inside of both plates before affixing faceplates to door. (To help hold dummy plugs in position, apply a strip of adhesive tape if required.)
- Mount the outside faceplate to door.
- Align the inside faceplate to door and fit mounting screws and tighten into threaded posts.

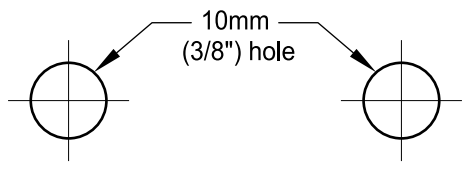

Please recycle
this template

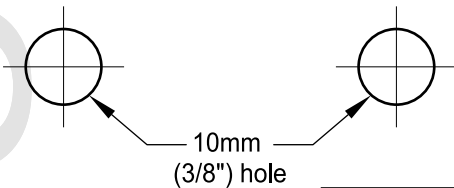

10mm
(3/8") hole

Fit here on door edge

TRILOCK DUMMY FITTING INSTRUCTIONS

Step 1.

- Fold template where indicated.
- Position template on door edge at desired height. (Generally to line up with operating Trilock on opposite door)
- Firmly hold template to door and mark the four hole centres as indicated.
- Drill holes (suggest pilot holes first 3mm, 1/8") then the correct size 10mm, 3/8" from both sides of the door.

Step 2.

For Contemporary Series

- Install threaded posts to the outside faceplate.


Step 2.

For Traditional Series

- Install blind screws and brass posts to Trilock external faceplate (this is the faceplate without the rectangle snib push-button).

Step 3.

- Insert dummy plug into the inside of both plates before affixing faceplates to door. (To help hold dummy plugs in position, apply a strip of adhesive tape if required.)
- Mount the outside faceplate to door.
- Align the inside faceplate to door and fit mounting screws and tighten into threaded posts.

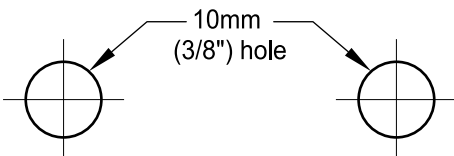

10mm
(3/8") hole

Gainsborough
ENTER WITH STYLE

TRILOCK

SERIES

**TRADITIONAL &
CONTEMPORARY**

FOLD HERE



Please recycle
this template

© Allegion 2024
PDGA0008 R2 NOV 24
Developed and tested in Australia.
Specifications of this product
are subject to change without
notice. Made in China to Allegion
specifications.



ALLEGION

gainsboroughhardware.com.au
gainsboroughhardware.co.nz